


Principles of

# FOUNDATION ENGINEERING

Eighth Edition


Braja M. Das



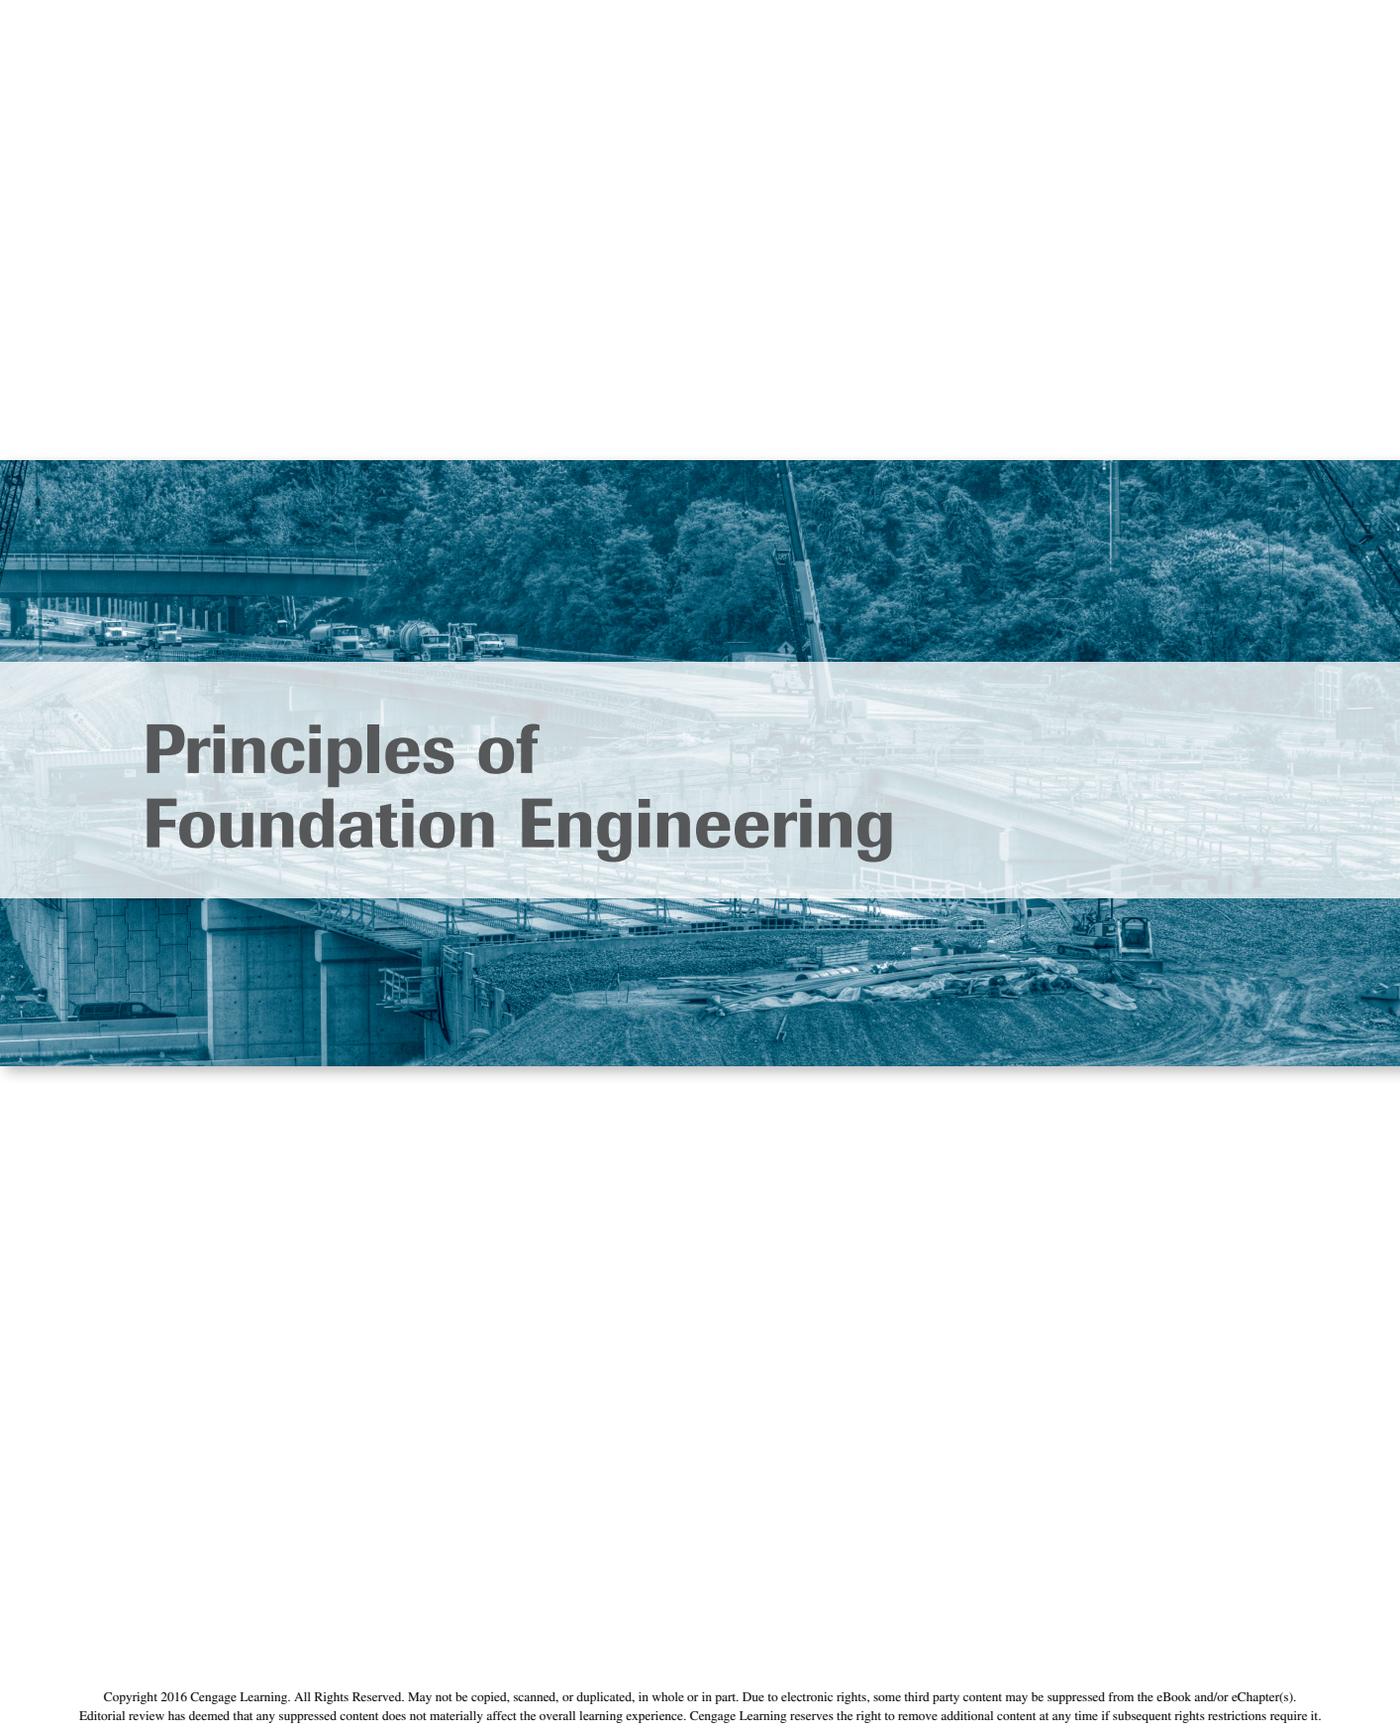

# Principles of Foundation Engineering



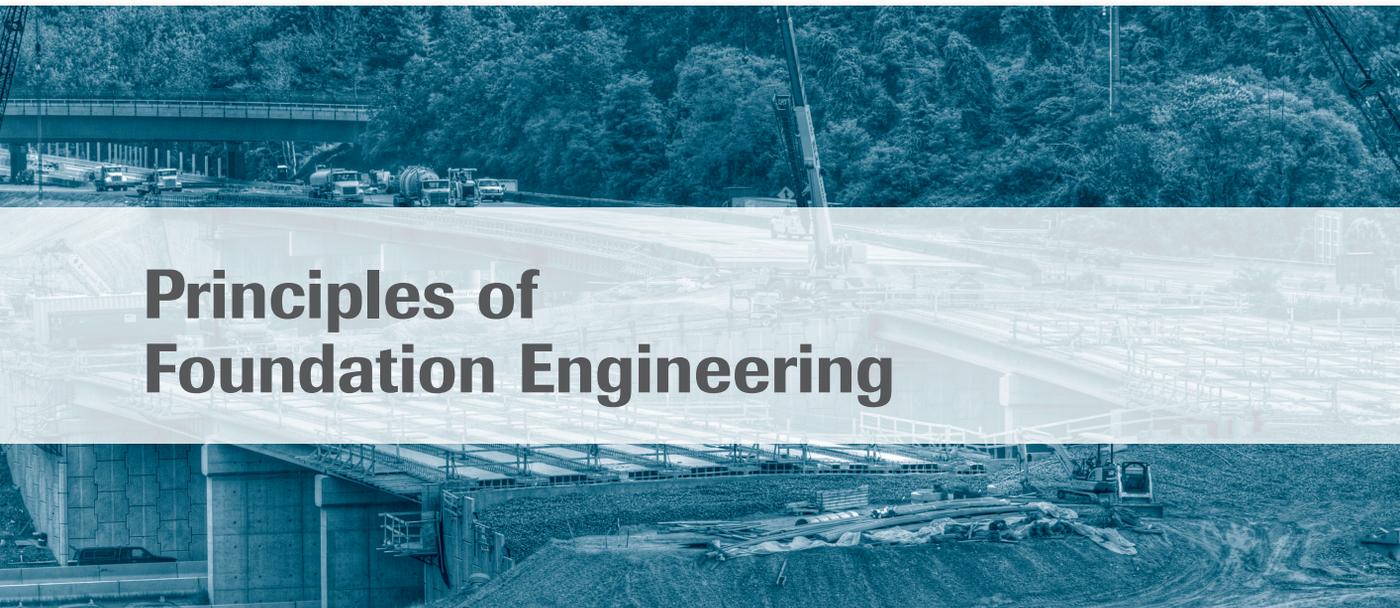

# Principles of Foundation Engineering

Eighth Edition

**Braja M. Das**



---

Australia • Brazil • Japan • Korea • Mexico • Singapore • Spain • United Kingdom • United States

This is an electronic version of the print textbook. Due to electronic rights restrictions, some third party content may be suppressed. Editorial review has deemed that any suppressed content does not materially affect the overall learning experience. The publisher reserves the right to remove content from this title at any time if subsequent rights restrictions require it. For valuable information on pricing, previous editions, changes to current editions, and alternate formats, please visit [www.cengage.com/highered](http://www.cengage.com/highered) to search by ISBN#, author, title, or keyword for materials in your areas of interest.

**Principles of Foundation Engineering,  
Eighth Edition****Braja M. Das**Publisher, Global Engineering:  
Timothy L. AndersonSenior Developmental Editors:  
Hilda Gowans

Development Editor: Eavan Cully

Media Assistant: Ashley Kaupert

Team Assistant: Sam Roth

Marketing Manager: Kristin Stine

Director Content and Media Production:  
Sharon SmithSenior Content Project Manager:  
Kim Kusnerak

Marketing Manager: Kristin Stine

Production Service: RPK Editorial  
Services, Inc.

Compositor: MPS Limited

IP Analyst: Christine Myaskovsky

IP Project Manager: Sarah Shainwald

Text and Image Permissions Researcher:  
Kristiina Paul

Manufacturing Planner: Doug Wilke

Senior Art Director: Michelle Kunkler

Cover Designer: Tin Box Studio

Internal Designer: RPK Editorial  
Services, Inc.

Copyeditor: Shelly Gerger-Knechtl

Proofreader: Martha McMaster

Indexer: Braja M. Das

Cover Image: The Reinforced Earth  
Company (RECo). Photo taken by  
Chris Clements (RECo).

© 2016, 2012 Cengage Learning

WCN: 02-200-203

ALL RIGHTS RESERVED. No part of this work covered by the copyright herein may be reproduced, transmitted, stored, or used in any form or by any means graphic, electronic, or mechanical, including but not limited to photocopying, recording, scanning, digitizing, taping, web distribution, information networks, or information storage and retrieval systems, except as permitted under Section 107 or 108 of the 1976 United States Copyright Act, without the prior written permission of the publisher.

For product information and technology assistance, contact us at  
**Cengage Learning Customer & Sales Support, 1-800-354-9706.**

For permission to use material from this text or product,  
submit all requests online at [www.cengage.com/permissions](http://www.cengage.com/permissions).  
Further permissions questions can be emailed to  
[permissionrequest@cengage.com](mailto:permissionrequest@cengage.com).

Library of Congress Control Number: 2014947850

ISBN-13: 978-1-305-08155-0

**Cengage Learning**20 Channel Center Street,  
Boston, MA 02210  
USA

Cengage Learning is a leading provider of customized learning solutions with office locations around the globe, including Singapore, the United Kingdom, Australia, Mexico, Brazil, and Japan. Locate your local office at: [www.cengage.com/global](http://www.cengage.com/global).

Cengage Learning products are represented in Canada by  
Nelson Education Ltd.

For your course and learning solutions, visit  
[www.cengage.com/engineering](http://www.cengage.com/engineering).

Purchase any of our products at your local college store or at our  
preferred online store [www.cengagebrain.com](http://www.cengagebrain.com)

Unless otherwise noted, all items © Cengage Learning.

Unless otherwise stated, all photos © Braja M. Das.

Printed in the United States of America

Print Number: 01      Print Year: 2014

*In the memory of my mother and  
to Janice, Joe, Valerie, and Elizabeth*





# Contents

## Preface xvii

### 7

## Introduction 1

- 1.1 Geotechnical Engineering 1
- 1.2 Foundation Engineering 1
- 1.3 General Format of the Text 2
- 1.4 Design Methods 2
- 1.5 Numerical Methods in Geotechnical Engineering 4
- References 4

## PART 1 Geotechnical Properties and Exploration of Soil 5

### 2

## Geotechnical Properties of Soil 7

- 2.1 Introduction 7
- 2.2 Grain-Size Distribution 8
- 2.3 Size Limits for Soils 11
- 2.4 Weight–Volume Relationships 11
- 2.5 Relative Density 16
- 2.6 Atterberg Limits 22
- 2.7 Liquidity Index 23
- 2.8 Activity 23
- 2.9 Soil Classification Systems 24
- 2.10 Hydraulic Conductivity of Soil 32
- 2.11 Steady-State Seepage 37
- 2.12 Effective Stress 39
- 2.13 Consolidation 41

2.14	Calculation of Primary Consolidation Settlement	47
2.15	Time Rate of Consolidation	48
2.16	Degree of Consolidation Under Ramp Loading	55
2.17	Shear Strength	57
2.18	Unconfined Compression Test	63
2.19	Comments on Friction Angle, $\phi'$	64
2.20	Correlations for Undrained Shear Strength, $c_u$	67
2.21	Sensitivity	68
	Problems	69
	References	74

### 3 Natural Soil Deposits and Subsoil Exploration 76

#### 3.1 Introduction 76

##### *Natural Soil Deposits 76*

3.2	Soil Origin	76
3.3	Residual Soil	78
3.4	Gravity Transported Soil	79
3.5	Alluvial Deposits	80
3.6	Lacustrine Deposits	82
3.7	Glacial Deposits	82
3.8	Aeolian Soil Deposits	83
3.9	Organic Soil	85
3.10	Some Local Terms for Soils	85

##### *Subsurface Exploration 86*

3.11	Purpose of Subsurface Exploration	86
3.12	Subsurface Exploration Program	86
3.13	Exploratory Borings in the Field	89
3.14	Procedures for Sampling Soil	93
3.15	Split-Spoon Sampling	93
3.16	Sampling with a Scraper Bucket	103
3.17	Sampling with a Thin-Walled Tube	104
3.18	Sampling with a Piston Sampler	106
3.19	Observation of Water Tables	106
3.20	Vane Shear Test	108
3.21	Cone Penetration Test	113
3.22	Pressuremeter Test (PMT)	122
3.23	Dilatometer Test	125
3.24	Iowa Borehole Shear Test	129
3.25	$K_0$ Stepped-Blade Test	131

3.26	Coring of Rocks	132
3.27	Preparation of Boring Logs	136
3.28	Geophysical Exploration	136
3.29	Subsoil Exploration Report	145
	Problems	145
	References	150

## PART 2 Foundation Analysis 153

### 4

## Shallow Foundations: Ultimate Bearing Capacity 155

4.1	Introduction	155
4.2	General Concept	155
4.3	Terzaghi's Bearing Capacity Theory	160
4.4	Factor of Safety	165
4.5	Modification of Bearing Capacity Equations for Water Table	167
4.6	The General Bearing Capacity Equation	168
4.7	Other Solutions for Bearing Capacity $N\gamma$ , Shape, and Depth Factors	175
4.8	Case Studies on Ultimate Bearing Capacity	178
4.9	Effect of Soil Compressibility	184
4.10	Eccentrically Loaded Foundations	188
4.11	Ultimate Bearing Capacity under Eccentric Loading—One-Way Eccentricity	189
4.12	Bearing Capacity—Two-Way Eccentricity	196
4.13	Bearing Capacity of a Continuous Foundation Subjected to Eccentrically Inclined Loading	205
	Problems	208
	References	211

### 5

## Ultimate Bearing Capacity of Shallow Foundations: Special Cases 213

5.1	Introduction	213
5.2	Foundation Supported by a Soil with a Rigid Base at Shallow Depth	213
5.3	Foundations on Layered Clay	221
5.4	Bearing Capacity of Layered Soils: Stronger Soil Underlain by Weaker Soil ( $c' - \phi'$ soil)	225
5.5	Bearing Capacity of Layered Soil: Weaker Soil Underlain by Stronger Soil	233
5.6	Continuous Foundation on Weak Clay with a Granular Trench	236

5.7	Closely Spaced Foundations—Effect on Ultimate Bearing Capacity	239
5.8	Bearing Capacity of Foundations on Top of a Slope	240
5.9	Bearing Capacity of Foundations on a Slope	245
5.10	Seismic Bearing Capacity and Settlement in Granular Soil	247
5.11	Foundations on Rock	251
5.12	Uplift Capacity of Foundations	253
	Problems	259
	References	261

## 6

### Vertical Stress Increase in Soil 263

6.1	Introduction	263
6.2	Stress Due to a Concentrated Load	264
6.3	Stress Due to a Circularly Loaded Area	264
6.4	Stress Due to a Line Load	266
6.5	Stress below a Vertical Strip Load (Finite Width and Infinite Length)	267
6.6	Stress below a Rectangular Area	272
6.7	Stress Isobars	277
6.8	Average Vertical Stress Increase Due to a Rectangularly Loaded Area	278
6.9	Average Vertical Stress Increase below the Center of a Circularly Loaded Area	284
6.10	Stress Increase under an Embankment	287
6.11	Westergaard's Solution for Vertical Stress Due to a Point Load	291
6.12	Stress Distribution for Westergaard Material	293
	Problems	295
	References	298

## 7

### Settlement of Shallow Foundations 299

7.1	Introduction	299
7.2	Elastic Settlement of Shallow Foundation on Saturated Clay ( $\mu_s = 0.5$ )	299
	<i>Elastic Settlement in Granular Soil</i>	302
7.3	Settlement Based on the Theory of Elasticity	302
7.4	Improved Equation for Elastic Settlement	310
7.5	Settlement of Sandy Soil: Use of Strain Influence Factor	315

- 7.6 Settlement of Foundation on Sand Based on Standard Penetration Resistance 324
- 7.7 Settlement in Granular Soil Based on Pressuremeter Test (PMT) 328
- 7.8 Effect of the Rise of Water Table on Elastic Settlement 334

#### *Consolidation Settlement* 336

- 7.9 Primary Consolidation Settlement Relationships 336
- 7.10 Three-Dimensional Effect on Primary Consolidation Settlement 337
- 7.11 Settlement Due to Secondary Consolidation 342
- 7.12 Field Load Test 344
- 7.13 Presumptive Bearing Capacity 346
- 7.14 Tolerable Settlement of Buildings 347
- Problems 349
- References 351

## 8

### Mat Foundations 353

- 8.1 Introduction 353
- 8.2 Combined Footings 353
- 8.3 Common Types of Mat Foundations 358
- 8.4 Bearing Capacity of Mat Foundations 360
- 8.5 Differential Settlement of Mats 364
- 8.6 Field Settlement Observations for Mat Foundations 364
- 8.7 Compensated Foundation 366
- 8.8 Structural Design of Mat Foundations 369
- Problems 388
- References 390

## 9

### Pile Foundations 391

- 9.1 Introduction 391
- 9.2 Types of Piles and Their Structural Characteristics 393
- 9.3 Continuous Flight Auger (CFA) Piles 402
- 9.4 Estimating Pile Length 403
- 9.5 Installation of Piles 404
- 9.6 Load Transfer Mechanism 407
- 9.7 Equations for Estimating Pile Capacity 411
- 9.8 Meyerhof's Method for Estimating  $Q_p$  414
- 9.9 Vesic's Method for Estimating  $Q_p$  417
- 9.10 Coyle and Castello's Method for Estimating  $Q_p$  in Sand 421

9.11	Correlations for Calculating $Q_p$ with SPT and CPT Results in Granular Soil	424
9.12	Frictional Resistance ( $Q_s$ ) in Sand	426
9.13	Frictional (Skin) Resistance in Clay	433
9.14	Ultimate Capacity of Continuous Flight Auger Pile	438
9.15	Point Bearing Capacity of Piles Resting on Rock	441
9.16	Pile Load Tests	448
9.17	Elastic Settlement of Piles	453
9.18	Laterally Loaded Piles	456
9.19	Pile-Driving Formulas	470
9.20	Pile Capacity For Vibration-Driven Piles	476
9.21	Wave Equation Analysis	477
9.22	Negative Skin Friction	481
<hr/>		
	<i>Group Piles</i>	485
9.23	Group Efficiency	485
9.24	Ultimate Capacity of Group Piles in Saturated Clay	488
9.25	Elastic Settlement of Group Piles	491
9.26	Consolidation Settlement of Group Piles	493
9.27	Piles in Rock	496
	Problems	496
	References	502

## 10

## Drilled-Shaft Foundations 505

10.1	Introduction	505
10.2	Types of Drilled Shafts	506
10.3	Construction Procedures	507
10.4	Other Design Considerations	513
10.5	Load Transfer Mechanism	514
10.6	Estimation of Load-Bearing Capacity	514
10.7	Drilled Shafts in Granular Soil: Load-Bearing Capacity	516
10.8	Load-Bearing Capacity Based on Settlement	520
10.9	Drilled Shafts in Clay: Load-Bearing Capacity	529
10.10	Load-Bearing Capacity Based on Settlement	531
10.11	Settlement of Drilled Shafts at Working Load	536
10.12	Lateral Load-Carrying Capacity—Characteristic Load and Moment Method	538
10.13	Drilled Shafts Extending into Rock	547
	Problems	552
	References	556

**11****Foundations on Difficult Soils 557****11.1 Introduction 557***Collapsible Soil 557***11.2 Definition and Types of Collapsible Soil 557****11.3 Physical Parameters for Identification 558****11.4 Procedure for Calculating Collapse Settlement 562****11.5 Foundation Design in Soils Not Susceptible to Wetting 563****11.6 Foundation Design in Soils Susceptible to Wetting 565***Expansive Soils 566***11.7 General Nature of Expansive Soils 566****11.8 Unrestrained Swell Test 570****11.9 Swelling Pressure Test 571****11.10 Classification of Expansive Soil on the Basis of Index Tests 576****11.11 Foundation Considerations for Expansive Soils 580****11.12 Construction on Expansive Soils 582***Sanitary Landfills 587***11.13 General Nature of Sanitary Landfills 587****11.14 Settlement of Sanitary Landfills 588**

## Problems 590

## References 591

**PART 3 Lateral Earth Pressure and Earth-Retaining Structures 593****12****Lateral Earth Pressure 595****12.1 Introduction 595****12.2 Lateral Earth Pressure at Rest 596***Active Pressure 600***12.3 Rankine Active Earth Pressure 600****12.4 A Generalized Case for Rankine Active Pressure—Granular Backfill 605****12.5 Rankine Active Pressure with Vertical Wall Backface and Inclined  $c' - \phi'$  Soil Backfill 610****12.6 Coulomb's Active Earth Pressure 614****12.7 Lateral Earth Pressure Due to Surcharge 621**

**12.8** Active Earth Pressure for Earthquake Conditions—Granular Backfill 625

**12.9** Active Earth Pressure for Earthquake Condition (Vertical Backface of Wall and  $c'-\phi'$  Backfill) 629

*Passive Pressure* 634

**12.10** Rankine Passive Earth Pressure 634

**12.11** Rankine Passive Earth Pressure—Vertical Backface and Inclined Backfill 637

**12.12** Coulomb's Passive Earth Pressure 639

**12.13** Comments on the Failure Surface Assumption for Coulomb's Pressure Calculations 641

**12.14** Caquot and Kerisel Solution for Passive Earth Pressure (Granular Backfill) 642

**12.15** Passive Pressure under Earthquake Conditions 645

Problems 647

References 648

**13** Retaining Walls 650

**13.1** Introduction 650

*Gravity and Cantilever Walls* 652

**13.2** Proportioning Retaining Walls 652

**13.3** Application of Lateral Earth Pressure Theories to Design 653

**13.4** Stability of Retaining Walls 655

**13.5** Check for Overturning 657

**13.6** Check for Sliding along the Base 659

**13.7** Check for Bearing Capacity Failure 663

**13.8** Construction Joints and Drainage from Backfill 671

**13.9** Comments on Design of Retaining Walls and a Case Study 674

*Mechanically Stabilized Retaining Walls* 677

**13.10** Soil Reinforcement 677

**13.11** Considerations in Soil Reinforcement 678

**13.12** General Design Considerations 680

**13.13** Retaining Walls with Metallic Strip Reinforcement 681

**13.14** Step-by-Step-Design Procedure Using Metallic Strip Reinforcement 688

**13.15** Retaining Walls with Geotextile Reinforcement 693

- 13.16 Retaining Walls with Geogrid Reinforcement—General 700
- 13.17 Design Procedure for Geogrid-Reinforced Retaining Wall 700
- Problems 705
- References 707

**14****Sheet-Pile Walls 709**

- 14.1 Introduction 709
- 14.2 Construction Methods 712
- 14.3 Cantilever Sheet-Pile Walls 714
- 14.4 Cantilever Sheet Piling Penetrating Sandy Soils 715
- 14.5 Special Cases for Cantilever Walls Penetrating a Sandy Soil 721
- 14.6 Cantilever Sheet Piling Penetrating Clay 725
- 14.7 Special Cases for Cantilever Walls Penetrating Clay 730
- 14.8 Anchored Sheet-Pile Walls 734
- 14.9 Free Earth Support Method for Penetration of Sandy Soil 735
- 14.10 Design Charts for Free Earth Support Method (Penetration into Sandy Soil) 739
- 14.11 Moment Reduction for Anchored Sheet-Pile Walls Penetrating into Sand 743
- 14.12 Computational Pressure Diagram Method for Penetration into Sandy Soil 746
- 14.13 Field Observations for Anchor Sheet-Pile Walls 750
- 14.14 Free Earth Support Method for Penetration of Clay 752
- 14.15 Anchors 759
- 14.16 Holding Capacity of Anchor Plates in Sand 759
- 14.17 Holding Capacity of Anchor Plates in Clay ( $\phi = 0$  Condition) 768
- 14.18 Ultimate Resistance of Tiebacks 769
- Problems 770
- References 773

**15****Braced Cuts 774**

- 15.1 Introduction 774
- 15.2 Braced Cut Analysis Based on General Wedge Theory 775
- 15.3 Pressure Envelope for Braced-Cut Design 780
- 15.4 Pressure Envelope for Cuts in Layered Soil 782
- 15.5 Design of Various Components of a Braced Cut 783
- 15.6 Case Studies of Braced Cuts 793
- 15.7 Bottom Heave of a Cut in Clay 798

15.8	Stability of the Bottom of a Cut in Sand	802
15.9	Lateral Yielding of Sheet Piles and Ground Settlement	807
	Problems	809
	References	811

## **PART 4 Soil Improvement 813**

### **16 Soil Improvement and Ground Modification 815**

16.1	Introduction	815
16.2	General Principles of Compaction	816
16.3	Empirical Relationships for Compaction	819
16.4	Field Compaction	822
16.5	Compaction Control for Clay Hydraulic Barriers	825
16.6	Vibroflotation	828
16.7	Blasting	834
16.8	Precompression	836
16.9	Sand Drains	840
16.10	Prefabricated Vertical Drains	851
16.11	Lime Stabilization	857
16.12	Cement Stabilization	859
16.13	Fly-Ash Stabilization	861
16.14	Stone Columns	862
16.15	Sand Compaction Piles	867
16.16	Dynamic Compaction	869
16.17	Jet Grouting	871
16.18	Deep Mixing	873
	Problems	876
	References	878

### **Appendix 881**

### **Answers to Problems 900**

### **Index 912**



# Preface

Soil mechanics and foundation engineering have developed rapidly during the last fifty plus years. Intensive research and observation in both the field and the laboratory have refined and improved the science of foundation design. Originally published in the fall of 1983 with a 1984 copyright, this text on the principles of foundation engineering is now in the eighth edition. It is intended primarily for use by undergraduate civil engineering students. The use of this text throughout the world has increased greatly over the years. It has also been translated into several languages. New and improved materials that have been published in various geotechnical engineering journals and conference proceedings that are consistent with the level of understanding of the intended users have been incorporated into each edition of the text.

Based on the useful comments received from the reviewers for preparation of this edition, changes have been made from the seventh edition. The text now has sixteen chapters compared to fourteen in the seventh edition. There is a small introductory chapter (Chapter 1) at the beginning. The chapter on allowable bearing capacity of shallow foundations has been divided into two chapters—one on estimation of vertical stress due to superimposed loading and the other on elastic and consolidation settlement of shallow foundations. The text has been divided into four major parts for consistency and continuity, and the chapters have been reorganized.

Part I—Geotechnical Properties and Exploration of Soil (Chapters 2 and 3)

Part II—Foundation Analysis (Chapters 4 through 11)

Part III—Lateral Earth Pressure and Earth-Retaining Structures (Chapters 12 through 15)

Part IV—Soil Improvement (Chapter 16)

A number of new/modified example problems have been added for clarity and better understanding of the material by the readers, as recommended by the reviewers. Listed here are some of the significant additions/modifications to each chapter.

- In Chapter 2 on Geotechnical Properties of Soil, empirical relationships between maximum ( $e_{\max}$ ) and minimum ( $e_{\min}$ ) void ratios for sandy and silty soils have been added. Also included are empirical correlations between  $e_{\max}$  and  $e_{\min}$  with the

median grain size of soil. The variations of the residual friction angle of some clayey soils along with their clay-size fractions are also included.

- In Chapter 3 on Natural Soil Deposits and Subsoil Exploration, additional approximate correlations between standard penetration resistance and overconsolidation ratio and preconsolidation pressure of the cohesive soil deposits have been introduced. Calculation of the undrained shear strength from the vane shear test results for rectangular and tapered vanes have been updated based on recent ASTM test designations. Iowa borehole shear tests and  $K_o$  stepped-blade test procedures have been added.
- In Chapter 4 on Shallow Foundations: Ultimate Bearing Capacity, the laboratory test results of DeBeer (1967) have been incorporated in a nondimensional form in order to provide a general idea of the magnitude of settlement at ultimate load in granular soils for foundations. The general concepts of the development of Terzaghi's bearing capacity equation have been further expanded. A brief review of the bearing capacity factor  $N_\gamma$  obtained by various researchers over the years has been presented and compared. Results from the most recent publications relating to "reduction factors" for estimating the ultimate bearing capacity of continuous shallow foundations supported by granular soil subjected to eccentric and eccentrically inclined load are discussed.
- Chapter 5 on Ultimate Bearing Capacity of Shallow Foundations: Special Cases has an extended discussion on foundations on layered clay by incorporation of the works of Reddy and Srinivasan (1967) and Vesic (1975). The topic of evaluating the ultimate bearing capacity of continuous foundation on weak clay with a granular trench has been added. Also added to this chapter are the estimation of seismic bearing capacity and settlement of shallow foundation in granular soil.
- The procedure to estimate the stress increase in a soil mass both due to a line load and a strip load using Boussinesq's solution has been added to Chapter 6 on Vertical Stress Increase in Soil. A solution for estimation of average stress increase below the center of a flexible circularly loaded area is now provided in this chapter.
- Chapter 7 on Settlement of Shallow Foundations has solutions for the elastic settlement calculation of foundations on granular soil using the strain influence factor, as proposed by Terzaghi, Peck, and Mesri (1996) in addition to that given by Schmertmann et al. (1978). The effect of the rise of a water table on the elastic settlement of shallow foundations on granular soil is discussed.
- The example for structural design of mat foundation in Chapter 8 is now consistent with the most recent ACI code (ACI 318-11).
- Discussions have been added on continuous flight auger piles and wave equations analysis in Chapter 9 on Pile Foundations.
- The procedure for estimating the ultimate bearing capacity of drilled shafts extending into hard rock as proposed by Reese and O'Neill (1988, 1989) has been added to Chapter 10 on Drilled-Shaft Foundations.
- In Chapter 12 on Lateral Earth Pressure, results of recent studies related to the determination of active earth pressure for earthquake conditions for a vertical back face of wall with  $c' - \phi'$  backfill has been added. Also included is the Caquot and Kerisel solution using the passive earth-pressure coefficient for retaining walls with granular backfill.

- In Chapter 15 on Braced Cuts, principles of general wedge theory have been added to explain the estimation of active thrust on braced cuts before the introduction of pressure envelopes in various types of soils.
- Chapter 16 on Ground Improvement and Modification now includes some recently developed empirical relationships for the compaction of granular and cohesive soils in the laboratory. New publications (2013) related to the load-bearing capacity of foundations in stone columns have been referred to. A brief introduction on deep mixing has also been added.
- A new Appendix A has been added to illustrate reinforced concrete design principles for shallow foundations using ACI-318-11 code (ultimate strength design method).

Natural soil deposits, in many cases, are nonhomogeneous. Their behavior as related to foundation engineering deviates somewhat from those obtained from the idealized theoretical studies. In order to illustrate this, several field case studies have been included in this edition similar to the past editions of the text.

- Foundation failure of a concrete silo and a load test on small foundations in soft Bangkok clay (Chapter 4)
- Settlement observation for mat foundations (Chapter 8)
- Performance of a cantilever retaining wall (Chapter 13)
- Field observations for anchored sheet-pile walls at Long Beach Harbor and Toledo, Ohio (Chapter 14)
- Subway extension of the Massachusetts Bay Transportation Authority (MBTA), construction of National Plaza (south half) in Chicago, and the bottom heave of braced cuts in clay (selected cases from Bjerrum and Eide, 1963) (Chapter 15)
- Installation of PVDs combined with preloading to improve strength of soft soil at Nong Ngu Hao, Thailand (Chapter 16)

## Instructor Resource Materials

A detailed *Instructor's Solutions Manual* and PowerPoint slides of both figures and examples from the book are available for instructors through a password-protected Web site at [www.cengagebrain.com](http://www.cengagebrain.com).

## MindTap Online Course and Reader

In addition to the print version, this textbook will also be available online through MindTap, which is a personalized learning program. Students who purchase the MindTap version will have access to the book's MindTap Reader and will be able to complete homework and assessment material online by using their desktop, laptop, or iPad. If your class is using a Learning Management System (such as Blackboard, Moodle, or Angel) for tracking course content, assignments, and grading, you can seamlessly access the MindTap suite of content and assessments for this course. In MindTap, instructors can use the following features.

- Personalize the Learning Path to match the course syllabus by rearranging content, hiding sections, or appending original material to the textbook content

- Connect a Learning Management System portal to the online course and Reader
- Customize online assessments and assignments
- Track student progress and comprehension with the Progress app
- Promote student engagement through interactivity and exercises

Additionally, students can listen to the text through ReadSpeaker, take notes, highlight content for easy reference, and check their understanding of the material.

## Acknowledgements

Thanks are due to:

- The following reviewers for their comments and constructive suggestions:

Mohamed Sherif Aggour, University of Maryland, College Park

Paul J. Cosentino, Florida Institute of Technology

Jinyuan Liu, Ryerson University

Zhe Luo, Clemson University

Robert Mokwa, Montana State University

Krishna R. Reddy, University of Illinois at Chicago

Cumaraswamy Vipulanandan, University of Houston

- Henry Ng of hkn Engineers, El Paso, Texas, for his help and advice in completing the reinforced concrete design examples given in Appendix A.
- Dr. Richard L. Handy, Distinguished Professor Emeritus in the Department of Civil, Construction, and Environmental Engineering at Iowa State University, for his continuous encouragement and for providing several photographs used in this edition.
- Dr. Nagaratnam Sivakugan of James Cook University, Australia, and Dr. Khaled Sobhan of Florida Atlantic University, for help and advice in the development of the revision outline.
- Several individuals in Cengage Learning, for their assistance and advice in the final development of the book—namely:

Tim Anderson, Publisher

Hilda Gowans, Senior Development Editor

It is also fitting to thank Rose P. Kernan of RPK Editorial Services. She has been instrumental in shaping the style and overseeing the production of this edition of *Principles of Foundation Engineering* as well as several previous editions.

For the past thirty-five years, my primary source of inspiration has been the immeasurable energy of my wife, Janice. I am grateful for her continual help in the development of the original text and its seven subsequent revisions.

Braja M. Das



# 1 Introduction

## 1.1 Geotechnical Engineering

In the general sense of engineering, *soil* is defined as the uncemented aggregate of mineral grains and decayed organic matter (solid particles) along with the liquid and gas that occupy the empty spaces between the solid particles. Soil is used as a construction material in various civil engineering projects, and it supports structural foundations. Thus, civil engineers must study the properties of soil, such as its origin, grain-size distribution, ability to drain water, compressibility, shear strength, load-bearing capacity, and so on. *Soil mechanics* is the branch of science that deals with the study of the physical properties of soil and the behavior of soil masses subjected to various types of forces.

*Rock mechanics* is a branch of science that deals with the study of the properties of rocks. It includes the effect of the network of fissures and pores on the nonlinear stress-strain behavior of rocks as strength anisotropy. Rock mechanics (as we know now) slowly grew out of soil mechanics. So, collectively, soil mechanics and rock mechanics are generally referred to as *geotechnical engineering*.

## 1.2 Foundation Engineering

*Foundation engineering* is the application and practice of the fundamental principles of soil mechanics and rock mechanics (i.e., geotechnical engineering) in the design of foundations of various structures. These foundations include those of columns and walls of buildings, bridge abutments, embankments, and others. It also involves the analysis and design of earth-retaining structures such as retaining walls, sheet-pile walls, and braced cuts. This text is prepared, in general, to elaborate upon the foundation engineering aspects of these structures.

## 1.3 General Format of the Text

This text is divided into four major parts.

- Part I—Geotechnical Properties and Exploration of Soil (Chapters 2 and 3)
- Part II—Foundation Analysis (Chapters 4 through 11).

Foundation analysis, in general, can be divided into two categories: shallow foundations and deep foundations. Spread footings and mat (or raft) foundations are referred to as shallow foundations. A *spread footing* is simply an enlargement of a load-bearing wall or column that makes it possible to spread the load of the structure over a larger area of the soil. In soil with low load-bearing capacity, the size of the spread footings is impractically large. In that case, it is more economical to construct the entire structure over a concrete pad. This is called a *mat foundation*. Piles and drilled shafts are deep foundations. They are structural members used for heavier structures when the depth requirement for supporting the load is large. They transmit the load of the superstructure to the lower layers of the soil.

- Part III—Lateral Earth Pressure and Earth-Retaining Structures (Chapters 12 through 15)

This part includes discussion of the general principles of lateral earth pressure on vertical or near-vertical walls based on wall movement and analyses of retaining walls, sheet pile walls, and braced cuts.

- Part IV—Soil Improvement (Chapter 16)

This part discusses mechanical and chemical stabilization processes used to improve the quality of soil for building foundations. The mechanical stabilization processes include compaction, vibroflotation, blasting, precompression, sand and prefabricated vertical drains. Similarly, the chemical stabilization processes include ground modification using additives such as lime, cement, and fly ash.

## 1.4 Design Methods

The *allowable stress design* (ASD) has been used for over a century in foundation design and is also used in this edition of the text. The ASD is a deterministic design method which is based on the concept of applying a factor of safety (FS) to an ultimate load  $Q_u$  (which is an ultimate limit state). Thus, the allowable load  $Q_{all}$  can be expressed as

$$Q_{all} = \frac{Q_u}{FS} \quad (1.1)$$

According to ASD,

$$Q_{design} \leq Q_{all} \quad (1.2)$$

where  $Q_{design}$  is the design (working) load.

Over the last several years, *reliability based design methods* are slowly being incorporated into civil engineering design. This is also called the *load and resistance factor design method* (LRFD). It is also known as the ultimate strength design (USD). The LRFD

was initially brought into practice by the American Concrete Institute (ACI) in the 1960s. Several codes in North America now provide parameters for LRFD.

- American Association of State Highway and Transportation Officials (AASHTO) (1994, 1998)
- American Petroleum Institute (API) (1993)
- American Concrete Institute (ACI) (2002)

According to LRFD, the *factored nominal load*  $Q_u$  is calculated as

$$Q_u = (LF)_1 Q_{u(1)} + (LF)_2 Q_{u(2)} + \dots \quad (1.3)$$

where

$Q_u$  = factored nominal load

$(LF)_i$  ( $i = 1, 2, \dots$ ) is the load factor for nominal load  $Q_{u(i)}$  ( $i = 1, 2, \dots$ )

Most of the load factors are greater than one. As an example, according to AASHTO (1998), the load factors are

Load	LF
Dead load	1.25 to 1.95
Live load	1.35 to 1.75
Wind load	1.4
Seismic	1.0

The basic design inequality then can be given as

$$Q_u \leq \phi Q_n \quad (1.4)$$

where

$Q_n$  = nominal load capacity

$\phi$  = resistance factor ( $<1$ )

As an example of Eq. (1.4), let us consider a shallow foundation—a column footing measuring  $B \times B$ . Based on the dead load, live load, and wind load of the column and the load factors recommended in the code, the value of  $Q_u$  can be obtained. The nominal load capacity,

$$Q_n = q_u(A) = q_u B^2 \quad (1.5)$$

where

$q_u$  = ultimate bearing capacity (Chapter 4)

$A$  = area of the column footing =  $B^2$

The resistance factor  $\phi$  can be obtained from the code. Thus,

$$Q_u \leq \phi q_u B^2 \quad (1.6)$$

Equation (1.6) now can be used to obtain the size of the footing  $B$ .

LRFD is rather slow to be accepted and adopted in the geotechnical community now. However, this is the future of design method.

In Appendix A of this text (Reinforced Concrete Design of Shallow Foundations), the ultimate strength design method has been used based on ACI 381-11 (American Concrete Institute, 2011).

## 1.5 Numerical Methods in Geotechnical Engineering

Very often, the boundary conditions in geotechnical engineering design can be so complex that it is not possible to carry out the traditional analysis using the simplified theories, equations, and design charts covered in textbooks. This situation is even made more complex by the soil variability. Under these circumstances, numerical modeling can be very useful. *Numerical modeling* is becoming more and more popular in the designs of foundations, retaining walls, dams, and other earth-supported structures. They are often used in large projects. They can model the soil–structure interaction very effectively.

Finite element analysis and finite difference analysis are two different numerical modeling techniques. Here, the problem domain is divided into a mesh, consisting of thousands of elements and nodes. Boundary conditions and appropriate constitutive models (e.g., linear elastic and Mohr-Coulomb) are applied, and equations are developed for all of the nodes. By solving thousands of equations, the variables at the nodes are determined.

There are people who write their own finite-element program to solve a geotechnical problem. For novices, there are off-the-shelf programs that can be used for such purposes. *PLAXIS* (<http://www.plaxis.nl>) is a very popular finite-element program that is widely used by professional engineers. *FLAC* (<http://www.itasca.com>) is a powerful finite-difference program used in geotechnical and mining engineering. There are also other numerical modeling software available, such as those developed by GEO-SLOPE International Ltd. (<http://www.geo-slope.com>), SoilVision Systems Ltd. (<http://www.soilvision.com>), and GGU-Software (<http://www.ggu-software.com>). In addition, some of the more powerful and versatile software packages developed for structural, materials, and concrete engineering also have the ability to model geotechnical problems. *Abaqus* and *Ansys*® are two finite-element packages that are used in the universities for teaching and research. They are quite effective in modeling geotechnical problems too.

To simplify the analysis, it generally is assumed that the soil behaves as a linear elastic or rigid plastic continuum. In reality, this is not the case, and it may be necessary to adopt more sophisticated constitutive models that would model the soil behavior more realistically. No matter how good the model is, the output only can be as good as the input. It is necessary to have good input parameters to arrive at sensible solutions.


### References

- AASHTO (1994). *LRFD Bridge Design Specifications*, 1st Ed., American Association of State Highway and Transportation Officials, Washington, D.C.
- AASHTO (1998). *LRFD Bridge Design Specifications*, 2nd Ed., American Association of State Highway and Transportation Officials, Washington, D.C.
- ACI (2002). *Building Code Requirements for Structural Concrete (318-02) and Commentary (318R-02)*, American Concrete Institute, Detroit, Michigan.
- API (1993). *Recommended Practice for Planning, Designing and Constructing Fixed Offshore Platforms—Working Stress Design*, APR RP 2A, 20th Ed., American Petroleum Institute, Washington, D.C.



# **PART 1**

# **Geotechnical Properties and Exploration of Soil**

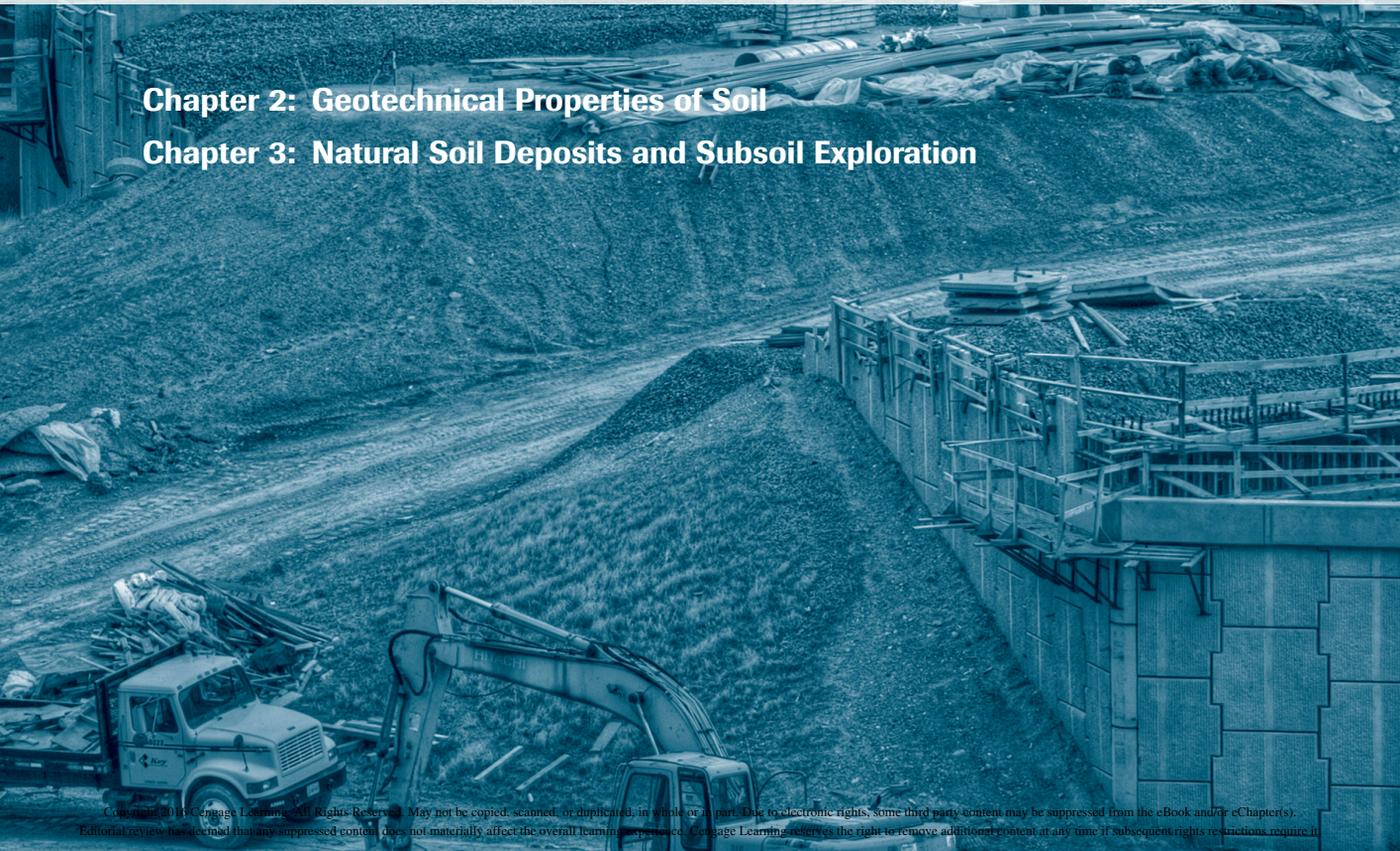

**Chapter 2: Geotechnical Properties of Soil**

**Chapter 3: Natural Soil Deposits and Subsoil Exploration**





# 2 Geotechnical Properties of Soil

## 2.1 Introduction

The design of foundations of structures such as buildings, bridges, and dams generally requires a knowledge of such factors as (a) the load that will be transmitted by the superstructure to the foundation system, (b) the requirements of the local building code, (c) the behavior and stress-related deformability of soils that will support the foundation system, and (d) the geological conditions of the soil under consideration. To a foundation engineer, the last two factors are extremely important because they concern soil mechanics.

The geotechnical properties of a soil—such as its grain-size distribution, plasticity, compressibility, and shear strength—can be assessed by proper laboratory testing. In addition, recently emphasis has been placed on the *in situ* determination of strength and deformation properties of soil, because this process avoids disturbing samples during field exploration. However, under certain circumstances, not all of the needed parameters can be or are determined, because of economic or other reasons. In such cases, the engineer must make certain assumptions regarding the properties of the soil. To assess the accuracy of soil parameters—whether they were determined in the laboratory and the field or whether they were assumed—the engineer must have a good grasp of the basic principles of soil mechanics. At the same time, he or she must realize that the natural soil deposits on which foundations are constructed are not homogeneous in most cases. Thus, the engineer must have a thorough understanding of the geology of the area—that is, the origin and nature of soil stratification and also the groundwater conditions. Foundation engineering is a clever combination of soil mechanics, engineering geology, and proper judgment derived from past experience. To a certain extent, it may be called an art.

This chapter serves primarily as a review of the basic geotechnical properties of soils. It includes topics such as grain-size distribution, plasticity, soil classification, hydraulic conductivity, effective stress, consolidation, and shear strength parameters. It is based on the assumption that you have already been exposed to these concepts in a basic soil mechanics course.

## 2.2 Grain-Size Distribution

In any soil mass, the sizes of the grains vary greatly. To classify a soil properly, you must know its *grain-size distribution*. The grain-size distribution of *coarse-grained* soil is generally determined by means of *sieve analysis*. For a *fine-grained* soil, the grain-size distribution can be obtained by means of *hydrometer analysis*. The fundamental features of these analyses are presented in this section. For detailed descriptions, see any soil mechanics laboratory manual (e.g., Das, 2013).

### Sieve Analysis

A sieve analysis is conducted by taking a measured amount of dry, well-pulverized soil and passing it through a stack of progressively finer sieves with a pan at the bottom. The amount of soil retained on each sieve is measured, and the cumulative percentage of soil passing through each is determined. This percentage is generally referred to as *percent finer*. Table 2.1 contains a list of U.S. sieve numbers and the corresponding size of their openings. These sieves are commonly used for the analysis of soil for classification purposes.


The percent finer for each sieve, determined by a sieve analysis, is plotted on *semilogarithmic graph paper*, as shown in Figure 2.1. Note that the grain diameter,  $D$ , is plotted on the *logarithmic scale* and the percent finer is plotted on the *arithmetic scale*.

Two parameters can be determined from the grain-size distribution curves of coarse-grained soils: (1) the *uniformity coefficient* ( $C_u$ ) and (2) the *coefficient of gradation*, or *coefficient of curvature* ( $C_c$ ). These coefficients are

$$C_u = \frac{D_{60}}{D_{10}} \quad (2.1)$$

**Table 2.1** U.S. Standard Sieve Sizes

Sieve No.	Opening (mm)
4	4.750
6	3.350
8	2.360
10	2.000
16	1.180
20	0.850
30	0.600
40	0.425
50	0.300
60	0.250
80	0.180
100	0.150
140	0.106
170	0.088
200	0.075
270	0.053

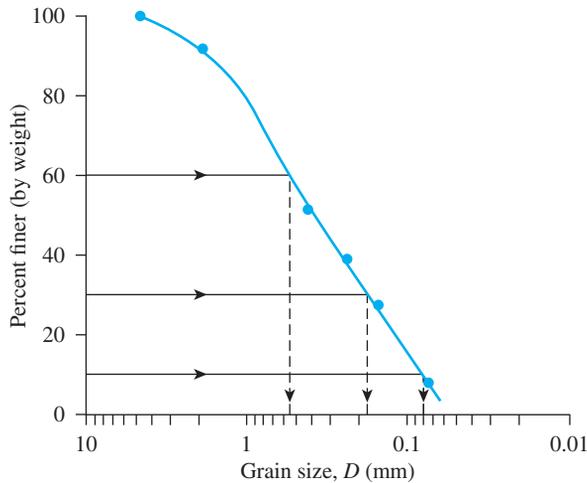

**Figure 2.1** Grain-size distribution curve of a coarse-grained soil obtained from sieve analysis

and

$$C_c = \frac{D_{30}^2}{(D_{60})(D_{10})} \quad (2.2)$$

where  $D_{10}$ ,  $D_{30}$ , and  $D_{60}$  are the diameters corresponding to percents finer than 10, 30, and 60%, respectively.

For the grain-size distribution curve shown in Figure 2.1,  $D_{10} = 0.08$  mm,  $D_{30} = 0.17$  mm, and  $D_{60} = 0.57$  mm. Thus, the values of  $C_u$  and  $C_c$  are

$$C_u = \frac{0.57}{0.08} = 7.13$$

and

$$C_c = \frac{0.17^2}{(0.57)(0.08)} = 0.63$$

Parameters  $C_u$  and  $C_c$  are used in the *Unified Soil Classification System*, which is described later in the chapter.

## Hydrometer Analysis

Hydrometer analysis is based on the principle of sedimentation of soil particles in water. This test involves the use of 50 grams of dry, pulverized soil. A *deflocculating agent* is always added to the soil. The most common deflocculating agent used for hydrometer analysis is 125 cc of 4% solution of sodium hexametaphosphate. The soil is allowed to soak for at least 16 hours in the deflocculating agent. After the soaking period, distilled water is added, and the soil–deflocculating agent mixture is thoroughly agitated. The

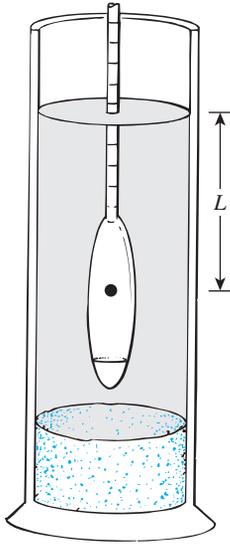


Figure 2.2 Hydrometer analysis

sample is then transferred to a 1000-ml glass cylinder. More distilled water is added to the cylinder to fill it to the 1000-ml mark, and then the mixture is again thoroughly agitated. A hydrometer is placed in the cylinder to measure the specific gravity of the soil–water suspension in the vicinity of the instrument’s bulb (Figure 2.2), usually over a 24-hour period. Hydrometers are calibrated to show the amount of soil that is still in suspension at any given time  $t$ . The largest diameter of the soil particles still in suspension at time  $t$  can be determined by Stokes’ law,

$$D = \sqrt{\frac{18\eta}{(G_s - 1)\gamma_w}} \sqrt{\frac{L}{t}} \quad (2.3)$$

where

$D$  = diameter of the soil particle

$G_s$  = specific gravity of soil solids

$\eta$  = dynamic viscosity of water

$\gamma_w$  = unit weight of water

$L$  = effective length (i.e., length measured from the water surface in the cylinder to the center of gravity of the hydrometer; see Figure 2.2)

$t$  = time

Soil particles having diameters larger than those calculated by Eq. (2.3) would have settled beyond the zone of measurement. In this manner, with hydrometer readings taken at various times, the soil *percent finer* than a given diameter  $D$  can be calculated and a grain-size distribution plot prepared. The sieve and hydrometer techniques may be combined for a soil having both coarse-grained and fine-grained soil constituents.

## 2.3 Size Limits for Soils

Several organizations have attempted to develop the size limits for *gravel*, *sand*, *silt*, and *clay* on the basis of the grain sizes present in soils. Table 2.2 presents the size limits recommended by the American Association of State Highway and Transportation Officials (AASHTO) and the Unified Soil Classification systems (Corps of Engineers, Department of the Army, and Bureau of Reclamation). The table shows that soil particles smaller than 0.002 mm have been classified as *clay*. However, clays by nature are cohesive and can be rolled into a thread when moist. This property is caused by the presence of *clay minerals* such as *kaolinite*, *illite*, and *montmorillonite*. In contrast, some minerals, such as *quartz* and *feldspar*, may be present in a soil in particle sizes as small as clay minerals, but these particles will not have the cohesive property of clay minerals. Hence, they are called *clay-size particles*, not *clay particles*.

**Table 2.2** Soil-Separate Size Limits

Classification system	Grain size (mm)
Unified	Gravel: 75 mm to 4.75 mm Sand: 4.75 mm to 0.075 mm Silt and clay (fines): <0.075 mm
AASHTO	Gravel: 75 mm to 2 mm Sand: 2 mm to 0.05 mm Silt: 0.05 mm to 0.002 mm Clay: <0.002 mm

## 2.4 Weight–Volume Relationships

In nature, soils are three-phase systems consisting of solid soil particles, water, and air (or gas). To develop the *weight–volume relationships* for a soil, the three phases can be separated as shown in Figure 2.3a. Based on this separation, the volume relationships can then be defined.

The *void ratio*,  $e$ , is the ratio of the volume of voids to the volume of soil solids in a given soil mass, or

$$e = \frac{V_v}{V_s} \quad (2.4)$$


where

$V_v$  = volume of voids

$V_s$  = volume of soil solids

The *porosity*,  $n$ , is the ratio of the volume of voids to the volume of the soil specimen, or

$$n = \frac{V_v}{V} \quad (2.5)$$

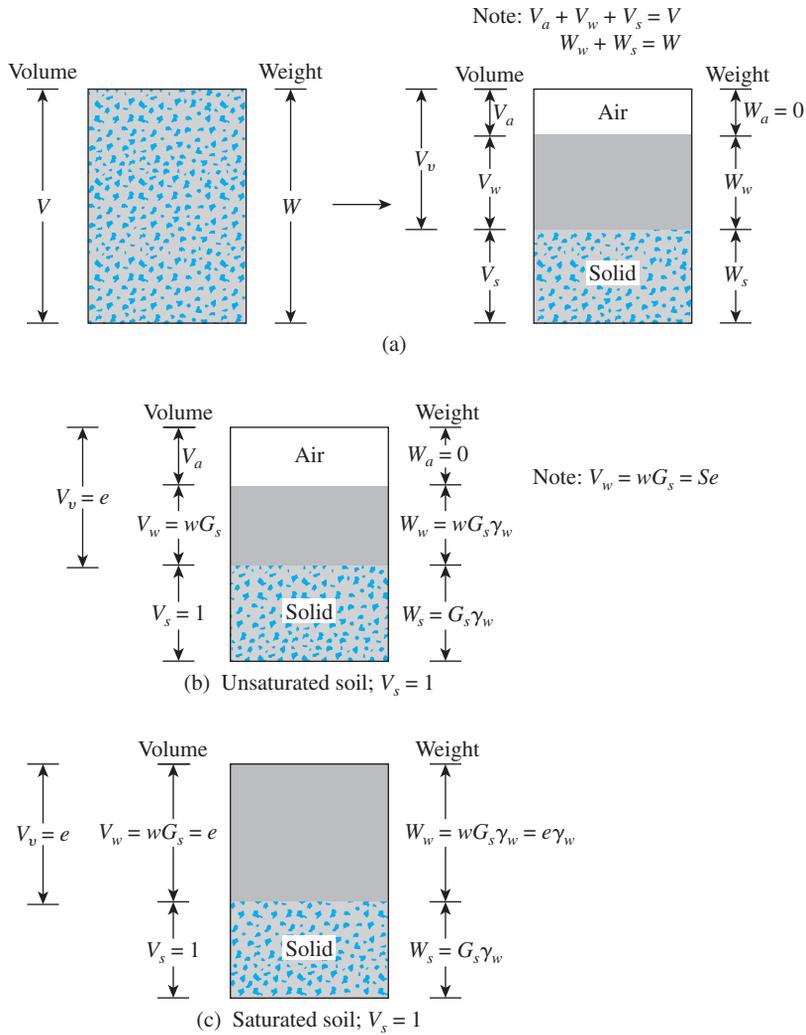

**Figure 2.3** Weight–volume relationships

where

$V$  = total volume of soil

Moreover,

$$n = \frac{V_v}{V} = \frac{V_v}{V_s + V_v} = \frac{\frac{V_v}{V_s}}{\frac{V_s}{V_s} + \frac{V_v}{V_s}} = \frac{e}{1 + e} \quad (2.6)$$

The *degree of saturation*,  $S$ , is the ratio of the volume of water in the void spaces to the volume of voids, generally expressed as a percentage, or

$$S(\%) = \frac{V_w}{V_v} \times 100 \quad (2.7)$$

where

$V_w$  = volume of water

Note that, for saturated soils, the degree of saturation is 100%.

The weight relationships are *moisture content*, *moist unit weight*, *dry unit weight*, and *saturated unit weight*, often defined as follows:

$$\text{Moisture content} = w(\%) = \frac{W_w}{W_s} \times 100 \quad (2.8)$$

where

$W_s$  = weight of the soil solids

$W_w$  = weight of water

$$\text{Moist unit weight} = \gamma = \frac{W}{V} \quad (2.9)$$

where

$W$  = total weight of the soil specimen =  $W_s + W_w$

The weight of air,  $W_a$ , in the soil mass is assumed to be negligible.

$$\text{Dry unit weight} = \gamma_d = \frac{W_s}{V} \quad (2.10)$$

When a soil mass is completely saturated (i.e., all the void volume is occupied by water), the moist unit weight of a soil [Eq. (2.9)] becomes equal to the *saturated unit weight* ( $\gamma_{\text{sat}}$ ). So  $\gamma = \gamma_{\text{sat}}$  if  $V_v = V_w$ .

More useful relations can now be developed by considering a representative soil specimen in which the volume of soil solids is equal to *unity*, as shown in Figure 2.3b. Note that if  $V_s = 1$ , then, from Eq. (2.4),  $V_v = e$ , and the weight of the soil solids is

$$W_s = G_s \gamma_w$$

where

$G_s$  = specific gravity of soil solids

$\gamma_w$  = unit weight of water (9.81 kN/m<sup>3</sup>, or 62.4 lb/ft<sup>3</sup>)

Also, from Eq. (2.8), the weight of water  $W_w = wW_s$ . Thus, for the soil specimen under consideration,  $W_w = wW_s = wG_s\gamma_w$ . Now, for the general relation for moist unit weight given in Eq. (2.9),

$$\gamma = \frac{W}{V} = \frac{W_s + W_w}{V_s + V_v} = \frac{G_s\gamma_w(1 + w)}{1 + e} \quad (2.11)$$

Similarly, the dry unit weight [Eq. (2.10)] is

$$\gamma_d = \frac{W_s}{V} = \frac{W_s}{V_s + V_v} = \frac{G_s\gamma_w}{1 + e} \quad (2.12)$$

From Eqs. (2.11) and (2.12), note that

$$\gamma_d = \frac{\gamma}{1 + w} \quad (2.13)$$

According to Eq. (2.7), degree of saturation is

$$S = \frac{V_w}{V_v}$$

Now, referring to Fig. 2.3(b),

$$V_w = wG_s$$

and

$$V_v = e$$

Thus,

$$S = \frac{V_w}{V_v} = \frac{wG_s}{e} \quad (2.14)$$

For a saturated soil,  $S = 1$ . So

$$e = wG_s \quad (2.15)$$

The saturated unit weight of soil then becomes

$$\gamma_{\text{sat}} = \frac{W_s + W_w}{V_s + V_v} = \frac{G_s\gamma_w + e\gamma_w}{1 + e} \quad (2.16)$$

In SI units, Newton (N) or kiloNewton (kN) is weight and is a derived unit, and g or kg is mass. The relationships given in Eqs. (2.11), (2.12), and (2.16) can be expressed as moist, dry, and saturated densities as follows:

$$\rho = \frac{G_s \rho_w (1 + w)}{1 + e} \quad (2.17)$$

$$\rho_d = \frac{G_s \rho_w}{1 + e} \quad (2.18)$$

$$\rho_{\text{sat}} = \frac{\rho_w (G_s + e)}{1 + e} \quad (2.19)$$

where  $\rho$ ,  $\rho_d$ ,  $\rho_{\text{sat}}$  = moist density, dry density, and saturated density, respectively  
 $\rho_w$  = density of water (= 1000 kg/m<sup>3</sup>)

Relationships similar to Eqs. (2.11), (2.12), and (2.16) in terms of porosity can also be obtained by considering a representative soil specimen with a unit volume (Figure 2.3c). These relationships are

$$\gamma = G_s \gamma_w (1 - n)(1 + w) \quad (2.20)$$

$$\gamma_d = (1 - n)G_s \gamma_w \quad (2.21)$$

and

$$\gamma_{\text{sat}} = [(1 - n)G_s + n]\gamma_w \quad (2.22)$$

Table 2.3 gives a summary of various forms of relationships that can be obtained for  $\gamma$ ,  $\gamma_d$ , and  $\gamma_{\text{sat}}$ .

**Table 2.3** Various Forms of Relationships for  $\gamma$ ,  $\gamma_d$ , and  $\gamma_{\text{sat}}$

Unit-weight relationship	Dry unit weight	Saturated unit weight
$\gamma = \frac{(1 + w)G_s \gamma_w}{1 + e}$	$\gamma_d = \frac{\gamma}{1 + w}$	$\gamma_{\text{sat}} = \frac{(G_s + e)\gamma_w}{1 + e}$
$\gamma = \frac{(G_s + Se)\gamma_w}{1 + e}$	$\gamma_d = \frac{G_s \gamma_w}{1 + e}$	$\gamma_{\text{sat}} = [(1 - n)G_s + n]\gamma_w$
$\gamma = \frac{(1 + w)G_s \gamma_w}{1 + \frac{wG_s}{S}}$	$\gamma_d = G_s \gamma_w (1 - n)$	$\gamma_{\text{sat}} = \left( \frac{1 + w}{1 + wG_s} \right) G_s \gamma_w$
$\gamma = G_s \gamma_w (1 - n)(1 + w)$	$\gamma_d = \frac{G_s}{1 + \frac{wG_s}{S}} \gamma_w$	$\gamma_{\text{sat}} = \left( \frac{e}{w} \right) \left( \frac{1 + w}{1 + e} \right) \gamma_w$
	$\gamma_d = \frac{eS\gamma_w}{(1 + e)w}$	$\gamma_{\text{sat}} = \gamma_d + n\gamma_w$
	$\gamma_d = \gamma_{\text{sat}} - n\gamma_w$	$\gamma_{\text{sat}} = \gamma_d + \left( \frac{e}{1 + e} \right) \gamma_w$
	$\gamma_d = \gamma_{\text{sat}} - \left( \frac{e}{1 + e} \right) \gamma_w$	

**Table 2.4** Specific Gravities of Some Soils

Type of soil	$G_s$
Quartz sand	2.64–2.66
Silt	2.67–2.73
Clay	2.70–2.9
Chalk	2.60–2.75
Loess	2.65–2.73
Peat	1.30–1.9

Except for peat and highly organic soils, the general range of the values of specific gravity of soil solids ( $G_s$ ) found in nature is rather small. Table 2.4 gives some representative values. For practical purposes, a reasonable value can be assumed in lieu of running a test.

## 2.5 Relative Density

In *granular soils*, the degree of compaction in the field can be measured according to the *relative density*, defined as

$$D_r(\%) = \frac{e_{\max} - e}{e_{\max} - e_{\min}} \times 100 \quad (2.23)$$

where

$e_{\max}$  = void ratio of the soil in the loosest state

$e_{\min}$  = void ratio in the densest state

$e$  = *in situ* void ratio

The relative density can also be expressed in terms of dry unit weight, or

$$D_r(\%) = \left\{ \frac{\gamma_d - \gamma_{d(\min)}}{\gamma_{d(\max)} - \gamma_{d(\min)}} \right\} \frac{\gamma_{d(\max)}}{\gamma_d} \times 100 \quad (2.24)$$

where

$\gamma_d$  = *in situ* dry unit weight

$\gamma_{d(\max)}$  = dry unit weight in the *densest* state; that is, when the void ratio is  $e_{\min}$

$\gamma_{d(\min)}$  = dry unit weight in the *loosest* state; that is, when the void ratio is  $e_{\max}$

The denseness of a granular soil is sometimes related to the soil's relative density. Table 2.5 gives a general correlation of the denseness and  $D_r$ . For naturally occurring sands, the magnitudes of  $e_{\max}$  and  $e_{\min}$  [Eq. (2.23)] may vary widely. The main reasons for such wide variations are the uniformity coefficient,  $C_u$ , and the roundness of the particles.

**Table 2.5** Denseness of a Granular Soil

Relative density, $D_r$ (%)	Description
0–15	Very loose
15–35	Loose
35–65	Medium
65–85	Dense
85–100	Very dense

Cubrinovski and Ishihara (2002) studied the variation of  $e_{\max}$  and  $e_{\min}$  for a very large number of soils. Based on the best-fit linear regression lines, they provided the following relationships.

- Clean sand ( $F_c = 0$  to 5%)

$$e_{\max} = 0.072 + 1.53e_{\min} \quad (2.25)$$

- Sand with fines ( $5 < F_c \leq 15\%$ )

$$e_{\max} = 0.25 + 1.37e_{\min} \quad (2.26)$$

- Sand with fines and clay ( $15 < P_c \leq 30\%$ ;  $F_c = 5$  to 20%)

$$e_{\max} = 0.44 + 1.21e_{\min} \quad (2.27)$$

- Silty soils ( $30 < F_c \leq 70\%$ ;  $P_c = 5$  to 20%)

$$e_{\max} = 0.44 + 1.32e_{\min} \quad (2.28)$$

where

$F_c$  = fine fraction for which grain size is smaller than 0.075 mm

$P_c$  = clay-size fraction ( $< 0.005$  mm)

Cubrinovski and Ishihara (1999, 2002) also provided the correlation

$$e_{\max} - e_{\min} = 0.23 + \frac{0.06}{D_{50} \text{ (mm)}} \quad (2.29)$$

where  $D_{50}$  = median grain size (sieve size through which 50% of soil passes).

**Example 2.1**

A representative soil specimen collection in the field weighs 1.8 kN and has a volume of 0.1 m<sup>3</sup>. The moisture content as determined in the laboratory is 12.6%. For  $G_s = 2.71$ , determine the

- a. Moist unit weight
- b. Dry unit weight
- c. Void ratio
- d. Porosity
- e. Degree of saturation

**Solution**

Part a: Moist Unit Weight

From Eq. (2.9),

$$\gamma = \frac{W}{V} = \frac{1.8 \text{ kN}}{0.1 \text{ m}^3} = \mathbf{18 \text{ kN/m}^3}$$

Part b: Dry Unit Weight

From Eq. (2.13),

$$\gamma_d = \frac{\gamma}{1 + w} = \frac{1.8}{1 + \frac{12.6}{100}} = \mathbf{15.99 \text{ kN/m}^3}$$

Part c: Void Ratio

From Eq. (2.12),

$$\gamma_d = \frac{G_s \gamma_w}{1 + e}$$

or

$$e = \frac{G_s \gamma_w}{\gamma_d} - 1 = \frac{(2.71)(9.81)}{15.99} - 1 = \mathbf{0.66}$$

Part d: Porosity

From Eq. (2.6),

$$n = \frac{e}{1 + e} = \frac{0.66}{1 + 0.66} = \mathbf{0.398}$$

Part e: Degree of Saturation

From Eq. (2.14),

$$S = \frac{V_w}{V_v} = \frac{w G_s}{e} = \frac{(0.126)(2.71)}{0.66} \times 100 = \mathbf{51.7\%}$$

### Example 2.2

The dry density of a sand with a porosity of 0.387 is  $1600 \text{ kg/m}^3$ . Find the void ratio of the soil and the specific gravity of the soil solids.

#### Solution

Void ratio

Given:  $n = 0.387$ . From Eq. (2.6),

$$e = \frac{n}{1 - n} = \frac{0.387}{1 - 0.387} = \mathbf{0.631}$$

Specific gravity of soil solids

From Eq. (2.18),

$$\begin{aligned}\rho_d &= \frac{G_s \rho_w}{1 + e} \\ 1600 &= \frac{G_s (1000)}{1.631} \\ G_s &= \mathbf{2.61}\end{aligned}$$

### Example 2.3

The moist unit weight of a soil is  $19.2 \text{ kN/m}^3$ . Given  $G_s = 2.69$  and moisture content  $w = 9.8\%$ , determine

- Dry unit weight ( $\text{kN/m}^3$ )
- Void ratio
- Porosity
- Degree of saturation (%)

#### Solution

Part a

From Eq. (2.13),

$$\gamma_d = \frac{\gamma}{1 + w} = \frac{19.2}{1 + \frac{9.8}{100}} = \mathbf{17.49 \text{ kN/m}^3}$$

Part b

From Eq. (2.12),

$$\begin{aligned}\gamma_d &= 17.49 \text{ kN/m}^3 = \frac{G_s \gamma_w}{1 + e} = \frac{(2.69)(9.81)}{1 + e} \\ e &= \mathbf{0.509}\end{aligned}$$

Part c

From Eq. (2.6),

$$n = \frac{e}{1 + e} = \frac{0.509}{1 + 0.509} = \mathbf{0.337}$$

Part d

From Eq. (2.14),

$$S = \frac{wG_s}{e} = \left[ \frac{(0.098)(2.69)}{0.509} \right] (100) = \mathbf{51.79\%}$$

### Example 2.4

The mass of a moist soil sample collected from the field is 465 grams, and its oven dry mass is 405.76 grams. The specific gravity of the soil solids was determined in the laboratory to be 2.68. If the void ratio of the soil in the natural state is 0.83, find the following:

- The moist density of the soil in the field ( $\text{kg/m}^3$ )
- The dry density of the soil in the field ( $\text{kg/m}^3$ )
- The mass of water, in kilograms, to be added per cubic meter of soil in the field for saturation

#### Solution

Part a

From Eq. (2.8),

$$w = \frac{W_w}{W_s} = \frac{\text{Mass of water}}{\text{Mass of soil solids}} = \frac{465 - 405.76}{405.76} = \frac{59.24}{405.76} = 14.6\%$$

From Eq. (2.17),

$$\begin{aligned} \rho &= \frac{G_s \rho_w + w G_s \rho_w}{1 + e} = \frac{G_s \rho_w (1 + w)}{1 + e} = \frac{(2.68)(1000)(1.146)}{1.83} \\ &= \mathbf{1678.3 \text{ kg/m}^3} \end{aligned}$$

Part b

From Eq. (2.18),

$$\rho_d = \frac{G_s \rho_w}{1 + e} = \frac{(2.68)(1000)}{1.83} = \mathbf{1464.48 \text{ kg/m}^3}$$

Part c

Mass of water to be added =  $\rho_{\text{sat}} - \rho$

From Eq. (2.19),

$$\rho_{\text{sat}} = \frac{G_s \rho_w + e \rho_w}{1 + e} = \frac{\rho_w (G_s + e)}{1 + e} = \frac{(1000)(2.68 + 0.83)}{1.83} = 1918 \text{ kg/m}^3$$

So, mass of water to be added =  $1918 - 1678.3 = 239.7 \text{ kg/m}^3$ . ■

### Example 2.5

The maximum and minimum dry unit weights of a sand are  $17.1 \text{ kN/m}^3$  and  $14.2 \text{ kN/m}^3$ , respectively. The sand in the field has a relative density of 70% with a moisture content of 8%. Determine the moist unit weight of the sand in the field.

#### Solution

From Eq. (2.24),

$$D_r = \left[ \frac{\gamma_d - \gamma_{d(\text{min})}}{\gamma_{d(\text{max})} - \gamma_{d(\text{min})}} \right] \left[ \frac{\gamma_{d(\text{max})}}{\gamma_d} \right]$$

$$0.7 = \left[ \frac{\gamma_d - 14.2}{17.1 - 14.2} \right] \left[ \frac{17.1}{\gamma_d} \right]$$

$$\gamma_d = 16.11 \text{ kN/m}^3$$

$$\gamma = \gamma_d(1 + w) = 16.11 \left( 1 + \frac{8}{100} \right) = 17.4 \text{ kN/m}^3 \quad \blacksquare$$

### Example 2.6

For a granular soil having  $\gamma = 108 \text{ lb/ft}^3$ ,  $D_r = 82\%$ ,  $w = 8\%$ , and  $G_s = 2.65$ . If  $e_{\text{min}} = 0.44$ , what would be  $e_{\text{max}}$ ? What would be the dry unit weight in the loosest state?

#### Solution

From Eq. (2.13),

$$\gamma_d = \frac{\gamma}{1 + w} = \frac{108}{1 + 0.08} = 100 \text{ lb/ft}^3$$

From Eq. (2.12),

$$\begin{aligned} \gamma_d &= \frac{G_s \gamma_w}{1 + e} \\ 100 &= \frac{(2.65)(62.4)}{1 + e} \\ e &= 0.654 \end{aligned}$$

From Eq. (2.23),

$$D_r = \frac{e_{\max} - e}{e_{\max} - e_{\min}}$$

$$0.82 = \frac{e_{\max} - 0.654}{e_{\max} - 0.44}$$


$$e_{\max} = \mathbf{1.63}$$

$$\gamma_{d(\min)} = \frac{G_s \gamma_w}{1 + e_{\max}} = \frac{(2.65)(62.4)}{1 + 1.63} = \mathbf{62.87 \text{ lb/ft}^3}$$

## 2.6 Atterberg Limits

When a clayey soil is mixed with an excessive amount of water, it may flow like a *semiliquid*. If the soil is gradually dried, it will behave like a *plastic*, *semisolid*, or *solid* material, depending on its moisture content. The moisture content, in percent, at which the soil changes from a semiliquid to a plastic state is defined as the *liquid limit* (LL). Similarly, the moisture content, in percent, at which the soil changes from a plastic to a semisolid state and from a semisolid to a solid state are defined as the *plastic limit* (PL) and the *shrinkage limit* (SL), respectively. These limits are referred to as *Atterberg limits* (Figure 2.4):

- The *liquid limit* of a soil is determined by Casagrande's liquid device (ASTM Test Designation D-4318) and is defined as the moisture content at which a groove closure of 12.7 mm (1/2 in.) occurs at 25 blows.
- The *plastic limit* is defined as the moisture content at which the soil crumbles when rolled into a thread of 3.18 mm (1/8 in.) in diameter (ASTM Test Designation D-4318).

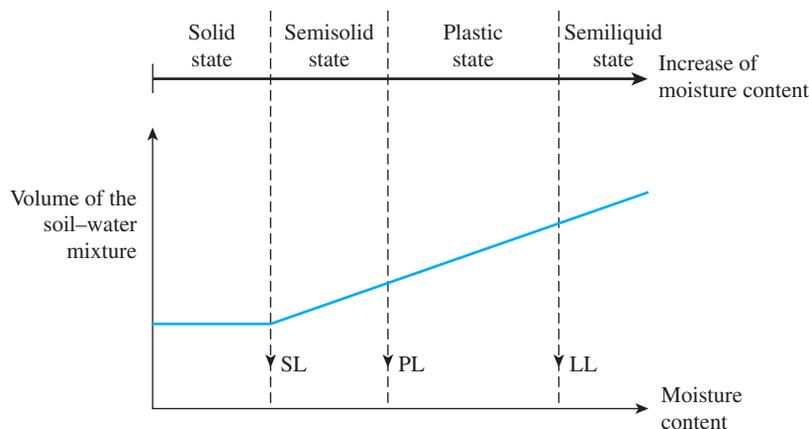

**Figure 2.4** Definition of Atterberg limits

- The *shrinkage limit* is defined as the moisture content at which the soil does not undergo any further change in volume with loss of moisture (ASTM Test Designation D-4943).

The difference between the liquid limit and the plastic limit of a soil is defined as the *plasticity index* (PI), or

$$PI = LL - PL \quad (2.30)$$

## 2.7 Liquidity Index

The relative consistency of a cohesive soil in the natural state can be defined by a ratio called the *liquidity index*, which is given by

$$LI = \frac{w - PL}{LL - PL} \quad (2.31)$$

where  $w$  = *in situ* moisture content of soil.

The *in situ* moisture content for a sensitive clay may be greater than the liquid limit. In this case,

$$LI > 1$$

These soils, when remolded, can be transformed into a viscous form to flow like a liquid.

Soil deposits that are heavily overconsolidated may have a natural moisture content less than the plastic limit. In this case,

$$LI < 0$$

## 2.8 Activity

Because the plasticity of soil is caused by the adsorbed water that surrounds the clay particles, we can expect that the type of clay minerals and their proportional amounts in a soil will affect the liquid and plastic limits. Skempton (1953) observed that the plasticity index of a soil increases linearly with the percentage of clay-size fraction (% finer than  $2 \mu\text{m}$  by weight) present. The correlations of PI with the clay-size fractions for different clays plot separate lines. This difference is due to the diverse plasticity characteristics of the various types of clay minerals. On the basis of these results, Skempton defined a quantity called *activity*, which is the slope of the line correlating PI and % finer than  $2 \mu\text{m}$ . This activity may be expressed as

$$A = \frac{PI}{(\% \text{ of clay-size fraction, by weight})} \quad (2.32)$$

**Table 2.6** Typical Values of Liquid Limit, Plastic Limit, and Activity of Some Clay Minerals

Mineral	Liquid limit, LL	Plastic limit, PL	Activity, A
Kaolinite	35–100	20–40	0.3–0.5
Illite	60–120	35–60	0.5–1.2
Montmorillonite	100–900	50–100	1.5–7.0
Halloysite (hydrated)	50–70	40–60	0.1–0.2
Halloysite (dehydrated)	40–55	30–45	0.4–0.6
Attapulgate	150–250	100–125	0.4–1.3
Allophane	200–250	120–150	0.4–1.3

Activity is used as an index for identifying the swelling potential of clay soils. Typical values of liquid limit, plastic limit, and activity for various clay minerals are given in Table 2.6.

## 2.9 Soil Classification Systems

Soil classification systems divide soils into groups and subgroups based on common engineering properties such as the *grain-size distribution*, *liquid limit*, and *plastic limit*. The two major classification systems presently in use are (1) the *American Association of State Highway and Transportation Officials (AASHTO) System* and (2) the *Unified Soil Classification System* (also ASTM). The AASHTO system is used mainly for the classification of highway subgrades. It is not used in foundation construction.

### AASHTO System

The AASHTO Soil Classification System was originally proposed by the Highway Research Board's Committee on Classification of Materials for Subgrades and Granular Type Roads (1945). According to the present form of this system, soils can be classified according to eight major groups, A-1 through A-8, based on their grain-size distribution, liquid limit, and plasticity indices. Soils listed in groups A-1, A-2, and A-3 are coarse-grained materials, and those in groups A-4, A-5, A-6, and A-7 are fine-grained materials. Peat, muck, and other highly organic soils are classified under A-8. They are identified by visual inspection.

The AASHTO classification system (for soils A-1 through A-7) is presented in Table 2.7. Note that group A-7 includes two types of soil. For the A-7-5 type, the plasticity index of the soil is less than or equal to the liquid limit minus 30. For the A-7-6 type, the plasticity index is greater than the liquid limit minus 30.

For qualitative evaluation of the desirability of a soil as a highway subgrade material, a number referred to as the *group index* has also been developed. The higher the value of the group index for a given soil, the weaker will be the soil's performance as a subgrade. A group index of 20 or more indicates a very poor subgrade material. The formula for the group index is

$$GI = (F_{200} - 35)[0.2 + 0.005(LL - 40)] + 0.01(F_{200} - 15)(PI - 10) \quad (2.33)$$

**Table 2.7** AASHTO Soil Classification System

General classification	Granular materials (35% or less of total sample passing No. 200 sieve)						
	A-1			A-2			
	A-1-a	A-1-b	A-3	A-2-4	A-2-5	A-2-6	A-2-7
Sieve analysis (% passing)							
No. 10 sieve	50 max						
No. 40 sieve	30 max	50 max	51 min				
No. 200 sieve	15 max	25 max	10 max	35 max	35 max	35 max	35 max
For fraction passing No. 40 sieve							
Liquid limit (LL)				40 max	41 min	40 max	41 min
Plasticity index (PI)		6 max	Nonplastic	10 max	10 max	11 min	11 min
Usual type of material	Stone fragments, gravel, and sand		Fine sand	Silty or clayey gravel and sand			
Subgrade rating	Excellent to good						
General classification	Silt-clay materials (More than 35% of total sample passing No. 200 sieve)						
	A-4	A-5	A-6	A-7			
Sieve analysis (% passing)							
No. 10 sieve							
No. 40 sieve							
No. 200 sieve	36 min	36 min	36 min	36 min			
For fraction passing No. 40 sieve							
Liquid limit (LL)	40 max	41 min	40 max	41 min			
Plasticity index (PI)	10 max	10 max	11 min	11 min			
Usual types of material	Mostly silty soils		Mostly clayey soils				
Subgrade rating	Fair to poor						

<sup>a</sup>If  $PI \leq LL - 30$ , the classification is A-7-5.

<sup>b</sup>If  $PI > LL - 30$ , the classification is A-7-6.

where

$F_{200}$  = percent passing No. 200 sieve, expressed as a whole number


LL = liquid limit

PI = plasticity index

When calculating the group index for a soil belonging to group A-2-6 or A-2-7, use only the partial group-index equation relating to the plasticity index:

$$GI = 0.01(F_{200} - 15)(PI - 10) \quad (2.34)$$

The group index is rounded to the nearest whole number and written next to the soil group in parentheses; for example, we have

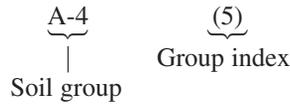

The group index for soils which fall in groups A-1-a, A-1-b, A-3, A-2-4, and A-2-5 is always zero.

### Unified System

The Unified Soil Classification System was originally proposed by A. Casagrande in 1942 and was later revised and adopted by the United States Bureau of Reclamation and the U.S. Army Corps of Engineers. The system is currently used in practically all geotechnical work.

In the Unified System, the following symbols are used for identification:

Symbol	G	S	M	C	O	Pt	H	L	W	P
Description	Gravel	Sand	Silt	Clay	Organic silts and clay	Peat and highly organic soils	High plasticity	Low plasticity	Well graded	Poorly graded

The plasticity chart (Figure 2.5) and Table 2.8 show the procedure for determining the group symbols for various types of soil. When classifying a soil be sure to provide the group name that generally describes the soil, along with the group symbol. Figures 2.6, 2.7, and 2.8 give flowcharts for obtaining the group names for coarse-grained soil, inorganic fine-grained soil, and organic fine-grained soil, respectively.

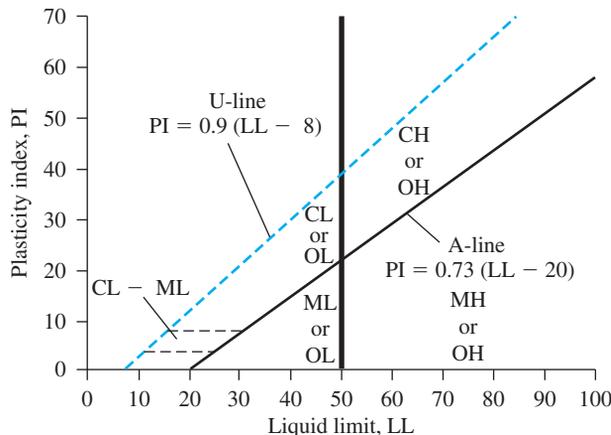


Figure 2.5 Plasticity chart

**Table 2.8** Unified Soil Classification Chart (after ASTM, 2011) (Based on ASTM D2487-10: Standard Practice for Classification of Soils for Engineering Purposes (Unified Soil Classification)).


		<b>Soil classification</b>	
		<b>Group symbol</b>	<b>Group name<sup>b</sup></b>
<b>Coarse-grained soils</b> More than 50% retained on No. 200 sieve	Gravels	C <sub>u</sub> ≥ 4 and 1 ≤ C <sub>c</sub> ≤ 3 <sup>e</sup>	Well-graded gravel <sup>f</sup>
	More than 50% of coarse fraction retained on No. 4 sieve	C <sub>u</sub> < 4 and/or 1 > C <sub>c</sub> > 3 <sup>e</sup>	Poorly graded gravel <sup>f</sup>
	Gravels with Fines	Fines classify as ML or MH	Silty gravel <sup>f,g,h</sup>
	More than 12% fines <sup>c</sup>	Fines classify as CL or CH	Clayey gravel <sup>f,g,h</sup>
<b>Fine-grained soils</b> 50% or more passes the No. 200 sieve	Sands	C <sub>u</sub> ≥ 6 and 1 ≤ C <sub>c</sub> ≤ 3 <sup>e</sup>	Well-graded sand <sup>i</sup>
	50% or more of coarse fraction passes No. 4 sieve	C <sub>u</sub> < 6 and/or 1 > C <sub>c</sub> > 3 <sup>e</sup>	Poorly graded sand <sup>i</sup>
	Silts and Clays	Fines classify as ML or MH	Silty sand <sup>g,h,i</sup>
	Liquid limit less than 50	Fines classify as CL or CH	Clayey sand <sup>g,h,i</sup>
<b>Highly organic soils</b>	Silts and Clays	PI > 7 and plots on or above "A" line <sup>j</sup>	Lean clay <sup>k,l,m</sup>
	Liquid limit less than 50	PI < 4 or plots below "A" line <sup>j</sup>	Silt <sup>k,l,m</sup>
	Silts and Clays	Liquid limit—oven dried Liquid limit—not dried < 0.75	Organic clay <sup>k,l,m,n</sup> Organic silt <sup>k,l,m,o</sup>
	Liquid limit 50 or more	PI plots on or above "A" line PI plots below "A" line	Fat clay <sup>k,l,m</sup> Elastic silt <sup>k,l,m</sup>

**Highly organic soils**


Primarily organic matter, dark in color, and organic odor

PT Peat


<sup>a</sup>Based on the material passing the 75-mm. (3-in) sieve.  
<sup>b</sup>If field sample contained cobbles or boulders, or both, add "with cobbles or boulders, or both" to group name.  
<sup>c</sup>Gravels with 5 to 12% fines require dual symbols: GW-GM well-graded gravel with silt; GP-GC well-graded gravel with clay; GP-GM poorly graded gravel with silt; GP-GC poorly graded gravel with clay.  
<sup>d</sup>Sands with 5 to 12% fines require dual symbols: SW-SM well-graded sand with silt; SW-SC well-graded sand with clay; SP-SM poorly graded sand with silt; SP-SC poorly graded sand with clay.  
<sup>e</sup> $C_u = D_{60}/D_{10}$      $C_c = \frac{(D_{30})^2}{D_{10} \times D_{60}}$   
<sup>f</sup>If soil contains 15% sand, add "with sand" to group name.  
<sup>g</sup>If fines classify as CL-ML, use dual symbol GC-GM or SC-SM.  
<sup>h</sup>If fines are organic, add "with organic fines" to group name.  
<sup>i</sup>If soil contains ≥ 15% gravel, add "with gravel" to group name.  
<sup>j</sup>Atterberg limits plot in hatched area, soil is a CL-ML, silty clay.  
<sup>k</sup>If soil contains 15 to 29% plus No. 200, add "with sand" or "with gravel," whichever is predominant.  
<sup>l</sup>If soil contains ≥ 30% plus No. 200, predominantly sand, add "sandy" to group name.  
<sup>m</sup>If soil contains ≥ 30% plus No. 200, predominantly gravel, add "gravelly" to group name.  
<sup>n</sup>PI ≥ 4 and plots on or above "A" line.  
<sup>o</sup>PI < 4 or plots below "A" line.  
<sup>p</sup>PI plots on or above "A" line.  
<sup>q</sup>PI plots below "A" line.

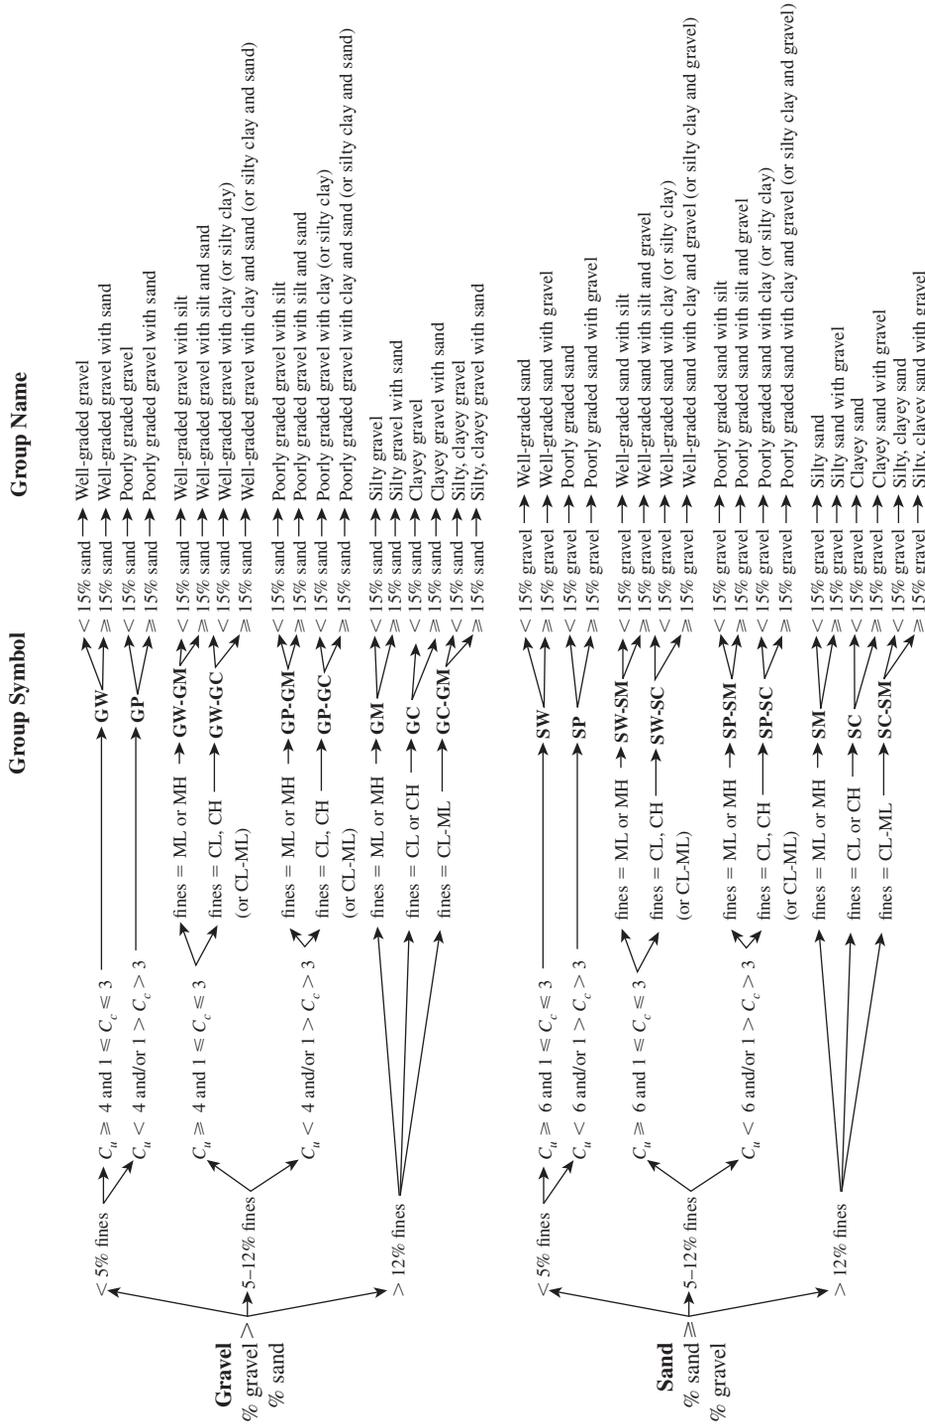

**Figure 2.6** Flowchart for classifying coarse-grained soils (more than 50% retained on No. 200 Sieve) (After ASTM, 2011) (Based on ASTM D2487-10: Standard Practice for Classification of Soils for Engineering Purposes (Unified Soil Classification)).

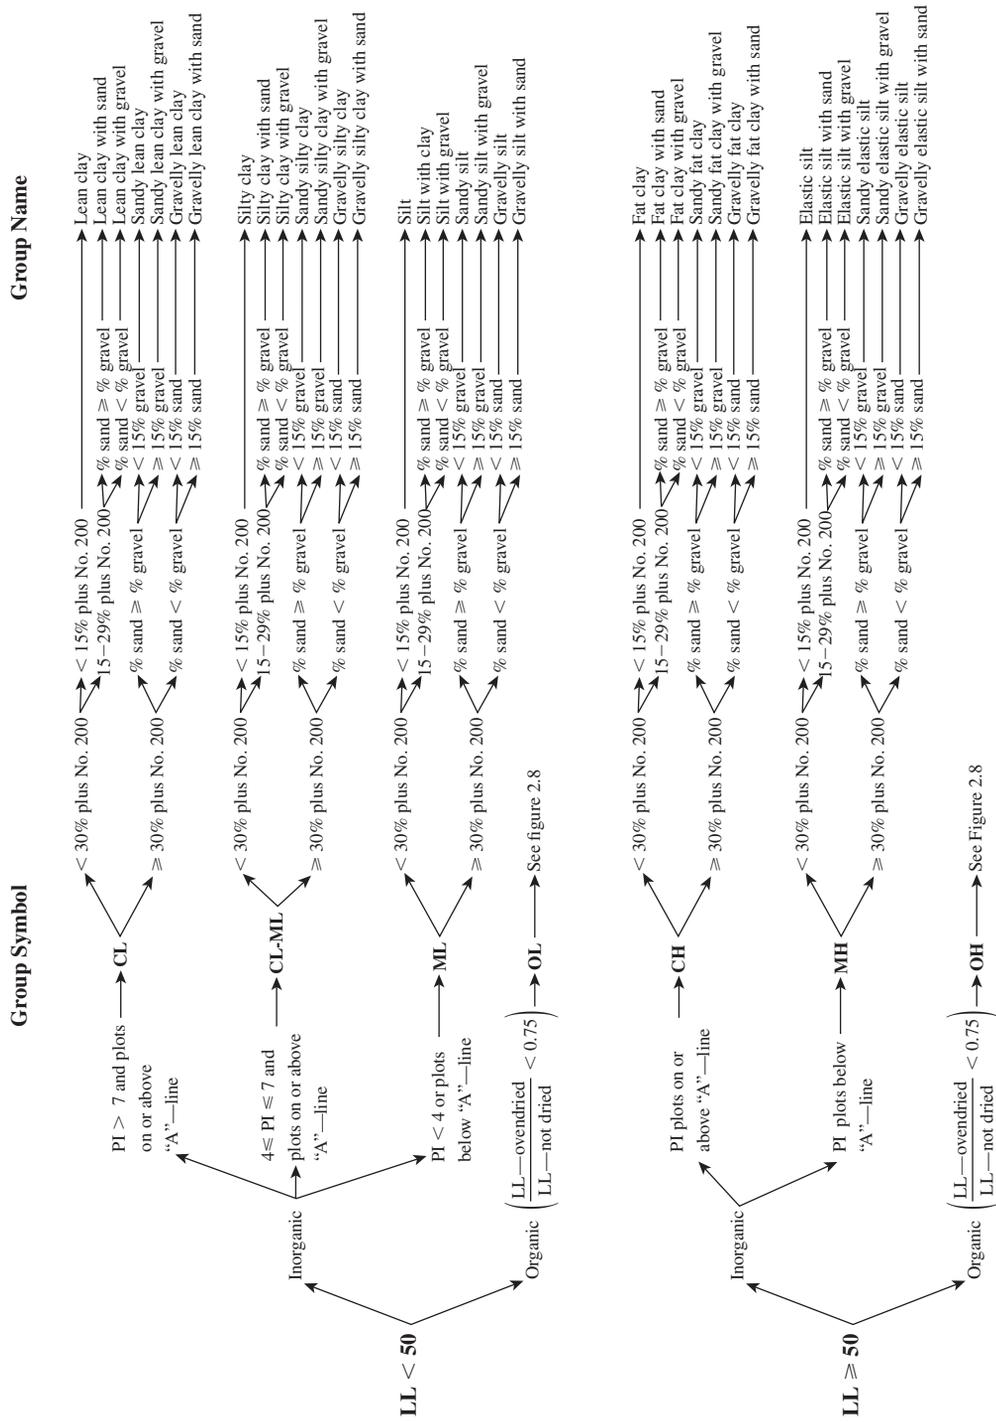

**Figure 2.7** Flowchart for classifying fine-grained soil (50% or more passes No. 200 Sieve) (After ASTM, 2011) (Based on ASTM D2487-10: Standard Practice for Classification of Soils for Engineering Purposes (Unified Soil Classification)).

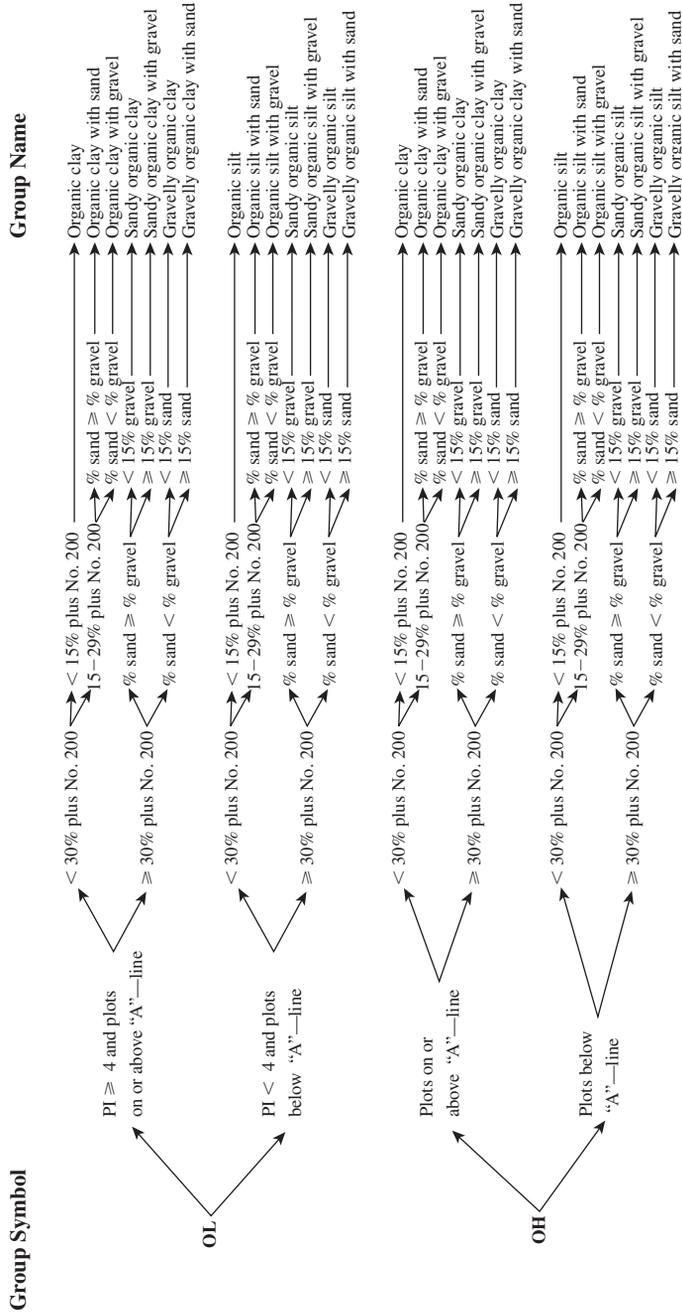

**Figure 2.8** Flowchart for classifying organic fine-grained soil (50% or more passes No. 200 Sieve) (After ASTM, 2011) (Based on ASTM D2487-10: Standard Practice for Classification of Soils for Engineering Purposes (Unified Soil Classification)).

**Example 2.7**

Classify the following soil by the AASHTO classification system.

Percent passing No. 4 sieve = 82  
 Percent passing No. 10 sieve = 71  
 Percent passing No. 40 sieve = 64  
 Percent passing No. 200 sieve = 41  
 Liquid limit = 31  
 Plasticity index = 12

**Solution**

Refer to Table 2.7. More than 35% passes through a No. 200 sieve, so it is a silt-clay material. It could be A-4, A-5, A-6, or A-7. Because  $LL = 31$  (that is, less than 40) and  $PI = 12$  (that is, greater than 11), this soil falls in group A-6. From Eq. (2.33),

$$GI = (F_{200} - 35)[0.02 + 0.005(LL - 40)] + 0.01(F_{200} - 15)(PI - 10)$$

So

$$\begin{aligned} GI &= (41 - 35)[0.02 + 0.005(31 - 40)] + 0.01(41 - 15)(12 - 10) \\ &= 0.37 \approx 0 \end{aligned}$$

Thus, the soil is **A-6(0)**. ■

**Example 2.8**

Classify the following soil by the AASHTO classification system.

Percent passing No. 4 sieve = 92  
 Percent passing No. 10 sieve = 87  
 Percent passing No. 40 sieve = 65  
 Percent passing No. 200 sieve = 30  
 Liquid limit = 22  
 Plasticity index = 8

**Solution**

Table 2.7 shows that it is a granular material because less than 35% is passing a No. 200 sieve. With  $LL = 22$  (that is, less than 40) and  $PI = 8$  (that is, less than 10), the soil falls in group A-2-4. From Eq. (2.34),

$$\begin{aligned} GI &= 0.01(F_{200} - 15)(PI - 10) = 0.01(30 - 15)(8 - 10) \\ &= -0.3 \approx 0 \end{aligned}$$

The soil is **A-2-4(0)**. ■

**Example 2.9**

Classify the following soil by the Unified Soil Classification System.

- Percent passing No. 4 sieve = 82
- Percent passing No. 10 sieve = 71
- Percent passing No. 40 sieve = 64
- Percent passing No. 200 sieve = 41
- Liquid limit = 31
- Plasticity index = 12

**Solution**

We are given that  $F_{200} = 41$ ,  $LL = 31$ , and  $PI = 12$ . Since 59% of the sample is retained on a No. 200 sieve, the soil is a coarse-grained material. The percentage passing a No. 4 sieve is 82, so 18% is retained on No. 4 sieve (gravel fraction). The coarse fraction passing a No. 4 sieve (sand fraction) is  $59 - 18 = 41\%$  (which is more than 50% of the total coarse fraction). Hence, the specimen is a sandy soil.

Now, using Table 2.8 and Figure 2.5, we identify the group symbol of the soil as **SC**.

Again from Figure 2.6, since the gravel fraction is greater than 15%, the group name is **clayey sand with gravel**. ■

## 2.10 Hydraulic Conductivity of Soil

The void spaces, or pores, between soil grains allow water to flow through them. In soil mechanics and foundation engineering, you must know how much water is flowing through a soil per unit time. This knowledge is required to design earth dams, determine the quantity of seepage under hydraulic structures, and dewater foundations before and during their construction. Darcy (1856) proposed the following equation (Figure 2.9) for calculating the velocity of flow of water through a soil:

$$v = ki \quad (2.35)$$

In this equation,

$v$  = Darcy velocity (unit: cm/sec)

$k$  = hydraulic conductivity of soil (unit: cm/sec)

$i$  = hydraulic gradient

The hydraulic gradient is defined as


$$i = \frac{\Delta h}{L} \quad (2.36)$$

where

$\Delta h$  = piezometric head difference between the sections at *AA* and *BB*

$L$  = distance between the sections at *AA* and *BB*

(*Note*: Sections *AA* and *BB* are perpendicular to the direction of flow.)

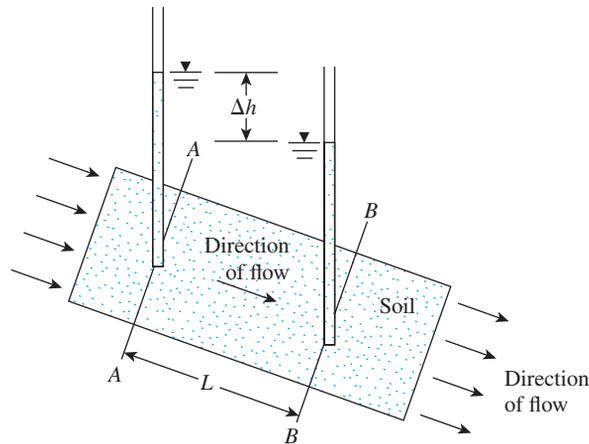

**Figure 2.9** Definition of Darcy's law

Darcy's law [Eq. (2.35)] is valid for a wide range of soils. However, with materials like clean gravel and open-graded rockfills, the law breaks down because of the turbulent nature of flow through them.

The value of the hydraulic conductivity of soils varies greatly. In the laboratory, it can be determined by means of *constant-head* or *falling-head* permeability tests. The constant-head test is more suitable for granular soils. Table 2.9 provides the general range for the values of  $k$  for various soils.

### Hydraulic Conductivity of Granular Soil

In granular soils, the value of hydraulic conductivity depends primarily on the void ratio. In the past, several equations have been proposed to relate the value of  $k$  to the void ratio in granular soil. However the author recommends the following equation for use (also see Carrier, 2003):

$$k \propto \frac{e^3}{1 + e} \quad (2.37)$$

where

$k$  = hydraulic conductivity

$e$  = void ratio

**Table 2.9** Range of the Hydraulic Conductivity for Various Soils

Type of soil	Hydraulic conductivity, $k$ (cm/sec)
Medium to coarse gravel	Greater than $10^{-1}$
Coarse to fine sand	$10^{-1}$ to $10^{-3}$
Fine sand, silty sand	$10^{-3}$ to $10^{-5}$
Silt, clayey silt, silty clay	$10^{-4}$ to $10^{-6}$
Clays	$10^{-7}$ or less

Chapuis (2004) proposed an empirical relationship for  $k$  in conjunction with Eq. (2.37) as

$$k(\text{cm/s}) = 2.4622 \left[ D_{10}^2 \frac{e^3}{(1+e)} \right]^{0.7825} \quad (2.38)$$

where  $D$  = effective size (mm).

The preceding equation is valid for natural, uniform sand and gravel to predict  $k$  that is in the range of  $10^{-1}$  to  $10^{-3}$  cm/s. This can be extended to natural, silty sands without plasticity. It is not valid for crushed materials or silty soils with some plasticity.

Based on laboratory experimental results, Amer and Awad (1974) proposed the following relationship for  $k$  in granular soil:

$$k = 3.5 \times 10^{-4} \left( \frac{e^3}{1+e} \right) C_u^{0.6} D_{10}^{2.32} \left( \frac{\rho_w}{\eta} \right) \quad (2.39)$$

where

$k$  is in cm/sec

$C_u$  = uniformity coefficient

$D_{10}$  = effective size (mm)

$\rho_w$  = density of water (g/cm<sup>3</sup>)

$\eta$  = dynamic viscosity (g·s/cm<sup>2</sup>)

At 20°C,  $\rho_w = 1$  g/cm<sup>3</sup> and  $\eta \approx 0.1 \times 10^{-4}$  g·s/cm<sup>2</sup>. So

$$k = 3.5 \times 10^{-4} \left( \frac{e^3}{1+e} \right) C_u^{0.6} D_{10}^{2.32} \left( \frac{1}{0.1 \times 10^{-4}} \right)$$

or

$$k (\text{cm/sec}) = 35 \left( \frac{e^3}{1+e} \right) C_u^{0.6} D_{10}^{2.32} \quad (2.40)$$


On the basis of laboratory experiments, the U.S. Department of Navy (1986) provided an empirical correlation between  $k$  and  $D_{10}$  (mm) for granular soils with the uniformity coefficient varying between 2 and 12 and  $D_{10}/D_5 < 1.4$ . This correlation is shown in Figure 2.10.

### Hydraulic Conductivity of Cohesive Soil

According to their experimental observations, Samarasinghe, Huang, and Drnevich (1982) suggested that the hydraulic conductivity of normally consolidated clays could be given by the equation

$$k = C \frac{e^n}{1+e} \quad (2.41)$$

where  $C$  and  $n$  are constants to be determined experimentally.

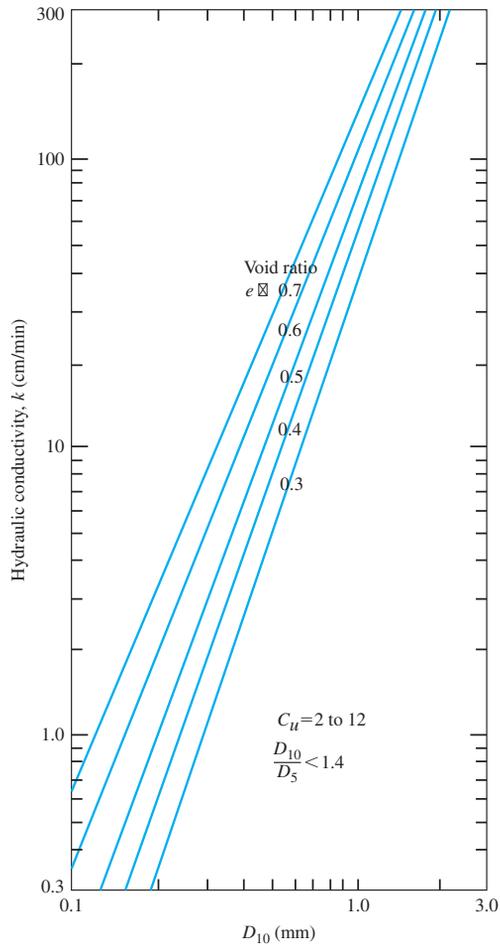

**Figure 2.10** Hydraulic conductivity of granular soils (Redrawn from U.S. Department of Navy, 1986)

Some other empirical relationships for estimating the hydraulic conductivity in clayey soils are given in Table 2.10. One should keep in mind, however, that any empirical relationship of this type is for estimation only, because the magnitude of  $k$  is a highly variable parameter and depends on several factors.

**Table 2.10** Empirical Relationships for Estimating Hydraulic Conductivity in Clayey Soil

Type of soil	Source	Relationship <sup>a</sup>
Clay	Mesri and Olson (1971)	$\log k = A' \log e + B'$
	Taylor (1948)	$\log k = \log k_0 - \frac{e_0 - e}{C_k}$
		$C_k \approx 0.5e_0$

<sup>a</sup> $k_0$  = *in situ* hydraulic conductivity at void ratio  $e_0$

$k$  = hydraulic conductivity at void ratio  $e$

$C_k$  = hydraulic conductivity change index

**Example 2.10**

For a normally consolidated clay soil, the following values are given.

Void ratio	$k$ (cm/sec)
1.1	$0.302 \times 10^{-7}$
0.9	$0.12 \times 10^{-7}$

Estimate the hydraulic conductivity of the clay at a void ratio of 0.75. Use Eq. (2.41).

**Solution**

From Eq. (2.41), we have

$$k = C \left( \frac{e^n}{1 + e} \right)$$

$$\frac{k_1}{k_2} = \frac{\left( \frac{e_1^n}{1 + e_1} \right)}{\left( \frac{e_2^n}{1 + e_2} \right)} \quad (\text{Note: } k_1 \text{ and } k_2 \text{ are hydraulic conductivities at void ratios } e_1 \text{ and } e_2, \text{ respectively.})$$

$$\frac{0.302 \times 10^{-7}}{0.12 \times 10^{-7}} = \frac{\frac{(1.1)^n}{1 + 1.1}}{\frac{(0.9)^n}{1 + 0.9}}$$

$$2.517 = \left( \frac{1.9}{2.1} \right) \left( \frac{1.1}{0.9} \right)^n$$

$$2.782 = (1.222)^n$$

$$n = \frac{\log(2.782)}{\log(1.222)} = \frac{0.444}{0.087} = 5.1$$

so

$$k = C \left( \frac{e^{5.1}}{1 + e} \right)$$

To find  $C$ , we perform the calculation:

$$0.302 \times 10^{-7} = C \left[ \frac{(1.1)^{5.1}}{1 + 1.1} \right] = \left( \frac{1.626}{2.1} \right) C$$

$$C = \frac{(0.302 \times 10^{-7})(2.1)}{1.626} = 0.39 \times 10^{-7}$$

Hence,

$$k = (0.39 \times 10^{-7} \text{ cm/sec}) \left( \frac{e^n}{1 + e} \right)$$

At a void ratio of 0.75, we have

$$k = (0.39 \times 10^{-7}) \left( \frac{0.75^{5.1}}{1 + 0.75} \right) = \mathbf{0.514 \times 10^{-8} \text{ cm/sec}} \quad \blacksquare$$


## 2.11 Steady-State Seepage

For most cases of seepage under hydraulic structures, the flow path changes direction and is not uniform over the entire area. In such cases, one of the ways of determining the rate of seepage is by a graphical construction referred to as the *flow net*, a concept based on Laplace's theory of continuity. According to this theory, for a steady flow condition, the flow at any point A (Figure 2.11) can be represented by the equation

$$k_x \frac{\partial^2 h}{\partial x^2} + k_y \frac{\partial^2 h}{\partial y^2} + k_z \frac{\partial^2 h}{\partial z^2} = 0 \quad (2.42)$$

where

$k_x, k_y, k_z$  = hydraulic conductivity of the soil in the  $x, y,$  and  $z$  directions, respectively  
 $h$  = hydraulic head at point A (i.e., the head of water that a piezometer placed at A would show with the *downstream water level as datum*, as shown in Figure 2.11)

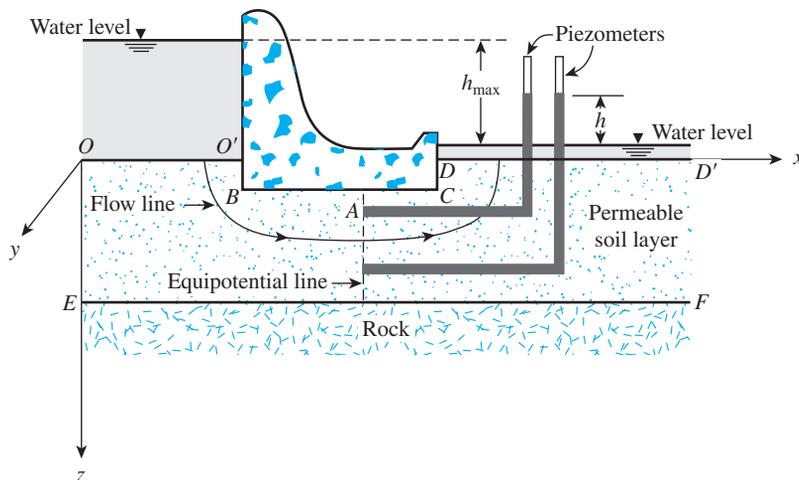

**Figure 2.11** Steady-state seepage

For a two-dimensional flow condition, as shown in Figure 2.11,

$$\frac{\partial^2 h}{\partial^2 y} = 0$$

so Eq. (2.42) takes the form

$$k_x \frac{\partial^2 h}{\partial x^2} + k_z \frac{\partial^2 h}{\partial z^2} = 0 \quad (2.43)$$

If the soil is isotropic with respect to hydraulic conductivity,  $k_x = k_z = k$ , and


$$\frac{\partial^2 h}{\partial x^2} + \frac{\partial^2 h}{\partial z^2} = 0 \quad (2.44)$$

Equation (2.44), which is referred to as Laplace's equation and is valid for confined flow, represents two orthogonal sets of curves known as *flow lines* and *equipotential lines*. A flow net is a combination of numerous equipotential lines and flow lines. A flow line is a path that a water particle would follow in traveling from the upstream side to the downstream side. An equipotential line is a line along which water, in piezometers, would rise to the same elevation. (See Figure 2.11.)

In drawing a flow net, you need to establish the *boundary conditions*. For example, in Figure 2.11, the ground surfaces on the upstream ( $OO'$ ) and downstream ( $DD'$ ) sides are equipotential lines. The base of the dam below the ground surface,  $O'BCD$ , is a flow line. The top of the rock surface,  $EF$ , is also a flow line. Once the boundary conditions are established, a number of flow lines and equipotential lines are drawn by trial and error so that all the flow elements in the net have the same length-to-width ratio ( $L/B$ ). In most cases,  $L/B$  is held to unity, that is, the flow elements are drawn as curvilinear "squares." This method is illustrated by the flow net shown in Figure 2.12. Note that all flow lines must intersect all equipotential lines at *right angles*.

Once the flow net is drawn, the seepage (in unit time per unit length of the structure) can be calculated as

$$q = kh_{\max} \frac{N_f}{N_d} n \quad (2.45)$$

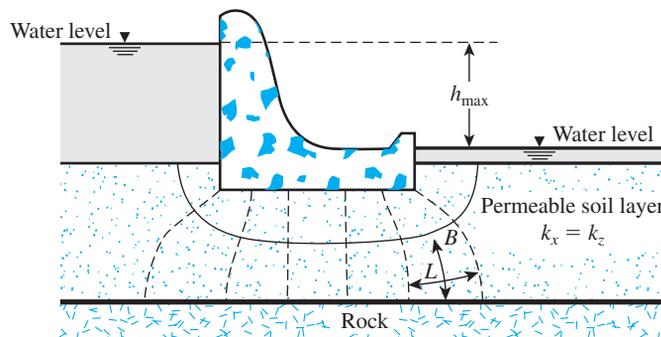

**Figure 2.12** Flow net

where

$N_f$  = number of flow channels

$N_d$  = number of drops

$n$  = width-to-length ratio of the flow elements in the flow net ( $B/L$ )

$h_{\max}$  = difference in water level between the upstream and downstream sides

The space between two consecutive flow lines is defined as a *flow channel*, and the space between two consecutive equipotential lines is called a *drop*. In Figure 2.12,  $N_f = 2$ ,  $N_d = 7$ , and  $n = 1$ . When square elements are drawn in a flow net,

$$q = kh_{\max} \frac{N_f}{N_d} \quad (2.46)$$

## 2.12 Effective Stress

The *total stress* at a given point in a soil mass can be expressed as

$$\sigma = \sigma' + u \quad (2.47)$$

where

$\sigma$  = total stress

$\sigma'$  = effective stress

$u$  = pore water pressure

The effective stress,  $\sigma'$ , is the vertical component of forces at solid-to-solid contact points over a unit cross-sectional area. Referring to Figure 2.13a, at point A

$$\sigma = \gamma h_1 + \gamma_{\text{sat}} h_2$$

$$u = h_2 \gamma_w$$

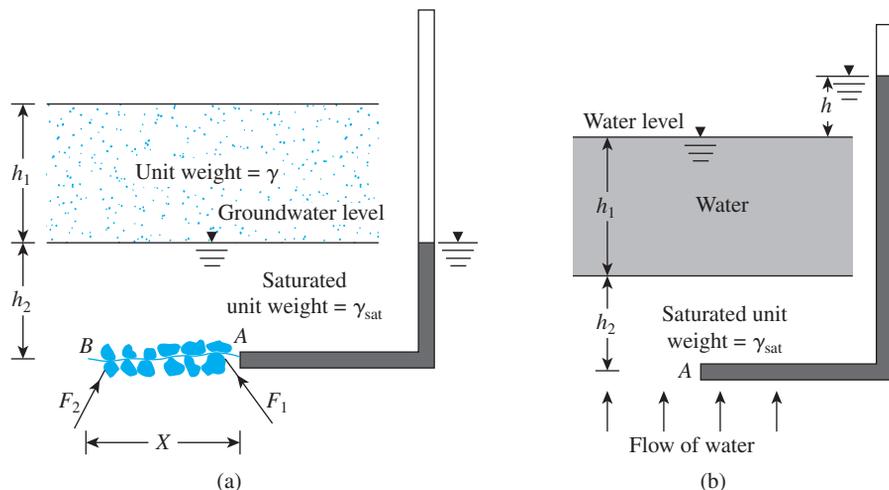


Figure 2.13 Calculation of effective stress

where

$\gamma_w$  = unit weight of water

$\gamma_{\text{sat}}$  = saturated unit weight of soil

So

$$\begin{aligned}\sigma' &= (\gamma h_1 + \gamma_{\text{sat}} h_2) - (h_2 \gamma_w) \\ &= \gamma h_1 + h_2 (\gamma_{\text{sat}} - \gamma_w) \\ &= \gamma h_1 + \gamma' h_2\end{aligned}\quad (2.48)$$

where  $\gamma'$  = effective or submerged unit weight of soil.

For the problem in Figure 2.13a, there was *no seepage of water* in the soil. Figure 2.13b shows a simple condition in a soil profile in which there is upward seepage. For this case, at point A,

$$\sigma = h_1 \gamma_w + h_2 \gamma_{\text{sat}}$$

and

$$u = (h_1 + h_2 + h) \gamma_w$$

Thus, from Eq. (2.47),

$$\begin{aligned}\sigma' &= \sigma - u = (h_1 \gamma_w + h_2 \gamma_{\text{sat}}) - (h_1 + h_2 + h) \gamma_w \\ &= h_2 (\gamma_{\text{sat}} - \gamma_w) - h \gamma_w = h_2 \gamma' - h \gamma_w\end{aligned}$$

or

$$\sigma' = h_2 \left( \gamma' - \frac{h}{h_2} \gamma_w \right) = h_2 (\gamma' - i \gamma_w) \quad (2.49)$$

Note in Eq. (2.49) that  $h/h_2$  is the hydraulic gradient  $i$ . If the hydraulic gradient is very high, so that  $\gamma' - i \gamma_w$  becomes zero, *the effective stress will become zero*. In other words, there is no contact stress between the soil particles, and the soil will break up. This situation is referred to as the *quick condition*, or *failure by heave*. So, for heave,

$$i = i_{\text{cr}} = \frac{\gamma'}{\gamma_w} = \frac{G_s - 1}{1 + e} \quad (2.50)$$

where  $i_{\text{cr}}$  = critical hydraulic gradient.

For most sandy soils,  $i_{\text{cr}}$  ranges from 0.9 to 1.1, with an average of about unity.

### Example 2.11

A soil profile is shown in Figure 2.14 Calculate the total stress, pore water pressure, and effective stress at points A, B, C, and D.

#### Solution

At A: Total stress:  $\sigma'_A = \mathbf{0}$   
 Pore water pressure:  $u_A = \mathbf{0}$   
 Effective stress:  $\sigma'_A = \mathbf{0}$

$$\begin{aligned} \text{At } B: \quad \sigma_B &= 3\gamma_{\text{dry(sand)}} = 3 \times 16.5 = \mathbf{49.5 \text{ kN/m}^2} \\ u_B &= \mathbf{0 \text{ kN/m}^2} \\ \sigma'_B &= 49.5 - 0 = \mathbf{49.5 \text{ kN/m}^2} \\ \text{At } C: \quad \sigma_C &= 6\gamma_{\text{dry(sand)}} = 6 \times 16.5 = \mathbf{99 \text{ kN/m}^2} \\ u_C &= \mathbf{0 \text{ kN/m}^2} \\ \sigma'_C &= 99 - 0 = \mathbf{99 \text{ kN/m}^2} \end{aligned}$$

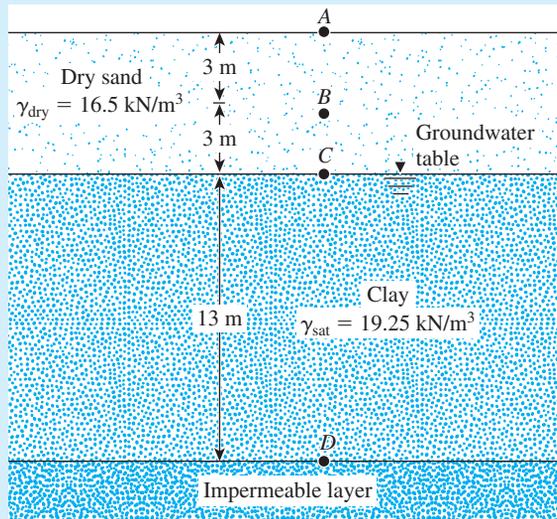


FIGURE 2.14


$$\begin{aligned} \text{At } D: \quad \sigma_D &= 6\gamma_{\text{dry(sand)}} + 13\gamma_{\text{sat(clay)}} \\ &= 6 \times 16.5 + 13 \times 19.25 \\ &= 99 + 250.25 = \mathbf{349.25 \text{ kN/m}^2} \\ u_D &= 13\gamma_w = 13 \times 9.81 = \mathbf{127.53 \text{ kN/m}^2} \\ \sigma'_D &= 349.25 - 127.53 = \mathbf{221.72 \text{ kN/m}^2} \end{aligned}$$

## 2.13 Consolidation

In the field, when the stress on a saturated clay layer is increased—for example, by the construction of a foundation—the pore water pressure in the clay will increase. Because the hydraulic conductivity of clays is very small, some time will be required for the excess pore water pressure to dissipate and the increase in stress to be transferred to the soil skeleton. According to Figure 2.15, if  $\Delta\sigma$  is a surcharge at the ground surface over a very large area, the increase in total stress at any depth of the clay layer will be equal to  $\Delta\sigma$ .

However, at time  $t = 0$  (i.e., immediately after the stress is applied), the excess pore water pressure at any depth  $\Delta u$  will equal  $\Delta\sigma$ , or

$$\Delta u = \Delta h_i \gamma_w = \Delta\sigma \text{ (at time } t = 0\text{)}$$

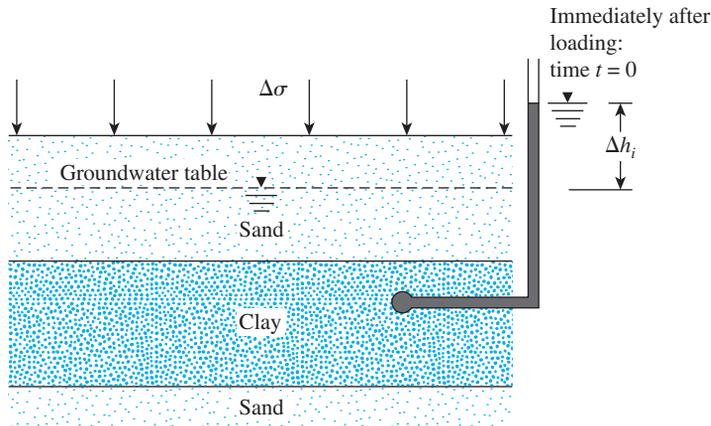

**Figure 2.15** Principles of consolidation

Hence, the increase in effective stress at time  $t = 0$  will be

$$\Delta\sigma' = \Delta\sigma - \Delta u = 0$$

Theoretically, at time  $t = \infty$ , when all the excess pore water pressure in the clay layer has dissipated as a result of drainage into the sand layers,

$$\Delta u = 0 \quad (\text{at time } t = \infty)$$

Then the increase in effective stress in the clay layer is



$$\Delta\sigma' = \Delta\sigma - \Delta u = \Delta\sigma - 0 = \Delta\sigma$$

This gradual increase in the effective stress in the clay layer will cause settlement over a period of time and is referred to as *consolidation*.

Laboratory tests on undisturbed saturated clay specimens can be conducted (ASTM Test Designation D-2435) to determine the consolidation settlement caused by various incremental loadings. The test specimens are usually 63.5 mm (2.5 in.) in diameter and 25.4 mm (1 in.) in height. Specimens are placed inside a ring, with one porous stone at the top and one at the bottom of the specimen (Figure 2.16a). A load on the specimen is then applied so that the total vertical stress is equal to  $\sigma$ . Settlement readings for the specimen are taken periodically for 24 hours. After that, the load on the specimen is doubled and more settlement readings are taken. At all times during the test, the specimen is kept under water. The procedure is continued until the desired limit of stress on the clay specimen is reached.

Based on the laboratory tests, a graph can be plotted showing the variation of the void ratio  $e$  at the *end* of consolidation against the corresponding vertical effective stress  $\sigma'$ . (On a semilogarithmic graph,  $e$  is plotted on the arithmetic scale and  $\sigma'$  on the log scale.) The nature of the variation of  $e$  against  $\log \sigma'$  for a clay specimen is shown in Figure 2.16b. After the desired consolidation pressure has been reached, the specimen gradually can be unloaded, which will result in the swelling of the specimen. The figure also shows the variation of the void ratio during the unloading period.

From the  $e$ - $\log \sigma'$  curve shown in Figure 2.16b, three parameters necessary for calculating settlement in the field can be determined.

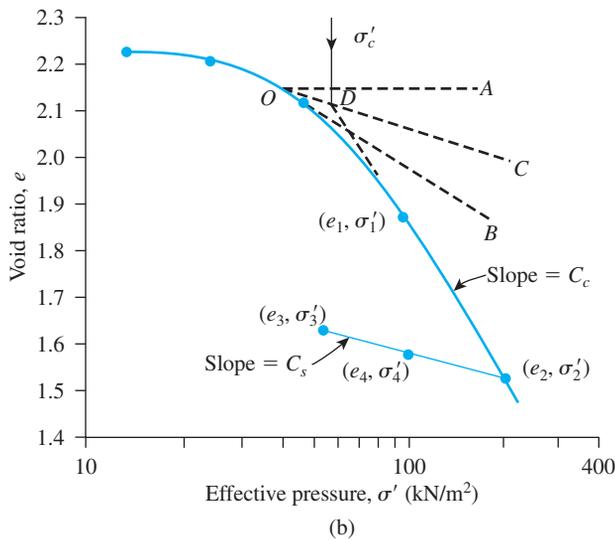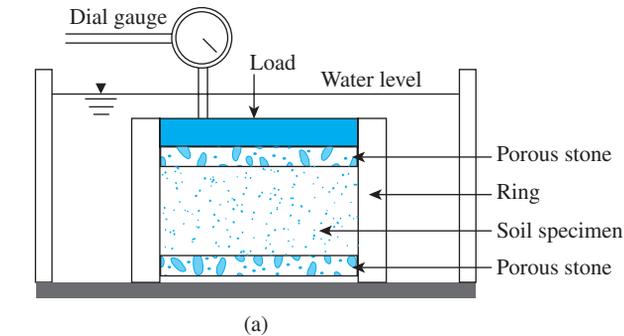

**Figure 2.16** (a) Schematic diagram of consolidation test arrangement; (b)  $e$ – $\log \sigma'$  curve for a soft clay from East St. Louis, Illinois (*Note:* At the end of consolidation,  $\sigma = \sigma'$ )

They are preconsolidation pressure ( $\sigma'_c$ ), compression index ( $C_c$ ), and the swelling index ( $C_s$ ). The following are more detailed descriptions for each of the parameters.

### Preconsolidation Pressure

The *preconsolidation pressure*,  $\sigma'_c$ , is the *maximum past effective overburden pressure* to which the soil specimen has been subjected. It can be determined by using a simple graphical procedure proposed by Casagrande (1936). The procedure involves five steps (see Figure 2.16b):

- Determine the point  $O$  on the  $e$ – $\log \sigma'$  curve that has the sharpest curvature (i.e., the smallest radius of curvature).
- Draw a horizontal line  $OA$ .
- Draw a line  $OB$  that is tangent to the  $e$ – $\log \sigma'$  curve at  $O$ .
- Draw a line  $OC$  that bisects the angle  $AOB$ .
- Produce the straight-line portion of the  $e$ – $\log \sigma'$  curve backwards to intersect  $OC$ . This is point  $D$ . The pressure that corresponds to point  $D$  is the preconsolidation pressure  $\sigma'_c$ .

Natural soil deposits can be *normally consolidated* or *overconsolidated* (or *preconsolidated*). If the present effective overburden pressure  $\sigma' = \sigma'_o$  is equal to the preconsolidated pressure  $\sigma'_c$  the soil is *normally consolidated*. However, if  $\sigma'_o < \sigma'_c$ , the soil is *overconsolidated*.

Stas and Kulhawy (1984) correlated the preconsolidation pressure with liquidity index in the following form:

$$\frac{\sigma'_c}{p_a} = 10^{(1.11 - 1.62 \text{ LI})} \quad (2.51)$$

where

$p_a$  = atmospheric pressure ( $\approx 2000 \text{ lb/ft}^2$  or  $100 \text{ kN/m}^2$ )

LI = liquidity index

A similar correlation has also been provided by Kulhawy and Mayne (1990), which is based on the work of Wood (1983) as

$$\sigma'_c = \sigma'_o \left\{ 10^{[1 - 2.5 \text{ LI} - 1.25 \log(\frac{\sigma'_c}{p_a})]} \right\} \quad (2.52)$$

where  $\sigma'_o$  = *in situ* effective overburden pressure.

## Compression Index

The *compression index*,  $C_c$ , is the slope of the straight-line portion (the latter part) of the loading curve, or

$$C_c = \frac{e_1 - e_2}{\log \sigma'_2 - \log \sigma'_1} = \frac{e_1 - e_2}{\log \left( \frac{\sigma'_2}{\sigma'_1} \right)} \quad (2.53)$$


where  $e_1$  and  $e_2$  are the void ratios at the end of consolidation under effective stresses  $\sigma'_1$  and  $\sigma'_2$ , respectively.

The *compression index*, as determined from the laboratory  $e$ - $\log \sigma'$  curve, will be somewhat different from that encountered in the field. The primary reason is that the soil remolds itself to some degree during the field exploration. The nature of variation of the  $e$ - $\log \sigma'$  curve in the field for a normally consolidated clay is shown in Figure 2.17. The curve, generally referred to as the *virgin compression curve*, approximately intersects the laboratory curve at a void ratio of  $0.42e_o$  (Terzaghi and Peck, 1967). Note that  $e_o$  is the void ratio of the clay in the field. Knowing the values of  $e_o$  and  $\sigma'_c$ , you can easily construct the virgin curve and calculate its compression index by using Eq. (2.53).

The value of  $C_c$  can vary widely, depending on the soil. Skempton (1944) gave an empirical correlation for the compression index in which

$$C_c = 0.009(\text{LL} - 10) \quad (2.54)$$

where LL = liquid limit.

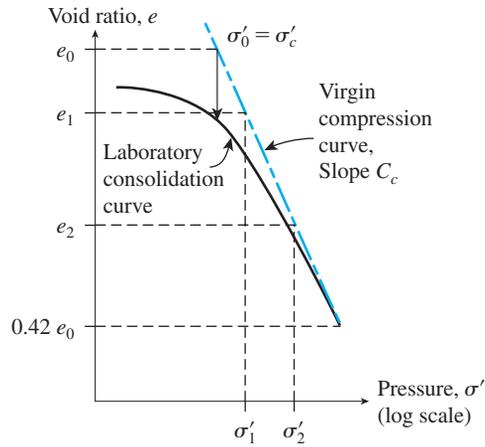

**Figure 2.17** Construction of virgin compression curve for normally consolidated clay

Besides Skempton, several other investigators also have proposed correlations for the compression index. Some of those are given here:

Rendon-Herrero (1983):

$$C_c = 0.141 G_s^{1.2} \left( \frac{1 + e_o}{G_s} \right)^{2.38} \quad (2.55)$$

Nagaraj and Murty (1985):

$$C_c = 0.2343 \left[ \frac{LL(\%)}{100} \right] G_s \quad (2.56)$$

Park and Koumoto (2004):

$$C_c = \frac{n_o}{371.747 - 4.275 n_o} \quad (2.57)$$

where  $n_o = \textit{in situ}$  porosity of soil.

Wroth and Wood (1978):

$$C_c = 0.5 G_s \left( \frac{PI(\%)}{100} \right) \quad (2.58)$$

If a typical value of  $G_s = 2.7$  is used in Eq. (2.58), we obtain (Kulhawy and Mayne, 1990)

$$C_c = \frac{PI(\%)}{74} \quad (2.59)$$

### Swelling Index

The *swelling index*,  $C_s$ , is the slope of the unloading portion of the  $e$ - $\log \sigma'$  curve. In Figure 2.16b, it is defined as


$$C_s = \frac{e_3 - e_4}{\log\left(\frac{\sigma'_4}{\sigma'_3}\right)} \tag{2.60}$$

In most cases, the value of the swelling index is  $\frac{1}{4}$  to  $\frac{1}{5}$  of the compression index. Following are some representative values of  $C_s/C_c$  for natural soil deposits:

Description of soil	$C_s/C_c$
Boston Blue clay	0.24–0.33
Chicago clay	0.15–0.3
New Orleans clay	0.15–0.28
St. Lawrence clay	0.05–0.1

The swelling index is also referred to as the *recompression index*.

The determination of the swelling index is important in the estimation of consolidation settlement of *overconsolidated clays*. In the field, depending on the pressure increase, an overconsolidated clay will follow an  $e$ - $\log \sigma'$  path  $abc$ , as shown in Figure 2.18. Note that point  $a$ , with coordinates  $\sigma'_0$  and  $e_0$ , corresponds to the field conditions before any increase in pressure. Point  $b$  corresponds to the preconsolidation pressure ( $\sigma'_c$ ) of the clay. Line  $ab$  is approximately parallel to the laboratory unloading curve  $cd$  (Schmertmann, 1953). Hence, if you know  $e_0$ ,  $\sigma'_0$ ,  $\sigma'_c$ ,  $C_c$ , and  $C_s$ , you can easily construct the field consolidation curve.

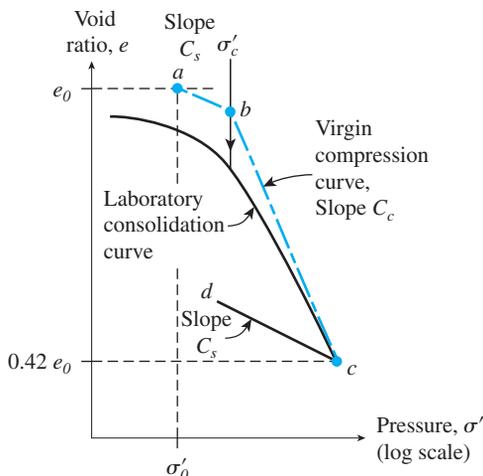

**Figure 2.18** Construction of field consolidation curve for overconsolidated clay

Using the modified Cam clay model and Eq. (2.58), Kulhawy and Mayne (1990) have shown that

$$C_s = \frac{PI(\%) }{370} \quad (2.61)$$

Comparing Eqs. (2.59) and (2.61), we obtain

$$C_s \approx \frac{1}{5} C_c \quad (2.62)$$

## 2.14 Calculation of Primary Consolidation Settlement

The one-dimensional primary consolidation settlement (caused by an additional load) of a clay layer (Figure 2.19) having a thickness  $H_c$  may be calculated as

$$S_c = \frac{\Delta e}{1 + e_o} H_c \quad (2.63)$$

where

$S_c$  = primary consolidation settlement

$\Delta e$  = total change of void ratio caused by the additional load application

$e_o$  = void ratio of the clay before the application of load


For normally consolidated clay (that is,  $\sigma'_o = \sigma'_c$ )

$$\Delta e = C_c \log \frac{\sigma'_o + \Delta\sigma'}{\sigma'_o} \quad (2.64)$$

where

$\sigma'_o$  = average effective vertical stress on the clay layer

$\Delta\sigma'$  =  $\Delta\sigma$  (that is, added pressure)

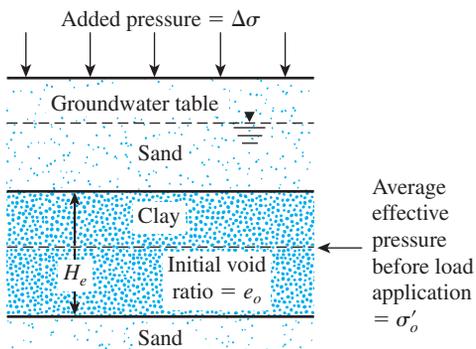

**Figure 2.19** One-dimensional settlement calculation

Now, combining Eqs. (2.63) and (2.64) yields

$$S_c = \frac{C_c H_c}{1 + e_o} \log \frac{\sigma'_o + \Delta\sigma'}{\sigma'_o} \quad (2.65)$$

For overconsolidated clay with  $\sigma'_o + \Delta\sigma' \leq \sigma'_c$ ,

$$\Delta e = C_s \log \frac{\sigma'_o + \Delta\sigma'}{\sigma'_o} \quad (2.66)$$

Combining Eqs. (2.63) and (2.66) gives

$$S_c = \frac{C_s H_c}{1 + e_o} \log \frac{\sigma'_o + \Delta\sigma'}{\sigma'_o} \quad (2.67)$$

For overconsolidated clay, if  $\sigma'_o < \sigma'_c < \sigma'_o + \Delta\sigma'$ , then

$$\Delta e = \Delta e_1 + \Delta e_2 = C_s \log \frac{\sigma'_c}{\sigma'_o} + C_c \log \frac{\sigma'_o + \Delta\sigma'}{\sigma'_c} \quad (2.68)$$

Now, combining Eqs. (2.63) and (2.68) yields


$$S_c = \frac{C_s H_c}{1 + e_o} \log \frac{\sigma'_c}{\sigma'_o} + \frac{C_c H_c}{1 + e_o} \log \frac{\sigma'_o + \Delta\sigma'}{\sigma'_c} \quad (2.69)$$

## 2.15 Time Rate of Consolidation

In Section 2.13 (see Figure 2.15), we showed that consolidation is the result of the gradual dissipation of the excess pore water pressure from a clay layer. The dissipation of pore water pressure, in turn, increases the effective stress, which induces settlement. Hence, to estimate the degree of consolidation of a clay layer at some time  $t$  after the load is applied, you need to know the rate of dissipation of the excess pore water pressure.

Figure 2.20 shows a clay layer of thickness  $H_c$  that has highly permeable sand layers at its top and bottom. Here, the excess pore water pressure at any point  $A$  at any time  $t$  after the load is applied is  $\Delta u = (\Delta h)\gamma_w$ . For a vertical drainage condition (that is, in the direction of  $z$  only) from the clay layer, Terzaghi derived the differential equation

$$\frac{\partial(\Delta u)}{\partial t} = C_v \frac{\partial^2(\Delta u)}{\partial z^2} \quad (2.70)$$

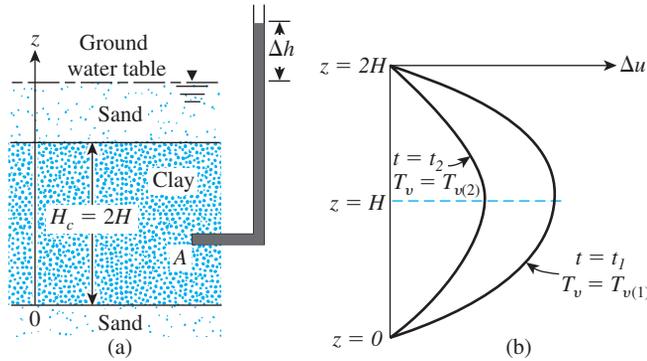

**Figure 2.20** (a) Derivation of Eq. (2.72); (b) nature of variation of  $\Delta u$  with time

where  $C_v$  = coefficient of consolidation, defined by

$$C_v = \frac{k}{m_v \gamma_w} = \frac{k}{\frac{\Delta e}{\Delta \sigma' (1 + e_{av})} \gamma_w} \quad (2.71)$$

in which

$k$  = hydraulic conductivity of the clay

$\Delta e$  = total change of void ratio caused by an effective stress increase of  $\Delta \sigma'$

$e_{av}$  = average void ratio during consolidation

$$m_v = \text{volume coefficient of compressibility} = \frac{a_v}{1 + e_{av}} = \frac{\Delta e}{[\Delta \sigma' (1 + e_{av})]}$$

$$a_v = \frac{\Delta e}{\Delta \sigma'}$$

Equation (2.70) can be solved to obtain  $\Delta u$  as a function of time  $t$  with the following boundary conditions:

1. Because highly permeable sand layers are located at  $z = 0$  and  $z = H_c$ , the excess pore water pressure developed in the clay at those points will be immediately dissipated. Hence,

$$\Delta u = 0 \quad \text{at} \quad z = 0$$

and

$$\Delta u = 0 \quad \text{at} \quad z = H_c = 2H$$

where  $H$  = length of maximum drainage path (due to two-way drainage condition—that is, at the top and bottom of the clay).

2. At time  $t = 0$ ,  $\Delta u = \Delta u_0$  = initial excess pore water pressure after the load is applied. With the preceding boundary conditions, Eq. (2.70) yields

$$\Delta u = \sum_{m=0}^{m=\infty} \left[ \frac{2(\Delta u_0)}{M} \sin\left(\frac{Mz}{H}\right) \right] e^{-M^2 T_v} \quad (2.72)$$

where

$$\begin{aligned} M &= [(2m + 1)\pi]/2 \\ m &= \text{an integer} = 1, 2, \dots \\ T_v &= \text{nondimensional time factor} = (C_v t)/H^2 \end{aligned} \quad (2.73)$$

The value of  $\Delta u$  for various depths (i.e.,  $z = 0$  to  $z = 2H$ ) at any given time  $t$  (and thus  $T_v$ ) can be calculated from Eq. (2.72). The nature of this variation of  $\Delta u$  is shown in Figures 2.21a and b. Figure 2.21c shows the variation of  $\Delta u/\Delta u_0$  with  $T_v$  and  $H/H_c$  using Eqs. (2.72) and (2.73).

The *average degree of consolidation* of the clay layer can be defined as

$$U = \frac{S_{c(t)}}{S_{c(\max)}} \quad (2.74)$$

where

$S_{c(t)}$  = settlement of a clay layer at time  $t$  after the load is applied  
 $S_{c(\max)}$  = maximum consolidation settlement that the clay will undergo under a given loading

If the initial pore water pressure ( $\Delta u_0$ ) distribution is constant with depth, as shown in Figure 2.21a, the average degree of consolidation also can be expressed as

$$U = \frac{S_{c(t)}}{S_{c(\max)}} = \frac{\int_0^{2H} (\Delta u_0) dz - \int_0^{2H} (\Delta u) dz}{\int_0^{2H} (\Delta u_0) dz} \quad (2.75)$$


or

$$U = \frac{(\Delta u_0)2H - \int_0^{2H} (\Delta u) dz}{(\Delta u_0)2H} = 1 - \frac{\int_0^{2H} (\Delta u) dz}{2H(\Delta u_0)} \quad (2.76)$$

Now, combining Eqs. (2.72) and (2.76), we obtain

$$U = \frac{S_{c(t)}}{S_{c(\max)}} = 1 - \sum_{m=0}^{m=\infty} \left( \frac{2}{M^2} \right) e^{-M^2 T_v} \quad (2.77)$$

The variation of  $U$  with  $T_v$  can be calculated from Eq. (2.77) and is plotted in Figure 2.22. Note that Eq. (2.77) and thus Figure 2.22 are also valid when an impermeable layer is located at the bottom of the clay layer (Figure 2.21). In that case, the dissipation of excess pore water pressure can take place in one direction only. The length of the *maximum drainage path* is then equal to  $H = H_c$ .

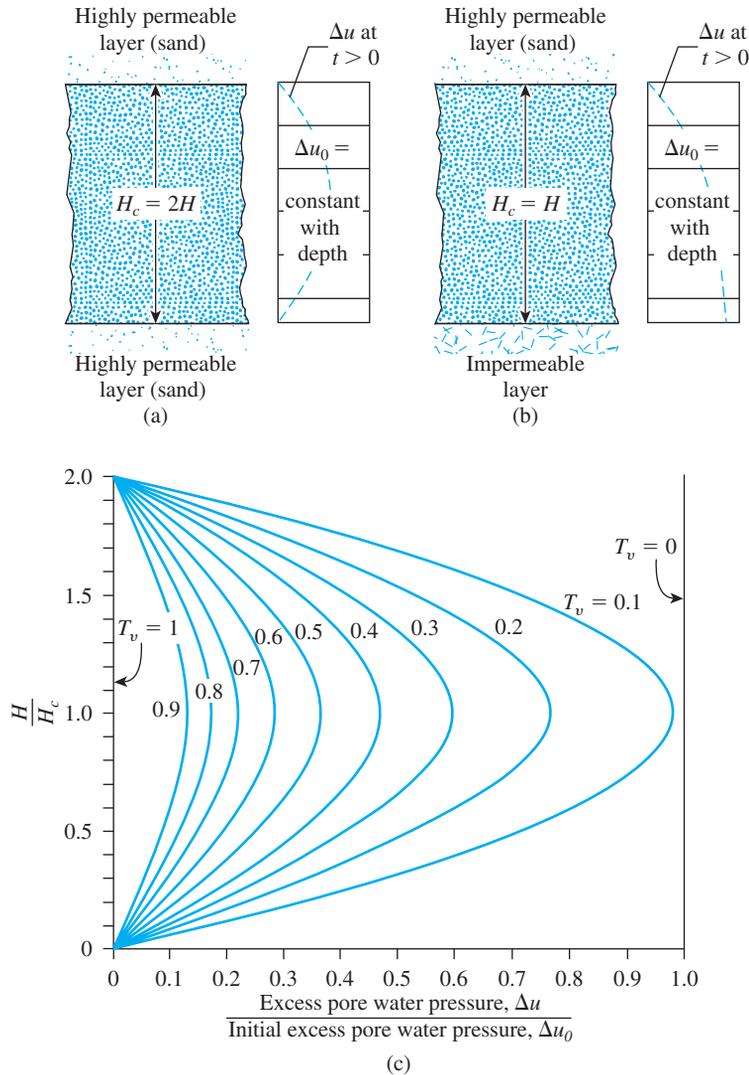

**Figure 2.21** Drainage condition for consolidation: (a) two-way drainage; (b) one-way drainage; (c) plot of  $\Delta u/\Delta u_0$  with  $T_v$  and  $H/H_c$


The variation of  $T_v$  with  $U$  shown in Figure 2.22 can also be approximated by

$$T_v = \frac{\pi}{4} \left( \frac{U\%}{100} \right)^2 \quad (\text{for } U = 0 \text{ to } 60\%) \quad (2.78)$$

and

$$T_v = 1.781 - 0.933 \log(100 - U\%) \quad (\text{for } U > 60\%) \quad (2.79)$$

Table 2.11 gives the variation of  $T_v$  with  $U$  on the basis of Eqs. (2.78) and (2.79).

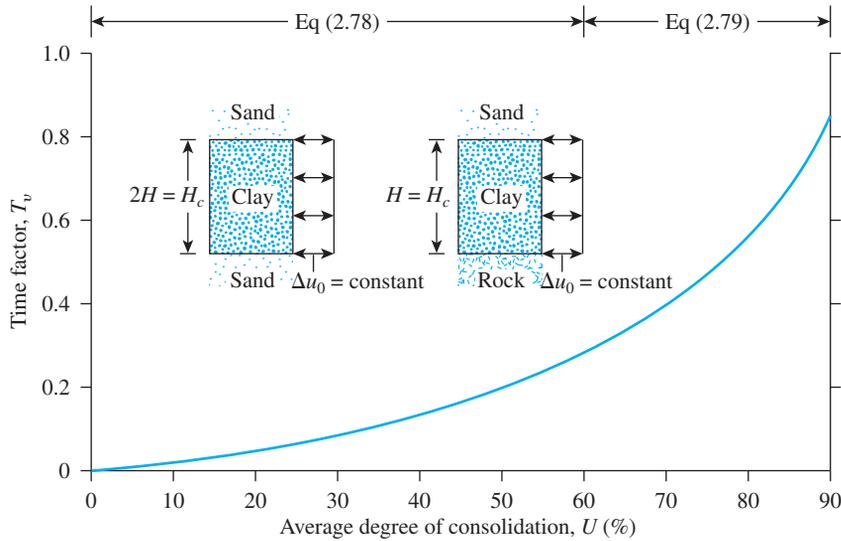

**Figure 2.22** Plot of time factor against average degree of consolidation ( $\Delta u_0 = \text{constant}$ )

Sivaram and Swamee (1977) gave the following equation for  $U$  varying from 0 to 100%:

$$\frac{U\%}{100} = \frac{(4T_v/\pi)^{0.5}}{[1 + (4T_v/\pi)^{2.8}]^{0.179}} \quad (2.80)$$

or

$$T_v = \frac{(\pi/4)(U\%/100)^2}{[1 - (U\%/100)^{5.6}]^{0.357}} \quad (2.81)$$

Equations (2.80) and (2.81) give an error in  $T_v$  of less than 1% for  $0\% < U < 90\%$  and less than 3% for  $90\% < U < 100\%$ .

**Table 2.11** Variation of  $T_v$  with  $U$

$U$ (%)	$T_v$	$U$ (%)	$T_v$	$U$ (%)	$T_v$	$U$ (%)	$T_v$
0	0	26	0.0531	52	0.212	78	0.529
1	0.00008	27	0.0572	53	0.221	79	0.547
2	0.0003	28	0.0615	54	0.230	80	0.567
3	0.00071	29	0.0660	55	0.239	81	0.588
4	0.00126	30	0.0707	56	0.248	82	0.610
5	0.00196	31	0.0754	57	0.257	83	0.633
6	0.00283	32	0.0803	58	0.267	84	0.658
7	0.00385	33	0.0855	59	0.276	85	0.684
8	0.00502	34	0.0907	60	0.286	86	0.712
9	0.00636	35	0.0962	61	0.297	87	0.742
10	0.00785	36	0.102	62	0.307	88	0.774

**Table 2.11** Variation of  $T_v$  with  $U$  (Continued)

$U$ (%)	$T_v$	$U$ (%)	$T_v$	$U$ (%)	$T_v$	$U$ (%)	$T_v$
11	0.0095	37	0.107	63	0.318	89	0.809
12	0.0113	38	0.113	64	0.329	90	0.848
13	0.0133	39	0.119	65	0.304	91	0.891
14	0.0154	40	0.126	66	0.352	92	0.938
15	0.0177	41	0.132	67	0.364	93	0.993
16	0.0201	42	0.138	68	0.377	94	1.055
17	0.0227	43	0.145	69	0.390	95	1.129
18	0.0254	44	0.152	70	0.403	96	1.219
19	0.0283	45	0.159	71	0.417	97	1.336
20	0.0314	46	0.166	72	0.431	98	1.500
21	0.0346	47	0.173	73	0.446	99	1.781
22	0.0380	48	0.181	74	0.461	100	$\infty$
23	0.0415	49	0.188	75	0.477		
24	0.0452	50	0.197	76	0.493		
25	0.0491	51	0.204	77	0.511		

**Example 2.12**

A laboratory consolidation test on a normally consolidated clay showed the following results:

Load, $\Delta\sigma'$ (kN/m <sup>2</sup> )	Void ratio at the end of consolidation, $e$
140	0.92
212	0.86

The specimen tested was 25.4 mm in thickness and drained on both sides. The time required for the specimen to reach 50% consolidation was 4.5 min.

A similar clay layer in the field 2.8 m thick and drained on both sides, is subjected to a similar increase in average effective pressure (i.e.,  $\sigma'_0 = 140$  kN/m<sup>2</sup> and  $\sigma'_0 + \Delta\sigma' = 212$  kN/m<sup>2</sup>). Determine the following.

- The expected maximum primary consolidation settlement in the field.
- The length of time required for the total settlement in the field to reach 40 mm. (Assume a uniform initial increase in excess pore water pressure with depth.)

**Solution**

Part a

For normally consolidated clay [Eq. (2.53)],

$$C_c = \frac{e_1 - e_2}{\log\left(\frac{\sigma'_2}{\sigma'_1}\right)} = \frac{0.92 - 0.86}{\log\left(\frac{212}{140}\right)} = 0.333$$

From Eq. (2.65),

$$S_c = \frac{C_c H_c}{1 + e_0} \log \frac{\sigma'_0 + \Delta\sigma'}{\sigma'_0} = \frac{(0.333)(2.8)}{1 + 0.92} \log \frac{212}{140} = 0.0875 \text{ m} = \mathbf{87.5 \text{ mm}}$$

Part b

From Eq. (2.74), the average degree of consolidation is

$$U = \frac{S_{c(t)}}{S_{c(\max)}} = \frac{40}{87.5} (100) = 45.7\%$$

The coefficient of consolidation,  $C_v$ , can be calculated from the laboratory test. From Eq. (2.73),

$$T_v = \frac{C_v t}{H^2}$$

For 50% consolidation (Figure 2.22),  $T_v = 0.197$ ,  $t = 4.5$  min, and  $H = H_c/2 = 12.7$  mm, so

$$C_v = T_{50} \frac{H^2}{t} = \frac{(0.197)(12.7)^2}{4.5} = 7.061 \text{ mm}^2/\text{min}$$

Again, for field consolidation,  $U = 45.7\%$ . From Eq. (2.78)

$$T_v = \frac{\pi}{4} \left( \frac{U\%}{100} \right)^2 = \frac{\pi}{4} \left( \frac{45.7}{100} \right)^2 = 0.164$$

But

$$T_v = \frac{C_v t}{H^2}$$

or

$$t = \frac{T_v H^2}{C_v} = \frac{0.164 \left( \frac{2.8 \times 1000}{2} \right)^2}{7.061} = 45,523 \text{ min} = \mathbf{31.6 \text{ days}}$$

### Example 2.13

A laboratory consolidation test on a soil specimen (drained on both sides) determined the following results:

Thickness of the clay specimen = 25 mm

$$\begin{array}{ll} \sigma'_1 = 50 \text{ kN/m}^2 & e_1 = 0.92 \\ \sigma'_2 = 120 \text{ kN/m}^2 & e_2 = 0.78 \end{array}$$

Time for 50% consolidation = 2.5 min

Determine the hydraulic conductivity,  $k$ , of the clay for the loading range.

**Solution**

$$m_v = \frac{a_v}{1 + e_{av}} = \frac{(\Delta e / \Delta \sigma')}{1 + e_{av}}$$

$$= \frac{0.92 - 0.78}{1 + \frac{120 - 50}{2}} = 0.00108 \text{ m}^2/\text{kN}$$

$$C_v = \frac{T_{50} H^2}{t_{50}}$$

From Table 2.11 for  $U = 50\%$ , the value of  $T_v = 0.197$ , so

$$C_v = \frac{(0.197) \left( \frac{0.025 \text{ m}}{2} \right)^2}{2.5 \text{ min}} = 1.23 \times 10^{-5} \text{ m}^2/\text{min}$$

$$k = C_v m_v \gamma_w = (1.23 \times 10^{-5})(0.00108)(9.81)$$

$$= \mathbf{1.303 \times 10^{-7} \text{ m/min}}$$

## 2.16 Degree of Consolidation Under Ramp Loading

The relationships derived for the average degree of consolidation in Section 2.15 assume that the surcharge load per unit area ( $\Delta\sigma$ ) is applied instantly at time  $t = 0$ . However, in most practical situations,  $\Delta\sigma$  increases gradually with time to a maximum value and remains constant thereafter. Figure 2.23 shows  $\Delta\sigma$  increasing linearly with time ( $t$ ) up to a maximum at time  $t_c$  (a condition called ramp loading). For  $t \geq t_c$ , the magnitude of  $\Delta\sigma$  remains constant. Olson (1977) considered this phenomenon and presented the average degree of consolidation,  $U$ , in the following form:

For  $T_v \leq T_c$ ,

$$U = \frac{T_v}{T_c} \left\{ 1 - \frac{2}{T_v} \sum_{m=0}^{m=\infty} \frac{1}{M^4} [1 - \exp(-M^2 T_v)] \right\} \quad (2.82)$$



and for  $T_v \geq T_c$ ,

$$U = 1 - \frac{2}{T_c} \sum_{m=0}^{m=\infty} \frac{1}{M^4} [\exp(M^2 T_c) - 1] \exp(-M^2 T_c) \quad (2.83)$$


where  $m$ ,  $M$ , and  $T_v$  have the same definition as in Eq. (2.72) and where

$$T_c = \frac{C_v t_c}{H^2} \quad (2.84)$$

Figure 2.24 shows the variation of  $U$  with  $T_v$  for various values of  $T_c$ , based on the solution given by Eqs. (2.82) and (2.83).

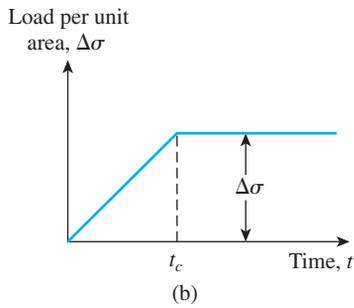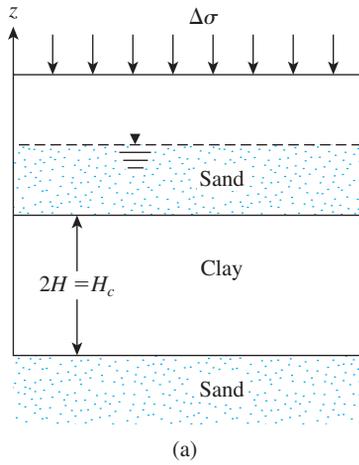

**Figure 2.23** One-dimensional consolidation due to single ramp loading

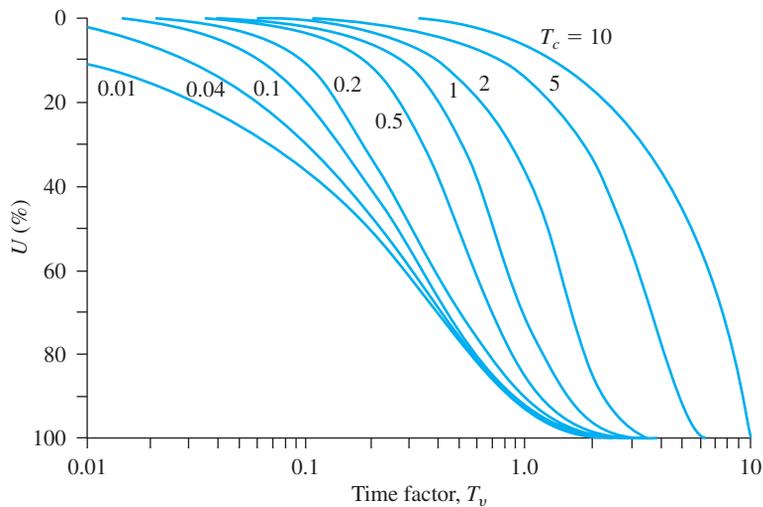

**Figure 2.24** Olson's ramp-loading solution: plot of  $U$  versus  $T_v$  (Eqs. 2.82 and 2.83)

### Example 2.14

In Example 2.12, Part (b), if the increase in  $\Delta\sigma$  would have been in the manner shown in Figure 2.25, calculate the settlement of the clay layer at time  $t = 31.6$  days after the beginning of the surcharge.

#### Solution

From Part (b) of Example 2.12,  $C_v = 7.061 \text{ mm}^2/\text{min}$ . From Eq. (2.84),

$$T_c = \frac{C_v t_c}{H^2} = \frac{(7.061 \text{ mm}^2/\text{min})(15 \times 24 \times 60 \text{ min})}{\left(\frac{2.8}{2} \times 1000 \text{ mm}\right)^2} = 0.0778$$

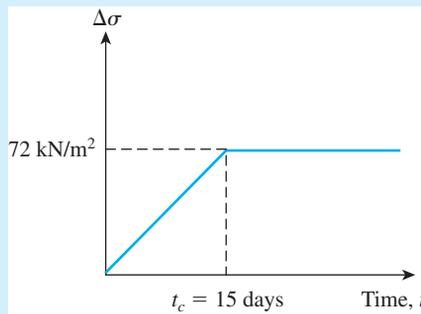


Figure 2.25 Ramp loading

Also,

$$T_v = \frac{C_v t}{H^2} = \frac{(7.061 \text{ mm}^2/\text{min})(31.6 \times 24 \times 60 \text{ min})}{\left(\frac{2.8}{2} \times 1000 \text{ mm}\right)^2} = 0.164$$

From Figure 2.24, for  $T_v = 0.164$  and  $T_c = 0.0778$ , the value of  $U$  is about 36%. Thus,

$$S_{c(t=31.6 \text{ days})} = S_{c(\text{max})}(0.36) = (87.5)(0.36) = \mathbf{31.5 \text{ mm}}$$

## 2.17 Shear Strength

The shear strength of a soil, defined in terms of effective stress, is

$$s = c' + \sigma' \tan \phi' \quad (2.85)$$

where

$\sigma'$  = effective normal stress on plane of shearing

$c'$  = cohesion, or apparent cohesion

$\phi'$  = effective stress angle of friction

Equation (2.85) is referred to as the *Mohr–Coulomb failure criterion*. The value of  $c'$  for sands and normally consolidated clays is equal to zero. For overconsolidated clays,  $c' > 0$ .

For most day-to-day work, the shear strength parameters of a soil (i.e.,  $c'$  and  $\phi'$ ) are determined by two standard laboratory tests: the *direct shear test* and the *triaxial test*.

### Direct Shear Test

Dry sand can be conveniently tested by direct shear tests. The sand is placed in a shear box that is split into two halves (Figure 2.26a). First a normal load is applied to the specimen. Then a shear force is applied to the top half of the shear box to cause failure in the sand. The normal and shear stresses at failure are

$$\sigma' = \frac{N}{A}$$


and

$$s = \frac{R}{A}$$

where  $A$  = area of the failure plane in soil—that is, the cross-sectional area of the shear box.

Several tests of this type can be conducted by varying the normal load. The angle of friction of the sand can be determined by plotting a graph of  $s$  against  $\sigma'$  ( $=\sigma$  for dry sand), as shown in Figure 2.26b, or

$$\phi' = \tan^{-1}\left(\frac{s}{\sigma'}\right) \quad (2.86)$$

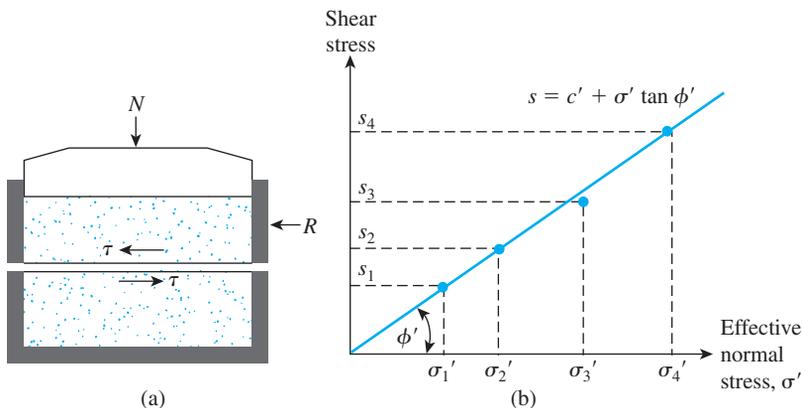

**Figure 2.26** Direct shear test in sand: (a) schematic diagram of test equipment; (b) plot of test results to obtain the friction angle  $\phi'$

**Table 2.12** Relationship between Relative Density and Angle of Friction of Cohesionless Soils

State of packing	Relative density (%)	Angle of friction, $\phi'$ (deg.)
Very loose	<15	<28
Loose	15–35	28–30
Compact	35–65	30–36
Dense	65–85	36–41
Very dense	>85	>41

For sands, the angle of friction usually ranges from  $26^\circ$  to  $45^\circ$ , increasing with the relative density of compaction. A general range of the friction angle,  $\phi'$ , for sands is given in Table 2.12.

In 1970, Brinch Hansen (see Hansbo, 1975, and Thin, 2001) gave the following correlation for  $\phi'$  of granular soils.

$$\phi' \text{ (deg)} = 26^\circ + 10D_r + 0.4C_u + 1.6 \log(D_{50}) \quad (2.87)$$

where

$D_r$  = relative density (fraction)

$C_u$  = uniformity coefficient

$D_{50}$  = mean grain size, in mm (i.e., the diameter through which 50% of the soil passes)

Teferra (1975) suggested the following empirical correlation based on a large data base.

$$\phi' \text{ (deg)} = \tan^{-1} \left( \frac{1}{ae + b} \right) \quad (2.88)$$

where

$e$  = void ratio

$$a = 2.101 + 0.097 \left( \frac{D_{85}}{D_{15}} \right) \quad (2.89)$$


$$b = 0.845 - 0.398a \quad (2.90)$$

$D_{85}$  and  $D_{15}$  = diameters through which, respectively, 85% and 15% of soil passes

Thin (2001) suggested that Eq. (2.88) provides a better correlation for  $\phi'$  compared to Eq. (2.87).


## Triaxial Tests

Triaxial compression tests can be conducted on sands and clays. Figure 2.27a shows a schematic diagram of the triaxial test arrangement. Essentially, the test consists of placing a soil specimen confined by a rubber membrane into a lucite chamber and then applying an all-around confining pressure ( $\sigma_3$ ) to the specimen by means of the chamber fluid (generally, water or glycerin). An added stress ( $\Delta\sigma$ ) can also be applied to the specimen in the axial direction to cause failure ( $\Delta\sigma = \Delta\sigma_f$  at failure). Drainage from the specimen

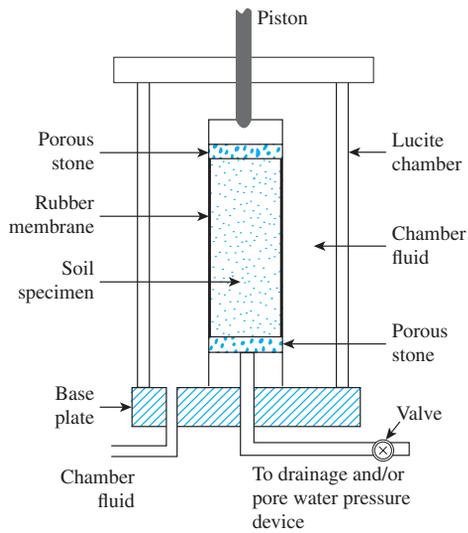


Schematic diagram of triaxial test equipment


(a)

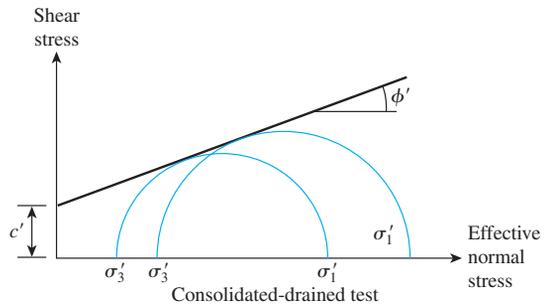


(b)

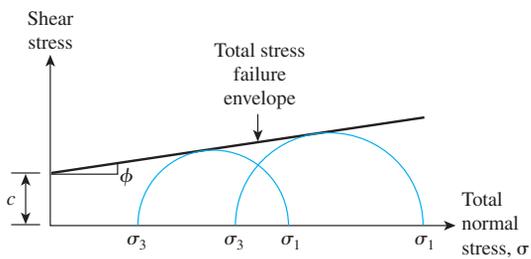

(c)

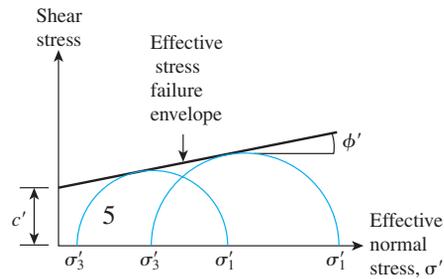


Consolidated-undrained test

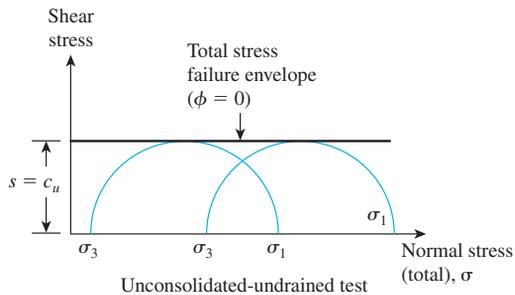

(d)

Figure 2.27 Triaxial test

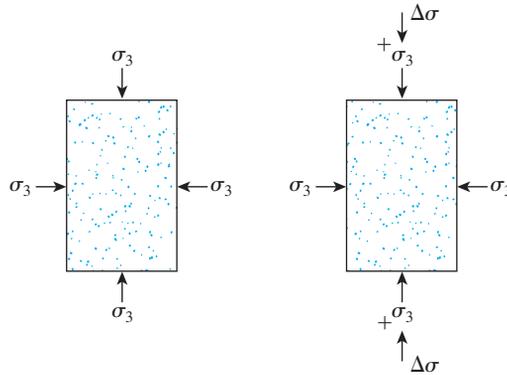

**Figure 2.28** Sequence of stress application in triaxial test

can be allowed or stopped, depending on the condition being tested. For clays, three main types of tests can be conducted with triaxial equipment (see Figure 2.28):

1. Consolidated-drained test (CD test)
2. Consolidated-undrained test (CU test)
3. Unconsolidated-undrained test (UU test)

*Consolidated-Drained Tests:*

- Step 1.* Apply chamber pressure  $\sigma_3$ . Allow complete drainage, so that the pore water pressure ( $u = u_0$ ) developed is zero.
- Step 2.* Apply a deviator stress  $\Delta\sigma$  slowly. Allow drainage, so that the pore water pressure ( $u = u_d$ ) developed through the application of  $\Delta\sigma$  is zero. At failure,  $\Delta\sigma = \Delta\sigma_f$ ; the total pore water pressure  $u_f = u_0 + u_d = 0$ .

So for *consolidated-drained tests*, at failure,

$$\begin{aligned} \text{Major principal effective stress} &= \sigma_3 + \Delta\sigma_f = \sigma_1 = \sigma'_1 \\ \text{Minor principal effective stress} &= \sigma_3 = \sigma'_3 \end{aligned}$$

Changing  $\sigma_3$  allows several tests of this type to be conducted on various clay specimens. The shear strength parameters ( $c'$  and  $\phi'$ ) can now be determined by plotting Mohr's circle at failure, as shown in Figure 2.27b, and drawing a common tangent to the Mohr's circles. This is the *Mohr–Coulomb failure envelope*. (Note: For normally consolidated clay,  $c' \approx 0$ .) At failure,

$$\sigma'_1 = \sigma'_3 \tan^2\left(45 + \frac{\phi'}{2}\right) + 2c' \tan\left(45 + \frac{\phi'}{2}\right) \quad (2.91)$$

*Consolidated-Undrained Tests:*

- Step 1.* Apply chamber pressure  $\sigma_3$ . Allow complete drainage, so that the pore water pressure ( $u = u_0$ ) developed is zero.
- Step 2.* Apply a deviator stress  $\Delta\sigma$ . Do not allow drainage, so that the pore water pressure  $u = u_d \neq 0$ . At failure,  $\Delta\sigma = \Delta\sigma_f$ ; the pore water pressure  $u_f = u_0 + u_d = 0 + u_{d(f)}$ .

Hence, at failure,

$$\begin{aligned}\text{Major principal total stress} &= \sigma_3 + \Delta\sigma_f = \sigma_1 \\ \text{Minor principal total stress} &= \sigma_3 \\ \text{Major principal effective stress} &= (\sigma_3 + \Delta\sigma_f) - u_f = \sigma'_1 \\ \text{Minor principal effective stress} &= \sigma_3 - u_f = \sigma'_3\end{aligned}$$

Changing  $\sigma_3$  permits multiple tests of this type to be conducted on several soil specimens. The total stress Mohr's circles at failure can now be plotted, as shown in Figure 2.27c, and then a common tangent can be drawn to define the *failure envelope*. This *total stress failure envelope* is defined by the equation

$$s = c + \sigma \tan \phi \quad (2.92)$$

where  $c$  and  $\phi$  are the *consolidated-undrained cohesion* and *angle of friction*, respectively. (Note:  $c \approx 0$  for normally consolidated clays.)

Similarly, effective stress Mohr's circles at failure can be drawn to determine the *effective stress failure envelope* (Figure 2.27c), which satisfy the relation expressed in Eq. (2.85).

*Unconsolidated-Undrained Tests:*

- Step 1.* Apply chamber pressure  $\sigma_3$ . Do not allow drainage, so that the pore water pressure ( $u = u_0$ ) developed through the application of  $\sigma_3$  is not zero.
- Step 2.* Apply a deviator stress  $\Delta\sigma$ . Do not allow drainage ( $u = u_d \neq 0$ ). At failure,  $\Delta\sigma = \Delta\sigma_f$ ; the pore water pressure  $u_f = u_0 + u_{d(f)}$

For *unconsolidated-undrained* triaxial tests,

$$\begin{aligned}\text{Major principal total stress} &= \sigma_3 + \Delta\sigma_f = \sigma_1 \\ \text{Minor principal total stress} &= \sigma_3\end{aligned}$$

The total stress Mohr's circle at failure can now be drawn, as shown in Figure 2.27d. For saturated clays, the value of  $\sigma_1 - \sigma_3 = \Delta\sigma_f$  is a constant, irrespective of the chamber confining pressure  $\sigma_3$  (also shown in Figure 2.27d). The tangent to these Mohr's circles will be a horizontal line, called the  $\phi = 0$  condition. The shear strength for this condition is

$$s = c_u = \frac{\Delta\sigma_f}{2} \quad (2.93)$$

where  $c_u$  = undrained cohesion (or undrained shear strength).

The pore pressure developed in the soil specimen during the unconsolidated-undrained triaxial test is

$$u = u_0 + u_d \quad (2.94)$$

The pore pressure  $u_0$  is the contribution of the hydrostatic chamber pressure  $\sigma_3$ . Hence,

$$u_0 = B\sigma_3 \quad (2.95)$$

where  $B$  = Skempton's pore pressure parameter.

Similarly, the pore parameter  $u_d$  is the result of the added axial stress  $\Delta\sigma$ , so

$$u_d = A\Delta\sigma \quad (2.96)$$

where  $A$  = Skempton's pore pressure parameter.

However,

$$\Delta\sigma = \sigma_1 - \sigma_3 \quad (2.97)$$

Combining Eqs. (2.94), (2.95), (2.96), and (2.97) gives

$$u = u_0 + u_d = B\sigma_3 + A(\sigma_1 - \sigma_3) \quad (2.98)$$

The pore water pressure parameter  $B$  in soft saturated soils is approximately 1, so

$$u = \sigma_3 + A(\sigma_1 - \sigma_3) \quad (2.99)$$

The value of the pore water pressure parameter  $A$  at failure will vary with the type of soil. Following is a general range of the values of  $A$  at failure for various types of clayey soil encountered in nature:

Type of soil	$A$ at failure
Sandy clays	0.5–0.7
Normally consolidated clays	0.5–1
Overconsolidated clays	–0.5–0

## 2.18 Unconfined Compression Test


The *unconfined compression test* (Figure 2.29a) is a special type of unconsolidated-undrained triaxial test in which the confining pressure  $\sigma_3 = 0$ , as shown in Figure 2.29b. In this test, an axial stress  $\Delta\sigma$  is applied to the specimen to cause failure (i.e.,  $\Delta\sigma = \Delta\sigma_f$ ). The corresponding Mohr's circle is shown in Figure 2.29b. Note that, for this case,

$$\text{Major principal total stress} = \Delta\sigma_f = q_u$$

$$\text{Minor principal total stress} = 0$$

The axial stress at failure,  $\Delta\sigma_f = q_u$ , is generally referred to as the *unconfined compression strength*. The shear strength of saturated clays under this condition ( $\phi = 0$ ), from Eq. (2.85), is

$$s = c_u = \frac{q_u}{2} \quad (2.100)$$

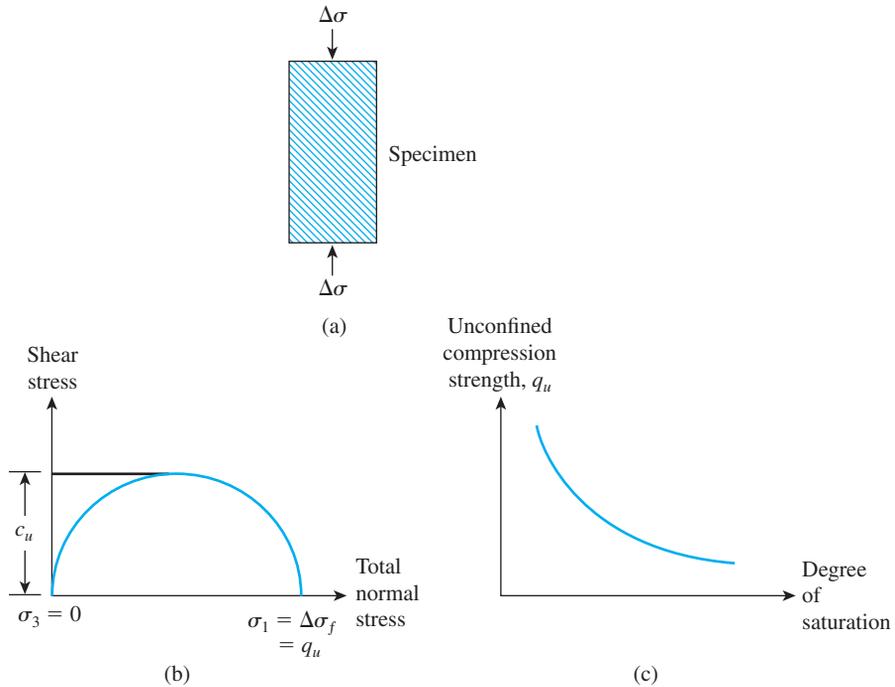

**Figure 2.29** Unconfined compression test: (a) soil specimen; (b) Mohr's circle for the test; (c) variation of  $q_u$  with the degree of saturation


The unconfined compression strength can be used as an indicator of the consistency of clays.

Unconfined compression tests are sometimes conducted on unsaturated soils. With the void ratio of a soil specimen remaining constant, the unconfined compression strength rapidly decreases with the degree of saturation (Figure 2.29c).

## 2.19 Comments on Friction Angle, $\phi'$

### Effective Stress Friction Angle of Granular Soils

In general, the direct shear test yields a higher angle of friction compared with that obtained by the triaxial test. Also, note that the failure envelope for a given soil is actually curved. The Mohr–Coulomb failure criterion defined by Eq. (2.85) is only an approximation. Because of the curved nature of the failure envelope, a soil tested at higher normal stress will yield a lower value of  $\phi'$ . An example of this relationship is shown in Figure 2.30, which is a plot of  $\phi'$  versus the void ratio  $e$  for Chattahoochee River sand near Atlanta, Georgia (Vesic, 1963). The friction angles shown were obtained from triaxial tests. Note that, for a given value of  $e$ , the magnitude of  $\phi'$  is about  $4^\circ$  to  $5^\circ$  smaller when

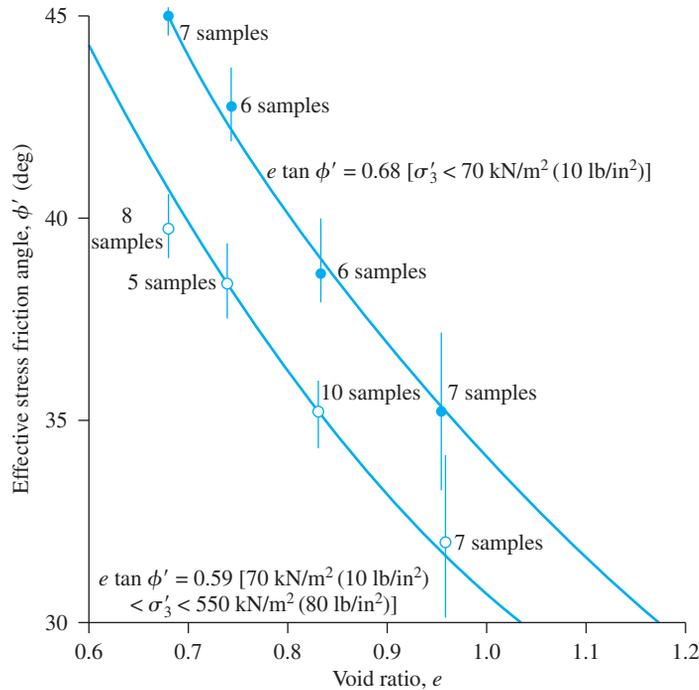

**Figure 2.30** Variation of friction angle  $\phi'$  with void ratio for Chattahoochee River sand (After Vesic, 1963) (Based on Vesic, A.B. Bearing Capacity of Deep Foundations in Sand. In *Highway Research Record 39*, Highway Research Board. National Research Council, Washington, D.C., 1963, Figure 11, p. 123.)

the confining pressure  $\sigma'_3$  is greater than about  $70 \text{ kN/m}^2$  ( $10 \text{ lb/in}^2$ ), compared with that when  $\sigma'_3 < 70 \text{ kN/m}^2$  ( $\approx 10 \text{ lb/in}^2$ ).


### Effective Stress Friction Angle of Cohesive Soils

Figure 2.31 shows the variation of effective stress friction angle,  $\phi'$ , for several normally consolidated clays (Bjerrum and Simons, 1960; Kenney, 1959). It can be seen from the figure that, in general, the friction angle  $\phi'$  decreases with the increase in plasticity index. The value of  $\phi'$  generally decreases from about  $37$  to  $38^\circ$  with a plasticity index of about 10 to about  $25^\circ$  or less with a plasticity index of about 100. The consolidated undrained friction angle ( $\phi$ ) of normally consolidated saturated clays generally ranges from  $5$  to  $20^\circ$ .

The consolidated drained triaxial test was described in Section 2.17. Figure 2.32 shows a schematic diagram of a plot of  $\Delta\sigma$  versus axial strain in a drained triaxial test for a clay. At failure, for this test,  $\Delta\sigma = \Delta\sigma_f$ . However, at large axial strain (i.e., the ultimate strength condition), we have the following relationships:

$$\text{Major principal stress: } \sigma'_{1(\text{ult})} = \sigma_3 + \Delta\sigma_{\text{ult}}$$

$$\text{Minor principal stress: } \sigma'_{3(\text{ult})} = \sigma_3$$

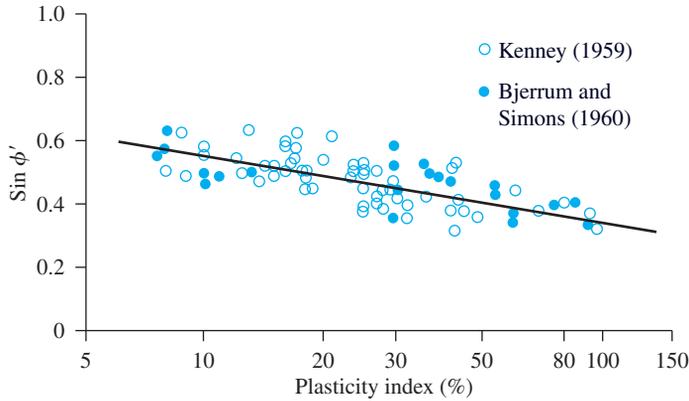


**Figure 2.31** Variation of  $\sin \phi'$  with plasticity index (PI) for several normally consolidated clays

At failure (i.e., peak strength), the relationship between  $\sigma'_1$  and  $\sigma'_3$  is given by Eq. (2.91). However, for ultimate strength, it can be shown that


$$\sigma'_{1(\text{ult})} = \sigma'_3 \tan^2 \left( 45 + \frac{\phi'_r}{2} \right) \tag{2.101}$$

where  $\phi'_r$  = residual effective stress friction angle.

Figure 2.33 shows the general nature of the failure envelopes at peak strength and ultimate strength (or *residual strength*). The residual shear strength of clays is important in the evaluation of the long-term stability of new and existing slopes and the design of remedial measures. The effective stress residual friction angles  $\phi'_r$  of clays may be substantially smaller than the effective stress peak friction angle  $\phi'$ . Past research has shown that the clay fraction (i.e., the percent finer than 2 microns) present in a given soil, CF, and the clay mineralogy are the two primary factors that control  $\phi'_r$ . The following is a summary of the effects of CF on  $\phi'_r$ .

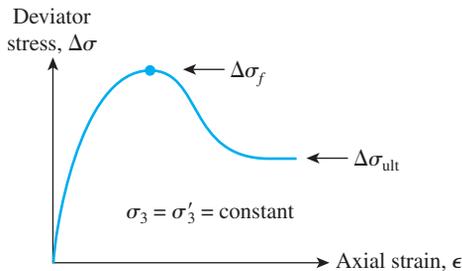

**Figure 2.32** Plot of deviator stress versus axial strain—drained triaxial test

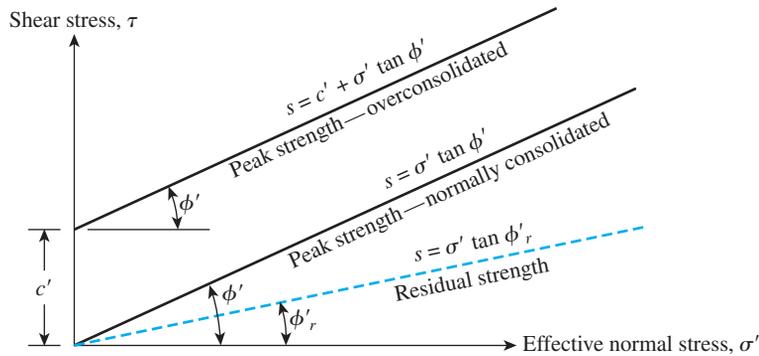

**Figure 2.33** Peak- and residual-strength envelopes for clay

**Table 2.13** Variation of Residual Friction Angle for Some Clays (Based on Skempton, 1964)

Soil	Clay-size fraction (%)	Residual friction angle, $\phi'_r$ (deg)
Selset	17.7	29.8
Wiener Tegel	22.8	25.1
Jackfield	35.4	19.1
Oxford clay	41.9	16.3
Jari	46.5	18.6
London clay	54.9	16.3
Walton's Wood	67	13.2
Weser-Elbe	63.2	9.3
Little Beit	77.2	11.2
Biotite	100	7.5

1. If CF is less than about 15%, then  $\phi'_r$  is greater than about 25°.
2. For CF > about 50%,  $\phi'_r$  is entirely governed by the sliding of clay minerals and may be in the range of about 10 to 15°.
3. For kaolinite, illite, and montmorillonite,  $\phi'_r$  is about 15°, 10°, and 5°, respectively.

Skempton (1964) provided the results of the variation of the residual angle of friction,  $\phi'_r$ , of a number of clayey soils with the clay-size fraction ( $\leq 2 \mu\text{m}$ ) present. A summary of these results is shown in Table 2.13.

## 2.20 Correlations for Undrained Shear Strength, $c_u$

Several empirical relationships can be observed between  $c_u$  and the effective overburden pressure ( $\sigma'_0$ ) in the field. Some of these relationships are summarized in Table 2.14.

**Table 2.14** Empirical Equations Related to  $c_u$  and  $\sigma'_0$ 

Reference	Relationship	Remarks
Skempton (1957)	$\frac{c_u(\text{VST})}{\sigma'_0} = 0.11 + 0.00037 (\text{PI})$ PI = plasticity index (%) $c_u(\text{VST})$ = undrained shear strength from vane shear test	For normally consolidated clay
Chandler (1988)	$\frac{c_u(\text{VST})}{\sigma'_c} = 0.11 + 0.0037 (\text{PI})$ $\sigma'_c$ = preconsolidation pressure	Can be used in overconsolidated soil; accuracy $\pm 25\%$ ; not valid for sensitive and fissured clays
Jamiolkowski, <i>et al.</i> (1985)	$\frac{c_u}{\sigma'_c} = 0.23 \pm 0.04$	For lightly overconsolidated clays
Mesri (1989)	$\frac{c_u}{\sigma'_0} = 0.22$	
Bjerrum and Simons (1960)	$\frac{c_u}{\sigma'_0} = 0.45 \left( \frac{\text{PI}\%}{100} \right)^{0.5}$ for PI > 50%	Normally consolidated clay
	$\frac{c_u}{\sigma'_0} = 0.118 (\text{LI})^{0.15}$ for LI = liquidity index > 0.5	Normally consolidated clay
Ladd, <i>et al.</i> (1977)	$\frac{\left( \frac{c_u}{\sigma'_0} \right)_{\text{overconsolidated}}}{\left( \frac{c_u}{\sigma'_0} \right)_{\text{normally consolidated}}} = \text{OCR}^{0.8}$ OCR = overconsolidation ratio = $\sigma'_c/\sigma'_0$	

## 2.21 Sensitivity

For many naturally deposited clay soils, the unconfined compression strength is much less when the soils are tested after remolding without any change in the moisture content. This property of clay soil is called *sensitivity*. The degree of sensitivity is the ratio of the unconfined compression strength in an undisturbed state to that in a remolded state, or

$$S_t = \frac{q_{u(\text{undisturbed})}}{q_{u(\text{remolded})}} \quad (2.102)$$

The sensitivity ratio of most clays ranges from about 1 to 8; however, highly flocculent marine clay deposits may have sensitivity ratios ranging from about 10 to 80. Some clays turn to viscous liquids upon remolding, and these clays are referred to as “quick” clays. The loss of strength of clay soils from remolding is caused primarily by the destruction of the clay particle structure that was developed during the original process of sedimentation.

## Problems

- 2.1** A soil specimen has a volume of  $0.05 \text{ m}^3$  and a mass of  $87.5 \text{ kg}$ . Given:  $w = 15\%$ ,  $G_s = 2.68$ . Determine
- Void ratio
  - Porosity
  - Dry unit weight
  - Moist unit weight
  - Degree of saturation
- 2.2** The saturated unit weight of a soil is  $20.1 \text{ kN/m}^3$  at a moisture content of  $22\%$ . Determine (a) the dry unit weight and (b) the specific gravity of soil solids,  $G_s$ .
- 2.3** The moist unit weight of a soil is  $119.5 \text{ lb/ft}^3$ . For a moisture content of  $12\%$  and  $G_s = 2.65$ , calculate:
- Void ratio
  - Porosity
  - Degree of saturation
  - Dry unit weight
- 2.4** A saturated soil specimen has  $w = 36\%$  and  $\gamma_d = 85.43 \text{ lb/ft}^3$ . Determine:
- Void ratio
  - Porosity
  - Specific gravity of soil solids
  - Saturated unit weight (in  $\text{lb/ft}^3$ )
- 2.5** For a granular soil, given:  $\gamma = 116.64 \text{ lb/ft}^3$ ,  $D_r = 82\%$ ,  $w = 8\%$ , and  $G_s = 2.65$ . For this soil, if  $e_{\min} = 0.44$ , what would be  $e_{\max}$ ? What would be the dry unit weight in the loosest state?
- 2.6** The laboratory test results of six soils are given in the following table. Classify the soils by the AASHTO Soil Classification System and give the group indices.

Sieve Analysis—Percent Passing

Sieve No.	Soil					
	A	B	C	D	E	F
4	100	100	95	95	100	100
10	95	80	80	90	94	94
40	82	61	54	79	76	86
200	65	55	8	64	33	76
Liquid limit	42	38	NP*	35	38	52
Plastic limit	26	25	NP	26	25	28

\*NP = nonplastic

- 2.7 Classify the soils given in Problem 2.6 by the Unified Soil Classification System and determine the group symbols and group names.
- 2.8 For a sandy soil, given: void ratio,  $e = 0.63$ ; hydraulic conductivity,  $k = 0.22$  cm/sec; and specific gravity of soil solids,  $G_s = 2.68$ . Estimate the hydraulic conductivity of the sand (cm/sec) when the dry unit weight of compaction is  $117$  lb/ft<sup>3</sup>. Use Eq. (2.37).
- 2.9 A normally consolidated clay has the following values.

Void ratio, $e$	$k$ (cm/sec)
1.2	$0.2 \times 10^{-6}$
1.9	$0.91 \times 10^{-6}$

Estimate the magnitude of  $k$  of the clay at a void ratio ( $e$ ) of 0.9. Use Eq. (2.41).

- 2.10 Refer to Figure P 2.10 and use these values:

- $H_1 = 7$  m,  $D = 3.5$  m
- $H_2 = 1.75$  m,  $D_1 = 7$  m

Draw a flow net. Calculate the seepage loss per meter length of the sheet pile (at a right angle to the cross section shown).


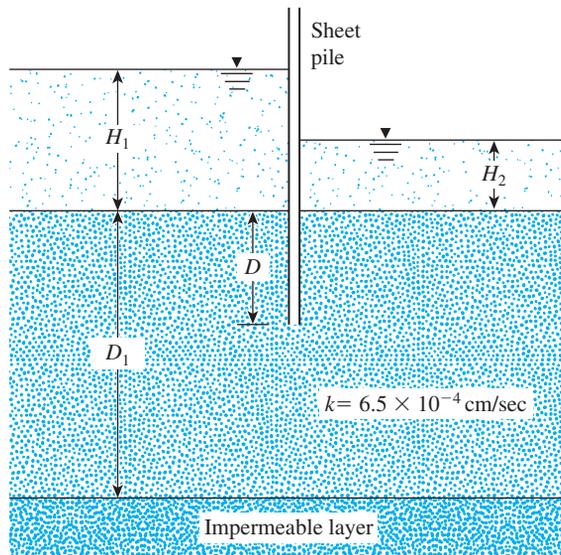


Figure P2.10

- 2.11 A sand has the following:  $D_{10} = 0.2$  mm,  $D_{60} = 0.4$  mm, and void ratio  $e = 0.6$ .
- Determine the hydraulic conductivity using Eq. (2.38).
  - Determine the hydraulic conductivity using Eq. (2.40).

- 2.12** Refer to the soil profile shown in Figure P2.12. Determine the total stress, pore water pressure, and effective stress at A, B, C, and D.

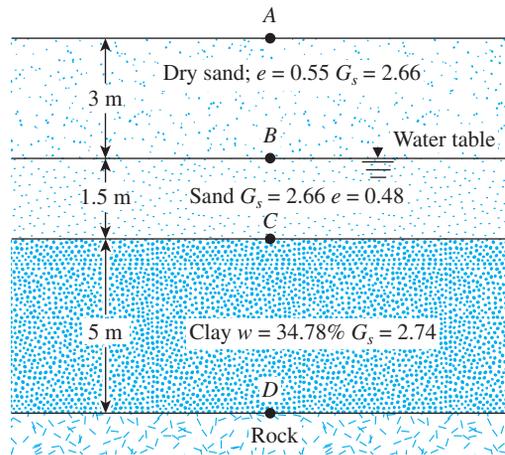

**Figure P2.12**

- 2.13** For a normally consolidated clay layer, given:

Thickness = 3.7 m

Void ratio = 0.82

Liquid limit = 42

Average effective stress on the clay layer = 110 kN/m<sup>2</sup>

How much consolidation settlement would the clay undergo if the average effective stress on the clay layer is increased to 155 kN/m<sup>2</sup> as the result of the construction of a foundation?

- 2.14** Refer to Problem 2.13. Assume that the clay layer is preconsolidated,  $\sigma'_c = 128$  kN/m<sup>2</sup>, and  $C_s = \frac{1}{5}C_c$ . Estimate the consolidation settlement.
- 2.15** Refer to the soil profile shown in Figure P2.12. The clay is normally consolidated. A laboratory consolidation test on the clay gave the results:

Pressure (kN/m <sup>2</sup> )	Void ratio
150	0.91
300	0.792

If the average effective stress on the clay layer increase by 50 kN/m<sup>2</sup>.

- a.** What would be the total consolidation settlement?
- b.** If  $C_v = 9.36 \times 10^{-4}$  cm<sup>2</sup>/sec, how long will it take for half the consolidation settlement to take place?

2.16 For a normally consolidated soil, the following is given:

Pressure (kN/m <sup>2</sup> )	Void ratio
120	0.82
360	0.64

Determine the following:

- The compression index,  $C_c$ .
  - The void ratio corresponding to pressure of 200 kN/m<sup>2</sup>.
- 2.17 A clay soil specimen, 1.5 in. thick (drained on top only) was tested in the laboratory. For a given load increment, the time for 60% consolidation was 8 min 10 sec. How long will it take for 50% consolidation for a similar clay layer in the field that is 10-ft thick and drained on both sides?
- 2.18 Refer to Figure P2.18. A total of 60 mm consolidation settlement is expected in the two clay layers due to a surcharge of  $\Delta\sigma$ . Find the duration of surcharge application at which 30 mm of total settlement would take place.

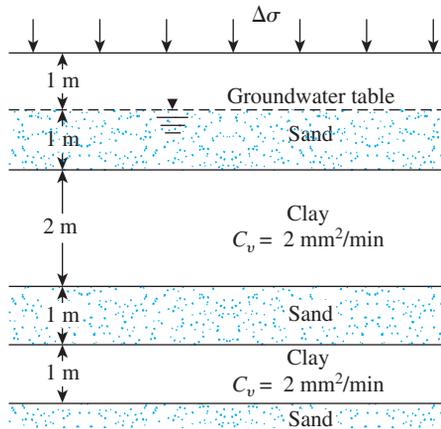
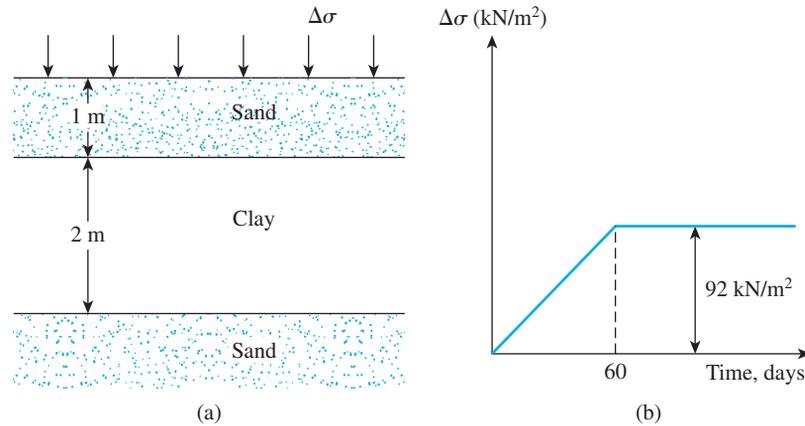


Figure P2.18

- 2.19 The coefficient of consolidation of a clay for a given pressure range was obtained as  $8 \times 10^{-3}$  mm<sup>2</sup>/sec on the basis of one-dimensional consolidation test results. In the field, there is a 2-m-thick layer of the same clay (Figure P2.19a). Based on the assumption that a uniform surcharge of 92 kN/m<sup>2</sup> was to be applied instantaneously, the total consolidation settlement was estimated to be 120 mm. However, during construction, the loading was gradual; the resulting surcharge can be approximated as shown in Figure P2.19b. Estimate the settlement at  $t = 30$  and  $t = 100$  days after the beginning of construction.


**Figure P2.19**

- 2.20** A direct shear test was conducted on dry sand with an area of the specimen = 2 in. × 2 in. The results were

Normal force (lb)	Shear force at failure (lb)
50	43.5
110	95.5
150	132.0

Graph the shear stress at failure against normal stress and determine the soil friction angle,  $\phi'$ .


- 2.21** A consolidated-drained triaxial test on a sand yields the results:  
 All-around confining pressure =  $\sigma_3 = 30 \text{ lb/in}^2$   
 Added axial stress at failure =  $\Delta\sigma = 96 \text{ lb/in}^2$   
 Determine the shear stress parameters (i.e.,  $\phi'$  and  $c'$ )
- 2.22** Repeat Problem 2.21 with the results:  
 All-around confining pressure =  $\sigma_3 = 20 \text{ lb/in}^2$   
 Added axial stress at failure =  $\Delta\sigma = 40 \text{ lb/in}^2$
- 2.23** A consolidated-drained triaxial test on a normally consolidated clay yielded a friction angle,  $\phi'$ , of  $28^\circ$ . If the all-around confining pressure during the test was  $140 \text{ kN/m}^2$ , what was the major principal stress at failure?
- 2.24** Following are the results of two consolidated-drained triaxial tests on a clay:  
 Test I:  $\sigma_3 = 140 \text{ kN/m}^2$ ;  $\sigma_{1(\text{failure})} = 368 \text{ kN/m}^2$   
 Test II:  $\sigma_3 = 280 \text{ kN/m}^2$ ;  $\sigma_{1(\text{failure})} = 701 \text{ kN/m}^2$   
 Determine the shear strength parameters; that is,  $c'$  and  $\phi'$ .
- 2.25** A consolidated-undrained triaxial test was conducted on a saturated, normally consolidated clay. The test results are  
 $\sigma_3 = 13 \text{ lb/in}^2$   
 $\sigma_{1(\text{failure})} = 32 \text{ lb/in}^2$   
 Pore pressure at failure =  $u = 5.5 \text{ lb/in}^2$   
 Determine  $c$ ,  $\phi$ ,  $c'$ , and  $\phi'$ .

- 2.26** For a normally consolidated clay, given  $\phi' = 28^\circ$  and  $\phi = 20^\circ$ . If a consolidated-undrained triaxial test is conducted on the same clay with  $\sigma_3 = 150 \text{ kN/m}^2$ , what would be the pore water pressure at failure?
- 2.27** For a sand, given:
- $D_{85} = 0.21 \text{ mm}$
  - $D_{50} = 0.13 \text{ mm}$
  - $D_{15} = 0.09 \text{ mm}$
  - Uniformity coefficient,  $C_u = 2.1$
  - Void ratio,  $e = 0.68$
  - Relative density = 53%
- Estimate the soil friction angle using
- a. Eq. (2.87)
  - b. Eq. (2.88)

## References

- AMER, A. M. and AWAD, A. A. (1974). "Permeability of Cohesionless Soils," *Journal of the Geotechnical Engineering Division*, American Society of Civil Engineers, Vol. 100, No. GT12, pp. 1309–1316.
- AMERICAN SOCIETY FOR TESTING AND MATERIALS (2011). *Annual Book of ASTM Standards*, Vol. 04.08, West Conshohocken, PA.
- BJERRUM, L. and SIMONS, N. E. (1960). "Comparison of Shear Strength Characteristics of Normally Consolidated Clay," *Proceedings, Research Conference on Shear Strength of Cohesive Soils*, ASCE, pp. 711–726.
- CARRIER III, W. D. (2003). "Goodbye, Hazen; Hello, Kozeny-Carman," *Journal of Geotechnical and Geoenvironmental Engineering*, ASCE, Vol. 129, No. 11, pp. 1054–1056.
- CASAGRANDE, A. (1936). "Determination of the Preconsolidation Load and Its Practical Significance," *Proceedings, First International Conference on Soil Mechanics and Foundation Engineering*, Cambridge, MA, Vol. 3, pp. 60–64.
- CHANDLER, R. J. (1988). "The *in situ* Measurement of the Undrained Shear Strength of Clays Using the Field Vane," *STP 1014, Vane Shear Strength Testing in Soils: Field and Laboratory Studies*, American Society for Testing and Materials, pp. 13–44.
- CHAPUIS, R. P. (2004). "Predicting the Saturated Hydraulic Conductivity of Sand and Gravel Using Effective Diameter and Void Ratio," *Canadian Geotechnical Journal*, Vol. 41, No. 5, pp. 787–795.
- CUBRINOVSKI, M. and ISHIHARA, K. (1999). "Empirical Correlation Between SPT N-Value and Relative Density for Sandy Soils," *Soils and Foundations*. Vol. 39, No. 5, pp. 61–71.
- CUBRINOVSKI, M. and ISHIHARA, K. (2002). "Maximum and Minimum Void Ratio Characteristics of Sands," *Soils and Foundations*. Vol. 42, No. 6, pp. 65–78.
- DARCY, H. (1856). *Les Fontaines Publiques de la Ville de Dijon*, Paris.
- DAS, B. M. (2013). *Soil Mechanics Laboratory Manual*, 8th ed., Oxford University Press, New York.
- HANSBO, S. (1975). *Jordmateriallära*: 211, Stockholm, Awe/Gebers.
- HIGHWAY RESEARCH BOARD (1945). *Report of the Committee on Classification of Materials for Subgrades and Granular Type Roads*, Vol. 25, pp. 375–388.
- JAMILKOWSKI, M., LADD, C. C., GERMAINE, J. T., and LANCELLOTTA, R. (1985). "New Developments in Field and Laboratory Testing of Soils," *Proceedings, XI International Conference on Soil Mechanics and Foundations Engineering*, San Francisco, Vol. 1, pp. 57–153.
- KENNEY, T. C. (1959). "Discussion," *Journal of the Soil Mechanics and Foundations Division*, American Society of Civil Engineers, Vol. 85, No. SM3, pp. 67–69.

- KULHAWY, F. H. and MAYNE, P. W. (1990). *Manual of Estimating Soil Properties for Foundation Design*, Electric Power Research Institute, Palo Alto, California.
- LADD, C. C., FOOTE, R., ISHIHARA, K., SCHLOSSER, F., and POULOS, H. G. (1977). "Stress Deformation and Strength Characteristics," *Proceedings, Ninth International Conference on Soil Mechanics and Foundation Engineering*, Tokyo, Vol. 2, pp. 421–494.
- MESRI, G. (1989). "A Re-evaluation of  $s_{u(mob)} \approx 0.22\sigma_p$  Using Laboratory Shear Tests," *Canadian Geotechnical Journal*, Vol. 26, No. 1, pp. 162–164.
- MESRI, G. and OLSON, R. E. (1971). "Mechanism Controlling the Permeability of Clays," *Clay and Clay Minerals*, Vol. 19, pp. 151–158.
- OLSON, R. E. (1977). "Consolidation Under Time-Dependent Loading," *Journal of Geotechnical Engineering*, ASCE, Vol. 103, No. GT1, pp. 55–60.
- PARK, J. H. and KOUMOTO, T. (2004). "New Compression Index Equation," *Journal of Geotechnical and Geoenvironmental Engineering*, ASCE, Vol. 130, No. 2, pp. 223–226.
- RENDON-HERRERO, O. (1980). "Universal Compression Index Equation," *Journal of the Geotechnical Engineering Division*, American Society of Civil Engineers, Vol. 106, No. GT11, pp. 1178–1200.
- SAMARASINGHE, A. M., HUANG, Y. H., and DRNEVICH, V. P. (1982). "Permeability and Consolidation of Normally Consolidated Soils," *Journal of the Geotechnical Engineering Division*, ASCE, Vol. 108, No. GT6, pp. 835–850.
- SCHMERTMANN, J. H. (1953). "Undisturbed Consolidation Behavior of Clay," *Transactions*, American Society of Civil Engineers, Vol. 120, p. 1201.
- SIVARAM, B. and SWAMEE, A. (1977). "A Computational Method for Consolidation Coefficient," *Soils and Foundations*, Vol. 17, No. 2, pp. 48–52.
- SKEMPTON, A. W. (1944). "Notes on the Compressibility of Clays," *Quarterly Journal of Geological Society*, London, Vol. C, pp. 119–135.
- SKEMPTON, A. W. (1953). "The Colloidal Activity of Clays," *Proceedings, 3rd International Conference on Soil Mechanics and Foundation Engineering*, London, Vol. 1, pp. 57–61.
- SKEMPTON, A. W. (1957). "The Planning and Design of New Hong Kong Airport," *Proceedings, The Institute of Civil Engineers*, London, Vol. 7, pp. 305–307.
- SKEMPTON, A. W. (1964). "Long-Term Stability of Clay Slopes," *Geotechnique*, Vol. 14, p. 77.
- SKEMPTON, A. W. (1985). "Residual Strength of Clays in Landslides, Folded Strata, and the Laboratory," *Geotechnique*, Vol. 35, No. 1, pp. 3–18.
- STAS, C. V. and KULHAWY, F. H. (1984). "Critical Evaluation of Design Methods for Foundations Under Axial Uplift and Compression Loading," *REPORT EL-3771*, Electric Power Research Institute, Palo Alto, California.
- TAYLOR, D. W. (1948). *Fundamentals of Soil Mechanics*, Wiley, New York.
- TEFERRA, A. (1975). *Beziehungen zwischen Reibungswinkel, Lagerungsdichte und Sonderwiderständen nichtbindiger Böden mit verschiedener Kornverteilung*. Ph.D. Thesis, Technical University of Aachen Germany.
- TERZAGHI, K. and PECK, R. B. (1967). *Soil Mechanics in Engineering Practice*, Wiley, New York.
- THINH, K. D. (2001). "How Reliable is Your Angle of Internal Friction?" *Proceedings, XV International Conference on Soil Mechanics and Geotechnical Engineering*, Istanbul, Turkey, Vol. 1, pp. 73–76.
- U.S. DEPARTMENT OF NAVY (1986). "Soil Mechanics Design Manual 7.01," U.S. Government Printing Office, Washington, D.C.
- VESIC, A. S. (1963). "Bearing Capacity of Deep Foundations in Sand," *Highway Research Record No. 39*, National Academy of Sciences, Washington D.C., pp. 112–154.
- WOOD, D. M. (1983). "Index Properties and Critical State Soil Mechanics," *Proceedings, Symposium on Recent Developments in Laboratory and Field Tests and Analysis of Geotechnical Problems*, Bangkok, p. 309.
- WROTH, C. P. and WOOD, D. M. (1978). "The Correlation of Index Properties with Some Basic Engineering Properties of Soils," *Canadian Geotechnical Journal*, Vol. 15, No. 2, pp. 137–145.

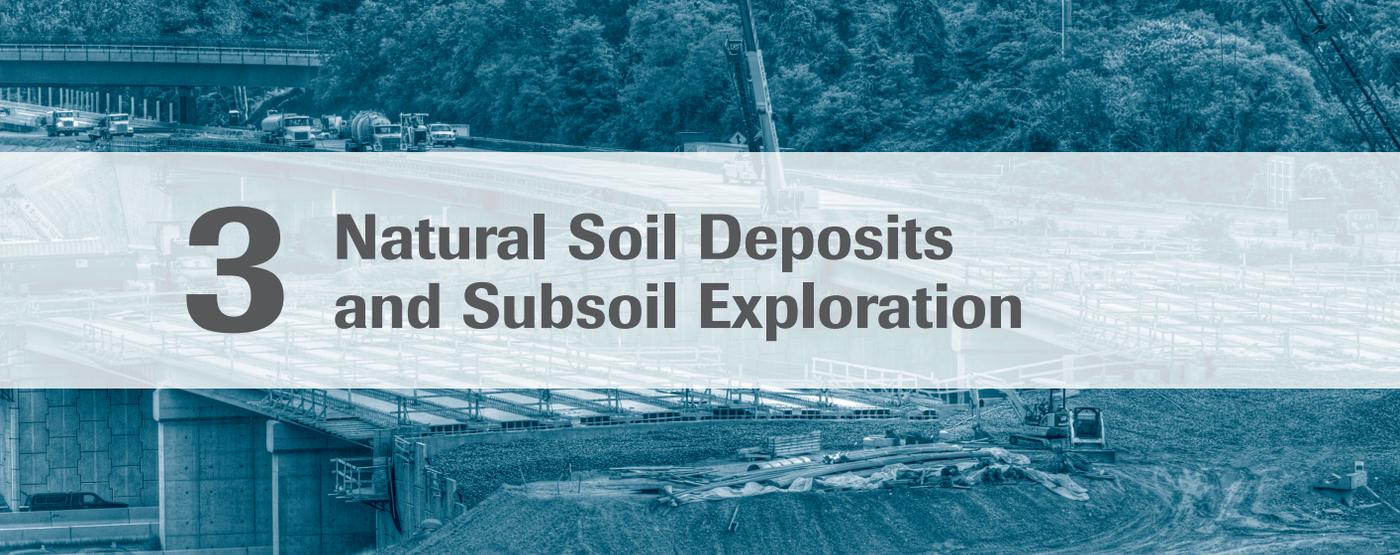

# 3 Natural Soil Deposits and Subsoil Exploration

## 3.1 Introduction

To design a foundation that will support a structure, an engineer must understand the types of soil deposits that will support the foundation. Moreover, foundation engineers must remember that soil at any site frequently is nonhomogeneous; that is, the soil profile may vary. Soil mechanics theories involve idealized conditions, so the application of the theories to foundation engineering problems involves a judicious evaluation of site conditions and soil parameters. To do this requires some knowledge of the geological process by which the soil deposit at the site was formed, supplemented by subsurface exploration. Good professional judgment constitutes an essential part of geotechnical engineering—and it comes only with practice.

This chapter is divided into two parts. The first is a general overview of natural soil deposits generally encountered, and the second describes the general principles of subsoil exploration.

---

### *Natural Soil Deposits*

## 3.2 Soil Origin

Most of the soils that cover the earth are formed by the weathering of various rocks. There are two general types of weathering: (1) mechanical weathering and (2) chemical weathering.

*Mechanical weathering* is a process by which rocks are broken down into smaller and smaller pieces by physical forces without any change in the chemical composition. Changes in temperature result in *expansion and contraction of rock* due to gain and loss of heat. Continuous expansion and contraction will result in the development of cracks in rocks. Flakes and large fragments of rocks are split. *Frost action* is another source of mechanical weathering of rocks. Water can enter the pores, cracks, and other openings in the rock. When the temperature drops, the water freezes, thereby increasing the volume by

about 9%. This results in an outward pressure from inside the rock. Continuous freezing and thawing will result in the breakup of a rock mass. *Exfoliation* is another mechanical weathering process by which rock plates are peeled off from large rocks by physical forces. Mechanical weathering of rocks also takes place due to the action of *running water*, *glaciers*, *wind*, *ocean waves*, and so forth.

*Chemical weathering* is a process of decomposition or mineral alteration in which the original minerals are changed into something entirely different. For example, the common minerals in igneous rocks are quartz, feldspars, and ferromagnesian minerals. The decomposed products of these minerals due to chemical weathering are listed in Table 3.1.

Most rock weathering is a combination of mechanical and chemical weathering. Soil produced by the weathering of rocks can be transported by physical processes to other places. The resulting soil deposits are called *transported soils*. In contrast, some soils stay where they were formed and cover the rock surface from which they derive. These soils are referred to as *residual soils*.

Transported soils can be subdivided into five major categories based on the *transporting agent*:

1. *Gravity transported soil*
2. *Lacustrine* (lake) deposits
3. *Alluvial* or *fluvial* soil deposited by running water
4. *Glacial* deposited by glaciers
5. *Aeolian* deposited by the wind

In addition to transported and residual soils, there are *peats* and *organic soils*, which derive from the decomposition of organic materials.

**Table 3.1** Some Decomposed Products of Minerals in Igneous Rock


Mineral	Decomposed Product
Quartz	Quartz (sand grains)
Potassium feldspar ( $\text{KAlSi}_3\text{O}_8$ ) and Sodium feldspar ( $\text{NaAlSi}_3\text{O}_8$ )	Kaolinite (clay) Bauxite Illite (clay) Silica
Calcium feldspar ( $\text{CaAl}_2\text{Si}_2\text{O}_8$ )	Silica Calcite
Biotite	Clay Limonite Hematite Silica Calcite
Olivine ( $\text{Mg, Fe}$ ) $_2\text{SiO}_4$	Limonite Serpentine Hematite Silica

### 3.3 Residual Soil

Residual soils are found in areas where the rate of weathering is more than the rate at which the weathered materials are carried away by transporting agents. The rate of weathering is higher in warm and humid regions compared to cooler and drier regions and, depending on the climatic conditions, the effect of weathering may vary widely.

Residual soil deposits are common in the tropics, on islands such as the Hawaiian Islands, and in the southeastern United States. The nature of a residual soil deposit will generally depend on the parent rock. When hard rocks such as granite and gneiss undergo weathering, most of the materials are likely to remain in place. These soil deposits generally have a top layer of clayey or silty clay material, below which are silty or sandy soil layers. These layers in turn are generally underlain by a partially weathered rock and then sound bedrock. The depth of the sound bedrock may vary widely, even within a distance of a few meters. Figure 3.1 shows the boring log of a residual soil deposit derived from the weathering of granite.

In contrast to hard rocks, there are some chemical rocks, such as limestone, that are chiefly made up of calcite ( $\text{CaCO}_3$ ) mineral. Chalk and dolomite have large concentrations of dolomite minerals [ $\text{Ca Mg}(\text{CO}_3)_2$ ]. These rocks have large amounts of soluble materials,

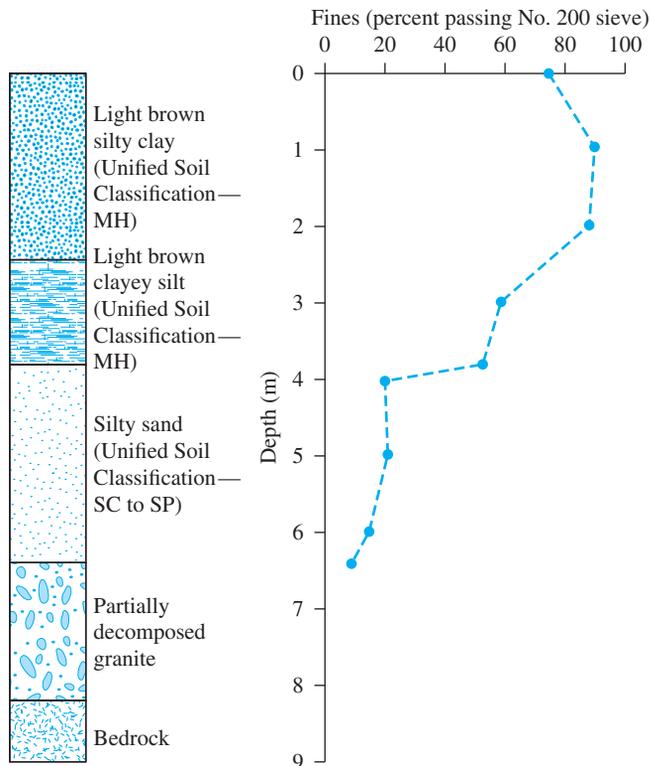

**Figure 3.1** Boring log for a residual soil derived from granite

**Table 3.2** Velocity Scale for Soil Movement on a Slope


Description	Velocity (mm/sec)
Very slow	$5 \times 10^{-5}$ to $5 \times 10^{-7}$
Slow	$5 \times 10^{-3}$ to $5 \times 10^{-5}$
Moderate	$5 \times 10^{-1}$ to $5 \times 10^{-3}$
Rapid	$5 \times 10^1$ to $5 \times 10^{-1}$

some of which are removed by groundwater, leaving behind the insoluble fraction of the rock. Residual soils that derive from chemical rocks do not possess a gradual transition zone to the bedrock, as seen in Figure 3.1. The residual soils derived from the weathering of limestone-like rocks are mostly red in color. Although uniform in kind, the depth of weathering may vary greatly. The residual soils immediately above the bedrock may be normally consolidated. Large foundations with heavy loads may be susceptible to large consolidation settlements on these soils.

### 3.4 Gravity Transported Soil

Residual soils on a natural slope can move downwards. Cruden and Varnes (1996) proposed a velocity scale for soil movement on a slope, which is summarized in Table 3.2. When residual soils move down a natural slope very slowly, the process is usually referred to as *creep*. When the downward movement of soil is sudden and rapid, it is called a *landslide*. The deposits formed by down-slope creep and landslides are *colluvium*.

Colluvium is a heterogeneous mixture of soils and rock fragments ranging from clay-sized particles to rocks having diameters of one meter or more. *Mudflows* are one type of gravity-transported soil. Flows are downward movements of earth that resemble a viscous fluid (Figure 3.2) and come to rest in a more dense condition. The soil deposits derived from past mudflows are highly heterogeneous in composition.

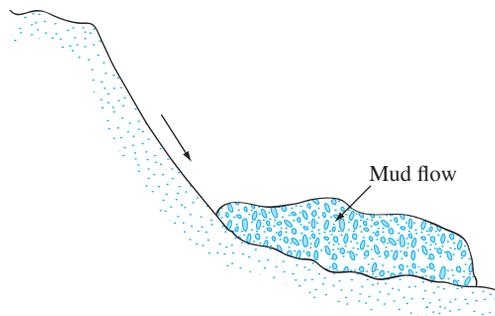**Figure 3.2** Mudflow

## 3.5 Alluvial Deposits

Alluvial soil deposits derive from the action of streams and rivers and can be divided into two major categories: (1) *braided-stream deposits* and (2) deposits caused by the *meandering belt of streams*.

### Deposits from Braided Streams

Braided streams are high-gradient, rapidly flowing streams that are highly erosive and carry large amounts of sediment. Because of the high bed load, a minor change in the velocity of flow will cause sediments to deposit. By this process, these streams may build up a complex tangle of converging and diverging channels separated by sandbars and islands.


The deposits formed from braided streams are highly irregular in stratification and have a wide range of grain sizes. Figure 3.3 shows a cross section of such a deposit. These deposits share several characteristics:

1. The grain sizes usually range from gravel to silt. Clay-sized particles are generally *not* found in deposits from braided streams.
2. Although grain size varies widely, the soil in a given pocket or lens is rather uniform.
3. At any given depth, the void ratio and unit weight may vary over a wide range within a lateral distance of only a few meters. This variation can be observed during soil exploration for the construction of a foundation for a structure. The standard penetration resistance at a given depth obtained from various boreholes will be highly irregular and variable.


Alluvial deposits are present in several parts of the western United States, such as Southern California, Utah, and the basin and range sections of Nevada. Also, a large amount of sediment originally derived from the Rocky Mountain range was carried eastward to form the alluvial deposits of the Great Plains. On a smaller scale, this type of natural soil deposit, left by braided streams, can be encountered locally.

### Meander Belt Deposits

The term *meander* is derived from the Greek word *maiandros*, after the Maiandros (now Menderes) River in Asia, famous for its winding course. Mature streams in a valley curve

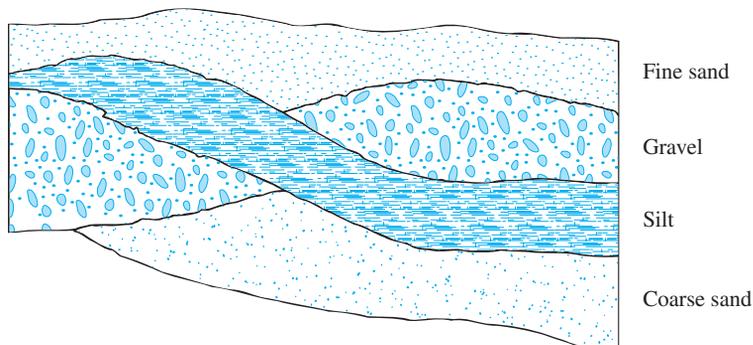


**Figure 3.3** Cross section of a braided-stream deposit

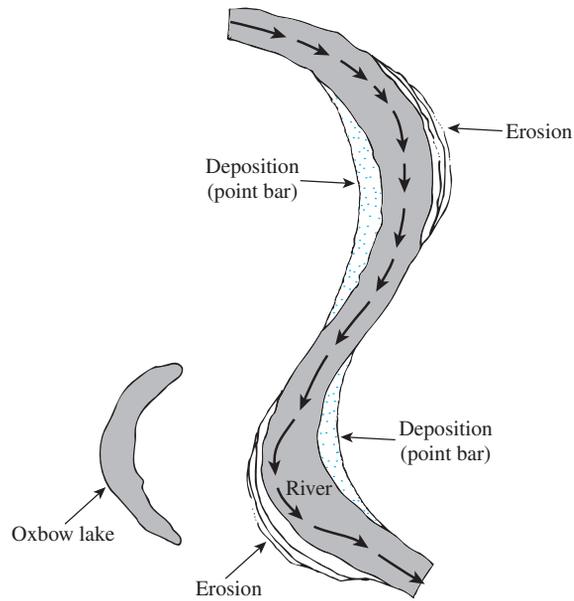

**Figure 3.4** Formation of point bar deposits and oxbow lake in a meandering stream

back and forth. The valley floor in which a river meanders is referred to as the *meander belt*. In a meandering river, the soil from the bank is continually eroded from the points where it is concave in shape and is deposited at points where the bank is convex in shape, as shown in Figure 3.4. These deposits are called *point bar deposits*, and they usually consist of sand and silt-size particles. Sometimes, during the process of erosion and deposition, the river abandons a meander and cuts a shorter path. The abandoned meander, when filled with water, is called an *oxbow lake*. (See Figure 3.4.)

During floods, rivers overflow low-lying areas. The sand and silt-size particles carried by the river are deposited along the banks to form ridges known as *natural levees* (Figure 3.5).

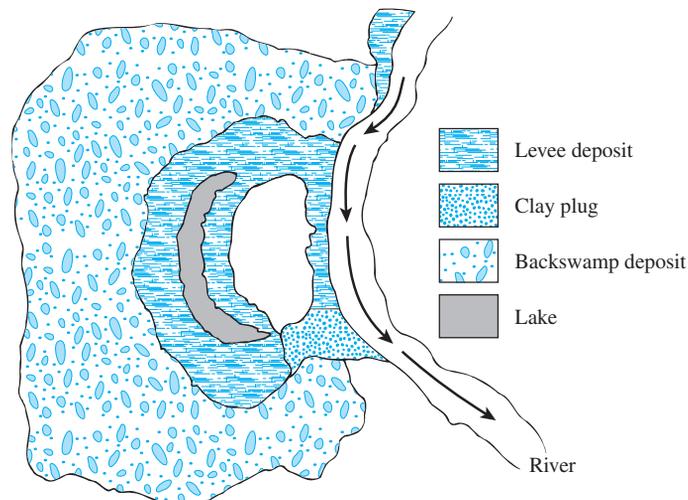

**Figure 3.5** Levee and backswamp deposit

**Table 3.3** Properties of Deposits within the Mississippi Alluvial Valley

Environment	Soil texture	Natural water content (%)	Liquid limit	Plasticity index
Natural levee	Clay (CL)	25–35	35–45	15–25
	Silt (ML)	15–35	NP–35	NP–5
Point bar	Silt (ML) and silty sand (SM)	25–45	30–55	10–25
Abandoned channel	Clay (CL, CH)	30–95	30–100	10–65
Backswamps	Clay (CH)	25–70	40–115	25–100
Swamp	Organic clay (OH)	100–265	135–300	100–165

(Note: NP—Nonplastic)

Finer soil particles consisting of silts and clays are carried by the water farther onto the floodplains. These particles settle at different rates to form what is referred to as *backswamp deposits* (Figure 3.5), often highly plastic clays.

Table 3.3 gives some properties of soil deposits found in natural levees, point bars, abandoned channels, backswamps and swamps within the alluvial Mississippi Valley (Kolb and Shockley, 1959).


### 3.6 Lacustrine Deposits

Water from rivers and springs flows into lakes. In arid regions, streams carry large amounts of suspended solids. Where the stream enters the lake, granular particles are deposited in the area forming a delta. Some coarser particles and the finer particles (that is, silt and clay) that are carried into the lake are deposited onto the lake bottom in alternate layers of coarse-grained and fine-grained particles. The deltas formed in humid regions usually have finer grained soil deposits compared to those in arid regions.

*Varved clays* are alternate layers of silt and silty clay with layer thicknesses rarely exceeding about 13 mm. ( $\frac{1}{2}$  in.). The silt and silty clay that constitute the layers were carried into fresh water lakes by melt water at the end of the Ice Age. The hydraulic conductivity of varved clays exhibits a high degree of anisotropy.

### 3.7 Glacial Deposits

During the Pleistocene Ice Age, glaciers covered large areas of the earth. The glaciers advanced and retreated with time. During their advance, the glaciers carried large amounts of sand, silt, clay, gravel, and boulders. *Drift* is a general term usually applied to the deposits laid down by glaciers. The drifts can be broadly divided into two major

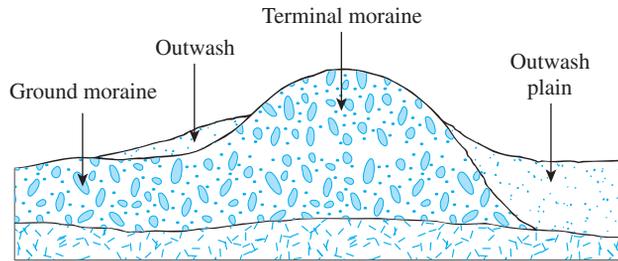

**Figure 3.6** Terminal moraine, ground moraine, and outwash plain

categories: (a) unstratified drifts and (b) stratified drifts. A brief description of each category follows.

### Unstratified Drifts

The *unstratified drifts* laid down by melting glaciers are referred to as *till*. The physical characteristics of till may vary from glacier to glacier. Till is called *clay till* because of the presence of the large amount of clay-sized particles in it. In some areas, tills constitute large amounts of boulders, and they are referred to as *boulder till*. The range of grain sizes in a given till varies greatly. The amount of clay-sized fractions present and the plasticity indices of tills also vary widely. During the field exploration program, erratic values of standard penetration resistance (Section 3.13) also may be expected.

The land forms that developed from the till deposits are called *moraines*. A *terminal moraine* (Figure 3.6) is a ridge of till that marks the maximum limit of a glacier's advance. *Recessional moraines* are ridges of till developed behind the terminal moraine at varying distances apart. They are the result of temporary stabilization of the glacier during the recessional period. The till deposited by the glacier between the moraines is referred to as *ground moraine* (Figure 3.6). Ground moraines constitute large areas of the central United States and are called *till plains*.

### Stratified Drifts

The sand, silt, and gravel that are carried by the melting water from the front of a glacier are called *outwash*. The melted water sorts out the particles by the grain size and forms stratified deposits. In a pattern similar to that of braided-stream deposits, the melted water also deposits the outwash, forming *outwash plains* (Figure 3.6), also called *glaciofluvial deposits*.

## 3.8 Aeolian Soil Deposits

Wind is also a major transporting agent leading to the formation of soil deposits. When large areas of sand lie exposed, wind can blow the sand away and redeposit it elsewhere. Deposits of windblown sand generally take the shape of *dunes* (Figure 3.7). As dunes are formed, the sand is blown over the crest by the wind. Beyond the crest, the sand particles

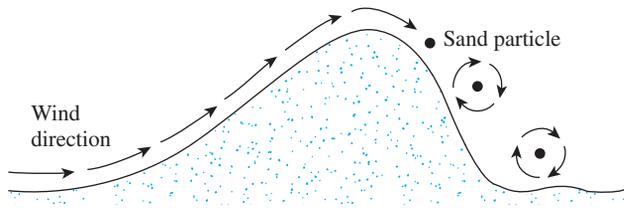


Figure 3.7 Sand dune

roll down the slope. The process tends to form a *compact sand deposit* on the *windward side*, and a rather *loose deposit* on the *leeward side*, of the dune.

Dunes exist along the southern and eastern shores of Lake Michigan, the Atlantic Coast, the southern coast of California, and at various places along the coasts of Oregon and Washington. Sand dunes can also be found in the alluvial and rocky plains of the western United States. Following are some of the typical properties of *dune sand*:

1. The grain-size distribution of the sand at any particular location is surprisingly uniform. This uniformity can be attributed to the sorting action of the wind.
2. The general grain size decreases with distance from the source, because the wind carries the small particles farther than the large ones.
3. The relative density of sand deposited on the windward side of dunes may be as high as 50 to 65%, decreasing to about 0 to 15% on the leeward side.

Figure 3.8 shows some sand dunes in the Sahara desert in Egypt.

*Loess* is an aeolian deposit consisting of silt and silt-sized particles. The grain-size distribution of loess is rather uniform. The cohesion of loess is generally derived from a clay coating over the silt-sized particles, which contributes to a stable soil structure in an unsaturated state. The cohesion may also be the result of the precipitation of chemicals leached by rainwater. Loess is a *collapsing* soil, because when the soil becomes saturated,

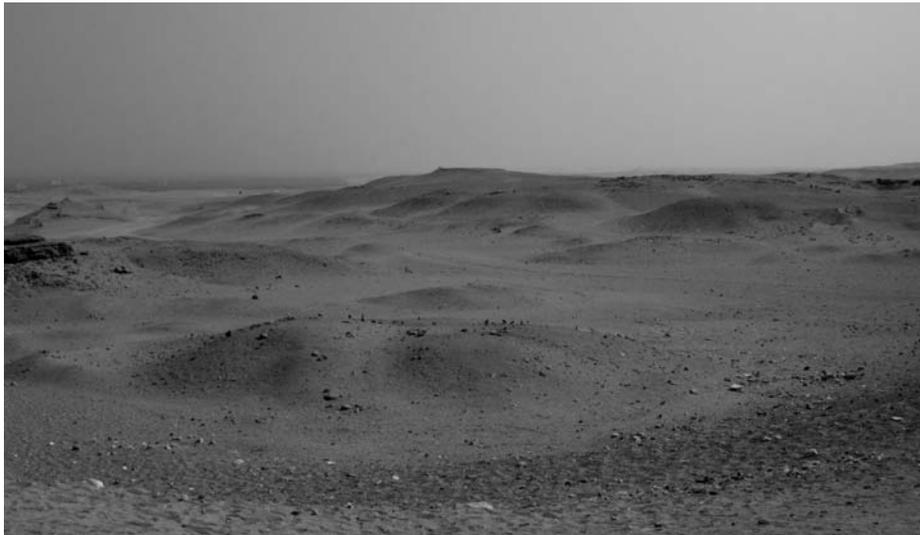


Figure 3.8 Sand dunes in the Sahara desert in Egypt (Courtesy of Janice Das)

it loses its binding strength between particles. Special precautions need to be taken for the construction of foundations over loessial deposits. There are extensive deposits of loess in the United States, mostly in the midwestern states of Iowa, Missouri, Illinois, and Nebraska and for some distance along the Mississippi River in Tennessee and Mississippi.

Volcanic ash (with grain sizes between 0.25 to 4 mm) and volcanic dust (with grain sizes less than 0.25 mm) may be classified as wind-transported soil. Volcanic ash is a lightweight sand or sandy gravel. Decomposition of volcanic ash results in highly plastic and compressible clays.

## 3.9 Organic Soil

Organic soils are usually found in low-lying areas where the water table is near or above the ground surface. The presence of a high water table helps in the growth of aquatic plants that, when decomposed, form organic soil. This type of soil deposit is usually encountered in coastal areas and in glaciated regions. Organic soils show the following characteristics:

1. Their natural moisture content may range from 200 to 300%.
2. They are highly compressible.
3. Laboratory tests have shown that, under loads, a large amount of settlement is derived from secondary consolidation.

## 3.10 Some Local Terms for Soils

Soils are sometimes referred to by local terms. The following are a few of these terms with a brief description of each.

1. *Caliche*: a Spanish word derived from the Latin word *calix*, meaning *lime*. It is mostly found in the desert southwest of the United States. It is a mixture of sand, silt, and gravel bonded together by *calcareous deposits*. The calcareous deposits are brought to the surface by a net upward migration of water. The water evaporates in the high local temperature. Because of the sparse rainfall, the carbonates are not washed out of the top layer of soil.
2. *Gumbo*: a highly plastic, clayey soil.
3. *Adobe*: a highly plastic, clayey soil found in the southwestern United States.
4. *Terra Rossa*: residual soil deposits that are red in color and derive from limestone and dolomite.
5. *Muck*: organic soil with a very high moisture content.
6. *Muskeg*: organic soil deposit.
7. *Saprolite*: residual soil deposit derived from mostly insoluble rock.
8. *Loam*: a mixture of soil grains of various sizes, such as sand, silt, and clay.
9. *Laterite*: characterized by the accumulation of iron oxide ( $\text{Fe}_2\text{O}_3$ ) and aluminum oxide ( $\text{Al}_2\text{O}_3$ ) near the surface, and the leaching of silica. Lateritic soils in Central America contain about 80 to 90% of clay and silt-size particles. In the United States, lateritic soils can be found in the southeastern states, such as Alabama, Georgia, and the Carolinas.

---

## Subsurface Exploration

### 3.11 Purpose of Subsurface Exploration

The process of identifying the layers of deposits that underlie a proposed structure and their physical characteristics is generally referred to as *subsurface exploration*. The purpose of subsurface exploration is to obtain information that will aid the geotechnical engineer in

1. Selecting the type and depth of foundation suitable for a given structure.
2. Evaluating the load-bearing capacity of the foundation.
3. Estimating the probable settlement of a structure.
4. Determining potential foundation problems (e.g., expansive soil, collapsible soil, sanitary landfill, and so on).
5. Determining the location of the water table.
6. Predicting the lateral earth pressure for structures such as retaining walls, sheet pile bulkheads, and braced cuts.
7. Establishing construction methods for changing subsoil conditions.

Subsurface exploration may also be necessary when additions and alterations to existing structures are contemplated.

### 3.12 Subsurface Exploration Program

Subsurface exploration comprises several steps, including the collection of preliminary information, reconnaissance, and site investigation.

#### Collection of Preliminary Information

This step involves obtaining information regarding the type of structure to be built and its general use. For the construction of buildings, the approximate column loads and their spacing and the local building-code and basement requirements should be known. The construction of bridges requires determining the lengths of their spans and the loading on piers and abutments.

A general idea of the topography and the type of soil to be encountered near and around the proposed site can be obtained from the following sources:

1. United States Geological Survey maps.
2. State government geological survey maps.
3. United States Department of Agriculture's Soil Conservation Service county soil reports.
4. Agronomy maps published by the agriculture departments of various states.
5. Hydrological information published by the United States Corps of Engineers, including records of stream flow, information on high flood levels, tidal records, and so on.
6. Highway department soil manuals published by several states.

The information collected from these sources can be extremely helpful in planning a site investigation. In some cases, substantial savings may be realized by anticipating problems that may be encountered later in the exploration program.

## Reconnaissance

The engineer should always make a visual inspection of the site to obtain information about


1. The general topography of the site, the possible existence of drainage ditches, abandoned dumps of debris, and other materials present at the site. Also, evidence of creep of slopes and deep, wide shrinkage cracks at regularly spaced intervals may be indicative of expansive soils.
2. Soil stratification from deep cuts, such as those made for the construction of nearby highways and railroads.
3. The type of vegetation at the site, which may indicate the nature of the soil. For example, a mesquite cover in central Texas may indicate the existence of expansive clays that can cause foundation problems.
4. High-water marks on nearby buildings and bridge abutments.
5. Groundwater levels, which can be determined by checking nearby wells.
6. The types of construction nearby and the existence of any cracks in walls or other problems.

The nature of the stratification and physical properties of the soil nearby also can be obtained from any available soil-exploration reports on existing structures.

## Site Investigation

The site investigation phase of the exploration program consists of planning, making test boreholes, and collecting soil samples at desired intervals for subsequent observation and laboratory tests. The approximate required minimum depth of the borings should be predetermined. The depth can be changed during the drilling operation, depending on the subsoil encountered. To determine the approximate minimum depth of boring, engineers may use the rules established by the American Society of Civil Engineers (1972):

1. Determine the net increase in the effective stress,  $\Delta\sigma'_v$ , under a foundation with depth as shown in Figure 3.9. (The general equations for estimating increases in stress are given in Chapter 6.)
2. Estimate the variation of the vertical effective stress,  $\sigma'_v$ , with depth.

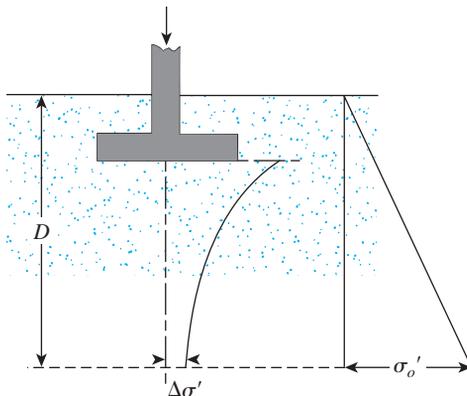

**Figure 3.9** Determination of the minimum depth of boring

3. Determine the depth,  $D = D_1$ , at which the effective stress increase  $\Delta\sigma'$  is equal to  $(\frac{1}{10})q$  ( $q$  = estimated net stress on the foundation).
4. Determine the depth,  $D = D_2$ , at which  $\Delta\sigma'/\sigma'_o = 0.05$ .
5. Choose the smaller of the two depths,  $D_1$  and  $D_2$ , just determined as the approximate minimum depth of boring required, unless bedrock is encountered.

If the preceding rules are used, the depths of boring for a building with a width of 30 m (100 ft) will be approximately the following, according to Sowers and Sowers (1970):

No. of stories	Boring depth	
1	3.5 m	(11 ft)
2	6 m	(20 ft)
3	10 m	(33 ft)
4	16 m	(53 ft)
5	24 m	(79 ft)

To determine the boring depth for hospitals and office buildings, Sowers and Sowers (1970) also used the following rules.

- For light steel or narrow concrete buildings,

$$\frac{D_b}{S^{0.7}} = a \quad (3.1)$$

where

$D_b$  = depth of boring

$S$  = number of stories

$$a = \begin{cases} \approx 3 & \text{if } D_b \text{ is in meters} \\ \approx 10 & \text{if } D_b \text{ is in feet} \end{cases}$$

- For heavy steel or wide concrete buildings,

$$\frac{D_b}{S^{0.7}} = b \quad (3.2)$$

where

$$b = \begin{cases} \approx 6 & \text{if } D_b \text{ is in meters} \\ \approx 20 & \text{if } D_b \text{ is in feet} \end{cases}$$

When deep excavations are anticipated, the depth of boring should be at least 1.5 times the depth of excavation.

Sometimes, subsoil conditions require that the foundation load be transmitted to bedrock. The minimum depth of core boring into the bedrock is about 3 m (10 ft). If the bedrock is irregular or weathered, the core borings may have to be deeper.

**Table 3.4** Approximate Spacing of Boreholes


Type of project	Spacing	
	(m)	(ft)
Multistory building	10–30	30–100
One-story industrial plants	20–60	60–200
Highways	250–500	800–1600
Residential subdivision	250–500	800–1600
Dams and dikes	40–80	130–260

There are no hard-and-fast rules for borehole spacing. Table 3.4 gives some general guidelines. Spacing can be increased or decreased, depending on the condition of the subsoil. If various soil strata are more or less uniform and predictable, fewer boreholes are needed than in nonhomogeneous soil strata.

The engineer should also take into account the ultimate cost of the structure when making decisions regarding the extent of field exploration. The exploration cost generally should be 0.1 to 0.5% of the cost of the structure. Soil borings can be made by several methods, including auger boring, wash boring, percussion drilling, and rotary drilling.

### 3.13 Exploratory Borings in the Field

*Auger boring* is the simplest method of making exploratory boreholes. Figure 3.10 shows two types of hand auger: the *posthole auger* and the *helical auger*. Hand augers cannot be used for advancing holes to depths exceeding 3 to 5 m (10 to 16 ft). However, they

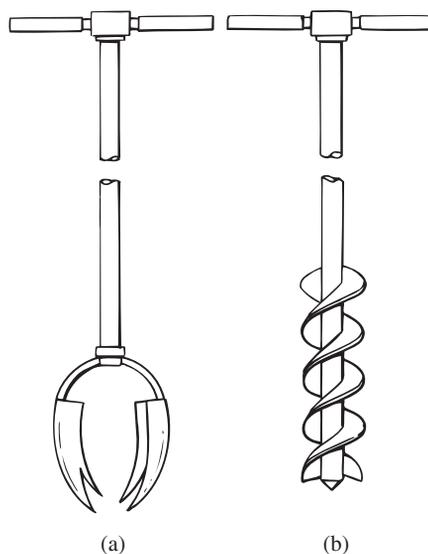

**Figure 3.10** Hand tools: (a) posthole auger; (b) helical auger

can be used for soil exploration work on some highways and small structures. *Portable power-driven helical augers* (76 mm to 305 mm in diameter) are available for making deeper boreholes. The soil samples obtained from such borings are highly disturbed. In some noncohesive soils or soils having low cohesion, the walls of the boreholes will not stand unsupported. In such circumstances, a metal pipe is used as a *casing* to prevent the soil from caving in.

When power is available, *continuous-flight augers* are probably the most common method used for advancing a borehole. The power for drilling is delivered by truck- or tractor-mounted drilling rigs. Boreholes up to about 60 to 70 m (200 to 230 ft) can easily be made by this method. Continuous-flight augers are available in sections of about 1 to 2 m (3 to 6 ft) with either a solid or hollow stem. Some of the commonly used solid-stem augers have outside diameters of 66.68 mm ( $2\frac{5}{8}$  in.), 82.55 mm ( $3\frac{1}{4}$  in.), 101.6 mm (4 in.), and 114.3 mm ( $4\frac{1}{2}$  in.). Common commercially available hollow-stem augers have dimensions of 63.5 mm ID and 158.75 mm OD (2.5 in.  $\times$  6.25 in.), 69.85 mm ID and 177.8 OD (2.75 in.  $\times$  7 in.), 76.2 mm ID and 203.2 OD (3 in.  $\times$  8 in.), and 82.55 mm ID and 228.6 mm OD (3.25 in.  $\times$  9 in.).

The tip of the auger is attached to a cutter head (Figure 3.11). During the drilling operation (Figure 3.12), section after section of auger can be added and the hole extended downward. The flights of the augers bring the loose soil from the bottom of the hole to the



**Figure 3.11** Carbide-tipped cutting head on auger flight (Courtesy of Braja M. Das, Henderson, Nevada)



**Figure 3.12** Drilling with continuous-flight augers (Danny R. Anderson, PE of Professional Service Industries, Inc, El Paso, Texas.)


surface. The driller can detect changes in the type of soil by noting changes in the speed and sound of drilling. When solid-stem augers are used, the auger must be withdrawn at regular intervals to obtain soil samples and also to conduct other operations such as standard penetration tests. Hollow-stem augers have a distinct advantage over solid-stem augers in that they do not have to be removed frequently for sampling or other tests. As shown schematically in Figure 3.13, the outside of the hollow-stem auger acts as a casing.

The hollow-stem auger system includes the following components:


- Outer component:* (a) hollow auger sections, (b) hollow auger cap, and (c) drive cap
- Inner component:* (a) pilot assembly, (b) center rod column, and (c) rod-to-cap adapter

The auger head contains replaceable carbide teeth. During drilling, if soil samples are to be collected at a certain depth, the pilot assembly and the center rod are removed. The soil sampler is then inserted through the hollow stem of the auger column.

*Wash boring* is another method of advancing boreholes. In this method, a casing about 2 to 3 m (6 to 10 ft) long is driven into the ground. The soil inside the casing is then

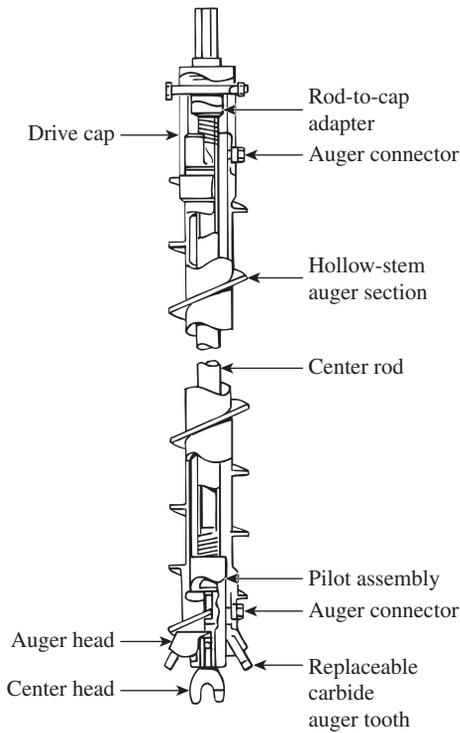

**Figure 3.13** Hollow-stem auger components (After ASTM, 2001) (Based on ASTM D4700-91: Standard Guide for Soil Sampling from the Vadose Zone.)

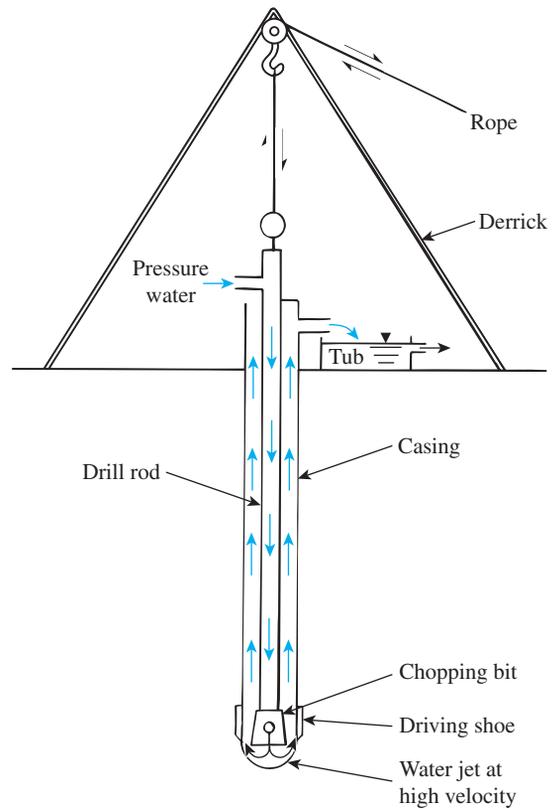

**Figure 3.14** Wash boring

removed by means of a chopping bit attached to a drilling rod. Water is forced through the drilling rod and exits at a very high velocity through the holes at the bottom of the chopping bit (Figure 3.14). The water and the chopped soil particles rise in the drill hole and overflow at the top of the casing through a T connection. The washwater is collected in a container. The casing can be extended with additional pieces as the borehole progresses; however, that is not required if the borehole will stay open and not cave in. Wash borings are rarely used now in the United States and other developed countries.

*Rotary drilling* is a procedure by which rapidly rotating drilling bits attached to the bottom of drilling rods cut and grind the soil and advance the borehole. There are several types of drilling bit. Rotary drilling can be used in sand, clay, and rocks (unless they are badly fissured). Water or *drilling mud* is forced down the drilling rods to the bits, and the return flow forces the cuttings to the surface. Boreholes with diameters of 50 to 203 mm (2 to 8 in.) can easily be made by this technique. The drilling mud is a slurry of water and bentonite. Generally, it is used when the soil that is encountered is likely to cave in. When soil samples are needed, the drilling rod is raised and the drilling bit is replaced by a

sampler. With the environmental drilling applications, rotary drilling with air is becoming more common.

*Percussion drilling* is an alternative method of advancing a borehole, particularly through hard soil and rock. A heavy drilling bit is raised and lowered to chop the hard soil. The chopped soil particles are brought up by the circulation of water. Percussion drilling may require casing.

## 3.14 Procedures for Sampling Soil


Two types of soil samples can be obtained during subsurface exploration: *disturbed* and *undisturbed*. Disturbed, but representative, samples can generally be used for the following types of laboratory test:

1. Grain-size analysis
2. Determination of liquid and plastic limits
3. Specific gravity of soil solids
4. Determination of organic content
5. Classification of soil

Disturbed soil samples, however, cannot be used for consolidation, hydraulic conductivity, or shear strength tests. Undisturbed soil samples must be obtained for these types of laboratory tests. Sections 3.15 through 3.18 describe some procedures for obtaining soil samples during field exploration.

## 3.15 Split-Spoon Sampling

Split-spoon samplers can be used in the field to obtain soil samples that are generally disturbed, but still representative. A section of a *standard split-spoon sampler* is shown in Figure 3.15a. The tool consists of a steel driving shoe, a steel tube that is split longitudinally in half, and a coupling at the top. The coupling connects the sampler to the drill rod. The standard split tube has an inside diameter of 34.93 mm ( $1\frac{3}{8}$  in.) and an outside diameter of 50.8 mm (2 in.); however, samplers having inside and outside diameters up to 63.5 mm ( $2\frac{1}{2}$  in.) and 76.2 mm (3 in.), respectively, are also available. When a borehole is extended to a predetermined depth, the drill tools are removed and the sampler is lowered to the bottom of the hole. The sampler is driven into the soil by hammer blows to the top of the drill rod. The standard weight of the hammer is 622.72 N (140 lb), and for each blow, the hammer drops a distance of 0.762 m (30 in.). The number of blows required for a spoon penetration of three 152.4-mm (6-in.) intervals are recorded. The number of blows required for the last two intervals are added to give the *standard penetration number*,  $N$ , at that depth. This number is generally referred to as the *N value* (American Society for Testing and Materials, 2014, Designation D-1586-11). The sampler is then withdrawn, and the shoe and coupling are removed. Finally, the soil sample recovered from the tube is placed in a glass bottle and transported to the laboratory. This field test is called the standard penetration test (SPT). Figure 3.16a and b show a split-spoon sampler unassembled before and after sampling.

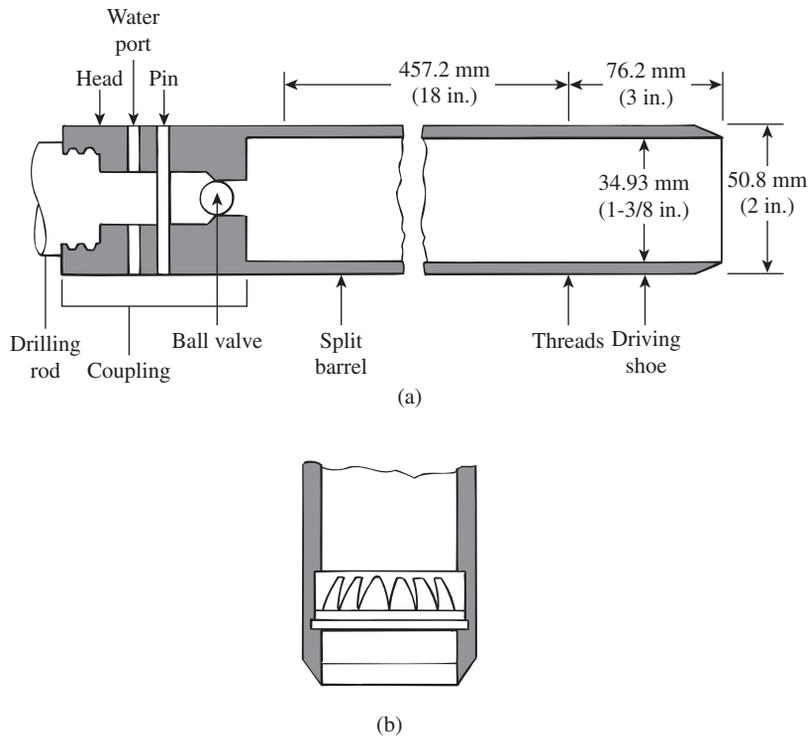

**Figure 3.15** (a) Standard split-spoon sampler; (b) spring core catcher



(a)



(b)

**Figure 3.16** (a) Unassembled split-spoon sampler; (b) after sampling (Courtesy of Professional Service Industries, Inc. (PSI), Waukesha, Wisconsin)

The degree of disturbance for a soil sample is usually expressed as

$$A_R(\%) = \frac{D_o^2 - D_i^2}{D_i^2}(100) \quad (3.3)$$

where

$A_R$  = area ratio (ratio of disturbed area to total area of soil)

$D_o$  = outside diameter of the sampling tube

$D_i$  = inside diameter of the sampling tube

When the area ratio is 10% or less, the sample generally is considered to be undisturbed. For a standard split-spoon sampler,

$$A_R(\%) = \frac{(50.8)^2 - (34.93)^2}{(34.93)^2}(100) = 111.5\%$$

Hence, these samples are highly disturbed. Split-spoon samples generally are taken at intervals of about 1.5 m (5 ft). When the material encountered in the field is sand (particularly fine sand below the water table), recovery of the sample by a split-spoon sampler may be difficult. In that case, a device such as a *spring core catcher* may have to be placed inside the split spoon (Figure 3.15b).

At this juncture, it is important to point out that several factors contribute to the variation of the standard penetration number  $N$  at a given depth for similar soil profiles. Among these factors are the SPT hammer efficiency, borehole diameter, sampling method, and rod length (Skempton, 1986; Seed, et al., 1985). The SPT hammer energy efficiency can be expressed as

$$E_r(\%) = \frac{\text{actual hammer energy to the sampler}}{\text{input energy}} \times 100 \quad (3.4)$$

$$\text{Theoretical input energy} = Wh \quad (3.5)$$

where

$W$  = weight of the hammer  $\approx 0.623$  kN (140 lb)

$h$  = height of drop  $\approx 0.76$  m (30 in.)

So,

$$Wh = (0.623)(0.76) = 0.474 \text{ kN}\cdot\text{m} \text{ (4200 in.}\cdot\text{lb)}$$

In the field, the magnitude of  $E_r$  can vary from 30 to 90%. The standard practice now in the U.S. is to express the  $N$ -value to an average energy ratio of 60% ( $\approx N_{60}$ ). Thus, correcting for field procedures and on the basis of field observations, it appears reasonable to standardize the field penetration number as a function of the input driving energy and its dissipation around the sampler into the surrounding soil, or

$$N_{60} = \frac{N\eta_H\eta_B\eta_S\eta_R}{60} \quad (3.6)$$

**Table 3.5** Variations of  $\eta_H$ ,  $\eta_B$ ,  $\eta_S$ , and  $\eta_R$  [Eq. (3.6)]**1. Variation of  $\eta_H$** 

Country	Hammer type	Hammer release	$\eta_H$ (%)
Japan	Donut	Free fall	78
	Donut	Rope and pulley	67
United States	Safety	Rope and pulley	60
	Donut	Rope and pulley	45
Argentina	Donut	Rope and pulley	45
China	Donut	Free fall	60
	Donut	Rope and pulley	50

**3. Variation of  $\eta_S$** 

Variable	$\eta_S$
Standard sampler	1.0
With liner for dense sand and clay	0.8
With liner for loose sand	0.9

**2. Variation of  $\eta_B$** 

Diameter		$\eta_B$
mm	in.	
60–120	2.4–4.7	1
150	6	1.05
200	8	1.15

**4. Variation of  $\eta_R$** 

Rod length		
m	ft	$\eta_R$
>10	>30	1.0
6–10	20–30	0.95
4–6	12–20	0.85
0–4	0–12	0.75

where

$N_{60}$  = standard penetration number, corrected for field conditions

$N$  = measured penetration number

$\eta_H$  = hammer efficiency (%)

$\eta_B$  = correction for borehole diameter

$\eta_S$  = sampler correction

$\eta_R$  = correction for rod length

Variations of  $\eta_H$ ,  $\eta_B$ ,  $\eta_S$ , and  $\eta_R$ , based on recommendations by Seed et al. (1985) and Skempton (1986), are summarized in Table 3.5.

## Correlations for $N_{60}$ in Cohesive Soil

Besides compelling the geotechnical engineer to obtain soil samples, standard penetration tests provide several useful correlations. For example, the consistency of clay soils can be estimated from the standard penetration number,  $N_{60}$ . In order to achieve that, Szechy and Vargi (1978) calculated the *consistency index* (CI) as

$$CI = \frac{LL - w}{LL - PL} \quad (3.7)$$

where

$w$  = natural moisture content (%)

LL = liquid limit

PL = plastic limit

**Table 3.6** Approximate Correlation between CI,  $N_{60}$ , and  $q_u$ 

Standard penetration number, $N_{60}$	Consistency	CI	Unconfined compression strength, $q_u$	
			(kN/m <sup>2</sup> )	(lb/ft <sup>2</sup> )
<2	Very soft	<0.5	<25	500
2–8	Soft to medium	0.5–0.75	25–80	500–1700
8–15	Stiff	0.75–1.0	80–150	1700–3100
15–30	Very stiff	1.0–1.5	150–400	3100–8400
>30	Hard	>1.5	>400	8400

The approximate correlation between CI,  $N_{60}$ , and the unconfined compression strength ( $q_u$ ) is given in Table 3.6.

Hara, et al. (1971) also suggested the following correlation between the undrained shear strength of clay ( $c_u$ ) and  $N_{60}$ .

$$\frac{c_u}{p_a} = 0.29N_{60}^{0.72} \quad (3.8)$$

where  $p_a$  = atmospheric pressure ( $\approx 100$  kN/m<sup>2</sup>;  $\approx 2000$  lb/in<sup>2</sup>).

The overconsolidation ratio, OCR, of a natural clay deposit can also be correlated with the standard penetration number. On the basis of the regression analysis of 110 data points, Mayne and Kemper (1988) obtained the relationship

$$\text{OCR} = 0.193 \left( \frac{N_{60}}{\sigma'_o} \right)^{0.689} \quad (3.9)$$

where  $\sigma'_o$  = effective vertical stress in MN/m<sup>2</sup>.

It is important to point out that any correlation between  $c_u$ , OCR, and  $N_{60}$  is only approximate.

Using the field test results of Mayne and Kemper (1988) and others (112 data points), Kulhawy and Mayne (1990) suggested the approximate correlation

$$\text{OCR} = 0.58 \frac{N_{60} p_a}{\sigma'_o} \quad (3.10)$$

Kulhawy and Mayne (1990) have also provided an approximate correlation for the preconsolidation pressure ( $\sigma'_c$ ) of clay as

$$\sigma'_c = 0.47N_{60} p_a \quad (3.11)$$

### Correction for $N_{60}$ in Granular Soil

In granular soils, the value of  $N_{60}$  is affected by the effective overburden pressure,  $\sigma'_o$ . For that reason, the value of  $N_{60}$  obtained from field exploration under different effective overburden pressures should be changed to correspond to a standard value of  $\sigma'_o$ . That is,

$$(N_1)_{60} = C_N N_{60} \quad (3.12)$$

where

$(N_1)_{60}$  = value of  $N_{60}$  corrected to a standard value of  $\sigma'_a = p_a$  [ $\approx 100 \text{ kN/m}^2$  (2000 lb/ft<sup>2</sup>)]

$C_N$  = correction factor

$N_{60}$  = value of  $N$  obtained from field exploration [Eq. (3.6)]

In the past, a number of empirical relations were proposed for  $C_N$ . Some of the relationships are given next. The most commonly cited relationships are those of Liao and Whitman (1986) and Skempton (1986).

In the following relationships for  $C_N$ , note that  $\sigma'_o$  is the effective overburden pressure and  $p_a$  = atmospheric pressure ( $\approx 100 \text{ kN/m}^2$ , or  $\approx 2000 \text{ lb/ft}^2$ )  
Liao and Whitman's relationship (1986):

$$C_N = \left[ \frac{1}{\left( \frac{\sigma'_o}{p_a} \right)} \right]^{0.5} \quad (3.13)$$

Skempton's relationship (1986):

$$C_N = \frac{2}{1 + \left( \frac{\sigma'_o}{p_a} \right)} \quad (\text{for normally consolidated fine sand}) \quad (3.14)$$

$$C_N = \frac{3}{2 + \left( \frac{\sigma'_o}{p_a} \right)} \quad (\text{for normally consolidated coarse sand}) \quad (3.15)$$

$$C_N = \frac{1.7}{0.7 + \left( \frac{\sigma'_o}{p_a} \right)} \quad (\text{for overconsolidated sand}) \quad (3.16)$$

Seed et al.'s relationship (1975):

$$C_N = 1 - 1.25 \log \left( \frac{\sigma'_o}{p_a} \right) \quad (3.17)$$

Peck et al.'s relationship (1974):

$$C_N = 0.77 \log \left[ \frac{20}{\left( \frac{\sigma'_o}{p_a} \right)} \right] \quad \left( \text{for } \frac{\sigma'_o}{p_a} \geq 0.25 \right) \quad (3.18)$$

**Table 3.7** Variation of  $C_N$ 

$\frac{\sigma'_o}{p_a}$	$C_N$						Eqs. (3.19) and (3.20)
	Eq. (3.13)	Eq. (3.14)	Eq. (3.15)	Eq. (3.16)	Eq. (3.17)	Eq. (3.18)	
0.25	2.00	1.60	1.33	1.78	1.75	1.47	2.00
0.50	1.41	1.33	1.20	1.17	1.38	1.23	1.33
0.75	1.15	1.14	1.09	1.17	1.15	1.10	1.00
1.00	1.00	1.00	1.00	1.00	1.00	1.00	0.94
1.50	0.82	0.80	0.86	0.77	0.78	0.87	0.84
2.00	0.71	0.67	0.75	0.63	0.62	0.77	0.76
3.00	0.58	0.50	0.60	0.46	0.40	0.63	0.65
4.00	0.50	0.40	0.60	0.36	0.25	0.54	0.55

Bazaraa (1967):

$$C_N = \frac{4}{1 + 4\left(\frac{\sigma'_o}{p_a}\right)} \left( \text{for } \frac{\sigma'_o}{p_a} \leq 0.75 \right) \quad (3.19)$$

$$C_N = \frac{4}{3.25 + \left(\frac{\sigma'_o}{p_a}\right)} \left( \text{for } \frac{\sigma'_o}{p_a} > 0.75 \right) \quad (3.20)$$

Table 3.7 shows the comparison of  $C_N$  derived using various relationships cited above. It can be seen that the magnitude of the correction factor estimated by using any one of the relationships is approximately the same, considering the uncertainties involved in conducting the standard penetration tests. Hence, it is recommended that Eq. (3.13) may be used for all calculations.

### Example 3.1

Following are the results of a standard penetration test in sand. Determine the corrected standard penetration number,  $(N_1)_{60}$ , at various depths. Note that the water table was not observed within a depth of 10.5 m below the ground surface. Assume that the average unit weight of sand is  $17.3 \text{ kN/m}^3$ . Use Eq. (3.13).

Depth, $z$ (m)	$N_{60}$
1.5	8
3.0	7
4.5	12
6.0	14
7.5	13

**Solution**

From Eq. (3.13)

$$C_N = \left[ \frac{1}{\left( \frac{\sigma'_o}{p_a} \right)} \right]^{0.5}$$

$$p_a \approx 100 \text{ kN/m}^2$$

Now the following table can be prepared.

Depth, $z$ (m)	$\sigma'_o$ (kN/m <sup>2</sup> )	$C_N$	$N_{60}$	$(N_1)_{60}$
1.5	25.95	1.96	8	≈ 16
3.0	51.90	1.39	7	≈ 10
4.5	77.85	1.13	12	≈ 14
6.0	103.80	0.98	14	≈ 14
7.5	129.75	0.87	13	≈ 11

**Correlation between  $N_{60}$  and Relative Density of Granular Soil**

Kulhawy and Mayne (1990) modified an empirical relationship for relative density that was given by Marcuson and Bieganousky (1977), which can be expressed as

$$D_r(\%) = 12.2 + 0.75 \left[ 222N_{60} + 2311 - 711\text{OCR} - 779 \left( \frac{\sigma'_o}{p_a} \right) - 50C_u^2 \right]^{0.5} \quad (3.21)$$

where

$D_r$  = relative density

$\sigma'_o$  = effective overburden pressure

$C_u$  = uniformity coefficient of sand

$\text{OCR} = \frac{\text{preconsolidation pressure, } \sigma'_c}{\text{effective overburden pressure, } \sigma'_o}$

$p_a$  = atmospheric pressure

Meyerhof (1957) developed a correlation between  $D_r$  and  $N_{60}$  as

$$N_{60} = \left[ 17 + 24 \left( \frac{\sigma'_o}{p_a} \right) \right] D_r^2$$

or

$$D_r = \left\{ \frac{N_{60}}{\left[ 17 + 24 \left( \frac{\sigma'_o}{p_a} \right) \right]} \right\}^{0.5} \quad (3.22)$$

Equation (3.22) provides a reasonable estimate only for clean, medium fine sand.

Cubrinovski and Ishihara (1999) also proposed a correlation between  $N_{60}$  and the relative density of sand ( $D_r$ ) that can be expressed as

$$D_r(\%) = \left[ \frac{N_{60} \left( 0.23 + \frac{0.06}{D_{50}} \right)^{1.7}}{9} \left( \frac{1}{\frac{\sigma'_o}{p_a}} \right) \right]^{0.5} \quad (100) \quad (3.23)$$

where

$p_a$  = atmospheric pressure ( $\approx 100 \text{ kN/m}^2$ , or  $\approx 2000 \text{ lb/ft}^2$ )

$D_{50}$  = sieve size through which 50% of the soil will pass (mm)

Kulhawy and Mayne (1990) correlated the corrected standard penetration number and the relative density of sand in the form

$$D_r(\%) = \left[ \frac{(N_1)_{60}}{C_p C_A C_{OCR}} \right]^{0.5} \quad (100) \quad (3.24)$$

where

$$C_p = \text{grain-size correlations factor} = 60 + 25 \log D_{50} \quad (3.25)$$

$$C_A = \text{correlation factor for aging} = 1.2 + 0.05 \log \left( \frac{t}{100} \right) \quad (3.26)$$

$$C_{OCR} = \text{correlation factor for overconsolidation} = \text{OCR}^{0.18} \quad (3.27)$$

$D_{50}$  = diameter through which 50% soil will pass through (mm)

$t$  = age of soil since deposition (years)

OCR = overconsolidation ratio

Skempton (1986) suggested that, for sands with a relative density greater than 35%,

$$\frac{(N_1)_{60}}{D_r^2} \approx 60 \quad (3.28)$$

where  $(N_1)_{60}$  should be multiplied by 0.92 for coarse sands and 1.08 for fine sands.

## Correlation between Angle of Friction and Standard Penetration Number

The peak friction angle,  $\phi'$ , of granular soil has also been correlated with  $N_{60}$  or  $(N_1)_{60}$  by several investigators. Some of these correlations are as follows:

1. Peck, Hanson, and Thornburn (1974) give a correlation between  $N_{60}$  and  $\phi'$  in a graphical form, which can be approximated as (Wolff, 1989)

$$\phi'(\text{deg}) = 27.1 + 0.3N_{60} - 0.00054[N_{60}]^2 \quad (3.29)$$

2. Schmertmann (1975) provided the correlation between  $N_{60}$ ,  $\sigma'_o$ , and  $\phi'$ . Mathematically, the correlation can be approximated as (Kulhawy and Mayne, 1990)

$$\phi' = \tan^{-1} \left[ \frac{N_{60}}{12.2 + 20.3 \left( \frac{\sigma'_o}{p_a} \right)} \right]^{0.34} \quad (3.30)$$

where

$N_{60}$  = field standard penetration number

$\sigma'_o$  = effective overburden pressure

$p_a$  = atmospheric pressure in the same unit as  $\sigma'_o$

$\phi'$  = soil friction angle

3. Hatanaka and Uchida (1996) provided a simple correlation between  $\phi'$  and  $(N_1)_{60}$  that can be expressed as

$$\phi' = \sqrt{20(N_1)_{60}} + 20 \quad (3.31)$$

The following qualifications should be noted when standard penetration resistance values are used in the preceding correlations to estimate soil parameters:

1. The equations are approximate.
2. Because the soil is not homogeneous, the values of  $N_{60}$  obtained from a given borehole vary widely.
3. In soil deposits that contain large boulders and gravel, standard penetration numbers may be erratic and unreliable.

Although approximate, with correct interpretation the standard penetration test provides a good evaluation of soil properties. The primary sources of error in standard penetration tests are inadequate cleaning of the borehole, careless measurement of the blow count, eccentric hammer strikes on the drill rod, and inadequate maintenance of water head in the borehole. Figure 3.17 shows approximate borderline values for  $D_r$ ,  $N_{60}$ ,  $(N_1)_{60}$ ,  $\phi'$  and  $\frac{(N_1)_{60}}{D_r^2}$ .

## Correlation between Modulus of Elasticity and Standard Penetration Number

The modulus of elasticity of granular soils ( $E_s$ ) is an important parameter in estimating the elastic settlement of foundations. A first-order estimation for  $E_s$  was given by Kulhawy and Mayne (1990) as

$$\frac{E_s}{p_a} = \alpha N_{60} \quad (3.32)$$

where

$p_a$  = atmospheric pressure (same unit as  $E_s$ )

$$\alpha = \begin{cases} 5 & \text{for sands with fines} \\ 10 & \text{for clean normally consolidated sand} \\ 15 & \text{for clean overconsolidated sand} \end{cases}$$

	*Very loose	Loose	Medium dense	Dense	Very dense	
# $D_r$ (%)	0	15	35	65	85	100
* $N_{60}$		4	10	30	50	
## $(N_1)_{60}$		3	8	25	42	
** $\phi'$ (deg)		28	30	36	41	
## $(N_1)_{60}/D_r^2$			65	59	58	

\*Terzaghi & Peck (1948); #Gibb & Holtz (1957); ##Skempton (1986); \*\*Peck et al. (1974)

**Figure 3.17** Approximate borderline values for  $D_r$ ,  $N_{60}$ ,  $(N_1)_{60}$ , and  $\frac{(N_1)_{60}}{D_r^2}$  (After Sivakugan and Das, 2010. With permission from J. Ross Publishing Co. Fort Lauderdale, FL)

### Example 3.2

Refer to Example 3.1. Using Eq. (3.30), estimate the average soil friction angle,  $\phi'$ . From  $z = 0$  to  $z = 7.5$  m.

#### Solution

From Eq. (3.30)

$$\phi' = \tan^{-1} \left[ \frac{N_{60}}{12.2 + 20.3 \left( \frac{\sigma'_a}{p_a} \right)} \right]^{0.34}$$

$$p_a = 100 \text{ kN/m}^2$$

Now the following table can be prepared.

Depth, $z$ (m)	$\sigma'_o$ (kN/m <sup>2</sup> )	$N_{60}$	$\phi'$ (deg) [Eq. (3.30)]
1.5	25.95	8	37.5
3.0	51.9	7	33.8
4.5	77.85	12	36.9
6.0	103.8	14	36.7
7.5	129.75	13	34.6

Average  $\phi' \approx 36^\circ$

## 3.16 Sampling with a Scraper Bucket

When the soil deposits are sand mixed with pebbles, obtaining samples by split spoon with a spring core catcher may not be possible because the pebbles may prevent the springs from closing. In such cases, a scraper bucket may be used to obtain disturbed

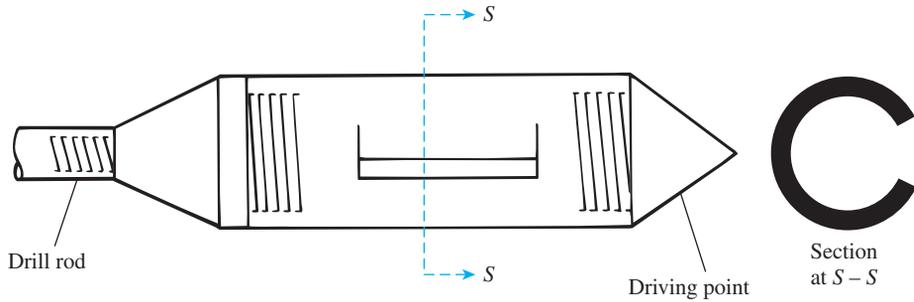


Figure 3.18 Scraper bucket

representative samples (Figure 3.18). The scraper bucket has a driving point and can be attached to a drilling rod. The sampler is driven down into the soil and rotated, and the scrapings from the side fall into the bucket.

### 3.17 Sampling with a Thin-Walled Tube

Thin-walled tubes are sometimes referred to as *Shelby tubes*. They are made of seamless steel and are frequently used to obtain undisturbed clayey soils. The most common thin-walled tube samplers have outside diameters of 50.8 mm (2 in.) and 76.2 mm (3 in.). The bottom end of the tube is sharpened. The tubes can be attached to drill rods (Figure 3.19). The drill rod with the sampler attached is lowered to the bottom of the borehole, and the sampler is pushed into the soil. The soil sample inside the tube is then pulled out. The two ends are sealed, and the sampler is sent to the laboratory for testing. Figure 3.20 shows the sequence of sampling with a thin-walled tube in the field.

Samples obtained in this manner may be used for consolidation or shear tests. A thin-walled tube with a 50.8-mm (2-in.) outside diameter has an inside diameter of about 47.63 mm ( $1\frac{7}{8}$  in.). The area ratio is

$$A_R(\%) = \frac{D_o^2 - D_i^2}{D_i^2}(100) = \frac{(50.8)^2 - (47.63)^2}{(47.63)^2}(100) = 13.75\%$$

Increasing the diameters of samples increases the cost of obtaining them.

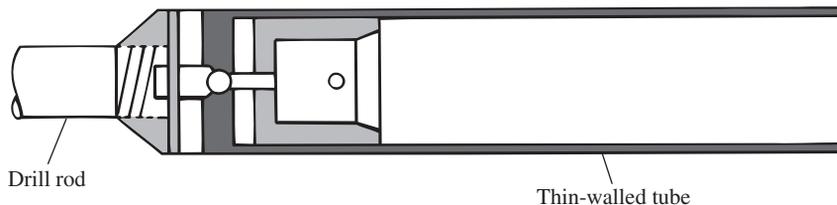


Figure 3.19 Thin-walled tube



(a)



(b)

**Figure 3.20** Sampling with a thin-walled tube: (a) tube being attached to drill rod; (b) tube sampler pushed into soil (Courtesy of Khaled Sobhan, Florida Atlantic University, Boca Raton, Florida)



(c)


**Figure 3.20** (continued) (c) recovery of soil sample (Courtesy of Khaled Sobhan, Florida Atlantic University, Boca Raton, Florida)

### 3.18 Sampling with a Piston Sampler

When undisturbed soil samples are very soft or larger than 76.2 mm (3 in.) in diameter, they tend to fall out of the sampler. Piston samplers are particularly useful under such conditions. There are several types of piston sampler; however, the sampler proposed by Osterberg (1952) is the most useful (see Figures 3.21a and 3.21b). It consists of a thin-walled tube with a piston. Initially, the piston closes the end of the tube. The sampler is lowered to the bottom of the borehole (Figure 3.21a), and the tube is pushed into the soil hydraulically, past the piston. Then the pressure is released through a hole in the piston rod (Figure 3.21b). To a large extent, the presence of the piston prevents distortion in the sample by not letting the soil squeeze into the sampling tube very fast and by not admitting excess soil. Consequently, samples obtained in this manner are less disturbed than those obtained by Shelby tubes.

### 3.19 Observation of Water Tables


The presence of a water table near a foundation significantly affects the foundation's load-bearing capacity and settlement, among other things. The water level will change seasonally. In many cases, establishing the highest and lowest possible levels of water during the life of a project may become necessary.

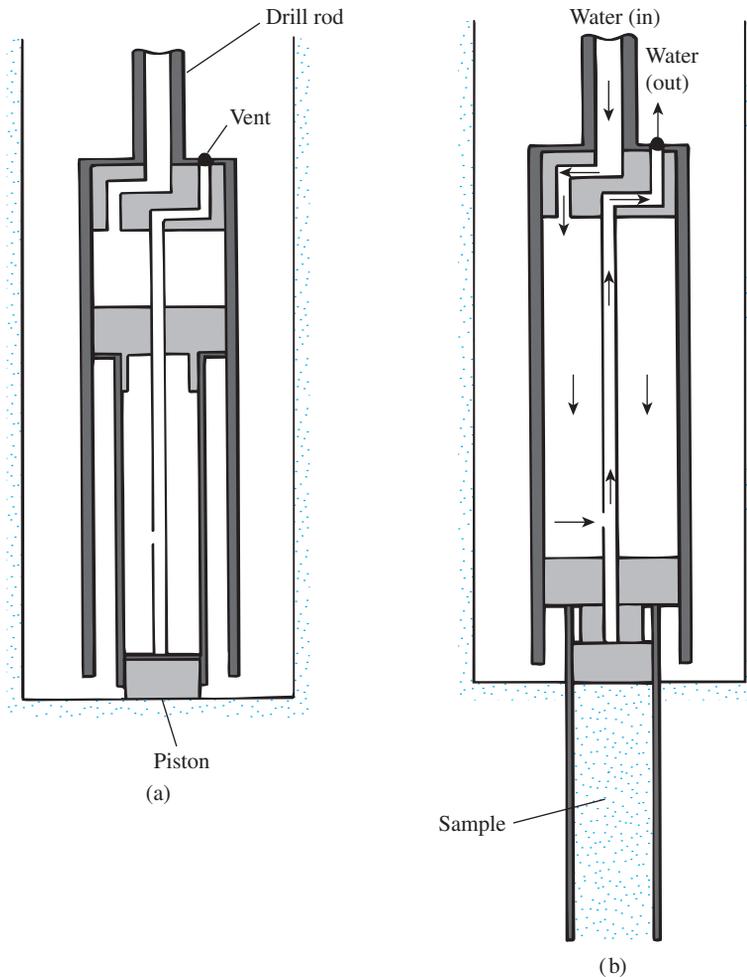

**Figure 3.21** Piston sampler: (a) sampler at the bottom of borehole; (b) tube pushed into the soil hydraulically

If water is encountered in a borehole during a field exploration, that fact should be recorded. In soils with high hydraulic conductivity, the level of water in a borehole will stabilize about 24 hours after completion of the boring. The depth of the water table can then be recorded by lowering a chain or tape into the borehole.

In highly impermeable layers, the water level in a borehole may not stabilize for several weeks. In such cases, if accurate water-level measurements are required, a *piezometer* can be used. A piezometer basically consists of a porous stone or a perforated pipe with a plastic standpipe attached to it. Figure 3.22 shows the general placement of a piezometer in a borehole. This procedure will allow periodic checking until the water level stabilizes.

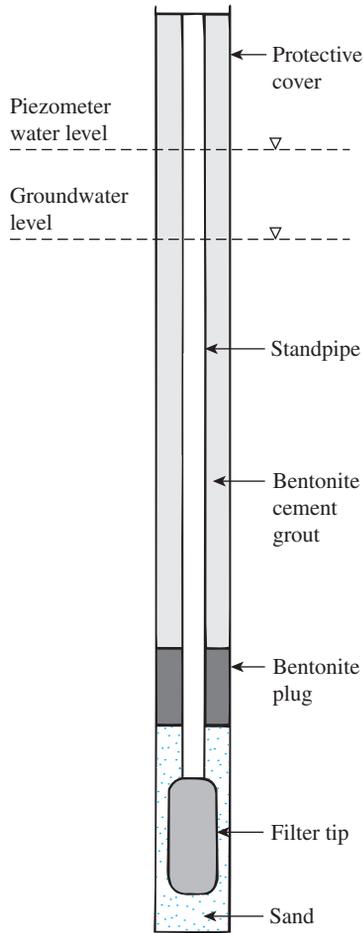

**Figure 3.22** Casagrande-type piezometer (Courtesy of N. Sivakugan, James Cook University, Australia.)


### 3.20 Vane Shear Test

The *vane shear test* (ASTM D-2573) may be used during the drilling operation to determine the *in situ* undrained shear strength ( $c_u$ ) of clay soils—particularly soft clays. The vane shear apparatus consists of four blades on the end of a rod, as shown in Figure 3.23. The height,  $H$ , of the vane is twice the diameter,  $D$ . The vane can be either rectangular or tapered (see Figure 3.23). The dimensions of vanes used in the field are given in Table 3.8. The vanes of the apparatus are pushed into the soil at the bottom of a borehole without disturbing the soil appreciably. Torque is applied at the top of the rod to rotate the vanes at a standard rate of  $0.1^\circ/\text{sec}$ . This rotation will induce failure in a soil of cylindrical shape surrounding the vanes. The maximum torque,  $T$ , applied to cause failure is measured. Note that

$$T = f(c_u, H, \text{ and } D) \tag{3.33}$$

or

$$c_u = \frac{T}{K} \tag{3.34}$$

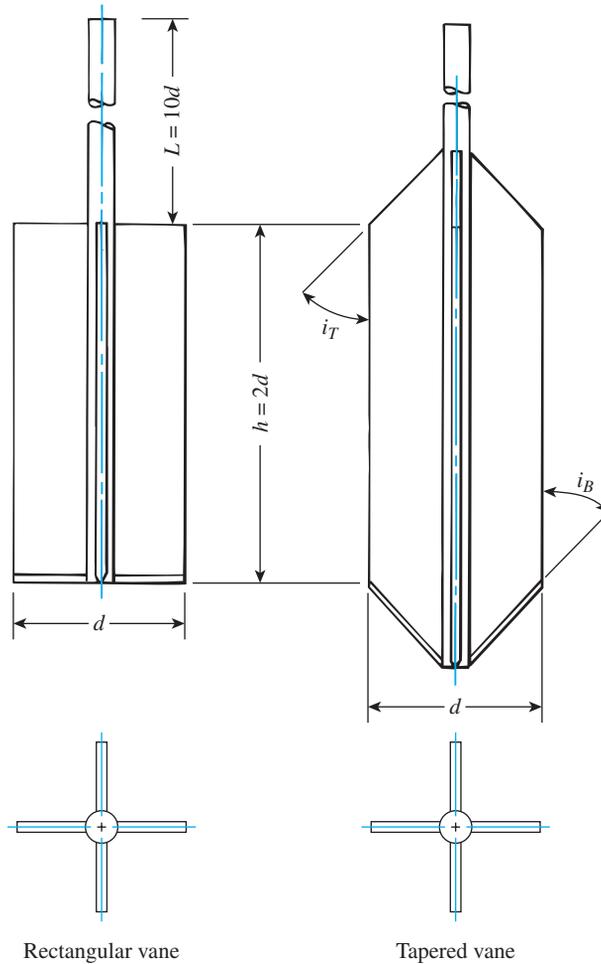

**Figure 3.23** Geometry of field vane (After ASTM, 2014)  
(Based on *Annual Book of ASTM Standards, Vol. 04.08.*)

**Table 3.8** ASTM Recommended Dimensions of Field Vanes<sup>a</sup> (Based on *Annual Book of ASTM Standards, Vol. 04.08.*)

Casing size	Diameter, $d$ mm (in.)	Height, $h$ mm (in.)	Thickness of blade mm (in.)	Diameter of rod mm (in.)
AX	38.1 ( $1\frac{1}{2}$ )	76.2 (3)	1.6 ( $\frac{1}{16}$ )	12.7 ( $\frac{1}{2}$ )
BX	50.8 (2)	101.6 (4)	1.6 ( $\frac{1}{16}$ )	12.7 ( $\frac{1}{2}$ )
NX	63.5 ( $2\frac{1}{2}$ )	127.0 (5)	3.2 ( $\frac{1}{8}$ )	12.7 ( $\frac{1}{2}$ )
101.6 mm (4 in.) <sup>b</sup>	92.1 ( $3\frac{5}{8}$ )	184.1 ( $7\frac{1}{4}$ )	3.2 ( $\frac{1}{8}$ )	12.7 ( $\frac{1}{2}$ )

<sup>a</sup>The selection of a vane size is directly related to the consistency of the soil being tested; that is, the softer the soil, the larger the vane diameter should be.

<sup>b</sup>Inside diameter.

According to ASTM (2014), for rectangular vanes,

$$K = \frac{\pi d^2}{2} \left( h + \frac{d}{3} \right) \quad (3.35)$$

If  $h/d = 2$ ,

$$K = \frac{7\pi d^3}{6} \quad (3.36)$$

Thus,

$$c_u = \frac{6T}{7\pi d^3} \quad (3.37)$$

For tapered vanes,

$$K = \frac{\pi d^2}{12} \left( \frac{d}{\cos i_T} + \frac{d}{\cos i_B} + 6h \right) \quad (3.38)$$

The angles  $i_T$  and  $i_B$  are defined in Figure 3.23.

Field vane shear tests are moderately rapid and economical and are used extensively in field soil-exploration programs. The test gives good results in soft and medium-stiff clays and gives excellent results in determining the properties of sensitive clays.

Sources of significant error in the field vane shear test are poor calibration of torque measurement and damaged vanes. Other errors may be introduced if the rate of rotation of the vane is not properly controlled.

For actual design purposes, the undrained shear strength values obtained from field vane shear tests [ $c_{u(VST)}$ ] are too high, and it is recommended that they be corrected according to the equation

$$c_{u(\text{corrected})} = \lambda c_{u(VST)} \quad (3.39)$$

where  $\lambda$  = correction factor.

Several correlations have been given previously for the correction factor  $\lambda$ . The most commonly used correlation for  $\lambda$  is that given by Bjerrum (1972), which can be expressed as

$$\lambda = 1.7 - 0.54 \log [\text{PI}(\%)] \quad (3.40a)$$

Morris and Williams (1994) provided the following correlations:

$$\lambda = 1.18e^{-0.08(\text{PI})} + 0.57 \quad (\text{for PI} > 5) \quad (3.40b)$$

$$\lambda = 7.01e^{-0.08(\text{LL})} + 0.57 \quad (\text{where LL is in } \%) \quad (3.40c)$$

The field vane shear strength can be correlated with the preconsolidation pressure and the overconsolidation ratio of the clay. Using 343 data points, Mayne and

Mitchell (1988) derived the following empirical relationship for estimating the preconsolidation pressure of a natural clay deposit:

$$\sigma'_c = 7.04[c_{u(\text{field})}]^{0.83} \quad (3.41)$$

Here,

$\sigma'_c$  = preconsolidation pressure (kN/m<sup>2</sup>)

$c_{u(\text{field})}$  = field vane shear strength (kN/m<sup>2</sup>)

The overconsolidation ratio, OCR, also can be correlated to  $c_{u(\text{field})}$  according to the equation

$$\text{OCR} = \beta \frac{c_{u(\text{field})}}{\sigma'_o} \quad (3.42)$$

where  $\sigma'_o$  = effective overburden pressure.

The magnitudes of  $\beta$  developed by various investigators are given below.

- Mayne and Mitchell (1988):

$$\beta = 22[\text{PI}(\%)]^{-0.48} \quad (3.43)$$

- Hansbo (1957):

$$\beta = \frac{222}{w(\%)} \quad (3.44)$$

- Larsson (1980):

$$\beta = \frac{1}{0.08 + 0.0055(\text{PI})} \quad (3.45)$$

### Example 3.3

Refer to Figure 3.23. Vane shear tests (tapered vane) were conducted in the clay layer. The vane dimensions were 63.5 mm ( $d$ )  $\times$  127 mm ( $h$ ), and  $i_T = i_B = 45^\circ$ . For a test at a certain depth in the clay, the torque required to cause failure was 20 N  $\cdot$  m. For the clay, liquid limit was 50 and plastic limit was 18. Estimate the undrained cohesion of the clay for use in the design by using each equation:

- Bjerrum's  $\lambda$  relationship (Eq. 3.40a)
- Morris and Williams'  $\lambda$  and PI relationship (Eq. 3.40b)

- c. Morris and Williams'  $\lambda$  and LL relationship (Eq. 3.40c)  
 d. Estimate the preconsolidation pressure of clay,  $\sigma'_c$ .

### Solution

Part a

Given:  $h/d = 127/63.5 = 2$

From Eq. (3.38),

$$\begin{aligned} K &= \frac{\pi d^2}{12} \left( \frac{d}{\cos i_T} + \frac{d}{\cos i_B} + 6h \right) \\ &= \frac{\pi(0.0635)^2}{12} \left[ \frac{0.0635}{\cos 45} + \frac{0.0635}{\cos 45} + 6(0.127) \right] \\ &= (0.001056)(0.0898 + 0.0898 + 0.762) \\ &= 0.000994 \end{aligned}$$

From Eq. (3.34),

$$\begin{aligned} c_{u(\text{VST})} &= \frac{T}{K} = \frac{20}{0.000994} \\ &= 20,121 \text{ N/m}^2 \approx 20.12 \text{ kN/m}^2 \end{aligned}$$

From Eqs. (3.40a) and (3.39),

$$\begin{aligned} c_{u(\text{corrected})} &= [1.7 - 0.54 \log(\text{PI}\%)]c_{u(\text{VST})} \\ &= [1.7 - 0.54 \log(50 - 18)](20.12) \\ &= \mathbf{17.85 \text{ kN/m}^2} \end{aligned}$$

Part b

From Eqs. (3.40b) and (3.39),

$$\begin{aligned} c_{u(\text{corrected})} &= [1.18e^{-0.08(\text{PI})} + 0.57]c_{u(\text{VST})} \\ &= [1.18e^{-0.08(50-18)} + 0.57](20.12) \\ &= \mathbf{13.3 \text{ kN/m}^2} \end{aligned}$$

Part c

From Eqs. (3.40c) and (3.39),

$$\begin{aligned} c_{u(\text{corrected})} &= [7.01e^{-0.08(\text{LL})} + 0.57]c_{u(\text{VST})} \\ &= [7.01e^{-0.08(50)} + 0.57](20.12) \\ &= \mathbf{14.05 \text{ kN/m}^2} \end{aligned}$$

Part d

From Eq. (3.41)

$$\sigma'_c = 7.04[c_{u(\text{VST})}]^{0.83} = 7.04(20.12)^{0.83} = \mathbf{85 \text{ kN/m}^2}$$


## 3.21 Cone Penetration Test

The cone penetration test (CPT), originally known as the Dutch cone penetration test, is a versatile sounding method that can be used to determine the materials in a soil profile and estimate their engineering properties. The test is also called the *static penetration test*, and no boreholes are necessary to perform it. In the original version, a 60° cone with a base area of 10 cm<sup>2</sup> (1.55 in.<sup>2</sup>) was pushed into the ground at a steady rate of about 20 mm/sec (≈0.8 in./sec), and the resistance to penetration (called the point resistance) was measured.


The cone penetrometers in use at present measure (a) the *cone resistance* ( $q_c$ ) to penetration developed by the cone, which is equal to the vertical force applied to the cone, divided by its horizontally projected area; and (b) the *frictional resistance* ( $f_c$ ), which is the resistance measured by a sleeve located above the cone with the local soil surrounding it. The frictional resistance is equal to the vertical force applied to the sleeve, divided by its surface area—actually, the sum of friction and adhesion.

Generally, two types of penetrometers are used to measure  $q_c$  and  $f_c$ :

1. *Mechanical friction-cone penetrometer* (Figure 3.24). The tip of this penetrometer is connected to an inner set of rods. The tip is first advanced about 40 mm, giving the cone resistance. With further thrusting, the tip engages the friction sleeve. As the inner

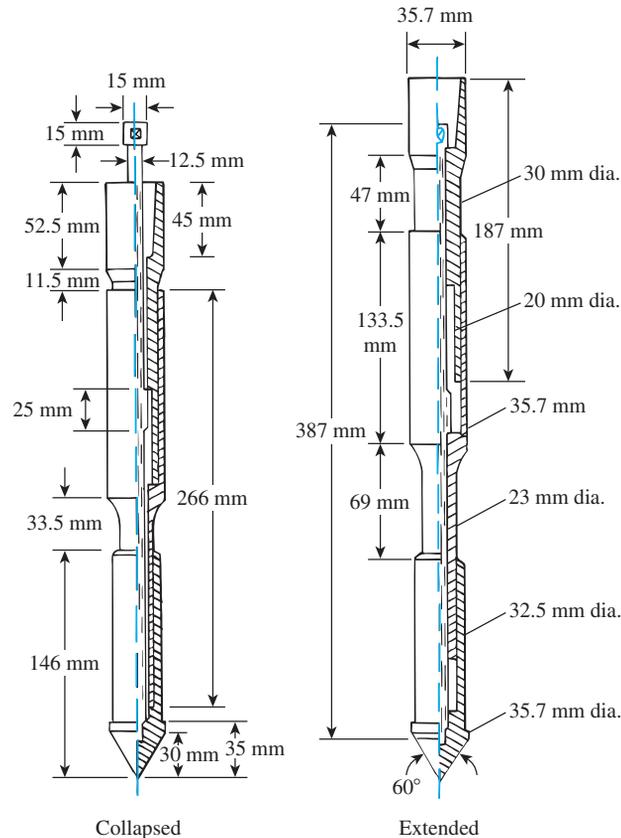

**Figure 3.24** Mechanical friction-cone penetrometer (After ASTM, 2001) (Based on *Annual Book of ASTM Standards, Vol. 04.08.*)

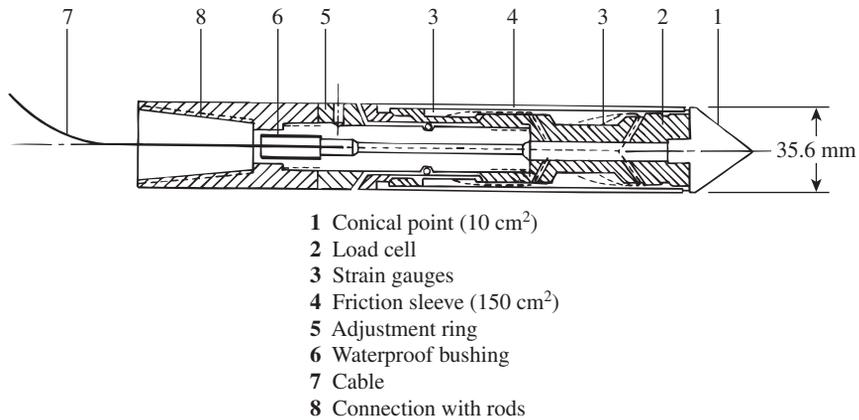

**Figure 3.25** Electric friction-cone penetrometer (After ASTM, 2001) (Based on *Annual Book of ASTM Standards, Vol. 04.08.*)

rod advances, the rod force is equal to the sum of the vertical force on the cone and sleeve. Subtracting the force on the cone gives the side resistance.

2. *Electric friction-cone penetrometer* (Figure 3.25). The tip of this penetrometer is attached to a string of steel rods. The tip is pushed into the ground at the rate of 20 mm/sec. Wires from the transducers are threaded through the center of the rods and continuously measure the cone and side resistances. Figure 3.26 shows a photograph of an electric friction-cone penetrometer.



**Figure 3.26** Photograph of an electric friction-cone penetrometer (Courtesy of Sanjeev Kumar, Southern Illinois University, Carbondale, Illinois)

Figure 3.27 shows the sequence of a cone penetration test in the field. A truck-mounted CPT rig is shown in Figure 3.27a. A hydraulic ram located inside the truck pushes the cone into the ground. Figure 3.27b shows the cone penetrometer in the truck being put in the proper location. Figure 3.27c shows the progress of the CPT. Figure 3.28 shows the results of penetrometer test in a soil profile with friction measurement by an electric friction-cone penetrometer.



(a)



(b)

**Figure 3.27** Cone penetration test in field: (a) mounted CPT rig; (b) cone penetrometer being set in proper location (Courtesy of Sanjeev Kumar, Southern Illinois University, Carbondale, Illinois)



(c)

**Figure 3.27** (continued) (c) test in progress (Courtesy of Sanjeev Kumar, Southern Illinois University, Carbondale, Illinois)

Several correlations that are useful in estimating the properties of soils encountered during an exploration program have been developed for the point resistance ( $q_c$ ) and the friction ratio ( $F_r$ ) obtained from the cone penetration tests. The friction ratio is defined as

$$F_r = \frac{\text{frictional resistance}}{\text{cone resistance}} = \frac{f_c}{q_c} \quad (3.46)$$

In a more recent study on several soils in Greece, Anagnostopoulos et al. (2003) expressed  $F_r$  as


$$F_r(\%) = 1.45 - 1.36 \log D_{50} \text{ (electric cone)} \quad (3.47)$$

and

$$F_r(\%) = 0.7811 - 1.611 \log D_{50} \text{ (mechanical cone)} \quad (3.48)$$

where  $D_{50}$  = size through which 50% of soil will pass through (mm).

The  $D_{50}$  for soils based on which Eqs. (3.47) and (3.48) have been developed ranged from 0.001 mm to about 10 mm.

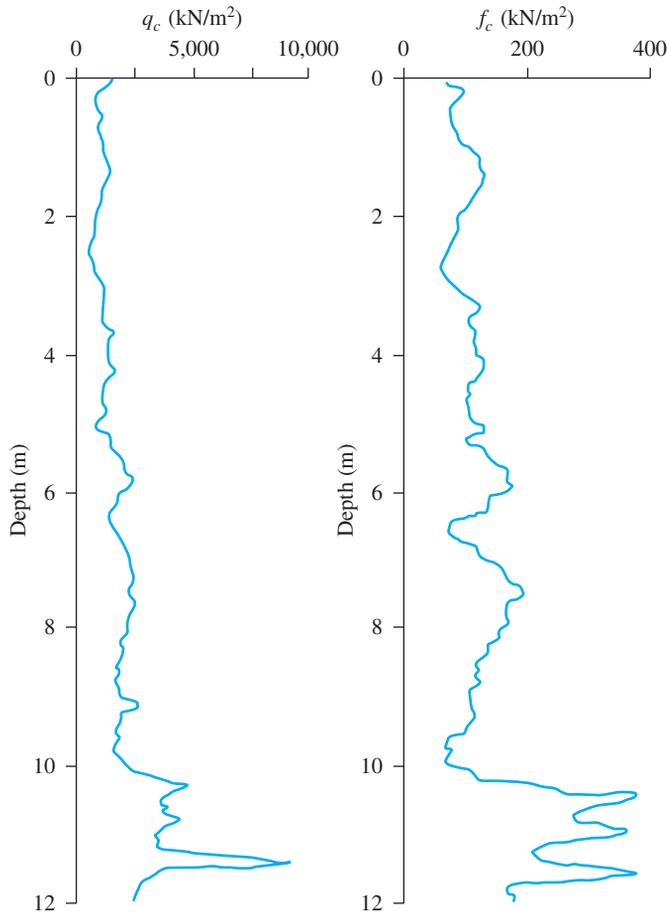


**Figure 3.28** Cone penetrometer test with friction measurement

As in the case of standard penetration tests, several correlations have been developed between  $q_c$  and other soil properties. Some of these correlations are presented next.

### Correlation between Relative Density ( $D_r$ ) and $q_c$ for Sand

Lancellotta (1983) and Jamiolkowski et al. (1985) showed that the relative density of *normally consolidated sand*,  $D_r$ , and  $q_c$  can be correlated according to the formula (Figure 3.29).

$$D_r(\%) = A + B \log_{10} \left( \frac{q_c}{\sqrt{\sigma'_o}} \right) \quad (3.49)$$

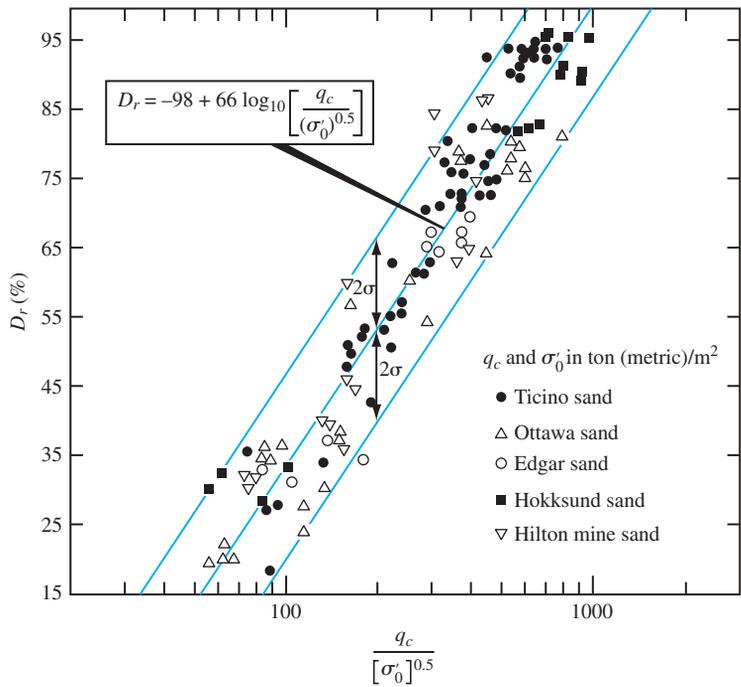

**Figure 3.29** Relationship between  $D_r$  and  $q_c$  (Based on Lancellotta, 1983, and Jamiolski et al., 1985)

The preceding relationship can be rewritten as (Kulhawy and Mayne, 1990)

$$D_r(\%) = 68 \left[ \log \left( \frac{q_c}{\sqrt{p_a \cdot \sigma'_o}} \right) - 1 \right] \quad (3.50)$$

where

$p_a$  = atmospheric pressure ( $\approx 100 \text{ kN/m}^2$ )

$\sigma'_o$  = vertical effective stress

Kulhawy and Mayne (1990) proposed the following relationship to correlate  $D_r$ ,  $q_c$ , and the vertical effective stress  $\sigma'_o$ :

$$D_r = \sqrt{\left[ \frac{1}{305 Q_c \text{OCR}^{1.8}} \right] \left[ \frac{q_c}{\left( \frac{\sigma'_o}{p_a} \right)^{0.5}} \right]} \quad (3.51)$$

In this equation,

OCR = overconsolidation ratio

$p_a$  = atmospheric pressure

$Q_c$  = compressibility factor

The recommended values of  $Q_c$  are as follows:

Highly compressible sand = 0.91

Moderately compressible sand = 1.0

Low compressible sand = 1.09

### Correlation between $q_c$ and Drained Friction Angle ( $\phi'$ ) for Sand

On the basis of experimental results, Robertson and Campanella (1983) suggested the variation of  $D_r$ ,  $\sigma'_o$ , and  $\phi'$  for normally consolidated quartz sand. This relationship can be expressed as (Kulhawy and Mayne, 1990)

$$\phi' = \tan^{-1} \left[ 0.1 + 0.38 \log \left( \frac{q_c}{\sigma'_o} \right) \right] \quad (3.52)$$

Based on the cone penetration tests on the soils in the Venice Lagoon (Italy), Ricceri et al. (2002) proposed a similar relationship for soil with classifications of ML and SP-SM as

$$\phi' = \tan^{-1} \left[ 0.38 + 0.27 \log \left( \frac{q_c}{\sigma'_o} \right) \right] \quad (3.53)$$

In a more recent study, Lee et al. (2004) developed a correlation between  $\phi'$ ,  $q_c$ , and the horizontal effective stress ( $\sigma'_h$ ) in the form

$$\phi' = 15.575 \left( \frac{q_c}{\sigma'_h} \right)^{0.1714} \quad (3.54)$$

### Correlation between $q_c$ and $N_{60}$

For granular soils, several correlations have been proposed to correlate  $q_c$  and  $N_{60}$  ( $N_{60}$  = standard penetration resistance) against the mean grain size ( $D_{50}$  in mm). These correlations are of the form,

$$\left( \frac{q_c}{p_a} \right) = c D_{50}^a \quad (3.55)$$

Table 3.9 shows the values of  $c$  and  $a$  as developed from various studies.

### Correlations of Soil Types

Robertson and Campanella (1986) provided the correlations shown in Figure 3.30 between  $q_c$  and the friction ratio [Eq. (3.46)] to identify various types of soil encountered in the field.


**Table 3.9** Values of  $c$  and  $a$  [Eq. (3.55)]

Investigator		$c$	$a$
Burland and Burbidge (1985)	Upper limit	15.49	0.33
	Lower limit	4.9	0.32
Robertson and Campanella (1983)	Upper limit	10	0.26
	Lower limit	5.75	0.31
Kulhawy and Mayne (1990)		5.44	0.26
Anagnostopoulos et al. (2003)		7.64	0.26

### Correlations for Undrained Shear Strength ( $c_u$ ), Preconsolidation Pressure ( $\sigma'_c$ ), and Overconsolidation Ratio (OCR) for Clays

The undrained shear strength,  $c_u$ , can be expressed as

$$c_u = \frac{q_c - \sigma_o}{N_K} \tag{3.56}$$

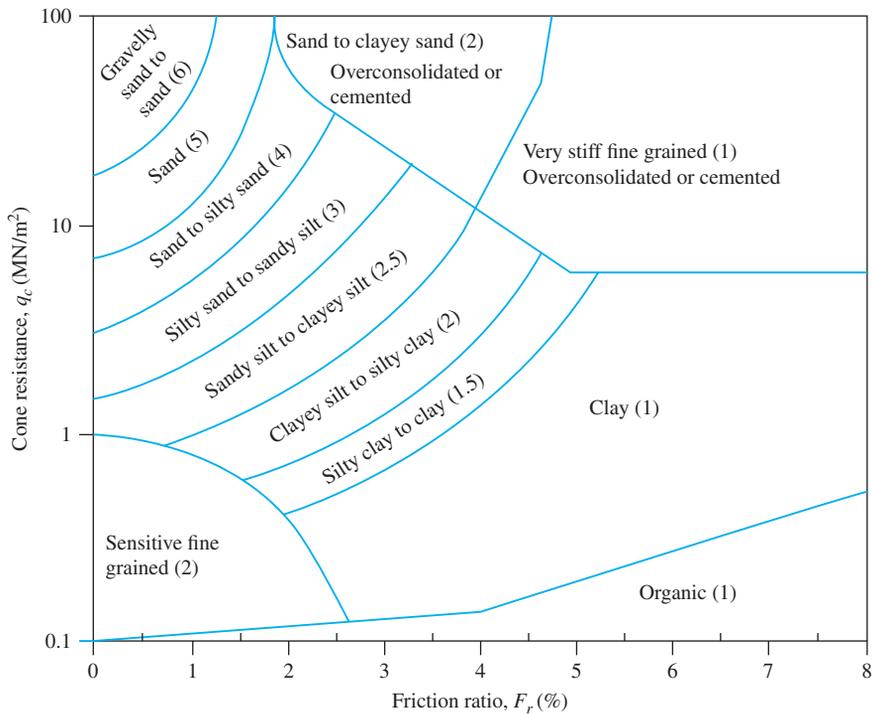

Note:  $(q_c/p_a)/N_{60}$  values within parentheses

**Figure 3.30** Robertson and Campanella’s correlation (1986) between  $q_c$ ,  $F_r$ , and the type of soil (Based on Robertson and Campanella, 1986)

where

$\sigma_o$  = total vertical stress  
 $N_K$  = bearing capacity factor

The bearing capacity factor,  $N_K$ , may vary from 11 to 19 for normally consolidated clays and may approach 25 for overconsolidated clay. According to Mayne and Kemper (1988)

$$N_K = 15 \text{ (for electric cone)}$$

and

$$N_K = 20 \text{ (for mechanical cone)}$$

Based on tests in Greece, Anagnostopoulos et al. (2003) determined

$$N_K = 17.2 \text{ (for electric cone)}$$

and

$$N_K = 18.9 \text{ (for mechanical cone)}$$

These field tests also showed that

$$c_u = \frac{f_c}{1.26} \text{ (for mechanical cones)} \quad (3.57)$$

and

$$c_u = f_c \text{ (for electrical cones)} \quad (3.58)$$

Mayne and Kemper (1988) provided correlations for preconsolidation pressure ( $\sigma'_c$ ) and overconsolidation ratio (OCR) as

$$\begin{array}{ccc} \sigma'_c = 0.243(q_c)^{0.96} & & (3.59) \\ \uparrow \quad \quad \quad \uparrow & & \\ \text{MN/m}^2 \quad \quad \text{MN/m}^2 & & \end{array}$$

and

$$\text{OCR} = 0.37 \left( \frac{q_c - \sigma_o}{\sigma'_o} \right)^{1.01} \quad (3.60)$$

where  $\sigma_o$  and  $\sigma'_o$  = total and effective stress, respectively.

### Example 3.4

At a depth of 12.5 m in a *moderately compressible sand deposit*, a cone penetration test showed  $q_c = 20 \text{ MN/m}^2$ . For the sand given:  $\gamma = 16 \text{ kN/m}^3$  and  $\text{OCR} = 2$ . Estimate the relative density of the sand. Use Eq. (3.51).

#### Solution

Vertical effective stress  $\sigma'_o = (12.5)(16) = 200 \text{ kN/m}^2$ .

$Q_c$  (moderately compressible sand)  $\approx 1$ .

From Eq. (3.51),

$$\begin{aligned}
 D_r &= \sqrt{\frac{1}{305(\text{OCR})^{1.8}} \left[ \frac{\left(\frac{q_c}{p_a}\right)}{\left(\frac{\sigma'_o}{p_a}\right)^{0.5}} \right]} \\
 &= \sqrt{\frac{1}{(305)(2)^{1.8}} \left[ \frac{\left(\frac{20,000 \text{ kN/m}^2}{100 \text{ kN/m}^2}\right)}{\left(\frac{200 \text{ kN/m}^2}{100 \text{ kN/m}^2}\right)^{0.5}} \right]} \\
 &= \sqrt{(0.00094)(141.41)} = 0.365
 \end{aligned}$$

Hence,


$$D_r = 36.5\%$$

## 3.22 Pressuremeter Test (PMT)

The pressuremeter test is an *in situ* test conducted in a borehole. It was originally developed by Menard (1956) to measure the strength and deformability of soil. It has also been adopted by ASTM as Test Designation 4719. The Menard-type PMT consists essentially of a probe with three cells. The top and bottom ones are *guard cells* and the middle one is the *measuring cell*, as shown schematically in Figure 3.31a. The test is conducted in a prebored hole with a diameter that is between 1.03 and 1.2 times the nominal diameter of the probe. The probe that is most commonly used has a diameter of 58 mm and a length of 420 mm. The probe cells can be expanded by either liquid or gas. The guard cells are expanded to reduce the end-condition effect on the measuring cell, which has a volume ( $V_o$ ) of 535 cm<sup>3</sup>. Following are the dimensions for the probe diameter and the diameter of the borehole, as recommended by ASTM:

Probe diameter (mm)	Borehole diameter	
	Nominal (mm)	Maximum (mm)
44	45	53
58	60	70
74	76	89

In order to conduct a test, the measuring cell volume,  $V_o$ , is measured and the probe is inserted into the borehole. Pressure is applied in increments and the new volume of the cell is measured. The process is continued until the soil fails or until the pressure limit of the device is reached. The soil is considered to have failed when the total volume of the expanded cavity ( $V$ ) is about twice the volume of the original cavity. After the completion of the test, the probe is deflated and advanced for testing at another depth.

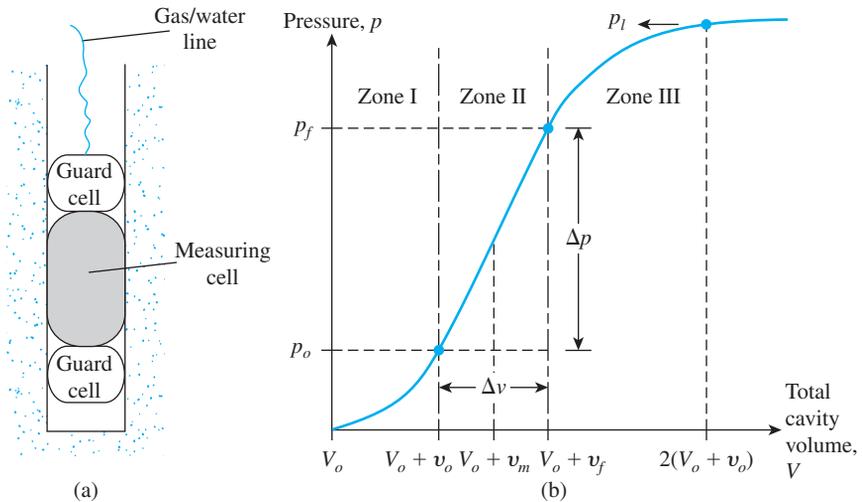

**Figure 3.31** (a) Pressuremeter; (b) plot of pressure versus total cavity volume

The results of the pressuremeter test are expressed in the graphical form of pressure versus volume, as shown in Figure 3.31b. In the figure, Zone I represents the reloading portion during which the soil around the borehole is pushed back into the initial state (i.e., the state it was in before drilling). The pressure  $p_o$  represents the *in situ* total horizontal stress. Zone II represents a pseudoelastic zone in which the cell volume versus cell pressure is practically linear. The pressure  $p_f$  represents the creep, or yield, pressure. The zone marked III is the plastic zone. The pressure  $p_l$  represents the limit pressure. Figure 3.32 shows some photographs for a pressuremeter test in the field.

The pressuremeter modulus,  $E_p$ , of the soil is determined with the use of the theory of expansion of an infinitely thick cylinder. Thus,

$$E_p = 2(1 + \mu_s)(V_o + v_m)\left(\frac{\Delta p}{\Delta v}\right) \quad (3.61)$$

where

$$v_m = \frac{v_o + v_f}{2}$$


$$\Delta p = p_f - p_o$$

$$\Delta v = v_f - v_o$$

$\mu_s$  = Poisson's ratio (which may be assumed to be 0.33)

The limit pressure  $p_l$  is usually obtained by extrapolation and not by direct measurement.


In order to overcome the difficulty of preparing the borehole to the proper size, self-boring pressuremeters (SBPMTs) have also been developed. The details concerning SBPMTs can be found in the work of Baguelin et al. (1978).

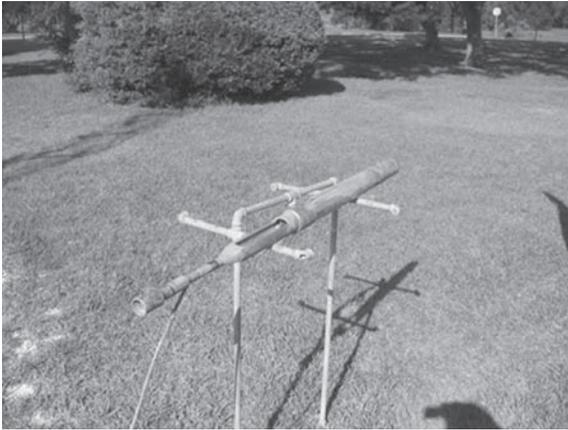

(a)



(c)

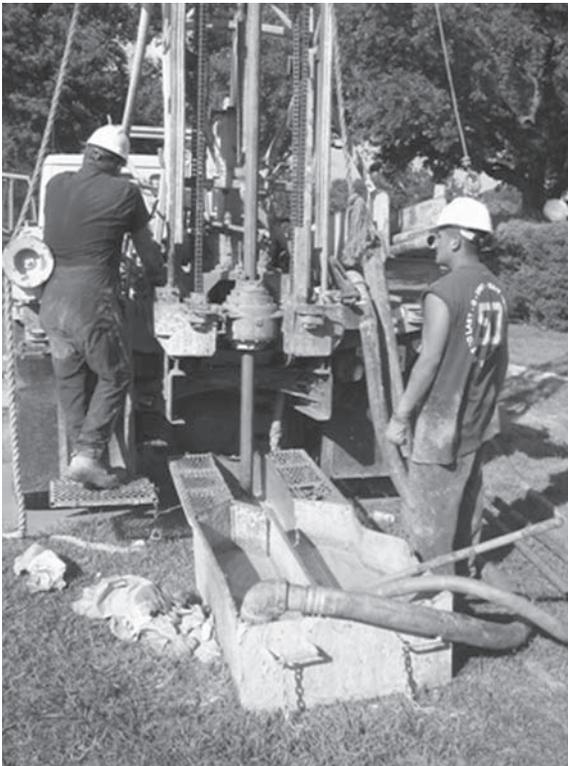

(b)



(d)

**Figure 3.32** Pressuremeter test in the field: (a) the pressuremeter probe; (b) drilling the bore hole by wet rotary method; (c) pressuremeter control unit with probe in the background; (d) getting ready to insert the pressuremeter probe into the bore hole (Courtesy of Jean-Louis Briaud, Texas A&M University, College Station, Texas)

Correlations between various soil parameters and the results obtained from the pressuremeter tests have been developed by various investigators. Kulhawy and Mayne (1990) proposed that, for clays,

$$\sigma'_c = 0.45p_l \quad (3.62)$$

where  $\sigma'_c$  = preconsolidation pressure.

On the basis of the cavity expansion theory, Baguelin et al. (1978) proposed that

$$c_u = \frac{(p_l - p_o)}{N_p} \quad (3.63)$$

where

$c_u$  = undrained shear strength of a clay

$$N_p = 1 + \ln\left(\frac{E_p}{3c_u}\right)$$

Typical values of  $N_p$  vary between 5 and 12, with an average of about 8.5. Ohya et al. (1982) (see also Kulhawy and Mayne, 1990) correlated  $E_p$  with field standard penetration numbers ( $N_{60}$ ) for sand and clay as follows:


$$\text{Clay: } E_p(\text{kN/m}^2) = 1930 N_{60}^{0.63} \quad (3.64)$$

$$\text{Sand: } E_p(\text{kN/m}^2) = 908 N_{60}^{0.66} \quad (3.65)$$

## 3.23 Dilatometer Test

The use of the flat-plate dilatometer test (DMT) is relatively recent (Marchetti, 1980; Schmertmann, 1986). The equipment essentially consists of a flat plate measuring 220 mm (length)  $\times$  95 mm (width)  $\times$  14 mm (thickness) (8.66 in.  $\times$  3.74 in.  $\times$  0.55 in.). A thin, flat, circular, expandable steel membrane having a diameter of 60 mm (2.36 in.) is located flush at the center on one side of the plate (Figure 3.33a). Figure 3.34 shows two flat-plate dilatometers with other instruments for conducting a test in the field. The dilatometer probe is inserted into the ground with a cone penetrometer testing rig (Figure 3.33b). Gas and electric lines extend from the surface control box, through the penetrometer rod, and into the blade. At the required depth, high-pressure nitrogen gas is used to inflate the membrane. Two pressure readings are taken:

1. The pressure  $A$  required to “lift off” the membrane.
2. The pressure  $B$  at which the membrane expands 1.1 mm (0.4 in.) into the surrounding soil.

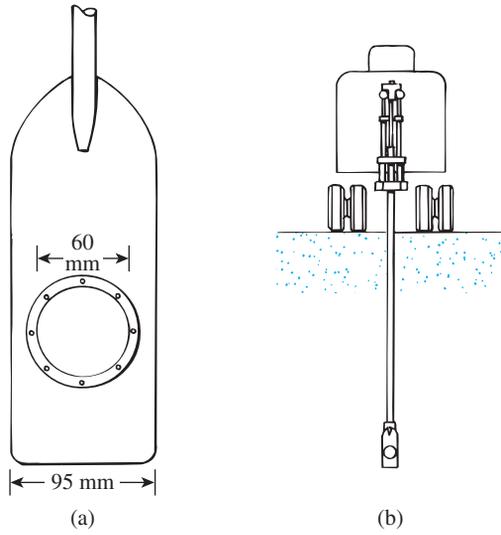

**Figure 3.33** (a) Schematic diagram of a flat-plate dilatometer; (b) dilatometer probe inserted into ground



**Figure 3.34** Dilatometer and other equipment (Courtesy of N. Sivakugan, James Cook University, Australia)

The  $A$  and  $B$  readings are corrected as follows (Schmertmann, 1986):

$$\text{Contact stress, } p_o = 1.05(A + \Delta A - Z_m) - 0.05(B - \Delta B - Z_m) \quad (3.66)$$

$$\text{Expansion stress, } p_1 = B - Z_m - \Delta B \quad (3.67)$$

where

$\Delta A$  = vacuum pressure required to keep the membrane in contact with its seating

$\Delta B$  = air pressure required inside the membrane to deflect it outward to a center expansion of 1.1 mm

$Z_m$  = gauge pressure deviation from zero when vented to atmospheric pressure

The test is normally conducted at depths 200 to 300 mm apart. The result of a given test is used to determine three parameters:

1. Material index,  $I_D = \frac{p_1 - p_o}{p_o - u_o}$
2. Horizontal stress index,  $K_D = \frac{p_o - u_o}{\sigma'_o}$
3. Dilatometer modulus,  $E_D(\text{kN/m}^2) = 34.7(p_1 \text{ kN/m}^2 - p_o \text{ kN/m}^2)$

where

$u_o$  = pore water pressure

$\sigma'_o$  = *in situ* vertical effective stress

Figure 3.35 shows the results of a dilatometer test conducted in Bangkok soft clay and reported by Shibuya and Hanh (2001). Based on his initial tests, Marchetti (1980) provided the following correlations.

$$K_o = \left( \frac{K_D}{1.5} \right)^{0.47} - 0.6 \quad (3.68)$$

$$\text{OCR} = (0.5K_D)^{1.56} \quad (3.69)$$

$$\frac{c_u}{\sigma'_o} = 0.22 \quad (\text{for normally consolidated clay}) \quad (3.70)$$

$$\left( \frac{c_u}{\sigma'_o} \right)_{\text{OC}} = \left( \frac{c_u}{\sigma'_o} \right)_{\text{NC}} (0.5K_D)^{1.25} \quad (3.71)$$

$$E_s = (1 - \mu_s^2)E_D \quad (3.72)$$

where


$K_o$  = coefficient of at-rest earth pressure

OCR = overconsolidation ratio

OC = overconsolidated soil

NC = normally consolidated soil

$E_s$  = modulus of elasticity

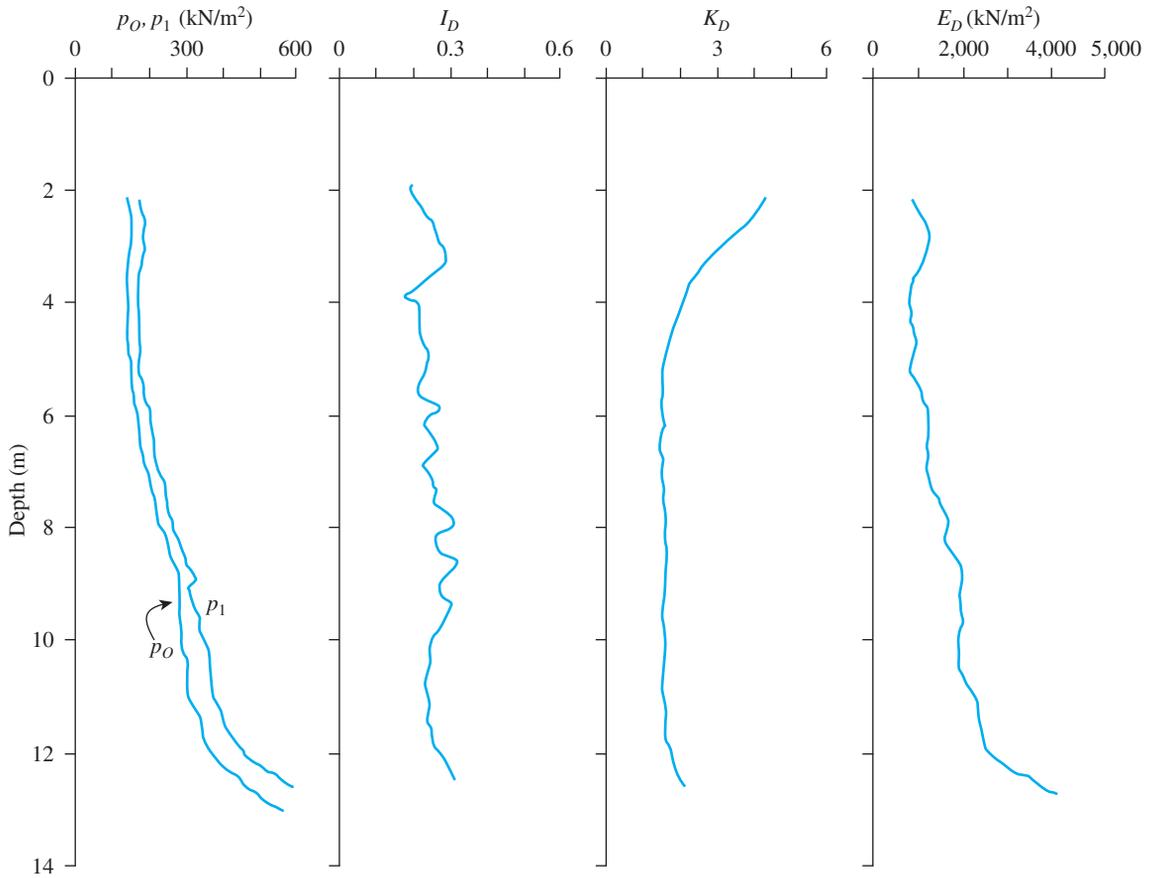

**Figure 3.35** A dilatometer test result conducted on soft Bangkok clay (Based on Lancellotta, 1983, and Jamiolski et al., 1985)

Other relevant correlations using the results of dilatometer tests are as follows:


- For undrained cohesion in clay (Kamei and Iwasaki, 1995):

$$c_u = 0.35 \sigma'_0 (0.47K_D)^{1.14} \tag{3.73}$$

- For soil friction angle (ML and SP-SM soils) (Ricceri et al., 2002):

$$\phi' = 31 + \frac{K_D}{0.236 + 0.066K_D} \tag{3.74a}$$

$$\phi'_{ult} = 28 + 14.6 \log K_D - 2.1(\log K_D)^2 \tag{3.74b}$$

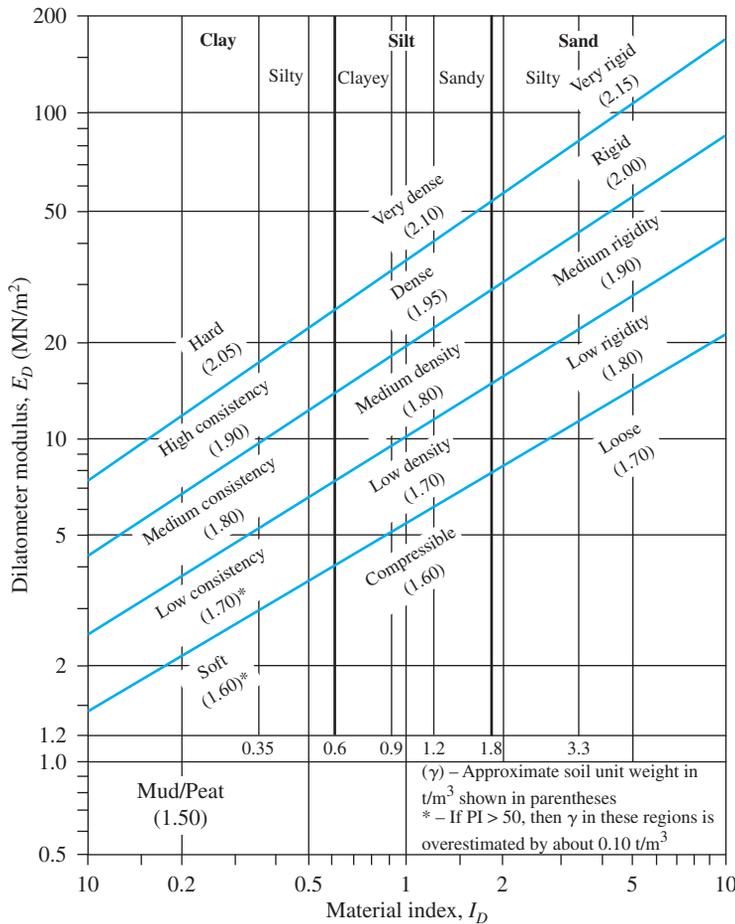


**Figure 3.36** Chart for determination of soil description and unit weight (After Schmertmann, 1986) (Note:  $1 \text{ t/m}^3 = 9.81 \text{ kN/m}^3$ ) (Based on Schmertmann, J.H. (1986). "Suggested method for performing that flat dilatometer test," *Geotechnical Testing Journal*, ASTM, Vol. 9, No. 2, pp. 93-101, Fig. 2.)

Schmertmann (1986) also provided a correlation between the material index ( $I_D$ ) and the dilatometer modulus ( $E_D$ ) for a determination of the nature of the soil and its unit weight ( $\gamma$ ). This relationship is shown in Figure 3.36.

## 3.24 Iowa Borehole Shear Test

The Iowa borehole shear test is a simple device to determine the shear strength parameters of soil at a given depth during subsoil exploration. The shear device consists of two grooved plates that are pushed into the borehole (Figure 3.37). A controlled normal force ( $N$ ) can be applied to each of the grooved plates. Shear failure in soil close to the plates is induced by applying a vertical force  $S$ , after allowing the soil to consolidate under the

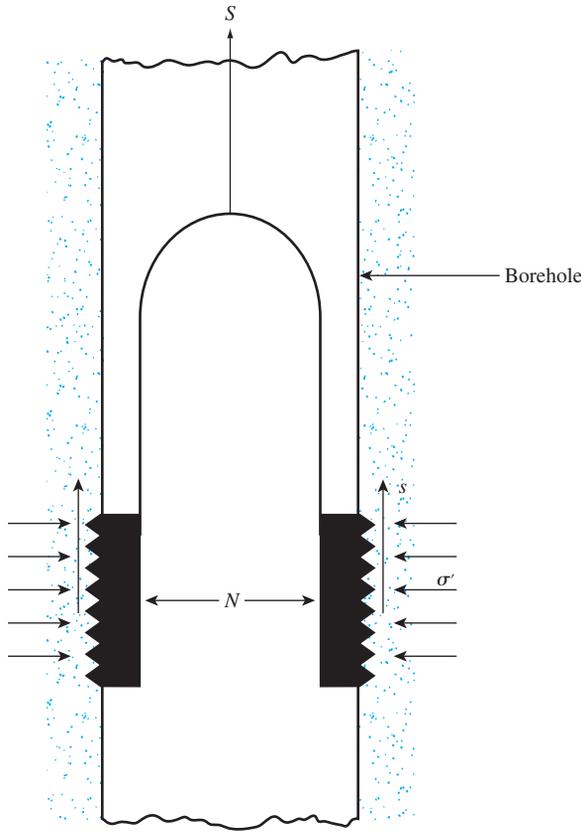

**Figure 3.37** Iowa borehole shear test

normal stress (5 minutes in sand and 10 to 20 minutes in clay). So, the effective normal stress ( $\sigma'$ ) on the wall of the borehole can be given as

$$\sigma' = \frac{N}{A} \tag{3.75}$$


where  $A$  = area of each plate in contact with the soil

Similarly, the shear stress at failure ( $s$ ) is


$$s = \frac{S}{2A} \tag{3.76}$$

The test could be repeated with a number of increasing normal forces ( $N$ ) without removing the shearing device. The results can be plotted in graphic form (Figure 3.38) to obtain the shear strength parameters (that is, cohesion  $c'$  and angle of friction  $\phi'$ ) of the soil. The shear strength parameters obtained in this manner are likely to represent those of a consolidated drained test.

Figure 3.39 shows the photograph of a shear head and a hand pump.

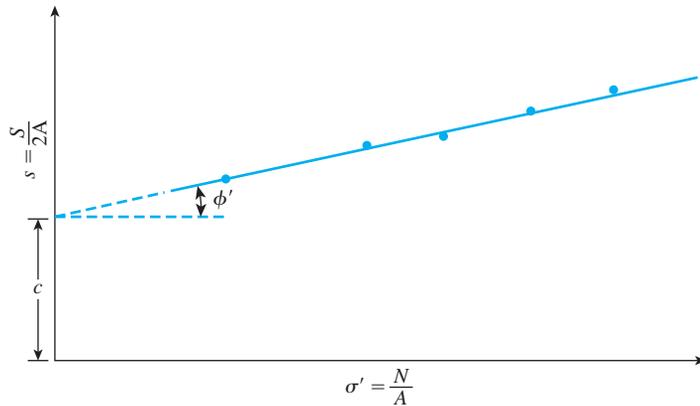

**Figure 3.38** Variation of  $s$  with  $\sigma'$  from Iowa borehole shear test

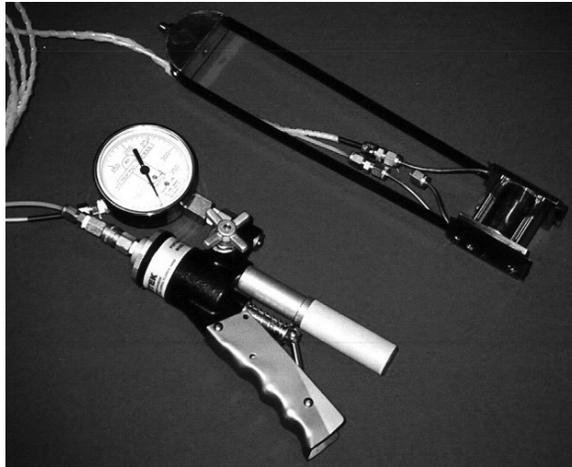

**Figure 3.39** Photograph of shear head and a hand pump (Courtesy of R. L. Handy, Iowa State University, Ames, Iowa)

## 3.25 $K_0$ Stepped-Blade Test


In the 1970s, the  $K_0$  stepped-blade test for measuring lateral *in situ* stress (and hence  $K_0$  as the at-rest earth pressure coefficient) was developed by Dr. Richard L. Handy at Iowa State University. Figure 3.40a shows a  $K_0$  stepped-blade test in progress. The long blade consists of four steps, 100 mm apart, ranging from 3 mm thin to 7.5 mm thick from its bottom to its top (Figure 3.40b). Even the thickest step is thinner than the dilatometer; therefore, the soil disturbance is relatively less. Each step carries a pneumatic pressure cell flush with the flat surface that comes in contact with the soil when pushed into it.

The test is conducted in a borehole where the first blade is pushed into the soil at the bottom of the hole and the stress in the bottom step,  $\sigma_1$ , is measured. The second blade is pushed into the soil and the stress in the bottom two steps ( $\sigma_1$  and  $\sigma_2$ ) is measured. This is repeated until all of the steps are in the soil, giving 14 (= 1 + 2 + 3 + 4 + 4) stress measurements. The fifth step has the same thickness as the fourth but with no pressure



(a)

**Figure 3.40**  $K_0$  stepped-blade test: (a) Test in progress in the field; (b) Schematic diagram of the blade (Courtesy of R. L. Handy, Iowa State University, Ames, Iowa)

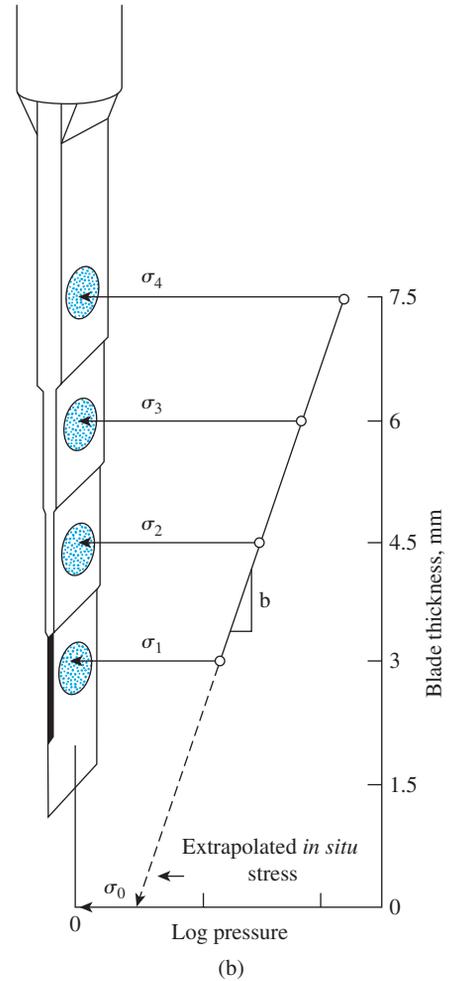


(b)

cell (see Figure 3.40b). As shown in Figure 3.40b, the logarithm of stress is plotted against the blade thickness. The stress corresponding to zero blade thickness,  $\sigma_0$ , is extrapolated from the figure and is taken as the *total in situ* horizontal stress from which  $K_0$  can be computed once the pore water pressure is known from the groundwater table depth. The pressure should increase with blade thickness. Any data that do not show an increase in stress with an increase in step thickness must be discarded, and only the remaining data should be used in estimating the *in situ* horizontal stress.

### 3.26 Coring of Rocks

When a rock layer is encountered during a drilling operation, rock coring may be necessary. To core rocks, a *core barrel* is attached to a drilling rod. A *coring bit* is attached

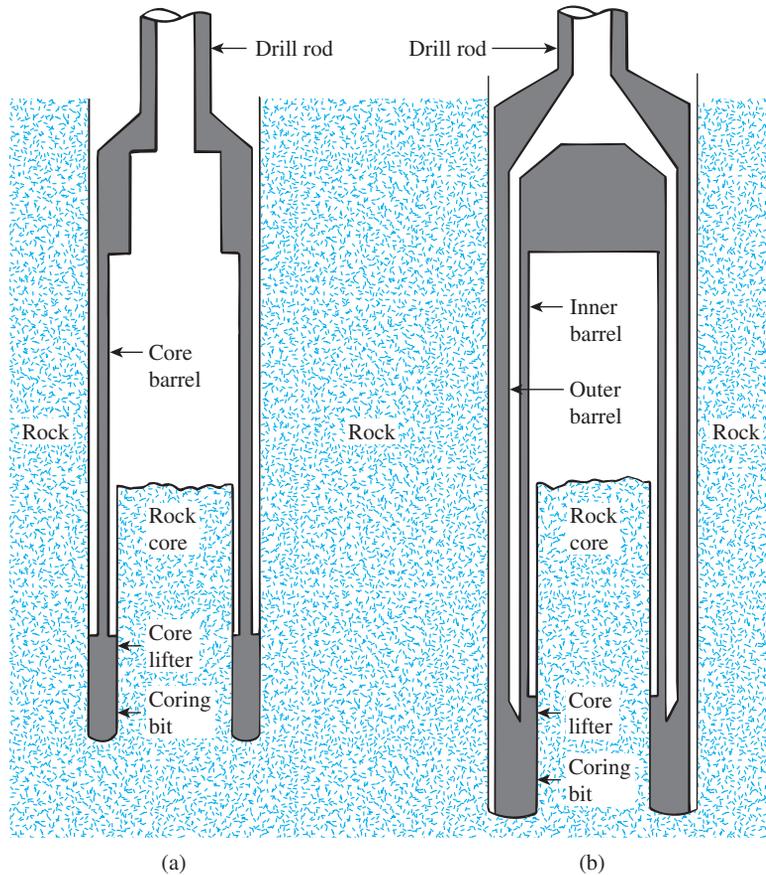

**Figure 3.41** Rock coring: (a) single-tube core barrel; (b) double-tube core barrel

to the bottom of the barrel (Fig. 3.41). The cutting elements may be diamond, tungsten, carbide, and so on. Table 3.10 summarizes the various types of core barrel and their sizes, as well as the compatible drill rods commonly used for exploring foundations. The coring is advanced by rotary drilling. Water is circulated through the drilling rod during coring, and the cutting is washed out.

Two types of core barrel are available: the *single-tube core barrel* (Figure 3.41a) and the *double-tube core barrel* (Figure 3.41b). Rock cores obtained by single-tube core barrels can be highly disturbed and fractured because of torsion. Rock cores smaller than the BX size tend to fracture during the coring process. Figure 3.42 shows the photograph of a diamond coring bit. Figure 3.43 shows the end and side views of a diamond coring bit attached to a double-tube core barrel.

When the core samples are recovered, the depth of recovery should be properly recorded for further evaluation in the laboratory. Based on the length of the rock core

**Table 3.10** Standard Size and Designation of Casing, Core Barrel, and Compatible Drill Rod


Casing and core barrel designation	Outside diameter of core barrel bit		Drill rod designation	Outside diameter of drill rod		Diameter of borehole		Diameter of core sample	
	(mm)	(in.)		(mm)	(in.)	(mm)	(in.)	(mm)	(in.)
EX	36.51	1 $\frac{7}{16}$	E	33.34	1 $\frac{5}{16}$	38.1	1 $\frac{1}{2}$	22.23	$\frac{7}{8}$
AX	47.63	1 $\frac{7}{8}$	A	41.28	1 $\frac{5}{8}$	50.8	2	28.58	1 $\frac{1}{8}$
BX	58.74	2 $\frac{5}{16}$	B	47.63	1 $\frac{7}{8}$	63.5	2 $\frac{1}{2}$	41.28	1 $\frac{5}{8}$
NX	74.61	2 $\frac{15}{16}$	N	60.33	2 $\frac{3}{8}$	76.2	3	53.98	2 $\frac{1}{8}$

recovered from each run, the following quantities may be calculated for a general evaluation of the rock quality encountered:

$$\text{Recovery ratio} = \frac{\text{length of core recovered}}{\text{theoretical length of rock cored}} \quad (3.77)$$

Rock quality designation (RQD)

$$= \frac{\sum \text{length of recovered pieces equal to or larger than 101.6 mm (4 in.)}}{\text{theoretical length of rock cored}} \quad (3.78)$$

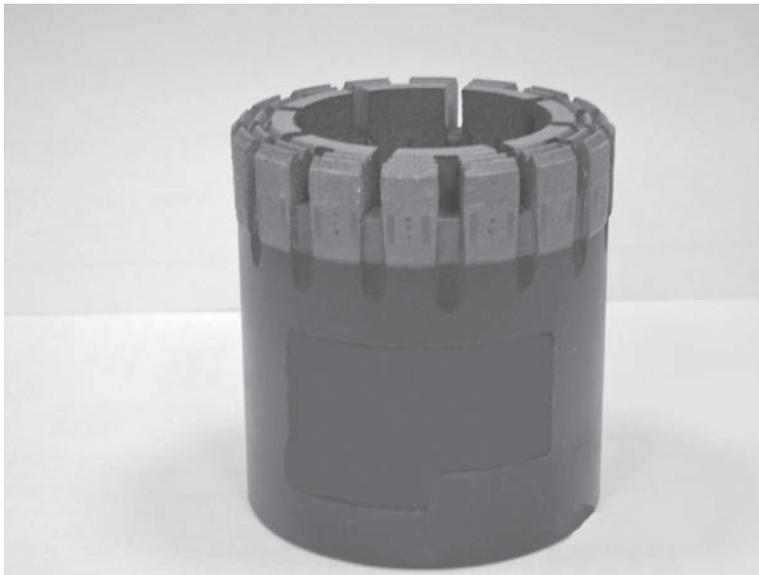

**Figure 3.42** Diamond coring bit (Courtesy of Braja M. Das, Henderson, Nevada)



(a)



(b)

**Figure 3.43** Diamond coring bit attached to a double-tube core barrel: (a) end view; (b) side view (Courtesy of Professional Service Industries, Inc. (PSI), Waukesha, Wisconsin)

**Table 3.11** Relation between *in situ* Rock Quality and RQD

RQD	Rock quality
0–0.25	Very poor
0.25–0.5	Poor
0.5–0.75	Fair
0.75–0.9	Good
0.9–1	Excellent

A recovery ratio of unity indicates the presence of intact rock; for highly fractured rocks, the recovery ratio may be 0.5 or smaller. Table 3.11 presents the general relationship (Deere, 1963) between the RQD and the *in situ* rock quality.

### 3.27 Preparation of Boring Logs

The detailed information gathered from each borehole is presented in a graphical form called the *boring log*. As a borehole is advanced downward, the driller generally should record the following information in a standard log:

1. Name and address of the drilling company
2. Driller's name
3. Job description and number
4. Number, type, and location of boring
5. Date of boring
6. Subsurface stratification, which can be obtained by visual observation of the soil brought out by auger, split-spoon sampler, and thin-walled Shelby tube sampler
7. Elevation of water table and date observed, use of casing and mud losses, and so on
8. Standard penetration resistance and the depth of SPT
9. Number, type, and depth of soil sample collected
10. In case of rock coring, type of core barrel used and, for each run, the actual length of coring, length of core recovery, and RQD

This information should never be left to memory, because doing so often results in erroneous boring logs.

After completion of the necessary laboratory tests, the geotechnical engineer prepares a finished log that includes notes from the driller's field log and the results of tests conducted in the laboratory. Figure 3.44 shows a typical boring log. These logs have to be attached to the final soil-exploration report submitted to the client. The figure also lists the classifications of the soils in the left-hand column, along with the description of each soil (based on the Unified Soil Classification System).

### 3.28 Geophysical Exploration

Several types of geophysical exploration techniques permit a rapid evaluation of subsoil characteristics. These methods also allow rapid coverage of large areas and are less

## Boring Log

Name of the Project Two-story apartment buildingLocation Johnson & Olive St. Date of Boring March 2, 2005Boring No. 3 Type of Hollow-stem auger Ground 60.8 m  
Boring Elevation

Soil description	Depth (m)	Soil sample type and number	$N_{60}$	$w_n$ (%)	Comments
Light brown clay (fill)					
Silty sand (SM)	1				
	2	SS-1	9	8.2	
°G.W.T.  3.5 m	3	SS-2	12	17.6	LL = 38 PI = 11
Light gray clayey silt (ML)	4				
	5	ST-1		20.4	LL = 36 $q_u = 112 \text{ kN/m}^2$
	6	SS-3	11	20.6	
Sand with some gravel (SP)	7				
End of boring @ 8 m	8	SS-4	27	9	
$N_{60}$ = standard penetration number $w_n$ = natural moisture content LL = liquid limit; PI = plasticity index $q_u$ = unconfined compression strength SS = split-spoon sample; ST = Shelby tube sample			Groundwater table observed after one week of drilling		

**Figure 3.44** A typical boring log

expensive than conventional exploration by drilling. However, in many cases, definitive interpretation of the results is difficult. For that reason, such techniques should be used for preliminary work only. Here, we discuss three types of geophysical exploration technique: the seismic refraction survey, cross-hole seismic survey, and resistivity survey.

## Seismic Refraction Survey

*Seismic refraction surveys* are useful in obtaining preliminary information about the thickness of the layering of various soils and the depth to rock or hard soil at a site. Refraction surveys are conducted by impacting the surface, such as at point *A* in Figure 3.45a, and observing the first arrival of the disturbance (stress waves) at several other points (e.g., *B*, *C*, *D*, ...). The impact can be created by a hammer blow or by a small explosive charge. The first arrival of disturbance waves at various points can be recorded by geophones.

The impact on the ground surface creates two types of *stress wave*: *P waves* (or *plane waves*) and *S waves* (or *shear waves*). *P waves* travel faster than *S waves*; hence, the

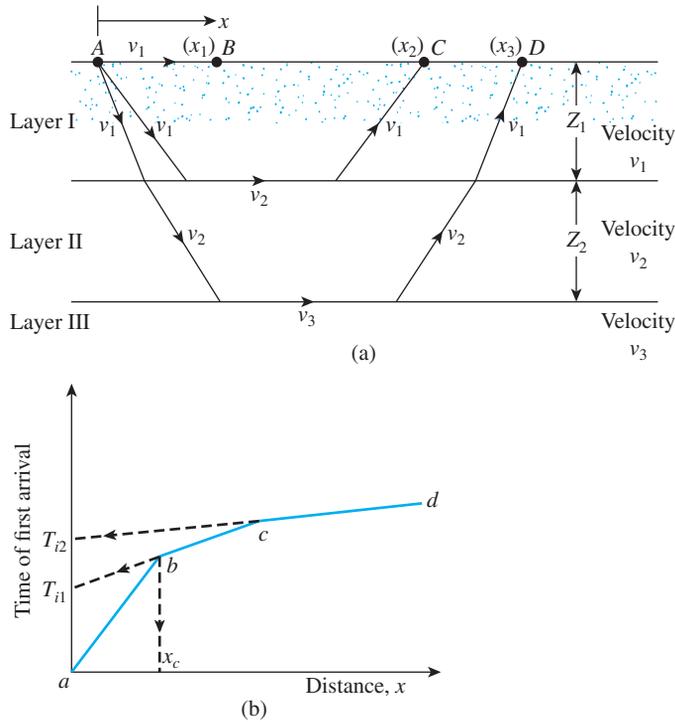


Figure 3.45 Seismic refraction survey

first arrival of disturbance waves will be related to the velocities of the  $P$  waves in various layers. The velocity of  $P$  waves in a medium is

$$v = \sqrt{\frac{E_s}{\left(\frac{\gamma}{g}\right)} \frac{(1 - \mu_s)}{(1 - 2\mu_s)(1 + \mu_s)}} \tag{3.79}$$

where

- $E_s$  = modulus of elasticity of the medium
- $\gamma$  = unit weight of the medium
- $g$  = acceleration due to gravity
- $\mu_s$  = Poisson's ratio

To determine the velocity  $v$  of  $P$  waves in various layers and the thicknesses of those layers, we use the following procedure:

- Step 1. Obtain the times of first arrival,  $t_1, t_2, t_3, \dots$ , at various distances  $x_1, x_2, x_3, \dots$  from the point of impact.
- Step 2. Plot a graph of time  $t$  against distance  $x$ . The graph will look like the one shown in Figure 3.45b.

Step 3. Determine the slopes of the lines  $ab$ ,  $bc$ ,  $cd$ , ... :

$$\text{Slope of } ab = \frac{1}{v_1}$$

$$\text{Slope of } bc = \frac{1}{v_2}$$

$$\text{Slope of } cd = \frac{1}{v_3}$$

Here,  $v_1, v_2, v_3, \dots$  are the  $P$ -wave velocities in layers I, II, III, ..., respectively (Figure 3.45a).

Step 4. Determine the thickness of the top layer:

$$Z_1 = \frac{1}{2} \sqrt{\frac{v_2 - v_1}{v_2 + v_1}} x_c \quad (3.80)$$

The value of  $x_c$  can be obtained from the plot, as shown in Figure 3.45b.

Step 5. Determine the thickness of the second layer:

$$Z_2 = \frac{1}{2} \left[ T_{i2} - 2Z_1 \frac{\sqrt{v_3^2 - v_1^2}}{v_3 v_1} \right] \frac{v_3 v_2}{\sqrt{v_3^2 - v_2^2}} \quad (3.81)$$

Here,  $T_{i2}$  is the time intercept of the line  $cd$  in Figure 3.45b, extended backwards.

(For detailed derivatives of these equations and other related information, see Dobrin, 1960, and Das, 1992).

The velocities of  $P$  waves in various layers indicate the types of soil or rock that are present below the ground surface. The range of the  $P$ -wave velocity that is generally encountered in different types of soil and rock at shallow depths is given in Table 3.12.

**Table 3.12** Range of  $P$ -Wave Velocity in Various Soils and Rocks

Type of soil or rock	<b><math>P</math>-wave velocity</b>	
	m/sec	ft/sec
<i>Soil</i>		
Sand, dry silt, and fine-grained topsoil	200–1000	650–3300
Alluvium	500–2000	1650–6600
Compacted clays, clayey gravel, and dense clayey sand	1000–2500	3300–8200
Loess	250–750	800–2450
<i>Rock</i>		
Slate and shale	2500–5000	8200–16,400
Sandstone	1500–5000	4900–16,400
Granite	4000–6000	13,100–19,700
Sound limestone	5000–10,000	16,400–32,800

In analyzing the results of a refraction survey, two limitations need to be kept in mind:

1. The basic equations for the survey—that is, Eqs. (3.80) and (3.81)—are based on the assumption that the  $P$ -wave velocity  $v_1 < v_2 < v_3 < \dots$
2. When a soil is saturated below the water table, the  $P$ -wave velocity may be deceptive.  $P$  waves can travel with a velocity of about 1500 m/sec (5000 ft/sec) through water. For dry, loose soils, the velocity may be well below 1500 m/sec. However, in a saturated condition, the waves will travel through water that is present in the void spaces with a velocity of about 1500 m/sec. If the presence of groundwater has not been detected, the  $P$ -wave velocity may be erroneously interpreted to indicate a stronger material (e.g., sandstone) than is actually present *in situ*. In general, geophysical interpretations should always be verified by the results obtained from borings.

### Example 3.5

The results of a refraction survey at a site are given in the following table:

Distance of geophone from the source of disturbance (m)	Time of first arrival (sec $\times 10^3$ )
2.5	11.2
5	23.3
7.5	33.5
10	42.4
15	50.9
20	57.2
25	64.4
30	68.6
35	71.1
40	72.1
50	75.5

Determine the  $P$ -wave velocities and the thickness of the material encountered.

#### Solution

Velocity


In Figure 3.46, the times of first arrival of the  $P$  waves are plotted against the distance of the geophone from the source of disturbance. The plot has three straight-line segments. The velocity of the top three layers can now be calculated as:

$$\text{Slope of segment } 0a = \frac{1}{v_1} = \frac{\text{time}}{\text{distance}} = \frac{23 \times 10^{-3}}{5.25}$$

or

$$v_1 = \frac{5.25 \times 10^3}{23} = 228 \text{ m/sec (top layer)}$$

$$\text{Slope of segment } ab = \frac{1}{v_2} = \frac{13.5 \times 10^{-3}}{11}$$

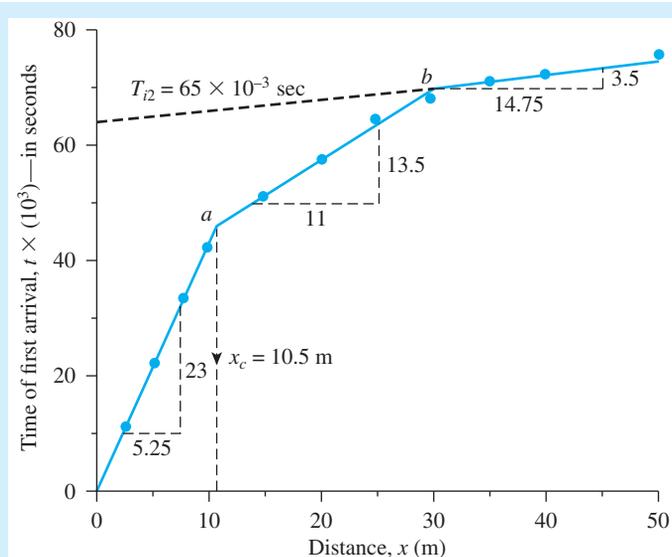

**Figure 3.46** Plot of first arrival time of  $P$  wave versus distance of geophone from source of disturbance

or

$$v_2 = \frac{11 \times 10^3}{13.5} = \mathbf{814.8 \text{ m/sec (middle layer)}}$$

$$\text{Slope of segment } bc = \frac{1}{v_3} = \frac{3.5 \times 10^{-3}}{14.75}$$

or

$$v_3 = \mathbf{4214 \text{ m/sec (third layer)}}$$

Comparing the velocities obtained here with those given in Table 3.12 indicates that the third layer is a *rock layer*.

Thickness of Layers

From Figure 3.46,  $x_c = 10.5$  m, so

$$Z_1 = \frac{1}{2} \sqrt{\frac{v_2 - v_1}{v_2 + v_1}} x_c$$

Thus,

$$Z_1 = \frac{1}{2} \sqrt{\frac{814.8 - 228}{814.8 + 228}} \times 10.5 = \mathbf{3.94 \text{ m}}$$

Again, from Eq. (3.81)

$$Z_2 = \frac{1}{2} \left[ T_{12} - \frac{2Z_1 \sqrt{v_3^2 - v_1^2}}{(v_3 v_1)} \right] \frac{(v_3)(v_2)}{\sqrt{v_3^2 - v_2^2}}$$

The value of  $T_{12}$  (from Figure 3.46) is  $65 \times 10^{-3}$  sec. Hence,

$$\begin{aligned} Z_2 &= \frac{1}{2} \left[ 65 \times 10^{-3} - \frac{2(3.94) \sqrt{(4214)^2 - (228)^2}}{(4214)(228)} \right] \frac{(4214)(814.8)}{\sqrt{(4214)^2 - (814.8)^2}} \\ &= \frac{1}{2} (0.065 - 0.0345) 830.47 = \mathbf{12.66 \text{ m}} \end{aligned}$$


Thus, the rock layer lies at a depth of  $Z_1 + Z_2 = 3.94 + 12.66 = \mathbf{16.60 \text{ m}}$  from the surface of the ground. ■

### Cross-Hole Seismic Survey

The velocity of shear waves created as the result of an impact to a given layer of soil can be effectively determined by the *cross-hole seismic survey* (Stokoe and Woods, 1972). The principle of this technique is illustrated in Figure 3.47, which shows two holes drilled into the ground a distance  $L$  apart. A vertical impulse is created at the bottom of one borehole by means of an impulse rod. The shear waves thus generated are recorded by a vertically sensitive transducer. The velocity of shear waves can be calculated as

$$v_s = \frac{L}{t} \tag{3.82}$$

where  $t$  = travel time of the waves.

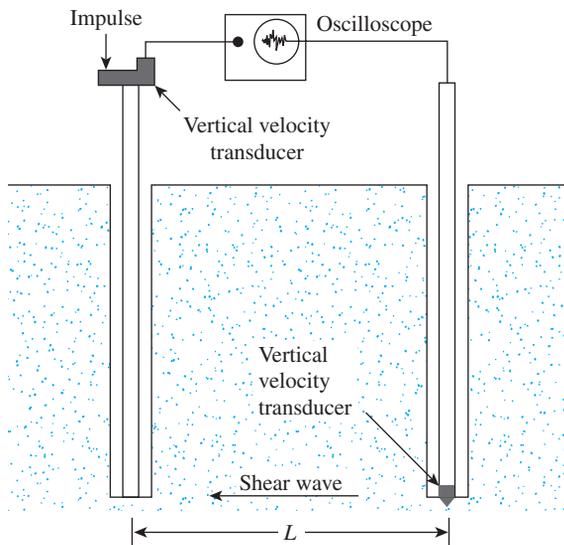

**Figure 3.47** Cross-hole method of seismic survey

The shear modulus  $G_s$  of the soil at the depth at which the test is taken can be determined from the relation

$$v_s = \sqrt{\frac{G_s}{(\gamma/g)}}$$

or

$$G_s = \frac{v_s^2 \gamma}{g} \quad (3.83)$$

where

$v_s$  = velocity of shear waves

$\gamma$  = unit weight of soil

$g$  = acceleration due to gravity

The shear modulus is useful in the design of foundations to support vibrating machinery and the like.

### Resistivity Survey

Another geophysical method for subsoil exploration is the *electrical resistivity survey*. The electrical resistivity of any conducting material having a length  $L$  and an area of cross section  $A$  can be defined as

$$\rho = \frac{RA}{L} \quad (3.84)$$



where  $R$  = electrical resistance.

The unit of resistivity is *ohm-centimeter* or *ohm-meter*. The resistivity of various soils depends primarily on their moisture content and also on the concentration of dissolved ions in them. Saturated clays have a very low resistivity; dry soils and rocks have a high resistivity. The range of resistivity generally encountered in various soils and rocks is given in Table 3.13.

The most common procedure for measuring the electrical resistivity of a soil profile makes use of four electrodes driven into the ground and spaced equally along a straight line. The procedure is generally referred to as the *Wenner method* (Figure 3.48a). The two outside electrodes are used to send an electrical current  $I$  (usually a dc current with

**Table 3.13** Representative Values of Resistivity

Material	Resistivity (ohm · m)
Sand	500–1500
Clays, saturated silt	0–100
Clayey sand	200–500
Gravel	1500–4000
Weathered rock	1500–2500
Sound rock	>5000

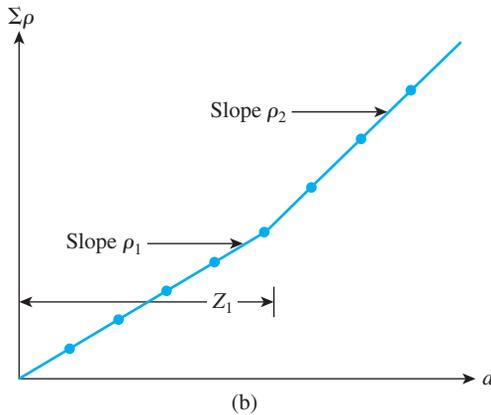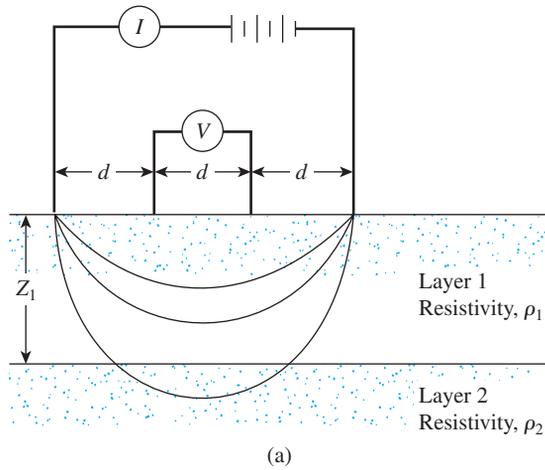

**Figure 3.48** Electrical resistivity survey: (a) Wenner method; (b) empirical method for determining resistivity and thickness of each layer

nonpolarizing potential electrodes) into the ground. The current is typically in the range of 50 to 100 milliamperes. The voltage drop,  $V$ , is measured between the two inside electrodes. If the soil profile is homogeneous, its electrical resistivity is

$$\rho = \frac{2\pi dV}{I} \quad (3.85)$$

In most cases, the soil profile may consist of various layers with different resistivities, and Eq. (3.85) will yield the *apparent resistivity*. To obtain the *actual resistivity* of various layers and their thicknesses, one may use an empirical method that involves conducting tests at various electrode spacings (i.e.,  $d$  is changed). The sum of the apparent resistivities,  $\Sigma\rho$ , is plotted against the spacing  $d$ , as shown in Figure 3.48b. The plot thus obtained has relatively straight segments, the slopes of which give the resistivity of individual layers. The thicknesses of various layers can be estimated as shown in Figure 3.48b.

The resistivity survey is particularly useful in locating gravel deposits within a fine-grained soil.

## 3.29 Subsoil Exploration Report

At the end of all soil exploration programs, the soil and rock specimens collected in the field are subject to visual observation and appropriate laboratory testing. (The basic soil tests were described in Chapter 2.) After all the required information has been compiled, a soil exploration report is prepared for use by the design office and for reference during future construction work. Although the details and sequence of information in such reports may vary to some degree, depending on the structure under consideration and the person compiling the report, each report should include the following items:

1. A description of the scope of the investigation
2. A description of the proposed structure for which the subsoil exploration has been conducted
3. A description of the location of the site, including any structures nearby, drainage conditions, the nature of vegetation on the site and surrounding it, and any other features unique to the site
4. A description of the geological setting of the site
5. Details of the field exploration—that is, number of borings, depths of borings, types of borings involved, and so on
6. A general description of the subsoil conditions, as determined from soil specimens and from related laboratory tests, standard penetration resistance and cone penetration resistance, and so on
7. A description of the water-table conditions
8. Recommendations regarding the foundation, including the type of foundation recommended, the allowable bearing pressure, and any special construction procedure that may be needed; alternative foundation design procedures should also be discussed in this portion of the report
9. Conclusions and limitations of the investigations

The following graphical presentations should be attached to the report:

1. A site location map
2. A plan view of the location of the borings with respect to the proposed structures and those nearby
3. Boring logs
4. Laboratory test results
5. Other special graphical presentations

The exploration reports should be well planned and documented, as they will help in answering questions and solving foundation problems that may arise later during design and construction.

### Problems

- 3.1 For a Shelby tube, given: outside diameter = 3 in. and inside diameter 2.874 in. What is the area ratio of the tube?
- 3.2 A soil profile is shown in Figure P3.2 along with the standard penetration numbers in the clay layer. Use Eqs. (3.8) and (3.9) to determine the variation of  $c_u$  and OCR with depth. What is the average value of  $c_u$  and OCR?

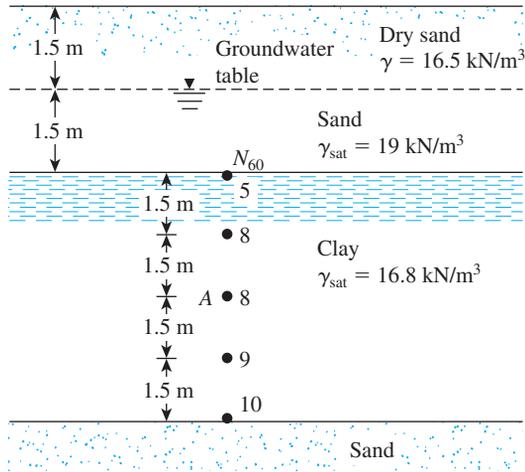


Figure P3.2

- 3.3** Refer to Figure P3.2. Use Eqs. (3.10) and (3.11) to determine the variation of OCR and preconsolidation pressure  $\sigma'_c$ .
- 3.4** Following is the variation of the field standard penetration number ( $N_{60}$ ) in a sand deposit:

Depth (m)	$N_{60}$
1.5	6
3	8
4.5	9
6	8
7.9	13
9	14

The groundwater table is located at a depth of 6 m. Given: the dry unit weight of sand from 0 to a depth of 6 m is  $18 \text{ kN/m}^3$ , and the saturated unit weight of sand for depth 6 to 12 m is  $20.2 \text{ kN/m}^3$ . Use the relationship given in Eq. (3.13) to calculate the corrected penetration numbers.

- 3.5** Redo Problem 3.4 using Eq. (3.14).
- 3.6** For the soil profile described in Problem 3.4, estimate an average peak soil friction angle. Use Eq. (3.31).
- 3.7** Repeat Problem 3.6 using Eq. (3.30).
- 3.8** Repeat Problem 3.6 using Eq. (3.29).
- 3.9** Refer to Problem 3.4. Using Eq. (3.22), determine the average relative density of sand.
- 3.10** Refer to Problem 3.4. Using Eq. (3.28), determine the average relative density of the sand. Assume it is a fine sand. Use Eq. (3.13) to obtain  $(N_1)_{60}$ .

- 3.11 The following table gives the variation of the field standard penetration number ( $N_{60}$ ) in a sand deposit:

Depth (m)	$N_{60}$
1.5	5
3.0	11
4.5	14
6.0	18
7.5	16
9.0	21

The groundwater table is located at a depth of 12 m. The dry unit weight of sand from 0 to a depth of 12 m is  $17.6 \text{ kN/m}^3$ . Assume that the mean grain size ( $D_{50}$ ) of the sand deposit to be about 0.8 mm. Estimate the variation of the relative density with depth for sand. Use Eq. (3.23).

- 3.12 Following are the standard penetration numbers determined from a sandy soil in the field:

Depth (ft)	Unit weight of soil (lb/ft <sup>3</sup> )	$N_{60}$
10	106	7
15	106	9
20	106	11
25	118	16
30	118	18
35	118	20
40	118	22

Using Eq. (3.30), determine the variation of the peak soil friction angle,  $\phi'$ . Estimate an average value of  $\phi'$  for the design of a shallow foundation. (Note: For depth greater than 20 ft, the unit weight of soil is  $118 \text{ lb/ft}^3$ .)

- 3.13 Refer to Problem 3.12. Assume that the sand is clean and normally consolidated. Estimate the average value of the modulus of elasticity between depths of 20 ft and 30 ft.
- 3.14 Following are the details for a soil deposit in sand:

Depth (m)	Effective overburden pressure (kN/m <sup>2</sup> )	Field standard penetration number, $N_{60}$
3.0	55	9
4.5	82	11
6.0	98	12

Assume the uniformity coefficient ( $C_u$ ) of the sand to be 2.8 and an overconsolidation ratio (OCR) of 2. Estimate the average relative density of the sand between the depth of 3 to 6 m. Use Eq. (3.21).

- 3.15** Refer to Figure P3.2. Vane shear tests were conducted in the clay layer. The vane (tapered) dimensions were 63.5 mm ( $d$ )  $\times$  127 mm ( $h$ ),  $i_B = i_T = 45^\circ$  (see Figure 3.23). For the test at  $A$ , the torque required to cause failure was 51 N  $\cdot$  m. For the clay, given: liquid limit = 46 and plastic limit = 21. Estimate the undrained cohesion of the clay for use in the design by using Bjerrum's  $\lambda$  relationship [Eq. (3.40a)].
- 3.16** Refer to Problem 3.15. Estimate the overconsolidation ratio of the clay. Use Eqs. (3.42) and (3.43).
- 3.17** a. A vane shear test was conducted in a saturated clay. The height and diameter of the rectangular vane were 4 in. and 2 in., respectively. During the test, the maximum torque applied was 230 lb-in. Determine the undrained shear strength of the clay.  
b. The clay soil described in part (a) has a liquid limit of 58 and a plastic limit of 29. What would be the corrected undrained shear strength of the clay for design purposes? Use Bjerrum's relationship for  $\lambda$  [Eq. (3.40a)].
- 3.18** Refer to Problem 3.17. Determine the overconsolidation ratio for the clay. Use Eqs. (3.42) and (3.45). Use  $\sigma'_0 = 1340$  lb/ft<sup>2</sup>.
- 3.19** In a deposit of normally consolidated dry sand, a cone penetration test was conducted. Following are the results:

Depth (m)	Point resistance of cone, $q_c$ (MN/m <sup>2</sup> )
1.5	2.06
3.0	4.23
4.5	6.01
6.0	8.18
7.5	9.97
9.0	12.42

Assuming the dry unit weight of sand to be 16 kN/m<sup>3</sup>, estimate the average peak friction angle,  $\phi'$ , of the sand. Use Eq. (3.53).

- 3.20** Refer to Problem 3.19. Using Eq. (3.51), determine the variation of the relative density with depth. Use  $Q_c = 1$ .
- 3.21** Refer to Problem 3.19. Use Eq. (3.55) and Kulhawy and Mayne factors for  $a$  and  $c$  to predict the variation of  $N_{60}$  with depth. Given: mean grain size  $D_{50} = 0.2$  mm.
- 3.22** In the soil profile shown in Figure P3.22, if the cone penetration resistance ( $q_c$ ) at  $A$  (as determined by an electric friction-cone penetrometer) is 0.8 MN/m<sup>2</sup>, estimate
- a. The undrained cohesion,  $c_u$   
b. The overconsolidation ratio, OCR
- 3.23** In a pressuremeter test in a soft saturated clay, the measuring cell volume  $V_o = 535$  cm<sup>3</sup>,  $p_o = 42.4$  kN/m<sup>2</sup>,  $p_f = 326.5$  kN/m<sup>2</sup>,  $v_o = 46$  cm<sup>3</sup>, and  $v_f = 180$  cm<sup>3</sup>. Assuming Poisson's ratio ( $\mu_s$ ) to be 0.5 and using Figure 3.31, calculate the pressuremeter modulus ( $E_p$ ).
- 3.24** A dilatometer test was conducted in a clay deposit. The groundwater table was located at a depth of 3 m below the surface. At a depth of 8 m below the surface, the contact

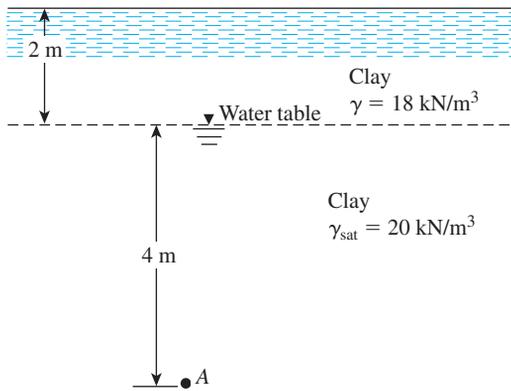


Figure P3.22

pressure ( $p_o$ ) was  $280 \text{ kN/m}^2$  and the expansion stress ( $p_1$ ) was  $350 \text{ kN/m}^2$ . Determine the following:

- a. Coefficient of at-rest earth pressure,  $K_o$
- b. Overconsolidation ratio, OCR
- c. Modulus of elasticity,  $E_s$

Assume  $\sigma'_o$  at a depth of 8 m to be  $95 \text{ kN/m}^2$  and  $\mu_s = 0.35$ .

- 3.25 A dilatometer test was conducted in a sand deposit at a depth of 6 m. The ground-water table was located at a depth of 2 m below the ground surface. Given, for the sand:  $\gamma_d = 14.5 \text{ kN/m}^3$  and  $\gamma_{\text{sat}} = 19.8 \text{ kN/m}^3$ . The contact stress during the test was  $260 \text{ kN/m}^2$ . Estimate the soil friction angle,  $\phi'$ .
- 3.26 The  $P$ -wave velocity in a soil is  $105 \text{ m/sec}$ . Assuming Poisson's ratio to be  $0.32$ , calculate the modulus of elasticity of the soil. Assume that the unit weight of soil is  $18 \text{ kN/m}^3$ .
- 3.27 The results of a refraction survey (Figure 3.45a) at a site are given in the following table. Determine the thickness and the  $P$ -wave velocity of the materials encountered.


Distance from the source of disturbance (m)	Time of first arrival of $P$ -waves (sec $\times 10^3$ )
2.5	5.08
5.0	10.16
7.5	15.24
10.0	17.01
15.0	20.02
20.0	24.2
25.0	27.1
30.0	28.0
40.0	31.1
50.0	33.9

## References

- AMERICAN SOCIETY FOR TESTING AND MATERIALS (2001). *Annual Book of ASTM Standards*, Vol. 04.08, West Conshohocken, PA.
- AMERICAN SOCIETY FOR TESTING AND MATERIALS (2014). *Annual book of ASTM Standards*, Vol. 04.08, West Conshohocken, PA.
- AMERICAN SOCIETY OF CIVIL ENGINEERS (1972). “Subsurface Investigation for Design and Construction of Foundations of Buildings,” *Journal of the Soil Mechanics and Foundations Division*, American Society of Civil Engineers, Vol. 98, No. SM5, pp. 481–490.
- ANAGNOSTOPOULOS, A., KOUKIS, G., SABATAKAKIS, N., and TSIAMBAOS, G. (2003). “Empirical Correlations of Soil Parameters Based on Cone Penetration Tests (CPT) for Greek Soils,” *Geotechnical and Geological Engineering*, Vol. 21, No. 4, pp. 377–387.
- BAGUELIN, F., JÉZÉQUEL, J. F., and SHIELDS, D. H. (1978). *The Pressuremeter and Foundation Engineering*, Trans Tech Publications, Clausthal, Germany.
- BALDI, G., BELLOTTI, R., GHIONNA, V., and JAMIOLKOWSKI, M. (1982). “Design Parameters for Sands from CPT,” *Proceedings, Second European Symposium on Penetration Testing*, Amsterdam, Vol. 2, pp. 425–438.
- BAZARAA, A. (1967). *Use of the Standard Penetration Test for Estimating Settlements of Shallow Foundations on Sand*, Ph.D. Dissertation, Civil Engineering Department, University of Illinois, Champaign-Urbana, Illinois.
- BJERRUM, L. (1972). “Embankments on Soft Ground,” *Proceedings of the Specialty Conference*, American Society of Civil Engineers, Vol. 2, pp. 1–54.
- BURLAND, J. B. AND BURBIDGE, M. C. (1985). “Settlement of Foundations on Sand and Gravel,” *Proceedings, Institute of Civil Engineers*, Part I, Vol. 7, pp. 1325–1381.
- CRUDEN, D. M. and VARNES, D. J. (1996). “Landslide Types and Processes,” *Special Report 247*, Transportation Research Board, pp. 36–75.
- CUBRINOVSKI, M. and ISHIHARA, K. (1999). “Empirical Correlations between SPT *N*-Values and Relative Density for Sandy Soils,” *Soils and Foundations*, Vol. 39, No. 5, pp. 61–92.
- DAS, B. M. (1992). *Principles of Soil Dynamics*, PWS Publishing Company, Boston.
- DEERE, D. U. (1963). “Technical Description of Rock Cores for Engineering Purposes,” *Felsmechanik und Ingenieurgeologie*, Vol. 1, No. 1, pp. 16–22.
- DOBRIN, M. B. (1960). *Introduction to Geophysical Prospecting*, McGraw-Hill, New York.
- HANSBO, S. (1957). *A New Approach to the Determination of the Shear Strength of Clay by the Fall Cone Test*, Swedish Geotechnical Institute, Report No. 114.
- HARA, A., OHATA, T., and NIWA, M. (1971). “Shear Modulus and Shear Strength of Cohesive Soils,” *Soils and Foundations*, Vol. 14, No. 3, pp. 1–12.
- HATANAKA, M. and UCHIDA, A. (1996). “Empirical Correlation between Penetration Resistance and Internal Friction Angle of Sandy Soils,” *Soils and Foundations*, Vol. 36, No. 4, pp. 1–10.
- JAMIOLKOWSKI, M., LADD, C. C., GERMAINE, J. T., and LANCELLOTTA, R. (1985). “New Developments in Field and Laboratory Testing of Soils,” *Proceedings, 11th International Conference on Soil Mechanics and Foundation Engineering*, Vol. 1, pp. 57–153.
- KAMEI, T. and IWASAKI, K. (1995). “Evaluation of Undrained Shear Strength of Cohesive Soils using a Flat Dilatometer,” *Soils and Foundations*, Vol. 35, No. 2, pp. 111–116.
- KOLB, C. R. and SHOCKLEY, W. G. (1959). “Mississippi Valley Geology: Its Engineering Significance” *Proceedings*, American Society of Civil Engineers, Vol. 124, pp. 633–656.
- KULHAWY, F. H. and MAYNE, P. W. (1990). *Manual on Estimating Soil Properties for Foundation Design*, Electric Power Research Institute, Palo Alto, California.
- LANCELLOTTA, R. (1983). *Analisi di Affidabilità in Ingegneria Geotecnica*, Atti Istituto Scienza Costruzioni, No. 625, Politecnico di Torino.
- LARSSON, R. (1980). “Undrained Shear Strength in Stability Calculation of Embankments and Foundations on Clay,” *Canadian Geotechnical Journal*, Vol. 17, pp. 591–602.

- LEE, J., SALGADO, R. and CARRARO, A. H. (2004). “Stiffness Degradation and Shear Strength of Silty Sand,” *Canadian Geotechnical Journal*, Vol. 41, No. 5, pp. 831–843.
- LIAO, S. S. C. AND WHITMAN, R. V. (1986). “Overburden Correction Factors for SPT in Sand,” *Journal of Geotechnical Engineering*, American Society of Civil Engineers, Vol. 112, No. 3, pp. 373–377.
- MARCHETTI, S. (1980). “In Situ Test by Flat Dilatometer,” *Journal of Geotechnical Engineering Division*, ASCE, Vol. 106, GT3, pp. 299–321.
- MARCUSON, W. F. III, AND BIEGANOUSKY, W. A. (1977). “SPT and Relative Density in Coarse Sands,” *Journal of Geotechnical Engineering Division*, American Society of Civil Engineers, Vol. 103, No. 11, pp. 1295–1309.
- MAYNE, P. W. AND KEMPER, J. B. (1988). “Profiling OCR in Stiff Clays by CPT and SPT,” *Geotechnical Testing Journal*, ASTM, Vol. 11, No. 2, pp. 139–147.
- MAYNE, P. W. AND MITCHELL, J. K. (1988). “Profiling of Overconsolidation Ratio in Clays by Field Vane,” *Canadian Geotechnical Journal*, Vol. 25, No. 1, pp. 150–158.
- MENARD, L. (1956). *An Apparatus for Measuring the Strength of Soils in Place*, master’s thesis, University of Illinois, Urbana, Illinois.
- MEYERHOF, G. G. (1957). “Discussion on Research on Determining the Density of Sands by Spoon Penetration Testing,” *Proceedings, Fourth International Conference on Soil Mechanics and Foundation Engineering*, Vol. 3, p. 110.
- MORRIS, P. M. and WILLIAMS, D. T. (1994). “Effective Stress Vane Shear Strength Correction Factor Correlations,” *Canadian Geotechnical Journal*, Vol. 31, No. 3, pp. 335–342.
- OHYA, S., IMAI, T., AND MATSUBARA, M. (1982). “Relationships between  $N$  Value by SPT and LLT Pressuremeter Results,” *Proceedings, 2nd European Symposium on Penetration Testing*, Vol. 1, Amsterdam, pp. 125–130.
- OSTERBERG, J. O. (1952). “New Piston-Type Soil Sampler,” *Engineering News-Record*, April 24.
- PECK, R. B., HANSON, W. E., and THORNBURN, T. H. (1974). *Foundation Engineering*, 2d ed., Wiley, New York.
- RICCERI, G., SIMONINI, P., and COLA, S. (2002). “Applicability of Piezocone and Dilatometer to Characterize the Soils of the Venice Lagoon” *Geotechnical and Geological Engineering*, Vol. 20, No. 2, pp. 89–121.
- ROBERTSON, P. K. and CAMPANELLA, R. G. (1983). “Interpretation of Cone Penetration Tests. Part I: Sand,” *Canadian Geotechnical Journal*, Vol. 20, No. 4, pp. 718–733.
- SCHMERTMANN, J. H. (1975). “Measurement of In Situ Shear Strength,” *Proceedings, Specialty Conference on In Situ Measurement of Soil Properties*, ASCE, Vol. 2, pp. 57–138.
- SCHMERTMANN, J. H. (1986). “Suggested Method for Performing the Flat Dilatometer Test,” *Geotechnical Testing Journal*, ASTM, Vol. 9, No. 2, pp. 93–101.
- SEED, H. B., ARANGO, I., AND CHAN, C. K. (1975). *Evaluation of Soil Liquefaction Potential during Earthquakes*, Report No. EERC 75-28, Earthquake Engineering Research Center, University of California, Berkeley.
- SEED, H. B., TOKIMATSU, K., HARDER, L. F., and CHUNG, R. M. (1985). “Influence of SPT Procedures in Soil Liquefaction Resistance Evaluations,” *Journal of Geotechnical Engineering*, ASCE, Vol. 111, No. 12, pp. 1425–1445.
- SHIBUYA, S. and HANH, L. T. (2001). “Estimating Undrained Shear Strength of Soft Clay Ground Improved by Pre-Loading with PVD—Case History in Bangkok,” *Soils and Foundations*, Vol. 41, No. 4, pp. 95–101.
- SIVAKUGAN, N. and DAS, B. (2010). *Geotechnical Engineering—A Practical Problem Solving Approach*, J. Ross Publishing Co., Fort Lauderdale, FL.
- SKEMPTON, A. W. (1986). “Standard Penetration Test Procedures and the Effect in Sands of Overburden Pressure, Relative Density, Particle Size, Aging and Overconsolidation,” *Geotechnique*, Vol. 36, No. 3, pp. 425–447.
- SOWERS, G. B. and SOWERS, G. F. (1970). *Introductory Soil Mechanics and Foundations*, 3d ed., Macmillan, New York.

- STOKOE, K. H. and WOODS, R. D. (1972). "In Situ Shear Wave Velocity by Cross-Hole Method," *Journal of Soil Mechanics and Foundations Division*, American Society of Civil Engineers, Vol. 98, No. SM5, pp. 443–460.
- SZECHY, K. and VARGA, L. (1978). *Foundation Engineering—Soil Exploration and Spread Foundation*, Akademiai Kiado, Budapest, Hungary.
- WOLFF, T. F. (1989). "Pile Capacity Prediction Using Parameter Functions," in *Predicted and Observed Axial Behavior of Piles, Results of a Pile Prediction Symposium*, sponsored by the Geotechnical Engineering Division, ASCE, Evanston, IL, June, 1989, ASCE Geotechnical Special Publication No. 23, pp. 96–106.

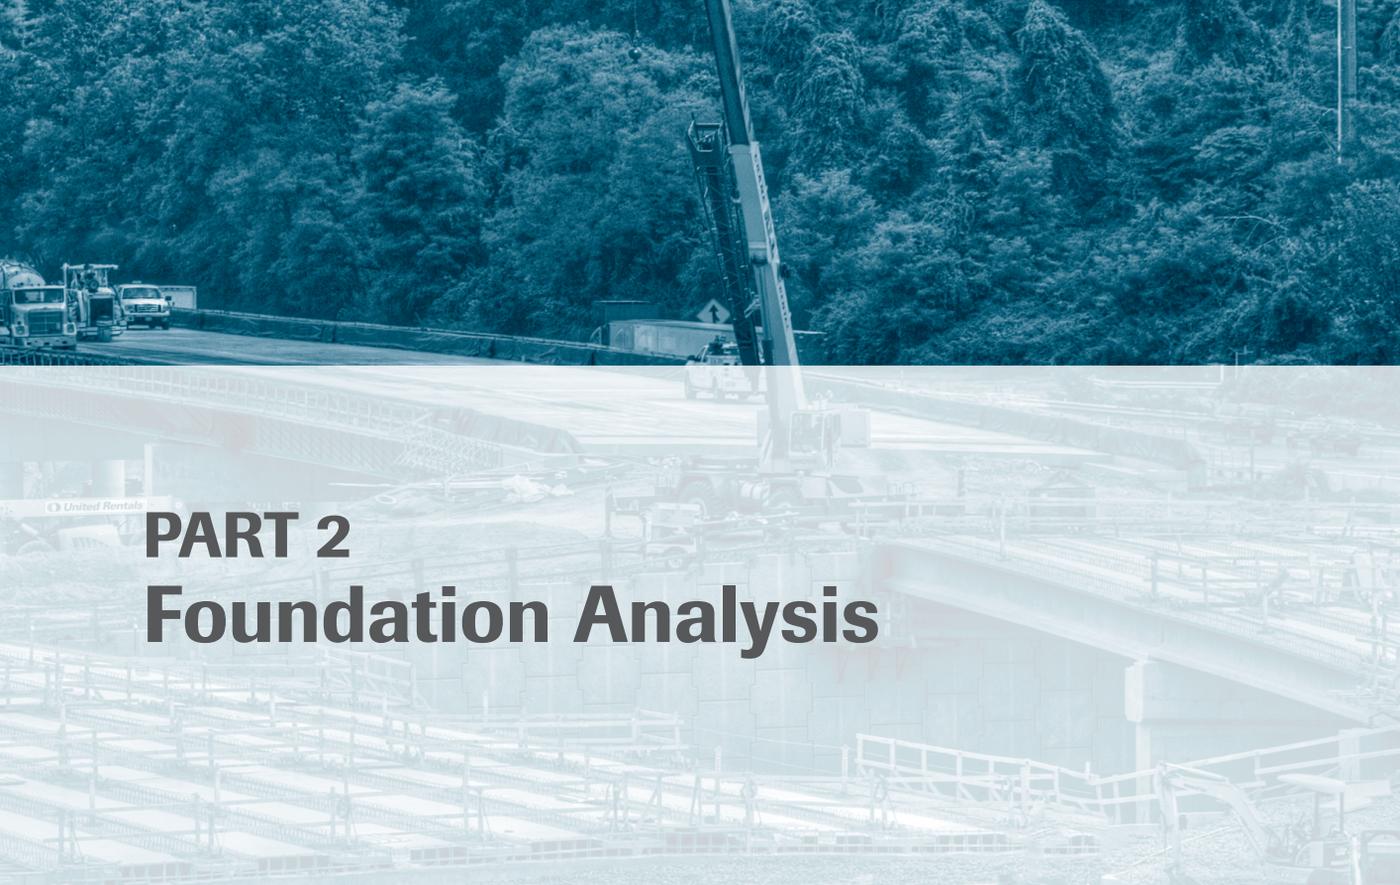

**PART 2**  
**Foundation Analysis**

- 
- Chapter 4: Shallow Foundations: Ultimate Bearing Capacity**
  - Chapter 5: Ultimate Bearing Capacity of Shallow Foundations: Special Cases**
  - Chapter 6: Vertical Stress Increase in Soil**
  - Chapter 7: Settlement of Shallow Foundations**
  - Chapter 8: Mat Foundations**
  - Chapter 9: Pile Foundations**
  - Chapter 10: Drilled-Shaft Foundations**
  - Chapter 11: Foundations on Difficult Soils**





# 4 Shallow Foundations: Ultimate Bearing Capacity

## 4.1 Introduction

To perform satisfactorily, shallow foundations must have two main characteristics:


1. They have to be safe against overall shear failure in the soil that supports them.
2. They cannot undergo excessive displacement, or settlement. (The term *excessive* is relative, because the degree of settlement allowed for a structure depends on several considerations.)

The load per unit area of the foundation at which shear failure in soil occurs is called the *ultimate bearing capacity*, which is the subject of this chapter. In this chapter, we will discuss the following:

- Fundamental concepts in the development of the theoretical relationship for ultimate bearing capacity of shallow foundations subjected to centric vertical loading
- Effect of the location of water table and soil compressibility on ultimate bearing capacity
- Bearing capacity of shallow foundations subjected to vertical eccentric loading and eccentrically inclined loading.

## 4.2 General Concept

Consider a strip foundation with a width of  $B$  resting on the surface of a dense sand or stiff cohesive soil, as shown in Figure 4.1a. Now, if a load is gradually applied to the foundation, settlement will increase. The variation of the load per unit area on the foundation ( $q$ ) with the foundation settlement is also shown in Figure 4.1a. At a certain point—when the load per unit area equals  $q_u$ —a sudden failure in the soil supporting the foundation will take place, and the failure surface in the soil will extend to the ground surface. This load per unit area,  $q_u$ , is usually referred to as the *ultimate bearing capacity of the foundation*. When such sudden failure in soil takes place, it is called *general shear failure*.

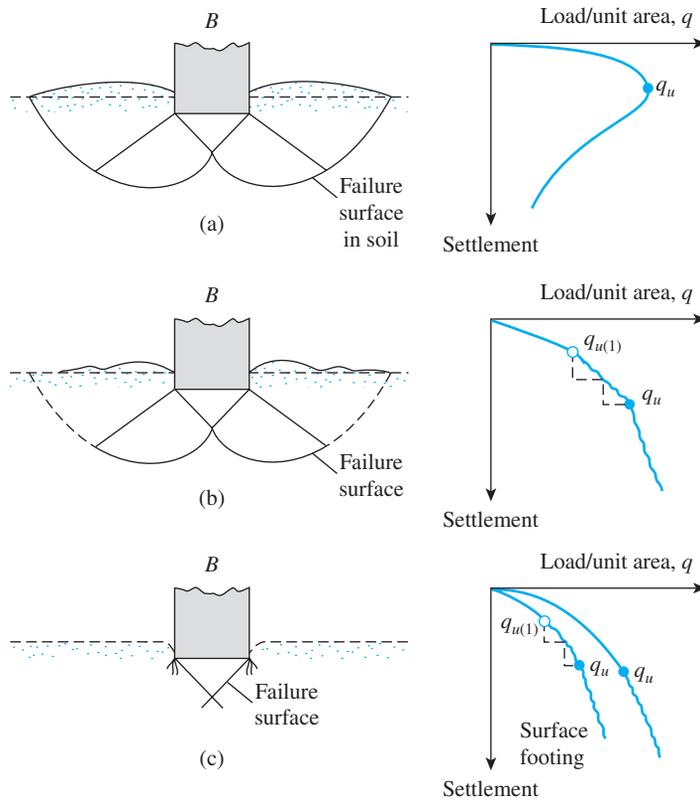


**Figure 4.1** Nature of bearing capacity failure in soil: (a) general shear failure; (b) local shear failure; (c) punching shear failure (Redrawn after Vesic, 1973) (Based on Vesic, A. S. (1973). “Analysis of Ultimate Loads of Shallow Foundations,” *Journal of Soil Mechanics and Foundations Division*, American Society of Civil Engineers, Vol. 99, No. SM1, pp. 45–73.)

If the foundation under consideration rests on sand or clayey soil of medium compaction (Figure 4.1b), an increase in the load on the foundation will also be accompanied by an increase in settlement. However, in this case the failure surface in the soil will gradually extend outward from the foundation, as shown by the solid lines in Figure 4.1b. When the load per unit area on the foundation equals  $q_{u(1)}$ , movement of the foundation will be accompanied by sudden jerks. A considerable movement of the foundation is then required for the failure surface in soil to extend to the ground surface (as shown by the broken lines in the figure). The load per unit area at which this happens is the *ultimate bearing capacity*,  $q_u$ . Beyond that point, an increase in load will be accompanied by a large increase in foundation settlement. The load per unit area of the foundation,  $q_{u(1)}$ , is referred to as the *first failure load* (Vesic, 1963). Note that a peak value of  $q$  is not realized in this type of failure, which is called the *local shear failure* in soil.


If the foundation is supported by a fairly loose soil, the load–settlement plot will be like the one in Figure 4.1c. In this case, the failure surface in soil will not extend to the ground surface. Beyond the ultimate failure load,  $q_u$ , the load–settlement plot

will be steep and practically linear. This type of failure in soil is called the *punching shear failure*.

Vesic (1963) conducted several laboratory load-bearing tests on circular and rectangular plates supported by a sand at various relative densities of compaction,  $D_r$ . The variations of  $q_{u(1)}/\frac{1}{2}\gamma B$  and  $q_u/\frac{1}{2}\gamma B$  obtained from those tests, where  $B$  is the diameter of a circular plate or width of a rectangular plate and  $\gamma$  is a dry unit weight of sand, are shown in Figure 4.2. It is important to note from this figure that, for  $D_r \geq$  about 70%, the general shear type of failure in soil occurs.

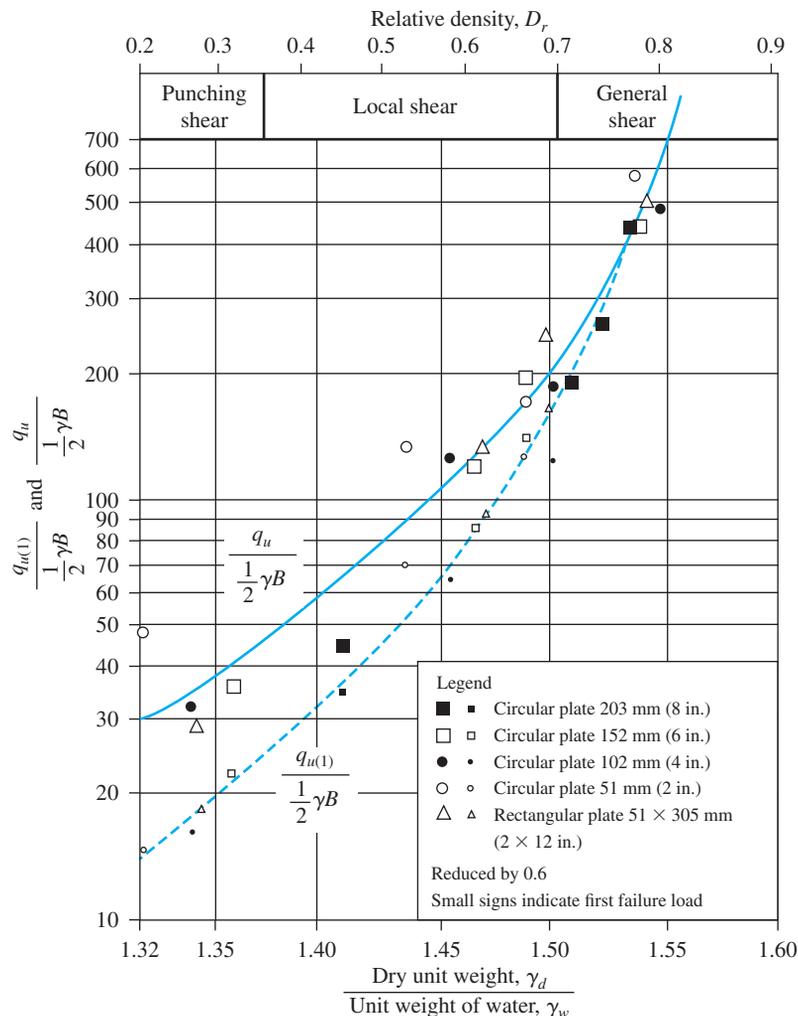

**Figure 4.2** Variation of  $q_{u(1)}/0.5\gamma B$  and  $q_u/0.5\gamma B$  for circular and rectangular plates on the surface of a sand (Adapted from Vesic, 1963) (Based on Vesic, A. B. Bearing Capacity of Deep Foundations in Sand. In *Highway Research Record 39*, Highway Research Board, National Research Council, Washington, D.C., 1963, Figure 28, p. 137.)

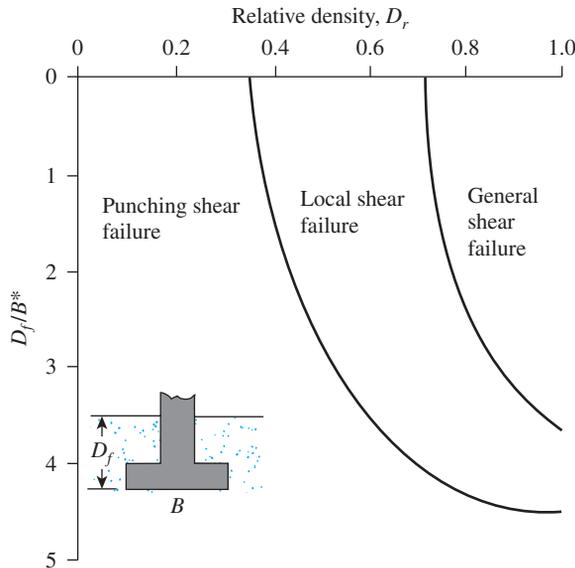

**Figure 4.3** Modes of foundation failure in sand (After Vesic, 1973) (Based on Vesic, A. S. (1973). “Analysis of Ultimate Loads of Shallow Foundations,” *Journal of Soil Mechanics and Foundations Division*, American Society of Civil Engineers, Vol. 99, No. SM1, pp. 45–73.)

On the basis of experimental results, Vesic (1973) proposed a relationship for the mode of bearing capacity failure of foundations resting on sands. Figure 4.3 shows this relationship, which involves the notation

$D_r$  = relative density of sand

$D_f$  = depth of foundation measured from the ground surface

$$B^* = \frac{2BL}{B + L} \quad (4.1)$$

where

$B$  = width of foundation


$L$  = length of foundation

(Note:  $L$  is always greater than  $B$ .)

For square foundations,  $B = L$ ; for circular foundations,  $B = L = \text{diameter}$ , so

$$B^* = B \quad (4.2)$$

Figure 4.4 shows the settlement  $S_u$  of the circular and rectangular plates on the surface of a sand at *ultimate load*, as described in Figure 4.2. The figure indicates a general range of  $S_u/B$  with the relative density of compaction of sand. So, in general, we can say that, for foundations at a shallow depth (i.e., small  $D_f/B^*$ ), the ultimate load may occur at a foundation settlement of 4 to 10% of  $B$ . This condition arises together with general shear failure

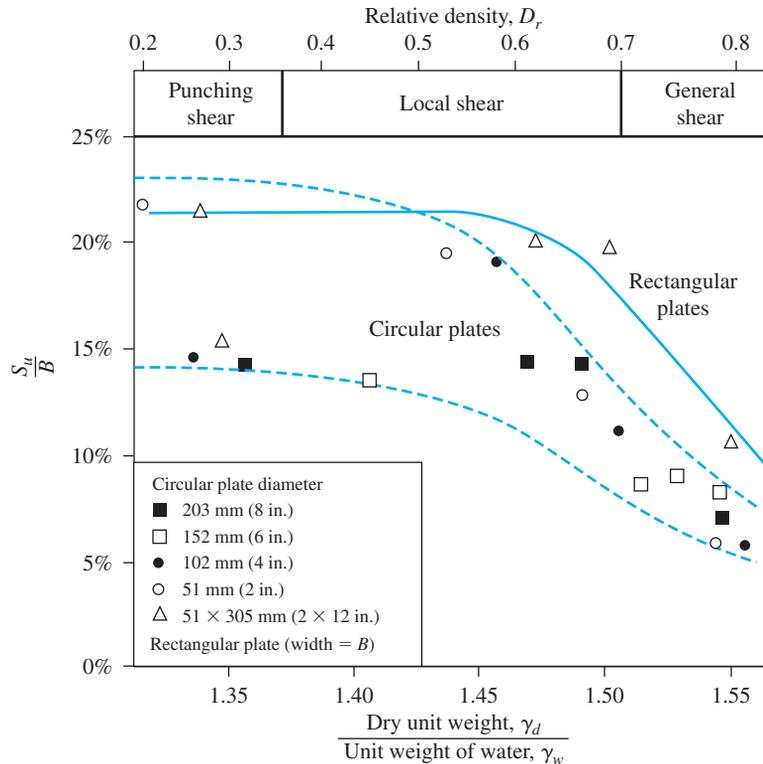

**Figure 4.4** Range of settlement of circular and rectangular plates at ultimate load ( $D_f/B = 0$ ) in sand (Modified from Vesic, 1963) (Based on Vesic, A. B. Bearing Capacity of Deep Foundations in Sand. In *Highway Research Record 39*, Highway Research Board, National Research Council, Washington, D.C., 1963, Figure 29, p. 138.)

in soil; however, in the case of local or punching shear failure, the ultimate load may occur at settlements of 15 to 25% of the width of the foundation ( $B$ ).

DeBeer (1967) provided laboratory experimental results of  $S_u/B$  ( $B$  = diameter of circular plate) for  $D_f/B = 0$  as a function of  $\gamma B$  and relative density  $D_r$ . These results, expressed in a nondimensional form as plots of  $S_u/B$  versus  $\gamma B/p_a$  ( $p_a$  = atmospheric pressure  $\approx 100$  kN/m<sup>2</sup>), are shown in Figure 4.5. Patra, Behera, Sivakugan, and Das (2013) approximated the plots as

$$\left(\frac{S_u}{B}\right)_{(D_f/B=0)} (\%) = 30e^{(-0.9D_r)} + 1.67 \ln\left(\frac{\gamma B}{p_a}\right) - 1 \quad \left(\text{for } \frac{\gamma B}{p_a} \leq 0.025\right) \quad (4.3a)$$

and

$$\left(\frac{S_u}{B}\right)_{(D_f/B=0)} (\%) = 30e^{(-0.9D_r)} - 7.16 \quad \left(\text{for } \frac{\gamma B}{p_a} > 0.025\right) \quad (4.3b)$$

where  $D_r$  is expressed as a fraction. For comparison purposes, Eq. (4.3a) is also plotted in Figure 4.5. For  $D_f/B > 0$ , the magnitude of  $S_u/B$  in sand will be somewhat higher.

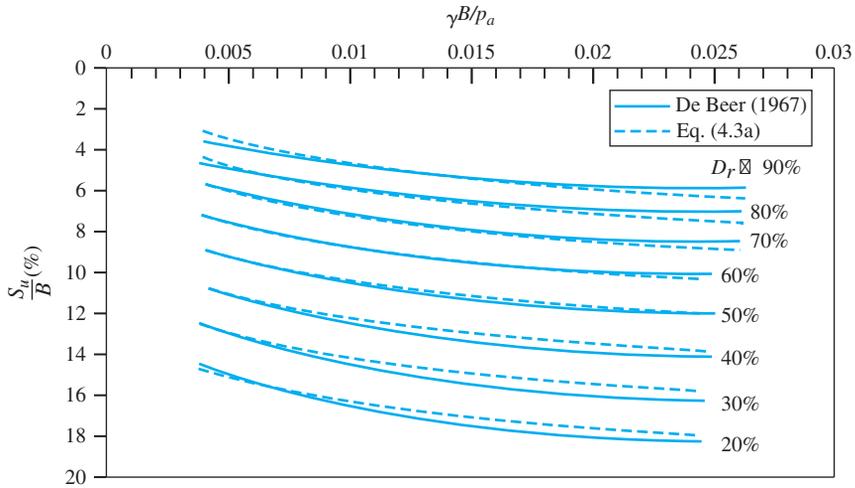


Figure 4.5 Variation of  $S_u/B$  with  $\gamma B/p_a$  and  $D_r$  for circular plates in sand (Note:  $D_f/B = 0$ )

### 4.3 Terzaghi's Bearing Capacity Theory

Terzaghi (1943) was the first to present a comprehensive theory for the evaluation of the ultimate bearing capacity of rough shallow foundations. According to this theory, a foundation is *shallow* if its depth,  $D_f$  (Figure 4.6), is less than or equal to its width. Later investigators, however, have suggested that foundations with  $D_f$  equal to 3 to 4 times their width may be defined as *shallow foundations*.

Terzaghi suggested that for a *continuous*, or *strip*, *foundation* (i.e., one whose width-to-length ratio approaches zero), the failure surface in soil at ultimate load may be assumed to be similar to that shown in Figure 4.6. (Note that this is the case of general shear failure, as defined in Figure 4.1a.) The effect of soil above the bottom of the foundation may also be assumed to be replaced by an equivalent surcharge,  $q = \gamma D_f$  (where  $\gamma$  is

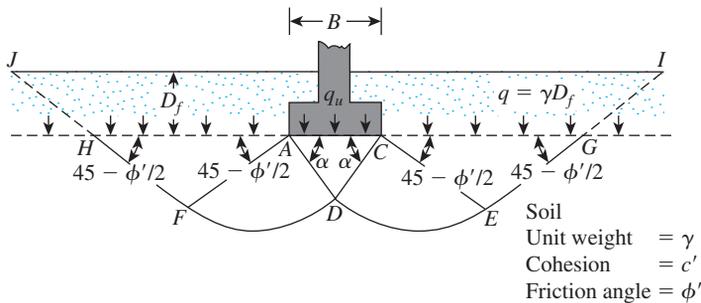


Figure 4.6 Bearing capacity failure in soil under a rough rigid continuous (strip) foundation

the unit weight of soil). The failure zone under the foundation can be separated into three parts (see Figure 4.6):

1. The *triangular zone*  $ACD$  immediately under the foundation
2. The *radial shear zones*  $ADF$  and  $CDE$ , with the curves  $DE$  and  $DF$  being arcs of a logarithmic spiral
3. Two triangular *Rankine passive zones*  $AFH$  and  $CEG$

The angles  $CAD$  and  $ACD$  are assumed to be equal to the soil friction angle  $\phi'$ . Note that, with the replacement of the soil above the bottom of the foundation by an equivalent surcharge  $q$ , the shear resistance of the soil along the failure surfaces  $GI$  and  $HJ$  was neglected.

The ultimate bearing capacity,  $q_{u,}$  of the foundation now can be obtained by considering the equilibrium of the triangular wedge  $ACD$  shown in Figure 4.6. This is shown on a larger scale in Figure 4.7. If the load per unit area,  $q_u$ , is applied to the foundation and general shear failure occurs, the passive force,  $P_p$ , will act on each of the faces of the soil wedge,  $ACD$ . This is easy to conceive if we imagine that  $AD$  and  $CD$  are two walls that are pushing the soil wedges  $ADFH$  and  $CDEG$ , respectively, to cause passive failure.  $P_p$  should be inclined at an angle  $\delta'$  (which is the angle of wall friction) to the perpendicular drawn to the wedge faces (that is,  $AD$  and  $CD$ ). In this case,  $\delta'$  should be equal to the angle of friction of soil,  $\phi'$ . Because  $AD$  and  $CD$  are inclined at an angle  $\phi'$  to the horizontal, the direction of  $P_p$  should be vertical.

Considering a unit length of the foundation, we have for equilibrium

$$(q_u)(2b)(1) = -W + 2C \sin \phi' + 2P_p \quad (4.4)$$

where


$$b = B/2$$

$$W = \text{weight of soil wedge } ACD = \gamma b^2 \tan \phi'$$

$$C = \text{cohesive force acting along each face, } AD \text{ and } CD, \text{ that is equal to the unit cohesion times the length of each face} = c'b/(\cos \phi')$$

Thus,

$$2bq_u = 2P_p + 2bc' \tan \phi' - \gamma b^2 \tan \phi' \quad (4.5)$$

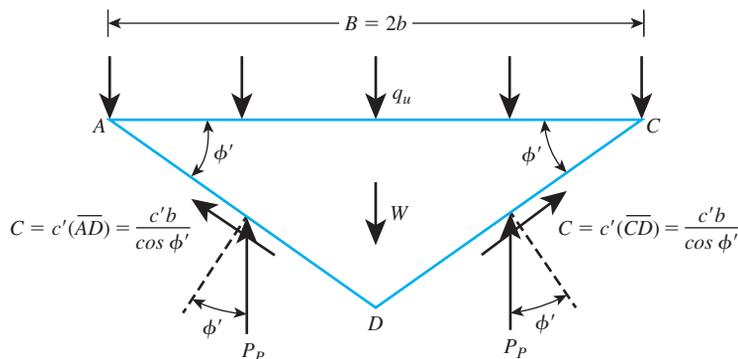


**Figure 4.7** Derivation of Eq. (4.8)

or


$$q_u = \frac{P_p}{b} + c' \tan \phi' - \frac{\gamma b}{2} \tan \phi' \quad (4.6)$$

The passive pressure in Eq. (4.6) is the sum of the contribution of the weight of soil  $\gamma$ , cohesion  $c'$ , and surcharge  $q$ . Figure 4.8 shows the distribution of passive pressure from each of these components on the wedge face  $CD$ . Thus, we can write


$$P_p = \frac{1}{2} \gamma (b \tan \phi')^2 K_\gamma + c' (b \tan \phi') K_c + q (b \tan \phi') K_q \quad (4.7)$$

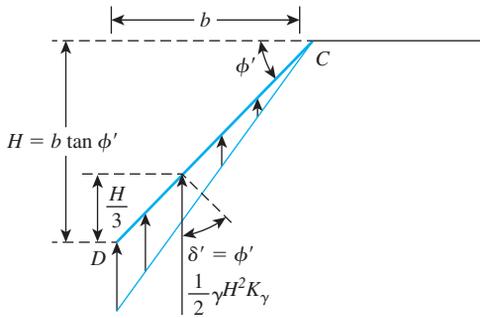

(a)

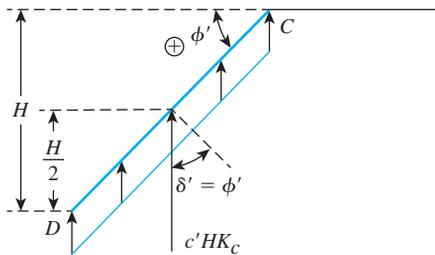

(b)

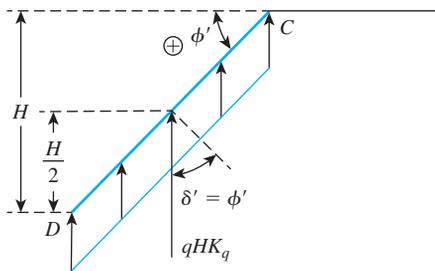

(c)

Note:  $H = b \tan \phi'$   

$$P_p = \frac{1}{2} \gamma H^2 K_\gamma + c' H K_c + q H K_q$$

**Figure 4.8** Passive force distribution on the wedge face  $CD$  shown in Figure 4.7: (a) contribution of soil weight  $\gamma$ ; (b) contribution of cohesion  $c'$ ; (c) contribution of surcharge  $q$ .

where  $K_\gamma$ ,  $K_c$ , and  $K_q$  are earth pressure coefficients that are functions of the soil friction angle,  $\phi'$ .

Combining Eqs. (4.6) and (4.7), we obtain

$$q_u = c'N_c + qN_q + \frac{1}{2}\gamma BN_\gamma \quad (4.8)$$

where

$$N_c = \tan \phi' (K_c + 1) \quad (4.9)$$

$$N_q = K_q \tan \phi' \quad (4.10)$$

and

$$N_\gamma = \frac{1}{2} \tan \phi' (K_\gamma \tan \phi' - 1) \quad (4.11)$$

where  $N_c$ ,  $N_q$ , and  $N_\gamma$  = bearing capacity factors.

The bearing capacity factors  $N_c$ ,  $N_q$ , and  $N_\gamma$  are, respectively, the contributions of cohesion, surcharge, and unit weight of soil to the ultimate load-bearing capacity. It is extremely tedious to evaluate  $K_c$ ,  $K_q$ , and  $K_\gamma$ . For this reason, Terzaghi used an approximate method to determine the ultimate bearing capacity,  $q_u$ . The principles of this approximation are given here.

1. If  $\gamma = 0$  (weightless soil) and  $c = 0$ , then

$$q_u = q_q = qN_q \quad (4.12)$$

where

$$N_q = \frac{e^{2(3\pi/4 - \phi'/2) \tan \phi'}}{2 \cos^2 \left( 45 + \frac{\phi'}{2} \right)} \quad (4.13)$$

2. If  $\gamma = 0$  (that is, weightless soil) and  $q = 0$ , then

$$q_u = q_c = c'N_c \quad (4.14)$$

where

$$N_c = \cot \phi' \left[ \frac{e^{2(3\pi/4 - \phi'/2) \tan \phi'}}{2 \cos^2 \left( \frac{\pi}{4} + \frac{\phi'}{2} \right)} - 1 \right] = \cot \phi' (N_q - 1) \quad (4.15)$$

3. If  $c' = 0$  and surcharge  $q = 0$  (that is,  $D_f = 0$ ), then

$$q_u = q_\gamma = \frac{1}{2} \gamma BN_\gamma \quad (4.16)$$

The magnitude of  $N_\gamma$  for various values of  $\phi'$  is determined by trial and error.

The variations of the bearing capacity factors defined by Eqs. (4.13), (4.15), and (4.16) are given in Table 4.1.

**Table 4.1** Terzaghi's Bearing Capacity Factors—Eqs. (4.15), (4.13), and (4.11).<sup>a</sup>

$\phi'$	$N_c$	$N_q$	$N_\gamma^a$	$\phi'$	$N_c$	$N_q$	$N_\gamma^a$
0	5.70	1.00	0.00	26	27.09	14.21	9.84
1	6.00	1.10	0.01	27	29.24	15.90	11.60
2	6.30	1.22	0.04	28	31.61	17.81	13.70
3	6.62	1.35	0.06	29	34.24	19.98	16.18
4	6.97	1.49	0.10	30	37.16	22.46	19.13
5	7.34	1.64	0.14	31	40.41	25.28	22.65
6	7.73	1.81	0.20	32	44.04	28.52	26.87
7	8.15	2.00	0.27	33	48.09	32.23	31.94
8	8.60	2.21	0.35	34	52.64	36.50	38.04
9	9.09	2.44	0.44	35	57.75	41.44	45.41
10	9.61	2.69	0.56	36	63.53	47.16	54.36
11	10.16	2.98	0.69	37	70.01	53.80	65.27
12	10.76	3.29	0.85	38	77.50	61.55	78.61
13	11.41	3.63	1.04	39	85.97	70.61	95.03
14	12.11	4.02	1.26	40	95.66	81.27	115.31
15	12.86	4.45	1.52	41	106.81	93.85	140.51
16	13.68	4.92	1.82	42	119.67	108.75	171.99
17	14.60	5.45	2.18	43	134.58	126.50	211.56
18	15.12	6.04	2.59	44	151.95	147.74	261.60
19	16.56	6.70	3.07	45	172.28	173.28	325.34
20	17.69	7.44	3.64	46	196.22	204.19	407.11
21	18.92	8.26	4.31	47	224.55	241.80	512.84
22	20.27	9.19	5.09	48	258.28	287.85	650.67
23	21.75	10.23	6.00	49	298.71	344.63	831.99
24	23.36	11.40	7.08	50	347.50	415.14	1072.80
25	25.13	12.72	8.34				

<sup>a</sup>From Kumbhojkar (1993)

To estimate the ultimate bearing capacity of *square* and *circular foundations*, Eq. (4.8) may be respectively modified to

$$q_u = 1.3c'N_c + qN_q + 0.4\gamma BN_\gamma \quad (\text{square foundation}) \quad (4.17)$$

and

$$q_u = 1.3c'N_c + qN_q + 0.3\gamma BN_\gamma \quad (\text{circular foundation}) \quad (4.18)$$

In Eq. (4.17),  $B$  equals the dimension of each side of the foundation; in Eq. (4.18),  $B$  equals the diameter of the foundation.

Terzaghi's bearing capacity equations have now been modified to take into account the effects of the foundation shape ( $B/L$ ), depth of embedment ( $D_f$ ), and the load inclination. This is given in Section 4.6. Many design engineers, however, still use Terzaghi's equation, which provides fairly good results considering the uncertainty of the soil conditions at various sites.

## 4.4 Factor of Safety

Calculating the gross *allowable load-bearing capacity* of shallow foundations requires the application of a factor of safety (FS) to the gross ultimate bearing capacity, or

$$q_{\text{all}} = \frac{q_u}{\text{FS}} \quad (4.19)$$

However, some practicing engineers prefer to use a factor of safety such that

$$\text{Net stress increase on soil} = \frac{\text{net ultimate bearing capacity}}{\text{FS}} \quad (4.20)$$

The net ultimate bearing capacity is defined as the ultimate pressure per unit area of the foundation that can be supported by the soil in excess of the pressure caused by the surrounding soil at the foundation level. If the difference between the unit weight of concrete used in the foundation and the unit weight of soil surrounding is assumed to be negligible, then

$$q_{\text{net}(u)} = q_u - q \quad (4.21)$$

where

$q_{\text{net}(u)}$  = net ultimate bearing capacity

$$q = \gamma D_f$$

So

$$q_{\text{all}(\text{net})} = \frac{q_u - q}{\text{FS}} \quad (4.22)$$

The factor of safety as defined by Eq. (4.22) should be at least 3 in all cases.

### Example 4.1

A square foundation is  $2 \text{ m} \times 2 \text{ m}$  in plan. The soil supporting the foundation has a friction angle of  $\phi' = 25^\circ$  and  $c' = 20 \text{ kN/m}^2$ . The unit weight of soil,  $\gamma$ , is  $16.5 \text{ kN/m}^3$ . Determine the allowable gross load on the foundation with a factor of safety (FS) of 3. Assume that the depth of the foundation ( $D_f$ ) is 1.5 m and that general shear failure occurs in the soil.

**Solution**

From Eq. (4.17)

$$q_u = 1.3c'N_c + qN_q + 0.4\gamma BN_\gamma$$

From Table 4.1, for  $\phi' = 25^\circ$ ,

$$N_c = 25.13$$

$$N_q = 12.72$$

$$N_\gamma = 8.34$$

Thus,

$$\begin{aligned} q_u &= (1.3)(20)(25.13) + (1.5 \times 16.5)(12.72) + (0.4)(16.5)(2)(8.34) \\ &= 653.38 + 314.82 + 110.09 = 1078.29 \text{ kN/m}^2 \end{aligned}$$

So, the allowable load per unit area of the foundation is

$$q_{\text{all}} = \frac{q_u}{\text{FS}} = \frac{1078.29}{3} \approx 359.5 \text{ kN/m}^2$$

Thus, the total allowable gross load is

$$Q = (359.5) B^2 = (359.5) (2 \times 2) = \mathbf{1438 \text{ kN}}$$

**Example 4.2**

Refer to Example 4.1. Assume that the shear-strength parameters of the soil are the same. A square foundation measuring  $B \times B$  will be subjected to an allowable gross load of 1000 kN with FS = 3 and  $D_f = 1$  m. Determine the size  $B$  of the foundation.

**Solution**

Allowable gross load  $Q = 1000$  kN with FS = 3. Hence, the ultimate gross load  $Q_u = (Q)(\text{FS}) = (1000)(3) = 3000$  kN. So,

$$q_u = \frac{Q_u}{B^2} = \frac{3000}{B^2} \quad (\text{a})$$

From Eq. (4.17),

$$q_u = 1.3c'N_c + qN_q + 0.4\gamma BN_\gamma$$

For  $\phi' = 25^\circ$ ,  $N_c = 25.13$ ,  $N_q = 12.72$ , and  $N_\gamma = 8.34$ .

Also,

$$q = \gamma D_f = (16.5)(1) = 16.5 \text{ kN/m}^2$$

Now,

$$\begin{aligned} q_u &= (1.3)(20)(25.13) + (16.5)(12.72) + (0.4)(16.5)(B)(8.34) \\ &= 863.26 + 55.04B \end{aligned} \quad (\text{b})$$

Combining Eqs. (a) and (b),

$$\frac{3000}{B^2} = 863.26 + 55.04B \quad (c)$$

By trial and error, we have

$$B = 1.77 \text{ m} \approx \mathbf{1.8 \text{ m}}$$

## 4.5 Modification of Bearing Capacity Equations for Water Table

Equations (4.8) and (4.17) through (4.18) give the ultimate bearing capacity, based on the assumption that the water table is located well below the foundation. However, if the water table is close to the foundation, some modifications of the bearing capacity equations will be necessary. (See Figure 4.9.)

**Case I.** If the water table is located so that  $0 \leq D_1 \leq D_f$ , the factor  $q$  in the bearing capacity equations takes the form

$$q = \text{effective surcharge} = D_1\gamma + D_2(\gamma_{\text{sat}} - \gamma_w) \quad (4.23)$$

where


$\gamma_{\text{sat}}$  = saturated unit weight of soil

$\gamma_w$  = unit weight of water

Also, the value of  $\gamma$  in the last term of the equations has to be replaced by  $\gamma' = \gamma_{\text{sat}} - \gamma_w$ .

**Case II.** For a water table located so that  $0 \leq d \leq B$ ,

$$q = \gamma D_f \quad (4.24)$$

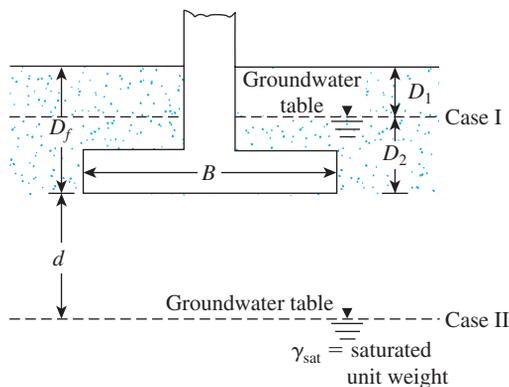

**Figure 4.9** Modification of bearing capacity equations for water table

In this case, the factor  $\gamma$  in the last term of the bearing capacity equations must be replaced by the factor

$$\bar{\gamma} = \gamma' + \frac{d}{B}(\gamma - \gamma') \quad (4.25)$$

The preceding modifications are based on the assumption that there is no seepage force in the soil.

**Case III.** When the water table is located so that  $d \geq B$ , the water will have no effect on the ultimate bearing capacity.

## 4.6 The General Bearing Capacity Equation

The ultimate bearing capacity equations (4.8), (4.17), and (4.18) are for continuous, square, and circular foundations only; they do not address the case of rectangular foundations ( $0 < B/L < 1$ ). Also, the equations do not take into account the shearing resistance along the failure surface in soil above the bottom of the foundation (the portion of the failure surface marked as  $GI$  and  $HJ$  in Figure 4.6). In addition, the load on the foundation may be inclined. To account for all these shortcomings, Meyerhof (1963) suggested the following form of the general bearing capacity equation:

$$q_u = c' N_c F_{cs} F_{cd} F_{ci} + q N_q F_{qs} F_{qd} F_{qi} + \frac{1}{2} \gamma B N_\gamma F_{\gamma s} F_{\gamma d} F_{\gamma i} \quad (4.26)$$

In this equation:

- $c'$  = cohesion
- $q$  = effective stress at the level of the bottom of the foundation
- $\gamma$  = unit weight of soil
- $B$  = width of foundation (= diameter for a circular foundation)
- $F_{cs}, F_{qs}, F_{\gamma s}$  = shape factors
- $F_{cd}, F_{qd}, F_{\gamma d}$  = depth factors
- $F_{ci}, F_{qi}, F_{\gamma i}$  = load inclination factors
- $N_c, N_q, N_\gamma$  = bearing capacity factors

The equations for determining the various factors given in Eq. (4.26) are described briefly in the sections that follow. Note that the original equation for ultimate bearing capacity is derived only for the plane-strain case (i.e., for continuous foundations). The shape, depth, and load inclination factors are empirical factors based on experimental data.

It is important to recognize the fact that, in the *case of inclined loading on a foundation*, Eq. (4.26) provides the vertical component.

## Bearing Capacity Factors

The basic nature of the failure surface in soil suggested by Terzaghi now appears to have been borne out by laboratory and field studies of bearing capacity (Vesic, 1973). However, the angle  $\alpha$  shown in Figure 4.6 is closer to  $45 + \phi'/2$  than to  $\phi'$ . If this change is accepted, the values of  $N_c$ ,  $N_q$ , and  $N_\gamma$  for a given soil friction angle will also change from those given in Table 4.1. With  $\alpha = 45 + \phi'/2$ , it can be shown that

$$N_q = \tan^2\left(45 + \frac{\phi'}{2}\right)e^{\pi \tan \phi'} \quad (4.27)$$

and

$$N_c = (N_q - 1) \cot \phi' \quad (4.28)$$

Equation (4.28) for  $N_c$  was originally derived by Prandtl (1921), and Eq. (4.27) for  $N_q$  was presented by Reissner (1924). Caquot and Kerisel (1953) and Vesic (1973) gave the relation for  $N_\gamma$  as

$$N_\gamma = 2(N_q + 1) \tan \phi' \quad (4.29)$$

Table 4.2 shows the variation of the preceding bearing capacity factors with soil friction angles.

**Table 4.2** Bearing Capacity Factors

$\phi'$	$N_c$	$N_q$	$N_\gamma$	$\phi'$	$N_c$	$N_q$	$N_\gamma$
0	5.14	1.00	0.00	16	11.63	4.34	3.06
1	5.38	1.09	0.07	17	12.34	4.77	3.53
2	5.63	1.20	0.15	18	13.10	5.26	4.07
3	5.90	1.31	0.24	19	13.93	5.80	4.68
4	6.19	1.43	0.34	20	14.83	6.40	5.39
5	6.49	1.57	0.45	21	15.82	7.07	6.20
6	6.81	1.72	0.57	22	16.88	7.82	7.13
7	7.16	1.88	0.71	23	18.05	8.66	8.20
8	7.53	2.06	0.86	24	19.32	9.60	9.44
9	7.92	2.25	1.03	25	20.72	10.66	10.88
10	8.35	2.47	1.22	26	22.25	11.85	12.54
11	8.80	2.71	1.44	27	23.94	13.20	14.47
12	9.28	2.97	1.69	28	25.80	14.72	16.72
13	9.81	3.26	1.97	29	27.86	16.44	19.34
14	10.37	3.59	2.29	30	30.14	18.40	22.40
15	10.98	3.94	2.65	31	32.67	20.63	25.99

(continued)

**Table 4.2** Bearing Capacity Factors (Continued)

$\phi'$	$N_c$	$N_q$	$N_\gamma$	$\phi'$	$N_c$	$N_q$	$N_\gamma$
32	35.49	23.18	30.22	42	93.71	85.38	155.55
33	38.64	26.09	35.19	43	105.11	99.02	186.54
34	42.16	29.44	41.06	44	118.37	115.31	224.64
35	46.12	33.30	48.03	45	133.88	134.88	271.76
36	50.59	37.75	56.31	46	152.10	158.51	330.35
37	55.63	42.92	66.19	47	173.64	187.21	403.67
38	61.35	48.93	78.03	48	199.26	222.31	496.01
39	67.87	55.96	92.25	49	229.93	265.51	613.16
40	75.31	64.20	109.41	50	266.89	319.07	762.89
41	83.86	73.90	130.22				

### Shape, Depth, and Inclination Factors

Commonly used shape, depth, and inclination factors are given in Table 4.3.

**Table 4.3** Shape, Depth and Inclination Factors [DeBeer (1970); Hansen (1970); Meyerhof (1963); Meyerhof and Hanna (1981)]

Factor	Relationship	Reference
Shape	$F_{cs} = 1 + \left(\frac{B}{L}\right)\left(\frac{N_q}{N_c}\right)$ $F_{qs} = 1 + \left(\frac{B}{L}\right) \tan \phi'$ $F_{\gamma s} = 1 - 0.4 \left(\frac{B}{L}\right)$	DeBeer (1970)
Depth	$\frac{D_f}{B} \leq 1$ <p>For <math>\phi = 0</math>:</p> $F_{cd} = 1 + 0.4 \left(\frac{D_f}{B}\right)$ $F_{qd} = 1$ $F_{\gamma d} = 1$ <p>For <math>\phi' &gt; 0</math>:</p> $F_{cd} = F_{qd} - \frac{1 - F_{qd}}{N_c \tan \phi'}$ $F_{qd} = 1 + 2 \tan \phi' (1 - \sin \phi')^2 \left(\frac{D_f}{B}\right)$ $F_{\gamma d} = 1$ $\frac{D_f}{B} > 1$	Hansen (1970)

**Table 4.3** Shape, Depth and Inclination Factors [DeBeer (1970); Hansen (1970); Meyerhof (1963); Meyerhof and Hanna (1981)] (Continued)

Factor	Relationship	Reference
	For $\phi = 0$ :	
	$F_{cd} = 1 + 0.4 \tan^{-1} \left( \frac{D_f}{B} \right)$	
	$F_{qd} = 1$	
	$F_{\gamma d} = 1$	
	For $\phi' > 0$ :	
	$F_{cd} = F_{qd} - \frac{1 - F_{qd}}{N_c \tan \phi'}$	
	$F_{qd} = 1 + 2 \tan \phi' (1 - \sin \phi')^2 \tan^{-1} \left( \frac{D_f}{B} \right)$	
	$F_{\gamma d} = 1$	
Inclination	$F_{ci} = F_{qi} = \left( 1 - \frac{\beta^\circ}{90^\circ} \right)^2$ $F_{\gamma i} = \left( 1 - \frac{\beta^\circ}{\phi'} \right)^2$ <p><math>\beta =</math> inclination of the load on the foundation with respect to the vertical</p>	Meyerhof (1963); Hanna and Meyerhof (1981)

### Example 4.3

Solve Example Problem 4.1 using Eq. (4.26).

#### Solution

From Eq. (4.26),

$$q_u = c' N_c F_{cs} F_{cd} F_{ci} + q N_q F_{qs} F_{qd} F_{qi} + \frac{1}{2} \gamma B N_\gamma F_{\gamma s} F_{\gamma d} F_{\gamma i}$$

Since the load is vertical,  $F_{ci} = F_{qi} = F_{\gamma i} = 1$ . From Table 4.2 for  $\phi' = 25^\circ$ ,  $N_c = 20.72$ ,  $N_q = 10.66$ , and  $N_\gamma = 10.88$ .

Using Table 4.3,

$$F_{cs} = 1 + \left( \frac{B}{L} \right) \left( \frac{N_q}{N_c} \right) = 1 + \left( \frac{2}{2} \right) \left( \frac{10.66}{20.72} \right) = 1.514$$

$$F_{qs} = 1 + \left( \frac{B}{L} \right) \tan \phi' = 1 + \left( \frac{2}{2} \right) \tan 25 = 1.466$$

$$F_{\gamma s} = 1 - 0.4 \left( \frac{B}{L} \right) = 1 - 0.4 \left( \frac{2}{2} \right) = 0.6$$

$$F_{qd} = 1 + 2 \tan \phi' (1 - \sin \phi')^2 \left( \frac{D_f}{B} \right)$$

$$= 1 + (2)(\tan 25)(1 - \sin 25)^2 \left( \frac{1.5}{2} \right) = 1.233$$

$$F_{cd} = F_{qd} - \frac{1 - F_{qd}}{N_c \tan \phi'} = 1.233 - \left[ \frac{1 - 1.233}{(20.72)(\tan 25)} \right] = 1.257$$

$$F_{\gamma d} = 1$$

Hence,

$$q_u = (20)(20.72)(1.514)(1.257)(1)$$

$$+ (1.5 \times 16.5)(10.66)(1.466)(1.233)(1)$$

$$+ \frac{1}{2}(16.5)(2)(10.88)(0.6)(1)(1)$$

$$= 788.6 + 476.9 + 107.7 = 1373.2 \text{ kN/m}^2$$

$$q_{\text{all}} = \frac{q_u}{\text{FS}} = \frac{1373.2}{3} = 457.7 \text{ kN/m}^2$$

$$Q = (457.7)(2 \times 2) = \mathbf{1830.8 \text{ kN}}$$

### Example 4.4

A square foundation ( $B \times B$ ) has to be constructed as shown in Figure 4.10. Assume that  $\gamma = 105 \text{ lb/ft}^3$ ,  $\gamma_{\text{sat}} = 118 \text{ lb/ft}^3$ ,  $\phi' = 34^\circ$ ,  $D_f = 4 \text{ ft}$ , and  $D_1 = 2 \text{ ft}$ . The gross allowable load,  $Q_{\text{all}}$ , with FS = 3 is 150,000 lb. Determine the size of the foundation. Use Eq. (4.26).

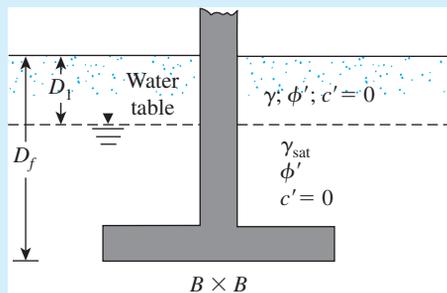


Figure 4.10 A square foundation

**Solution**

We have

$$q_{\text{all}} = \frac{Q_{\text{all}}}{B^2} = \frac{150,000}{B^2} \text{ lb/ft}^2 \quad (\text{a})$$

From Eq. (4.26) (with  $c' = 0$ ), for vertical loading, we obtain

$$q_{\text{all}} = \frac{q_u}{\text{FS}} = \frac{1}{3} \left( qN_q F_{qs} F_{qd} + \frac{1}{2} \gamma' B N_\gamma F_{\gamma s} F_{\gamma d} \right)$$

For  $\phi' = 34^\circ$ , from Table 4.2,  $N_q = 29.44$  and  $N_\gamma = 41.06$ . Hence,

$$F_{qs} = 1 + \frac{B}{L} \tan \phi' = 1 + \tan 34 = 1.67$$

$$F_{\gamma s} = 1 - 0.4 \left( \frac{B}{L} \right) = 1 - 0.4 = 0.6$$

$$F_{qd} = 1 + 2 \tan \phi' (1 - \sin \phi')^2 \frac{D_f}{B} = 1 + 2 \tan 34 (1 - \sin 34)^2 \frac{4}{B} = 1 + \frac{1.05}{B}$$

$$F_{\gamma d} = 1$$

and

$$q = (2)(105) + 2(118 - 62.4) = 321.2 \text{ lb/ft}^2$$

So

$$\begin{aligned} q_{\text{all}} &= \frac{1}{3} \left[ (321.2)(29.44)(1.67) \left( 1 + \frac{1.05}{B} \right) \right. \\ &\quad \left. + \left( \frac{1}{2} \right) (118 - 62.4)(B)(41.06)(0.6)(1) \right] \\ &= 5263.9 + \frac{5527.1}{B} + 228.3B \end{aligned} \quad (\text{b})$$

Combining Eqs. (a) and (b) results in

$$\frac{150,000}{B^2} = 5263.9 + \frac{5527.1}{B} + 228.3B$$

By trial and error, we find that  $B \approx 4.5 \text{ ft}$ . ■

### Example 4.5

A square column foundation (Figure 4.11) is to be constructed on a sand deposit. The allowable load  $Q$  will be inclined at an angle  $\beta = 20^\circ$  with the vertical. The standard penetration numbers  $N_{60}$  obtained from the field are as follows.

Depth (m)	$N_{60}$
1.5	3
3.0	6
4.5	9
6.0	10
7.5	10
9.0	8

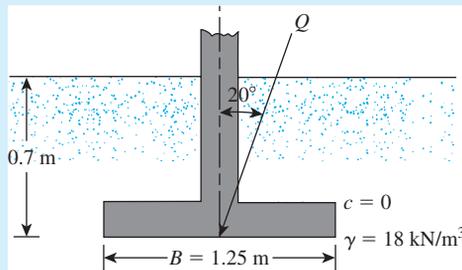


Figure 4.11

Determine  $Q$ . Use  $FS = 3$ , Eq. (3.29), and Eq. (4.26).

#### Solution

From Eq. (3.29),

$$\phi' \text{ (deg)} = 27.1 + 0.3N_{60} - 0.00054(N_{60})^2$$

The following is an estimation of  $\phi'$  in the field using Eq. (3.29).

Depth (m)	$N_{60}$	$\phi'$ (deg)
1.5	3	28
3.0	6	29
4.5	9	30
6.0	10	30
7.5	10	30
9.0	8	29

$$\text{Average} = 29.4^\circ \approx 30^\circ$$

With  $c' = 0$ , the ultimate bearing capacity [Eq. (4.26)] becomes

$$q_u = qN_q F_{qs} F_{qd} F_{qi} + \frac{1}{2} \gamma B N_\gamma F_{\gamma s} F_{\gamma d} F_{\gamma i}$$

$$q = (0.7)(18) = 12.6 \text{ kN/m}^2$$

$$\gamma = 18 \text{ kN/m}^3$$

From Table 4.2 for  $\phi' = 30^\circ$ ,

$$N_q = 18.4$$

$$N_\gamma = 22.4$$

From Table 4.3, (Note:  $B = L$ )

$$F_{qs} = 1 + \left(\frac{B}{L}\right) \tan \phi' = 1 + 0.577 = 1.577$$

$$F_{\gamma s} = 1 - 0.4 \left(\frac{B}{L}\right) = 0.6$$

$$F_{qd} = 1 + 2 \tan \phi' (1 - \sin \phi')^2 \frac{D_f}{B} = 1 + \frac{(0.289)(0.7)}{1.25} = 1.162$$

$$F_{\gamma d} = 1$$

$$F_{qi} = \left(1 - \frac{\beta^\circ}{90^\circ}\right)^2 = \left(1 - \frac{20}{90}\right)^2 = 0.605$$

$$F_{\gamma i} = \left(1 - \frac{\beta^\circ}{\phi'}\right)^2 = \left(1 - \frac{20}{30}\right)^2 = 0.11$$

Hence,

$$\begin{aligned} q_u &= (12.6)(18.4)(1.577)(1.162)(0.605) + \left(\frac{1}{2}\right)(18)(1.25)(22.4)(0.6)(1)(0.11) \\ &= 273.66 \text{ kN/m}^2 \end{aligned}$$

$$q_{\text{all}} = \frac{q_u}{\text{FS}} = \frac{273.66}{3} = 91.22 \text{ kN/m}^2$$

Now,

$$\begin{aligned} Q \cos 20 &= q_{\text{all}} B^2 = (91.22)(1.25)^2 \\ Q &\approx \mathbf{151.7 \text{ kN}} \end{aligned}$$

## 4.7 Other Solutions for Bearing Capacity $N_\gamma$ , Shape, and Depth Factors

### Bearing Capacity Factor, $N_\gamma$

The bearing capacity factor,  $N_\gamma$ , given in Eq. (4.29) will be used in this text. There are, however, several other solutions that can be found in the literature. Some of those solutions are given in Table 4.4.

**Table 4.4**  $N_\gamma$  Relationships

Investigator	Relationship
Meyerhof (1963)	$N_\gamma = (N_q - 1) \tan 1.4\phi'$
Hansen (1970)	$N_\gamma = 1.5(N_q - 1) \tan \phi'$
Biarez (1961)	$N_\gamma = 1.8(N_q - 1) \tan \phi'$
Booker (1969)	$N_\gamma = 0.1045e^{9.6\phi'} \quad (\phi' \text{ is in radians})$
Michalowski (1997)	$N_\gamma = e^{(0.66 + 5.1 \tan \phi')} \tan \phi'$
Hjiaj et al. (2005)	$N_\gamma = e^{(1/6)(\pi + 3\pi^2 \tan \phi')} \times (\tan \phi')^{2\pi/5}$
Martin (2005)	$N_\gamma = (N_q - 1) \tan 1.32\phi'$

Note:  $N_q$  is given by Eq. (4.27)

The variations of  $N_\gamma$  with soil friction angle  $\phi'$  for these relationships are given in Table 4.5.

**Table 4.5** Comparison of  $N_\gamma$  Values Provided by Various Investigators

Soil friction angle, $\phi'$ (deg)	Meyerhof (1963)	Hansen (1970)	Biarez (1961)	Booker (1969)	Michalowski (1997)	Hjiaj et al. (2005)	Martin (2005)
0	0.00	0	0.00	0.10	0.00	0.00	0.00
1	0.00	0.00	0.00	0.12	0.04	0.01	0.00
2	0.01	0.01	0.01	0.15	0.08	0.03	0.01
3	0.02	0.02	0.03	0.17	0.13	0.05	0.02
4	0.04	0.05	0.05	0.20	0.19	0.08	0.04
5	0.07	0.07	0.09	0.24	0.26	0.12	0.07
6	0.11	0.11	0.14	0.29	0.35	0.17	0.10
7	0.15	0.16	0.19	0.34	0.44	0.22	0.14
8	0.21	0.22	0.27	0.40	0.56	0.29	0.20
9	0.28	0.30	0.36	0.47	0.69	0.36	0.26
10	0.37	0.39	0.47	0.56	0.84	0.46	0.35
11	0.47	0.50	0.60	0.66	1.01	0.56	0.44
12	0.60	0.63	0.76	0.78	1.22	0.69	0.56
13	0.75	0.79	0.94	0.92	1.45	0.84	0.70
14	0.92	0.97	1.16	1.09	1.72	1.01	0.87
15	1.13	1.18	1.42	1.29	2.04	1.21	1.06
16	1.38	1.44	1.72	1.53	2.40	1.45	1.29
17	1.67	1.73	2.08	1.81	2.82	1.72	1.56
18	2.01	2.08	2.49	2.14	3.30	2.05	1.88

**Table 4.5** Comparison of  $N_\gamma$  Values Provided by Various Investigators (Continued)

Soil friction angle, $\phi'$ (deg)	Meyerhof (1963)	Hansen (1970)	Biarez (1961)	Booker (1969)	Michalowski (1997)	Hjjaj et al. (2005)	Martin (2005)
19	2.41	2.48	2.98	2.52	3.86	2.42	2.25
20	2.88	2.95	3.54	2.99	4.51	2.86	2.69
21	3.43	3.50	4.20	3.53	5.27	3.38	3.20
22	4.07	4.14	4.97	4.17	6.14	3.98	3.80
23	4.84	4.89	5.87	4.94	7.17	4.69	4.50
24	5.73	5.76	6.91	5.84	8.36	5.51	5.32
25	6.78	6.77	8.13	6.90	9.75	6.48	6.29
26	8.02	7.96	9.55	8.16	11.37	7.63	7.43
27	9.49	9.35	11.22	9.65	13.28	8.97	8.77
28	11.22	10.97	13.16	11.41	15.52	10.57	10.35
29	13.27	12.87	15.45	13.50	18.15	12.45	12.22
30	15.71	15.11	18.13	15.96	21.27	14.68	14.44
31	18.62	17.74	21.29	18.87	24.95	17.34	17.07
32	22.09	20.85	25.02	22.31	29.33	20.51	20.20
33	26.25	24.52	29.42	26.39	34.55	24.30	23.94
34	31.25	28.86	34.64	31.20	40.79	28.86	28.41
35	37.28	34.03	40.84	36.90	48.28	34.34	33.79
36	44.58	40.19	48.23	43.63	57.31	40.98	40.28
37	53.47	47.55	57.06	51.59	68.22	49.03	48.13
38	64.32	56.38	67.65	61.00	81.49	58.85	57.67
39	77.64	67.01	80.41	72.14	97.69	70.87	69.32
40	94.09	79.85	95.82	85.30	117.57	85.67	83.60
41	114.49	95.44	114.53	100.87	142.09	103.97	101.21
42	139.96	114.44	137.33	119.28	172.51	126.75	123.04
43	171.97	137.71	165.25	141.04	210.49	155.25	150.26
44	212.47	166.34	199.61	166.78	258.21	191.13	184.40
45	264.13	201.78	242.13	197.21	318.57	236.63	227.53

## Shape and Depth Factors

The shape and depth factors given in Table 4.3 recommended, respectively, by DeBeer (1970) and Hansen (1970) will be used in this text for solving problems. Many geotechnical engineers presently use the shape and depth factors proposed by Meyerhof (1963). These are given in Table 4.6. More recently, Zhu and Michalowski (2005) evaluated the shape factors based on the elastoplastic model of soil and finite element analysis. They are

$$F_{cs} = 1 + (1.8 \tan^2 \phi' + 0.1) \left( \frac{B}{L} \right)^{0.5} \quad (4.30)$$

**Tabel 4.6** Meyerhof's Shape and Depth Factors

Factor	Relationship
<b>Shape</b>	
For $\phi = 0$ ,	
$F_{cs}$	$1 + 0.2 (B/L)$
$F_{qs} = F_{\gamma s}$	1
For $\phi' \geq 10^\circ$ ,	
$F_{cs}$	$1 + 0.2 (B/L) \tan^2(45 + \phi'/2)$
$F_{qs} = F_{\gamma s}$	$1 + 0.1 (B/L) \tan^2(45 + \phi'/2)$
<b>Depth</b>	
For $\phi = 0$ ,	
$F_{cd}$	$1 + 0.2 (D_f/B)$
$F_{qd} = F_{\gamma d}$	1
For $\phi \geq 10^\circ$ ,	
$F_{cd}$	$1 + 0.2 (D_f/B) \tan (45 + \phi'/2)$
$F_{qd} = F_{\gamma d}$	$1 + 0.1 (D_f/B) \tan (45 + \phi'/2)$

$$F_{qs} = 1 + 1.9 \tan^2 \phi' \left( \frac{B}{L} \right)^{0.5} \quad (4.31)$$

$$F_{\gamma s} = 1 + (0.6 \tan^2 \phi' - 0.25) \left( \frac{B}{L} \right) \quad (\text{for } \phi' \leq 30^\circ) \quad (4.32)$$

and

$$F_{\gamma s} = 1 + (1.3 \tan^2 \phi' - 0.5) \left( \frac{L}{B} \right)^{1.5} e^{-L/Bd} \quad (\text{for } \phi' > 30^\circ) \quad (4.33)$$


Equations (4.30) through (4.33) have been derived based on sound theoretical background and may be used for bearing capacity calculation.

## 4.8 Case Studies on Ultimate Bearing Capacity

In this section, we will consider two field observations related to the ultimate bearing capacity of foundations on soft clay. The failure loads on the foundations in the field will be compared with those estimated from the theory presented in Section 4.6.

### Foundation Failure of a Concrete Silo

An excellent case of bearing capacity failure of a 6-m (20-ft) diameter concrete silo was provided by Bozozuk (1972). The concrete tower silo was 21 m (70 ft) high and was constructed over soft clay on a ring foundation. Figure 4.12 shows the variation of the

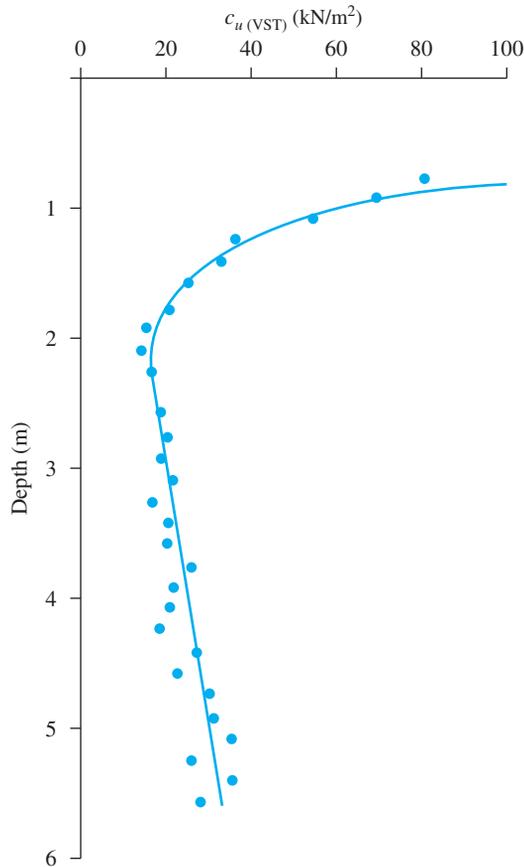

**Figure 4.12** Variation of  $c_u$  with depth obtained from field vane shear test


undrained shear strength ( $c_u$ ) obtained from field vane shear tests at the site. The groundwater table was located at about 0.6 m (2 ft) below the ground surface.

On September 30, 1970, just after it was filled to capacity for the first time with corn silage, the concrete tower silo suddenly overturned due to bearing capacity failure. Figure 4.13 shows the approximate profile of the failure surface in soil. The failure surface extended to about 7 m (23 ft) below the ground surface. Bozozuk (1972) provided the following average parameters for the soil in the failure zone and the foundation:

- Load per unit area on the foundation when failure occurred  $\approx 160 \text{ kN/m}^2$
- Average plasticity index of clay (PI)  $\approx 36$
- Average undrained shear strength ( $c_u$ ) from 0.6 to 7 m depth obtained from field vane shear tests  $\approx 27.1 \text{ kN/m}^2$
- From Figure 4.13,  $B \approx 7.2 \text{ m}$  and  $D_f \approx 1.52 \text{ m}$

We can now calculate the factor of safety against bearing capacity failure. From Eq. (4.26)

$$q_u = c'N_c F_{cs} F_{cd} F_{ci} + qN_c F_{qs} F_{qd} F_{qi} + \frac{1}{2} \gamma B N_\gamma F_{\gamma s} F_{\gamma d} F_{\gamma i}$$

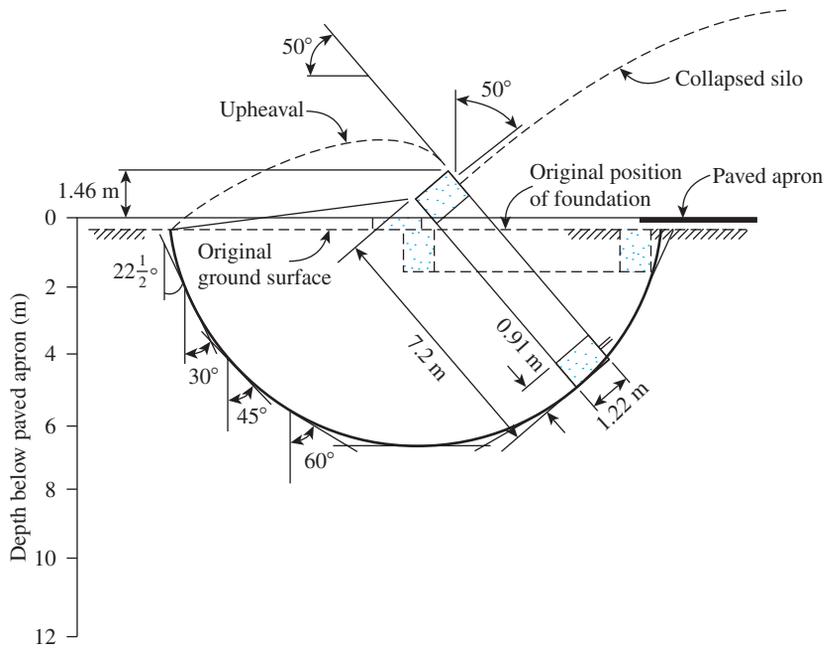

**Figure 4.13** Approximate profile of silo failure (Based on Bozozuk, 1972)

For  $\phi = 0$  condition and vertical loading,  $c' = c_u$ ,  $N_c = 5.14$ ,  $N_q = 1$ ,  $N_\gamma = 0$ , and  $F_{ci} = F_{qi} = F_{\gamma i} = 0$ . Also, from Table 4.3,

$$F_{cs} = 1 + \left(\frac{7.2}{7.2}\right)\left(\frac{1}{5.14}\right) = 1.195$$

$$F_{qs} = 1$$

$$F_{cd} = 1 + (0.4)\left(\frac{1.52}{7.2}\right) = 1.08$$

$$F_{qd} = 1$$

Thus,

$$q_u = (c_u)(5.14)(1.195)(1.08)(1) + (\gamma)(1.52)$$

Assuming  $\gamma \approx 18 \text{ kN/m}^3$ ,

$$q_u = 6.63c_u + 27.36 \quad (4.34)$$

According to Eqs. (3.39) and (3.40a),

$$c_{u(\text{corrected})} = \lambda c_{u(\text{VST})}$$

$$\lambda = 1.7 - 0.54 \log [\text{PI}(\%)]$$

For this case,  $PI \approx 36$  and  $c_{u(VST)} = 27.1 \text{ kN/m}^2$ . So

$$\begin{aligned} c_{u(\text{corrected})} &= \{1.7 - 0.54 \log [PI(\%)]\} c_{u(VST)} \\ &= (1.7 - 0.54 \log 36)(27.1) \approx 23.3 \text{ kN/m}^2 \end{aligned}$$

Substituting this value of  $c_u$  in Eq. (4.34)

$$q_u = (6.63)(23.3) + 27.36 = 181.8 \text{ kN/m}^2$$

The factor of safety against bearing capacity failure


$$FS = \frac{q_u}{\text{applied load per unit area}} = \frac{181.8}{160} = 1.14$$

This factor of safety is too low and approximately equals one, for which the failure occurred.

### Load Tests on Small Foundations in Soft Bangkok Clay

Brand et al. (1972) reported load test results for five small square foundations in soft Bangkok clay in Rangsit, Thailand. The foundations were  $0.6 \text{ m} \times 0.6 \text{ m}$ ,  $0.675 \text{ m} \times 0.675 \text{ m}$ ,  $0.75 \text{ m} \times 0.75 \text{ m}$ ,  $0.9 \text{ m} \times 0.9 \text{ m}$ , and  $1.05 \text{ m} \times 1.05 \text{ m}$ . The depth of the foundations ( $D_f$ ) was 1.5 m in all cases.

Figure 4.14 shows the vane shear test results for clay. Based on the variation of  $c_{u(VST)}$  with depth, it can be approximated that  $c_{u(VST)}$  is about  $35 \text{ kN/m}^2$  for depths between

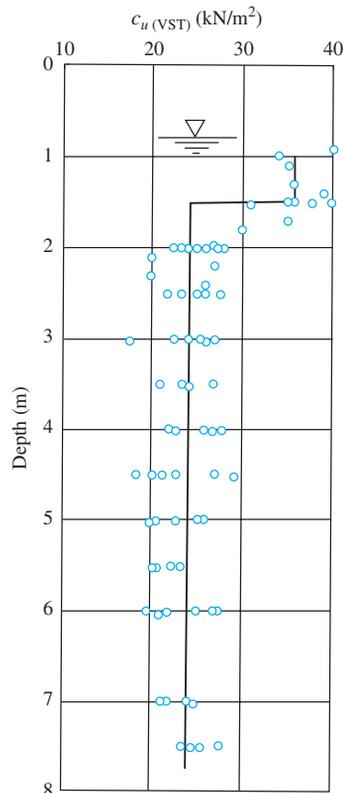

**Figure 4.14** Variation of  $c_{u(VST)}$  with depth for soft Bangkok clay

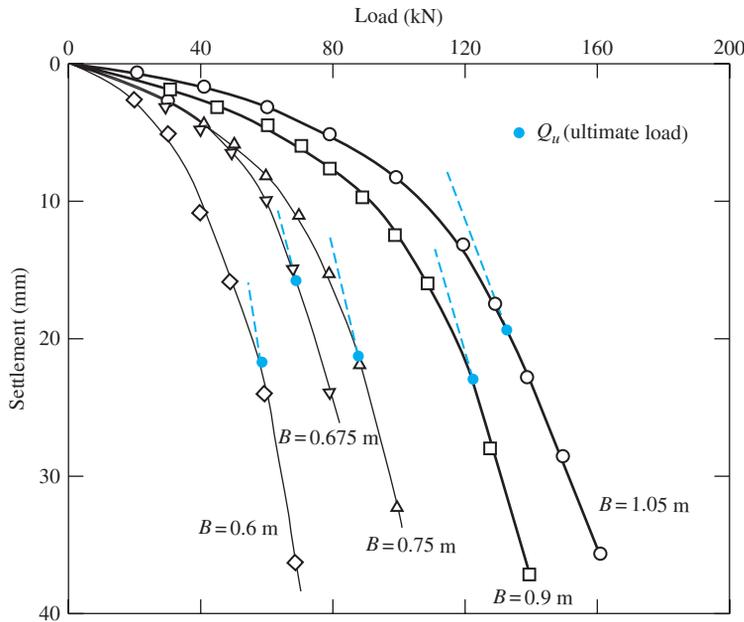


Figure 4.15 Load-settlement plots obtained from bearing capacity tests

zero to 1.5 m measured from the ground surface, and  $c_{u(\text{VST})}$  is approximately equal to  $24 \text{ kN/m}^2$  for depths varying from 1.5 to 8 m. Other properties of the clay are

- Liquid limit = 80
- Plastic limit = 40
- Sensitivity  $\approx 5$

Figure 4.15 shows the load-settlement plots obtained from the bearing-capacity tests on all five foundations. The ultimate loads,  $Q_u$ , obtained from each test are shown in Figure 4.15 and given in Table 4.7. The ultimate load is defined as the point where the load-settlement plot becomes practically linear.

Table 4.7 Comparison of Ultimate Bearing Capacity—Theory versus Field Test Results

$B$ (m) (1)	$D_f$ (m) (2)	$F_{cd}^*$ (3)	$q_{u(\text{theory})}^{**}$ ( $\text{kN/m}^2$ ) (4)	$Q_{u(\text{field})}$ (kN) (5)	$q_{u(\text{field})}^{***}$ ( $\text{kN/m}^2$ ) (6)	$\frac{q_{u(\text{field})} - q_{u(\text{theory})}}{q_{u(\text{field})}}$ ( $\theta_0$ ) (7)
0.600	1.5	1.476	158.3	60	166.6	4.98
0.675	1.5	1.459	156.8	71	155.8	-0.64
0.750	1.5	1.443	155.4	90	160.6	2.87
0.900	1.5	1.412	152.6	124	153.0	0.27
1.050	1.5	1.384	150.16	140	127.0	-18.24

\*Eq. (4.35); \*\*Eq. (4.37); \*\*\* $Q_{u(\text{field})}/B^2 = q_{u(\text{field})}$

From Eq. (4.26),

$$q_u = c'N_cF_{cs}F_{cd}F_{ci} + qN_qF_{qs}F_{qd}F_{qi} + \frac{1}{2}\gamma BN_\gamma F_{\gamma s}F_{\gamma d}F_{\gamma i}$$

For undrained condition and vertical loading (that is,  $\phi = 0$ ) from Tables 4.2 and 4.3,

- $F_{ci} = F_{qi} = F_{\gamma i} = 1$
- $c' = c_u$ ,  $N_c = 5.14$ ,  $N_q = 1$ , and  $N_\gamma = 0$
- $F_{cs} = 1 + \left(\frac{B}{L}\right)\left(\frac{N_q}{N_c}\right) = 1 + (1)\left(\frac{1}{5.14}\right) = 1.195$
- $F_{qs} = 1$
- $F_{qd} = 1$
- $F_{cd} = 1 + 0.4 \tan^{-1}\left(\frac{D_f}{B}\right) = 1 + 0.4 \tan^{-1}\left(\frac{1.5}{B}\right)$  (4.35)

(Note:  $D_f/B > 1$  in all cases)

Thus,

$$q_u = (5.14)(c_u)(1.195)F_{cd} + q$$
 (4.36)

The values of  $c_{u(VST)}$  need to be corrected for use in Eq. (4.36). From Eq. (3.39),

$$c_u = \lambda c_{u(VST)}$$

From Eq. (3.40b),

$$\lambda = 1.18e^{-0.08(PI)} + 0.57 = 1.18e^{-0.08(80 - 40)} + 0.57 = 0.62$$

From Eq. (3.40c),

$$\lambda = 7.01e^{-0.08(LL)} + 0.57 = 7.01e^{-0.08(80)} + 0.57 = 0.58$$

So the average value of  $\lambda \approx 0.6$ . Hence,

$$c_u = \lambda c_{u(VST)} = (0.6)(24) = 14.4 \text{ kN/m}^2$$

Let us assume  $\gamma = 18.5 \text{ kN/m}^2$ . So

$$q = \gamma D_f = (18.5)(1.5) = 27.75 \text{ kN/m}^2$$

Substituting  $c_u = 14.4 \text{ kN/m}^2$  and  $q = 27.75 \text{ kN/m}^2$  into Eq. (4.36), we obtain

$$q_u(\text{kN/m}^2) = 88.4F_{cd} + 27.75$$
 (4.37)

The values of  $q_u$  calculated using Eq. (4.37) are given in column 4 of Table 4.7. Also, the  $q_u$  determined from the field tests are given in column 6. The theoretical and field values of  $q_u$  compare very well. The important lessons learned from this study are

1. The ultimate bearing capacity is a function of  $c_u$ . If Eq. (3.40a) would have been used to correct the undrained shear strength, the theoretical values of  $q_u$  would have varied between  $200 \text{ kN/m}^2$  and  $210 \text{ kN/m}^2$ . These values are about 25% to 55% more than those obtained from the field and are on the unsafe side.
2. It is important to recognize that empirical correlations like those given in Eqs. (3.40a), (3.40b) and (3.40c) are sometimes site specific. Thus, proper engineering judgment and any record of past studies would be helpful in the evaluation of bearing capacity.

## 4.9 Effect of Soil Compressibility

In Section 4.2, we have discussed the mode of bearing-capacity failure such as general shear failure, local shear failure and punching shear failure. The change of failure mode is due to soil compressibility, to account for which Vesic (1973) proposed the following modification of Eq. (4.26):

$$q_u = c'N_cF_{cs}F_{cd}F_{cc} + qN_qF_{qs}F_{qd}F_{qc} + \frac{1}{2}\gamma BN_\gamma F_{\gamma s}F_{\gamma d}F_{\gamma c} \quad (4.38)$$

In this equation,  $F_{cc}$ ,  $F_{qc}$ , and  $F_{\gamma c}$  are soil compressibility factors.

The soil compressibility factors were derived by Vesic (1973) by analogy to the expansion of cavities. According to that theory, in order to calculate  $F_{cc}$ ,  $F_{qc}$ , and  $F_{\gamma c}$ , the following steps should be taken:

*Step 1.* Calculate the *rigidity index*,  $I_r$ , of the soil at a depth approximately  $B/2$  below the bottom of the foundation, or

$$I_r = \frac{G_s}{c' + q' \tan \phi'} \quad (4.39)$$

where

$G_s$  = shear modulus of the soil

$q'$  = effective overburden pressure at a depth of  $D_f + B/2$

*Step 2.* The critical rigidity index,  $I_{r(\text{cr})}$ , can be expressed as

$$I_{r(\text{cr})} = \frac{1}{2} \left\{ \exp \left[ \left( 3.30 - 0.45 \frac{B}{L} \right) \cot \left( 45 - \frac{\phi'}{2} \right) \right] \right\} \quad (4.40)$$

The variations of  $I_{r(\text{cr})}$  with  $B/L$  are given in Table 4.8.

*Step 3.* If  $I_r \geq I_{r(\text{cr})}$ , then

$$F_{cc} = F_{qc} = F_{\gamma c} = 1$$

However, if  $I_r < I_{r(\text{cr})}$ , then

$$F_{\gamma c} = F_{qc} = \exp \left\{ \left( -4.4 + 0.6 \frac{B}{L} \right) \tan \phi' + \left[ \frac{(3.07 \sin \phi')(\log 2I_r)}{1 + \sin \phi'} \right] \right\} \quad (4.41)$$

Figure 4.16 shows the variation of  $F_{\gamma c} = F_{qc}$  [see Eq. (4.41)] with  $\phi'$  and  $I_r$ . For  $\phi = 0$ ,


**Table 4.8** Variation of  $I_{r(cr)}$  with  $\phi'$  and  $B/L$ 

$\phi'$ (deg)	$I_{r(cr)}$					
	$B/L = 0$	$B/L = 0.2$	$B/L = 0.4$	$B/L = 0.6$	$B/L = 0.8$	$B/L = 1.0$
0	13.56	12.39	11.32	10.35	9.46	8.64
5	18.30	16.59	15.04	13.63	12.36	11.20
10	25.53	22.93	20.60	18.50	16.62	14.93
15	36.85	32.77	29.14	25.92	23.05	20.49
20	55.66	48.95	43.04	37.85	33.29	29.27
25	88.93	77.21	67.04	58.20	50.53	43.88
30	151.78	129.88	111.13	95.09	81.36	69.62
35	283.20	238.24	200.41	168.59	141.82	119.31
40	593.09	488.97	403.13	332.35	274.01	225.90
45	1440.94	1159.56	933.19	750.90	604.26	486.26

$$F_{cc} = 0.32 + 0.12 \frac{B}{L} + 0.60 \log I_r \quad (4.42)$$

For  $\phi' > 0$ ,

$$F_{cc} = F_{qc} - \frac{1 - F_{qc}}{N_q \tan \phi'} \quad (4.43)$$

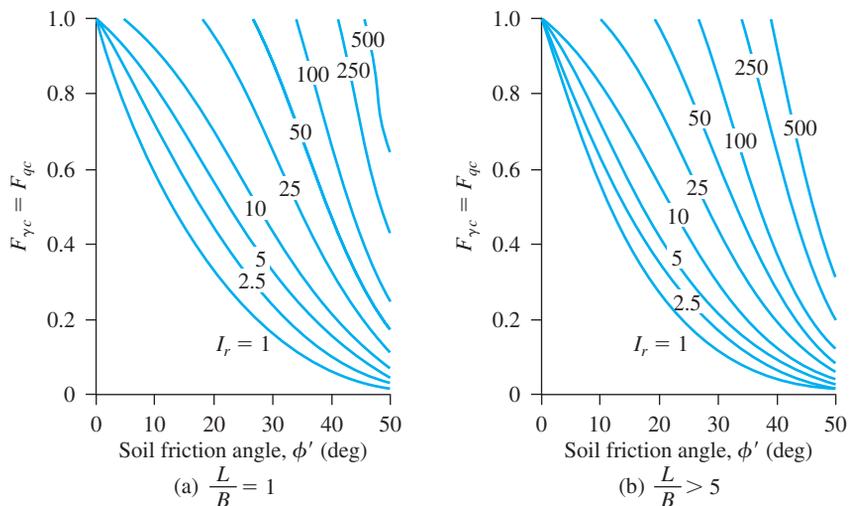**Figure 4.16** Variation of  $F_{\gamma_c} = F_{q_c}$  with  $I_r$  and  $\phi'$

**Example 4.6**

For a shallow foundation,  $B = 0.6$  m,  $L = 1.2$  m, and  $D_f = 0.6$  m. The known soil characteristics are

Soil:

$$\phi' = 25^\circ$$

$$c' = 48 \text{ kN/m}^2$$

$$\gamma = 18 \text{ kN/m}^3$$

$$\text{Modulus of elasticity, } E_s = 620 \text{ kN/m}^2$$

$$\text{Poisson's ratio, } \mu_s = 0.3$$

Calculate the ultimate bearing capacity.

**Solution**

From Eq. (4.39),

$$I_r = \frac{G_s}{c' + q' \tan \phi'}$$

However,

$$G_s = \frac{E_s}{2(1 + \mu_s)}$$

So

$$I_r = \frac{E_s}{2(1 + \mu_s)[c' + q' \tan \phi']}$$

Now,

$$q' = \gamma \left( D_f + \frac{B}{2} \right) = 18 \left( 0.6 + \frac{0.6}{2} \right) = 16.2 \text{ kN/m}^2$$

Thus,

$$I_r = \frac{620}{2(1 + 0.3)[48 + 16.2 \tan 25]} = 4.29$$

From Eq. (4.40),

$$\begin{aligned} I_{r(\text{cr})} &= \frac{1}{2} \left\{ \exp \left[ \left( 3.3 - 0.45 \frac{B}{L} \right) \cot \left( 45 - \frac{\phi'}{2} \right) \right] \right\} \\ &= \frac{1}{2} \left\{ \exp \left[ \left( 3.3 - 0.45 \frac{0.6}{1.2} \right) \cot \left( 45 - \frac{25}{2} \right) \right] \right\} = 62.41 \end{aligned}$$

Since  $I_{r(\text{cr})} > I_r$ , we use Eqs. (4.41) and (4.43) to obtain

$$\begin{aligned} F_{\gamma c} &= F_{qc} 5 \exp \left\{ \left( -4.4 + 0.6 \frac{B}{L} \right) \tan \phi' + \left[ \frac{(3.07 \sin \phi') \log(2I_r)}{1 + \sin \phi'} \right] \right\} \\ &= \exp \left\{ \left( -4.4 + 0.6 \frac{0.6}{1.2} \right) \tan 25 \right. \\ &\quad \left. + \left[ \frac{(3.07 \sin 25) \log(2 \times 4.29)}{1 + \sin 25} \right] \right\} = 0.347 \end{aligned}$$

and

$$F_{cc} = F_{qc} - \frac{1 - F_{qc}}{N_c \tan \phi'}$$

For  $\phi' = 25^\circ$ ,  $N_c = 20.72$  (see Table 4.2); therefore,

$$F_{cc} = 0.347 - \frac{1 - 0.347}{20.72 \tan 25} = 0.279$$

Now, from Eq. (4.38),

$$q_u = c'N_c F_{cs} F_{cd} F_{cc} + qN_q F_{qs} F_{qd} F_{qc} + \frac{1}{2} \gamma B N_\gamma F_{\gamma s} F_{\gamma d} F_{\gamma c}$$

From Table 4.2, for  $\phi' = 25^\circ$ ,  $N_c = 20.72$ ,  $N_q = 10.66$ , and  $N_\gamma = 10.88$ . Consequently,

$$F_{cs} = 1 + \left(\frac{N_q}{N_c}\right)\left(\frac{B}{L}\right) = 1 + \left(\frac{10.66}{20.72}\right)\left(\frac{0.6}{1.2}\right) = 1.257$$

$$F_{qs} = 1 + \frac{B}{L} \tan \phi' = 1 + \frac{0.6}{1.2} \tan 25 = 1.233$$

$$F_{\gamma s} = 1 - 0.4\left(\frac{B}{L}\right) = 1 - 0.4 \frac{0.6}{1.2} = 0.8$$

$$F_{qd} = 1 + 2 \tan \phi' (1 - \sin \phi')^2 \left(\frac{D_f}{B}\right)$$

$$= 1 + 2 \tan 25 (1 - \sin 25)^2 \left(\frac{0.6}{0.6}\right) = 1.311$$

$$F_{cd} = F_{qd} - \frac{1 - F_{qd}}{N_c \tan \phi'} = 1.311 - \frac{1 - 1.311}{20.72 \tan 25}$$

$$= 1.343$$

and

$$F_{\gamma d} = 1$$

Thus,

$$q_u = (48)(20.72)(1.257)(1.343)(0.279) + (0.6 \times 18)(10.66)(1.233)(1.311) \\ (0.347) + \left(\frac{1}{2}\right)(18)(0.6)(10.88)(0.8)(1)(0.347) = \mathbf{549.32 \text{ kN/m}^2}$$

## 4.10 Eccentrically Loaded Foundations

In several instances, as with the base of a retaining wall, foundations are subjected to moments in addition to the vertical load, as shown in Figure 4.17a. In such cases, the distribution of pressure by the foundation on the soil is not uniform. The nominal distribution of pressure is

$$q_{\max} = \frac{Q}{BL} + \frac{6M}{B^2L} \quad (4.44)$$

and

$$q_{\min} = \frac{Q}{BL} - \frac{6M}{B^2L} \quad (4.45)$$

where

$Q$  = total vertical load


$M$  = moment on the foundation

Figure 4.17b shows a force system equivalent to that shown in Figure 4.17a. The distance


$$e = \frac{M}{Q} \quad (4.46)$$

is the eccentricity. Substituting Eq. (4.46) into Eqs. (4.44) and (4.45) gives

$$q_{\max} = \frac{Q}{BL} \left( 1 + \frac{6e}{B} \right) \quad (4.47)$$

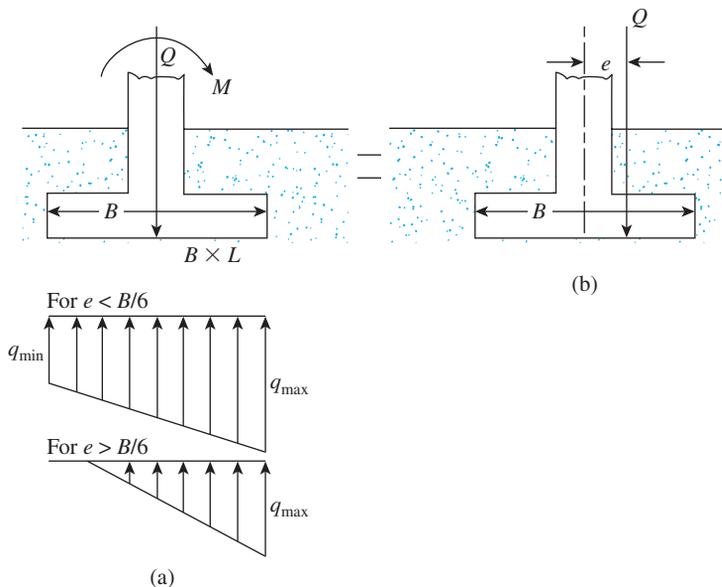

**Figure 4.17** Eccentrically loaded foundations

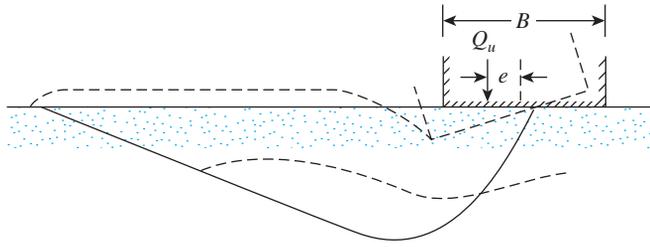

**Figure 4.18** Nature of failure surface in soil supporting a strip foundation subjected to eccentric loading (Note:  $D_f = 0$ ;  $Q_u$  is ultimate load per unit length of foundation)

and

$$q_{\min} = \frac{Q}{BL} \left( 1 - \frac{6e}{B} \right) \quad (4.48)$$

Note that, in these equations, when the eccentricity  $e$  becomes  $B/6$ ,  $q_{\min}$  is zero. For  $e > B/6$ ,  $q_{\min}$  will be negative, which means that tension will develop. Because soil cannot take any tension, there will then be a separation between the foundation and the soil underlying it. The nature of the pressure distribution on the soil will be as shown in Figure 4.17a. The value of  $q_{\max}$  is then

$$q_{\max} = \frac{4Q}{3L(B - 2e)} \quad (4.49)$$

The exact distribution of pressure is difficult to estimate.

Figure 4.18 shows the nature of failure surface in soil for a surface strip foundation subjected to an eccentric load. The factor of safety for such type of loading against bearing capacity failure can be evaluated as

$$\text{FS} = \frac{Q_u}{Q} \quad (4.50)$$

where  $Q_u$  = ultimate load-carrying capacity.

The following sections describe several theories for determining  $Q_u$ .

## 4.11 Ultimate Bearing Capacity under Eccentric Loading—One-Way Eccentricity

### Effective Area Method (Meyerhoff, 1953)


In 1953, Meyerhof proposed a theory that is generally referred to as the *effective area method*.

The following is a step-by-step procedure for determining the ultimate load that the soil can support and the factor of safety against bearing capacity failure:

*Step 1.* Determine the effective dimensions of the foundation (Figure 4.19a):

$$B' = \text{effective width} = B - 2e$$

$$L' = \text{effective length} = L$$

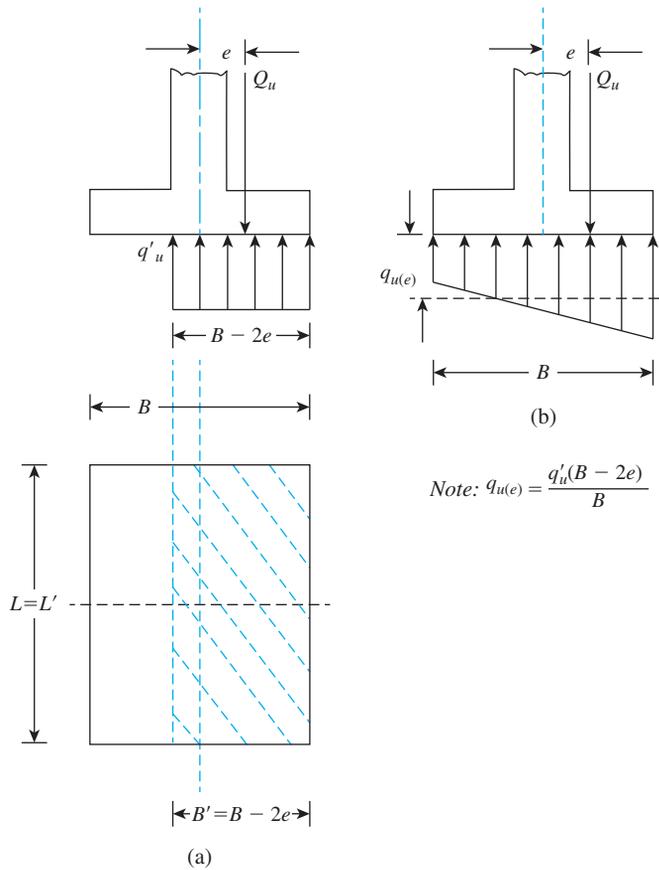

**Figure 4.19** Definition of  $q'_u$  and  $q_{u(e)}$

Note that if the eccentricity were in the direction of the length of the foundation, the value of  $L'$  would be equal to  $L - 2e$ . The value of  $B'$  would equal  $B$ . The smaller of the two dimensions (i.e.,  $L'$  and  $B'$ ) is the effective width of the foundation.

**Step 2.** Use Eq. (4.26) for the ultimate bearing capacity:

$$q'_u = c'N_cF_{cs}F_{cd}F_{ci} + qN_qF_{qs}F_{qd}F_{qi} + \frac{1}{2}\gamma B'N_\gamma F_{\gamma s}F_{\gamma d}F_{\gamma i} \quad (4.51)$$

To evaluate  $F_{cs}$ ,  $F_{qs}$ , and  $F_{\gamma s}$ , use the relationships given in Table 4.3 with *effective length* and *effective width* dimensions instead of  $L$  and  $B$ , respectively. To determine  $F_{cd}$ ,  $F_{qd}$ , and  $F_{\gamma d}$ , use the relationships given in Table 4.3. However, do not replace  $B$  with  $B'$ .

**Step 3.** The total ultimate load that the foundation can sustain is

$$Q_u = q'_u \overbrace{(B')(L')}^{A'} \quad (4.52)$$

where  $A' =$  effective area.

Step 4. The factor of safety against bearing capacity failure is

$$\text{FS} = \frac{Q_u}{Q}$$

It is important to note that  $q'_u$  is the ultimate bearing capacity of a foundation of width  $B' = B - 2e$  with a centric load (Figure 4.19a). However, the actual distribution of soil reaction at ultimate load will be of the type shown in Figure 4.19b. In Figure 4.19b,  $q_{u(e)}$  is the average load per unit area of the foundation. Thus,

$$q_{u(e)} = \frac{q'_u(B - 2e)}{B} \quad (4.53)$$

### Prakash and Saran Theory

Prakash and Saran (1971) analyzed the problem of ultimate bearing capacity of eccentrically and vertically loaded continuous (strip) foundations by using the one-sided failure surface in soil, as shown in Figure 4.18. According to this theory, the ultimate load *per unit length of a continuous foundation* can be estimated as

$$Q_u = q_{u(e)}B = B \left[ c'N_{c(e)} + qN_{q(e)} + \frac{1}{2}\gamma BN_{\gamma(e)} \right] \quad (4.54)$$

where  $N_{c(e)}$ ,  $N_{q(e)}$ ,  $N_{\gamma(e)}$  = bearing capacity factors under eccentric loading.

The variations of  $N_{c(e)}$ ,  $N_{q(e)}$ , and  $N_{\gamma(e)}$  with soil friction angle  $\phi'$  are given in Figures 4.20, 4.21, and 4.22. For rectangular foundations, the ultimate load can be given as

$$Q_u = BL \left[ c'N_{c(e)}F_{cs(e)} + qN_{q(e)}F_{qs(e)} + \frac{1}{2}\gamma BN_{\gamma(e)}F_{\gamma s(e)} \right] \quad (4.55)$$

where  $F_{cs(e)}$ ,  $F_{qs(e)}$ , and  $F_{\gamma s(e)}$  = shape factors.

Prakash and Saran (1971) also recommended the following for the shape factors:

$$F_{cs(e)} = 1.2 - 0.025 \frac{L}{B} \quad (\text{with a minimum of } 1.0) \quad (4.56)$$

$$F_{qs(e)} = 1 \quad (4.57)$$

and

$$F_{\gamma s(e)} = 1.0 + \left( \frac{2e}{B} - 0.68 \right) \frac{B}{L} + \left[ 0.43 - \left( \frac{3}{2} \right) \left( \frac{e}{B} \right) \right] \left( \frac{B}{L} \right)^2 \quad (4.58)$$

### Reduction Factor Method (For Granular Soil)

Purkayastha and Char (1977) carried out stability analysis of eccentrically loaded *continuous foundations supported by a layer of sand* using the method of slices. Based on that analysis, they proposed

$$R_k = 1 - \frac{q_{u(e)}}{q_{u(\text{centric})}} \quad (4.59)$$

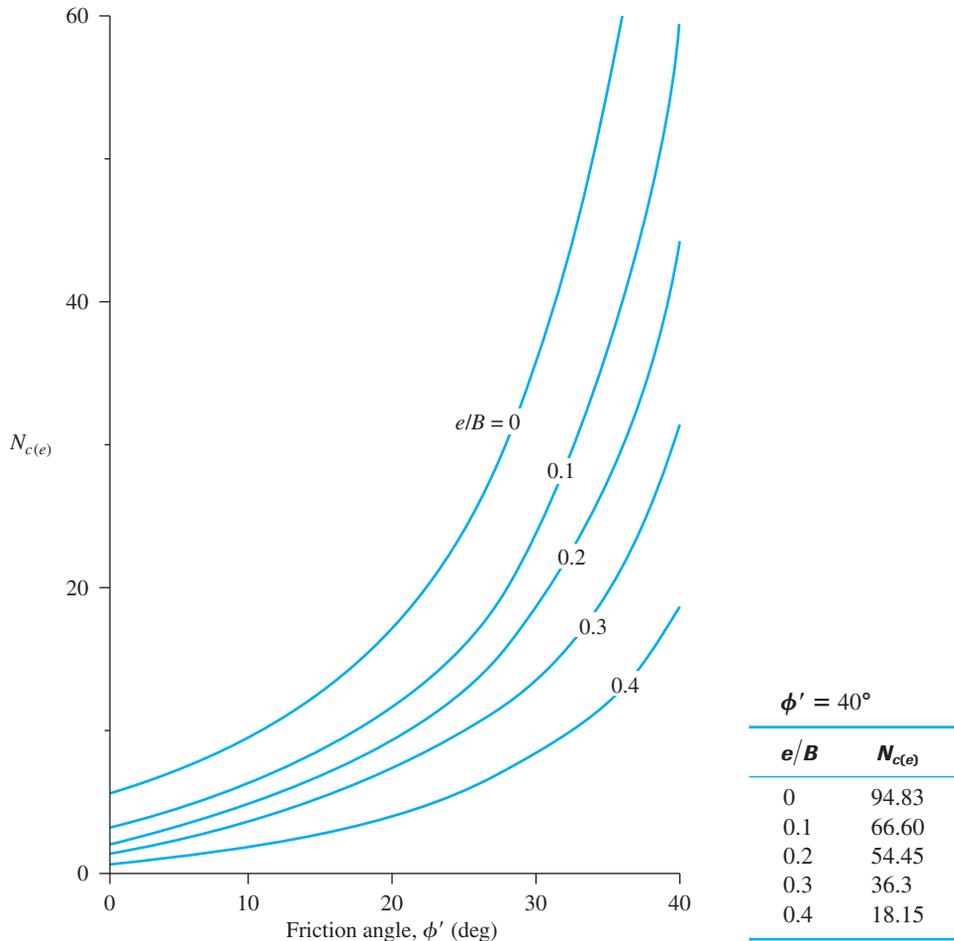


Figure 4.20 Variation of  $N_{c(e)}$  with  $\phi'$

where

$R_k$  = reduction factor


$q_{u(e)}$  = average ultimate bearing capacity of eccentrically loaded continuous foundations  
(See Figure 4.19.)

$q_u$  = ultimate bearing capacity of centrally loaded continuous foundations

The magnitude of  $R_k$  can be expressed as

$$R_k = a \left( \frac{e}{B} \right)^k \tag{4.60}$$

where  $a$  and  $k$  are functions of the embedment ratio  $D_f/B$  (Table 4.9).

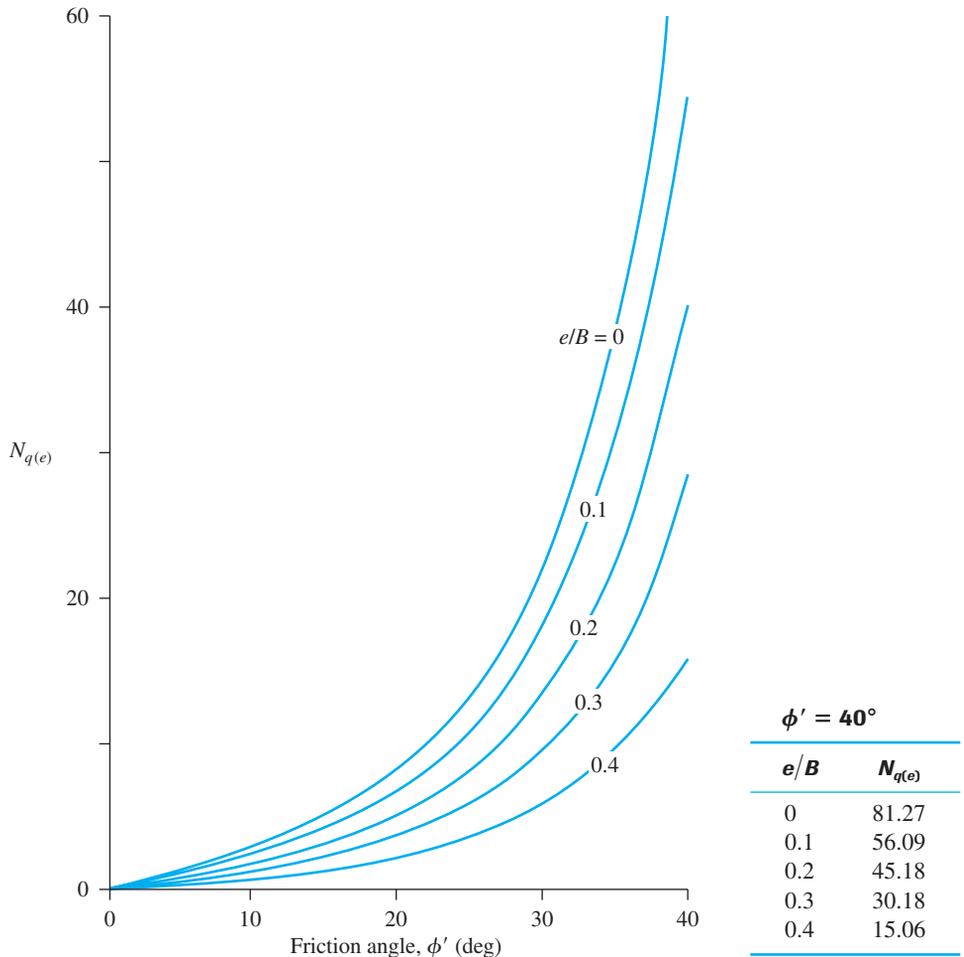

**Figure 4.21** Variation of  $N_{q(e)}$  with  $\phi'$

Hence, combining Eqs. (4.59) and (4.60)

$$q_{u(e)} = q_u(1 - R_k) = q_u \left[ 1 - a \left( \frac{e}{B} \right)^k \right] \tag{4.61}$$

**Table 4.9** Variations of  $a$  and  $k$  [Eq. (4.60)]

$D_f/B$	$a$	$k$
0.00	1.862	0.73
0.25	1.811	0.785
0.50	1.754	0.80
1.00	1.820	0.888

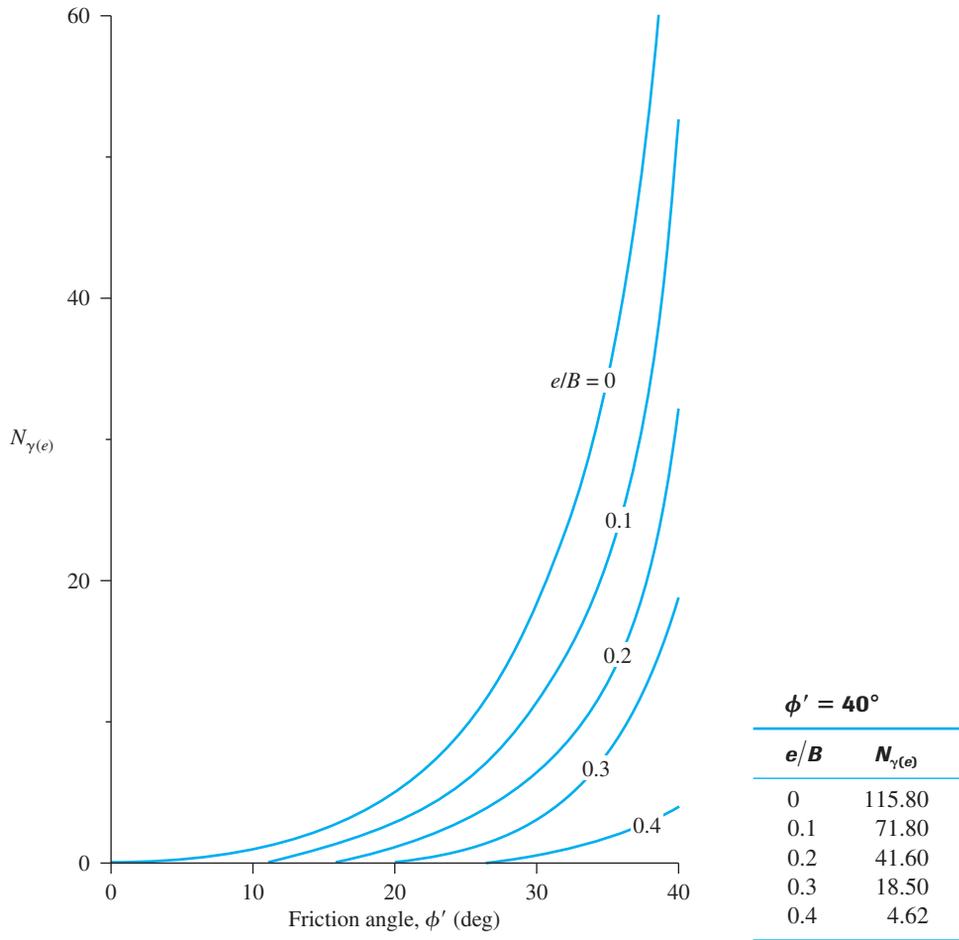


Figure 4.22 Variation of  $N_{\gamma(e)}$  with  $\phi'$

where

$$q_u = qN_q F_{qd} + \frac{1}{2} \gamma B N_\gamma F_{\gamma d} \tag{4.62}$$

The relationships for  $F_{qd}$  and  $F_{\gamma d}$  are given in Table 4.3.

Based on several laboratory model tests, Patra et al. (2012a) have concluded that

$$q_{u(e)} \approx q_u \left( 1 - \frac{2e}{B} \right) \tag{4.63}$$

The ultimate load *per unit length* of the foundation can then be given as

$$Q_u = B q_{u(e)} \tag{4.64}$$

### Example 4.7


A continuous foundation is shown in Figure 4.23. If the load eccentricity is 0.2 m, determine the ultimate load,  $Q_u$ , per unit length of the foundation. Use Meyerhof's effective area method.

#### Solution

For  $c' = 0$ , Eq. (4.51) gives

$$q'_u = q N_q F_{qs} F_{qd} F_{qi} + \frac{1}{2} \gamma' B' N_\gamma F_{\gamma s} F_{\gamma d} F_{\gamma i}$$

where  $q = (16.5)(1.5) = 24.75 \text{ kN/m}^2$ .

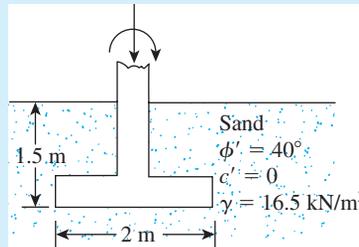

**Figure 4.23** A continuous foundation with load eccentricity

For  $\phi' = 40^\circ$ , from Table 4.2,  $N_q = 64.2$  and  $N_\gamma = 109.41$ . Also,

$$B' = 2 - (2)(0.2) = 1.6 \text{ m}$$

Because the foundation in question is a continuous foundation,  $B'/L'$  is zero. Hence,  $F_{qs} = 1$ ,  $F_{\gamma s} = 1$ . From Table 4.3,

$$F_{qi} = F_{\gamma i} = 1$$

$$F_{qd} = 1 + 2 \tan \phi' (1 - \sin \phi')^2 \frac{D_f}{B} = 1 + 0.214 \left( \frac{1.5}{2} \right) = 1.16$$

$$F_{\gamma d} = 1$$

and

$$q'_u = (24.75)(64.2)(1)(1.16)(1)$$

$$+ \left( \frac{1}{2} \right) (16.5)(1.6)(109.41)(1)(1)(1) = 3287.39 \text{ kN/m}^2$$

Consequently,

$$Q_u = (B')(1)(q'_u) = (1.6)(1)(3287.39) \approx \mathbf{5260 \text{ kN}}$$

**Example 4.8**

Solve Example 4.7 using Eq. (4.54).

**Solution**

Since  $c' = 0$

$$Q_u = B \left[ qN_{q(e)} + \frac{1}{2} \gamma B N_{\gamma(e)} \right]$$

$$\frac{e}{B} = \frac{0.2}{2} = 0.1$$

For  $\phi' = 40^\circ$  and  $e/B = 0.1$ , Figures 4.21 and 4.22 give  $N_{q(e)} \approx 56.09$  and  $N_{\gamma(e)} \approx 71.8$ . Hence,

$$Q_u = 2[(24.75)(56.09) + (\frac{1}{2})(16.5)(2)(71.8)] = \mathbf{5146 \text{ kN}}$$

**Example 4.9**

Solve Example 4.7 using Eq. (4.63).

**Solution**

With  $c' = 0$ ,

$$q_{u(e)} = qN_q F_{qd} + \frac{1}{2} \gamma B N_\gamma F_{\gamma d}$$

For  $\phi' = 40^\circ$ ,  $N_q = 64.2$  and  $N_\gamma = 109.41$  (see Table 4.2). Hence,

$$F_{qd} = 1.16 \text{ and } F_{\gamma d} = 1 \text{ (see Example 4.7)}$$

$$q_u = (24.75)(64.2)(1.16) + \frac{1}{2}(16.5)(2)(109.41)(1)$$

$$= 1843.18 + 1805.27 = 3648.45 \text{ kN/m}^2$$

From Eq. (4.63),

$$q_{u(e)} = q_u \left( 1 - \frac{2e}{B} \right)$$


$$= 3648.45 \left[ 1 - 2 \left( \frac{0.2}{2} \right) \right]$$

$$= 2918.76 \text{ kN/m}^2$$

$$Q_u = B q_{u(e)} = (2)(2918.76) \approx \mathbf{5838 \text{ kN}}$$

## 4.12 Bearing Capacity—Two-Way Eccentricity

Consider a situation in which a foundation is subjected to a vertical ultimate load  $Q_{ult}$  and a moment  $M$ , as shown in Figures 4.24a and b. For this case, the components of the moment

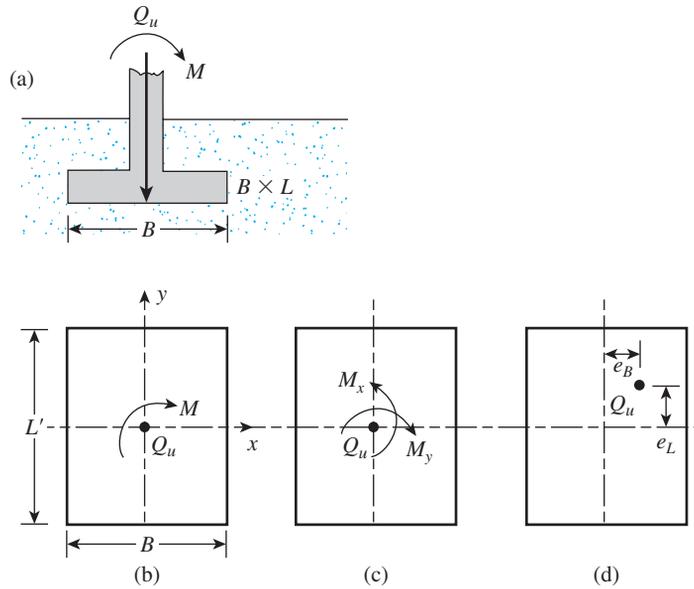

**Figure 4.24** Analysis of foundation with two-way eccentricity

$M$  about the  $x$ - and  $y$ -axes can be determined as  $M_x$  and  $M_y$ , respectively. (See Figure 4.24c.) This condition is equivalent to a load  $Q_u$  placed eccentrically on the foundation with  $x = e_B$  and  $y = e_L$  (Figure 4.24d). Note that

$$e_B = \frac{M_y}{Q_u} \quad (4.65)$$

and

$$e_L = \frac{M_x}{Q_u} \quad (4.66)$$

If  $Q_u$  is needed, it can be obtained from Eq. (4.52); that is,

$$Q_u = q'_u A'$$

where, from Eq. (4.51),

$$q'_u = c' N_c F_{cs} F_{cd} F_{ci} + q N_q F_{qs} F_{qd} F_{qi} + \frac{1}{2} \gamma B' N_\gamma F_{\gamma s} F_{\gamma d} F_{\gamma i}$$


and

$$A' = \text{effective area} = B' L'$$

As before, to evaluate  $F_{cs}$ ,  $F_{qs}$ , and  $F_{\gamma s}$  (Table 4.3), we use the effective length  $L'$  and effective width  $B'$  instead of  $L$  and  $B$ , respectively. To calculate  $F_{cd}$ ,  $F_{qd}$ , and  $F_{\gamma d}$ , we do not replace  $B$  with  $B'$ . In determining the effective area  $A'$ , effective width  $B'$ , and effective length  $L'$ , five possible cases may arise (Highter and Anders, 1985).

**Case 1.**  $e_L/L \geq \frac{1}{6}$  and  $e_B/B \geq \frac{1}{6}$ . The effective area for this condition is shown in Figure 4.25, or

$$A' = \frac{1}{2} B_1 L_1 \quad (4.67)$$

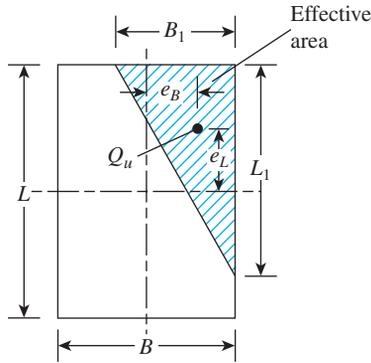

**Figure 4.25** Effective area for the case of  $e_L/L \geq \frac{1}{6}$  and  $e_B/B \geq \frac{1}{6}$

where

$$B_1 = B \left( 1.5 - \frac{3e_B}{B} \right) \quad (4.68)$$

and

$$L_1 = L \left( 1.5 - \frac{3e_L}{L} \right) \quad (4.69)$$

The effective length  $L'$  is the larger of the two dimensions  $B_1$  and  $L_1$ . So the effective width is

$$B' = \frac{A'}{L'} \quad (4.70)$$

**Case II.**  $e_L/L < 0.5$  and  $0 < e_B/B < \frac{1}{6}$ . The effective area for this case, shown in Figure 4.26a, is

$$A' = \frac{1}{2}(L_1 + L_2)B \quad (4.71)$$

The magnitudes of  $L_1$  and  $L_2$  can be determined from Figure 4.26b. The effective width is

$$B' = \frac{A'}{L_1 \text{ or } L_2 \text{ (whichever is larger)}} \quad (4.72)$$

The effective length is


$$L' = L_1 \text{ or } L_2 \text{ (whichever is larger)} \quad (4.73)$$

**Case III.**  $e_L/L < \frac{1}{6}$  and  $0 < e_B/B < 0.5$ . The effective area, shown in Figure 4.27a, is

$$A' = \frac{1}{2}(B_1 + B_2)L \quad (4.74)$$

The effective width is

$$B' = \frac{A'}{L} \quad (4.75)$$

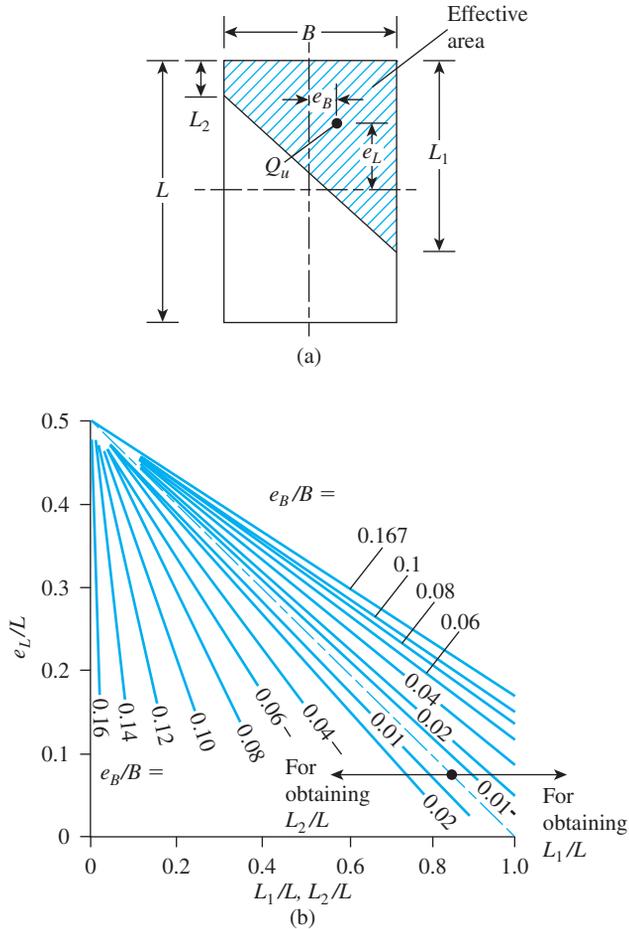

**Figure 4.26** Effective area for the case of  $e_L/L < 0.5$  and  $0 < e_B/B < \frac{1}{6}$  (After Hightler and Anders, 1985) (Based on Hightler, W. H. and Anders, J. C. (1985). “Dimensioning Footings Subjected to Eccentric Loads,” *Journal of Geotechnical Engineering*, American Society of Civil Engineers, Vol. 111, No. GT5, pp. 659–665.)

The effective length is

$$L' = L \quad (4.76)$$


The magnitudes of  $B_1$  and  $B_2$  can be determined from Figure 4.27b.

**Case IV.**  $e_L/L < \frac{1}{6}$  and  $e_B/B < \frac{1}{6}$ . Figure 4.28a shows the effective area for this case. The ratio  $B_2/B$ , and thus  $B_2$ , can be determined by using the  $e_L/L$  curves that slope upward. Similarly, the ratio  $L_2/L$ , and thus  $L_2$ , can be determined by using the  $e_L/L$  curves that slope downward. The effective area is then

$$A' = L_2B + \frac{1}{2}(B + B_2)(L - L_2) \quad (4.77)$$

The effective width is

$$B' = \frac{A'}{L} \quad (4.78)$$

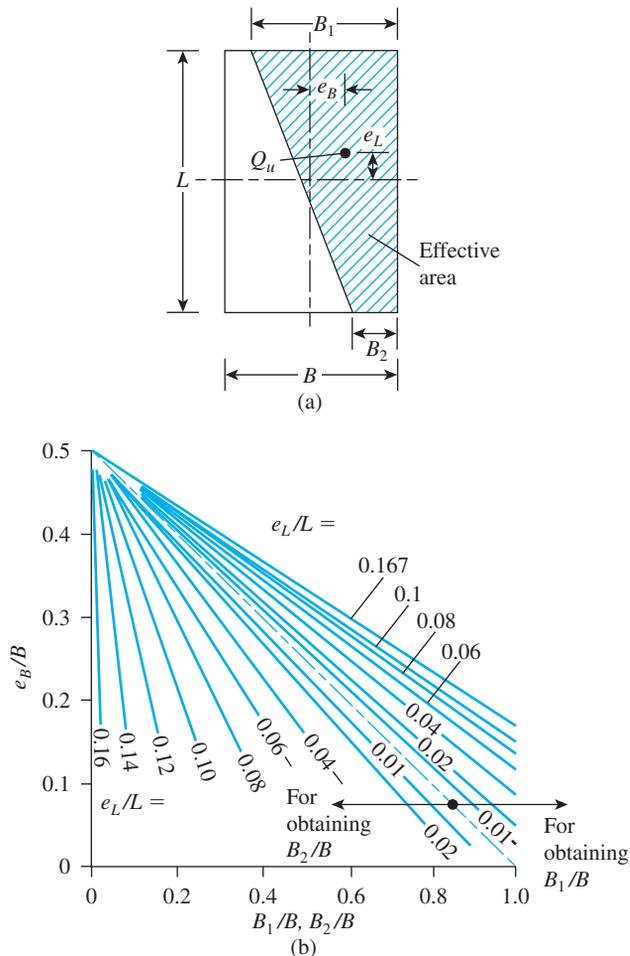


**Figure 4.27** Effective area for the case of  $e_L/L < \frac{1}{6}$  and  $0 < e_B/B < 0.5$  (Based on Highter, W. H. and Anders, J. C. (1985). “Dimensioning Footings Subjected to Eccentric Loads,” *Journal of Geotechnical Engineering*, American Society of Civil Engineers, Vol. 111, No. GT5, pp. 659–665.)

The effective length is


$$L' = L \quad (4.79)$$

**Case V. (Circular Foundation)** In the case of circular foundations under eccentric loading (Figure 4.29a), the eccentricity is always one way. The effective area  $A'$  and the effective width  $B'$  for a circular foundation are given in a nondimensional form in Table 4.10. Once  $A'$  and  $B'$  are determined, the effective length can be obtained as

$$L' = \frac{A'}{B'} \quad (4.80)$$

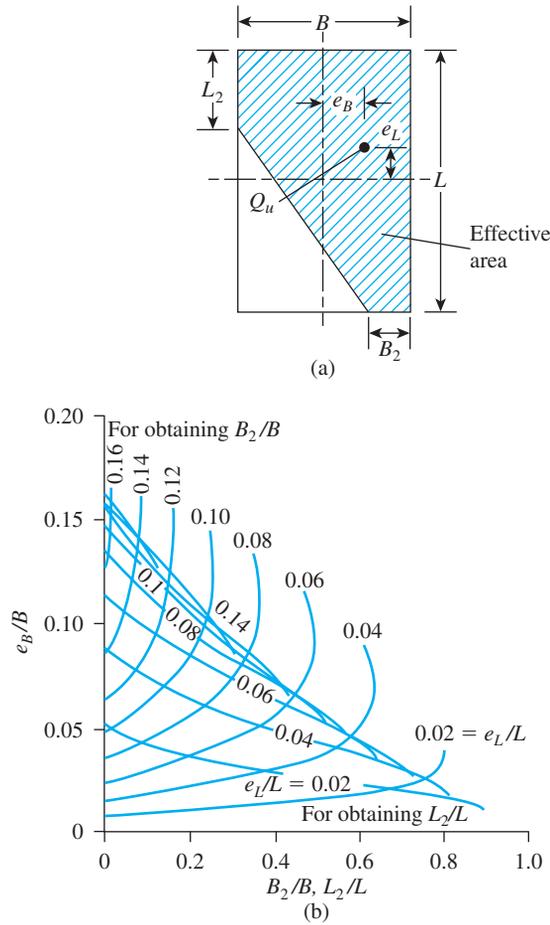

**Figure 4.28** Effective area for the case of  $e_L/L < \frac{1}{6}$  and  $e_B/B < \frac{1}{6}$  (Based on Hightler, W. H. and Anders, J. C. (1985). "Dimensioning Footings Subjected to Eccentric Loads," *Journal of Geotechnical Engineering*, American Society of Civil Engineers, Vol. 111, No. GT5, pp. 659–665.)

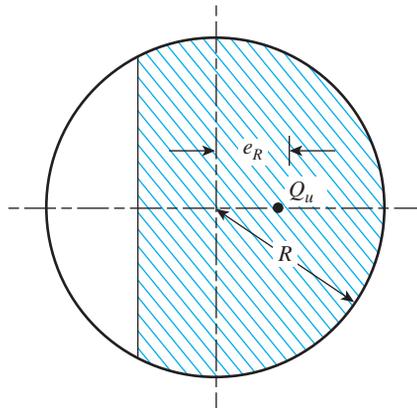

**Figure 4.29** Effective area for circular foundation

**Table 4.10** Variation of  $A'/R^2$  and  $B'/R$  with  $e_R/R$  for Circular Foundations

$e_R/R$	$A'/R^2$	$B'/R$
0.1	2.8	1.85
0.2	2.4	1.32
0.3	2.0	1.2
0.4	1.61	0.80
0.5	1.23	0.67
0.6	0.93	0.50
0.7	0.62	0.37
0.8	0.35	0.23
0.9	0.12	0.12
1.0	0	0

**Example 4.10**

A square foundation is shown in Figure 4.30, with  $e_L = 0.3$  m and  $e_B = 0.15$  m. Assume two-way eccentricity, and determine the ultimate load,  $Q_u$ .

**Solution**

We have

$$\frac{e_L}{L} = \frac{0.3}{1.5} = 0.2$$

and

$$\frac{e_B}{B} = \frac{0.15}{1.5} = 0.1$$

This case is similar to that shown in Figure 4.26a. From Figure 4.26b, for  $e_L/L = 0.2$  and  $e_B/B = 0.1$ ,

$$\frac{L_1}{L} \approx 0.85; \quad L_1 = (0.85)(1.5) = 1.275 \text{ m}$$

and


$$\frac{L_2}{L} \approx 0.21; \quad L_2 = (0.21)(1.5) = 0.315 \text{ m}$$

From Eq. (4.71),

$$A' = \frac{1}{2}(L_1 + L_2)B = \frac{1}{2}(1.275 + 0.315)(1.5) = 1.193 \text{ m}^2$$

From Eq. (4.73),

$$L' = L_1 = 1.275 \text{ m}$$

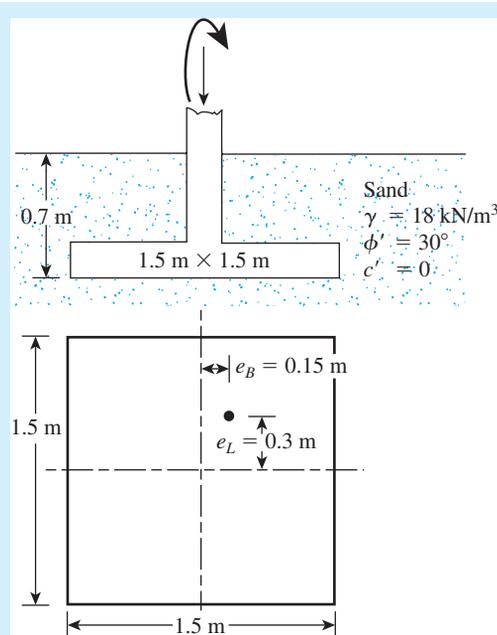

**Figure 4.30** An eccentrically loaded foundation

From Eq. (4.72),

$$B' = \frac{A'}{L'} = \frac{1.193}{1.275} = 0.936 \text{ m}$$

Note from Eq. (4.51) with  $c' = 0$ ,

$$q'_u = qN_q F_{qs} F_{qd} F_{qi} + \frac{1}{2} \gamma B' N_\gamma F_{\gamma s} F_{\gamma d} F_{\gamma i}$$

where  $q = (0.7)(18) = 12.6 \text{ kN/m}^2$ .

For  $\phi' = 30^\circ$ , from Table 4.2,  $N_q = 18.4$  and  $N_\gamma = 22.4$ . Thus from Table 4.3,

$$F_{qs} = 1 + \left( \frac{B'}{L'} \right) \tan \phi' = 1 + \left( \frac{0.936}{1.275} \right) \tan 30^\circ = 1.424$$

$$F_{\gamma s} = 1 - 0.4 \left( \frac{B'}{L'} \right) = 1 - 0.4 \left( \frac{0.936}{1.275} \right) = 0.706$$

$$F_{qd} = 1 + 2 \tan \phi' (1 - \sin \phi')^2 \frac{D_f}{B} = 1 + \frac{(0.289)(0.7)}{1.5} = 1.135$$

and

$$F_{\gamma d} = 1$$

So

$$\begin{aligned} Q_u &= A' q'_u = A' (q N_q F_{qs} F_{qd} + \frac{1}{2} \gamma B' N_\gamma F_{\gamma s} F_{\gamma d}) \\ &= (1.193)[(12.6)(18.4)(1.424)(1.135) \\ &\quad + (0.5)(18)(0.936)(22.4)(0.706)(1)] \approx \mathbf{606 \text{ kN}} \end{aligned}$$

### Example 4.11

Consider the foundation shown in Figure 4.30 with the following changes:

$$e_L = 0.18 \text{ m}$$

$$e_B = 0.12 \text{ m}$$

For the soil,  $\gamma = 16.5 \text{ kN/m}^3$

$$\phi' = 25^\circ$$

$$c' = 25 \text{ kN/m}^2$$

Determine the ultimate load,  $Q_u$ .

#### Solution

$$\frac{e_L}{L} = \frac{0.18}{1.5} = 0.12; \quad \frac{e_B}{B} = \frac{0.12}{1.5} = 0.08$$

This is the case shown in Figure 4.28a. From Figure 4.28b,

$$\frac{B_2}{B} \approx 0.1; \quad \frac{L_2}{L} \approx 0.32$$

So

$$B_2 = (0.1)(1.5) = 0.15 \text{ m}$$

$$L_2 = (0.32)(1.5) = 0.48 \text{ m}$$

From Eq. (4.77),

$$A' = L_2 B + \frac{1}{2}(B + B_2)(L - L_2) = (0.48)(1.5) + \frac{1}{2}(1.5 + 0.15)(1.5 - 0.48)$$

$$= 0.72 + 0.8415 = 1.5615 \text{ m}^2$$

$$B' = \frac{A'}{L} = \frac{1.5615}{1.5} = 1.041 \text{ m}$$

$$L' = 1.5 \text{ m}$$

From Eq. (4.51),

$$q'_u = c' N_c F_{cs} F_{ed} + q N_q F_{qs} F_{qd} + \frac{1}{2} \gamma B' N_\gamma F_{\gamma s} F_{\gamma d}$$

For  $\phi' = 25^\circ$ , Table 4.2 gives  $N_c = 20.72$ ,  $N_q = 10.66$  and  $N_\gamma = 10.88$ . From Table 4.3,

$$F_{cs} = 1 + \left(\frac{B'}{L'}\right)\left(\frac{N_q}{N_c}\right) = 1 + \left(\frac{1.041}{1.5}\right)\left(\frac{10.66}{20.72}\right) = 1.357$$

$$F_{qs} = 1 + \left(\frac{B'}{L'}\right) \tan \phi' = 1 + \left(\frac{1.041}{1.5}\right) \tan 25 = 1.324$$

$$F_{\gamma s} = 1 - 0.4 \left(\frac{B'}{L'}\right) = 1 - 0.4 \left(\frac{1.041}{1.5}\right) = 0.722$$

$$F_{qd} = 1 + 2 \tan \phi' (1 - \sin \phi')^2 \left(\frac{D_f}{B}\right) = 1 + 2 \tan 25 (1 - \sin 25)^2 \left(\frac{0.7}{1.5}\right) = 1.145$$

$$F_{cd} = F_{qd} - \frac{1 - F_{qd}}{N_c \tan \phi'} = 1.145 - \frac{1 - 1.145}{20.72 \tan 25} = 1.16$$

$$F_{\gamma d} = 1$$

Hence,


$$\begin{aligned} q'_u &= (25)(20.72)(1.357)(1.16) + (16.5 \times 0.7)(10.66)(1.324)(1.145) \\ &\quad + \frac{1}{2}(16.5)(1.041)(10.88)(0.722)(1) \\ &= 815.39 + 186.65 + 67.46 = 1069.5 \text{ kN/m}^2 \end{aligned}$$

$$Q_u = A' q'_u = (1069.5)(1.5615) = \mathbf{1670 \text{ kN}}$$

## 4.13 Bearing Capacity of a Continuous Foundation Subjected to Eccentrically Inclined Loading

Shallow continuous foundations are at times subjected to eccentrically inclined loads. Figure 4.31 shows two possible modes of load application. In this figure,  $B$  is the width of the foundation,  $e$  is the load eccentricity, and  $Q_{u(ei)}$  is the ultimate load per unit length of the foundation. In Figure 4.31a, the line of load application of the foundation is inclined toward the center line of the foundation and was referred to as *partially compensated* by Perloff and Baron (1976). It is also possible for the line of load application on the foundation to be inclined away from the center line of the foundation, as shown in Figure 4.31b. Perloff and Baron (1976) called this type of loading a *reinforced* case.

The results of practically all studies relating to the bearing capacity of a shallow foundation subjected to an eccentrically inclined load presently available in literature—though

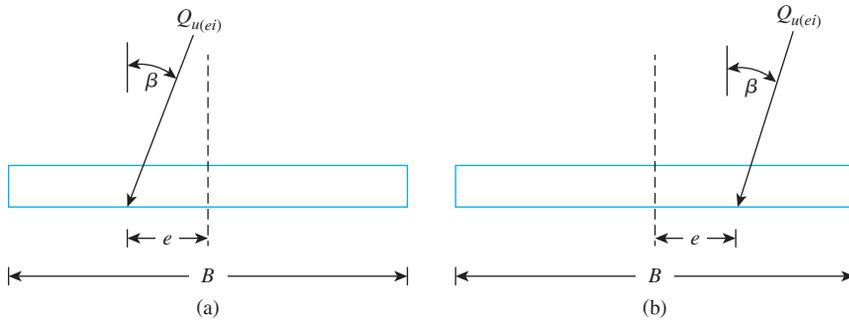

**Figure 4.31** Continuous foundation subjected to eccentrically inclined load: (a) partially compensated case and (b) reinforced case

fairly limited—consider the *partially compensated* case. The following are the procedures used to estimate the ultimate load  $Q_{u(ei)}$  for both of these cases.

### Partially Compensated Case (Figure 4.31a)

Meyerhof's effective area method can be used to determine the ultimate load  $Q_{u(ei)}$ . From Eq. (4.51),

$$q'_u = c'N_cF_{cd}F_{ci} + qN_qF_{qd}F_{qi} + \frac{1}{2}\gamma N_\gamma B'F_{\gamma d}F_{\gamma i} \quad (4.81)$$

Note that, for continuous foundations,  $F_{cs} = F_{qs} = F_{\gamma s} = 1$ , and  $B' = B - 2e$ . Using the values of the bearing capacity factors given in Table 4.2 and the depth and inclination factors given in Table 4.3, the value of  $q'_u$  can be estimated. Note that  $q'_u$  is the vertical component of the soil reaction. So,

$$Q_{u(ei)} = \frac{(q'_u)(B')(1)}{\cos \beta} = \frac{q'_u(B - 2e)}{\cos \beta} \quad (4.82)$$

Based on a larger number of model test results, Patra et al. (2012a) proposed a reduction factor to estimate  $Q_{u(ei)}$  for a foundation on granular soil, according to which

$$Q_{u(ei)} = q_u B (RF) \quad (4.83)$$

where  $RF$  = reduction factor

$q_u$  = ultimate bearing capacity of the foundation with centric vertical loading  
(i.e.,  $e = 0$ ,  $\beta = 0$ )

The reduction factor can be expressed as

$$RF = \left(1 - 2\frac{e}{B}\right) \left(1 - \frac{\beta^\circ}{\phi'}\right)^{2-(D_f/B)} \quad (4.84)$$

Combining Eqs. (4.83) and (4.84), we have

$$Q_{u(ei)} = q_u B \left(1 - 2\frac{e}{B}\right) \left(1 - \frac{\beta^\circ}{\phi'}\right)^{2-(D_f/B)} \quad (4.85)$$

### Reinforced Case (Granular Soil)

Patra et al. (2012b) conducted several model tests on continuous foundations on granular soil and gave the following correlation to estimate  $Q_{u(ei)}$ . Or,

$$Q_{u(ei)} = q_u B \left(1 - 2 \frac{e}{B}\right) \left(1 - \frac{\beta^\circ}{\phi'}\right)^{1.5 - 0.7(D_f/B)} \quad (4.86)$$

#### Example 4.12

A continuous foundation is shown in Figure 4.32. Estimate the inclined ultimate load,  $Q_{u(ei)}$  per unit length of the foundation. Use Eqs. (4.81) and (4.82).

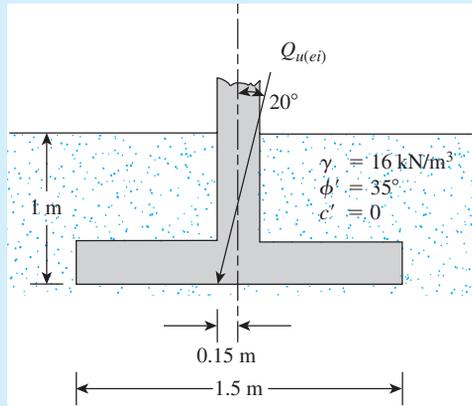


Figure 3.32

#### Solution

From Eq. (4.81) with  $c' = 0$ , we have

$$q'_u = q N_q F_{qd} F_{qi} + \frac{1}{2} \gamma B' N_\gamma F_{\gamma d} F_{\gamma i}$$

$$q = \gamma D_f = (16)(1) = 16 \text{ kN/m}^2$$

and

$$B' = B - 2e = 1.5 - (2)(0.15) = 1.2 \text{ m}$$

From Table 4.2 for  $\phi' = 35^\circ$ ,  $N_q = 33.3$ , and  $N_\gamma = 48.03$ , we have

$$F_{qd} = 1 + 2 \tan \phi' (1 - \sin \phi')^2 \left(\frac{D_f}{B}\right) = 1 + 2 \tan 35 (1 - \sin 35)^2 \left(\frac{1}{1.5}\right) = 1.17$$

$$F_{\gamma d} = 1$$

$$F_{qi} = \left(1 - \frac{\beta^\circ}{90^\circ}\right)^2 = \left(1 - \frac{20}{90}\right)^2 = 0.605$$

$$F_{\gamma i} = \left(1 - \frac{\beta^\circ}{\phi'}\right)^2 = \left(1 - \frac{20}{35}\right)^2 = 0.184$$

$$q'_u = (16)(33.3)(1.17)(0.605) + \left(\frac{1}{2}\right)(16)(1.2)(48.03)(1)(0.184) = 461.98 \text{ kN/m}^2$$

and

$$Q_{u(ei)} = \frac{q'_u(B - 2e)}{\cos \beta} = \frac{(461.98)(1.2)}{\cos 20} = 589.95 \text{ kN} \approx \mathbf{590 \text{ kN/m}}$$

### Example 4.13

Solve Example 4.12 using Eq. (4.85).

#### Solution

From Eq. (4.26) with  $c = 0$ , we have

$$\begin{aligned} F_{qs} &= F_{\gamma s} = 1 \text{ (continuous foundation)} \\ F_{qi} &= F_{\gamma i} = 1 \text{ (vertical centric loading)} \end{aligned}$$

and

$$q_u = qN_qF_{qd} + \frac{1}{2}\gamma BN_\gamma F_{\gamma d}$$

From Example 4.12,  $q = 16 \text{ kN/m}^2$ ,  $N_q = 33.3$ ,  $N_\gamma = 48.03$ ,  $F_{qd} = 1.17$ , and  $F_{\gamma d} = 1$ . Hence,

$$q_u = (16)(33.3)(1.17) + \left(\frac{1}{2}\right)(16)(1.5)(48.03)(1) = 1199.74 \text{ kN/m}^2$$

and

$$\begin{aligned} Q_{u(ei)} &= q_u B \left[ 1 - 2\left(\frac{e}{B}\right) \right] \left( 1 - \frac{\beta^\circ}{\phi'} \right)^{2-(D_f/B)} \\ &= (1199.74)(1.5) \left[ 1 - (2)\left(\frac{0.15}{1.5}\right) \right] \left[ 1 - \left(\frac{20}{35}\right) \right]^{2-(\frac{1}{1.5})} \\ &\approx \mathbf{465 \text{ kN/m}} \end{aligned}$$

## Problems

- 4.1** For the following cases, determine the allowable gross vertical load-bearing capacity of the foundation. Use Terzaghi's equation and assume general shear failure in soil. Use  $FS = 4$ .

Part	$B$	$D_f$	$\phi'$	$c'$	$\gamma$	Foundation type
a.	3 ft	3 ft	$28^\circ$	400 lb/ft <sup>2</sup>	110 lb/ft <sup>3</sup>	Continuous
b.	1.5 m	1.2 m	$35^\circ$	0	17.8 kN/m <sup>3</sup>	Continuous
c.	3 m	2 m	$30^\circ$	0	16.5 kN/m <sup>3</sup>	Square

- 4.2** A square column foundation has to carry a gross allowable load of 1805 kN (FS = 3). Given:  $D_f = 1.5$  m,  $\gamma = 15.9$  kN/m<sup>3</sup>,  $\phi' = 34^\circ$ , and  $c' = 0$ . Use Terzaghi's equation to determine the size of the foundation ( $B$ ). Assume general shear failure.
- 4.3** Use the general bearing capacity equation [Eq. (4.26)] to solve the following:
- Problem 4.1a
  - Problem 4.1b
  - Problem 4.1c
- 4.4** The applied load on a shallow square foundation makes an angle of  $20^\circ$  with the vertical. Given:  $B = 5$  ft,  $D_f = 3$  ft,  $\gamma = 115$  lb/ft<sup>3</sup>,  $\phi' = 25^\circ$ , and  $c' = 600$  lb/ft<sup>2</sup>. Use FS = 3 and determine the gross inclined allowable load. Use Eq. (4.26).
- 4.5** A column foundation (Figure P4.5) is  $3\text{ m} \times 2\text{ m}$  in plan. Given:  $D_f = 1.5$  m,  $\phi' = 25^\circ$ ,  $c' = 70$  kN/m<sup>2</sup>. Using Eq. (4.26) and FS = 3, determine the net allowable load [see Eq. (4.22)] the foundation could carry.

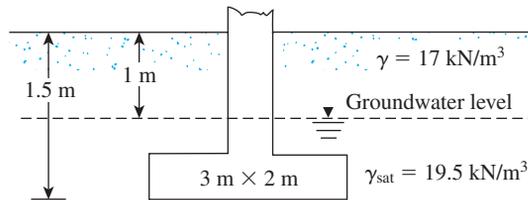


Figure P4.5

- 4.6** For a square foundation that is  $B \times B$  in plan,  $D_f = 2$  m; vertical gross allowable load,  $Q_{\text{all}} = 3330$  kN,  $\gamma = 16.5$  kN/m<sup>3</sup>;  $\phi' = 30^\circ$ ;  $c' = 0$ ; and FS = 4. Determine the size of the foundation. Use Eq. (4.26).
- 4.7** For the design of a shallow foundation, given the following:
- Soil:  $\phi' = 20^\circ$   
 $c' = 72$  kN/m<sup>2</sup>  
Unit weight,  $\gamma = 17$  kN/m<sup>3</sup>  
Modulus of elasticity,  $E_s = 1400$  kN/m<sup>2</sup>  
Poisson's ratio,  $\mu_s = 0.35$
- Foundation:  $L = 2$  m  
 $B = 1$  m  
 $D_f = 1$  m
- Calculate the ultimate bearing capacity. Use Eq. (4.38).

- 4.8 An eccentrically loaded foundation is shown in Figure P4.8. Use FS of 4 and determine the maximum allowable load that the foundation can carry. Use Meyerhof's effective area method.

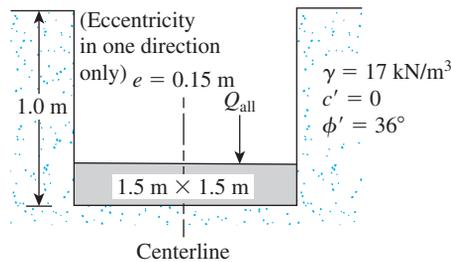


Figure P4.8

- 4.9 Repeat Problem 4.8 using Prakash and Saran's method.
- 4.10 For an eccentrically loaded continuous foundation on sand, given  $B = 1.8 \text{ m}$ ,  $D_f = 0.9 \text{ m}$ ,  $e/B = 0.12$  (one-way eccentricity),  $\gamma = 16 \text{ kN/m}^3$ , and  $\phi' = 35^\circ$ . Using the reduction factor method [Eq. (4.60)], estimate the ultimate load per unit length of the foundation.
- 4.11 An eccentrically loaded continuous foundation is shown in Figure P4.11. Determine the ultimate load  $Q_u$  per unit length that the foundation can carry. Use the reduction factor method [Eq. (4.63)].


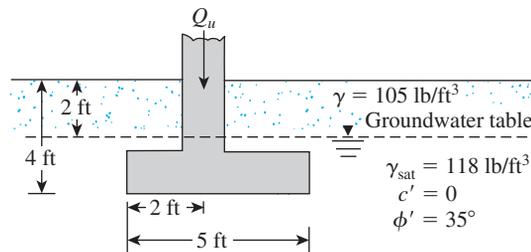


Figure P4.11

- 4.12 A square foundation is shown in Figure P4.12. Use  $FS = 6$ , and determine the size of the foundation. Use Prakash and Saran theory [Eq. (4.55)].
- 4.13 The shallow foundation shown in Figure 4.24 measures  $1.5 \text{ m} \times 2.25 \text{ m}$  and is subjected to a centric load and a moment. If  $e_B = 0.12 \text{ m}$ ,  $e_L = 0.36 \text{ m}$ , and the depth of the foundation is  $0.8 \text{ m}$ , determine the allowable load the foundation can carry. Use a factor of safety of 4. For the soil, we are told that unit weight  $\gamma = 17 \text{ kN/m}^3$ , friction angle  $\phi' = 35^\circ$ , and cohesion  $c' = 0$ .
- 4.14 Consider a continuous foundation of width  $B = 1.4 \text{ m}$  on a sand deposit with  $c' = 0$ ,  $\phi' = 38^\circ$  and  $\gamma = 17.5 \text{ kN/m}^3$ . The foundation is subjected to an eccentrically inclined load (see Figure 4.31). Given: load eccentricity  $e = 0.15 \text{ m}$ ,  $D_f = 1 \text{ m}$ ,

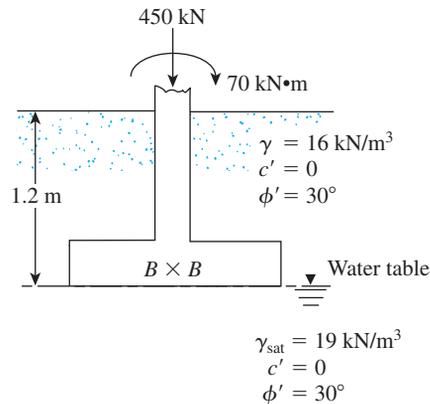

**Figure P4.12**

and load inclination  $\beta = 18^\circ$ . Estimate the failure load  $Q_{u(ei)}$  per unit length of the foundation

- a. for a partially compensated type of loading [Eq. (4.85)]
- b. for a reinforced type of loading [Eq. (4.86)]

## References

- BIAREZ, J., BUREL, M., and WACK, B. (1961). "Contribution á L'étude de la Force Portante des Fondations," *Proceedings, 5th International Conference on Soil Mechanics and Foundation Engineering*, Paris, Vol. 1, pp. 603–609.
- BOOKER, J. R. (1969). Application of theories of plasticity for cohesive frictional soils. Ph.D. thesis, University of Sydney, Australia.
- BOZOZUK, M. (1972). "Foundation Failure of the Vankleek Hill Tower Site," *Proceedings, Specialty Conference on Performance of Earth and Earth-Supported Structures*, Vol. 1, Part 2, pp. 885–902.
- BRAND, E. W., MUKTABHANT, C., and TAECHANTHUMMARAK, A. (1972). "Load Test on Small Foundations in Soft Clay," *Proceedings, Specialty Conference on Performance of Earth and Earth-Supported Structures*, American Society of Civil Engineers, Vol. 1, Part 2, pp. 903–928.
- CAQUOT, A. and KERISEL, J. (1953). "Sur le terme de surface dans le calcul des fondations en milieu pulvérulent," *Proceedings, Third International Conference on Soil Mechanics and Foundation Engineering*, Zürich, Vol. I, pp. 336–337.
- DE BEER, E. E. (1970). "Experimental Determination of the Shape Factors and Bearing Capacity Factors of Sand," *Geotechnique*, Vol. 20, No. 4, pp. 387–411.
- HANNA, A. M. and MEYERHOF, G. G. (1981). "Experimental Evaluation of Bearing Capacity of Footings Subjected to Inclined Loads," *Canadian Geotechnical Journal*, Vol. 18, No. 4, pp. 599–603.
- HANSEN, J. B. (1970). *A Revised and Extended Formula for Bearing Capacity*, Bulletin 28, Danish Geotechnical Institute, Copenhagen.
- HIGHTER, W. H. and ANDERS, J. C. (1985). "Dimensioning Footings Subjected to Eccentric Loads," *Journal of Geotechnical Engineering*, American Society of Civil Engineers, Vol. 111, No. GT5, pp. 659–665.

- HJIAJ, M., LYAMIN, A. V., and SLOAN, S. W. (2005). “Numerical Limit Analysis Solutions for the Bearing Capacity Factor  $N_\gamma$ ,” *International Journal of Solids and Structures*, Vol. 42, No. 5–6, pp. 1681–1804.
- KUMBHOJKAR, A. S. (1993). “Numerical Evaluation of Terzaghi’s  $N_\gamma$ ,” *Journal of Geotechnical Engineering*, American Society of Civil Engineers, Vol. 119, No. 3, pp. 598–607.
- MARTIN, C. M. (2005). “Exact Bearing Capacity Calculations Using the Method of Characteristics,” *Proceedings, 11th International Conference of the International Association for Computer Methods and Advances in Geomechanics*, Turin, Italy, Vol. 4, pp. 441–450.
- MICHALOWSKI, R. L. (1997). “An Estimate of the Influence of Soil Weight on Bearing Capacity Using Limit Analysis,” *Soils and Foundations*, Vol. 37, No. 4, pp. 57–64.
- MEYERHOF, G. G. (1953). “The Bearing Capacity of Foundations Under Eccentric and Inclined Loads,” *Proceedings, Third International Conference on Soil Mechanics and Foundation Engineering*, Zürich, Vol. 1, pp. 440–445.
- MEYERHOF, G. G. (1963). “Some Recent Research on the Bearing Capacity of Foundations,” *Canadian Geotechnical Journal*, Vol. 1, No. 1, pp. 16–26.
- PATRA, C. R., BEHERA, R. N., SIVAKUGAN, N., and DAS, B. M. (2012a). “Ultimate Bearing Capacity of Shallow Strip Foundation under Eccentrically Inclined Load: Part I,” *International Journal of Geotechnical Engineering*, Vol. 6, No. 3, pp. 342–352.
- PATRA, C. R., BEHERA, R. N., SIVAKUGAN, N., and DAS, B. M. (2012b). “Ultimate Bearing Capacity of Shallow Strip Foundation under Eccentrically Inclined Load: Part II,” *International Journal of Geotechnical Engineering*, Vol. 6, No. 4, pp. 507–514.
- PATRA, C. R., BEHERA, R. N., SIVAKUGAN, N., and DAS, B. M. (2013). “Estimation of Average Settlement of Shallow Strip Foundation on Granular Soil under Eccentric Load,” *International Journal of Geotechnical Engineering*, Vol. 7, No. 2, pp. 218–222.
- PERLOFF, W. H. and BARRON, W. (1976). *Soil Mechanics: Principles and Applications*, Ronald Press, New York.
- PRAKASH, S. and SARAN, S. (1971). “Bearing Capacity of Eccentrically Loaded Footings,” *Journal of the Soil Mechanics and Foundations Division*, ASCE, Vol. 97, No. SM1, pp. 95–117.
- PRANDTL, L. (1921). “Über die Eindringungsfestigkeit (Härte) plastischer Baustoffe und die Festigkeit von Schneiden,” *Zeitschrift für angewandte Mathematik und Mechanik*, Vol. 1, No. 1, pp. 15–20.
- PURKAYASTHA, R. D. and CHAR, R. A. N. (1977). “Stability Analysis of Eccentrically Loaded Footings,” *Journal of Geotechnical Engineering Div.*, ASCE, Vol. 103, No. 6, pp. 647–651.
- REISSNER, H. (1924). “Zum Erddruckproblem,” *Proceedings, First International Congress of Applied Mechanics*, Delft, pp. 295–311.
- TERZAGHI, K. (1943). *Theoretical Soil Mechanics*, Wiley, New York.
- VESIC, A. S. (1963). “Bearing Capacity of Deep Foundations in Sand,” *Highway Research Record* No. 39, National Academy of Sciences, pp. 112–153.
- VESIC, A. S. (1973). “Analysis of Ultimate Loads of Shallow Foundations,” *Journal of the Soil Mechanics and Foundations Division*, American Society of Civil Engineers, Vol. 99, No. SM1, pp. 45–73.
- ZHU, M. and MICHALOWSKI, R. L. (2005). “Shape Factors for Limit Loads on Square and Rectangular Footings,” *Journal of Geotechnical and Geoenvironmental Engineering*, American Society of Civil Engineering, Vol. 131, No. 2, pp. 223–231.

# 5 Ultimate Bearing Capacity of Shallow Foundations: Special Cases

## 5.1 Introduction

The ultimate bearing capacity problems described in Chapter 4 assume that the soil supporting the foundation is homogeneous and extends to a great depth below the bottom of the foundation. They also assume that the ground surface is horizontal. However, that is not true in all cases: It is possible to encounter a rigid layer at a shallow depth, or the soil may be layered and have different shear strength parameters. In some instances, it may be necessary to construct foundations on or near a slope, or it may be required to design a foundation subjected to uplifting load.

This chapter discusses bearing capacity problems relating to these special cases.



## 5.2 Foundation Supported by a Soil with a Rigid Base at Shallow Depth

Figure 5.1(a) shows a shallow, rough *continuous* foundation supported by a soil that extends to a great depth. Neglecting the depth factor, for vertical loading Eq. (4.26) will take the form


$$q_u = c'N_c + qN_q + \frac{1}{2} \gamma BN_\gamma \quad (5.1)$$

The general approach for obtaining expressions for  $N_c$ ,  $N_q$ , and  $N_\gamma$  was outlined in Chapter 4. The extent of the failure zone in soil,  $D$ , at ultimate load obtained in the derivation of  $N_c$  and  $N_q$  by Prandtl (1921) and Reissner (1924) is given in Figure 5.1(b). Similarly, the magnitude of  $D$  obtained by Lundgren and Mortensen (1953) in evaluating  $N_\gamma$  is given in the figure.

Now, if a rigid, rough base is located at a depth of  $H < D$  below the bottom of the foundation, full development of the failure surface in soil will be restricted. In such a case, the soil failure zone and the development of slip lines at ultimate load will be as shown in Figure 5.2.

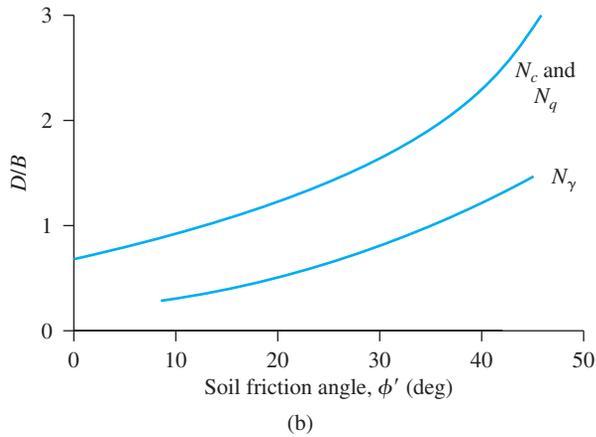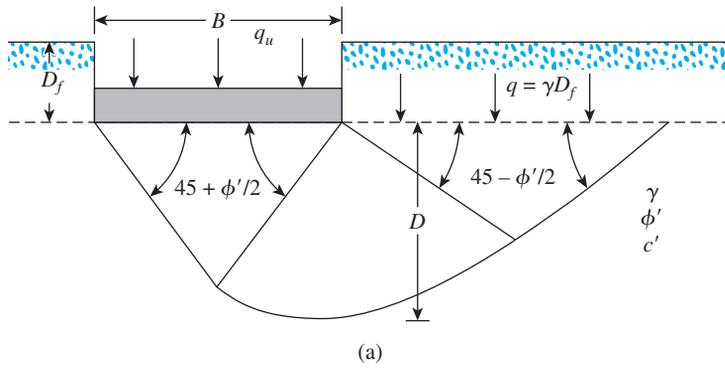

**Figure 5.1** (a) Failure surface under a rough continuous foundation; (b) variation of  $D/B$  with soil friction angle  $\phi'$

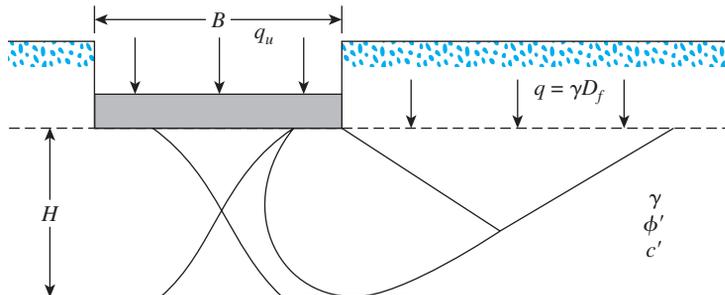

**Figure 5.2** Failure surface under a rough, continuous foundation with a rigid, rough base located at a shallow depth

Mandel and Salencon (1972) determined the bearing capacity factors applicable to this case by numerical integration, using the theory of plasticity. According to their theory, the ultimate bearing capacity of a rough continuous foundation with a rigid, rough base located at a shallow depth can be given by the relation

$$q_u = c'N_c^* + qN_q^* + \frac{1}{2}\gamma BN_\gamma^* \quad (5.2)$$

where

$N_c^*, N_q^*, N_\gamma^*$  = modified bearing capacity factors

$B$  = width of foundation

$\gamma$  = unit weight of soil

Note that, for  $H \geq D$ ,  $N_c^* = N_c$ ,  $N_q^* = N_q$ , and  $N_\gamma^* = N_\gamma$  (Lundgren and Mortensen, 1953). The variations of  $N_c^*$ ,  $N_q^*$ , and  $N_\gamma^*$  with  $H/B$  and the soil friction angle  $\phi'$  are given in Figures 5.3, 5.4, and 5.5, respectively.


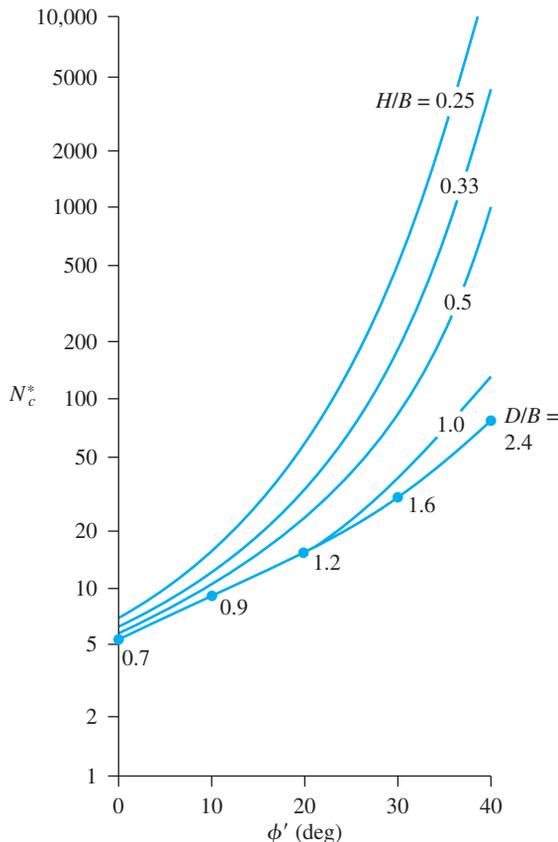


Figure 5.3 Mandel and Salencon's bearing capacity factor  $N_c^*$  [Eq. (5.2)]

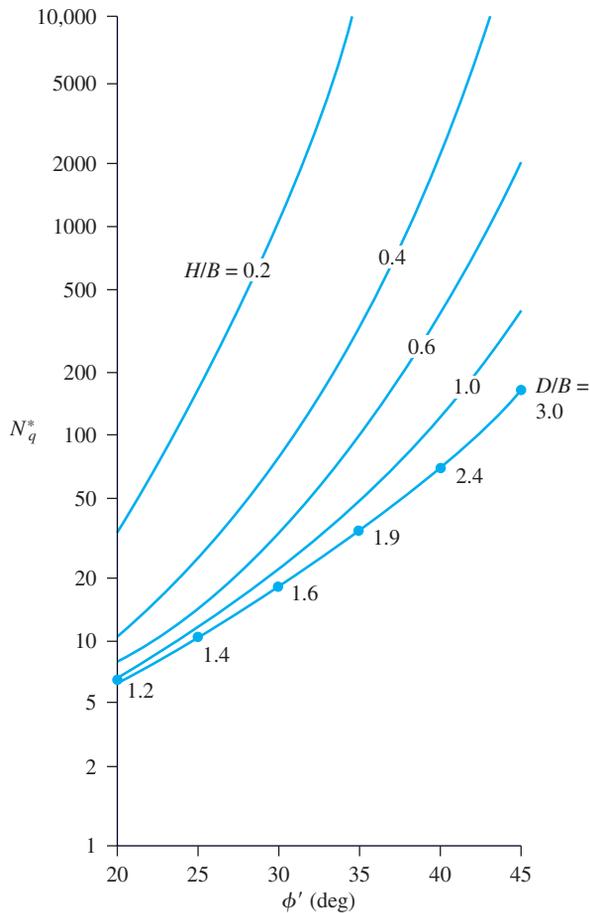

**Figure 5.4** Mandel and Salencon's bearing capacity factor  $N_q^*$  [Eq. (5.2)]

## Rectangular Foundation on Granular Soil


Neglecting the depth factors, the ultimate bearing capacity of rough circular and rectangular foundations on a sand layer ( $c' = 0$ ) with a rough, rigid base located at a shallow depth can be given as

$$q_u = qN_q^*F_{qs}^* + \frac{1}{2} \gamma BN_\gamma^*F_{\gamma s}^* \quad (5.3)$$

where  $F_{qs}^*$ ,  $F_{\gamma s}^*$  = modified shape factors.

The shape factors  $F_{qs}^*$  and  $F_{\gamma s}^*$  are functions of  $H/B$  and  $\phi'$ . On the basis of the work of Meyerhof and Chaplin (1953), and simplifying the assumption that, in radial planes, the stresses and shear zones are identical to those in transverse planes, Meyerhof (1974) proposed that

$$F_{qs}^* \approx 1 - m_1 \left( \frac{B}{L} \right) \quad (5.4)$$

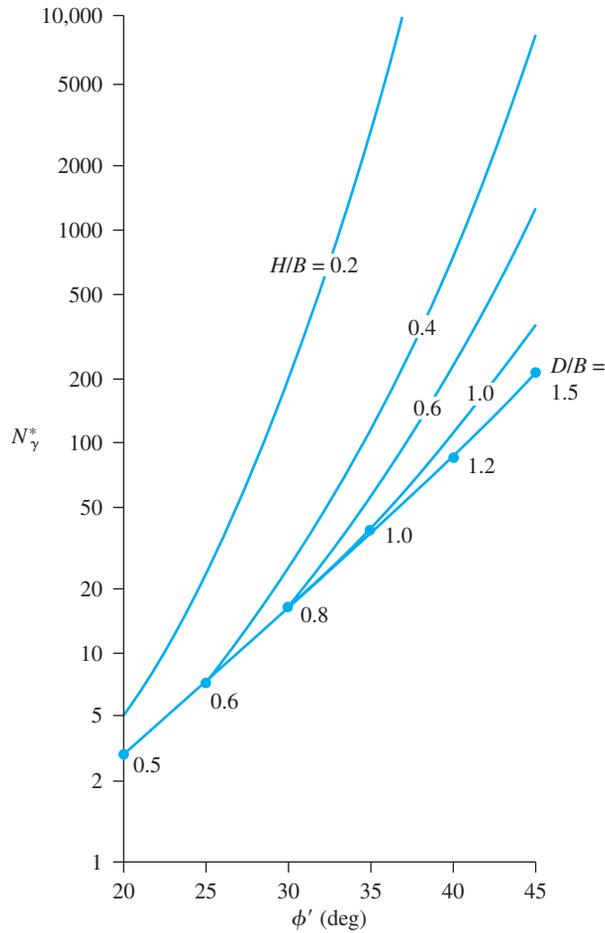

**Figure 5.5** Mandel and Salencon's bearing capacity factor  $N_{\gamma}^*$  [Eq. (5.2)]

and

$$F_{\gamma s}^* \approx 1 - m_2 \left( \frac{B}{L} \right) \quad (5.5)$$

where  $L$  = length of the foundation. The variations of  $m_1$  and  $m_2$  with  $H/B$  and  $\phi'$  are shown in Figure 5.6.

More recently, Cerato and Lutenegeger (2006) provided some test results for the bearing capacity factor,  $N_{\gamma}^*$ . These tests were conducted using *square* and *circular* plates with  $B$  varying from 0.152 m (6 in.) to 0.305 m (12 in.). It was assumed that Terzaghi's bearing-capacity equations for *square* and *circular* foundations can be used. Or, from Eqs. (4.17) and (4.18) with  $c' = 0$ ,

$$q_u = qN_q^* + 0.4\gamma BN_{\gamma}^* \text{ (square foundation)} \quad (5.6)$$

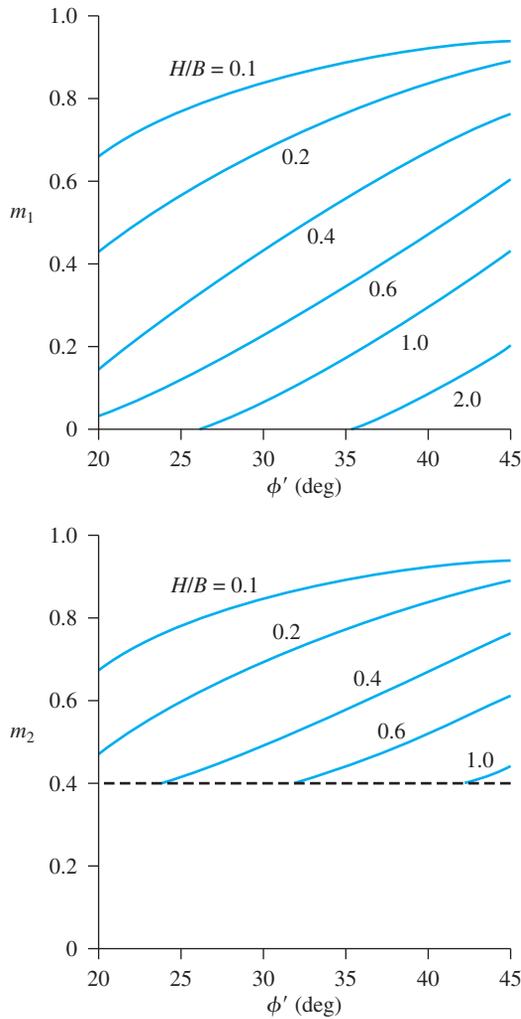


Figure 5.6 Variation of  $m_1$  and  $m_2$  with  $H/B$  and  $\phi'$

and

$$q_u = qN_q^* + 0.3\gamma BN_\gamma^* \text{ (circular foundation)} \quad (5.7)$$

The experimentally determined variation of  $N_\gamma^*$  is shown in Figure 5.7. It also was observed in this study that  $N_\gamma^*$  becomes equal to  $N_\gamma$  at  $H/B \approx 3$  instead of  $D/B$ , as shown in Figure 5.5. For that reason, Figure 5.7 shows the variation of  $N_\gamma^*$  for  $H/B = 0.5$  to 3.0.

### Foundation on Saturated Clay

For saturated clay (i.e., under the undrained condition, or  $\phi = 0$ ), Eq. (5.2) will simplify to the form

$$q_u = c_u N_c^* + q \quad (5.8)$$

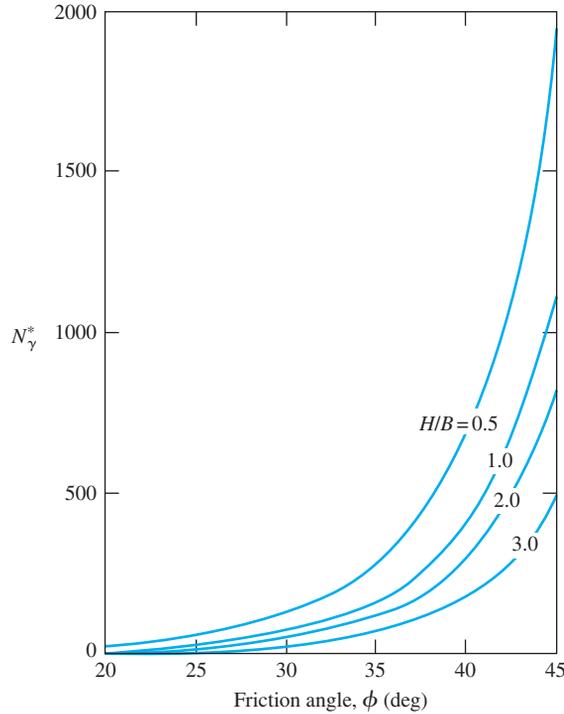


Figure 5.7 Cerato and Lutenegeger's test results for  $N_{\gamma}^*$

Mandel and Salencon (1972) performed calculations to evaluate  $N_c^*$  for *continuous foundations*. Similarly, Buisman (1940) gave the following relationship for obtaining the ultimate bearing capacity of square foundations:

$$q_{u(\text{square})} = \left( \pi + 2 + \frac{B}{2H} - \frac{\sqrt{2}}{2} \right) c_u + q \quad \left( \text{for } \frac{B}{2H} - \frac{\sqrt{2}}{2} \geq 0 \right) \quad (5.9)$$

In this equation,  $c_u$  is the undrained shear strength.

Equation (5.9) can be rewritten as

$$q_{u(\text{square})} = \underbrace{5.14 \left( 1 + \frac{0.5 \frac{B}{H} - 0.707}{5.14} \right)}_{N_{c(\text{square})}^*} c_u + q \quad (5.10)$$

Table 5.1 gives the values of  $N_c^*$  for continuous and square foundations.

**Table 5.1** Values of  $N_c^*$  for Continuous and Square Foundations ( $\phi = 0$ )

$\frac{B}{H}$	$N_c^*$	
	Square <sup>a</sup>	Continuous <sup>b</sup>
2	5.43	5.24
3	5.93	5.71
4	6.44	6.22
5	6.94	6.68
6	7.43	7.20
8	8.43	8.17
10	9.43	9.05

<sup>a</sup>Buisman's analysis (1940)<sup>b</sup>Mandel and Salencon's analysis (1972)

### Example 5.1

A square foundation measuring 1.2 m × 1.2 m is constructed on a layer of sand. We are given that  $D_f = 1$  m,  $\gamma = 15.5$  kN/m<sup>3</sup>,  $\phi' = 35^\circ$ , and  $c' = 0$ . A rock layer is located at a depth of 0.48 m below the bottom of the foundation. Using a factor of safety of 4, determine the gross allowable load the foundation can carry.

#### Solution

From Eq. (5.3),

$$q_u = qN_q^*F_{qs}^* + \frac{1}{2}\gamma BN_\gamma^*F_{\gamma s}^*$$

and we also have

$$q = 15.5 \times 1 = 15.5 \text{ kN/m}^3$$

For  $\phi' = 35^\circ$ ,  $H/B = 0.48/1.2 = 0.4$ ,  $N_q^* \approx 336$  (Figure 5.4), and  $N_\gamma^* \approx 138$  (Figure 5.5), and we have

$$F_{qs}^* = 1 - m_1 \left( \frac{B}{L} \right)$$

From Figure 5.6a for  $\phi' = 35^\circ$ ,  $H/B = 0.4$ . The value of  $m_1 \approx 0.58$ , so

$$F_{qs}^* = 1 - (0.58)(1.2/1.2) = 0.42$$

Similarly,

$$F_{\gamma s}^* = 1 - m_2(B/L)$$

From Figure 5.6b,  $m_2 = 0.6$ , so

$$F_{\gamma_s}^* = 1 - (0.6)(1.2/1.2) = 0.4$$

Hence,

$$q_u = (15.5)(336)(0.42) + (1/2)(15.5)(1.2)(138)(0.4) = 2700.72 \text{ kN/m}^2$$

and

$$Q_{\text{all}} = \frac{q_u B^2}{\text{FS}} = \frac{(2700.72)(1.2 \times 1.2)}{4} = \mathbf{972.3 \text{ kN}}$$

### Example 5.2

Consider a square foundation  $1 \text{ m} \times 1 \text{ m}$  in plan located on a saturated clay layer underlain by a layer of rock. Given:

Clay:  $c_u = 72 \text{ kN/m}^2$

Unit weight:  $\gamma = 18 \text{ kN/m}^3$

Distance between the bottom of foundation and the rock layer =  $0.25 \text{ m}$

$D_f = 1 \text{ m}$

Estimate the gross allowable bearing capacity of the foundation. Use  $\text{FS} = 3$ .

#### Solution

From Eq. (5.10),

$$q_u = 5.14 \left( 1 + \frac{0.5 \frac{B}{H} - 0.707}{5.14} \right) c_u + q$$


For  $B/H = 1/0.25 = 4$ ;  $c_u = 72 \text{ kN/m}^2$ ; and  $q = \gamma D_f = (18)(1) = 18 \text{ kN/m}^2$ .

$$q_u = 5.14 \left[ 1 + \frac{(0.5)(4) - 0.707}{5.14} \right] 72 + 18 = 481.2 \text{ kN/m}^2$$

$$q_{\text{all}} = \frac{q_u}{\text{FS}} = \frac{481.2}{3} = \mathbf{160.4 \text{ kN/m}^2}$$

## 5.3 Foundations on Layered Clay

Reddy and Srinivasan (1967) have derived the equation for the bearing capacity of foundations on layered clay soils, as shown in Figure 5.8a. For undrained loading ( $\phi = 0$  condition), let  $c_{u(1)}$  and  $c_{u(2)}$  be the shear strength of the upper and lower clay layers, respectively.

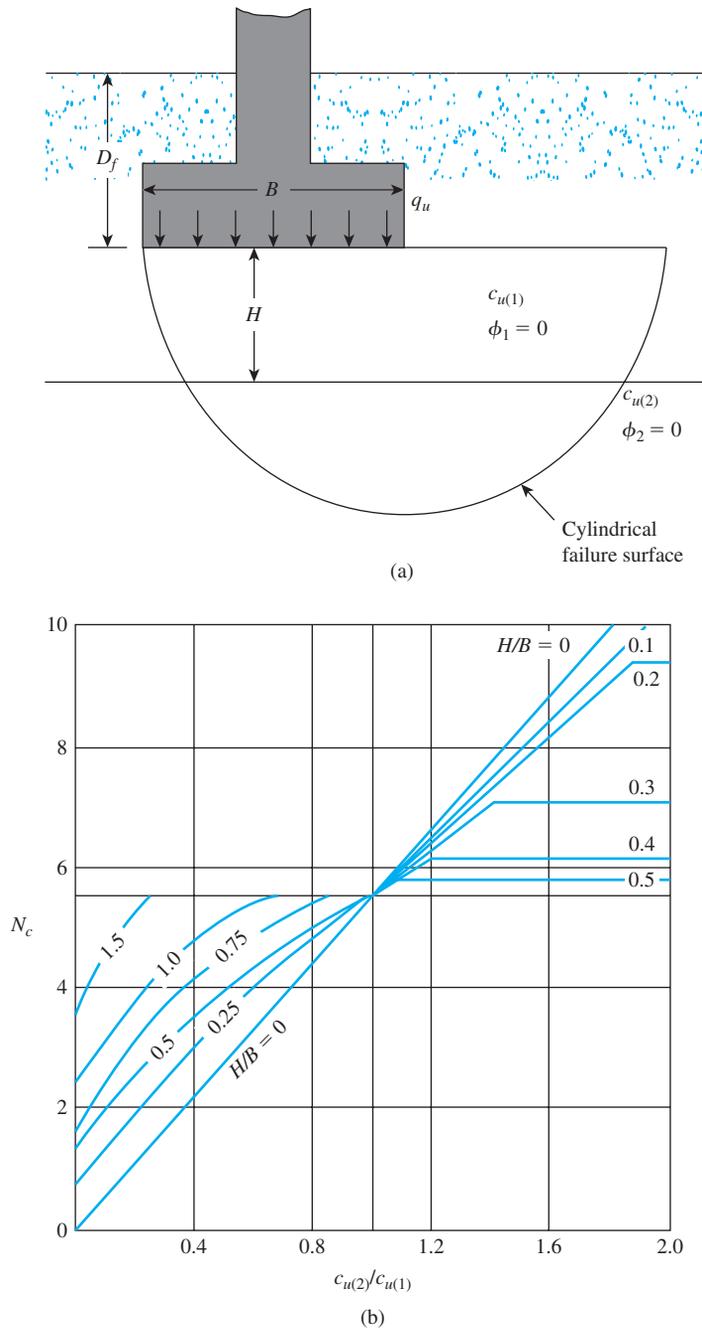

**Figure 5.8** Bearing capacity on layered clay soils— $\phi = 0$  (Figure 5.8b based on Reddy and Srinivasan, 1967)

In such a case, the ultimate bearing capacity of a foundation can be given as [similar to Eq. (4.26)]

$$q_u = c_{u(1)}N_cF_{cs}F_{cd} + q \quad (5.11)$$

The relationships for  $F_{cs}$  and  $F_{cd}$  are the same as given in Table 4.3 (for  $\phi = 0$  condition). For layered soils, the value of the bearing capacity factor,  $N_c$ , is not a constant. It is a function of  $c_{u(2)}/c_{u(1)}$  and  $H/B$  (note:  $H$  = depth measured from the bottom of the foundation to the interface of the two clay layers). The variation of  $N_c$  is given in Figure 5.8b. It can be seen from this figure that, if the lower layer of clay is softer than the top one (that is,  $c_{u(2)}/c_{u(1)} < 1$ ), the value of the bearing capacity factor ( $N_c$ ) is lower than when the soil is not layered (that is, when  $c_{u(2)}/c_{u(1)} = 1$ ). This means that the ultimate bearing capacity is reduced by the presence of a softer clay layer below the top layer.

Vesic (1975) proposed that the ultimate bearing capacity of a foundation supported by a weaker clay layer [ $c_{u(1)}$ ] underlain by a stronger clay layer [ $c_{u(2)}$ ] can be expressed as

$$q_u = c_{u(1)}mN_cF_{cs}F_{cd} + q \quad (5.12)$$

where

$$N_cF_{cs} = \begin{cases} 5.14 & \text{for continuous foundation} \\ 6.17 & \text{for square or circular foundation} \end{cases}$$

$F_{cs}$  = shape factor

$F_{cd}$  = depth factor

$$m = f \left[ \frac{c_{u(1)}}{c_{u(2)}}, \frac{H}{B}, \text{ and } \frac{B}{L} \right] \quad (5.13)$$

The variation of  $m$  for continuous foundations is given in Table 5.2, and the variation of  $m$  for square and circular foundations is given in Table 5.3.

**Table 5.2** Variation of  $m$  [Equation (5.12)] for Continuous Foundation ( $B/L \leq 0.2$ )

$c_{u(1)}/c_{u(2)}$	$H/B$				
	$\geq 0.5$	<b>0.25</b>	<b>0.167</b>	<b>0.125</b>	<b>0.1</b>
1	1	1	1	1	1
0.667	1	1.033	1.064	1.088	1.109
0.5	1	1.056	1.107	1.152	1.193
0.333	1	1.088	1.167	1.241	1.311
0.25	1	1.107	1.208	1.302	1.389
0.2	1	1.121	1.235	1.342	1.444
0.1	1	1.154	1.302	1.446	1.584

Based on Vesic (1975)

**Table 5.3** Variation of  $m$  [Equation (5.12)] for Square Foundation ( $B/L = 1$ )

$c_{u(1)}/c_{u(2)}$	$H/B$				
	$\geq 0.25$	0.125	0.083	0.063	0.05
1	1	1	1	1	1
0.667	1	1.028	1.052	1.075	1.096
0.5	1	1.047	1.091	1.131	1.167
0.333	1	1.075	1.143	1.207	1.267
0.25	1	1.091	1.177	1.256	1.334
0.2	1	1.102	1.199	1.292	1.379
0.1	1	1.128	1.254	1.376	1.494

Based on Vesic (1975)

**Example 5.3**

Refer to Figure 5.8a. A foundation  $1.5 \text{ m} \times 1 \text{ m}$  is located at a depth ( $D_f$ ) of 1 m in a clay. A softer clay layer is located at a depth ( $H$ ) of 1 m measured from the bottom of the foundation. Given:

For top clay layer,

Undrained shear strength =  $120 \text{ kN/m}^2$

Unit weight =  $16.8 \text{ kN/m}^3$

For bottom clay layer,

Undrained shear strength =  $48 \text{ kN/m}^2$

Unit weight =  $16.2 \text{ kN/m}^3$

Determine the gross allowable load for the foundation with a factor of safety of 4. Use Eq. (5.11).

**Solution**

From Eq. (5.11),

$$q_u = c_{u(1)}N_cF_{cs}F_{cd} + q$$

$$c_{u(1)} = 120 \text{ kN/m}^2$$

$$q = \gamma D_f = (16.8)(1) = 16.8 \text{ kN/m}^2$$

$$\frac{c_{u(2)}}{c_{u(1)}} = \frac{48}{120} = 0.4; \frac{H}{B} = \frac{1}{1} = 1$$

From Figure 5.8b, for  $H/B = 1$  and  $c_{u(2)}/c_{u(1)} = 0.4$ , the value of  $N_c$  is equal to 4.6. From Table 4.3,

$$F_{cs} = 1 + \left(\frac{B}{L}\right)\left(\frac{N_q}{N_c}\right) = 1 + \left(\frac{1}{1.5}\right)\left(\frac{1}{4.6}\right) = 1.145$$

$$F_{cd} = 1 + 0.4\frac{D_f}{B} = 1 + 0.4\left(\frac{1}{1}\right) = 1.4$$

Thus,

$$q_u = (120)(4.6)(1.145)(1.4) + 16.8 = 884.8 + 16.8 = 901.6 \text{ kN/m}^2$$

So

$$q_{\text{all}} = \frac{q_u}{\text{FS}} = \frac{901.6}{4} = 225.4 \text{ kN/m}^2$$

$$\text{Total allowable load} = (q_{\text{all}})(B \times L) = (225.4)(1 \times 1.5) = \mathbf{338.1 \text{ kN}}$$

## 5.4 Bearing Capacity of Layered Soils: Stronger Soil Underlain by Weaker Soil ( $c' - \phi'$ soil)

The bearing capacity equations presented in Chapter 4 involve cases in which the soil supporting the foundation is homogeneous and extends to a considerable depth. The cohesion, angle of friction, and unit weight of soil were assumed to remain constant for the bearing capacity analysis. However, in practice, layered soil profiles are often encountered. In such instances, the failure surface at ultimate load may extend through two or more soil layers, and a determination of the ultimate bearing capacity in layered soils can be made in only a limited number of cases. This section features the procedure for estimating the bearing capacity for layered soils proposed by Meyerhof and Hanna (1978) and Meyerhof (1974) in a  $c' - \phi'$  soil.


Figure 5.9 shows a shallow, continuous foundation supported by a *stronger soil layer*, underlain by a weaker soil that extends to a great depth. For the two soil layers, the physical parameters are as follows:

Layer	Soil properties		
	Unit weight	Friction angle	Cohesion
Top	$\gamma_1$	$\phi'_1$	$c'_1$
Bottom	$\gamma_2$	$\phi'_2$	$c'_2$

At ultimate load per unit area ( $q_u$ ), the failure surface in soil will be as shown in the figure. If the depth  $H$  is relatively small compared with the foundation width  $B$ , a punching shear failure will occur in the top soil layer, followed by a general shear failure in the bottom soil layer. This is shown in Figure 5.9a. However, if the depth  $H$  is relatively large, then the failure surface will be completely located in the top soil layer, which is the upper limit for the ultimate bearing capacity. This is shown in Figure 5.9b.

The ultimate bearing capacity for this problem, as shown in Figure 5.9a, can be given as

$$q_u = q_b + \frac{2(C_a + P_p \sin \delta')}{B} - \gamma_1 H \quad (5.14)$$

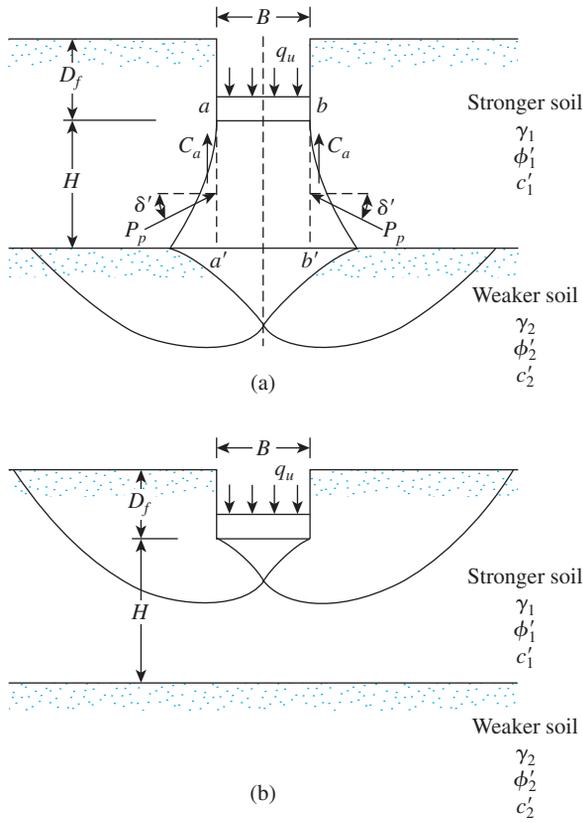

**Figure 5.9** Bearing capacity of a continuous foundation on layered soil

where

- $B$  = width of the foundation
- $C_a$  = adhesive force
- $P_p$  = passive force per unit length of the faces  $aa'$  and  $bb'$
- $q_b$  = bearing capacity of the bottom soil layer
- $\delta'$  = inclination of the passive force  $P_p$  with the horizontal

Note that, in Eq. (5.14),

$$C_a = c'_a H$$

where  $c'_a$  = adhesion.

Equation (5.14) can be simplified to the form

$$q_u = q_b + \frac{2c'_a H}{B} + \gamma_1 H^2 \left( 1 + \frac{2D_f}{H} \right) \frac{K_{pH} \tan \delta'}{B} - \gamma_1 H \quad (5.15)$$

where  $K_{pH}$  = horizontal component of passive earth pressure coefficient.

However, let

$$K_{pH} \tan \delta' = K_s \tan \phi'_1 \quad (5.16)$$

where  $K_s$  = punching shear coefficient. Then,

$$q_u = q_b + \frac{2c'_a H}{B} + \gamma_1 H^2 \left( 1 + \frac{2D_f}{H} \right) \frac{K_s \tan \phi'_1}{B} - \gamma_1 H \quad (5.17)$$

The punching shear coefficient,  $K_s$ , is a function of  $q_2/q_1$  and  $\phi'_1$ , or, specifically,

$$K_s = f\left(\frac{q_2}{q_1}, \phi'_1\right)$$

Note that  $q_1$  and  $q_2$  are the ultimate bearing capacities of a continuous foundation of width  $B$  under vertical load on the surfaces of homogeneous thick beds of upper and lower soil, or

$$q_1 = c'_1 N_{c(1)} + \frac{1}{2} \gamma_1 B N_{\gamma(1)} \quad (5.18)$$

and

$$q_2 = c'_2 N_{c(2)} + \frac{1}{2} \gamma_2 B N_{\gamma(2)} \quad (5.19)$$

where

$N_{c(1)}, N_{\gamma(1)}$  = bearing capacity factors for friction angle  $\phi'_1$  (Table 4.2)

$N_{c(2)}, N_{\gamma(2)}$  = bearing capacity factors for friction angle  $\phi'_2$  (Table 4.2)

Observe that, for the top layer to be a stronger soil,  $q_2/q_1$  should be less than unity.

The variation of  $K_s$  with  $q_2/q_1$  and  $\phi'_1$  is shown in Figure 5.10. The variation of  $c'_a/c'_1$  with  $q_2/q_1$  is shown in Figure 5.11. If the height  $H$  is relatively large, then the failure surface in soil will be completely located in the stronger upper-soil layer (Figure 5.9b). For this case,

$$q_u = q_t = c'_1 N_{c(1)} + q N_{q(1)} + \frac{1}{2} \gamma_1 B N_{\gamma(1)}, \quad (5.20)$$

where  $N_{c(1)}, N_{q(1)},$  and  $N_{\gamma(1)}$  = bearing capacity factors for  $\phi' = \phi'_1$  (Table 4.2) and  $q = \gamma_1 D_f$ .

Combining Eqs. (5.17) and (5.20) yields

$$q_u = q_b + \frac{2c'_a H}{B} + \gamma_1 H^2 \left( 1 + \frac{2D_f}{H} \right) \frac{K_s \tan \phi'_1}{B} - \gamma_1 H \leq q_t \quad (5.21)$$

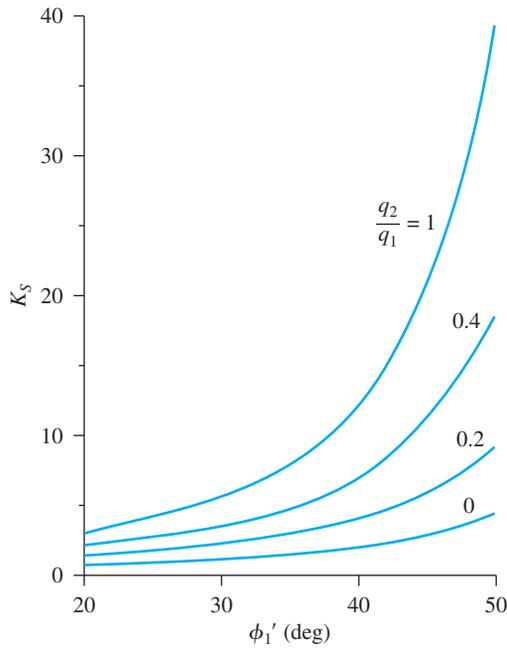


Figure 5.10 Meyerhof and Hanna's punching shear coefficient  $K_s$

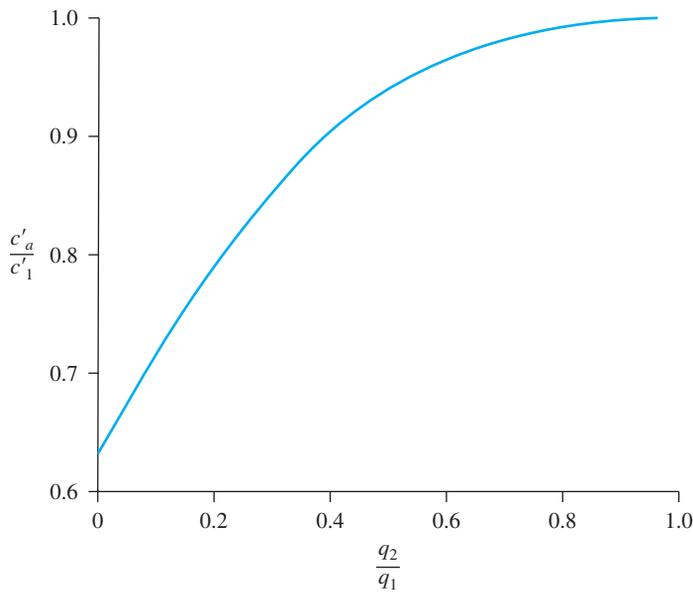


Figure 5.11 Variation of  $c'_a/c'_1$  with  $q_2/q_1$  based on the theory of Meyerhof and Hanna (1978)

For rectangular foundations, the preceding equation can be extended to the form

$$q_u = q_b + \left(1 + \frac{B}{L}\right) \left(\frac{2c'_a H}{B}\right) + \gamma_1 H^2 \left(1 + \frac{B}{L}\right) \left(1 + \frac{2D_f}{H}\right) \left(\frac{K_s \tan \phi'_1}{B}\right) - \gamma_1 H \leq q_t \quad (5.22)$$

where

$$q_b = c'_2 N_{c(2)} F_{cs(2)} + \gamma_1 (D_f + H) N_{q(2)} F_{qs(2)} + \frac{1}{2} \gamma_2 B N_{\gamma(2)} F_{\gamma s(2)} \quad (5.23)$$

and

$$q_t = c'_1 N_{c(1)} F_{cs(1)} + \gamma_1 D_f N_{q(1)} F_{qs(1)} + \frac{1}{2} \gamma_1 B N_{\gamma(1)} F_{\gamma s(1)} \quad (5.24)$$

in which

$F_{cs(1)}, F_{qs(1)}, F_{\gamma s(1)}$  = shape factors with respect to top soil layer (Table 4.3)

$F_{cs(2)}, F_{qs(2)}, F_{\gamma s(2)}$  = shape factors with respect to bottom soil layer (Table 4.3)

## Special Cases

1. *Top layer is strong sand and bottom layer is saturated soft clay ( $\phi_2 = 0$ ).* From Eqs. (5.22), (5.23), and (5.24),

$$q_b = \left(1 + 0.2 \frac{B}{L}\right) 5.14 c_{u(2)} + \gamma_1 (D_f + H) \quad (5.25)$$

and

$$q_t = \gamma_1 D_f N_{q(1)} F_{qs(1)} + \frac{1}{2} \gamma_1 B N_{\gamma(1)} F_{\gamma s(1)} \quad (5.26)$$

Hence,

$$q_u = \left(1 + 0.2 \frac{B}{L}\right) 5.14 c_{u(2)} + \gamma_1 H^2 \left(1 + \frac{B}{L}\right) \left(1 + \frac{2D_f}{H}\right) \frac{K_s \tan \phi'_1}{B} + \gamma_1 D_f \leq \gamma_1 D_f N_{q(1)} F_{qs(1)} + \frac{1}{2} \gamma_1 B N_{\gamma(1)} F_{\gamma s(1)} \quad (5.27)$$

where  $c_{u(2)}$  = undrained cohesion.

For a determination of  $K_s$  from Figure 5.10,

$$\frac{q_2}{q_1} = \frac{c_{u(2)}N_{c(2)}}{\frac{1}{2}\gamma_1BN_{\gamma(1)}} = \frac{5.14c_{u(2)}}{0.5\gamma_1BN_{\gamma(1)}} \quad (5.28)$$

2. *Top layer is stronger sand and bottom layer is weaker sand ( $c'_1 = 0, c'_2 = 0$ ). The ultimate bearing capacity can be given as*

$$q_u = \left[ \gamma_1(D_f + H)N_{q(2)}F_{qs(2)} + \frac{1}{2} \gamma_2BN_{\gamma(2)}F_{\gamma s(2)} \right] + \gamma_1H^2 \left( 1 + \frac{B}{L} \right) \left( 1 + \frac{2D_f}{H} \right) \frac{K_s \tan \phi'_1}{B} - \gamma_1H \leq q_t \quad (5.29)$$

where

$$q_t = \gamma_1D_fN_{q(1)}F_{qs(1)} + \frac{1}{2} \gamma_1BN_{\gamma(1)}F_{\gamma s(1)} \quad (5.30)$$

Then

$$\frac{q_2}{q_1} = \frac{\frac{1}{2}\gamma_2BN_{\gamma(2)}}{\frac{1}{2}\gamma_1BN_{\gamma(1)}} = \frac{\gamma_2N_{\gamma(2)}}{\gamma_1N_{\gamma(1)}} \quad (5.31)$$

3. *Top layer is stronger saturated clay ( $\phi_1 = 0$ ) and bottom layer is weaker saturated clay ( $\phi_2 = 0$ ). The ultimate bearing capacity can be given as*

$$q_u = \left( 1 + 0.2 \frac{B}{L} \right) 5.14c_{u(2)} + \left( 1 + \frac{B}{L} \right) \left( \frac{2c_aH}{B} \right) + \gamma_1D_f \leq q_t \quad (5.32)$$

where

$$q_t = \left( 1 + 0.2 \frac{B}{L} \right) 5.14c_{u(1)} + \gamma_1D_f \quad (5.33)$$

and  $c_{u(1)}$  and  $c_{u(2)}$  are undrained cohesions. For this case,

$$\frac{q_2}{q_1} = \frac{5.14c_{u(2)}}{5.14c_{u(1)}} = \frac{c_{u(2)}}{c_{u(1)}} \quad (5.34)$$

**Example 5.4**

Refer to Figure 5.9a and consider the case of a continuous foundation with  $B = 2$  m,  $D_f = 1.2$  m, and  $H = 1.5$  m. The following are given for the two soil layers:

Top sand layer:

Unit weight  $\gamma_1 = 17.5$  kN/m<sup>3</sup>

$$\phi'_1 = 40^\circ$$

$$c'_1 = 0$$

Bottom clay layer:

Unit weight  $\gamma_2 = 16.5$  kN/m<sup>3</sup>

$$\phi'_2 = 0$$

$$c_{u(2)} = 30 \text{ kN/m}^2$$

Determine the gross ultimate load per unit length of the foundation.

**Solution**

For this case, Eqs. (5.27) and (5.28) apply. For  $\phi'_1 = 40^\circ$ , from Table 4.2,  $N_\gamma = 109.41$  and

$$\frac{q_2}{q_1} = \frac{c_{u(2)}N_{c(2)}}{0.5\gamma_1BN_{\gamma(1)}} = \frac{(30)(5.14)}{(0.5)(17.5)(2)(109.41)} = 0.081$$

From Figure 5.10, for  $c_{u(2)}N_{c(2)}/0.5\gamma_1BN_{\gamma(1)} = 0.081$  and  $\phi'_1 = 40^\circ$ , the value of  $K_s \approx 2.5$ . Equation (5.27) then gives

$$\begin{aligned} q_u &= \left[ 1 + (0.2)\left(\frac{B}{L}\right) \right] 5.14c_{u(2)} + \left( 1 + \frac{B}{L} \right) \gamma_1 H^2 \left( 1 + \frac{2D_f}{H} \right) K_s \frac{\tan \phi'_1}{B} + \gamma_1 D_f \\ &= [1 + (0.2)(0)](5.14)(30) + (1 + 0)(17.5)(1.5)^2 \\ &\quad \times \left[ 1 + \frac{(2)(1.2)}{1.5} \right] (2.5) \frac{\tan 40}{2.0} + (17.5)(1.2) \\ &= 154.2 + 107.4 + 21 = 282.6 \text{ kN/m}^2 \end{aligned}$$

Again, from Eq. (5.26),

$$q_t = \gamma_1 D_f N_{q(1)} F_{qs(1)} + \frac{1}{2} \gamma_1 B N_{\gamma(1)} F_{\gamma s(1)}$$

From Table 4.2, for  $\phi'_1 = 40^\circ$ ,  $N_\gamma = 109.4$  and  $N_q = 64.20$ .

From Table 4.3,

$$F_{qs(1)} = 1 + \left( \frac{B}{L} \right) \tan \phi'_1 = 1 + (0) \tan 40 = 1$$

and

$$F_{\gamma s(1)} = 1 - 0.4 \frac{B}{L} = 1 - (0.4)(0) = 1$$

so that

$$q_t = (17.5)(1.2)(64.20)(1) + \left(\frac{1}{2}\right)(17.5)(2)(109.4)(1) = 3262.7 \text{ kN/m}^2$$

Hence,

$$q_u = 282.6 \text{ kN/m}^2$$

$$Q_u = (282.6)(B) = (282.6)(2) = \mathbf{565.2 \text{ kN/m}}$$

### Example 5.5

A foundation  $1.5 \text{ m} \times 1 \text{ m}$  is located at a depth,  $D_f$ , of 1 m in a stronger clay. A softer clay layer is located at a depth,  $H$ , of 1 m measured from the bottom of the foundation. For the top clay layer,

$$\begin{aligned} \text{Undrained shear strength} &= 120 \text{ kN/m}^2 \\ \text{Unit weight} &= 16.8 \text{ kN/m}^3 \end{aligned}$$

and for the bottom clay layer,

$$\begin{aligned} \text{Undrained shear strength} &= 48 \text{ kN/m}^2 \\ \text{Unit weight} &= 16.2 \text{ kN/m}^3 \end{aligned}$$

Determine the gross allowable load for the foundation with an FS of 4. Use Eqs. (5.32), (5.33), and (5.34).

#### Solution

For this problem, Eqs. (5.32), (5.33), and (5.34) will apply, or

$$\begin{aligned} q_u &= \left(1 + 0.2 \frac{B}{L}\right) 5.14 c_{u(2)} + \left(1 + \frac{B}{L}\right) \left(\frac{2c_a H}{B}\right) + \gamma_1 D_f \\ &\leq \left(1 + 0.2 \frac{B}{L}\right) 5.14 c_{u(1)} + \gamma_1 D_f \end{aligned}$$

Given:

$$\begin{aligned} B &= 1 \text{ m} & H &= 1 \text{ m} & D_f &= 1 \text{ m} \\ L &= 1.5 \text{ m} & \gamma_1 &= 16.8 \text{ kN/m}^3 \end{aligned}$$

From Figure 5.11,  $c_{u(2)}/c_{u(1)} = 48/120 = 0.4$ , the value of  $c_a/c_{u(1)} \approx 0.9$ , so

$$\begin{aligned} c_a &= (0.9)(120) = 108 \text{ kN/m}^2 \\ q_u &= \left[1 + (0.2) \left(\frac{1}{1.5}\right)\right] (5.14)(48) + \left(1 + \frac{1}{1.5}\right) \left[\frac{(2)(108)(1)}{1}\right] + (16.8)(1) \\ &= 279.6 + 360 + 16.8 = \mathbf{656.4 \text{ kN/m}^2} \end{aligned}$$

Check: From Eq. (5.33),

$$q_t = \left[ 1 + (0.2) \left( \frac{1}{1.5} \right) \right] (5.14)(120) + (16.8)(1) \\ = 699 + 16.8 = 715.8 \text{ kN/m}^2$$

Thus  $q_u = 656.4 \text{ kN/m}^2$  (that is, the smaller of the two values calculated above) and

$$q_{\text{all}} = \frac{q_u}{\text{FS}} = \frac{656.4}{4} = 164.1 \text{ kN/m}^2$$

The total allowable load is

$$(q_{\text{all}})(1 \times 1.5) = \mathbf{246.15 \text{ kN}}$$

*Note:* This is the same problem as in Example 5.3. The allowable load is about 40% lower than that calculated in Example 5.3. This is due to the failure surface in the soil assumed at the ultimate load. ■

## 5.5 Bearing Capacity of Layered Soil: Weaker Soil Underlain by Stronger Soil

When a foundation is supported by a weaker soil layer underlain by a stronger layer (Figure 5.12a), the ratio of  $q_2/q_1$  defined by Eqs. (5.18) and (5.19) will be greater than one. Also, if  $H/B$  is relatively small, as shown in the left-hand half of Figure 5.12a, the failure surface in soil at ultimate load will pass through both soil layers. However, for larger  $H/B$  ratios, the failure surface will be fully located in the top, weaker soil layer, as shown in the right-hand half of Figure 5.12a. For this condition, the ultimate bearing capacity (Meyerhof, 1974; Meyerhof and Hanna, 1978) can be given by the empirical equation

$$q_u = q_t + (q_b - q_t) \left( \frac{H}{D} \right)^2 \geq q_t \quad (5.35)$$

where

$D$  = depth of failure surface beneath the foundation in the thick bed of the upper weaker soil layer

$q_t$  = ultimate bearing capacity in a thick bed of the upper soil layer



$q_b$  = ultimate bearing capacity in a thick bed of the lower soil layer

So

$$q_t = c'_1 N_{c(1)} F_{cs(1)} + \gamma_1 D_f N_{q(1)} F_{qs(1)} + \frac{1}{2} \gamma_1 B N_{\gamma(1)} F_{\gamma s(1)} \quad (5.36)$$

and

$$q_b = c'_2 N_{c(2)} F_{cs(2)} + \gamma_2 D_f N_{q(2)} F_{qs(2)} + \frac{1}{2} \gamma_2 B N_{\gamma(2)} F_{\gamma s(2)} \quad (5.37)$$

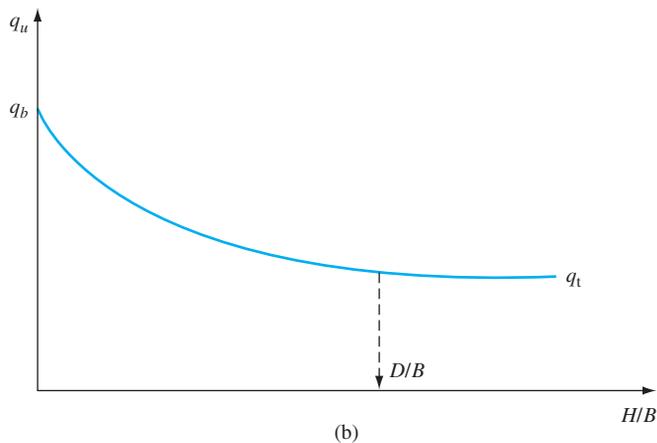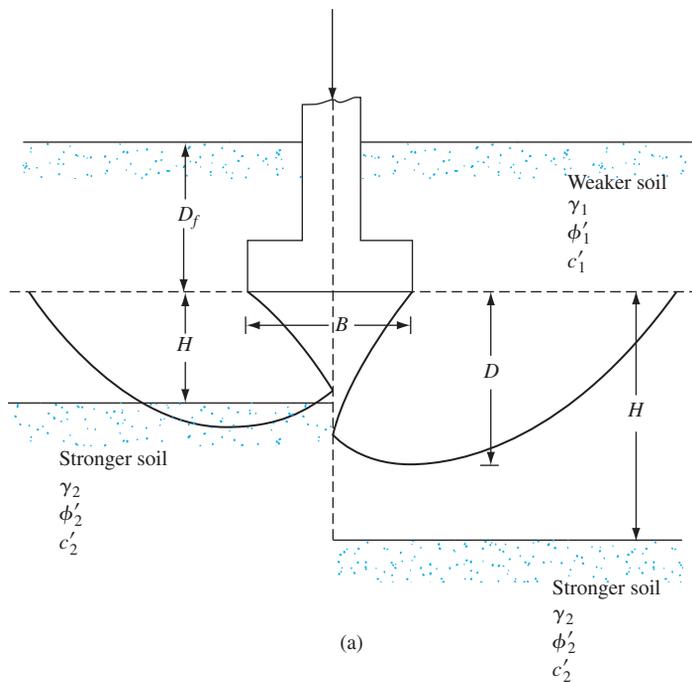

**Figure 5.12** (a) Foundation on weaker soil layer underlain by stronger sand layer, (b) Nature of variation of  $q_u$  with  $H/B$

where

- $N_{c(1)}, N_{q(1)}, N_{\gamma(1)}$  = bearing capacity factors corresponding to the soil friction angle  $\phi'_1$
- $N_{c(2)}, N_{q(2)}, N_{\gamma(2)}$  = bearing capacity factors corresponding to the soil friction angle  $\phi'_2$
- $F_{cs(1)}, F_{qs(1)}, F_{\gamma s(1)}$  = shape factors corresponding to the soil friction angle  $\phi'_1$
- $F_{cs(2)}, F_{qs(2)}, F_{\gamma s(2)}$  = shape factors corresponding to the soil friction angle  $\phi'_2$

Meyerhof and Hanna (1978) suggested that

- $D \approx B$  for loose sand and clay
- $D \approx 2B$  for dense sand

Equations (5.35), (5.36), and (5.37) imply that the maximum and minimum values of  $q_u$  will be  $q_b$  and  $q_t$ , respectively, as shown in Figure 5.12b.

### Example 5.6

Refer to Figure 5.12a. For a layered saturated-clay profile, given:  $L = 6$  ft,  $B = 4$  ft,  $D_f = 3$  ft,  $H = 2$  ft,  $\gamma_1 = 110$  lb/ft<sup>3</sup>,  $\phi_1 = 0$ ,  $c_{u(1)} = 1200$  lb/ft<sup>2</sup>,  $\gamma_2 = 125$  lb/ft<sup>3</sup>,  $\phi_2 = 0$ , and  $c_{u(2)} = 2500$  lb/ft<sup>2</sup>. Determine the ultimate bearing capacity of the foundation.

#### Solution

From Eqs. (5.18) and (5.19),

$$\frac{q_2}{q_1} = \frac{c_{u(2)}N_c}{c_{u(1)}N_c} = \frac{c_{u(2)}}{c_{u(1)}} = \frac{2500}{1200} = 2.08 > 1$$

So, Eq. (5.35) will apply.

From Eqs. (5.36) and (5.37) with  $\phi_1 = \phi_2 = 0$ ,

$$\begin{aligned} q_t &= \left(1 + 0.2\frac{B}{L}\right)N_c c_{u(1)} + \gamma_1 D_f \\ &= \left[1 + (0.2)\left(\frac{4}{6}\right)\right](5.14)(1200) + (3)(110) = 6990.4 + 330 = 7320.4 \text{ lb/ft}^2 \end{aligned}$$

and

$$\begin{aligned} q_b &= \left(1 + 0.2\frac{B}{L}\right)N_c c_{u(2)} + \gamma_2 D_f \\ &= \left[1 + (0.2)\left(\frac{4}{6}\right)\right](5.14)(2500) + (3)(125) \\ &= 14,563.3 + 375 = 14,938.3 \text{ lb/ft}^2 \end{aligned}$$

From Eq. (5.35),

$$\begin{aligned} q_u &= q_t + (q_b - q_t)\left(\frac{H}{D}\right)^2 \\ D &\approx B \\ q_u &= 7320.4 + (14,938.3 - 7320.4)\left(\frac{2}{4}\right)^2 \approx 9225 \text{ lb/ft}^2 > q_t \end{aligned}$$

Hence,

$$q_u = 9225 \text{ lb/ft}^2$$



width  $W$  of the trench can be smaller or larger than  $B$ . The parameters of the stronger trench material and the weak soil for bearing capacity calculation are as follows.

	Trench material	Weak soil
Angle of friction	$\phi'_1$	$\phi'_2$
Cohesion	$c'_1$	$c'_2$
Unit weight	$\gamma_1$	$\gamma_2$

Madhav and Vitkar (1978) assumed a general shear failure mechanism in the soil under the foundation to analyze the ultimate bearing capacity using the upper-bound limit analysis, and this is shown in Fig. 5.13. The failure zone in the soil can be divided into subzones.

1. An active Rankine zone  $ABC$  with a wedge angle of  $\zeta$ .
2. A mixed transition zone such as  $BCD$  bounded by angle  $\theta_1$ .  $CD$  is an arc of a log spiral.
3. A transition zone such as  $BDF$  with a central angle  $\theta_2$ .  $DF$  is an arc of a log spiral.
4. A Rankine passive zone like  $BFG$ .

Note that  $\theta_1$  and  $\theta_2$  are functions of  $\zeta$ ,  $\eta$ ,  $W/B$ , and  $\phi_1$ .

By using the upper-bound limit analysis theorem, Madhav and Vitkar (1978) expressed the ultimate bearing capacity of the foundation as

$$q_u = c'_2 N_{c(T)} + D_f \gamma_2 N_{q(T)} + \left( \frac{\gamma_2 B}{2} \right) N_{\gamma(T)} \quad (5.38)$$

where  $N_{c(T)}$ ,  $N_{q(T)}$ ,  $N_{\gamma(T)}$  = bearing-capacity factors with the presence of the trench.

The variations of the bearing-capacity factors [that is,  $N_{c(T)}$ ,  $N_{q(T)}$ , and  $N_{\gamma(T)}$ ] for purely granular trench soil ( $c'_1 = 0$ ) and soft saturated clay (with  $\phi_2 = 0$  and  $c_2 = c_u$ ) determined by Madhav and Vitkar (1978) are given in Figures 5.14, 5.15, and 5.16. The values of  $N_{q(T)}$  given in Figure 5.16 are for  $\gamma_1/\gamma_2 = 1$ . In an actual case, the ratio  $\gamma_1/\gamma_2$  may be different than one; however, the error for this assumption is less than 10%.

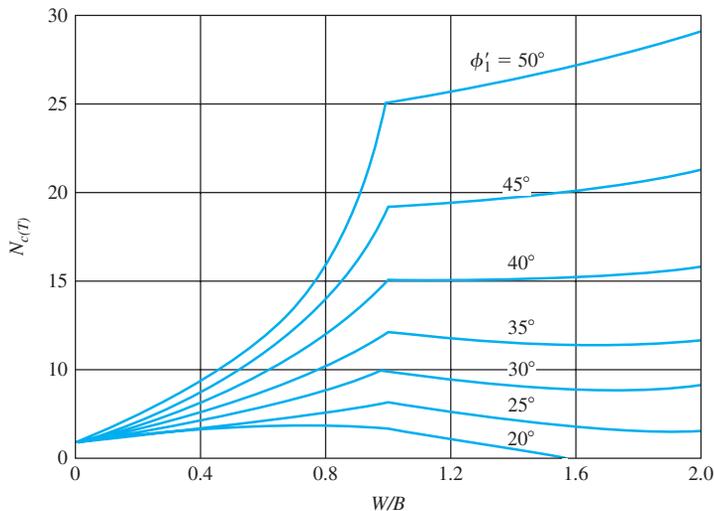


Figure 5.14 Madhav and Vitkar's bearing-capacity factor  $N_{c(T)}$

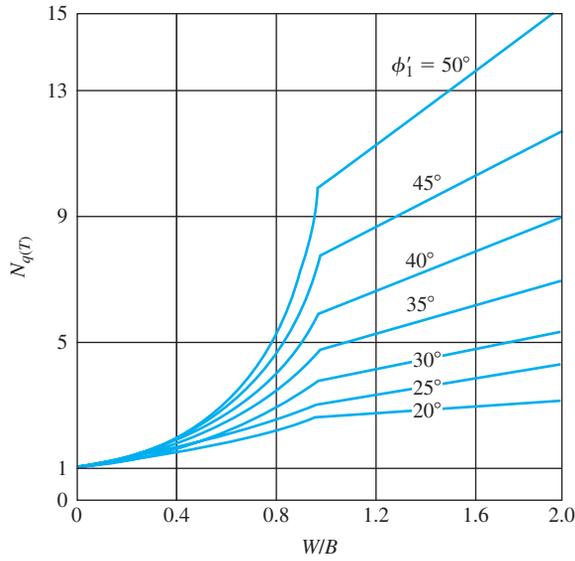


Figure 5.15 Madhav and Vitkar's bearing-capacity factor  $N_{q(T)}$


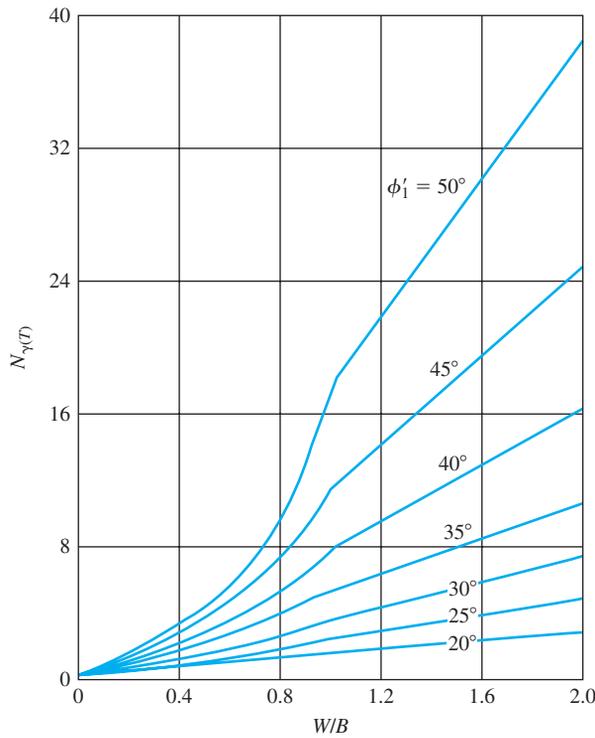


Figure 5.16 Madhav and Vitkar's bearing-capacity factor  $N_{\gamma(T)}$

## 5.7 Closely Spaced Foundations—Effect on Ultimate Bearing Capacity

In Chapter 4, theories relating to the ultimate bearing capacity of single rough continuous foundations supported by a homogeneous soil extending to a great depth were discussed. However, if foundations are placed close to each other with similar soil conditions, the ultimate bearing capacity of each foundation may change due to the interference effect of the failure surface in the soil. This was theoretically investigated by Stuart (1962) for *granular soils*. It was assumed that the geometry of the rupture surface in the soil mass would be the same as that assumed by Terzaghi (Figure 4.6). According to Stuart, the following conditions may arise (Figure 5.17).

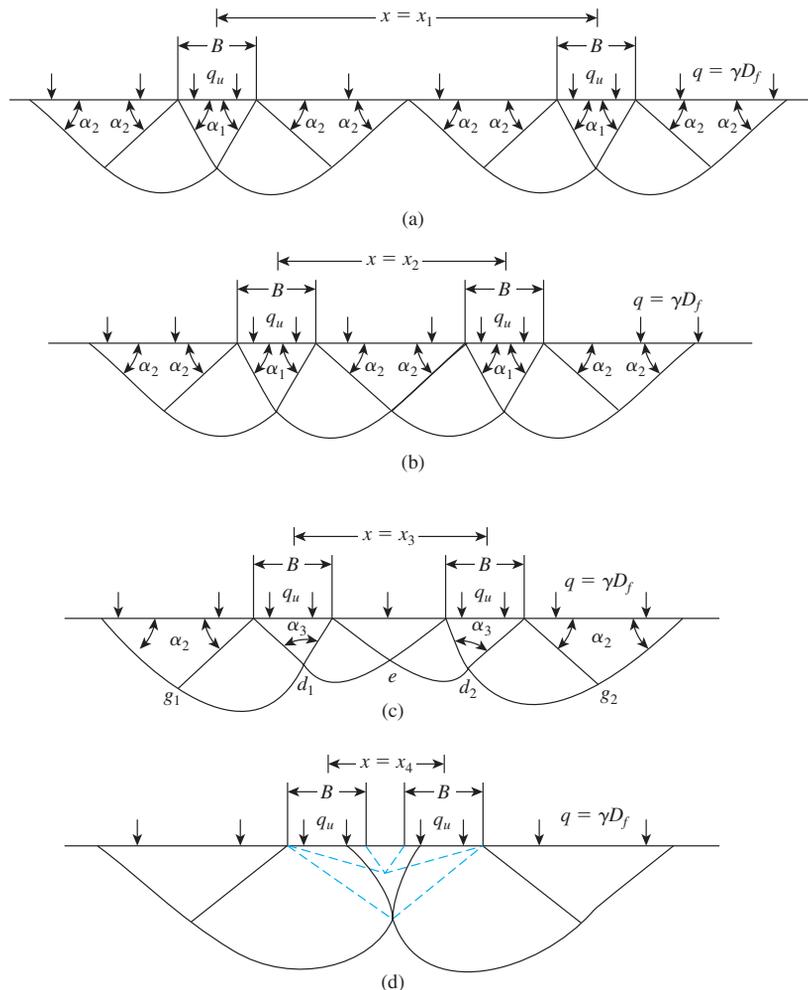

**Figure 5.17** Assumptions for the failure surface in granular soil under two closely spaced rough continuous foundations

(Note:  $\alpha_1 = \phi'$ ,  $\alpha_2 = 45 - \phi'/2$ ,  $\alpha_3 = 180 - 2\phi'$ )

**Case I.** (Figure 5.17a) If the center-to-center spacing of the two foundations is  $x \geq x_1$ , the rupture surface in the soil under each foundation will not overlap. So the ultimate bearing capacity of each continuous foundation can be given by Terzaghi's equation [Eq. (4.8)]. For ( $c' = 0$ )

$$q_u = qN_q + \frac{1}{2}\gamma BN_\gamma \quad (5.39)$$

where  $N_q, N_\gamma =$  Terzaghi's bearing capacity factors (Table 4.1).

**Case II.** (Figure 5.17b) If the center-to-center spacing of the two foundations ( $x = x_2 < x_1$ ) are such that the Rankine passive zones just overlap, then the magnitude of  $q_u$  will still be given by Eq. (5.39). However, the foundation settlement at ultimate load will change (compared to the case of an isolated foundation).

**Case III.** (Figure 5.17c) This is the case where the center-to-center spacing of the two continuous foundations is  $x = x_3 < x_2$ . Note that the triangular wedges in the soil under the foundations make angles of  $180^\circ - 2\phi'$  at points  $d_1$  and  $d_2$ . The arcs of the logarithmic spirals  $d_1g_1$  and  $d_1e$  are tangent to each other at  $d_1$ . Similarly, the arcs of the logarithmic spirals  $d_2g_2$  and  $d_2e$  are tangent to each other at  $d_2$ . For this case, the ultimate bearing capacity of each foundation can be given as ( $c' = 0$ )

$$q_u = qN_q\zeta_q + \frac{1}{2}\gamma BN_\gamma\zeta_\gamma \quad (5.40)$$

where  $\zeta_q, \zeta_\gamma =$  efficiency ratios.

The efficiency ratios are functions of  $x/B$  and soil friction angle  $\phi'$ . The theoretical variations of  $\zeta_q$  and  $\zeta_\gamma$  are given in Figure 5.18.

**Case IV.** (Figure 5.17d): If the spacing of the foundation is further reduced such that  $x = x_4 < x_3$ , blocking will occur and the pair of foundations will act as a single foundation. The soil between the individual units will form an inverted arch which travels down with the foundation as the load is applied. When the two foundations touch, the zone of arching disappears and the system behaves as a single foundation with a width equal to  $2B$ . The ultimate bearing capacity for this case can be given by Eq. (5.39), with  $B$  being replaced by  $2B$  in the second term.



The ultimate bearing capacity of two continuous foundations spaced close to each other may increase since the efficiency ratios are greater than one. However, when the closely spaced foundations are subjected to a similar load per unit area, the settlement  $S_e$  will be larger when compared to that for an isolated foundation.

## 5.8 Bearing Capacity of Foundations on Top of a Slope

In some instances, shallow foundations need to be constructed on top of a slope. In Figure 5.19, the height of the slope is  $H$ , and the slope makes an angle  $\beta$  with the horizontal. The edge of the foundation is located at a distance  $b$  from the top of the slope. At ultimate load,  $q_u$ , the failure surface will be as shown in the figure.

Meyerhof (1957) developed the following theoretical relation for the ultimate bearing capacity for *continuous foundations*:

$$q_u = c'N_{cq} + \frac{1}{2}\gamma BN_{\gamma q} \quad (5.41)$$

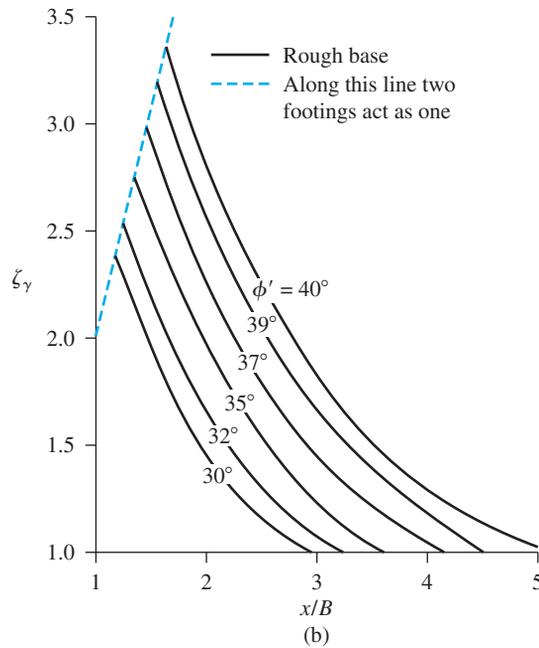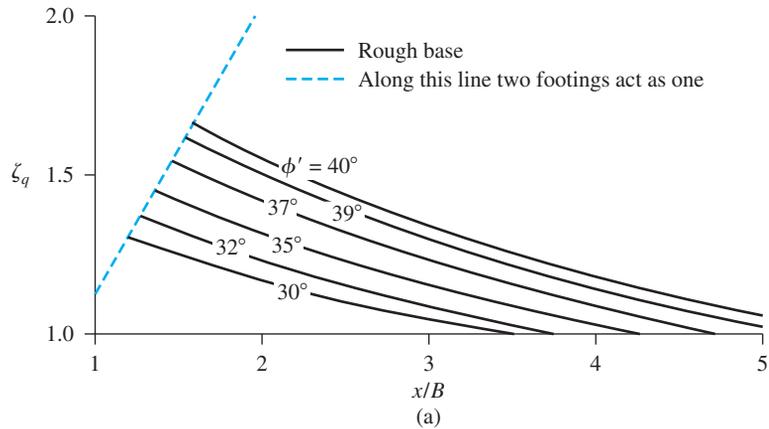

**Figure 5.18** Variation of efficiency ratios with  $x/B$  and  $\phi'$

For purely granular soil,  $c' = 0$ , thus,

$$q_u = \frac{1}{2} \gamma B N_{\gamma q} \quad (5.42)$$

Again, for purely cohesive soil,  $\phi = 0$  (the undrained condition); hence,

$$q_u = c_u N_{cq} \quad (5.43)$$

where  $c_u =$  undrained cohesion.

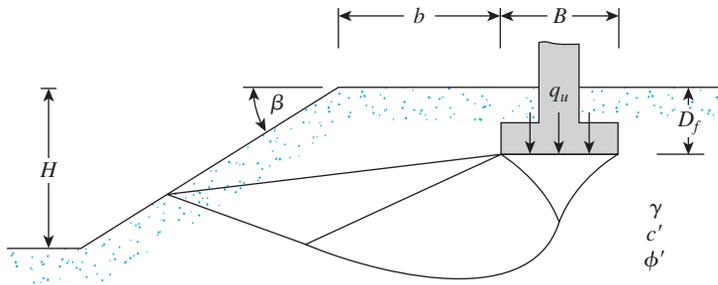


Figure 5.19 Shallow foundation on top of a slope

The variations of  $N_{\gamma q}$  and  $N_{cq}$  defined by Eqs. (5.42) and (5.43) are shown in Figures 5.20 and 5.21, respectively. In using  $N_{cq}$  in Eq. (5.43) as given in Figure 5.21, the following points need to be kept in mind:

1. The term

$$N_s = \frac{\gamma H}{c_u} \tag{5.44}$$

is defined as the stability number.

2. If  $B < H$ , use the curves for  $N_s = 0$ .
3. If  $B \geq H$ , use the curves for the calculated stability number  $N_s$ .


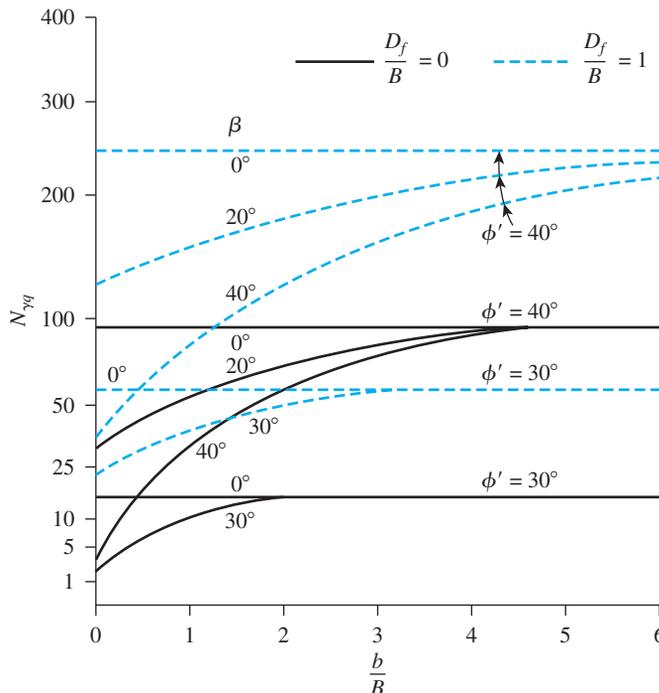


Figure 5.20 Meyerhof's bearing capacity factor  $N_{\gamma q}$  for granular soil ( $c' = 0$ )

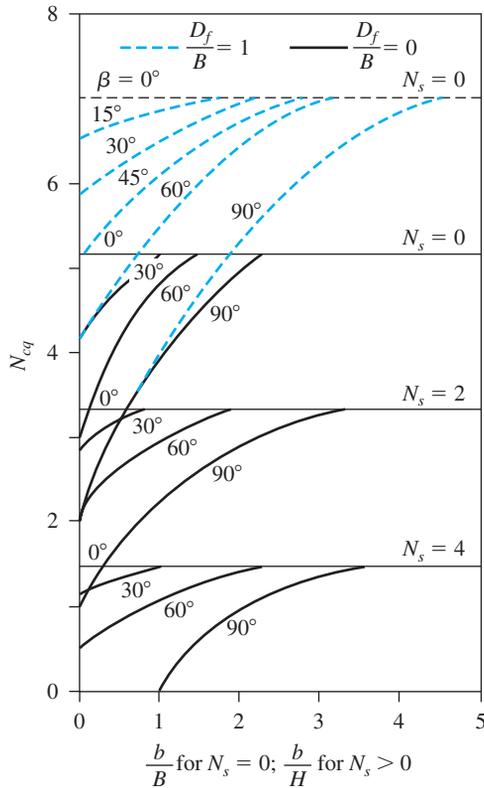

**Figure 5.21** Meyerhof's bearing capacity factor  $N_{cq}$  for purely cohesive soil

### Example 5.8

In Figure 5.19, for a shallow continuous foundation in a clay, the following data are given:  $B = 1.2$  m;  $D_f = 1.2$  m;  $b = 0.8$  m;  $H = 6.2$  m;  $\beta = 30^\circ$ ; unit weight of soil =  $17.5$  kN/m<sup>3</sup>;  $\phi = 0$ ; and  $c_u = 50$  kN/m<sup>2</sup>. Determine the gross allowable bearing capacity with a factor of safety  $FS = 4$ .

#### Solution

Since  $B < H$ , we will assume the stability number  $N_s = 0$ . From Eq. (5.43),

$$q_u = c_u N_{cq}$$

We are given that

$$\frac{D_f}{B} = \frac{1.2}{1.2} = 1$$

and

$$\frac{b}{B} = \frac{0.8}{1.2} = 0.67$$

For  $\beta = 30^\circ$ ,  $D_f/B = 1$  and  $b/B = 0.67$ , Figure 5.21 gives  $N_{cq} = 6.3$ . Hence,

$$q_u = (50)(6.3) = 315 \text{ kN/m}^2$$

and

$$q_{\text{all}} = \frac{q_u}{FS} = \frac{315}{4} = 78.8 \text{ kN/m}^2$$

### Example 5.9

Figure 5.22 shows a continuous foundation on a slope of a granular soil. Estimate the ultimate bearing capacity.

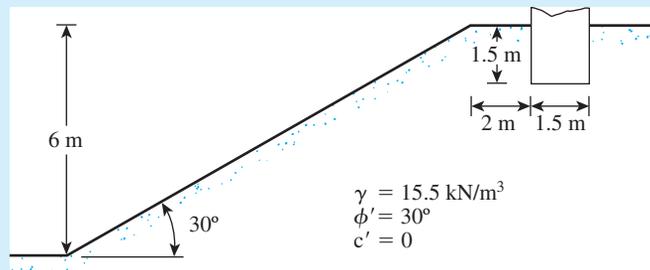


Figure 5.22 Foundation on a granular slope

### Solution

For granular soil ( $c' = 0$ ), from Eq. (5.42),

$$q_u = \frac{1}{2} \gamma B N_{\gamma q}$$

We are given that  $b/B = 2/1.5 = 1.33$ ,  $D_f/B = 1.5/1.5 = 1$ ,  $\phi' = 30^\circ$ , and  $\beta = 30^\circ$ .

From Figure 5.20,  $N_{\gamma q} \approx 41$ . So,

$$q_u = \frac{1}{2} (15.5)(1.5)(41) = 476.6 \text{ kN/m}^2$$

### Example 5.10

Refer to Figure 5.19. For a shallow continuous foundation in a clay, the following are given:  $B = 1.2 \text{ m}$ ,  $D_f = 1.2 \text{ m}$ ,  $b = 0.8 \text{ m}$ ,  $H = 6.2 \text{ m}$ ,  $\beta = 30^\circ$ , unit weight of soil =  $17.5 \text{ kN/m}^3$ ,  $\phi = 0$ , and  $c_u = 50 \text{ kN/m}^2$ . Determine the gross allowable bearing capacity with a factor of safety  $FS = 4$ .

**Solution**

Since  $B < H$ , we will assume the stability number  $N_s = 0$ . From Eq. (5.43).

$$q_u = c_u N_{cq}$$

Given:

$$\frac{D_f}{B} = \frac{1.2}{1.2} = 1$$

$$\frac{b}{B} = \frac{0.8}{1.2} = 0.75$$

For  $\beta = 30^\circ$ ,  $D_f/B = 1$  and  $b/B = 0.75$ , Figure 5.21 given  $N_{cq} = 6.3$ . Hence,

$$q_u = (50)(6.3) = 315 \text{ kN/m}^2$$

$$q_{\text{all}} = \frac{q_u}{\text{FS}} = \frac{315}{4} = \mathbf{78.8 \text{ kN/m}^2}$$

## 5.9 Bearing Capacity of Foundations on a Slope


A theoretical solution for the ultimate bearing capacity of a shallow foundation located on the face of a slope was developed by Meyerhof (1957). Figure 5.23 shows the nature of the plastic zone developed under a rough continuous foundation of width  $B$ . In Figure 5.23,  $abc$  is an elastic zone,  $acd$  is a radial shear zone, and  $ade$  is a mixed shear zone. Based on this solution, the ultimate bearing capacity can be expressed as

$$q_u = c_u N_{cqs} \text{ (for purely cohesive soil, that is, } \phi = 0) \quad (5.45)$$

and

$$q_u = \frac{1}{2} \gamma B N_{\gamma qs} \text{ (for granular soil, that is } c' = 0) \quad (5.46)$$

The variations of  $N_{cqs}$  and  $N_{\gamma qs}$  with slope angle  $\beta$  are given in Figures 5.24 and 5.25.

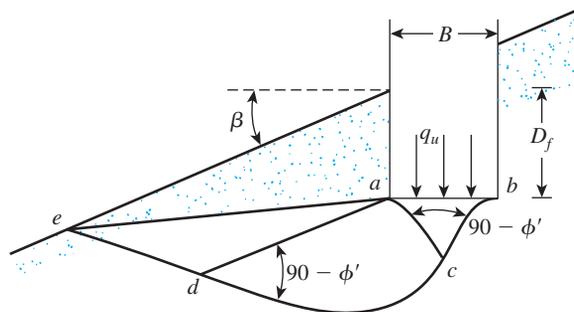

**Figure 5.23** Nature of plastic zone under a rough continuous foundation on the face of a slope

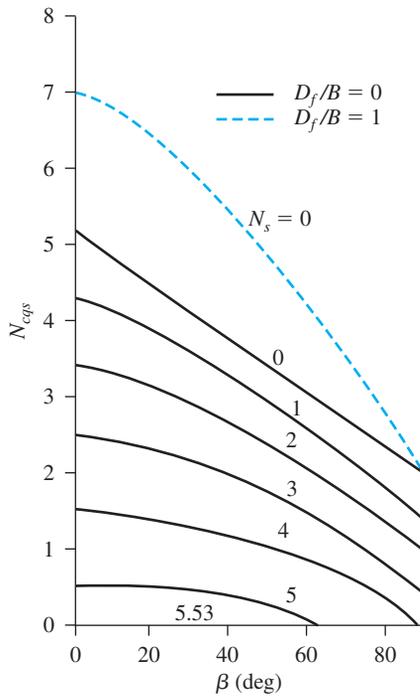


Figure 5.24 Variation of  $N_{cqs}$  with  $\beta$ . (Note:  $N_s = \gamma H/c_u$ )

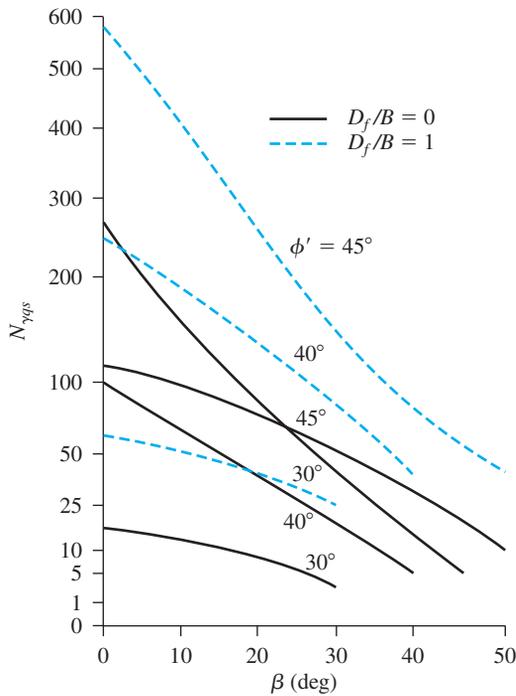


Figure 5.25 Variation of  $N_{\gamma qs}$  with  $\beta$

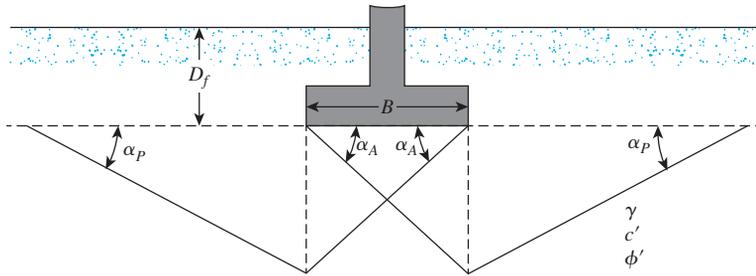


Figure 5.26 Failure surface in soil for static bearing-capacity analysis

## 5.10 Seismic Bearing Capacity and Settlement in Granular Soil

In some instances, shallow foundations may fail during seismic events. Published studies relating to the bearing capacity of shallow foundations in such instances are rare. Richards et al. (1993) developed a seismic bearing-capacity theory that is presented in this section. It needs to be pointed out that this theory has not yet been supported by field data.

Figure 5.26 shows the nature of failure in soil assumed for this analysis for static conditions. Similarly, Figure 5.27 shows the failure surface under earthquake conditions. Note that, in Figures 5.26 and 5.27

$\alpha_A, \alpha_{AE}$  = inclination angles for active pressure conditions

$\alpha_p, \alpha_{pE}$  = inclination angles for passive pressure conditions

According to this theory, the ultimate bearing capacities for *continuous foundations* in granular soil are

$$\text{Static conditions: } q_u = qN_q + \frac{1}{2}\gamma BN_\gamma \quad (5.47)$$

$$\text{Earthquake conditions: } q_{uE} = qN_{qE} + \frac{1}{2}\gamma BN_{\gamma E} \quad (5.48)$$

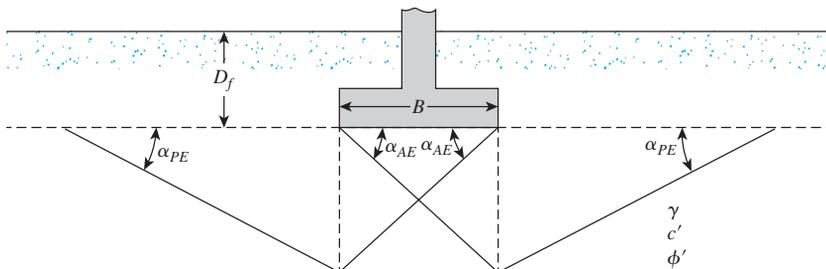


Figure 5.27 Failure surface in soil for seismic bearing-capacity analysis

where

$N_q, N_\gamma, N_{qE}, N_{\gamma E}$  = bearing capacity factors

$$q = \gamma D_f$$

Note that

$$N_q \text{ and } N_\gamma = f(\phi')$$

and

$$N_{qE} \text{ and } N_{\gamma E} = f(\phi', \tan \theta)$$

where


$$\tan \theta = \frac{k_h}{1 - k_v}$$

$k_h$  = horizontal coefficient of acceleration due to an earthquake


$k_v$  = vertical coefficient of acceleration due to an earthquake

The variations of  $N_q$  and  $N_\gamma$  with  $\phi'$  are shown in Figure 5.28. Figure 5.29 shows the variations of  $N_{\gamma E}/N_\gamma$  and  $N_{qE}/N_q$  with  $\tan \theta$  and the soil friction angle  $\theta'$ .


For static conditions, bearing-capacity failure can lead to substantial sudden downward movement of the foundation. However, bearing-capacity-related settlement in an earthquake takes place when the ratio  $k_h/(1 - k_v)$  reaches a critical value  $(k_h/1 - k_v)^*$ . If  $k_v = 0$ , then  $(k_h/1 - k_v)^*$  becomes equal to  $k_h^*$ . Figure 5.30 shows the variation of  $k_h^*$  (for  $k_v = 0$  and  $c' = 0$ ; granular soil) with the factor of safety (FS) applied to the ultimate static bearing capacity [Eq. (5.47)],  $\theta'$ , and  $D_f/B$ .

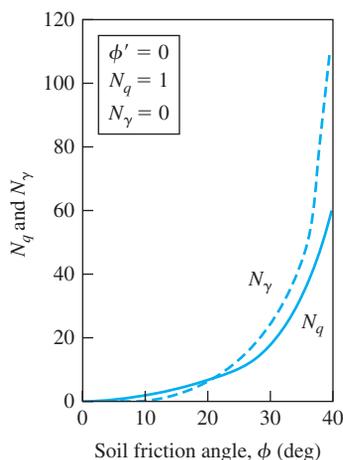

**Figure 5.28** Variation of  $N_q$  and  $N_\gamma$  based on failure surface assumed in Figure 5.26

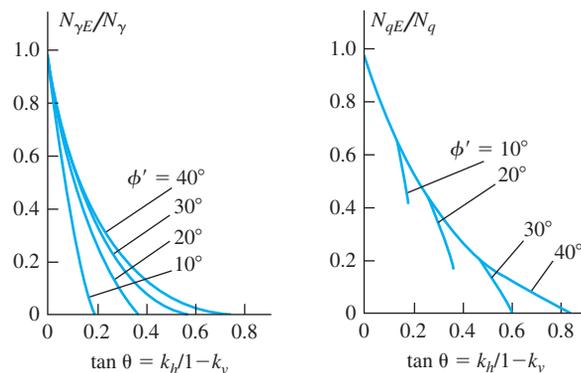

**Figure 5.29** Variation of  $N_{\gamma E}/N_\gamma$  and  $N_{qE}/N_q$  (Based on Richards et al., 1993)

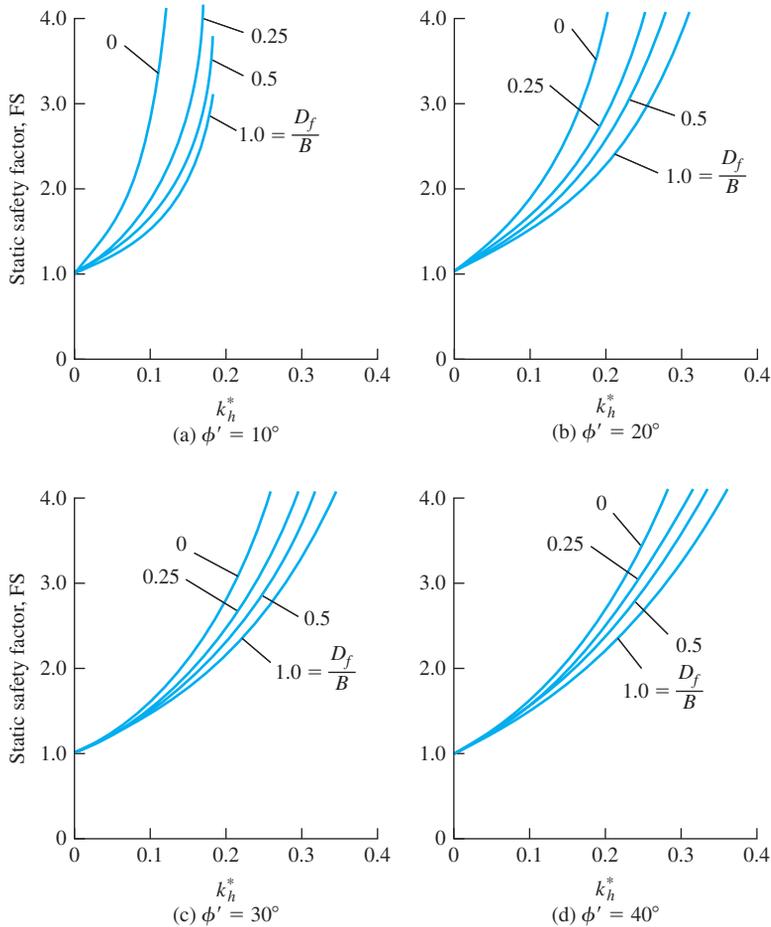

**Figure 5.30** Critical acceleration  $k_h^*$  for  $c = 0$  (Based on Richards et al., 1993)


The settlement of a strip foundation due to an earthquake ( $S_{Eq}$ ) can be estimated (Richards et al., 1993) as

$$S_{Eq}(\text{m}) = 0.174 \frac{V^2}{Ag} \left| \frac{k_h^*}{A} \right|^{-4} \tan \alpha_{AE} \quad (5.49)$$

where

- $V$  = peak velocity for the design earthquake (m/sec)
- $A$  = acceleration coefficient for the design earthquake
- $g$  = acceleration due to gravity ( $9.81 \text{ m/sec}^2$ )

The values of  $k_h^*$  and  $\alpha_{AE}$  can be obtained from Figures 5.30 and 5.31, respectively.

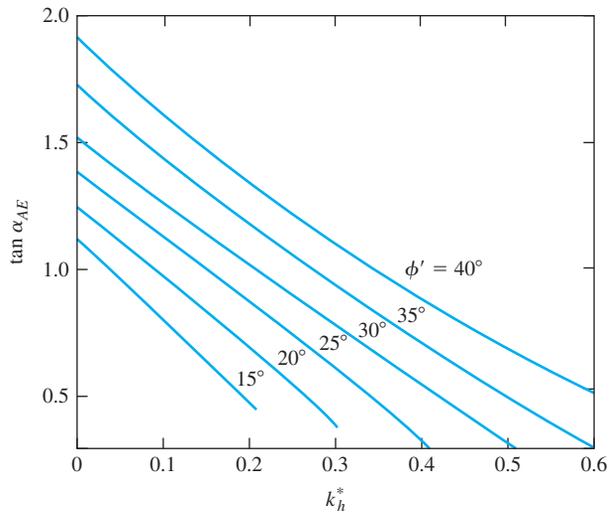

**Figure 5.31** Variation of  $\tan \alpha_{AE}$  with  $k_h^*$  and soil friction angle,  $\phi'$  (Based on Richards et al., 1993)

### Example 5.11

A continuous foundation is to be constructed on a sandy soil with  $B = 2$  m,  $D_f = 1.5$  m,  $\gamma = 18$  kN/m<sup>3</sup>, and  $\phi' = 30^\circ$ . Determine the gross ultimate bearing capacity  $q_{uE}$ . Assume  $k_v = 0$  and  $k_h = 0.176$ .

#### Solution

From Figure 5.28, for  $\phi' = 30^\circ$ ,  $N_q = 16.51$  and  $N_\gamma = 23.76$ .

$$\tan \theta = \frac{k_h}{1 - k_v} = 0.176$$

For  $\tan \theta = 0.176$ , Figure 5.29 gives

$$\frac{N_{\gamma E}}{N_\gamma} = 0.4 \text{ and } \frac{N_{qE}}{N_q} = 0.6$$

Thus,

$$N_{\gamma E} = (0.4)(23.76) = 9.5$$

$$N_{qE} = (0.6)(16.51) = 9.91$$

$$q_{uE} = qN_{qE} + \frac{1}{2}\gamma BN_{\gamma E}$$

$$= (1.5 \times 18)(9.91) + \left(\frac{1}{2}\right)(18)(2)(9.5) = \mathbf{438.6 \text{ kN/m}^2}$$

### Example 5.12

Refer to Example 5.11. If the design earthquake parameters are  $V = 0.4$  m/sec and  $A = 0.32$ , determine the seismic settlement of the foundation. Use  $FS = 3$  for obtaining static allowable bearing capacity.

#### Solution

For the foundation,

$$\frac{D_f}{B} = \frac{1.5}{2} = 0.75$$

From Figure 5.30c for  $\phi' = 30^\circ$ ,  $FS = 3$ , and  $D_f/B = 0.75$ , the value of  $k_h^* = 0.26$ . Also from Figure 5.31 for  $k_h^* = 0.26$  and  $\phi' = 30^\circ$ , the value of  $\tan \alpha_{AE} = 0.88$ . From Eq. (5.49),

$$\begin{aligned} S_{Eq} &= 0.174 \left| \frac{k_h^*}{A} \right|^{-4} \tan \alpha_{AE} \left( \frac{V^2}{Ag} \right) \\ &= 0.174 \frac{(0.4)^2}{(0.32)(9.81)} \left| \frac{0.26}{0.32} \right|^{-4} (0.88) = 0.0179 \text{ m} = \mathbf{17.9 \text{ mm}} \end{aligned}$$

## 5.11 Foundations on Rock

On some occasions, shallow foundations may have to be built on rocks, as shown in Figure 5.32. For estimation of the ultimate bearing capacity of shallow foundations on rock, we may use Terzaghi's bearing capacity equations [Eqs. (4.8), (4.17) and (4.18)] with the bearing capacity factors given here (Stagg and Zienkiewicz, 1968; Bowles, 1996):

$$N_c = 5 \tan^4 \left( 45 + \frac{\phi'}{2} \right) \quad (5.50)$$

$$N_q = \tan^6 \left( 45 + \frac{\phi'}{2} \right) \quad (5.51)$$

$$N_\gamma = N_q + 1 \quad (5.52)$$

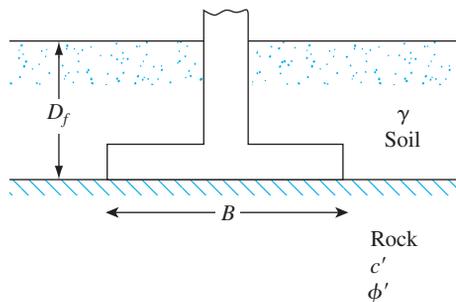


Figure 5.32 Foundation on rock

**Table 5.4** Range of the Unconfined Compression Strength of Various Types of Rocks

Rock type	$q_{uc}$		$\phi'$ (deg)
	MN/m <sup>2</sup>	kip/in <sup>2</sup>	
Granite	65–250	9.5–36	45–55
Limestone	30–150	4–22	35–45
Sandstone	25–130	3.5–19	30–45
Shale	5–40	0.75–6	15–30

For rocks, the magnitude of the cohesion intercept,  $c'$ , can be expressed as

$$q_{uc} = 2c' \tan\left(45 + \frac{\phi'}{2}\right) \quad (5.53)$$

where

$q_{uc}$  = unconfined compression strength of rock

$\phi'$  = angle of friction

The unconfined compression strength and the friction angle of rocks can vary widely. Table 5.4 gives a general range of  $q_{uc}$  for various types of rocks. It is important to keep in mind that the magnitude of  $q_{uc}$  and  $\phi'$  (hence  $c'$ ) reported from laboratory tests are for intact rock specimens. It does not account for the effect of discontinuities. To account for discontinuities, Bowles (1996) suggested that the ultimate bearing capacity  $q_u$  should be modified as

$$q_{u(\text{modified})} = q_u(\text{RQD})^2 \quad (5.54)$$

where RQD = rock quality designation (see Chapter 3).

In any case, the upper limit of the allowable bearing capacity should not exceed  $f'_c$  (28-day compressive strength of concrete).

### Example 5.13

Refer to Figure 5.32. A square column foundation is to be constructed over siltstone.

Given:

Foundation:  $B \times B = 2.5 \text{ m} \times 2.5 \text{ m}$

$D_f = 2 \text{ m}$

Soil:  $\gamma = 17 \text{ kN/m}^3$

Siltstone:  $c' = 32 \text{ MN/m}^2$

$\phi' = 31^\circ$

$\gamma = 25 \text{ kN/m}^3$

RDQ = 50%

Estimate the allowable load-bearing capacity. Use FS = 4. Also, for concrete, use  $f'_c = 30 \text{ MN/m}^2$ .

**Solution**

From Eq. (4.17),

$$q_u = 1.3c'N_c + qN_q + 0.4\gamma BN_\gamma$$

$$N_c = 5 \tan^4\left(45 + \frac{\phi'}{2}\right) = 5 \tan^4\left(45 + \frac{31}{2}\right) = 48.8$$

$$N_q = \tan^6\left(45 + \frac{\phi'}{2}\right) = \tan^6\left(45 + \frac{31}{2}\right) = 30.5$$

$$N_\gamma = N_q + 1 = 30.5 + 1 = 31.5$$

Hence,

$$\begin{aligned} q_u &= (1.3)(32 \times 10^3 \text{ kN/m}^2)(48.8) + (17 \times 2)(30.5) + (0.4)(25)(2.5)(31.5) \\ &= 2030.08 \times 10^3 + 1.037 \times 10^3 + 0.788 \times 10^3 \\ &= 2031.9 \times 10^3 \text{ kN/m}^2 \approx 2032 \text{ MN/m}^2 \end{aligned}$$

$$q_{u(\text{modified})} = q_u(\text{RQD})^2 = (2032)(0.5)^2 = 508 \text{ MN/m}^2$$

$$q_{\text{all}} = \frac{508}{4} = 127 \text{ MN/m}^2$$

Since 127 MN/m<sup>2</sup> is greater than  $f'_c$ , use  $q_{\text{all}} = 30 \text{ MN/m}^2$ . ■

## 5.12 Uplift Capacity of Foundations

Foundations may be subjected to uplift forces under special circumstances. During the design process for those foundations, it is desirable to provide a sufficient factor of safety against failure by uplift. This section will provide the relationships for the uplift capacity of foundations in granular and cohesive soils.


### Foundations in Granular Soil ( $c' = 0$ )

Figure 5.33 shows a shallow continuous foundation that is being subjected to an uplift force. At ultimate load,  $Q_u$ , the failure surface in soil will be as shown in the figure. The ultimate load can be expressed in the form of a nondimensional breakout factor,  $F_q$ . Or

$$F_q = \frac{Q_u}{A\gamma D_f} \quad (5.55)$$

where  $A$  = area of the foundation.

The breakout factor is a function of the soil friction angle  $\phi'$  and  $D_f/B$ . For a given soil friction angle,  $F_q$  increases with  $D_f/B$  to a maximum at  $D_f/B = (D_f/B)_{\text{cr}}$  and remains constant thereafter. For foundations subjected to uplift,  $D_f/B \leq (D_f/B)_{\text{cr}}$  is considered a shallow foundation condition. When a foundation has an embedment ratio of  $D_f/B > (D_f/B)_{\text{cr}}$ , it is referred to as a deep foundation. Meyerhof and Adams (1968) provided

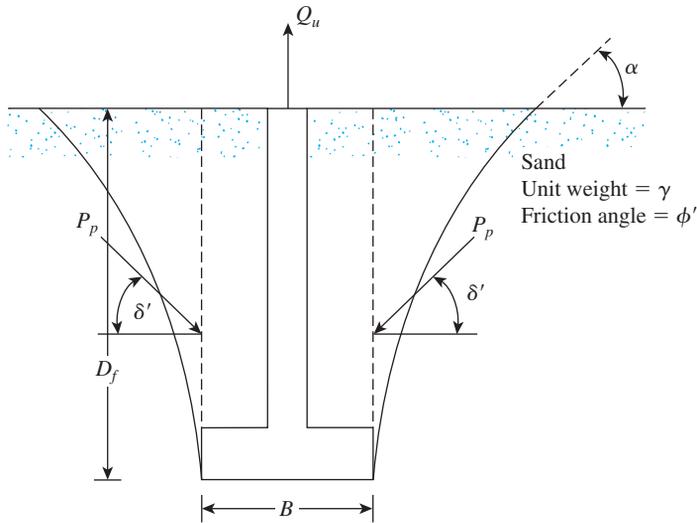

**Figure 5.33** Shallow continuous foundation subjected to uplift

relationships to estimate the ultimate uplifting load  $Q_u$  for shallow [that is,  $D_f/B \leq (D_f/B)_{cr}$ ], circular, and rectangular foundations. Using these relationships and Eq. (5.55), Das and Seeley (1975) expressed the breakout factor  $F_q$  in the following form

$$F_q = 1 + 2 \left[ 1 + m \left( \frac{D_f}{B} \right) \right] \left( \frac{D_f}{B} \right) K_u \tan \phi' \quad (5.56)$$

(for shallow circular and square foundations)

$$F_q = 1 + \left\{ \left[ 1 + 2m \left( \frac{D_f}{B} \right) \right] \left( \frac{B}{L} \right) + 1 \right\} \left( \frac{D_f}{B} \right) K_u \tan \phi' \quad (5.57)$$

(for shallow rectangular foundations)

where

$m$  = a coefficient which is a function of  $\phi'$   
 $K_u$  = nominal uplift coefficient


The variations of  $K_u$ ,  $m$ , and  $(D_f/B)_{cr}$  for square and circular foundations are given in Table 5.5 (Meyerhof and Adams, 1968).

For rectangular foundations, Das and Jones (1982) recommended that

$$\left( \frac{D_f}{B} \right)_{cr-\text{rectangular}} = \left( \frac{D_f}{B} \right)_{cr-\text{square}} \left[ 0.133 \left( \frac{L}{B} \right) + 0.867 \right] \leq 1.4 \left( \frac{D_f}{B} \right)_{cr-\text{square}} \quad (5.58)$$

Using the values of  $K_u$ ,  $m$ , and  $(D_f/B)_{cr}$  in Eq. (5.56), the variations of  $F_q$  for square and circular foundations have been calculated and are shown in Figure 5.34. Given here is a step-by-step procedure to estimate the uplift capacity of foundations in granular soil.

- Step 1. Determine,  $D_f$ ,  $B$ ,  $L$ , and  $\phi'$ .
- Step 2. Calculate  $D_f/B$ .

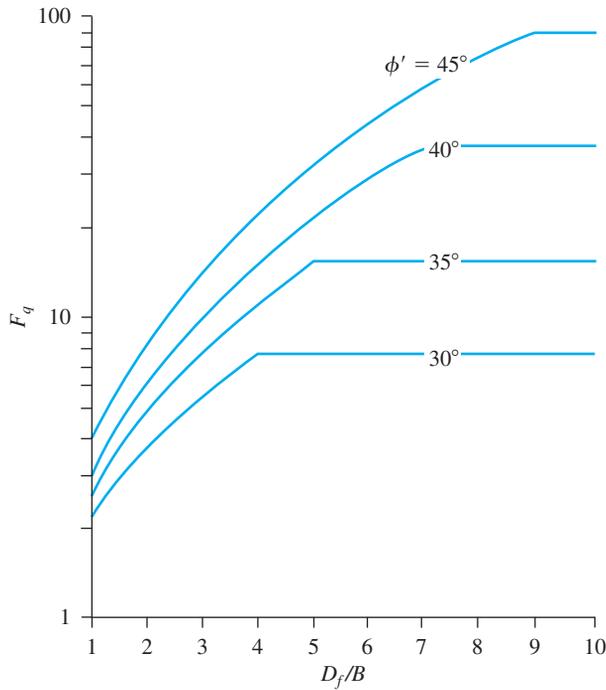

**Figure 5.34** Variation of  $F_q$  with  $D_f/B$  and  $\phi'$

*Step 3.* Using Table 5.5 and Eq. (5.58), calculate  $(D_f/B)_{cr}$ .

*Step 4.* If  $D_f/B$  is less than or equal to  $(D_f/B)_{cr}$ , it is a shallow foundation.

*Step 5.* If  $D_f/B > (D_f/B)_{cr}$ , it is a deep foundation.

*Step 6.* For shallow foundations, use  $D_f/B$  calculated in Step 2 in Eq. (5.56) or (5.57) to estimate  $F_q$ . Thus,  $Q_u = F_q A \gamma D_f$ .

*Step 7.* For deep foundations, substitute  $(D_f/B)_{cr}$  for  $D_f/B$  in Eq. (5.56) or (5.57) to obtain  $F_q$ , from which the ultimate load  $Q_u$  may be obtained.

### Foundations in Cohesive Soil ( $\phi = 0$ , $c = c_u$ )

The ultimate uplift capacity,  $Q_u$ , of a foundation in a purely cohesive soil can be expressed as

$$Q_u = A(\gamma D_f + c_u F_c) \quad (5.59)$$

**Table 5.5** Variation of  $K_u$ ,  $m$ , and  $(D_f/B)_{cr}$

Soil friction angle, $\phi'$ (deg)	$K_u$	$m$	$(D_f/B)_{cr}$ for square and circular foundations
20	0.856	0.05	2.5
25	0.888	0.10	3
30	0.920	0.15	4
35	0.936	0.25	5
40	0.960	0.35	7
45	0.960	0.50	9

where

$A$  = area of the foundation

$c_u$  = undrained shear strength of soil

$F_c$  = breakout factor

As in the case of foundations in granular soil, the breakout factor  $F_c$  increases with embedment ratio and reaches a maximum value of  $F_c = F_c^*$  at  $D_f/B = (D_f/B)_{cr}$  and remains constant thereafter.

Das (1978) also reported some model test results with square and rectangular foundations. Based on these test results, it was proposed that

$$\left(\frac{D_f}{B}\right)_{cr-square} = 0.107c_u + 2.5 \leq 7 \quad (5.60)$$

where

$\left(\frac{D_f}{B}\right)_{cr-square}$  = critical embedment ratio of square (or circular) foundations

$c_u$  = undrained cohesion, in kN/m<sup>2</sup>

It was also observed by Das (1980) that

$$\left(\frac{D_f}{B}\right)_{cr-rectangular} = \left(\frac{D_f}{B}\right)_{cr-square} \left[ 0.73 + 0.27\left(\frac{L}{B}\right) \right] \leq 1.55\left(\frac{D_f}{B}\right)_{cr-square} \quad (5.61)$$

where

$\left(\frac{D_f}{B}\right)_{cr-rectangular}$  = critical embedment ratio of rectangular foundations

$L$  = length of foundation

Based on these findings, Das (1980) proposed an empirical procedure to obtain the breakout factors for shallow and deep foundations. According to this procedure,  $\alpha'$  and  $\beta'$  are two nondimensional factors defined as

$$\alpha' = \frac{\frac{D_f}{B}}{\left(\frac{D_f}{B}\right)_{cr}} \quad (5.62)$$

and

$$\beta' = \frac{F_c}{F_c^*} \quad (5.63)$$

For a given foundation, the critical embedment ratio can be calculated using Eqs. (5.60) and (5.61). The magnitude of  $F_c^*$  can be given by the following empirical relationship

$$F_{c\text{-rectangular}}^* = 7.56 + 1.44\left(\frac{B}{L}\right) \quad (5.64)$$

where  $F_{c\text{-rectangular}}^*$  = breakout factor for deep rectangular foundations

Figure 5.35 shows the experimentally derived plots (upper limit, lower limit, and average of  $\beta'$  and  $\alpha'$ ). The following is a step-by-step procedure to estimate the ultimate uplift capacity.

- Step 1. Determine the representative value of the undrained cohesion,  $c_u$ .
- Step 2. Determine the critical embedment ratio using Eqs. (5.60) and (5.61).
- Step 3. Determine the  $D_f/B$  ratio for the foundation.
- Step 4. If  $D_f/B > (D_f/B)_{cr}$ , as determined in Step 2, it is a deep foundation. However, if  $D_f/B \leq (D_f/B)_{cr}$ , it is a shallow foundation.
- Step 5. For  $D_f/B > (D_f/B)_{cr}$

$$F_c = F_c^* = 7.56 + 1.44\left(\frac{B}{L}\right)$$

Thus,

$$Q_u = A \left\{ \left[ 7.56 + 1.44\left(\frac{B}{L}\right) \right] c_u + \gamma D_f \right\} \quad (5.65)$$

where  $A$  = area of the foundation.

- Step 6. For  $D_f/B \leq (D_f/B)_{cr}$

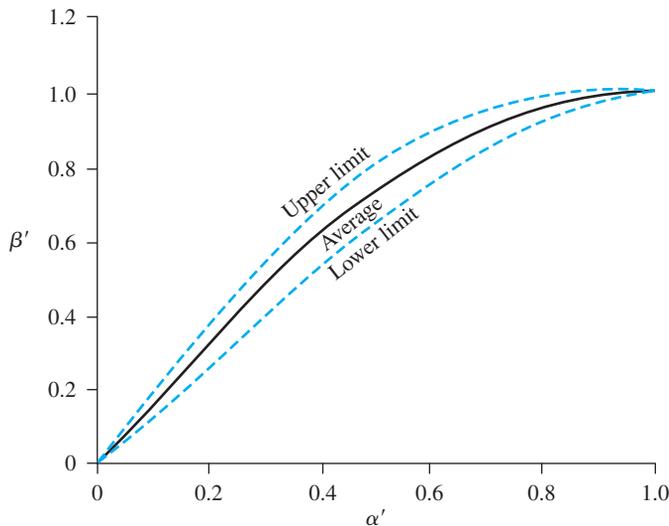


Figure 5.35 Plot of  $\beta'$  versus  $\alpha'$

$$Q_u = A(\beta' F_c^* c_u + \gamma D_f) = A \left\{ \beta' \left[ 7.56 + 1.44 \left( \frac{B}{L} \right) \right] c_u + \gamma D_f \right\} \quad (5.66)$$

The value of  $\beta'$  can be obtained from the average curve of Figure 5.35. The procedure outlined above gives fairly good results for estimating the net ultimate uplift capacity of foundations and agrees reasonably well with the theoretical solution of Merifield et al. (2003).

### Example 5.14

Consider a circular foundation in sand. Given for the foundation: diameter,  $B = 1.5$  m and depth of embedment,  $D_f = 1.5$  m. Given for the sand: unit weight,  $\gamma = 17.4$  kN/m<sup>3</sup>, and friction angle,  $\phi' = 35^\circ$ . Calculate the ultimate bearing capacity.

#### Solution

$D_f/B = 1.5/1.5 = 1$  and  $\phi' = 35^\circ$ . For circular foundation,  $(D_f/B)_{cr} = 5$ . Hence, it is a shallow foundation. From Eq. (5.56)

$$F_q = 1 + 2 \left[ 1 + m \left( \frac{D_f}{B} \right) \right] \left( \frac{D_f}{B} \right) K_u \tan \phi'$$

For  $\phi' = 35^\circ$ ,  $m = 0.25$ , and  $K_u = 0.936$  (Table 5.5). So

$$F_q = 1 + 2[1 + (0.25)(1)](1)(0.936)(\tan 35) = 2.638$$

So

$$Q_u = F_q \gamma A D_f = (2.638)(17.4) \left[ \left( \frac{\pi}{4} \right) (1.5)^2 \right] (1.5) = \mathbf{121.7 \text{ kN}} \quad \blacksquare$$

### Example 5.15

A rectangular foundation in a saturated clay measures 1.5 m  $\times$  3 m. Given:  $D_f = 1.8$  m,  $c_u = 52$  kN/m<sup>2</sup>, and  $\gamma = 18.9$  kN/m<sup>3</sup>. Estimate the ultimate uplift capacity.

#### Solution

From Eq. (5.60)

$$\left( \frac{D_f}{B} \right)_{\text{cr-square}} = 0.107 c_u + 2.5 = (0.107)(52) + 2.5 = 8.06$$

So use  $(D_f/B)_{\text{cr-square}} = 7$ . Again from Eq. (5.61),

$$\begin{aligned}\left(\frac{D_f}{B}\right)_{\text{cr-rectangular}} &= \left(\frac{D_f}{B}\right)_{\text{cr-square}} \left[0.73 + 0.27\left(\frac{L}{B}\right)\right] \\ &= 7 \left[0.73 + 0.27\left(\frac{3}{1.5}\right)\right] = 8.89\end{aligned}$$

Check:  $1.55\left(\frac{D_f}{B}\right)_{\text{cr-square}} = (1.55)(7) = 10.85$

So use  $(D_f/B)_{\text{cr-rectangular}} = 8.89$ . The actual embedment ratio is  $D_f/B = 1.8/1.5 = 1.2$ . Hence, this is a shallow foundation.

$$\alpha' = \frac{\frac{D_f}{B}}{\left(\frac{D_f}{B}\right)_{\text{cr}}} = \frac{1.2}{8.89} = 0.135$$

Referring to the average curve of Figure 5.35, for  $\alpha' = 0.135$ , the magnitude of  $\beta' = 0.2$ . From Eq. (5.66),

$$\begin{aligned}Q_u &= A \left\{ \beta' \left[ 7.56 + 1.44 \left( \frac{B}{L} \right) \right] c_u + \gamma D_f \right\} \\ &= (1.5)(3) \left\{ (0.2) \left[ 7.56 + 1.44 \left( \frac{1.5}{3} \right) \right] (52) + (18.9)(1.8) \right\} = \mathbf{540.6 \text{ kN}}\end{aligned}$$

## Problems

- 5.1 Refer to Figure 5.2 and consider a rectangular foundation. Given:  $B = 1.5$  m,  $L = 2.5$  m,  $D_f = 1.2$  m,  $H = 0.9$  m,  $\phi' = 40^\circ$ ,  $c' = 0$ , and  $\gamma = 17$  kN/m<sup>3</sup>. Using a factor of safety of 3, determine the gross allowable load the foundation can carry. Use Eq. (5.3).
- 5.2 Repeat Problem 5.1 with the following data:  $B = 1.5$  m,  $L = 1.5$  m,  $D_f = 1$  m,  $H = 0.6$  m,  $\phi' = 35^\circ$ ,  $c' = 0$ , and  $\gamma = 15$  kN/m<sup>3</sup>. Use FS = 3.
- 5.3 Refer to Figure 5.2. Given:  $B = L = 1.75$  m,  $D_f = 1$  m,  $H = 1.75$  m,  $\gamma = 17$  kN/m<sup>3</sup>,  $c' = 0$ , and  $\phi' = 30^\circ$ . Using Eq. (5.6) and FS = 4, determine the gross allowable load the foundation can carry.
- 5.4 Refer to Figure 5.2. A square foundation measuring  $1.5 \text{ m} \times 1.5 \text{ m}$  is supported by a saturated clay layer of limited depth underlain by a rock layer. Given that  $D_f = 1$  m,  $H = 0.7$  m,  $c_u = 115$  kN/m<sup>2</sup>, and  $\gamma = 18.5$  kN/m<sup>3</sup>, estimate the ultimate bearing capacity of the foundation.

**5.5** Refer to Figure 5.9. For a continuous foundation in two-layered clay, given:

- $\gamma_1 = 121 \text{ lb/ft}^3$ ,  $c_{u(1)} = 1000 \text{ lb/ft}^2$ ,  $\phi_1 = 0$
- $\gamma_2 = 115 \text{ lb/ft}^3$ ,  $c_{u(2)} = 585 \text{ lb/ft}^2$ ,  $\phi_2 = 0$
- $B = 3 \text{ ft}$ ,  $D_f = 1.65 \text{ ft}$ ,  $H = 1.65 \text{ ft}$

Find the gross allowable bearing capacity. Use a factor of safety of 3. Use Eq. (5.32).

**5.6** Refer to Figure 5.9. For a rectangular foundation in two-layered clay, given:

- $B = 0.92 \text{ m}$ ,  $L = 1.22 \text{ m}$ ,  $D_f = 0.92 \text{ m}$ ,  $H = 0.76 \text{ m}$
- $\gamma_1 = 17 \text{ kN/m}^3$ ,  $\phi_1 = 0$ ,  $c_{u(1)} = 72 \text{ kN/m}^2$
- $\gamma_2 = 17 \text{ kN/m}^3$ ,  $\phi_2 = 0$ ,  $c_{u(2)} = 43 \text{ kN/m}^2$

Determine the gross ultimate load the foundation can carry. Use Eq. (5.32).

**5.7** Solve Problem 5.6 using Eq. (5.11).

**5.8** Refer to Figure 5.9. For a square foundation on layered sand, given:

- $B = 1.5 \text{ m}$ ,  $D_f = 1.5 \text{ m}$ ,  $H = 1 \text{ m}$
- $\gamma_1 = 18 \text{ kN/m}^3$ ,  $\phi'_1 = 40^\circ$ ,  $c'_1 = 0$
- $\gamma_2 = 16.7 \text{ kN/m}^3$ ,  $\phi'_2 = 32^\circ$ ,  $c'_2 = 0$

Determine the net allowable load that the foundations can support. Use  $\text{FS} = 4$ .

**5.9** Refer to Figure 5.12. For a rectangular foundation on layered sand, given:

- $B = 4 \text{ ft}$ ,  $L = 6 \text{ ft}$ ,  $H = 2 \text{ ft}$ ,  $D_f = 3 \text{ ft}$
- $\gamma_1 = 98 \text{ lb/ft}^3$ ,  $\phi'_1 = 30^\circ$ ,  $c'_1 = 0$
- $\gamma_2 = 108 \text{ lb/ft}^3$ ,  $\phi'_2 = 38^\circ$ ,  $c'_2 = 0$

Using a factor of safety of 4, determine the gross allowable load the foundation can carry. Use Eq. (5.35).

**5.10** Refer to Figure 5.12. For a continuous foundation on layered clay, given:

- $B = 1.5 \text{ m}$ ,  $D_f = 1 \text{ m}$ ,  $H = 0.8 \text{ m}$
- $\gamma_1 = 16.5 \text{ kN/m}^3$ ,  $c_1 = c_{u(1)} = 48 \text{ kN/m}^2$ ,  $\phi_1 = 0$
- $\gamma_2 = 17.5 \text{ kN/m}^3$ ,  $c_2 = c_{u(2)} = 96 \text{ kN/m}^2$ ,  $\phi_1 = 0$

Using Eq. (5.35), determine the gross ultimate bearing capacity.

**5.11** Solve Problem 5.10 using Eq. (5.12) and Table 5.2.

**5.12** Two continuous foundations are constructed alongside each other in a granular soil. Given for the foundation:  $B = 1.2 \text{ m}$ ,  $D_f = 1 \text{ m}$ , and center-to-center spacing =  $2 \text{ m}$ . The soil friction angle  $\phi' = 35^\circ$ . Estimate the net allowable bearing capacity of the foundations. Use  $\text{FS} = 4$  and a unit weight of soil,  $\gamma = 16.8 \text{ kN/m}^3$ .

**5.13** Refer to Figure 5.13. For a continuous foundation constructed over a granular trench, the following are given:

- $B = 1 \text{ m}$ ,  $W = 1.5 \text{ m}$ ,  $D_f = 1 \text{ m}$
- $\phi'_1 = 40^\circ$ ,  $c'_1 = 0$ ,  $\gamma_1 = 18 \text{ kN/m}^3$
- $\phi_2 = 0$ ,  $c_2 = c_{u(2)} = 40 \text{ kN/m}^2$ ,  $\gamma_2 = 17 \text{ kN/m}^3$

Estimate the gross ultimate bearing capacity.

**5.14** A continuous foundation with a width of  $1 \text{ m}$  is located on a slope made of clay soil. Refer to Figure 5.19 and let  $D_f = 1 \text{ m}$ ,  $H = 4 \text{ m}$ ,  $b = 2 \text{ m}$ ,  $\gamma = 16.8 \text{ kN/m}^3$ ,  $c = c_u = 68 \text{ kN/m}^2$ ,  $\phi = 0$ , and  $\beta = 60^\circ$ .

**a.** Determine the allowable bearing capacity of the foundation. Let  $\text{FS} = 3$ .

**b.** Plot a graph of the ultimate bearing capacity  $q_u$  if  $b$  is changed from  $0$  to  $6 \text{ m}$ .

**5.15** A continuous foundation is to be constructed near a slope made of granular soil (see Figure 5.19). If  $B = 4 \text{ ft}$ ,  $b = 6 \text{ ft}$ ,  $H = 15 \text{ ft}$ ,  $D_f = 4 \text{ ft}$ ,  $\beta = 30^\circ$ ,  $\phi' = 40^\circ$ , and  $\gamma = 110 \text{ lb/ft}^3$ , estimate the ultimate bearing capacity of the foundation.

- 5.16 The following are the average values of cone penetration resistance in a granular soil deposit.

Depth (m)	Cone penetration resistance, $q_c$ (MN/m <sup>2</sup> )
2	1.73
4	3.6
6	4.9
8	6.8
10	8.7
15	13

For the soil deposit, assume  $\gamma$  to be 16.5 kN/m<sup>3</sup> and estimate the seismic ultimate bearing capacity,  $q_{uE}$ , for a continuous foundation with  $B = 1.5$  m,  $D_f = 1.0$  m,  $k_h = 0.2$ , and  $k_v = 0$ . Use Eqs. (5.47) and (5.48).

- 5.17 Refer to Problem 5.16. If the design earthquake parameters are  $V = 0.35$  m/sec and  $A = 0.3$ , determine the seismic settlement of the foundation. Assume FS = 4 for obtaining static allowable bearing capacity.
- 5.18 A square foundation in a sand deposit measures 4 ft  $\times$  4 ft in plan. Given:  $D_f = 5$  ft, soil friction angle = 35°, and unit weight of soil = 112 lb/ft<sup>3</sup>. Estimate the ultimate uplift capacity of the foundation.
- 5.19 A foundation measuring 1.2 m  $\times$  2.4 m in plan is constructed in a saturated clay. Given: depth of embedment of the foundation = 2 m, unit weight of soil = 18 kN/m<sup>3</sup>, and undrained cohesion of clay = 74 kN/m<sup>2</sup>. Estimate the ultimate uplift capacity of the foundation.

## References

- BOWLES, J. E. (1996). *Foundation Analysis and Design*, 5th. edition, McGraw-Hill, New York.
- BUISMAN, A. S. K. (1940). *Grondmechanica*, Waltman, Delft, the Netherlands.
- CERATO, A. B. and LUTENEGGER, A. J. (2006). "Bearing Capacity of Square and Circular Footings on a Finite Layer of Granular Soil Underlain by a Rigid Base," *Journal of Geotechnical and Geoenvironmental Engineering*, American Society of Civil Engineers, Vol. 132, No. 11, pp. 1496–1501.
- DAS, B. M. (1978). "Model Tests for Uplift Capacity of Foundations in Clay," *Soils and Foundations*, Vol. 18, No. 2, pp. 17–24.
- DAS, B. M. (1980). "A Procedure for Estimation of Ultimate Uplift Capacity of Foundations in Clay," *Soils and Foundations*, Vol. 20, No. 1, pp. 77–82.
- DAS, B. M. and JONES, A. D. (1982). "Uplift Capacity of Rectangular Foundations in Sand," *Transportation Research Record 884*, National Research Council, Washington, D.C., pp. 54–58.
- DAS, B. M. and SEELEY, G. R. (1975). "Breakout Resistance of Horizontal Anchors," *Journal of Geotechnical Engineering Division*, ASCE, Vol. 101, No. 9, pp. 999–1003.
- LUNDGREN, H. and MORTENSEN, K. (1953). "Determination by the Theory of Plasticity on the Bearing Capacity of Continuous Footings on Sand," *Proceedings, Third International Conference on Soil Mechanics and Foundation Engineering*, Zurich, Vol. 1, pp. 409–412.

- MADHAV, M. R. and VITKAR, P. P. (1978). "Strip Footing on Weak Clay Stabilized with a Granular Trench," *Canadian Geotechnical Journal*, Vol. 15, No. 4, pp. 605–609.
- MANDEL, J. and SALENCON, J. (1972). "Force portante d'un sol sur une assise rigide (étude théorique)," *Geotechnique*, Vol. 22, No. 1, pp. 79–93.
- MERIFIELD, R. S., LYAMIN, A. and SLOAN, S. W. (2003). "Three Dimensional Lower Bound Solutions for the Stability of Plate Anchors in Clay," *Journal of Geotechnical and Geoenvironmental Engineering*, ASCE, Vol. 129, No. 3, pp. 243–253.
- MEYERHOF, G. G. (1957). "The Ultimate Bearing Capacity of Foundations on Slopes," *Proceedings, Fourth International Conference on Soil Mechanics and Foundation Engineering*, London, Vol. 1, pp. 384–387.
- MEYERHOF, G. G. (1974). "Ultimate Bearing Capacity of Footings on Sand Layer Overlying Clay," *Canadian Geotechnical Journal*, Vol. 11, No. 2, pp. 224–229.
- MEYERHOF, G. G. and ADAMS, J. I. (1968). "The Ultimate Uplift Capacity of Foundations," *Canadian Geotechnical Journal*, Vol. 5, No. 4, pp. 225–244.
- MEYERHOF, G. G. and CHAPLIN, T. K. (1953). "The Compression and Bearing Capacity of Cohesive Soils," *British Journal of Applied Physics*, Vol. 4, pp. 20–26.
- MEYERHOF, G. G. and HANNA, A. M. (1978). "Ultimate Bearing Capacity of Foundations on Layered Soil under Inclined Load," *Canadian Geotechnical Journal*, Vol. 15, No. 4, pp. 565–572.
- PRANDTL, L. (1921). "Über die Eindringungsfestigkeit (Härte) plastischer Baustoffe und die Festigkeit von Schneiden," *Zeitschrift für angewandte Mathematik und Mechanik*, Vol. 1, No. 1, pp. 15–20.
- REDDY, A. S. and SRINIVASAN, R. J. (1967). "Bearing Capacity of Footings on Layered Clay," *Journal of the Soil Mechanics and Foundations Division*, American Society of Civil Engineers, Vol. 93, No. SM2, pp. 83–99.
- REISSNER, H. (1924). "Zum Erddruckproblem," *Proceedings, First International Congress of Applied Mechanics*, Delft, the Netherlands, pp. 295–311.
- RICHARDS, R., Jr., ELMS, D. G. and BUDHU, M. (1993). "Seismic Bearing Capacity and Settlement of Foundations," *Journal of Geotechnical Engineering*, American Society of Civil Engineers, Vol. 119, No. 4, pp. 662–674.
- STAGG, K. G. and ZIENKIEWICZ, O. C. (1968). *Rock Mechanics in Engineering Practice*, John Wiley & Sons, New York.
- VESIC, A. S. (1975). "Bearing Capacity of Shallow Foundations," in *Foundation Engineering Handbook*, ed. R. F. Winterkorn and H. Y. Fang, Van Nostrand Reinhold Company, New York.



# 6 Vertical Stress Increase in Soil

## 6.1 Introduction


It was mentioned in Chapter 4 that, in many cases, the allowable settlement of a shallow foundation may control the allowable bearing capacity. The allowable settlement itself may be controlled by local building codes. Thus, the allowable bearing capacity will be the smaller of the following two conditions:

$$q_{\text{all}} = \begin{cases} \frac{q_u}{\text{FS}} \\ \text{or} \\ q_{\text{allowable settlement}} \end{cases}$$

For the calculation of foundation settlement, it is required that we estimate the vertical stress increase in the soil mass due to the net load applied on the foundation. Hence, in this chapter, we will discuss the general principles for estimating the increase of vertical stress at various depths in soil due to the application of (on the ground surface).

- A point load
- Circularly loaded area
- Vertical line load
- Strip load
- Rectangularly loaded area
- Embankment type of loading

Various procedures for estimating foundation settlement will be discussed in Chapter 7.

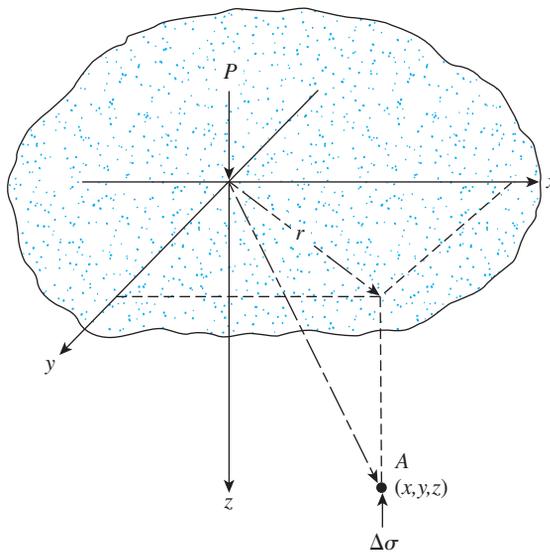

**Figure 6.1** Vertical stress at a point A caused by a point load on the surface

## 6.2 Stress Due to a Concentrated Load

In 1885, Boussinesq developed the mathematical relationships for determining the normal and shear stresses at any point inside *homogeneous, elastic, and isotropic* mediums due to a *concentrated point load* located at the surface, as shown in Figure 6.1. According to his analysis, the *vertical stress increase* at point A caused by a point load of magnitude  $P$  is given by

$$\Delta\sigma = \frac{3P}{2\pi z^2 \left[ 1 + \left( \frac{r}{z} \right)^2 \right]^{5/2}} \quad (6.1)$$

where


$$r = \sqrt{x^2 + y^2}$$

$x, y, z =$  coordinates of the point A

Note that Eq. (6.1) is not a function of Poisson's ratio of the soil.

## 6.3 Stress Due to a Circularly Loaded Area

The Boussinesq equation (6.1) can also be used to determine the vertical stress below the center of a flexible circularly loaded area, as shown in Figure 6.2. Let the radius of the loaded area be  $B/2$ , and let  $q_o$  be the uniformly distributed load per unit area. To determine the stress increase at a point A, located at a depth  $z$  below the center of the circular area, consider an elemental area on the circle. The load on this elemental area may be taken to

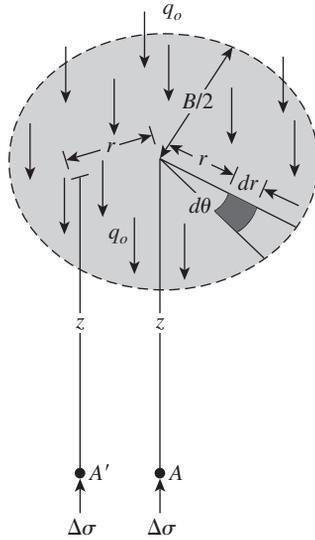

**Figure 6.2** Increase in pressure under a uniformly loaded flexible circular area

be a point load and expressed as  $q_o r \, d\theta \, dr$ . The stress increase at  $A$  caused by this load can be determined from Eq. (6.1) as

$$d\sigma = \frac{3(q_o r \, d\theta \, dr)}{2\pi z^2 \left[1 + \left(\frac{r}{z}\right)^2\right]^{5/2}} \quad (6.2)$$

The total increase in stress caused by the entire loaded area may be obtained by integrating Eq. (6.2), or

$$\begin{aligned} \Delta\sigma &= \int d\sigma = \int_{\theta=0}^{\theta=2\pi} \int_{r=0}^{r=B/2} \frac{3(q_o r \, d\theta \, dr)}{2\pi z^2 \left[1 + \left(\frac{r}{z}\right)^2\right]^{5/2}} \\ &= q_o \left\{ 1 - \frac{1}{\left[1 + \left(\frac{B}{2z}\right)^2\right]^{3/2}} \right\} \end{aligned} \quad (6.3)$$

Similar integrations could be performed to obtain the vertical stress increase at  $A'$ , located a distance  $r$  from the center of the loaded area at a depth  $z$  (Ahlvin and Ulery, 1962). Table 6.1 gives the variation of  $\Delta\sigma/q_o$  with  $r/(B/2)$  and  $z/(B/2)$  [for  $0 \leq r/(B/2) \leq 1$ ]. Note that the variation of  $\Delta\sigma/q_o$  with depth at  $r/(B/2) = 0$  can be obtained from Eq. (6.3).


**Table 6.1** Variation of  $\Delta\sigma/q_o$  for a Uniformly Loaded Flexible Circular Area

$z/(B/2)$	$r/(B/2)$					
	0	0.2	0.4	0.6	0.8	1.0
0	1.000	1.000	1.000	1.000	1.000	1.000
0.1	0.999	0.999	0.998	0.996	0.976	0.484
0.2	0.992	0.991	0.987	0.970	0.890	0.468
0.3	0.976	0.973	0.963	0.922	0.793	0.451
0.4	0.949	0.943	0.920	0.860	0.712	0.435
0.5	0.911	0.902	0.869	0.796	0.646	0.417
0.6	0.864	0.852	0.814	0.732	0.591	0.400
0.7	0.811	0.798	0.756	0.674	0.545	0.367
0.8	0.756	0.743	0.699	0.619	0.504	0.366
0.9	0.701	0.688	0.644	0.570	0.467	0.348
1.0	0.646	0.633	0.591	0.525	0.434	0.332
1.2	0.546	0.535	0.501	0.447	0.377	0.300
1.5	0.424	0.416	0.392	0.355	0.308	0.256
2.0	0.286	0.286	0.268	0.248	0.224	0.196
2.5	0.200	0.197	0.191	0.180	0.167	0.151
3.0	0.146	0.145	0.141	0.135	0.127	0.118
4.0	0.087	0.086	0.085	0.082	0.080	0.075

## 6.4 Stress Due to a Line Load

Figure 6.3 shows a vertical flexible line load of infinite length that has an intensity  $q$ /unit length on the surface of a semi-infinite soil mass. The vertical stress increase,  $\Delta\sigma$ , inside the soil mass can be determined by using the principles of the theory of elasticity, or

$$\Delta\sigma = \frac{2qz^3}{\pi(x^2 + z^2)^2} \quad (6.4)$$

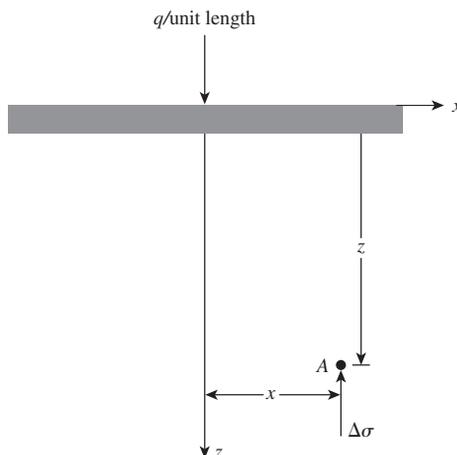

**Figure 6.3** Line load over the surface of a semi-infinite soil mass

**Table 6.2** Variation of  $\Delta\sigma/(q/z)$  with  $x/z$  [Eq. (6.5)]

$x/z$	$\Delta\sigma/(q/z)$	$x/z$	$\Delta\sigma/(q/z)$
0	0.637	1.3	0.088
0.1	0.624	1.4	0.073
0.2	0.589	1.5	0.060
0.3	0.536	1.6	0.050
0.4	0.473	1.7	0.042
0.5	0.407	1.8	0.035
0.6	0.344	1.9	0.030
0.7	0.287	2.0	0.025
0.8	0.237	2.2	0.019
0.9	0.194	2.4	0.014
1.0	0.159	2.6	0.011
1.1	0.130	2.8	0.008
1.2	0.107	3.0	0.006

This equation can be rewritten as

$$\Delta\sigma = \frac{2q}{\pi z[(x/z)^2 + 1]^2}$$


$$\frac{\Delta\sigma}{(q/z)} = \frac{2}{\pi[(x/z)^2 + 1]^2} \quad (6.5)$$

Note that Eq. (6.5) is in a nondimensional form. Using this equation, we can calculate the variation of  $\Delta\sigma/(q/z)$  with  $x/z$ . This is given in Table 6.2. The value of  $\Delta\sigma$  calculated by using Eq. (6.5) is the additional stress on soil caused by the line load. The value of  $\Delta\sigma$  does not include the overburden pressure of the soil above point A.

## 6.5 Stress below a Vertical Strip Load (Finite Width and Infinite Length)

The fundamental equation for the vertical stress increase at a point in a soil mass as the result of a line load (Section 6.4) can be used to determine the vertical stress at a point caused by a flexible strip load of width  $B$ . (See Figure 6.4.) Let the load per unit area of the strip shown in Figure 6.4 be equal to  $q_o$ . If we consider an elemental strip of width  $dr$ , the load per unit length of this strip is equal to  $q_o dr$ . This elemental strip can be treated as a line load. Equation (6.4) gives the vertical stress increase  $d\sigma$  at point A inside the soil mass caused by this elemental strip load. To calculate the vertical stress increase, we need to substitute  $q_o dr$  for  $q$  and  $(x - r)$  for  $x$ . So,

$$d\sigma = \frac{2(q_o dr)z^3}{\pi[(x - r)^2 + z^2]^2} \quad (6.6)$$

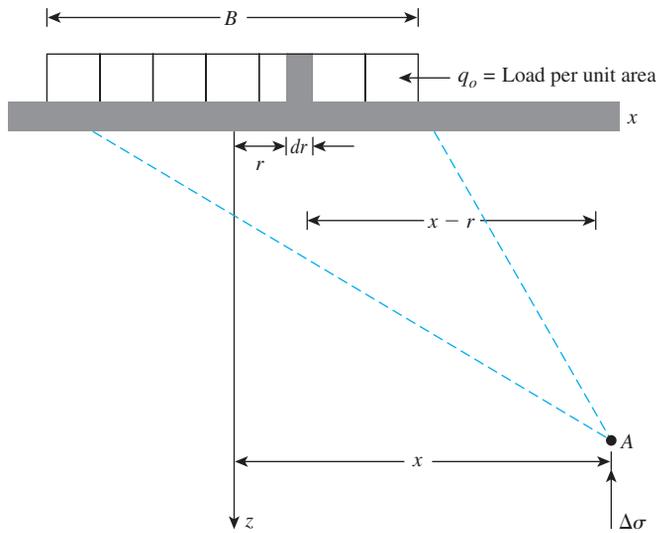

**Figure 6.4** Vertical stress caused by a flexible strip load

The total increase in the vertical stress ( $\Delta\sigma$ ) at point  $A$  caused by the entire strip load of width  $B$  can be determined by integration of Eq. (6.6) with limits of  $r$  from  $-B/2$  to  $+B/2$ , or

$$\begin{aligned}\Delta\sigma &= \int d\sigma = \int_{-B/2}^{+B/2} \left( \frac{2q}{\pi} \right) \left\{ \frac{z^3}{[(x-r)^2 + z^2]^2} \right\} dr \\ &= \frac{q_o}{\pi} \left\{ \tan^{-1} \left[ \frac{z}{x - (B/2)} \right] - \tan^{-1} \left[ \frac{z}{x + (B/2)} \right] \right. \\ &\quad \left. - \frac{Bz[x^2 - z^2 - (B^2/4)]}{[x^2 + z^2 - (B^2/4)]^2 + B^2z^2} \right\}\end{aligned}\quad (6.7)$$

With respect to Eq. (6.7), the following should be kept in mind:

1.  $\tan^{-1} \left[ \frac{z}{x - \left(\frac{B}{2}\right)} \right]$  and  $\tan^{-1} \left[ \frac{z}{x + \left(\frac{B}{2}\right)} \right]$  are in radians.
2. The magnitude of  $\Delta\sigma$  is the same value of  $x/z$  ( $\pm$ ).
3. Equation (6.7) is valid as shown in Figure 6.4; that is, for point  $A$ ,  $x \geq B/2$ .

However, for  $x = 0$  to  $x < B/2$ , the magnitude of  $\tan^{-1} \left[ \frac{z}{x - \left(\frac{B}{2}\right)} \right]$  becomes

negative. For this case, that should be replaced by  $\pi + \tan^{-1} \left[ \frac{z}{x - \left(\frac{B}{2}\right)} \right]$ .

Table 6.3 shows the variation of  $\Delta\sigma/q_o$  with  $2z/B$  and  $2x/B$ . This table can be used conveniently for the calculation of vertical stress at a point caused by a flexible strip load.

**Table 6.3** Variation of  $\Delta\sigma/q_o$  with  $2z/B$  and  $2x/B$  [Eq. (6.7)]

$2z/B$	$2x/B$											
	0.0	0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8	0.9	1.0	
0.00	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000	0.000
0.10	1.000	1.000	0.999	0.999	0.999	0.998	0.997	0.993	0.980	0.909	0.909	0.500
0.20	0.997	0.997	0.996	0.995	0.992	0.988	0.979	0.959	0.909	0.775	0.775	0.500
0.30	0.990	0.989	0.987	0.984	0.978	0.967	0.947	0.908	0.833	0.697	0.697	0.499
0.40	0.977	0.976	0.973	0.966	0.955	0.937	0.906	0.855	0.773	0.651	0.651	0.498
0.50	0.959	0.958	0.953	0.943	0.927	0.902	0.864	0.808	0.727	0.620	0.620	0.497
0.60	0.937	0.935	0.928	0.915	0.896	0.866	0.825	0.767	0.691	0.598	0.598	0.495
0.70	0.910	0.908	0.899	0.885	0.863	0.831	0.788	0.732	0.662	0.581	0.581	0.492
0.80	0.881	0.878	0.869	0.853	0.829	0.797	0.755	0.701	0.638	0.566	0.566	0.489
0.90	0.850	0.847	0.837	0.821	0.797	0.765	0.724	0.675	0.617	0.552	0.552	0.485
1.00	0.818	0.815	0.805	0.789	0.766	0.735	0.696	0.650	0.598	0.540	0.540	0.480
1.10	0.787	0.783	0.774	0.758	0.735	0.706	0.670	0.628	0.580	0.529	0.529	0.474
1.20	0.755	0.752	0.743	0.728	0.707	0.679	0.646	0.607	0.564	0.517	0.517	0.468
1.30	0.725	0.722	0.714	0.699	0.679	0.654	0.623	0.588	0.548	0.506	0.506	0.462
1.40	0.696	0.693	0.685	0.672	0.653	0.630	0.602	0.569	0.534	0.495	0.495	0.455
1.50	0.668	0.666	0.658	0.646	0.629	0.607	0.581	0.552	0.519	0.484	0.484	0.448
1.60	0.642	0.639	0.633	0.621	0.605	0.586	0.562	0.535	0.506	0.474	0.474	0.440
1.70	0.617	0.615	0.608	0.598	0.583	0.565	0.544	0.519	0.492	0.463	0.463	0.433
1.80	0.593	0.591	0.585	0.576	0.563	0.546	0.526	0.504	0.479	0.453	0.453	0.425
1.90	0.571	0.569	0.564	0.555	0.543	0.528	0.510	0.489	0.467	0.443	0.443	0.417
2.00	0.550	0.548	0.543	0.535	0.524	0.510	0.494	0.475	0.455	0.433	0.433	0.409
2.10	0.530	0.529	0.524	0.517	0.507	0.494	0.479	0.462	0.443	0.423	0.423	0.401
2.20	0.511	0.510	0.506	0.499	0.490	0.479	0.465	0.449	0.432	0.413	0.413	0.393
2.30	0.494	0.493	0.489	0.483	0.474	0.464	0.451	0.437	0.421	0.404	0.404	0.385
2.40	0.477	0.476	0.473	0.467	0.460	0.450	0.438	0.425	0.410	0.395	0.395	0.378
2.50	0.462	0.461	0.458	0.452	0.445	0.436	0.426	0.414	0.400	0.386	0.386	0.370
2.60	0.447	0.446	0.443	0.439	0.432	0.424	0.414	0.403	0.390	0.377	0.377	0.363
2.70	0.433	0.432	0.430	0.425	0.419	0.412	0.403	0.393	0.381	0.369	0.369	0.355
2.80	0.420	0.419	0.417	0.413	0.407	0.400	0.392	0.383	0.372	0.360	0.360	0.348
2.90	0.408	0.407	0.405	0.401	0.396	0.389	0.382	0.373	0.363	0.352	0.352	0.341
3.00	0.396	0.395	0.393	0.390	0.385	0.379	0.372	0.364	0.355	0.345	0.345	0.334
3.10	0.385	0.384	0.382	0.379	0.375	0.369	0.363	0.355	0.347	0.337	0.337	0.327
3.20	0.374	0.373	0.372	0.369	0.365	0.360	0.354	0.347	0.339	0.330	0.330	0.321
3.30	0.364	0.363	0.362	0.359	0.355	0.351	0.345	0.339	0.331	0.323	0.323	0.315
3.40	0.354	0.354	0.352	0.350	0.346	0.342	0.337	0.331	0.324	0.316	0.316	0.308
3.50	0.345	0.345	0.343	0.341	0.338	0.334	0.329	0.323	0.317	0.310	0.310	0.302
3.60	0.337	0.336	0.335	0.333	0.330	0.326	0.321	0.316	0.310	0.304	0.304	0.297
3.70	0.328	0.328	0.327	0.325	0.322	0.318	0.314	0.309	0.304	0.298	0.298	0.291
3.80	0.320	0.320	0.319	0.317	0.315	0.311	0.307	0.303	0.297	0.292	0.292	0.285
3.90	0.313	0.313	0.312	0.310	0.307	0.304	0.301	0.296	0.291	0.286	0.286	0.280
4.00	0.306	0.305	0.304	0.303	0.301	0.298	0.294	0.290	0.285	0.280	0.280	0.275
4.10	0.299	0.299	0.298	0.296	0.294	0.291	0.288	0.284	0.280	0.275	0.275	0.270
4.20	0.292	0.292	0.291	0.290	0.288	0.285	0.282	0.278	0.274	0.270	0.270	0.265
4.30	0.286	0.286	0.285	0.283	0.282	0.279	0.276	0.273	0.269	0.265	0.265	0.260
4.40	0.280	0.280	0.279	0.278	0.276	0.274	0.271	0.268	0.264	0.260	0.260	0.256
4.50	0.274	0.274	0.273	0.272	0.270	0.268	0.266	0.263	0.259	0.255	0.255	0.251
4.60	0.268	0.268	0.268	0.266	0.265	0.263	0.260	0.258	0.254	0.251	0.251	0.247
4.70	0.263	0.263	0.262	0.261	0.260	0.258	0.255	0.253	0.250	0.246	0.246	0.243
4.80	0.258	0.258	0.257	0.256	0.255	0.253	0.251	0.248	0.245	0.242	0.242	0.239
4.90	0.253	0.253	0.252	0.251	0.250	0.248	0.246	0.244	0.241	0.238	0.238	0.235
5.00	0.248	0.248	0.247	0.246	0.245	0.244	0.242	0.239	0.237	0.234	0.234	0.231

Table 6.3 (Continued)

$2z/B$	$2x/B$									
	1.1	1.2	1.3	1.4	1.5	1.6	1.7	1.8	1.9	2.0
0.00	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000	0.000
0.10	0.091	0.020	0.007	0.003	0.002	0.001	0.001	0.000	0.000	0.000
0.20	0.225	0.091	0.040	0.020	0.011	0.007	0.004	0.003	0.002	0.002
0.30	0.301	0.165	0.090	0.052	0.031	0.020	0.013	0.009	0.007	0.005
0.40	0.346	0.224	0.141	0.090	0.059	0.040	0.027	0.020	0.014	0.011
0.50	0.373	0.267	0.185	0.128	0.089	0.063	0.046	0.034	0.025	0.019
0.60	0.391	0.298	0.222	0.163	0.120	0.088	0.066	0.050	0.038	0.030
0.70	0.403	0.321	0.250	0.193	0.148	0.113	0.087	0.068	0.053	0.042
0.80	0.411	0.338	0.273	0.218	0.173	0.137	0.108	0.086	0.069	0.056
0.90	0.416	0.351	0.291	0.239	0.195	0.158	0.128	0.104	0.085	0.070
1.00	0.419	0.360	0.305	0.256	0.214	0.177	0.147	0.122	0.101	0.084
1.10	0.420	0.366	0.316	0.271	0.230	0.194	0.164	0.138	0.116	0.098
1.20	0.419	0.371	0.325	0.282	0.243	0.209	0.178	0.152	0.130	0.111
1.30	0.417	0.373	0.331	0.291	0.254	0.221	0.191	0.166	0.143	0.123
1.40	0.414	0.374	0.335	0.298	0.263	0.232	0.203	0.177	0.155	0.135
1.50	0.411	0.374	0.338	0.303	0.271	0.240	0.213	0.188	0.165	0.146
1.60	0.407	0.373	0.339	0.307	0.276	0.248	0.221	0.197	0.175	0.155
1.70	0.402	0.370	0.339	0.309	0.281	0.254	0.228	0.205	0.183	0.164
1.80	0.396	0.368	0.339	0.311	0.284	0.258	0.234	0.212	0.191	0.172
1.90	0.391	0.364	0.338	0.312	0.286	0.262	0.239	0.217	0.197	0.179
2.00	0.385	0.360	0.336	0.311	0.288	0.265	0.243	0.222	0.203	0.185
2.10	0.379	0.356	0.333	0.311	0.288	0.267	0.246	0.226	0.208	0.190
2.20	0.373	0.352	0.330	0.309	0.288	0.268	0.248	0.229	0.212	0.195
2.30	0.366	0.347	0.327	0.307	0.288	0.268	0.250	0.232	0.215	0.199
2.40	0.360	0.342	0.323	0.305	0.287	0.268	0.251	0.234	0.217	0.202
2.50	0.354	0.337	0.320	0.302	0.285	0.268	0.251	0.235	0.220	0.205
2.60	0.347	0.332	0.316	0.299	0.283	0.267	0.251	0.236	0.221	0.207
2.70	0.341	0.327	0.312	0.296	0.281	0.266	0.251	0.236	0.222	0.208
2.80	0.335	0.321	0.307	0.293	0.279	0.265	0.250	0.236	0.223	0.210
2.90	0.329	0.316	0.303	0.290	0.276	0.263	0.249	0.236	0.223	0.211
3.00	0.323	0.311	0.299	0.286	0.274	0.261	0.248	0.236	0.223	0.211
3.10	0.317	0.306	0.294	0.283	0.271	0.259	0.247	0.235	0.223	0.212
3.20	0.311	0.301	0.290	0.279	0.268	0.256	0.245	0.234	0.223	0.212
3.30	0.305	0.296	0.286	0.275	0.265	0.254	0.243	0.232	0.222	0.211
3.40	0.300	0.291	0.281	0.271	0.261	0.251	0.241	0.231	0.221	0.211
3.50	0.294	0.286	0.277	0.268	0.258	0.249	0.239	0.229	0.220	0.210
3.60	0.289	0.281	0.273	0.264	0.255	0.246	0.237	0.228	0.218	0.209
3.70	0.284	0.276	0.268	0.260	0.252	0.243	0.235	0.226	0.217	0.208
3.80	0.279	0.272	0.264	0.256	0.249	0.240	0.232	0.224	0.216	0.207
3.90	0.274	0.267	0.260	0.253	0.245	0.238	0.230	0.222	0.214	0.206
4.00	0.269	0.263	0.256	0.249	0.242	0.235	0.227	0.220	0.212	0.205
4.10	0.264	0.258	0.252	0.246	0.239	0.232	0.225	0.218	0.211	0.203
4.20	0.260	0.254	0.248	0.242	0.236	0.229	0.222	0.216	0.209	0.202
4.30	0.255	0.250	0.244	0.239	0.233	0.226	0.220	0.213	0.207	0.200
4.40	0.251	0.246	0.241	0.235	0.229	0.224	0.217	0.211	0.205	0.199
4.50	0.247	0.242	0.237	0.232	0.226	0.221	0.215	0.209	0.203	0.197
4.60	0.243	0.238	0.234	0.229	0.223	0.218	0.212	0.207	0.201	0.195
4.70	0.239	0.235	0.230	0.225	0.220	0.215	0.210	0.205	0.199	0.194
4.80	0.235	0.231	0.227	0.222	0.217	0.213	0.208	0.202	0.197	0.192
4.90	0.231	0.227	0.223	0.219	0.215	0.210	0.205	0.200	0.195	0.190
5.00	0.227	0.224	0.220	0.216	0.212	0.207	0.203	0.198	0.193	0.188

**Example 6.1**

Refer to Figure 6.4. Given:  $B = 4$  m and  $q_o = 100$  kN/m<sup>2</sup>. For point A,  $z = 1$  m and  $x = 1$  m. Determine the vertical stress  $\Delta\sigma$  at A. Use Eq. (6.7).

**Solution**

Since  $x = 1$  m  $<$   $B/2 = 2$  m,

$$\Delta\sigma = \frac{q_o}{\pi} \left\{ \tan^{-1} \left[ \frac{z}{x - \left(\frac{B}{2}\right)} \right] + \pi - \tan^{-1} \left[ \frac{z}{x + \left(\frac{B}{2}\right)} \right] - \frac{Bz \left[ x^2 - z^2 - \left(\frac{B^2}{4}\right) \right]}{\left[ x^2 + z^2 - \left(\frac{B^2}{4}\right) \right]^2 + B^2 z^2} \right\}$$

$$\tan^{-1} \left[ \frac{z}{x - \left(\frac{B}{2}\right)} \right] = \tan^{-1} \left( \frac{1}{1 - 2} \right) = -45^\circ = -0.785 \text{ rad}$$

$$\tan^{-1} \left[ \frac{z}{x + \left(\frac{B}{2}\right)} \right] = \tan^{-1} \left( \frac{1}{1 + 2} \right) = 18.43^\circ = 0.322 \text{ rad}$$

$$\frac{Bz \left[ x^2 - z^2 - \left(\frac{B^2}{4}\right) \right]}{\left[ x^2 + z^2 - \left(\frac{B^2}{4}\right) \right]^2 + B^2 z^2} = \frac{(4)(1) \left[ (1)^2 - (1)^2 - \left(\frac{16}{4}\right) \right]}{\left[ (1)^2 + (1)^2 - \left(\frac{16}{4}\right) \right]^2 + (16)(1)} = -0.8$$

Hence,

$$\frac{\Delta\sigma}{q_o} = \frac{1}{\pi} [-0.785 + \pi - 0.322 - (-0.8)] = 0.902$$

Now, compare with Table 6.3. For this case,  $\frac{2x}{B} = \frac{(2)(1)}{4} = 0.5$  and  $\frac{2z}{B} = \frac{(2)(1)}{4} = 0.5$ .

So,  $\frac{\Delta\sigma}{q_o} = 0.902$  (Check)

$$\Delta\sigma = 0.902q_o = (0.902)(100) = \mathbf{90.2 \text{ kN/m}^2}$$

## 6.6 Stress below a Rectangular Area

The integration technique of Boussinesq's equation also allows the vertical stress at any point  $A$  below the corner of a flexible rectangular loaded area to be evaluated. (See Figure 6.5.) To do so, consider an elementary area  $dA = dx dy$  on the flexible loaded area. If the load per unit area is  $q_o$ , the total load on the elemental area is

$$dP = q_o dx dy \quad (6.8)$$

This elemental load,  $dP$ , may be treated as a point load. The increase in vertical stress at point  $A$  caused by  $dP$  may be evaluated by using Eq. (6.1). Note, however, the need to substitute  $dP = q_o dx dy$  for  $P$  and  $x^2 + y^2$  for  $r^2$  in that equation. Thus,


$$\text{The stress increase at } A \text{ caused by } dP = \frac{3q_o (dx dy)z^3}{2\pi(x^2 + y^2 + z^2)^{5/2}}$$

The total stress increase  $\Delta\sigma$  caused by the entire loaded area at point  $A$  may now be obtained by integrating the preceding equation:

$$\Delta\sigma = \int_{y=0}^L \int_{x=0}^B \frac{3q_o (dx dy)z^3}{2\pi(x^2 + y^2 + z^2)^{5/2}} = q_o I \quad (6.9)$$

Here,

$$I = \text{influence factor} = \frac{1}{4\pi} \left( \frac{2mn\sqrt{m^2 + n^2 + 1}}{m^2 + n^2 + m^2n^2 + 1} \cdot \frac{m^2 + n^2 + 2}{m^2 + n^2 + 1} + \tan^{-1} \frac{2mn\sqrt{m^2 + n^2 + 1}}{m^2 + n^2 + 1 - m^2n^2} \right) \quad (6.10)$$

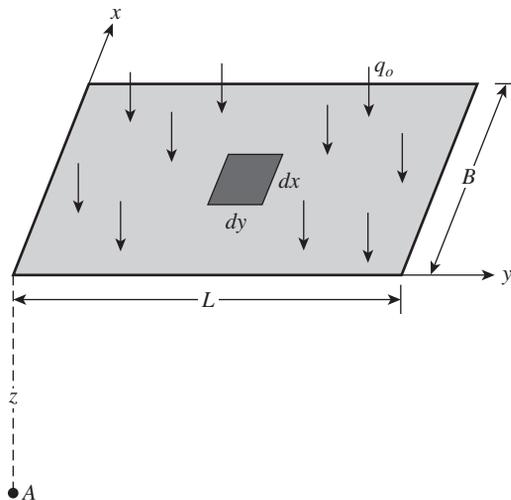

**Figure 6.5** Determination of vertical stress below the corner of a flexible rectangular loaded area

where

$$m = \frac{B}{z} \quad (6.11)$$

and

$$n = \frac{L}{z} \quad (6.12)$$

The arctangent term in Eq. (6.10) must be a positive angle in radians. When  $m^2 + n^2 + 1 < m^2n^2$ , it becomes a negative angle. So a term  $\pi$  should be added to that angle. The variations of the influence values with  $m$  and  $n$  are given in Table 6.4.

The stress increase at any point below a rectangular loaded area can also be found by using Eq. (6.9) in conjunction with Figure 6.6. To determine the stress at a depth  $z$  below point  $O$ , divide the loaded area into four rectangles, with  $O$  the corner common to each. Then use Eq. (6.9) to calculate the increase in stress at a depth  $z$  below  $O$  caused by each rectangular area. The total stress increase caused by the entire loaded area may now be expressed as

$$\Delta\sigma = q_o(I_1 + I_2 + I_3 + I_4) \quad (6.13)$$

where  $I_1, I_2, I_3,$  and  $I_4 =$  the influence values of rectangles 1, 2, 3, and 4, respectively.

In most cases, the vertical stress below the center of a rectangular area is of importance. This can be given by the relationship

$$\Delta\sigma = q_o I_c \quad (6.14)$$


where

$$I_c = \frac{2}{\pi} \left[ \frac{m_1 n_1}{\sqrt{1 + m_1^2 + n_1^2}} \frac{1 + m_1^2 + 2n_1^2}{(1 + n_1^2)(m_1^2 + n_1^2)} + \sin^{-1} \frac{m_1}{\sqrt{m_1^2 + n_1^2} \sqrt{1 + n_1^2}} \right] \quad (6.15)$$

$$m_1 = \frac{L}{B} \quad (6.16)$$

$$n_1 = \frac{z}{\left(\frac{B}{2}\right)} \quad (6.17)$$

The variation of  $I_c$  with  $m_1$  and  $n_1$  is given in Table 6.5.

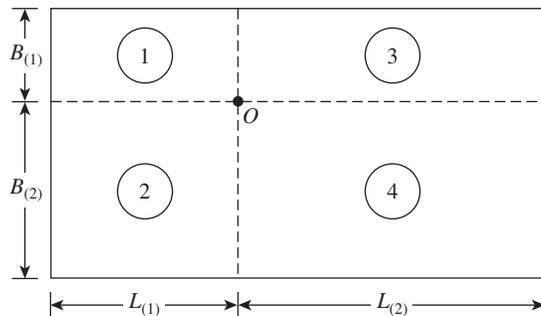

**Figure 6.6** Stress below any point of a loaded flexible rectangular area

Table 6.4 Variation of Influence Value  $I$  [Eq. (6.10)]<sup>a</sup>

$m$	$n$												
	0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8	0.9	1.0	1.2	1.4	
0.1	0.00470	0.00917	0.01323	0.01678	0.01978	0.02223	0.02420	0.02576	0.02698	0.02794	0.02926	0.03007	
0.2	0.00917	0.01790	0.02585	0.03280	0.03866	0.04348	0.04735	0.05042	0.05283	0.05471	0.05733	0.05894	
0.3	0.01323	0.02585	0.03735	0.04742	0.05593	0.06294	0.06858	0.07308	0.07661	0.07938	0.08323	0.08561	
0.4	0.01678	0.03280	0.04742	0.06024	0.07111	0.08009	0.08734	0.09314	0.09770	0.10129	0.10631	0.10941	
0.5	0.01978	0.03866	0.05593	0.07111	0.08403	0.09473	0.10340	0.11035	0.11584	0.12018	0.12626	0.13003	
0.6	0.02223	0.04348	0.06294	0.08009	0.09473	0.10688	0.11679	0.12474	0.13105	0.13605	0.14309	0.14749	
0.7	0.02420	0.04735	0.06858	0.08734	0.10340	0.11679	0.12772	0.13653	0.14356	0.14914	0.15703	0.16199	
0.8	0.02576	0.05042	0.07308	0.09314	0.11035	0.12474	0.13653	0.14607	0.15371	0.15978	0.16843	0.17389	
0.9	0.02698	0.05283	0.07661	0.09770	0.11584	0.13105	0.14356	0.15371	0.16185	0.16835	0.17766	0.18357	
1.0	0.02794	0.05471	0.07938	0.10129	0.12018	0.13605	0.14914	0.15978	0.16835	0.17522	0.18508	0.19139	
1.2	0.02926	0.05733	0.08323	0.10631	0.12626	0.14309	0.15703	0.16843	0.17766	0.18508	0.19584	0.20278	
1.4	0.03007	0.05894	0.08561	0.10941	0.13003	0.14749	0.16199	0.17389	0.18357	0.19139	0.20278	0.21020	
1.6	0.03058	0.05994	0.08709	0.11135	0.13241	0.15028	0.16515	0.17739	0.18737	0.19546	0.20731	0.21510	
1.8	0.03090	0.06058	0.08804	0.11260	0.13395	0.15207	0.16720	0.17967	0.18986	0.19814	0.21032	0.21836	
2.0	0.03111	0.06100	0.08867	0.11342	0.13496	0.15326	0.16856	0.18119	0.19152	0.19994	0.21235	0.22058	
2.5	0.03138	0.06155	0.08948	0.11450	0.13628	0.15483	0.17036	0.18321	0.19375	0.20236	0.21512	0.22364	
3.0	0.03150	0.06178	0.08982	0.11495	0.13684	0.15550	0.17113	0.18407	0.19470	0.20341	0.21633	0.22499	
4.0	0.03158	0.06194	0.09007	0.11527	0.13724	0.15598	0.17168	0.18469	0.19540	0.20417	0.21722	0.22600	
5.0	0.03160	0.06199	0.09014	0.11537	0.13737	0.15612	0.17185	0.18488	0.19561	0.20440	0.21749	0.22632	
6.0	0.03161	0.06201	0.09017	0.11541	0.13741	0.15617	0.17191	0.18496	0.19569	0.20449	0.21760	0.22644	
8.0	0.03162	0.06202	0.09018	0.11543	0.13744	0.15621	0.17195	0.18500	0.19574	0.20455	0.21767	0.22652	
10.0	0.03162	0.06202	0.09019	0.11544	0.13745	0.15622	0.17196	0.18502	0.19576	0.20457	0.21769	0.22654	
$\infty$	0.03162	0.06202	0.09019	0.11544	0.13745	0.15623	0.17197	0.18502	0.19577	0.20458	0.21770	0.22656	

Table 6.4 (Continued)

$m$	$n$											$\infty$				
	1.6	1.8	2.0	2.5	3.0	4.0	5.0	6.0	8.0	10.0	$\infty$					
0.1	0.03058	0.03090	0.03111	0.03138	0.03150	0.03158	0.03160	0.03161	0.03162	0.03162	0.03162	0.03162	0.03162	0.03162	0.03162	
0.2	0.05994	0.06058	0.06100	0.06155	0.06178	0.06194	0.06199	0.06201	0.06202	0.06202	0.06202	0.06202	0.06202	0.06202	0.06202	0.06202
0.3	0.08709	0.08804	0.08867	0.08948	0.08982	0.09007	0.09014	0.09017	0.09018	0.09019	0.09019	0.09019	0.09019	0.09019	0.09019	0.09019
0.4	0.11135	0.11260	0.11342	0.11450	0.11495	0.11527	0.11537	0.11541	0.11543	0.11544	0.11544	0.11544	0.11544	0.11544	0.11544	0.11544
0.5	0.13241	0.13395	0.13496	0.13628	0.13684	0.13724	0.13737	0.13741	0.13744	0.13745	0.13745	0.13745	0.13745	0.13745	0.13745	0.13745
0.6	0.15028	0.15207	0.15326	0.15483	0.15550	0.15598	0.15612	0.15617	0.15621	0.15622	0.15622	0.15622	0.15622	0.15622	0.15622	0.15622
0.7	0.16515	0.16720	0.16856	0.17036	0.17113	0.17168	0.17185	0.17191	0.17195	0.17196	0.17196	0.17196	0.17196	0.17196	0.17196	0.17196
0.8	0.17739	0.17967	0.18119	0.18321	0.18407	0.18469	0.18488	0.18496	0.18500	0.18502	0.18502	0.18502	0.18502	0.18502	0.18502	0.18502
0.9	0.18737	0.18986	0.19152	0.19375	0.19470	0.19540	0.19561	0.19569	0.19574	0.19576	0.19576	0.19576	0.19576	0.19576	0.19576	0.19576
1.0	0.19546	0.19814	0.19994	0.20236	0.20341	0.20417	0.20440	0.20449	0.20455	0.20457	0.20457	0.20457	0.20457	0.20457	0.20457	0.20457
1.2	0.20731	0.21032	0.21235	0.21512	0.21633	0.21722	0.21749	0.21760	0.21767	0.21769	0.21769	0.21769	0.21769	0.21769	0.21769	0.21769
1.4	0.21510	0.21836	0.22058	0.22364	0.22499	0.22600	0.22632	0.22644	0.22652	0.22654	0.22654	0.22654	0.22654	0.22654	0.22654	0.22654
1.6	0.22025	0.22372	0.22610	0.22940	0.23088	0.23200	0.23236	0.23249	0.23258	0.23261	0.23261	0.23261	0.23261	0.23261	0.23261	0.23261
1.8	0.22372	0.22736	0.22986	0.23334	0.23495	0.23617	0.23656	0.23671	0.23681	0.23684	0.23684	0.23684	0.23684	0.23684	0.23684	0.23684
2.0	0.22610	0.22986	0.23247	0.23614	0.23782	0.23912	0.23954	0.23970	0.23981	0.23985	0.23985	0.23985	0.23985	0.23985	0.23985	0.23985
2.5	0.22940	0.23334	0.23614	0.24010	0.24196	0.24344	0.24392	0.24412	0.24425	0.24429	0.24429	0.24429	0.24429	0.24429	0.24429	0.24429
3.0	0.23088	0.23495	0.23782	0.24196	0.24394	0.24554	0.24608	0.24630	0.24646	0.24650	0.24650	0.24650	0.24650	0.24650	0.24650	0.24650
4.0	0.23200	0.23617	0.23912	0.24344	0.24554	0.24729	0.24791	0.24817	0.24836	0.24842	0.24842	0.24842	0.24842	0.24842	0.24842	0.24842
5.0	0.23236	0.23656	0.23954	0.24392	0.24608	0.24791	0.24857	0.24885	0.24907	0.24914	0.24914	0.24914	0.24914	0.24914	0.24914	0.24914
6.0	0.23249	0.23671	0.23970	0.24412	0.24630	0.24817	0.24885	0.24916	0.24939	0.24946	0.24946	0.24946	0.24946	0.24946	0.24946	0.24946
8.0	0.23258	0.23681	0.23981	0.24425	0.24646	0.24836	0.24907	0.24939	0.24964	0.24973	0.24973	0.24973	0.24973	0.24973	0.24973	0.24973
10.0	0.23261	0.23684	0.23985	0.24429	0.24650	0.24842	0.24914	0.24946	0.24973	0.24981	0.24981	0.24981	0.24981	0.24981	0.24981	0.24981
$\infty$	0.23263	0.23686	0.23987	0.24432	0.24654	0.24846	0.24919	0.24952	0.24980	0.24989	0.24989	0.24989	0.24989	0.24989	0.24989	0.24989


<sup>a</sup>Based on Saika, 2012

**Table 6.5** Variation of  $I_c$  with  $m_1$  and  $n_1$ 

$n_1$	$m_1$									
	1	2	3	4	5	6	7	8	9	10
0.20	0.994	0.997	0.997	0.997	0.997	0.997	0.997	0.997	0.997	0.997
0.40	0.960	0.976	0.977	0.977	0.977	0.977	0.977	0.977	0.977	0.977
0.60	0.892	0.932	0.936	0.936	0.937	0.937	0.937	0.937	0.937	0.937
0.80	0.800	0.870	0.878	0.880	0.881	0.881	0.881	0.881	0.881	0.881
1.00	0.701	0.800	0.814	0.817	0.818	0.818	0.818	0.818	0.818	0.818
1.20	0.606	0.727	0.748	0.753	0.754	0.755	0.755	0.755	0.755	0.755
1.40	0.522	0.658	0.685	0.692	0.694	0.695	0.695	0.696	0.696	0.696
1.60	0.449	0.593	0.627	0.636	0.639	0.640	0.641	0.641	0.641	0.642
1.80	0.388	0.534	0.573	0.585	0.590	0.591	0.592	0.592	0.593	0.593
2.00	0.336	0.481	0.525	0.540	0.545	0.547	0.548	0.549	0.549	0.549
3.00	0.179	0.293	0.348	0.373	0.384	0.389	0.392	0.393	0.394	0.395
4.00	0.108	0.190	0.241	0.269	0.285	0.293	0.298	0.301	0.302	0.303
5.00	0.072	0.131	0.174	0.202	0.219	0.229	0.236	0.240	0.242	0.244
6.00	0.051	0.095	0.130	0.155	0.172	0.184	0.192	0.197	0.200	0.202
7.00	0.038	0.072	0.100	0.122	0.139	0.150	0.158	0.164	0.168	0.171
8.00	0.029	0.056	0.079	0.098	0.113	0.125	0.133	0.139	0.144	0.147
9.00	0.023	0.045	0.064	0.081	0.094	0.105	0.113	0.119	0.124	0.128
10.00	0.019	0.037	0.053	0.067	0.079	0.089	0.097	0.103	0.108	0.112

Foundation engineers often use an approximate method to determine the increase in stress with depth caused by the construction of a foundation. The method is referred to as the *2:1 method*. (See Figure 6.7.) According to this method, the increase in stress at depth  $z$  is

$$\Delta\sigma = \frac{q_o \times B \times L}{(B + z)(L + z)} \quad (6.18)$$

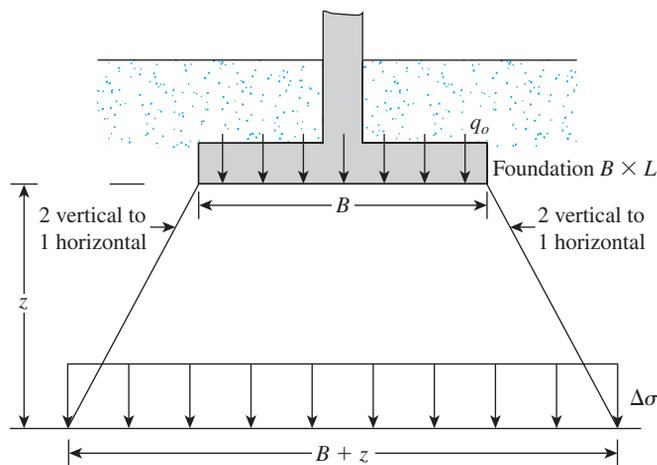

**Figure 6.7** 2:1 method of finding stress increase under a foundation

Note that Eq. (6.18) is based on the assumption that the stress from the foundation spreads out along lines with a *vertical-to-horizontal slope of 2:1*.

### Example 6.2

A flexible rectangular area measures 2.5 m × 5 m in plan. It supports a load of 150 kN/m<sup>2</sup>.

Determine the vertical stress increase due to the load at a depth of 6.25 m below the center of the rectangular area.

#### Solution

Refer to Figure 6.6. For this case,

$$B_1 = B_2 = \frac{2.5}{2} = 1.25 \text{ m}$$

$$L_1 = L_2 = \frac{5}{2} = 2.5 \text{ m}$$

From Eqs. (6.11) and (6.12),

$$m = \frac{B_1}{z} = \frac{B_2}{z} = \frac{1.25}{6.25} = 0.2$$

$$n = \frac{L_1}{z} = \frac{L_2}{z} = \frac{2.5}{6.25} = 0.4$$

From Table 6.4, for  $m = 0.2$  and  $n = 0.4$ , the value of  $I = 0.0328$ . Thus,

$$\Delta\sigma = q_o(4I) = (150)(4)(0.0328) = \mathbf{19.68 \text{ kN/m}^2}$$

#### Alternate Solution

From Eq. (6.14),

$$\Delta\sigma = q_o I_c$$

$$m_1 = \frac{L}{B} = \frac{5}{2.5} = 2$$


$$n_1 = \frac{z}{\left(\frac{B}{2}\right)} = \frac{6.25}{\left(\frac{2.5}{2}\right)} = 5$$

From Table 6.5, for  $m_1 = 2$  and  $n_1 = 5$ , the value of  $I_c = 0.131$ . Thus,

$$\Delta\sigma = (150)(0.131) = \mathbf{19.65 \text{ kN/m}^2}$$

## 6.7 Stress Isobars

Using Eq. (6.7), it is possible to determine the variation of  $\Delta\sigma/q_o$  at various points below a strip load of width  $B$ . The results can be used to plot stress isobars (i.e., contours of  $\Delta\sigma/q_o$ ), as shown in Figure 6.8. In a similar manner, Eq. (6.9) can be used to determine

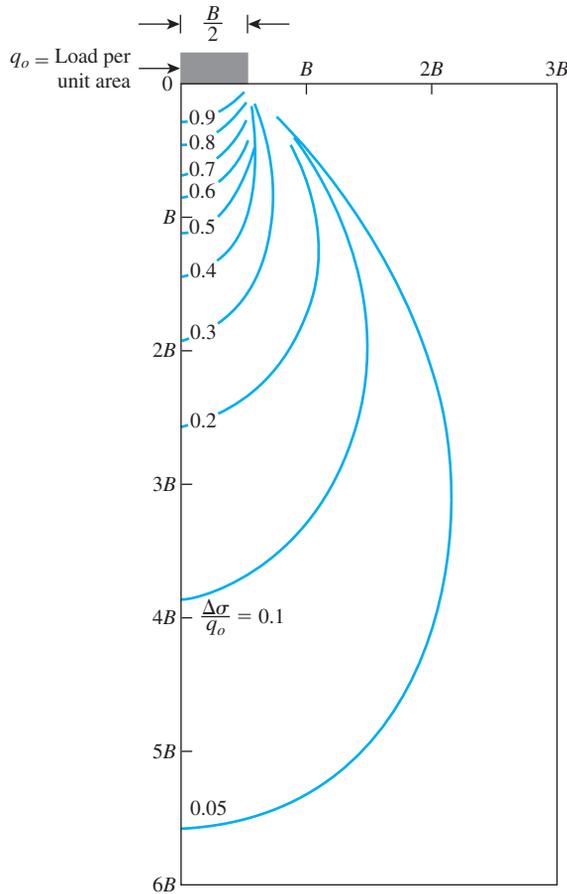

**Figure 6.8** Contours of  $\Delta\sigma/q_o$  below a strip load

the variation of  $\Delta\sigma/q_o$  below a square loaded area measuring  $B \times B$ , and stress isobars can be plotted as shown in Figure 6.9. These stress isobars are sometimes helpful in the design of shallow foundations.

## 6.8 Average Vertical Stress Increase Due to a Rectangularly Loaded Area

In Section 6.6, the vertical stress increase below the corner of a uniformly loaded rectangular area was given as

$$\Delta\sigma = q_o I$$

In many cases, one must find the average stress increase,  $\Delta\sigma_{av}$ , below the corner of a uniformly loaded rectangular area with limits of  $z = 0$  to  $z = H$ , as shown in Figure 6.10. This can be evaluated as

$$\Delta\sigma_{av} = \frac{1}{H} \int_0^H (q_o I) dz = q_o I_a \quad (6.19)$$

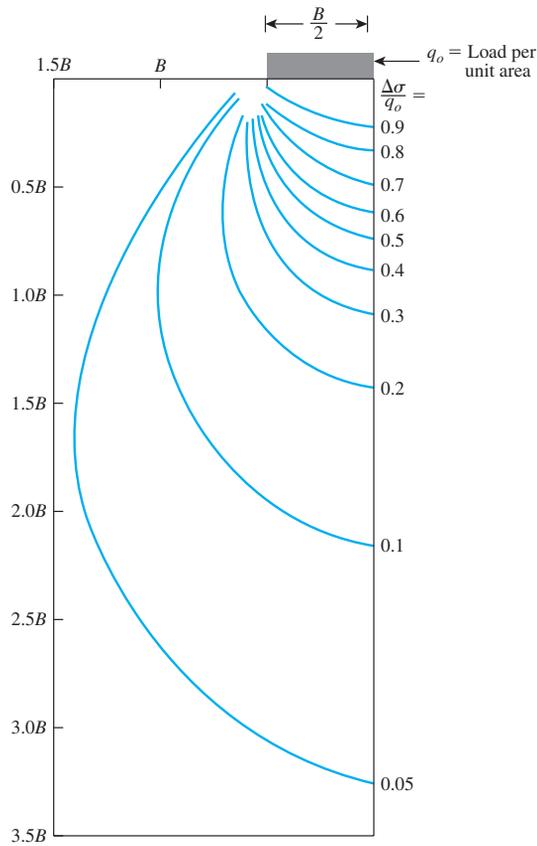


Figure 6.9 Contours of  $\Delta\sigma/q_0$  below the center line of a square loaded area ( $B \times B$ )


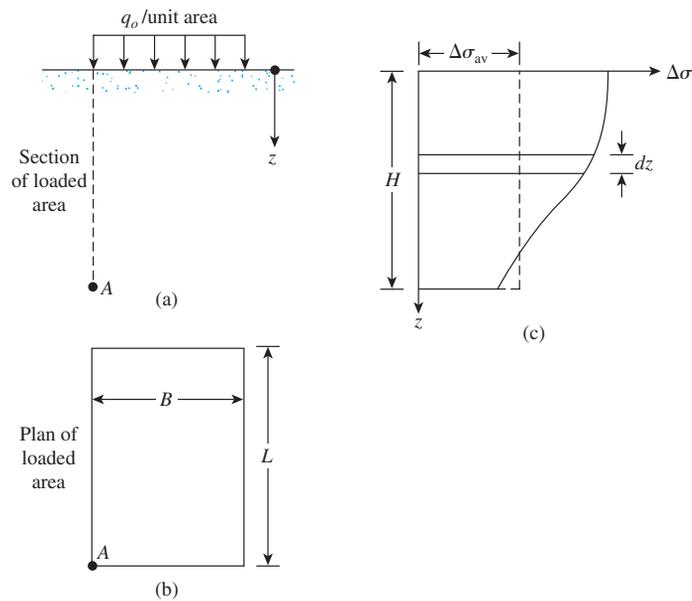


Figure 6.10 Average vertical stress increase due to a rectangularly loaded flexible area

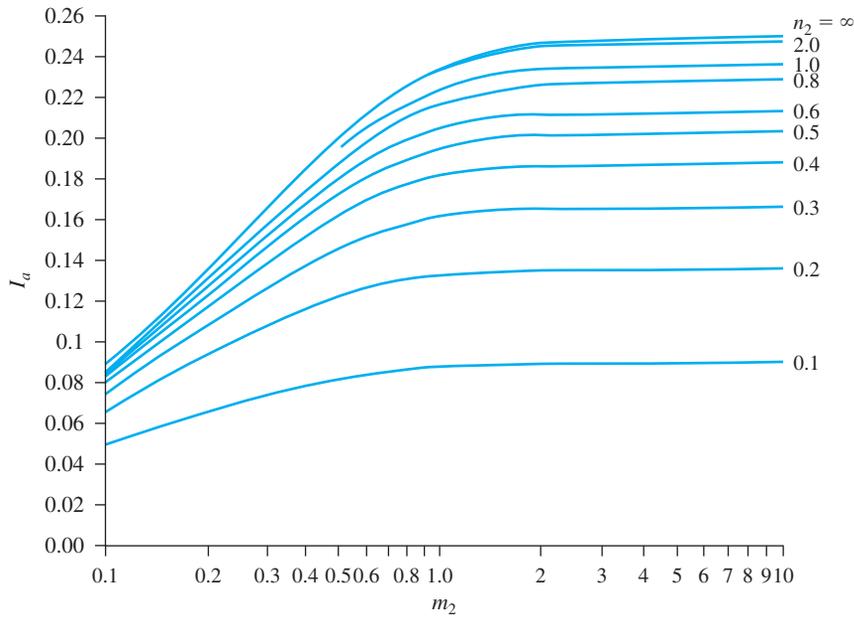

**Figure 6.11** Griffiths' influence factor  $I_a$

where

$$I_a = f(m_2, n_2) \quad (6.20)$$

$$m_2 = \frac{B}{H} \quad (6.21)$$

and

$$n_2 = \frac{L}{H} \quad (6.22)$$

The variation of  $I_a$  with  $m_2$  and  $n_2$  is shown in Figure 6.11, as proposed by Griffiths (1984).


In estimating the consolidation settlement under a foundation, it may be required to determine the average vertical stress increase in only a given layer—that is, between  $z = H_1$  and  $z = H_2$ , as shown in Figure 6.12. This can be done as (Griffiths, 1984)

$$\Delta\sigma_{\text{av}(H_2/H_1)} = q_o \left[ \frac{H_2 I_{a(H_2)} - H_1 I_{a(H_1)}}{H_2 - H_1} \right] \quad (6.23)$$

where

$\Delta\sigma_{\text{av}(H_2/H_1)}$  = average stress increase immediately below the corner of a uniformly loaded rectangular area between depths  $z = H_1$  and  $z = H_2$

$$I_{a(H_2)} = I_a \text{ for } z = 0 \text{ to } z = H_2 = f\left(m_2 = \frac{B}{H_2}, n_2 = \frac{L}{H_2}\right) \quad (6.24)$$

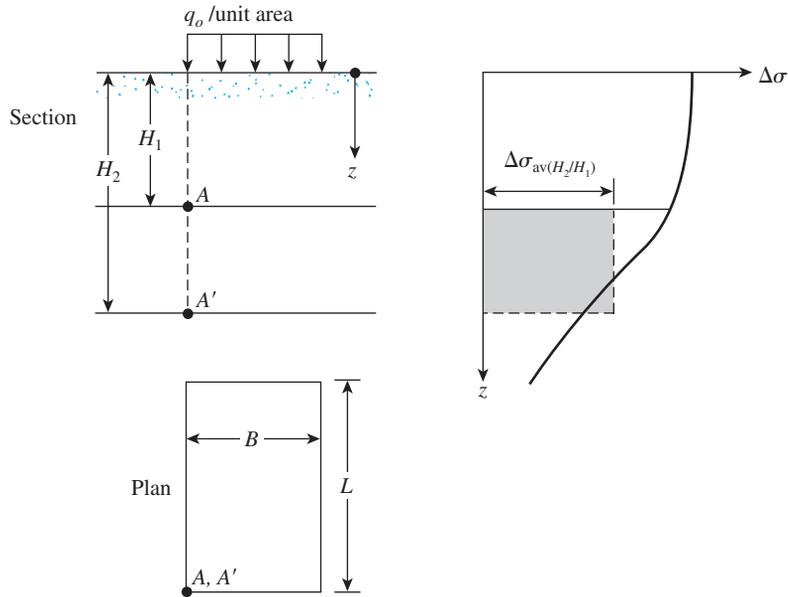


**Figure 6.12** Average pressure increase between  $z = H_1$  and  $z = H_2$  below the corner of a uniformly loaded rectangular area

$$I_{a(H_1)} = I_a \text{ for } z = 0 \text{ to } z = H_1 = f\left(m_2 = \frac{B}{H_1}, n_2 = \frac{L}{H_1}\right) \quad (6.25)$$

In most practical cases, however, we will need to determine the average stress increase between  $z = H_1$  and  $z = H_2$  below the center of a loaded area. The procedure for doing this can be explained with reference to Figure 6.13, which shows the plan of a loaded area measuring  $L \times B$ . The loaded area can be divided into four rectangular areas measuring  $B' \times L'$  (Note:  $B' = B/2$  and  $L' = L/2$ ), and the point  $O$  is the common corner for each of the four rectangles. The average stress increase below  $O$  between  $z = H_1$  to  $H_2$  due to each loaded area then can be given by Eq. (6.23) where

$$I_{a(H_2)} = f\left(m_2 = \frac{B'}{H_2}; n_2 = \frac{L'}{H_2}\right) \quad (6.26)$$

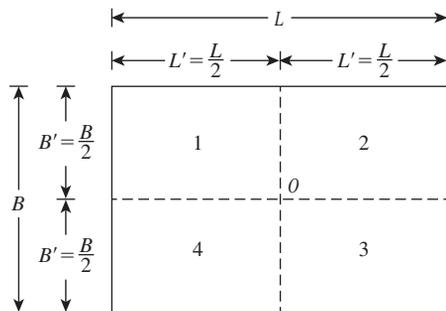

**Figure 6.13** Average stress increase calculation below a flexible loaded rectangular area

and

$$I_{a(H_1)} = f\left(m_2 = \frac{B'}{H_1}; n_2 = \frac{L'}{H_1}\right) \quad (6.27)$$

Now the total average stress increase due to the four loaded areas (each measuring  $L' \times B'$ ) between  $z = H_1$  to  $H_2$  can be given as

$$\Delta\sigma_{\text{av}(H_2/H_1)} = 4q_o \left[ \frac{H_2 I_{a(H_2)} - H_1 I_{a(H_1)}}{H_2 - H_1} \right] \quad (6.28)$$

Eq. (6.26)      Eq. (6.27)  
 $\downarrow$                        $\downarrow$

This procedure for determination of  $\Delta\sigma_{\text{av}(H_2/H_1)}$  is shown in Example 6.3.

Another approximate procedure to determine  $\Delta\sigma_{\text{av}(H_2/H_1)}$  is to use the relationship

$$\Delta\sigma_{\text{av}(H_2/H_1)} = \frac{\Delta\sigma_t + 4\Delta\sigma_m + \Delta\sigma_b}{6} \quad (6.29)$$

where  $\Delta\sigma_t$ ,  $\Delta\sigma_m$ ,  $\Delta\sigma_b$  = stress increase below the center of the loaded area ( $L \times B$ ), respectively, at depths  $z = H_1$ ,  $H_1 + H_2/2$ , and  $H_1 + H_2$ .

The magnitudes of  $\Delta\sigma_t$ ,  $\Delta\sigma_m$ , and  $\Delta\sigma_b$  can be obtained by using Eqs. (6.14) through (6.17) (see Table 6.5).

### Example 6.3

Refer to Figure 6.14. Determine the *average* stress increase below the center of the loaded area between  $z = 3$  m to  $z = 5$  m (that is, between points A and A').

#### Solution

Refer to Figure 6.14. The loaded area can be divided into four rectangular areas, each measuring  $1.5 \text{ m} \times 1.5 \text{ m}$  ( $L' \times B'$ ). Using Eq. (6.28), the average stress increase (between the required depths) below the center of the entire loaded area can be given as

$$\Delta\sigma_{\text{av}(H_2/H_1)} = 4q_o \left[ \frac{H_2 I_{a(H_2)} - H_1 I_{a(H_1)}}{H_2 - H_1} \right] = (4)(100) \left[ \frac{(5)I_{a(H_2)} - (3)I_{a(H_1)}}{5 - 3} \right]$$

For  $I_{a(H_2)}$  [Eq. (6.26)],


$$m_2 = \frac{B'}{H_2} = \frac{1.5}{5} = 0.3$$

$$n_2 = \frac{L'}{H_2} = \frac{1.5}{5} = 0.3$$

Referring to Figure 6.11, for  $m_2 = 0.3$  and  $n_2 = 0.3$ ,  $I_{a(H_2)} = 0.126$ . For  $I_{a(H_1)}$  [Eq. (6.27)],

$$m_2 = \frac{B'}{H_1} = \frac{1.5}{3} = 0.5$$

$$n_2 = \frac{L'}{H_1} = \frac{1.5}{3} = 0.5$$

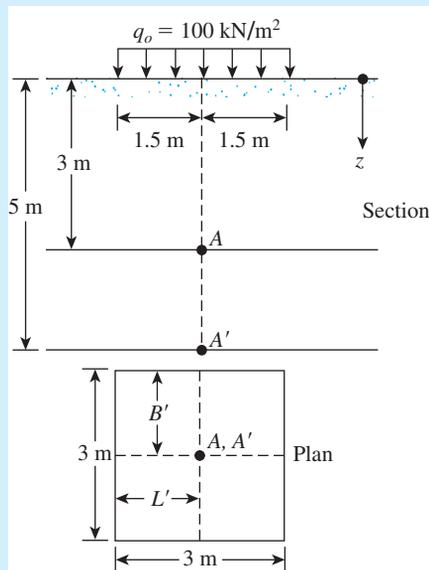

**Figure 6.14** Determination of average increase in stress below a rectangular area

Referring to Figure 6.11,  $I_{a(H_1)} = 0.175$ , so

$$\Delta\sigma_{av(H_2/H_1)} = (4)(100) \left[ \frac{(5)(0.126) - (3)(0.175)}{5 - 3} \right] = 21 \text{ kN/m}^2 \quad \blacksquare$$

### Example 6.4

Solve Example 6.3 using Eqs. (6.14) through (6.17) and (6.29) and Table 6.5.

#### Solution

The following table can now be prepared.

$z$ (m)	$L$ (m)	$B$ (m)	$m_1$	$n_1$	$I_c^*$	$q_o I_c^{**}$ (kN/m <sup>2</sup> )
3	3	3	1	2	0.336	33.6
4	3	3	1	2.67	0.231	23.1
5	3	3	1	3.33	0.155	15.5

\*Table 6.5

\*\* $q_o = 100 \text{ kN/m}^2$

From Eq. (6.29),

$$\Delta\sigma_{av(H_2/H_1)} = \frac{33.6 + 4(23.1) + 15.5}{6} = 23.58 \text{ kN/m}^2 \quad \blacksquare$$

**Example 6.5**

Solve Example 6.3 using Eqs. (6.18) and (6.29).

**Solution**

From Eq. (6.18) for a square loaded area,

$$\sigma_t = \frac{q_o B^2}{(B + z)^2} = \frac{(100)(3)^2}{(3 + 3)^2} = 25 \text{ kN/m}^2$$

$$\sigma_m = \frac{(100)(3)^2}{(3 + 4)^2} = 18.37 \text{ kN/m}^2$$

$$\sigma_b = \frac{(100)(3)^2}{(3 + 5)^2} = 14.06 \text{ kN/m}^2$$

$$\Delta\sigma_{\text{av}(H_2/H_1)} = \frac{25 + 4(18.37) + 14.06}{6} = 18.76 \text{ kN/m}^2 \quad \blacksquare$$

## 6.9 Average Vertical Stress Increase below the Center of a Circularly Loaded Area

The average vertical stress increase below the center of a flexible circularly loaded area of diameter  $B$  between  $z = H_1$  and  $z = H_2$  (see inset in Figure 6.15) can be estimated using Eq. (6.29). The values of  $\sigma_t$ ,  $\sigma_m$ , and  $\sigma_b$  can be obtained by using Eq. (6.3).

Saika (2012) has also provided a mathematical solution to obtain  $\Delta\sigma_{\text{av}(H_2/H_1)}$  below the center of a flexible circularly loaded (intensity =  $q_o$ ) area. This is shown in a nondimensional form in Figure 6.15.


**Example 6.6**

Figure 6.16 shows a flexible circularly loaded area with  $B = 2$  m and  $q_o = 150$  kN/m<sup>2</sup>. Estimate the average stress ( $\Delta\sigma_{\text{av}}$ ) increase in the clay layer below the center of the loaded area. Use Eqs. (6.3) and (6.29).

**Solution**

From Eq. (6.3),

$$\Delta\sigma = q_o \left\{ 1 - \frac{1}{\left[ 1 + \left( \frac{B}{2z} \right)^2 \right]^{3/2}} \right\}$$

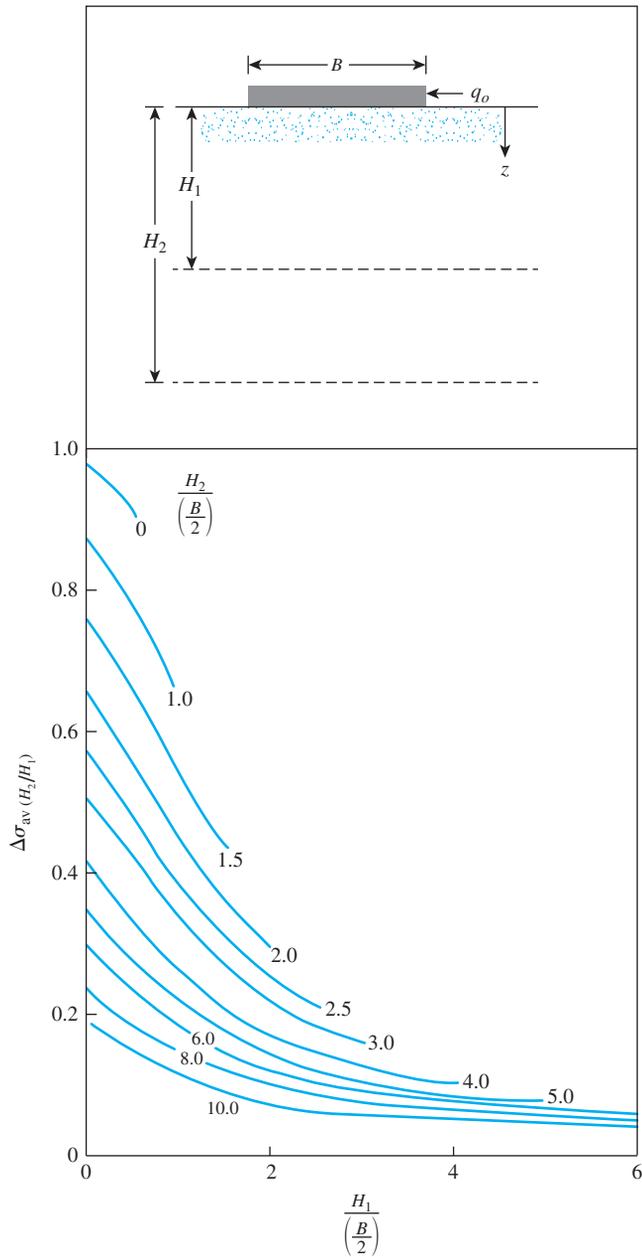

**Figure 6.15** Average stress increase below the center of a flexible circularly loaded area between  $z = H_1$  to  $z = H_2$  (Based on Saika, 2012)

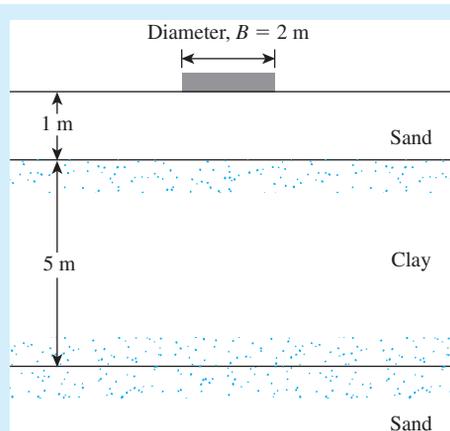


Figure 6.16

Hence (at  $z = H_1 = 1\text{ m}$ ),

$$\Delta\sigma_t = 150 \left\{ 1 - \frac{1}{\left[ 1 + \left( \frac{2}{2 \times 1} \right)^2 \right]^{3/2}} \right\} = 96.97 \text{ kN/m}^2$$

At  $z = 3.5\text{ m}$ ,

$$\Delta\sigma_m = 150 \left\{ 1 - \frac{1}{\left[ 1 + \left( \frac{2}{2 \times 3.5} \right)^2 \right]^{3/2}} \right\} = 16.66 \text{ kN/m}^2$$

At  $z = 6\text{ m}$ ,

$$\Delta\sigma_b = 150 \left\{ 1 - \frac{1}{\left[ 1 + \left( \frac{2}{2 \times 6} \right)^2 \right]^{3/2}} \right\} = 6.04 \text{ kN/m}^2$$

From Eq. (6.29),

$$\Delta\sigma_{av} = \frac{\Delta\sigma_t + 4\Delta\sigma_m + \Delta\sigma_b}{6} = \frac{96.97 + (4)(16.66) + 6.04}{6} = 28.28 \text{ kN/m}^2 \quad \blacksquare$$

**Example 6.7**

Solve Example 6.6 by using Figure 6.15.

**Solution**

$$\frac{H_1}{\left(\frac{B}{2}\right)} = \frac{1}{\left(\frac{2}{2}\right)} = 1$$

$$\frac{H_2}{\left(\frac{B}{2}\right)} = \frac{6}{\left(\frac{2}{2}\right)} = 6$$


From Figure 6.15, for  $H_1/(B/2) = 1$  and  $H_2/(B/2) = 6$ , the value of  $\Delta\sigma_{av}/q_o \approx 0.175$ . Hence,

$$\Delta\sigma_{av} = (150)(0.175) = 26.25 \text{ kN/m}^2$$

## 6.10 Stress Increase under an Embankment

Figure 6.17 shows the cross section of an embankment of height  $H$ . For this two-dimensional loading condition, the vertical stress increase may be expressed as

$$\Delta\sigma = \frac{q_o}{\pi} \left[ \left( \frac{B_1 + B_2}{B_2} \right) (\alpha_1 + \alpha_2) - \frac{B_1}{B_2} (\alpha_2) \right] \quad (6.30)$$

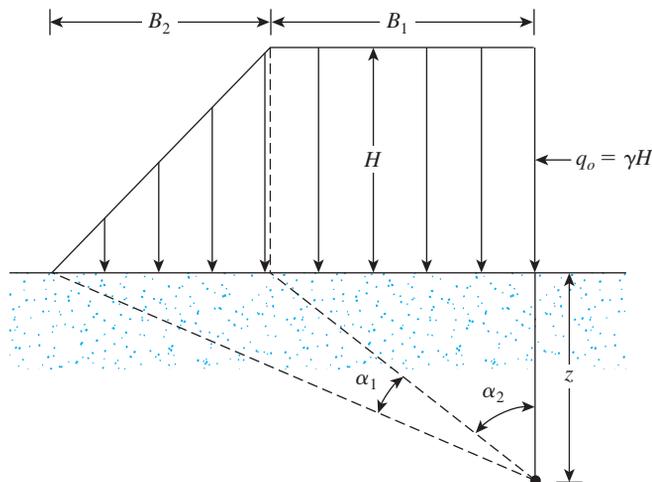

**Figure 6.17** Embankment loading

where

$$q_o = \gamma H$$

$\gamma$  = unit weight of the embankment soil

$H$  = height of the embankment

$$\alpha_1 = \tan^{-1}\left(\frac{B_1 + B_2}{z}\right) - \tan^{-1}\left(\frac{B_1}{z}\right) \tag{6.31}$$

$$\alpha_2 = \tan^{-1}\left(\frac{B_1}{z}\right) \tag{6.32}$$


(Note that  $\alpha_1$  and  $\alpha_2$  are in radians.)

For a detailed derivation of Eq. (6.30), see Das (2014). A simplified form of the equation is

$$\Delta\sigma = q_o I' \tag{6.33}$$

where  $I'$  = a function of  $B_1/z$  and  $B_2/z$ .

The variation of  $I'$  with  $B_1/z$  and  $B_2/z$  is shown in Figure 6.18. An application of this diagram is given in Example 6.8.

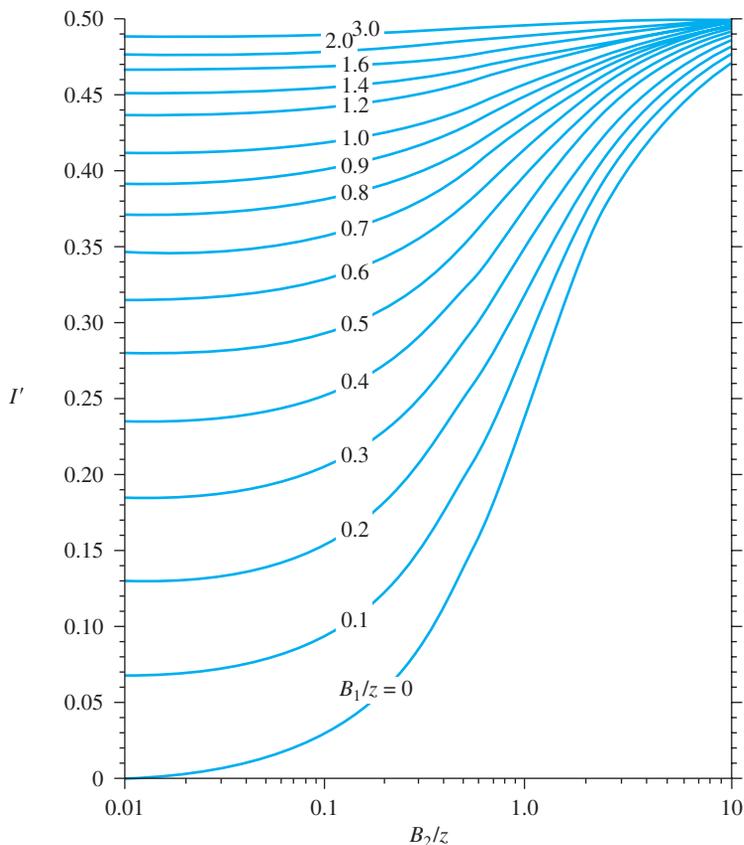

**Figure 6.18** Influence value  $I'$  for embankment loading (After Osterberg, 1957) Osterberg, J. O. (1957). “Influence Values for Vertical Stresses in Semi-Infinite Mass Due to Embankment Loading,” *Proceedings, Fourth International Conference on Soil Mechanics and Foundation Engineering*, London, Vol. 1. pp. 393–396. With permission from ASCE.

### Example 6.8

An embankment is shown in Figure 6.19a. Determine the stress increase under the embankment at points  $A_1$  and  $A_2$ .

#### Solution

We have

$$\gamma H = (17.5)(7) = 122.5 \text{ kN/m}^2$$

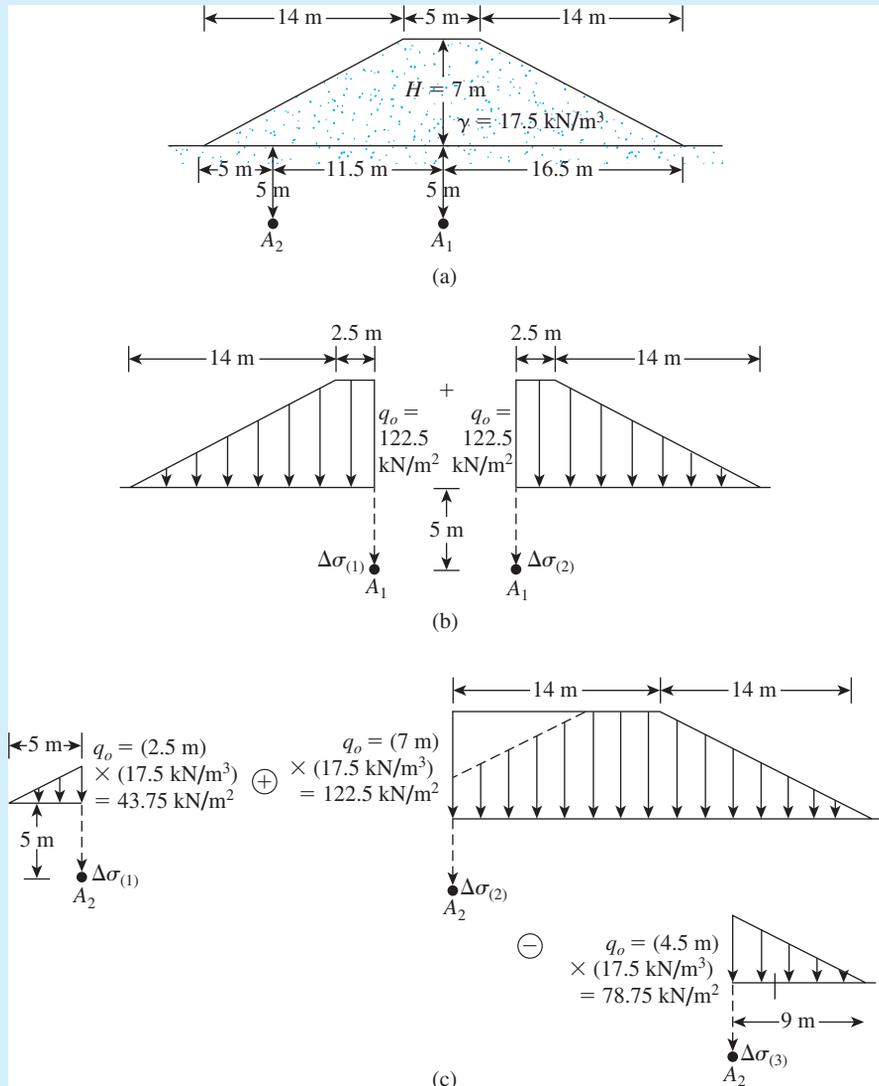


Figure 6.19 Stress increase due to embankment loading

Stress Increase at  $A_1$

The left side of Figure 6.19b indicates that  $B_1 = 2.5$  m and  $B_2 = 14$  m, so

$$\frac{B_1}{z} = \frac{2.5}{5} = 0.5$$

and

$$\frac{B_2}{z} = \frac{14}{5} = 2.8$$

According to Figure 6.18, in this case  $I' = 0.445$ . Because the two sides in Figure 6.19b are symmetrical, the value of  $I'$  for the right side will also be 0.445, so

$$\begin{aligned}\Delta\sigma &= \Delta\sigma_{(1)} + \Delta\sigma_{(2)} = q_0[I'_{(\text{left side})} + I'_{(\text{right side})}] \\ &= 122.5[0.445 + 0.445] = \mathbf{109.03 \text{ kN/m}^2}\end{aligned}$$

Stress Increase at  $A_2$

In Figure 6.19c, for the left side,  $B_2 = 5$  m and  $B_1 = 0$ , so

$$\frac{B_2}{z} = \frac{5}{5} = 1$$

and

$$\frac{B_1}{z} = \frac{0}{5} = 0$$

According to Figure 6.18, for these values of  $B_2/z$  and  $B_1/z$ ,  $I' = 0.24$ ; hence,

$$\Delta\sigma_{(1)} = 43.75(0.24) = 10.5 \text{ kN/m}^2$$

For the middle section,

$$\frac{B_2}{z} = \frac{14}{5} = 2.8$$

and

$$\frac{B_1}{z} = \frac{14}{5} = 2.8$$

Thus,  $I' = 0.495$ , so

$$\Delta\sigma_{(2)} = 0.495(122.5) = 60.64 \text{ kN/m}^2$$

For the right side,

$$\frac{B_2}{z} = \frac{9}{5} = 1.8$$

$$\frac{B_1}{z} = \frac{0}{5} = 0$$

and  $I' = 0.335$ , so

$$\Delta\sigma_{(3)} = (78.75)(0.335) = 26.38 \text{ kN/m}^2$$

The total stress increase at point  $A_2$  is



$$\Delta\sigma = \Delta\sigma_{(1)} + \Delta\sigma_{(2)} - \Delta\sigma_{(3)} = 10.5 + 60.64 - 26.38 = \mathbf{44.76 \text{ kN/m}^2}$$

## 6.11 Westergaard's Solution for Vertical Stress Due to a Point Load

Boussinesq's solution for stress distribution due to a point load was presented in Section 6.2. The stress distribution due to various types of loading discussed in previous sections is based on integration of Boussinesq's solution.

Westergaard (1938) has proposed a solution for the determination of the vertical stress due to a point load  $P$  in an elastic solid medium in which there exist alternating layers with thin rigid reinforcements (Figure 6.20a). This type of assumption may be an idealization of a clay layer with thin seams of sand. For such an assumption, the vertical stress increase at a point  $A$  (Figure 6.20b) can be given as

$$\Delta\sigma = \frac{P\eta}{2\pi z^2} \left[ \frac{1}{\eta^2 + (r/z)^2} \right]^{3/2} \quad (6.34)$$

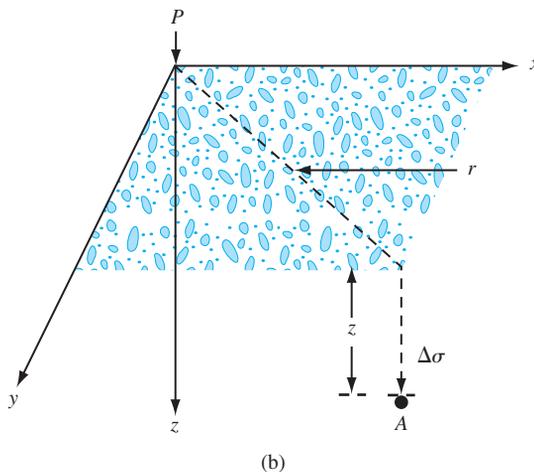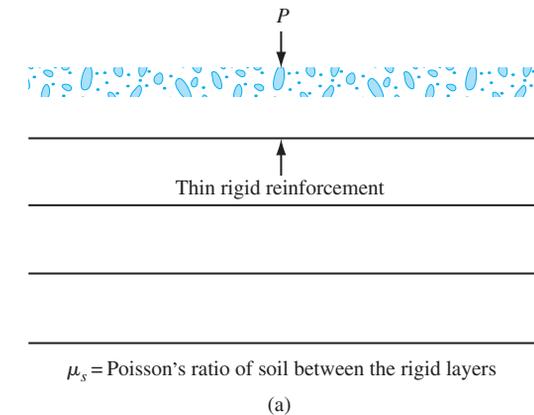

**Figure 6.20** Westergaard's solution for vertical stress due to a point load

where

$$\eta = \sqrt{\frac{1 - 2\mu_s}{2 - 2\mu_s}} \quad (6.35)$$

$\mu_s$  = Poisson's ratio of the solid between the rigid reinforcements

$$r = \sqrt{x^2 + y^2}$$

Equation (6.34) can be rewritten as

$$\Delta\sigma = \left(\frac{P}{z^2}\right) I_1 \quad (6.36)$$

where

$$I_1 = \frac{1}{2\pi\eta^2} \left[ \left(\frac{r}{\eta z}\right)^2 + 1 \right]^{-3/2} \quad (6.37)$$

Table 6.6 gives the variation of  $I_1$  with  $\mu_s$ .

**Table 6.6** Variation of  $I_1$  [Eq. (6.37)]

$r/z$	$I_1$		
	$\mu_s = 0$	$\mu_s = 0.2$	$\mu_s = 0.4$
0	0.3183	0.4244	0.9550
0.1	0.3090	0.4080	0.8750
0.2	0.2836	0.3646	0.6916
0.3	0.2483	0.3074	0.4997
0.4	0.2099	0.2491	0.3480
0.5	0.1733	0.1973	0.2416
0.6	0.1411	0.1547	0.1700
0.7	0.1143	0.1212	0.1221
0.8	0.0925	0.0953	0.0897
0.9	0.0751	0.0756	0.0673
1.0	0.0613	0.0605	0.0516
1.5	0.0247	0.0229	0.0173
2.0	0.0118	0.0107	0.0076
2.5	0.0064	0.0057	0.0040
3.0	0.0038	0.0034	0.0023
4.0	0.0017	0.0015	0.0010
5.0	0.0009	0.0008	0.0005

## 6.12 Stress Distribution for Westergaard Material

### Stress Due to a Circularly Loaded Area

Referring to Figure 6.2, if the circular area is located on a Westergaard-type material, the increase in vertical stress,  $\Delta\sigma$ , at a point located at a depth  $z$  immediately below the center of the area can be given as

$$\Delta\sigma = q_o \left\{ 1 - \frac{\eta}{\left[ \eta^2 + \left( \frac{B}{2z} \right)^2 \right]^{1/2}} \right\} \quad (6.38)$$

The term  $\eta$  has been defined in Eq. (6.35). The variations of  $\Delta\sigma/q_o$  with  $B/2z$  and  $\mu_s = 0$  are given in Table 6.7.

### Stress Due to a Uniformly Loaded Flexible Rectangular Area

Refer to Figure 6.5. If the flexible rectangular area is located on a Westergaard-type material, the stress increase at point  $A$  can be given as

$$\Delta\sigma = \frac{q_o}{2\pi} \left[ \cot^{-1} \sqrt{\eta^2 \left( \frac{1}{m^2} + \frac{1}{n^2} \right) + \eta^4 \left( \frac{1}{m^2 n^2} \right)} \right] \quad (6.39a)$$

**Table 6.7** Variation of  $\Delta\sigma/q_o$  with  $B/2z$  and  $\mu_s = 0$  [Eq. (6.38)]

$B/2z$	$\Delta\sigma/q_o$
0.00	0.0
0.25	0.0572
0.33	0.0938
0.50	0.1835
0.75	0.3140
1.00	0.4227
1.25	0.5076
1.50	0.5736
1.75	0.6254
2.00	0.6667
2.25	0.7002
2.50	0.7278
2.75	0.7510
3.00	0.7706
4.00	0.8259
5.00	0.8600
6.00	0.8830
7.00	0.8995
8.00	0.9120
9.00	0.9217
10.00	0.9295

**Table 6.8.** Variation of  $I_w$  with  $m$  and  $n$  ( $\mu_s = 0$ )

$m$	$n$								
	0.1	0.2	0.4	0.5	0.6	1.0	2.0	5.0	10.0
0.1	0.0031	0.0061	0.0110	0.0129	0.0144	0.0182	0.0211	0.0211	0.0223
0.2	0.0061	0.0118	0.0214	0.0251	0.0282	0.0357	0.0413	0.0434	0.0438
0.4	0.0110	0.0214	0.0390	0.0459	0.0516	0.0658	0.0768	0.0811	0.0847
0.5	0.0129	0.0251	0.0459	0.0541	0.0610	0.0781	0.0916	0.0969	0.0977
0.6	0.0144	0.0282	0.0516	0.0610	0.0687	0.0886	0.1044	0.1107	0.1117
1.0	0.0183	0.0357	0.0658	0.0781	0.0886	0.1161	0.1398	0.1491	0.1515
2.0	0.0211	0.0413	0.0768	0.0916	0.1044	0.1398	0.1743	0.1916	0.1948
5.0	0.0221	0.0435	0.0811	0.0969	0.1107	0.1499	0.1916	0.2184	0.2250
10.0	0.0223	0.0438	0.0817	0.0977	0.1117	0.1515	0.1948	0.2250	0.2341

where

$$m = \frac{B}{z}$$

$$n = \frac{L}{z}$$

or

$$\frac{\Delta\sigma}{q_o} = \frac{1}{2\pi} \left[ \cot^{-1} \sqrt{\eta^2 \left( \frac{1}{m^2} + \frac{1}{n^2} \right) + \eta^4 \left( \frac{1}{m^2 n^2} \right)} \right] = I_w \quad (6.39b)$$

Table 6.8 gives the variation of  $I_w$  with  $m$  and  $n$  (for  $\mu_s = 0$ ). Figure 6.21 also provides a plot of  $I_w$  (for  $\mu_s = 0$ ) for various values of  $m$  and  $n$ .

### Example 6.9

Solve Example 6.2 using Eq. (6.39). Assume  $\mu_s = 0$ .

#### Solution

From Example 6.2


$$m = 0.2$$

$$n = 0.4$$

$$\Delta\sigma = q_o(4I_w)$$

From Table 6.8, for  $m = 0.2$  and  $n = 0.4$ , the value of  $I_w \approx 0.0214$ . So

$$\Delta\sigma = (150)(4 \times 0.0214) = \mathbf{12.84 \text{ kN/m}^2}$$

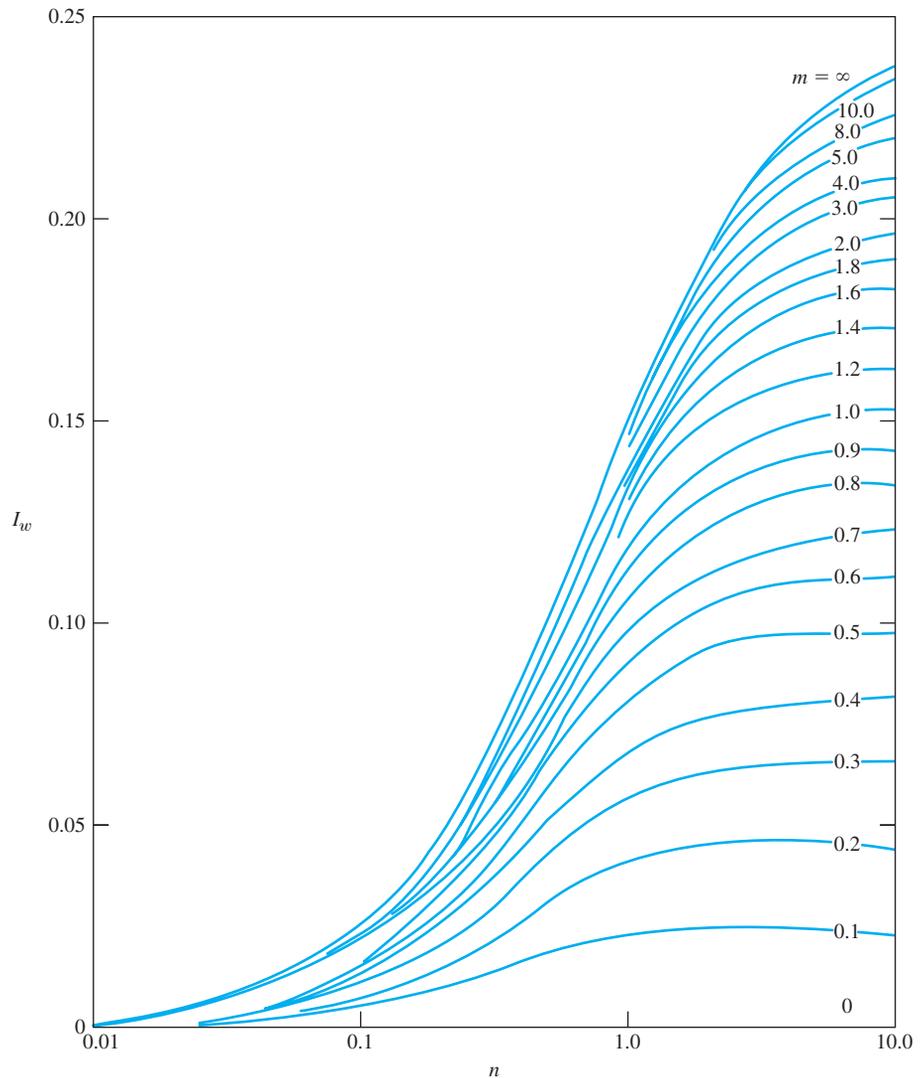

**Figure 6.21** Variation of  $I_w$  ( $\mu_s = 0$ ) [Eq. (6.39b)] for various values of  $m$  and  $n$

## Problems

- 6.1** A flexible circular area is subjected to a uniformly distributed load of  $150 \text{ kN/m}^2$  (Figure 6.2). The diameter of the load area is 2 m. Determine the stress increase in a soil mass at points located 3 m below the loaded area at  $r = 0, 0.4 \text{ m}, 0.8 \text{ m}$ , and 1 m. Use Boussinesq's solution.
- 6.2** Point loads of magnitude 100, 200, and 400 kN act at  $B, C$ , and  $D$ , respectively (Figure P6.2). Determine the increase in vertical stress at a depth of 6 m below point  $A$ . Use Boussinesq's equation.

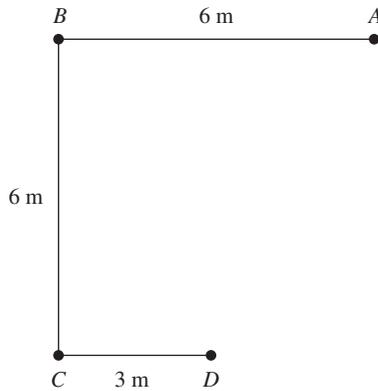


Figure P6.2

- 6.3 Refer to Figure P6.3. Determine the vertical stress increase  $\Delta\sigma$  at point A with the values  $q_1 = 90 \text{ kN/m}$ ,  $q_2 = 325 \text{ kN/m}$ ,  $x_1 = 4 \text{ m}$ ,  $x_2 = 2.5 \text{ m}$ , and  $z = 3 \text{ m}$ .

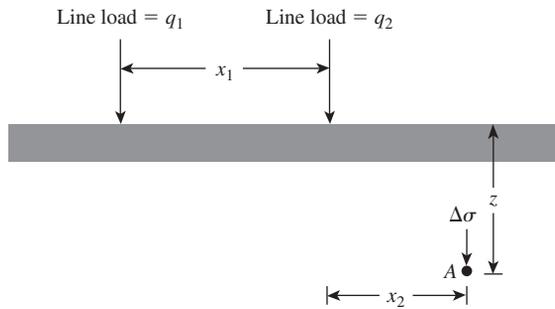


Figure P6.3

- 6.4 Refer to Figure P6.4. A strip load of  $q = 900 \text{ lb/ft}^2$  is applied over a width  $B = 36 \text{ ft}$ . Determine the increase in vertical stress at point A located  $z = 15 \text{ ft}$  below the surface. Given:  $x = 27 \text{ ft}$ .

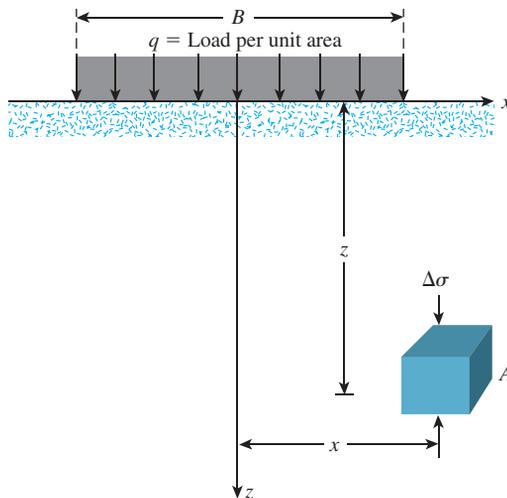


Figure P6.4

- 6.5 Refer to Figure 6.6, which shows a flexible rectangular area. Given:  $B_1 = 4$  ft,  $B_2 = 6$  ft,  $L_1 = 8$  ft, and  $L_2 = 10$  ft. If the area is subjected to a uniform load of  $3000$  lb/ft<sup>2</sup>, determine the stress increase at a depth of  $10$  ft located immediately below point  $O$ .
- 6.6 Repeat Problem 6.5 with  $B_1 = 4$  ft,  $B_2 = 10$  ft,  $L_1 = 8$  ft,  $L_2 = 12$  ft, and the uniform load on the flexible area =  $2500$  lb/ft<sup>2</sup>. Determine the stress increase below point  $O$  at a depth of  $20$  ft. Use Eq. (6.39) and  $\mu_s = 0$ .
- 6.7 Use Eq. (6.14) to determine the stress increase ( $\Delta\sigma$ ) at  $z = 10$  ft below the center of the area described in Problem 6.5.
- 6.8 Refer to Figure P6.8. Using the procedure outlined in Section 6.8, determine the average stress increase in the clay layer below the center of the foundation due to the net foundation load of  $50$  ton. [Use Eq. (6.28).]

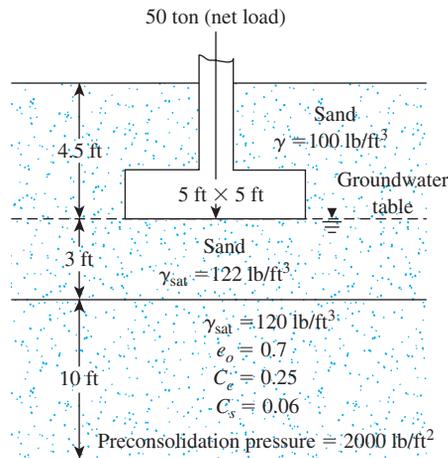


Figure P6.8

- 6.9 Solve Problem 6.8 using Eqs. (6.14) and (6.29).
- 6.10 Solve Problem 6.8 using Eqs. (6.18) and (6.29).
- 6.11 Figure P6.11 shows an embankment load on a silty clay soil layer. Determine the stress increase at points  $A$ ,  $B$ , and  $C$  that are located at a depth of  $5$  m below the ground surface.

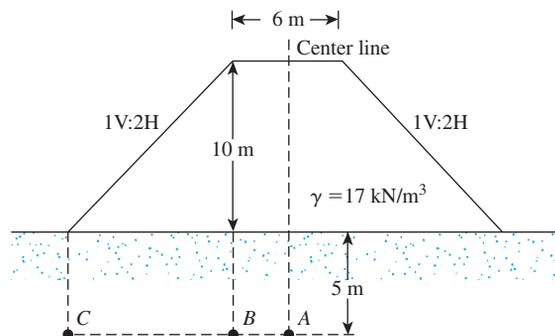


Figure P6.11

- 6.12** Refer to Problem 6.1. Using Eqs. (6.3) and (6.29), estimate the average stress increase ( $\Delta\sigma_{av}$ ) below the center of the loaded area between depths of 3 m and 6 m.
- 6.13** Redo Problem 6.12 using Figure 6.15.

## References

- BOUSSINESQ, J. (1883). *Application des Potentials à L'Étude de L'Équilibre et du Mouvement des Solides Élastiques*, Gauthier-Villars, Paris.
- DAS, B. (2014). *Advanced Soil Mechanics*, 4th ed., CRC Press, Boca Raton, FL.
- GRIFFITHS, D. V. (1984). "A Chart for Estimating the Average Vertical Stress Increase in an Elastic Foundation below a Uniformly Loaded Rectangular Area," *Canadian Geotechnical Journal*, Vol. 21, No. 4, pp. 710–713.
- NEWMARK, N. M. (1935). *Simplified Computation of Vertical Pressure in Elastic Foundation*, Circular 24, University of Illinois Engineering Experiment Station, Urbana, IL.
- OSTERBERG, J. O. (1957). "Influence Values for Vertical Stresses in Semi-Infinite Mass Due to Embankment Loading," *Proceedings, Fourth International Conference on Soil Mechanics and Foundation Engineering*, London, Vol. 1, pp. 393–396.
- SAIKA, A. (2012). "Vertical Stress Averaging over a Layer Depth Down the Axis of Symmetry of Uniformly Loaded Circular Regime: An Analytical-cum-Graphical Solution," *International Journal of Geotechnical Engineering*, Vol. 6, No. 3, pp. 359–363.
- WESTERGAARD, H. M. (1938). "A Problem of Elasticity Suggested by a Problem in Soil Mechanics: Soft Material Reinforced by Numerous Strong Horizontal Sheets," *Contributions to the Mechanics of Solids, Dedicated to Stephen Timoshenko*, pp. 268–277, MacMillan, New York.

# 7 Settlement of Shallow Foundations

## 7.1 Introduction

The settlement of a shallow foundation can be divided into two major categories: (a) elastic, or immediate, settlement and (b) consolidation settlement. Immediate, or elastic, settlement of a foundation takes place during or immediately after the construction of the structure. Consolidation settlement occurs over time. Pore water is extruded from the void spaces of saturated clayey soils submerged in water. The total settlement of a foundation is the sum of the elastic settlement and the consolidation settlement.


Consolidation settlement comprises two phases: *primary* and *secondary*. The fundamentals of primary consolidation settlement were explained in detail in Chapter 2. Secondary consolidation settlement occurs after the completion of primary consolidation caused by slippage and reorientation of soil particles under a sustained load. Primary consolidation settlement is more significant than secondary settlement in inorganic clays and silty soils. However, in organic soils, secondary consolidation settlement is more significant.

This chapter presents various theories presently available for estimating of elastic and consolidation settlement of shallow foundations.

## 7.2 Elastic Settlement of Shallow Foundation on Saturated Clay ( $\mu_s = 0.5$ )

Janbu et al. (1956) proposed an equation for evaluating the average settlement of flexible foundations on saturated clay soils (Poisson's ratio,  $\mu_s = 0.5$ ). Referring to Figure 7.1, this relationship can be expressed as

$$S_e = A_1 A_2 \frac{q_o B}{E_s} \quad (7.1)$$

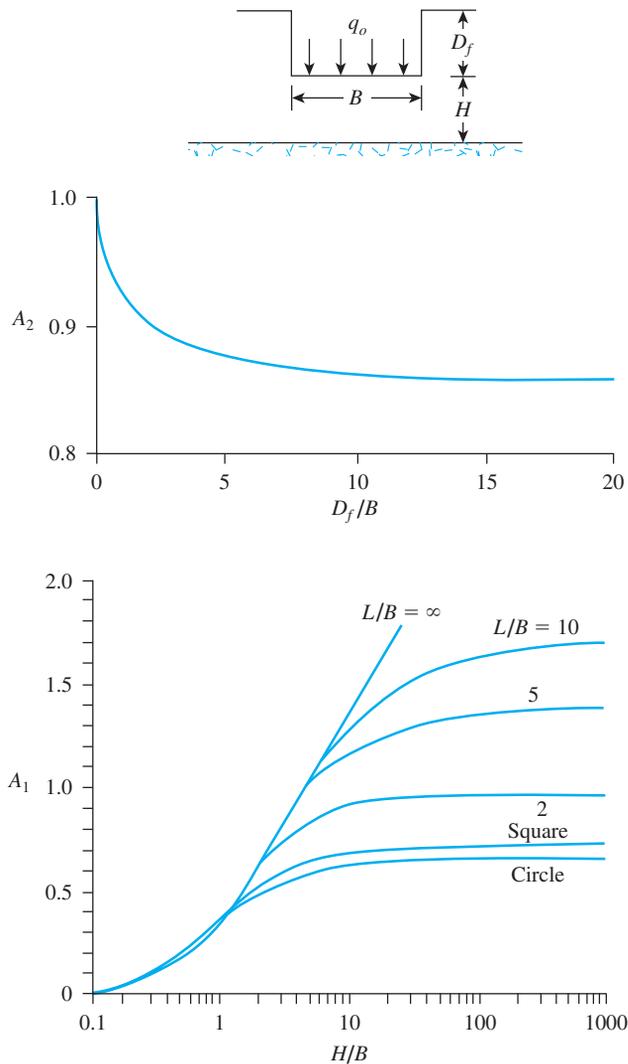

**Figure 7.1** Values of  $A_1$  and  $A_2$  for elastic settlement calculation—Eq. (7.1) (After Christian and Carrier, 1978) (Based on Christian, J. T. and Carrier, W. D. (1978). “Janbu, Bjerrum and Kjaernsli’s chart reinterpreted,” *Canadian Geotechnical Journal*, Vol. 15, pp. 123–128.)

where

$$A_1 = f(H/B, L/B)$$

$$A_2 = f(D_f/B)$$

$L$  = length of the foundation

$B$  = width of the foundation

$D_f$  = depth of the foundation

$H$  = depth of the bottom of the foundation to a rigid layer

$q_o$  = net load per unit area of the foundation

**Table 7.1** Range of  $\beta$  for Saturated Clay [Eq. (7.2)]<sup>a</sup>

Plasticity Index	$\beta$				
	OCR = 1	OCR = 2	OCR = 3	OCR = 4	OCR = 5
<30	1500–600	1380–500	1200–580	950–380	730–300
30 to 50	600–300	550–270	580–220	380–180	300–150
>50	300–150	270–120	220–100	180–90	150–75

<sup>a</sup>Based on Duncan and Buchignani (1976)

Christian and Carrier (1978) modified the values of  $A_1$  and  $A_2$  to some extent and is presented in Figure 7.1.

The modulus of elasticity ( $E_s$ ) for saturated clays can, in general, be given as

$$E_s = \beta c_u \quad (7.2)$$

where  $c_u$  = undrained shear strength.

The parameter  $\beta$  is primarily a function of the plasticity index and overconsolidation ratio (OCR). Table 7.1 provides a general range for  $\beta$  based on that proposed by Duncan and Buchignani (1976). In any case, proper judgment should be used in selecting the magnitude of  $\beta$ .

### Example 7.1

Consider a shallow foundation  $2 \text{ m} \times 1 \text{ m}$  in plan in a saturated clay layer. A rigid rock layer is located 8 m below the bottom of the foundation. Given:

Foundation:  $D_f = 1 \text{ m}$ ,  $q_o = 120 \text{ kN/m}^2$

Clay:  $c_u = 150 \text{ kN/m}^2$ , OCR = 2, and Plasticity index, PI = 35

Estimate the elastic settlement of the foundation.

#### Solution

From Eq. (7.1),

$$S_e = A_1 A_2 \frac{q_o B}{E_s}$$

Given:

$$\frac{L}{B} = \frac{2}{1} = 2$$

$$\frac{D_f}{B} = \frac{1}{1} = 1$$

$$\frac{H}{B} = \frac{8}{1} = 8$$

$$E_s = \beta c_u$$

For OCR = 2 and PI = 35, the value of  $\beta \approx 480$  (Table 7.1). Hence,

$$E_s = (480)(150) = 72,000 \text{ kN/m}^2$$

Also, from Figure 7.1,  $A_1 = 0.9$  and  $A_2 = 0.92$ . Hence,

$$S_e = A_1 A_2 \frac{q_o B}{E_s} = (0.9)(0.92) \frac{(120)(1)}{72,000} = 0.00138 \text{ m} = \mathbf{1.38 \text{ mm}}$$

## Elastic Settlement in Granular Soil

### 7.3 Settlement Based on the Theory of Elasticity

The elastic settlement of a shallow foundation can be estimated by using the theory of elasticity. From Hooke's law, as applied to Figure 7.2, we obtain

$$S_e = \int_0^H \varepsilon_z dz = \frac{1}{E_s} \int_0^H (\Delta\sigma_z - \mu_s \Delta\sigma_x - \mu_s \Delta\sigma_y) dz \quad (7.3)$$

where

$S_e$  = elastic settlement

$E_s$  = modulus of elasticity of soil

$H$  = thickness of the soil layer

$\mu_s$  = Poisson's ratio of the soil

$\Delta\sigma_x$ ,  $\Delta\sigma_y$ ,  $\Delta\sigma_z$  = stress increase due to the net applied foundation load in the  $x$ ,  $y$ , and  $z$  directions, respectively

Theoretically, if the foundation is perfectly flexible (see Figure 7.3 and Bowles, 1987), the settlement may be expressed as

$$S_e = q_o(\alpha B') \frac{1 - \mu_s^2}{E_s} I_s I_f \quad (7.4)$$


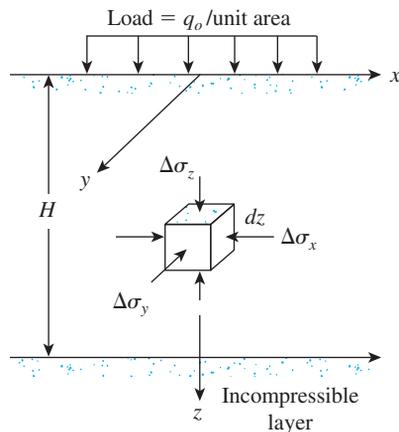


Figure 7.2 Elastic settlement of shallow foundation

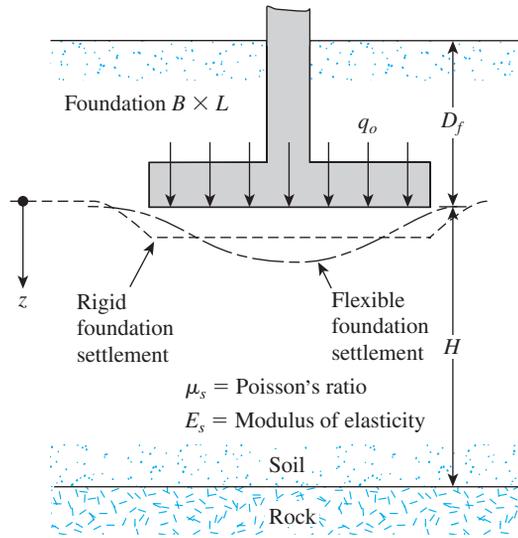

**Figure 7.3** Elastic settlement of flexible and rigid foundations

where

$q_o$  = net applied pressure on the foundation

$\mu_s$  = Poisson's ratio of soil

$E_s$  = average modulus of elasticity of the soil under the foundation, measured from  $z = 0$  to about  $z = 5B$

$B' = B/2$  for center of foundation

=  $B$  for corner of foundation

$I_s$  = shape factor (Steinbrenner, 1934)

$$= F_1 + \frac{1 - 2\mu_s}{1 - \mu_s} F_2 \quad (7.5)$$

$$F_1 = \frac{1}{\pi}(A_0 + A_1) \quad (7.6)$$

$$F_2 = \frac{n'}{2\pi} \tan^{-1} A_2 \quad (7.7)$$

$$A_0 = m' \ln \frac{\left(1 + \sqrt{m'^2 + 1}\right) \sqrt{m'^2 + n'^2}}{m' \left(1 + \sqrt{m'^2 + n'^2 + 1}\right)} \quad (7.8)$$

$$A_1 = \ln \frac{\left(m' + \sqrt{m'^2 + 1}\right) \sqrt{1 + n'^2}}{m' + \sqrt{m'^2 + n'^2 + 1}} \quad (7.9)$$

$$A_2 = \frac{m'}{n'\sqrt{m'^2 + n'^2 + 1}} \quad (7.10)$$

$$I_f = \text{depth factor (Fox, 1948)} = f\left(\frac{D_f}{B}, \mu_s, \text{ and } \frac{L}{B}\right) \quad (7.11)$$

$\alpha$  = a factor that depends on the location on the foundation where settlement is being calculated

To calculate settlement at the *center* of the foundation, we use

$$\alpha = 4$$

$$m' = \frac{L}{B}$$

and

$$n' = \frac{H}{\left(\frac{B}{2}\right)}$$

To calculate settlement at a *corner* of the foundation,

$$\alpha = 1$$

$$m' = \frac{L}{B}$$

and

$$n' = \frac{H}{B}$$

The variations of  $F_1$  and  $F_2$  [see Eqs. (7.6) and (7.7)] with  $m'$  and  $n'$  are given in Tables 7.2 and 7.3. Also, the variation of  $I_f$  with  $D_f/B$  (for  $\mu_s = 0.3, 0.4,$  and  $0.5$ ) is given in Table 7.4. These values are also given in more detailed form by Bowles (1987).

The elastic settlement of a *rigid foundation* can be estimated as

$$S_{e(\text{rigid})} \approx 0.93S_{e(\text{flexible, center})} \quad (7.12)$$

Due to the nonhomogeneous nature of soil deposits, the magnitude of  $E_s$  may vary with depth. For that reason, Bowles (1987) recommended using a weighted average of  $E_s$  in Eq. (7.4), or

$$E_s = \frac{\sum E_{s(i)} \Delta z}{\bar{z}} \quad (7.13)$$

where

$E_{s(i)}$  = soil modulus of elasticity within a depth  $\Delta z$

$\bar{z}$  =  $H$  or  $5B$ , whichever is smaller

Table 7.2 Variation of  $F_1$  with  $m'$  and  $n'$ 

$n'$	$m'$									
	1.0	1.2	1.4	1.6	1.8	2.0	2.5	3.0	3.5	4.0
0.25	0.014	0.013	0.012	0.011	0.011	0.011	0.010	0.010	0.010	0.010
0.50	0.049	0.046	0.044	0.042	0.041	0.040	0.038	0.038	0.037	0.037
0.75	0.095	0.090	0.087	0.084	0.082	0.080	0.077	0.076	0.074	0.074
1.00	0.142	0.138	0.134	0.130	0.127	0.125	0.121	0.118	0.116	0.115
1.25	0.186	0.183	0.179	0.176	0.173	0.170	0.165	0.161	0.158	0.157
1.50	0.224	0.224	0.222	0.219	0.216	0.213	0.207	0.203	0.199	0.197
1.75	0.257	0.259	0.259	0.258	0.255	0.253	0.247	0.242	0.238	0.235
2.00	0.285	0.290	0.292	0.292	0.291	0.289	0.284	0.279	0.275	0.271
2.25	0.309	0.317	0.321	0.323	0.323	0.322	0.317	0.313	0.308	0.305
2.50	0.330	0.341	0.347	0.350	0.351	0.351	0.348	0.344	0.340	0.336
2.75	0.348	0.361	0.369	0.374	0.377	0.378	0.377	0.373	0.369	0.365
3.00	0.363	0.379	0.389	0.396	0.400	0.402	0.402	0.400	0.396	0.392
3.25	0.376	0.394	0.406	0.415	0.420	0.423	0.426	0.424	0.421	0.418
3.50	0.388	0.408	0.422	0.431	0.438	0.442	0.447	0.447	0.444	0.441
3.75	0.399	0.420	0.436	0.447	0.454	0.460	0.467	0.458	0.466	0.464
4.00	0.408	0.431	0.448	0.460	0.469	0.476	0.484	0.487	0.486	0.484
4.25	0.417	0.440	0.458	0.472	0.481	0.484	0.495	0.514	0.515	0.515
4.50	0.424	0.450	0.469	0.484	0.495	0.503	0.516	0.521	0.522	0.522
4.75	0.431	0.458	0.478	0.494	0.506	0.515	0.530	0.536	0.539	0.539
5.00	0.437	0.465	0.487	0.503	0.516	0.526	0.543	0.551	0.554	0.554
5.25	0.443	0.472	0.494	0.512	0.526	0.537	0.555	0.564	0.568	0.569
5.50	0.448	0.478	0.501	0.520	0.534	0.546	0.566	0.576	0.581	0.584
5.75	0.453	0.483	0.508	0.527	0.542	0.555	0.576	0.588	0.594	0.597
6.00	0.457	0.489	0.514	0.534	0.550	0.563	0.585	0.598	0.606	0.609
6.25	0.461	0.493	0.519	0.540	0.557	0.570	0.594	0.609	0.617	0.621
6.50	0.465	0.498	0.524	0.546	0.563	0.577	0.603	0.618	0.627	0.632
6.75	0.468	0.502	0.529	0.551	0.569	0.584	0.610	0.627	0.637	0.643
7.00	0.471	0.506	0.533	0.556	0.575	0.590	0.618	0.635	0.646	0.653
7.25	0.474	0.509	0.538	0.561	0.580	0.596	0.625	0.643	0.655	0.662
7.50	0.477	0.513	0.541	0.565	0.585	0.601	0.631	0.650	0.663	0.671
7.75	0.480	0.516	0.545	0.569	0.589	0.606	0.637	0.658	0.671	0.680
8.00	0.482	0.519	0.549	0.573	0.594	0.611	0.643	0.664	0.678	0.688
8.25	0.485	0.522	0.552	0.577	0.598	0.615	0.648	0.670	0.685	0.695
8.50	0.487	0.524	0.555	0.580	0.601	0.619	0.653	0.676	0.692	0.703
8.75	0.489	0.527	0.558	0.583	0.605	0.623	0.658	0.682	0.698	0.710
9.00	0.491	0.529	0.560	0.587	0.609	0.627	0.663	0.687	0.705	0.716
9.25	0.493	0.531	0.563	0.589	0.612	0.631	0.667	0.693	0.710	0.723
9.50	0.495	0.533	0.565	0.592	0.615	0.634	0.671	0.697	0.716	0.719
9.75	0.496	0.536	0.568	0.595	0.618	0.638	0.675	0.702	0.721	0.735
10.00	0.498	0.537	0.570	0.597	0.621	0.641	0.679	0.707	0.726	0.740
20.00	0.529	0.575	0.614	0.647	0.677	0.702	0.756	0.797	0.830	0.858
50.00	0.548	0.598	0.640	0.678	0.711	0.740	0.803	0.853	0.895	0.931
100.00	0.555	0.605	0.649	0.688	0.722	0.753	0.819	0.872	0.918	0.956

(Continued)

Table 7.2 (Continued)

$n'$	$m'$									
	4.5	5.0	6.0	7.0	8.0	9.0	10.0	25.0	50.0	100.0
0.25	0.010	0.010	0.010	0.010	0.010	0.010	0.010	0.010	0.010	0.010
0.50	0.036	0.036	0.036	0.036	0.036	0.036	0.036	0.036	0.036	0.036
0.75	0.073	0.073	0.072	0.072	0.072	0.072	0.071	0.071	0.071	0.071
1.00	0.114	0.113	0.112	0.112	0.112	0.111	0.111	0.110	0.110	0.110
1.25	0.155	0.154	0.153	0.152	0.152	0.151	0.151	0.150	0.150	0.150
1.50	0.195	0.194	0.192	0.191	0.190	0.190	0.189	0.188	0.188	0.188
1.75	0.233	0.232	0.229	0.228	0.227	0.226	0.225	0.223	0.223	0.223
2.00	0.269	0.267	0.264	0.262	0.261	0.260	0.259	0.257	0.256	0.256
2.25	0.302	0.300	0.296	0.294	0.293	0.291	0.291	0.287	0.287	0.287
2.50	0.333	0.331	0.327	0.324	0.322	0.321	0.320	0.316	0.315	0.315
2.75	0.362	0.359	0.355	0.352	0.350	0.348	0.347	0.343	0.342	0.342
3.00	0.389	0.386	0.382	0.378	0.376	0.374	0.373	0.368	0.367	0.367
3.25	0.415	0.412	0.407	0.403	0.401	0.399	0.397	0.391	0.390	0.390
3.50	0.438	0.435	0.430	0.427	0.424	0.421	0.420	0.413	0.412	0.411
3.75	0.461	0.458	0.453	0.449	0.446	0.443	0.441	0.433	0.432	0.432
4.00	0.482	0.479	0.474	0.470	0.466	0.464	0.462	0.453	0.451	0.451
4.25	0.516	0.496	0.484	0.473	0.471	0.471	0.470	0.468	0.462	0.460
4.50	0.520	0.517	0.513	0.508	0.505	0.502	0.499	0.489	0.487	0.487
4.75	0.537	0.535	0.530	0.526	0.523	0.519	0.517	0.506	0.504	0.503
5.00	0.554	0.552	0.548	0.543	0.540	0.536	0.534	0.522	0.519	0.519
5.25	0.569	0.568	0.564	0.560	0.556	0.553	0.550	0.537	0.534	0.534
5.50	0.584	0.583	0.579	0.575	0.571	0.568	0.585	0.551	0.549	0.548
5.75	0.597	0.597	0.594	0.590	0.586	0.583	0.580	0.565	0.583	0.562
6.00	0.611	0.610	0.608	0.604	0.601	0.598	0.595	0.579	0.576	0.575
6.25	0.623	0.623	0.621	0.618	0.615	0.611	0.608	0.592	0.589	0.588
6.50	0.635	0.635	0.634	0.631	0.628	0.625	0.622	0.605	0.601	0.600
6.75	0.646	0.647	0.646	0.644	0.641	0.637	0.634	0.617	0.613	0.612
7.00	0.656	0.658	0.658	0.656	0.653	0.650	0.647	0.628	0.624	0.623
7.25	0.666	0.669	0.669	0.668	0.665	0.662	0.659	0.640	0.635	0.634
7.50	0.676	0.679	0.680	0.679	0.676	0.673	0.670	0.651	0.646	0.645
7.75	0.685	0.688	0.690	0.689	0.687	0.684	0.681	0.661	0.656	0.655
8.00	0.694	0.697	0.700	0.700	0.698	0.695	0.692	0.672	0.666	0.665
8.25	0.702	0.706	0.710	0.710	0.708	0.705	0.703	0.682	0.676	0.675
8.50	0.710	0.714	0.719	0.719	0.718	0.715	0.713	0.692	0.686	0.684
8.75	0.717	0.722	0.727	0.728	0.727	0.725	0.723	0.701	0.695	0.693
9.00	0.725	0.730	0.736	0.737	0.736	0.735	0.732	0.710	0.704	0.702
9.25	0.731	0.737	0.744	0.746	0.745	0.744	0.742	0.719	0.713	0.711
9.50	0.738	0.744	0.752	0.754	0.754	0.753	0.751	0.728	0.721	0.719
9.75	0.744	0.751	0.759	0.762	0.762	0.761	0.759	0.737	0.729	0.727
10.00	0.750	0.758	0.766	0.770	0.770	0.770	0.768	0.745	0.738	0.735
20.00	0.878	0.896	0.925	0.945	0.959	0.969	0.977	0.982	0.965	0.957
50.00	0.962	0.989	1.034	1.070	1.100	1.125	1.146	1.265	1.279	1.261
100.00	0.990	1.020	1.072	1.114	1.150	1.182	1.209	1.408	1.489	1.499

**Table 7.3** Variation of  $F_2$  with  $m'$  and  $n'$ 

$n'$	$m'$									
	1.0	1.2	1.4	1.6	1.8	2.0	2.5	3.0	3.5	4.0
0.25	0.049	0.050	0.051	0.051	0.051	0.052	0.052	0.052	0.052	0.052
0.50	0.074	0.077	0.080	0.081	0.083	0.084	0.086	0.086	0.0878	0.087
0.75	0.083	0.089	0.093	0.097	0.099	0.101	0.104	0.106	0.107	0.108
1.00	0.083	0.091	0.098	0.102	0.106	0.109	0.114	0.117	0.119	0.120
1.25	0.080	0.089	0.096	0.102	0.107	0.111	0.118	0.122	0.125	0.127
1.50	0.075	0.084	0.093	0.099	0.105	0.110	0.118	0.124	0.128	0.130
1.75	0.069	0.079	0.088	0.095	0.101	0.107	0.117	0.123	0.128	0.131
2.00	0.064	0.074	0.083	0.090	0.097	0.102	0.114	0.121	0.127	0.131
2.25	0.059	0.069	0.077	0.085	0.092	0.098	0.110	0.119	0.125	0.130
2.50	0.055	0.064	0.073	0.080	0.087	0.093	0.106	0.115	0.122	0.127
2.75	0.051	0.060	0.068	0.076	0.082	0.089	0.102	0.111	0.119	0.125
3.00	0.048	0.056	0.064	0.071	0.078	0.084	0.097	0.108	0.116	0.122
3.25	0.045	0.053	0.060	0.067	0.074	0.080	0.093	0.104	0.112	0.119
3.50	0.042	0.050	0.057	0.064	0.070	0.076	0.089	0.100	0.109	0.116
3.75	0.040	0.047	0.054	0.060	0.067	0.073	0.086	0.096	0.105	0.113
4.00	0.037	0.044	0.051	0.057	0.063	0.069	0.082	0.093	0.102	0.110
4.25	0.036	0.042	0.049	0.055	0.061	0.066	0.079	0.090	0.099	0.107
4.50	0.034	0.040	0.046	0.052	0.058	0.063	0.076	0.086	0.096	0.104
4.75	0.032	0.038	0.044	0.050	0.055	0.061	0.073	0.083	0.093	0.101
5.00	0.031	0.036	0.042	0.048	0.053	0.058	0.070	0.080	0.090	0.098
5.25	0.029	0.035	0.040	0.046	0.051	0.056	0.067	0.078	0.087	0.095
5.50	0.028	0.033	0.039	0.044	0.049	0.054	0.065	0.075	0.084	0.092
5.75	0.027	0.032	0.037	0.042	0.047	0.052	0.063	0.073	0.082	0.090
6.00	0.026	0.031	0.036	0.040	0.045	0.050	0.060	0.070	0.079	0.087
6.25	0.025	0.030	0.034	0.039	0.044	0.048	0.058	0.068	0.077	0.085
6.50	0.024	0.029	0.033	0.038	0.042	0.046	0.056	0.066	0.075	0.083
6.75	0.023	0.028	0.032	0.036	0.041	0.045	0.055	0.064	0.073	0.080
7.00	0.022	0.027	0.031	0.035	0.039	0.043	0.053	0.062	0.071	0.078
7.25	0.022	0.026	0.030	0.034	0.038	0.042	0.051	0.060	0.069	0.076
7.50	0.021	0.025	0.029	0.033	0.037	0.041	0.050	0.059	0.067	0.074
7.75	0.020	0.024	0.028	0.032	0.036	0.039	0.048	0.057	0.065	0.072
8.00	0.020	0.023	0.027	0.031	0.035	0.038	0.047	0.055	0.063	0.071
8.25	0.019	0.023	0.026	0.030	0.034	0.037	0.046	0.054	0.062	0.069
8.50	0.018	0.022	0.026	0.029	0.033	0.036	0.045	0.053	0.060	0.067
8.75	0.018	0.021	0.025	0.028	0.032	0.035	0.043	0.051	0.059	0.066
9.00	0.017	0.021	0.024	0.028	0.031	0.034	0.042	0.050	0.057	0.064
9.25	0.017	0.020	0.024	0.027	0.030	0.033	0.041	0.049	0.056	0.063
9.50	0.017	0.020	0.023	0.026	0.029	0.033	0.040	0.048	0.055	0.061
9.75	0.016	0.019	0.023	0.026	0.029	0.032	0.039	0.047	0.054	0.060
10.00	0.016	0.019	0.022	0.025	0.028	0.031	0.038	0.046	0.052	0.059
20.00	0.008	0.010	0.011	0.013	0.014	0.016	0.020	0.024	0.027	0.031
50.00	0.003	0.004	0.004	0.005	0.006	0.006	0.008	0.010	0.011	0.013
100.00	0.002	0.002	0.002	0.003	0.003	0.003	0.004	0.005	0.006	0.006

(Continued)

Table 7.3 (Continued)


$n'$	$m'$									
	4.5	5.0	6.0	7.0	8.0	9.0	10.0	25.0	50.0	100.0
0.25	0.053	0.053	0.053	0.053	0.053	0.053	0.053	0.053	0.053	0.053
0.50	0.087	0.087	0.088	0.088	0.088	0.088	0.088	0.088	0.088	0.088
0.75	0.109	0.109	0.109	0.110	0.110	0.110	0.110	0.111	0.111	0.111
1.00	0.121	0.122	0.123	0.123	0.124	0.124	0.124	0.125	0.125	0.125
1.25	0.128	0.130	0.131	0.132	0.132	0.133	0.133	0.134	0.134	0.134
1.50	0.132	0.134	0.136	0.137	0.138	0.138	0.139	0.140	0.140	0.140
1.75	0.134	0.136	0.138	0.140	0.141	0.142	0.142	0.144	0.144	0.145
2.00	0.134	0.136	0.139	0.141	0.143	0.144	0.145	0.147	0.147	0.148
2.25	0.133	0.136	0.140	0.142	0.144	0.145	0.146	0.149	0.150	0.150
2.50	0.132	0.135	0.139	0.142	0.144	0.146	0.147	0.151	0.151	0.151
2.75	0.130	0.133	0.138	0.142	0.144	0.146	0.147	0.152	0.152	0.153
3.00	0.127	0.131	0.137	0.141	0.144	0.145	0.147	0.152	0.153	0.154
3.25	0.125	0.129	0.135	0.140	0.143	0.145	0.147	0.153	0.154	0.154
3.50	0.122	0.126	0.133	0.138	0.142	0.144	0.146	0.153	0.155	0.155
3.75	0.119	0.124	0.131	0.137	0.141	0.143	0.145	0.154	0.155	0.155
4.00	0.116	0.121	0.129	0.135	0.139	0.142	0.145	0.154	0.155	0.156
4.25	0.113	0.119	0.127	0.133	0.138	0.141	0.144	0.154	0.156	0.156
4.50	0.110	0.116	0.125	0.131	0.136	0.140	0.143	0.154	0.156	0.156
4.75	0.107	0.113	0.123	0.130	0.135	0.139	0.142	0.154	0.156	0.157
5.00	0.105	0.111	0.120	0.128	0.133	0.137	0.140	0.154	0.156	0.157
5.25	0.102	0.108	0.118	0.126	0.131	0.136	0.139	0.154	0.156	0.157
5.50	0.099	0.106	0.116	0.124	0.130	0.134	0.138	0.154	0.156	0.157
5.75	0.097	0.103	0.113	0.122	0.128	0.133	0.136	0.154	0.157	0.157
6.00	0.094	0.101	0.111	0.120	0.126	0.131	0.135	0.153	0.157	0.157
6.25	0.092	0.098	0.109	0.118	0.124	0.129	0.134	0.153	0.157	0.158
6.50	0.090	0.096	0.107	0.116	0.122	0.128	0.132	0.153	0.157	0.158
6.75	0.087	0.094	0.105	0.114	0.121	0.126	0.131	0.153	0.157	0.158
7.00	0.085	0.092	0.103	0.112	0.119	0.125	0.129	0.152	0.157	0.158
7.25	0.083	0.090	0.101	0.110	0.117	0.123	0.128	0.152	0.157	0.158
7.50	0.081	0.088	0.099	0.108	0.115	0.121	0.126	0.152	0.156	0.158
7.75	0.079	0.086	0.097	0.106	0.114	0.120	0.125	0.151	0.156	0.158
8.00	0.077	0.084	0.095	0.104	0.112	0.118	0.124	0.151	0.156	0.158
8.25	0.076	0.082	0.093	0.102	0.110	0.117	0.122	0.150	0.156	0.158
8.50	0.074	0.080	0.091	0.101	0.108	0.115	0.121	0.150	0.156	0.158
8.75	0.072	0.078	0.089	0.099	0.107	0.114	0.119	0.150	0.156	0.158
9.00	0.071	0.077	0.088	0.097	0.105	0.112	0.118	0.149	0.156	0.158
9.25	0.069	0.075	0.086	0.096	0.104	0.110	0.116	0.149	0.156	0.158
9.50	0.068	0.074	0.085	0.094	0.102	0.109	0.115	0.148	0.156	0.158
9.75	0.066	0.072	0.083	0.092	0.100	0.107	0.113	0.148	0.156	0.158
10.00	0.065	0.071	0.082	0.091	0.099	0.106	0.112	0.147	0.156	0.158
20.00	0.035	0.039	0.046	0.053	0.059	0.065	0.071	0.124	0.148	0.156
50.00	0.014	0.016	0.019	0.022	0.025	0.028	0.031	0.071	0.113	0.142
100.00	0.007	0.008	0.010	0.011	0.013	0.014	0.016	0.039	0.071	0.113

**Table 7.4** Variation of  $I_f$  with  $D_f/B$ ,  $B/L$ , and  $\mu_s$ 

$\mu_s$	$D_f/B$	$B/L$		
		0.2	0.5	1.0
0.3	0.2	0.95	0.93	0.90
	0.4	0.90	0.86	0.81
	0.6	0.85	0.80	0.74
	1.0	0.78	0.71	0.65
0.4	0.2	0.97	0.96	0.93
	0.4	0.93	0.89	0.85
	0.6	0.89	0.84	0.78
	1.0	0.82	0.75	0.69
0.5	0.2	0.99	0.98	0.96
	0.4	0.95	0.93	0.89
	0.6	0.92	0.87	0.82
	1.0	0.85	0.79	0.72

**Example 7.2**

A rigid shallow foundation  $1\text{ m} \times 2\text{ m}$  is shown in Figure 7.4. Calculate the elastic settlement at the center of the foundation.

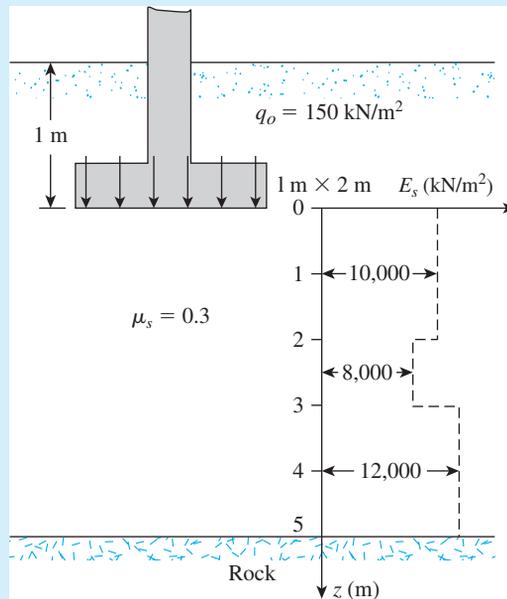**Figure 7.4** Elastic settlement below the center of a foundation

**Solution**

We are given that  $B = 1$  m and  $L = 2$  m. Note that  $\bar{z} = 5$  m  $= 5B$ . From Eq. (7.13)

$$E_s = \frac{\sum E_{s(i)} \Delta z}{\bar{z}}$$

$$= \frac{(10,000)(2) + (8,000)(1) + (12,000)(2)}{5} = 10,400 \text{ kN/m}^2$$

For the center of the foundation,

$$\alpha = 4$$

$$m' = \frac{L}{B} = \frac{2}{1} = 2$$

and

$$n' = \frac{H}{\left(\frac{B}{2}\right)} = \frac{5}{\left(\frac{1}{2}\right)} = 10$$

From Tables 7.2 and 7.3,  $F_1 = 0.641$  and  $F_2 = 0.031$ . From Eq. (7.5),

$$I_s = F_1 + \frac{2 - \mu_s}{1 - \mu_s} F_2$$

$$= 0.641 + \frac{2 - 0.3}{1 - 0.3} (0.031) = 0.716$$

Again,  $D_f/B = 1/1 = 1$ ,  $B/L = 0.5$ , and  $\mu_s = 0.3$ . From Table 7.4,  $I_f = 0.71$ .

Hence,

$$S_{e(\text{flexible})} = q_0(\alpha B') \frac{1 - \mu_s^2}{E_s} I_s I_f$$

$$= (150) \left( 4 \times \frac{1}{2} \right) \left( \frac{1 - 0.3^2}{10,400} \right) (0.716)(0.71) = 0.0133 \text{ m} = 13.3 \text{ mm}$$

Since the foundation is rigid, from Eq.(7.12) we obtain

$$S_{e(\text{rigid})} = (0.93)(13.3) = \mathbf{12.4 \text{ mm}}$$

## 7.4 Improved Equation for Elastic Settlement

In 1999, Mayne and Poulos presented an improved formula for calculating the elastic settlement of foundations. The formula takes into account the rigidity of the foundation, the depth of embedment of the foundation, the increase in the modulus of elasticity of

the soil with depth, and the location of rigid layers at a limited depth. To use Mayne and Poulos's equation, one needs to determine the equivalent diameter  $B_e$  of a rectangular foundation, or

$$B_e = \sqrt{\frac{4BL}{\pi}} \quad (7.14)$$

where

$B$  = width of foundation

$L$  = length of foundation

For circular foundations,

$$B_e = B \quad (7.15)$$


where  $B$  = diameter of foundation.

Figure 7.5 shows a foundation with an equivalent diameter  $B_e$  located at a depth  $D_f$  below the ground surface. Let the thickness of the foundation be  $t$  and the modulus of elasticity of the foundation material be  $E_f$ . A rigid layer is located at a depth  $H$  below the bottom of the foundation. The modulus of elasticity of the compressible soil layer can be given as


$$E_s = E_o + kz \quad (7.16)$$

With the preceding parameters defined, the elastic settlement below the center of the foundation is

$$S_e = \frac{q_o B_e I_G I_F I_E}{E_o} (1 - \mu_s^2) \quad (7.17)$$

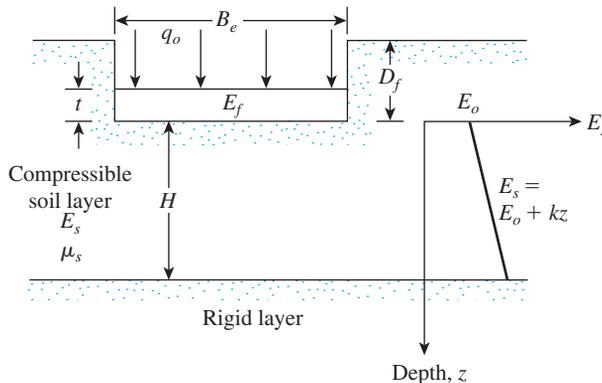

**Figure 7.5** Improved equation for calculating elastic settlement: general parameters

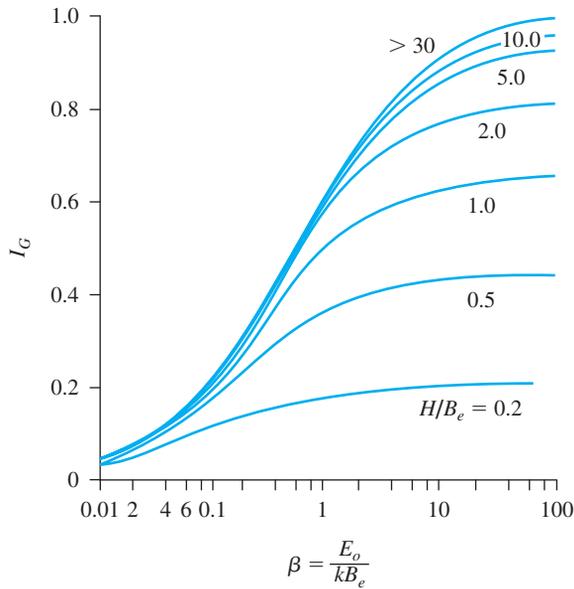
 Figure 7.6 Variation of  $I_G$  with  $\beta$ 

where

$I_G$  = influence factor for the variation of  $E_s$  with depth

$$= f\left(\beta = \frac{E_o}{kB_e}, \frac{H}{B_e}\right)$$

$I_F$  = foundation rigidity correction factor

$I_E$  = foundation embedment correction factor


Figure 7.6 shows the variation of  $I_G$  with  $\beta = E_o/kB_e$  and  $H/B_e$ . The foundation rigidity correction factor can be expressed as

$$I_F = \frac{\pi}{4} + \frac{1}{4.6 + 10 \left( \frac{E_f}{E_o + \frac{B_e k}{2}} \right) \left( \frac{2t}{B_e} \right)^3} \quad (7.18)$$


Similarly, the embedment correction factor is

$$I_E = 1 - \frac{1}{3.5 \exp(1.22\mu_s - 0.4) \left( \frac{B_e}{D_f} + 1.6 \right)} \quad (7.19)$$

Figures 7.7 and 7.8 show the variation of  $I_F$  and  $I_E$  with terms expressed in Eqs. (7.18) and (7.19).

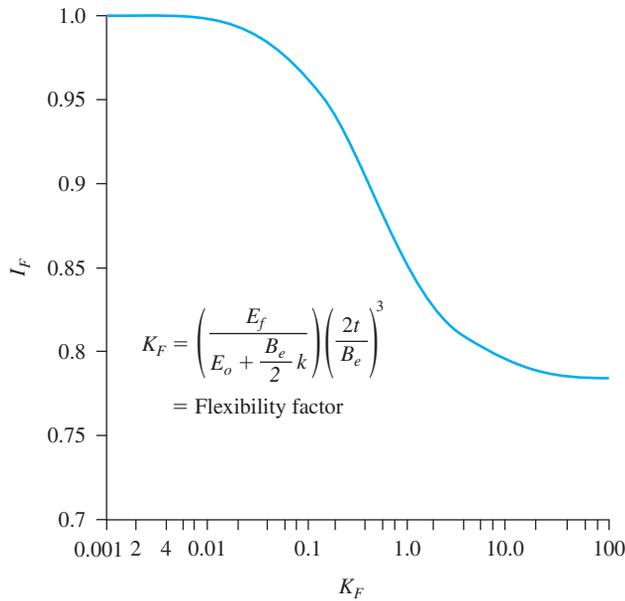

**Figure 7.7** Variation of rigidity correction factor  $I_F$  with flexibility factor  $K_F$  [Eq. (7.18)]

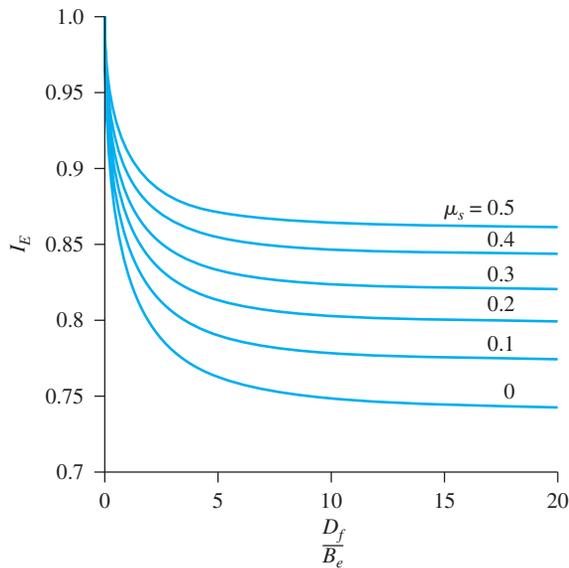

**Figure 7.8** Variation of embedment correction factor  $I_E$  with  $D_f/B_e$  [Eq. (7.19)]

### Example 7.3

For a shallow foundation supported by a silty sand, as shown in Figure 7.5.

Length =  $L = 3$  m

Width =  $B = 1.5$  m

Depth of foundation =  $D_f = 1.5$  m

Thickness of foundation =  $t = 0.3$  m

Load per unit area =  $q_o = 240$  kN/m<sup>2</sup>

$E_f = 16 \times 10^6$  kN/m<sup>2</sup>

The silty sand soil has the following properties:

$H = 3.7$  m

$\mu_s = 0.3$

$E_o = 9700$  kN/m<sup>2</sup>

$k = 575$  kN/m<sup>2</sup>/m

Estimate the elastic settlement of the foundation.

### Solution

From Eq. (7.14), the equivalent diameter is

$$B_e = \sqrt{\frac{4BL}{\pi}} = \sqrt{\frac{(4)(1.5)(3)}{\pi}} = 2.39 \text{ m}$$

so

$$\beta = \frac{E_o}{kB_e} = \frac{9700}{(575)(2.39)} = 7.06$$

and

$$\frac{H}{B_e} = \frac{3.7}{2.39} = 1.55$$

From Figure 7.6, for  $\beta = 7.06$  and  $H/B_e = 1.55$ , the value of  $I_G \approx 0.7$ . From Eq. (7.18),

$$\begin{aligned} I_F &= \frac{\pi}{4} + \frac{1}{4.6 + 10 \left( \frac{E_f}{E_o + \frac{B_e}{2} k} \right) \left( \frac{2t}{B_e} \right)^3} \\ &= \frac{\pi}{4} + \frac{1}{4.6 + 10 \left[ \frac{16 \times 10^6}{9700 + \left( \frac{2.39}{2} \right) (575)} \right] \left[ \frac{(2)(0.3)}{2.39} \right]^3} = 0.789 \end{aligned}$$

From Eq. (7.19),

$$I_E = 1 - \frac{1}{3.5 \exp(1.22\mu_s - 0.4) \left( \frac{B_e}{D_f} + 1.6 \right)}$$

$$= 1 - \frac{1}{3.5 \exp[(1.22)(0.3) - 0.4] \left( \frac{2.39}{1.5} + 1.6 \right)} = 0.907$$

From Eq. (7.17),

$$S_e = \frac{q_o B_e I_G I_F I_E}{E_o} (1 - \mu_s^2)$$

so, with  $q_o = 240 \text{ kN/m}^2$ , it follows that

$$S_e = \frac{(240)(2.39)(0.7)(0.789)(0.907)}{9700} (1 - 0.3^2) \approx 0.02696 \text{ m} \approx \mathbf{27 \text{ mm}}$$

## 7.5 Settlement of Sandy Soil: Use of Strain Influence Factor

### Solution of Schmertmann et al. (1978)

The settlement of granular soils can also be evaluated by the use of a semiempirical *strain influence factor* proposed by Schmertmann et al. (1978). According to this method (Figure 7.9), the settlement is

$$S_e = C_1 C_2 (\bar{q} - q) \sum_0^{z_2} \frac{I_z}{E_s} \Delta z \quad (7.20)$$

where

$I_z$  = strain influence factor


$C_1$  = a correction factor for the depth of foundation embedment =  $1 - 0.5 [q/(\bar{q} - q)]$

$C_2$  = a correction factor to account for creep in soil  
 $= 1 + 0.2 \log (\text{time in years}/0.1)$

$\bar{q}$  = stress at the level of the foundation

$q = \gamma D_f$  = effective stress at the base of the foundation

$E_s$  = modulus of elasticity of soil

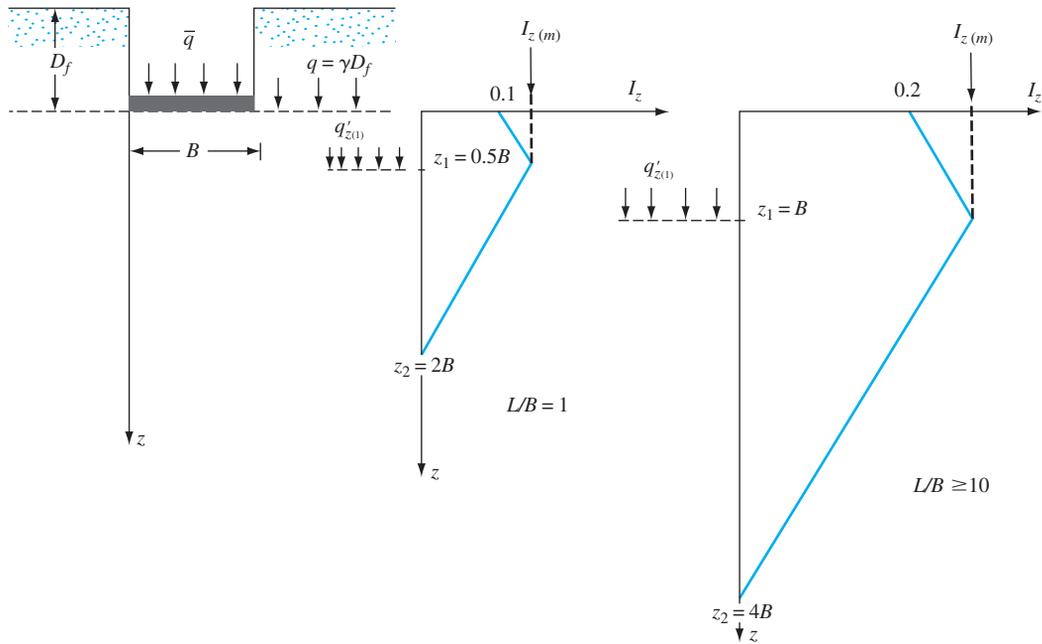

**Figure 7.9** Variation of strain influence factor with depth and  $L/B$

The recommended variation of the strain influence factor  $I_z$  for square ( $L/B = 1$ ) or circular foundations and for foundations with  $L/B \geq 10$  is shown in Figure 7.9. The  $I_z$  diagrams for  $1 < L/B < 10$  can be interpolated.

Note that the maximum value of  $I_z$  [that is,  $I_{z(m)}$ ] occurs at  $z = z_1$  and then reduces to zero at  $z = z_2$ . The maximum value of  $I_z$  can be calculated as

$$I_{z(m)} = 0.5 + 0.1 \sqrt{\frac{\bar{q} - q}{q'_{z(1)}}} \quad (7.21)$$

where

$q'_{z(1)}$  = effective stress at a depth of  $z_1$  before construction of the foundation

The following relations are suggested by Salgado (2008) for interpolation of  $I_z$  at  $z = 0$ ,  $z_1/B$ , and  $z_2/B$  for rectangular foundations.

- $I_z$  at  $z = 0$

$$I_z = 0.1 + 0.0111 \left( \frac{L}{B} - 1 \right) \leq 0.2 \quad (7.22)$$

- Variation of  $z_1/B$  for  $I_{z(m)}$

$$\frac{z_1}{B} = 0.5 + 0.0555 \left( \frac{L}{B} - 1 \right) \leq 1 \quad (7.23)$$

- Variation of  $z_2/B$

$$\frac{z_2}{B} = 2 + 0.222 \left( \frac{L}{B} - 1 \right) \leq 4 \tag{7.24}$$

Schmertmann et al. (1978) suggested that

$$E_s = 2.5q_c \text{ (for square foundation)} \tag{7.25}$$

and

$$E_s = 3.5q_c \text{ (for } L/B \geq 10) \tag{7.26}$$

where  $q_c$  = cone penetration resistance.

It appears reasonable to write (Terzaghi et al., 1996)

$$E_{s(\text{rectangle})} = \left( 1 + 0.4 \log \frac{L}{B} \right) E_{s(\text{square})} \tag{7.27}$$

The procedure for calculating elastic settlement using Eq. (7.20) is given here (Figure 7.10).

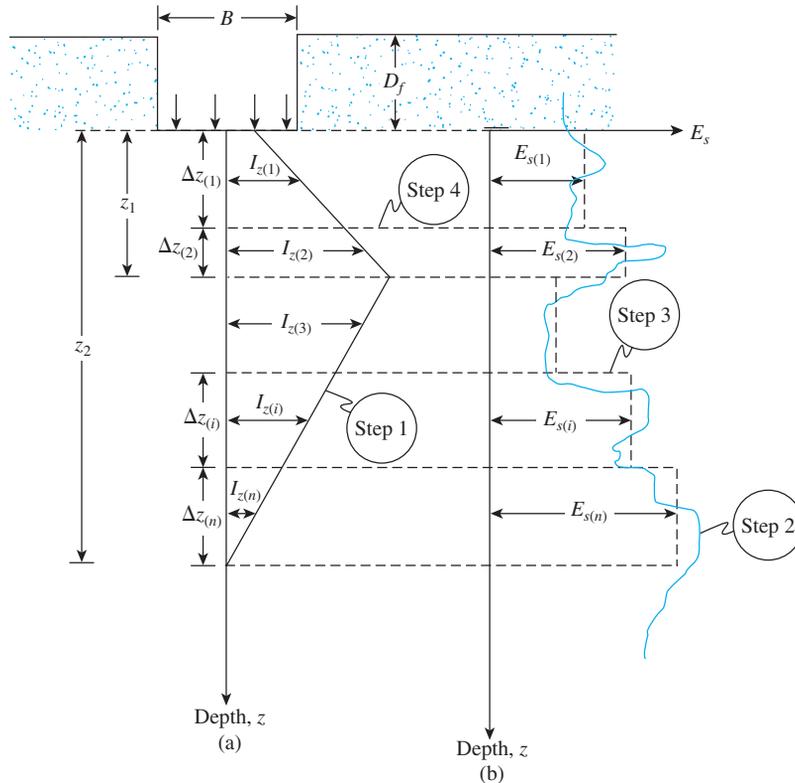


Figure 7.10 Procedure for calculation of  $S_e$  using the strain influence factor

**Table 7.5** Calculation of  $\sum \frac{I_z}{E_s} \Delta z$ 

Layer no.	$\Delta z$	$E_s$	$I_z$ at the middle of the layer	$\frac{I_z}{E_s} \Delta z$
1	$\Delta z_{(1)}$	$E_{s(1)}$	$I_{z(1)}$	$\frac{I_{z(1)}}{E_{s(1)}} \Delta z_1$
2	$\Delta z_{(2)}$	$E_{s(2)}$	$I_{z(2)}$	
$\vdots$	$\vdots$	$\vdots$	$\vdots$	
$i$	$\Delta z_{(i)}$	$E_{s(i)}$	$I_{z(i)}$	$\frac{I_{z(i)}}{E_{s(i)}} \Delta z_i$
$\vdots$	$\vdots$	$\vdots$	$\vdots$	$\vdots$
$n$	$\Delta z_{(n)}$	$E_{s(n)}$	$I_{z(n)}$	$\frac{I_{z(n)}}{E_{s(n)}} \Delta z_n$
				$\sum \frac{I_z}{E_s} \Delta z$

*Step 1.* Plot the foundation and the variation of  $I_z$  with depth to scale (Figure 7.10a).

*Step 2.* Using the correlation from standard penetration resistance ( $N_{60}$ ) or cone penetration resistance ( $q_c$ ), plot the actual variation of  $E_s$  with depth (Figure 7.10b).

*Step 3.* Approximate the actual variation of  $E_s$  into a number of layers of soil having a constant  $E_s$ , such as  $E_{s(1)}$ ,  $E_{s(2)}$ ,  $\dots$ ,  $E_{s(i)}$ ,  $\dots$ ,  $E_{s(n)}$  (Figure 7.10b).

*Step 4.* Divide the soil layer from  $z = 0$  to  $z = z_2$  into a number of layers by drawing horizontal lines. The number of layers will depend on the break in continuity in the  $I_z$  and  $E_s$  diagrams.

*Step 5.* Prepare a table (such as Table 7.5) to obtain  $\sum \frac{I_z}{E_s} \Delta z$ .

*Step 6.* Calculate  $C_1$  and  $C_2$ .

*Step 7.* Calculate  $S_e$  from Eq. (7.20).

### Example 7.4

Consider a rectangular foundation  $2 \text{ m} \times 4 \text{ m}$  in plan at a depth of  $1.2 \text{ m}$  in a sand deposit, as shown in Figure 7.11a. Given:  $\gamma = 17.5 \text{ kN/m}^3$ ;  $\bar{q} = 145 \text{ kN/m}^2$ , and the following approximated variation of  $q_c$  with  $z$ :

$z$ (m)	$q_c$ (kN/m <sup>2</sup> )
0–0.5	2250
0.5–2.5	3430
2.5–6.0	2950

Estimate the elastic settlement of the foundation using the strain influence factor method.

### Solution

From Eq. (7.23),

$$\frac{z_1}{B} = 0.5 + 0.0555 \left( \frac{L}{B} - 1 \right) = 0.5 + 0.0555 \left( \frac{4}{2} - 1 \right) \approx 0.56$$

$$z_1 = (0.56)(2) = 1.12 \text{ m}$$

From Eq. (7.24),

$$\frac{z_2}{B} = 2 + 0.222 \left( \frac{L}{B} - 1 \right) = 2 + 0.222(2 - 1) = 2.22$$

$$z_2 = (2.22)(2) = 4.44 \text{ m}$$

From Eq. (7.22), at  $z = 0$ ,

$$I_z = 0.1 + 0.0111 \left( \frac{L}{B} - 1 \right) = 0.1 + 0.0111 \left( \frac{4}{2} - 1 \right) \approx 0.11$$

From Eq. (7.21),

$$I_{z(m)} = 0.5 + 0.1 \sqrt{\frac{\bar{q} - q}{q'_{z(1)}}} = 0.5 + 0.1 \left[ \frac{145 - (1.2 \times 17.5)}{(1.2 + 1.12)(17.5)} \right]^{0.5} = 0.675$$


The plot of  $I_z$  versus  $z$  is shown in Figure 7.11c. Again, from Eq. (7.27)

$$E_{s(\text{rectangle})} = \left( 1 + 0.4 \log \frac{L}{B} \right) E_{s(\text{square})} = \left[ 1 + 0.4 \log \left( \frac{4}{2} \right) \right] (2.5 \times q_c) = 2.8 q_c$$

Hence, the approximated variation of  $E_s$  with  $z$  is as follows:

$z$ (m)	$q_c$ (kN/m <sup>2</sup> )	$E_s$ (kN/m <sup>2</sup> )
0–0.5	2250	6300
0.5–2.5	3430	9604
2.5–6.0	2950	8260

The plot of  $E_s$  versus  $z$  is shown in Figure 7.11b.

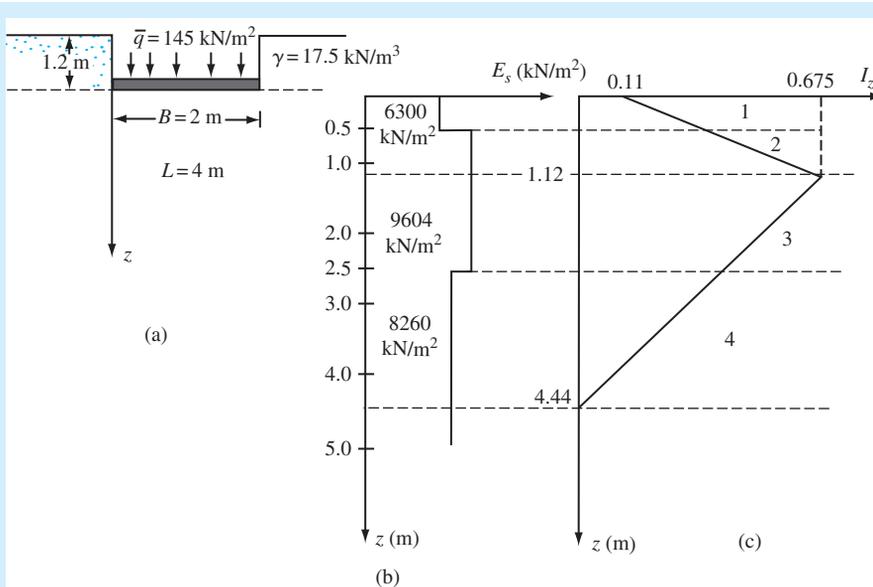
**Figure 7.11**

The soil layer is divided into four layers as shown in Figures 7.11b and 7.11c. Now the following table can be prepared.

Layer no.	$\Delta z$ (m)	$E_s$ (kN/m <sup>2</sup> )	$I_z$ at middle of layer	$\frac{I_z}{E_s} \Delta z$ (m <sup>3</sup> /kN)
1	0.50	6300	0.236	$1.87 \times 10^{-5}$
2	0.62	9604	0.519	$3.35 \times 10^{-5}$
3	1.38	9604	0.535	$7.68 \times 10^{-5}$
4	1.94	8260	0.197	$4.62 \times 10^{-5}$
				$\Sigma 17.52 \times 10^{-5}$

$$S_e = C_1 C_2 (\bar{q} - q) \sum \frac{I_z}{E_s} \Delta z$$

$$C_1 = 1 - 0.5 \left( \frac{q}{\bar{q} - q} \right) = 1 - 0.5 \left( \frac{21}{145 - 21} \right) = 0.915$$

Assume the time for creep is 10 years. So,

$$C_2 = 1 + 0.2 \log \left( \frac{10}{0.1} \right) = 1.4$$

Hence,

$$S_e = (0.915)(1.4)(145 - 21)(17.52 \times 10^{-5}) = 2783 \times 10^{-5} \text{ m} = \mathbf{27.83 \text{ mm}}$$

### Solution of Terzaghi et al. (1996)

Terzaghi, Peck, and Mesri (1996) proposed a slightly different form of the strain influence factor diagram, as shown in Figure 7.12. According to Terzaghi et al. (1996),

At  $z = 0$ ,  $I_z = 0.2$  (for all  $L/B$  values)

At  $z = z_1 = 0.5B$ ,  $I_z = 0.6$  (for all  $L/B$  values)

At  $z = z_2 = 2B$ ,  $I_z = 0$  (for  $L/B = 1$ )


At  $z = z_2 = 4B$ ,  $I_z = 0$  (for  $L/B \geq 10$ )

For  $L/B$  between 1 and 10 (or  $> 10$ ),

$$\frac{z_2}{B} = 2 \left[ 1 + \log\left(\frac{L}{B}\right) \right] \quad (7.28)$$

The elastic settlement can be given as

$$S_e = C_d(\bar{q} - q) \sum_0^{z_2} \frac{I_z}{E_s} \Delta z + \underbrace{0.02 \left[ \frac{0.1}{\sum (q_c \Delta z)} \right] z_2 \log\left(\frac{t \text{ days}}{1 \text{ day}}\right)}_{\text{Post-construction settlement}} \quad (7.29)$$

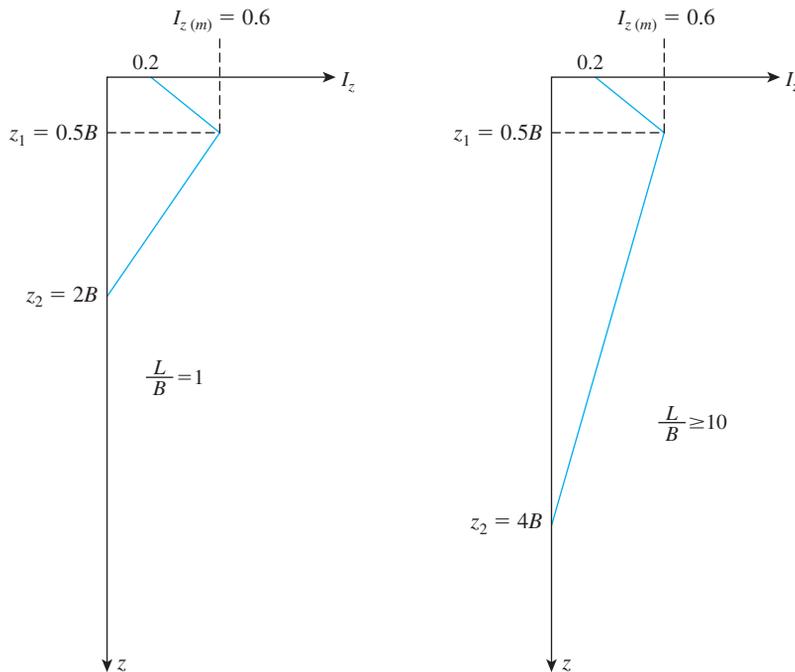

**Figure 7.12** Strain influence factor diagram proposed by Terzaghi, Peck, and Mesri (1996)

**Table 7.6** Variation of  $C_d$  with  $D_f/B^*$ 

$D_f/B$	$C_d$
0.1	1
0.2	0.96
0.3	0.92
0.5	0.86
0.7	0.82
1.0	0.77
2.0	0.68
3.0	0.65

\*Based on data from Terzaghi et al. (1996)

In Eq. (7.29),  $q_c$  is in  $\text{MN/m}^2$ .

The relationships for  $E_s$  are

$$E_s = 3.5q_c \text{ (for square and circular foundations)} \quad (7.30)$$

and

$$E_{s(\text{rectangular})} = \left[ 1 + 0.4 \left( \frac{L}{B} \right) \right] E_{s(\text{square})} \quad (\text{for } L/B \geq 10) \quad (7.31)$$

In Eq. (7.28),  $C_d$  is the depth factor. Table 7.6 gives the interpolated values of  $C_d$  for values of  $D_f/B$ .

### Example 7.5

Solve Example 7.4 using the method of Terzaghi et al. (1996).

#### Solution

Given:  $L/B = 4/2 = 2$

Figure 7.13a shows the plot of  $I_z$  with depth below the foundation. Note that

$$\frac{z_2}{B} = 2 \left[ 1 + \log \left( \frac{L}{B} \right) \right] = 2[1 + \log(2)] = 2.6$$

or

$$z_2 = (2.6)(B) = (2.6)(2) = 5.2 \text{ m}$$

Also, from Eqs. (7.30) and (7.31),

$$E_s = \left[ 1 + 0.4 \left( \frac{L}{B} \right) \right] (3.5q_c) = \left[ 1 + 0.4 \left( \frac{4}{2} \right) \right] (3.5q_c) = 6.3q_c$$

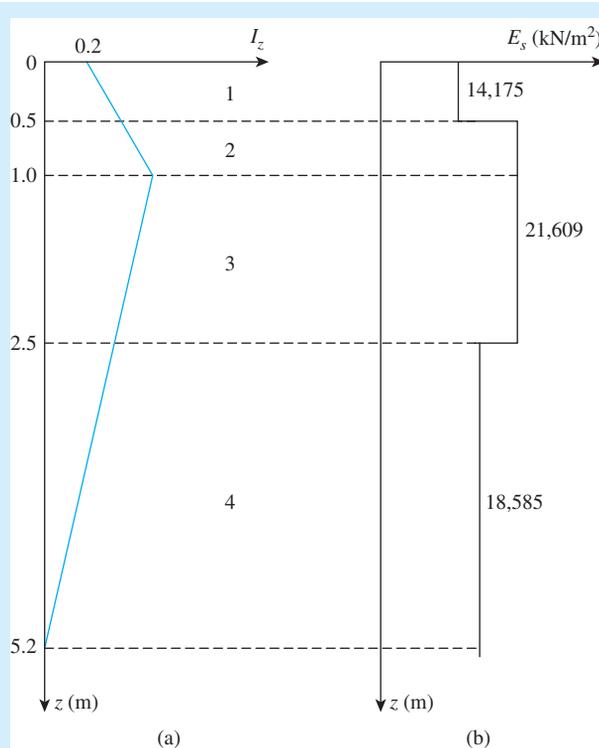


Figure 7.13

The following table can be prepared showing the variation of  $E_s$  with depth, which is shown in Figure 7.13b.

$z$ (m)	$q_c$ (kN/m <sup>2</sup> )	$E_s$ (kN/m <sup>2</sup> )
0–0.5	2250	14,175
0.5–2.5	3430	21,609
2.5–6	2950	18,585

Again,  $D_f/B = 1.2/2 = 0.6$ . From Table 7.6,  $C_d \approx 0.85$ .

The following is the table to calculate  $\sum_0^{z_2} \frac{I_z}{E_s} \Delta z$ .

Layer No.	$\Delta z$ (m)	$E_s$ (kN/m <sup>2</sup> )	$I_z$ at the middle of the layer	$\frac{I_z}{E_s} \Delta z$ (m <sup>2</sup> /kN)
1	0.5	14,175	0.3	$1.058 \times 10^{-5}$
2	0.5	21,609	0.5	$1.157 \times 10^{-5}$
3	1.5	21,609	0.493	$3.422 \times 10^{-5}$
4	2.7	18,585	0.193	$2.804 \times 10^{-5}$
				$\Sigma 8.441 \times 10^{-5} \text{ m}^2/\text{kN}$

Thus,

$$C_d(\bar{q} - q) \sum_0^{z_2} \frac{I_z}{E_s} \Delta z = (0.85)(145 - 21)(8.441 \times 10^{-5}) = 889.68 \times 10^{-5} \text{ m}$$

Post-construction creep is

$$0.02 \left[ \frac{0.1}{\frac{\sum (q_c \Delta z)}{z_2}} \right] z_2 \log \left( \frac{t \text{ days}}{1 \text{ day}} \right)$$

$$\frac{\sum (q_c \Delta z)}{z_2} = \frac{(2250 \times 0.5) + (3430 \times 2) + (2950 \times 2.7)}{5.2}$$

$$= 3067.3 \text{ kN/m}^2 \approx 3.07 \text{ MN/m}^2$$

Hence, the elastic settlement is

$$S_e = 889.68 \times 10^{-5} + 0.02 \left[ \frac{0.1}{3.07} \right] (5.2) \log \left( \frac{10 \times 365 \text{ days}}{1 \text{ day}} \right)$$

$$= 2096.68 \times 10^{-5} \text{ m}$$

$$\approx \mathbf{20.97 \text{ mm}}$$

*Note:* The magnitude of  $S_e$  is about 75% of that found in Example 7.4. In Example 7.4, the elastic settlement was about 19.88 mm and settlement due to creep was about 7.95 mm. However, in Example 7.5, elastic settlement is 8.89 mm and the settlement due to creep is about 12.07 mm. Thus the magnitude of creep settlement is about 50% more in Example 7.5. However, the magnitude of elastic settlement in Example 7.4 is about twice that compared to that in Example 7.5. This is because of the assumption of the  $E_s - q_c$  relationship. ■

## 7.6 Settlement of Foundation on Sand Based on Standard Penetration Resistance

### Meyerhof's Method

Meyerhof (1956) proposed a correlation for the *net bearing pressure* for foundations with the standard penetration resistance,  $N_{60}$ . The net pressure has been defined as

$$q_{\text{net}} = \bar{q} - \gamma D_f$$

where  $\bar{q}$  = stress at the level of the foundation.

According to Meyerhof's theory, for 25 mm (1 in.) of estimated maximum settlement,

$$q_{\text{net}} (\text{kip/ft}^2) = \frac{N_{60}}{4} \quad (\text{for } B \leq 4 \text{ ft}) \quad (7.32)$$

and

$$q_{\text{net}}(\text{kip/ft}^2) = \frac{N_{60}}{6} \left( \frac{B+1}{B} \right)^2 \quad (\text{for } B > 4 \text{ ft}) \quad (7.33)$$

Since the time that Meyerhof proposed his original correlations, researchers have observed that its results are rather conservative. Later, Meyerhof (1965) suggested that the net allowable bearing pressure should be increased by about 50%. Bowles (1977) proposed that the modified form of the bearing equations be expressed as

$$q_{\text{net}}(\text{kip/ft}^2) = \frac{N_{60}}{2.5} F_d S_e \quad (\text{for } B \leq 4 \text{ ft}) \quad (7.34)$$

and

$$q_{\text{net}}(\text{kip/ft}^2) = \frac{N_{60}}{4} \left( \frac{B+1}{B} \right)^2 F_d S_e \quad (\text{for } B > 4 \text{ ft}) \quad (7.35)$$

where

$F_d$  = depth factor =  $1 + 0.33(D_f/B)$

$B$  = foundation width, in feet

$S_e$  = settlement, in inches

Hence,

$$S_e(\text{in.}) = \frac{2.5q_{\text{net}}(\text{kip/ft}^2)}{N_{60}F_d} \quad (\text{for } B \leq 4 \text{ ft}) \quad (7.36)$$

and

$$S_e(\text{in.}) = \frac{4q_{\text{net}}(\text{kip/ft}^2)}{N_{60}F_d} \left( \frac{B}{B+1} \right)^2 \quad (\text{for } B > 4 \text{ ft}) \quad (7.37)$$

In SI, units, Eqs. (7.34) and (7.35) can be written as

$$q_{\text{net}}(\text{kN/m}^2) = \frac{N_{60}}{0.05} F_d \left( \frac{S_e}{25} \right) \quad (\text{for } B \leq 1.22 \text{ m}) \quad (7.38)$$

and

$$q_{\text{net}}(\text{kN/m}^2) = \frac{N_{60}}{0.08} \left( \frac{B+0.3}{B} \right)^2 F_d \left( \frac{S_e}{25} \right) \quad (\text{for } B > 1.22 \text{ m}) \quad (7.39)$$

where  $B$  is in meters and  $S_e$  is in mm. Hence,

$$S_e(\text{mm}) = \frac{1.25q_{\text{net}}(\text{kN/m}^2)}{N_{60}F_d} \quad (\text{for } B \leq 1.22 \text{ m}) \quad (7.40)$$

and

$$S_e(\text{mm}) = \frac{2q_{\text{net}}(\text{kN/m}^2)}{N_{60}F_d} \left( \frac{B}{B+0.3} \right)^2 \quad (\text{for } B > 1.22 \text{ m}) \quad (7.41)$$

The  $N_{60}$  referred to in the preceding equations is the standard penetration resistance between the bottom of the foundation and  $2B$  below the bottom.

### Burland and Burbidge's Method

Burland and Burbidge (1985) proposed a method of calculating the elastic settlement of sandy soil using the *field standard penetration number*,  $N_{60}$ . (See Chapter 3.) The method can be summarized as follows:

#### 1. Variation of Standard Penetration Number with Depth

Obtain the field penetration numbers ( $N_{60}$ ) with depth at the location of the foundation. The following adjustments of  $N_{60}$  may be necessary, depending on the field conditions:

For gravel or sandy gravel,

$$N_{60(a)} \approx 1.25 N_{60} \quad (7.42)$$

For fine sand or silty sand below the groundwater table and  $N_{60} > 15$ ,

$$N_{60(a)} \approx 15 + 0.5(N_{60} - 15) \quad (7.43)$$

where  $N_{60(a)}$  = adjusted  $N_{60}$  value.

#### 2. Determination of Depth of Stress Influence ( $z'$ )

In determining the depth of stress influence, the following three cases may arise:

**Case I.** If  $N_{60}$  [or  $N_{60(a)}$ ] is approximately constant with depth, calculate  $z'$  from

$$\frac{z'}{B_R} = 1.4 \left( \frac{B}{B_R} \right)^{0.75} \quad (7.44)$$

where

$$B_R = \text{reference width} \begin{cases} = 1 \text{ ft (if } B \text{ is in ft)} \\ = 0.3 \text{ m (if } B \text{ is in m)} \end{cases}$$

$B$  = width of the actual foundation

**Case II.** If  $N_{60}$  [or  $N_{60(a)}$ ] is increasing with depth, use Eq. (7.44) to calculate  $z'$ .

**Case III.** If  $N_{60}$  [or  $N_{60(a)}$ ] is decreasing with depth,  $z' = 2B$  or to the bottom of soft soil layer measured from the bottom of the foundation (whichever is smaller).

#### 3. Calculation of Elastic Settlement $S_e$

The elastic settlement of the foundation,  $S_e$ , can be calculated from

$$\frac{S_e}{B_R} = \alpha_1 \alpha_2 \alpha_3 \left[ \frac{1.25 \left( \frac{L}{B} \right)}{0.25 + \left( \frac{L}{B} \right)} \right]^2 \left( \frac{B}{B_R} \right)^{0.7} \left( \frac{q'}{p_a} \right) \quad (7.45)$$

**Table 7.7** Summary of  $q'$ ,  $\alpha_1$ ,  $\alpha_2$ , and  $\alpha_3$ 

Soil type	$q'$	$\alpha_1$	$\alpha_2$	$\alpha_3$
Normally consolidated sand	$q_{\text{net}}$	0.14	$\frac{1.71}{[\bar{N}_{60} \text{ or } \bar{N}_{60(a)}]^{1.4}}$	$\alpha_3 = \frac{H}{z'} \left( 2 - \frac{H}{z'} \right)$ (if $H \leq z'$ )
Overconsolidated sand ( $q_{\text{net}} \leq \sigma'_c$ )	$q_{\text{net}}$	0.047	$\frac{0.57}{[\bar{N}_{60} \text{ or } \bar{N}_{60(a)}]^{1.4}}$	or $\alpha_3 = 1$ (if $H > z'$ )
where $\sigma'_c$ = preconsolidation pressure				where $H$ = depth of compressible layer
Overconsolidated sand ( $q_{\text{net}} > \sigma'_c$ )	$q_{\text{net}} - 0.67\sigma'_c$	0.14	$\frac{0.57}{[\bar{N}_{60} \text{ or } \bar{N}_{60(a)}]^{1.4}}$	

where

$\alpha_1$  = a constant

$\alpha_2$  = compressibility index

$\alpha_3$  = correction for the depth of influence

$p_a$  = atmospheric pressure = 100 kN/m<sup>2</sup> ( $\approx$  2000 lb/ft<sup>2</sup>)

$L$  = length of the foundation

Table 7.7 summarizes the values of  $q'$ ,  $\alpha_1$ ,  $\alpha_2$ , and  $\alpha_3$  to be used in Eq. (7.45) for various types of soils. Note that, in this table,  $\bar{N}_{60}$  or  $\bar{N}_{60(a)}$  = average value of  $N_{60}$  or  $N_{60(a)}$  in the depth of stress influence.

### Example 7.6

A shallow foundation measuring 1.75 m  $\times$  1.75 m is to be constructed over a layer of sand. Given  $D_f = 1$  m;  $N_{60}$  is generally increasing with depth;  $\bar{N}_{60}$  in the depth of stress influence = 10,  $q_{\text{net}} = 120$  kN/m<sup>2</sup>. The sand is normally consolidated. Estimate the elastic settlement of the foundation. Use the Burland and Burbidge method.

#### Solution

From Eq. (7.44),

$$\frac{z'}{B_R} = 1.4 \left( \frac{B}{B_R} \right)^{0.75}$$

Depth of stress influence,

$$z' = 1.4 \left( \frac{B}{B_R} \right)^{0.75} B_R = (1.4)(0.3) \left( \frac{1.75}{0.3} \right)^{0.75} \approx 1.58 \text{ m}$$

From Eq. (7.45),

$$\frac{S_e}{B_R} = \alpha_1 \alpha_2 \alpha_3 \left[ \frac{1.25 \left( \frac{L}{B} \right)}{0.25 + \left( \frac{L}{B} \right)} \right]^2 \left( \frac{B}{B_R} \right)^{0.7} \left( \frac{q'}{p_a} \right)$$

For normally consolidated sand (Table 7.6),

$$\alpha_1 = 0.14$$

$$\alpha_2 = \frac{1.71}{(N_{60})^{1.4}} = \frac{1.71}{(10)^{1.4}} = 0.068$$

$$\alpha_3 = 1$$

$$q' = q_{\text{net}} = 120 \text{ kN/m}^2$$

So,

$$\frac{S_e}{0.3} = (0.14)(0.068)(1) \left[ \frac{(1.25) \left( \frac{1.75}{1.75} \right)}{0.25 + \left( \frac{1.75}{1.75} \right)} \right]^2 \left( \frac{1.75}{0.3} \right)^{0.7} \left( \frac{120}{100} \right)$$

$$S_e \approx 0.0118 \text{ m} = \mathbf{11.8 \text{ mm}}$$

### Example 7.7

Solve Example 7.6 using Meyerhof's method.

#### Solution

From Eq. (7.41),

$$S_e = \frac{2q_{\text{net}}}{(N_{60})(F_d)} \left( \frac{B}{B + 0.3} \right)^2$$

$$F_d = 1 + 0.33(D_f/B) = 1 + 0.33(1/1.75) = 1.19$$

$$S_e = \frac{(2)(120)}{(10)(1.19)} \left( \frac{1.75}{1.75 + 0.3} \right)^2 = \mathbf{14.7 \text{ mm}}$$

## 7.7 Settlement in Granular Soil Based on Pressuremeter Test (PMT)

Briaud (2007) proposed a method based on Pressuremeter tests (Section 3.22) from which the load-settlement diagrams of foundations can be derived. The following is a step-by-step procedure for performing the analysis.

*Step 1.* Conduct Pressuremeter tests at varying depths at the desired location and obtain plots of  $p_p$  (pressure in the measuring cell for cavity expansion;


see Figure 3.31) versus  $\Delta R/R_o$  ( $R_o$  = initial radius of the PMT cavity, and  $\Delta R$  = increase in the cavity radius), as shown in Figure 7.14a.

*Step 2.* Extend the straight line part of the PMT curve to zero pressure and shift the vertical axis, as shown in Figure 7.14a. Re-zero the  $\Delta R/R_o$  axis.

*Step 3.* Draw a strain influence factor diagram for the desired foundation (Section 7.5). Using all Pressuremeter test curves within the depth of influence, develop a mean PMT curve. Referring to Figure 7.14b, this can be done as follows:

For each value of  $\Delta R/R_o$ , let the  $p_p$  values be  $p_{p(1)}, p_{p(2)}, p_{p(3)}, \dots$ . The mean value of  $p_p$  can be obtained as

$$p_{p(m)} = \frac{A_1}{A} p_{p(1)} + \frac{A_2}{A} p_{p(2)} + \frac{A_3}{A} p_{p(3)} + \dots \quad (7.46)$$

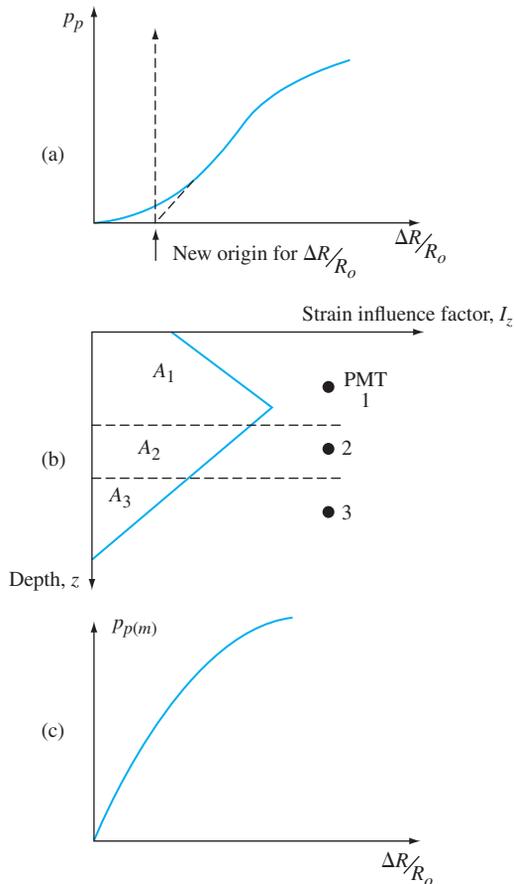

**Figure 7.14** (a) Plot of  $p_p$  versus  $\Delta R/R_o$ ; (b) averaging the pressuremeter curves within the foundation zone of influence; (c) plot of  $p_{p(m)}$  versus  $\Delta R/R_o$

where

$A_1, A_2, A_3$  = areas tributary to each test under the strain influence factor diagram

$$A = A_1 + A_2 + A_3 + \dots \quad (7.47)$$

*Step 4.* Based on the results of Step 3, develop a mean  $p_{p(m)}$  versus  $\Delta R/R_o$  plot (Figure 7.14c).

*Step 5.* The mean PMT curve now can be used to develop the load-settlement plot for the foundation via the following equations.

$$\frac{S_e}{B} = 0.24 \frac{\Delta R}{R_o} \quad (7.48)$$

and

$$q_o = f_{L/B} f_e f_\delta f_{\beta,d} \Gamma p_{p(m)} \quad (7.49)$$

where

$S_e$  = elastic settlement of the foundation

$B$  = width of foundation

$L$  = length of foundation

$q_o$  = net load per unit area on the foundation

$\Gamma$  = gamma function linking  $q_o$  and  $p_{p(m)}$

$$f_{L/B} = \text{shape factor} = 0.8 + 0.2 \left( \frac{B}{L} \right) \quad (7.50)$$

$$f_e = \text{eccentricity factor} = 1 - 0.33 \left( \frac{e}{B} \right) \text{ (center)} \quad (7.51)$$

$$f_e = \text{eccentricity factor} = 1 - \left( \frac{e}{B} \right)^{0.5} \text{ (edge)} \quad (7.52)$$

$$f_\delta = \text{load inclination factor} = 1 - \left[ \frac{\delta(\text{deg})}{90} \right]^2 \text{ (center)} \quad (7.53)$$

$$f_\delta = \text{load inclination factor} = 1 - \left[ \frac{\delta(\text{deg})}{360} \right]^{0.5} \text{ (edge)} \quad (7.54)$$


$$f_{\beta,d} = \text{slope factor} = 0.8 \left( 1 + \frac{d}{B} \right)^{0.1} \text{ (3H:1V slope)} \quad (7.55)$$

$$f_{\beta,d} = \text{slope factor} = 0.7 \left( 1 + \frac{d}{B} \right)^{0.15} \text{ (2H:1V slope)} \quad (7.56)$$


$\delta$  = inclination of load with respect to the vertical

$\beta$  = inclination of a slope with the horizontal if the foundation is located on top of a slope

$d$  = distance of the edge of the foundation from the edge of the slope

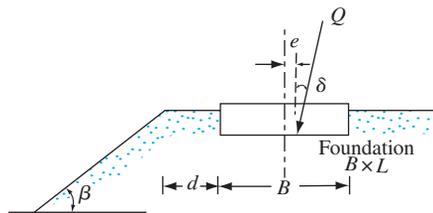

**Figure 7.15** Definition of parameters— $\beta$ ,  $L$ ,  $d$ ,  $\delta$ ,  $\beta$ ,  $e$ , and  $\beta$

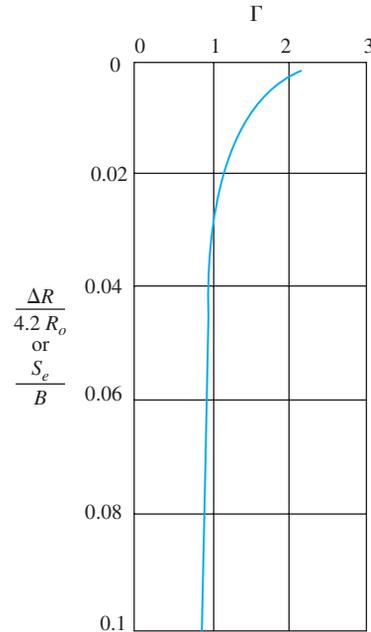

**Figure 7.16** Variation of  $\Gamma$  with  $S_e/B = 0.24 \Delta R/R_o$

The parameters  $\delta$ ,  $\beta$ ,  $d$ , and  $e$  are defined in Figure 7.15. Figure 7.16 shows the design plot for  $\Gamma$  with  $S_e/B$  or  $0.24 \frac{\Delta R}{R_o}$ .

**Step 6.** Based on the values of  $B/L$ ,  $e/B$ ,  $\delta$ , and  $d/B$ , calculate the values of  $f_{L/B}$ ,  $f_e$ ,  $f_\delta$ , and  $f_{\beta,d}$  as needed. Let

$$f = (f_{L/B})(f_e)(f_\delta)(f_{\beta,d}) \quad (7.57)$$

Thus,

$$q_o = f \Gamma p_{p(m)} \quad (7.58)$$

**Step 7.** Now prepare a table, as shown in Table 7.8.

**Step 8.** Complete Table 7.8 as follows:



- Column 1—Assume several values of  $\Delta R/R_o$ .
- Column 2—For given values of  $\Delta R/R_o$ , obtain  $p_{p(m)}$  from Figure 7.14c.
- Column 3—From Eq. (7.48), calculate the values of  $S_e/B$  from values of  $\Delta R/R_o$  given in Column 1.
- Column 4—With known values of  $B$ , calculate the values of  $S_e$ .
- Column 5—From Figure 7.16, obtain the desired values of  $\Gamma$ .
- Column 6—Use Eq. (7.58) to obtain  $q_o$ .
- Now plot a graph of  $S_e$  (Column 4) versus  $q_o$  (Column 6) from which the magnitude of  $S_e$  for a given  $q_o$  can be determined.

**Table 7.8** Calculations to Obtain the Load-Settlement Plot

$\Delta R/R_o$ (1)	$P_{p(m)}$ (2)	$S_e/B$ (3)	$S_e$ (4)	$\Gamma$ (5)	$q_o$ (6)

### Example 7.8

A foundation, shown in Figure 7.17a with a width of 4 m and a length of 20 m, serves as a bridge abutment foundation. The soil is medium dense sand. A 16,000 kN vertical load

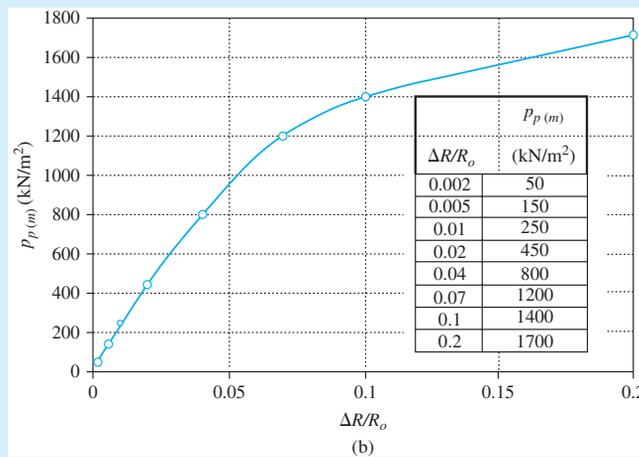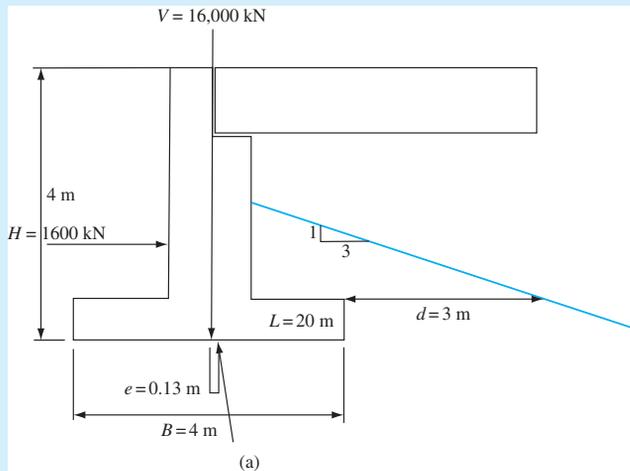

**Figure 7.17**

acts on the foundation. The active pressure on the abutment wall develops a 1,600 kN horizontal load. The resultant reaction force due to the vertical and horizontal load is applied at an eccentricity of 0.13 m. PMT testing at the site produced a mean Pressuremeter curve characterizing the soil and is shown in Figure 7.17b. What is the settlement at the current loading?

### Solution

Given:  $B = 4$  m,  $L = 20$  m,  $d = 3$  m, and slope = 3H:1V.

So

$$f_{L/B} = 0.8 + 0.2\left(\frac{B}{L}\right) = 0.8 + 0.2\left(\frac{4}{20}\right) = 0.84$$

$$f_{e(\text{center})} = 1 - 0.33\left(\frac{e}{B}\right) = 1 - 0.33\left(\frac{0.13}{4}\right) = 0.99$$

$$f_{\delta(\text{center})} = 1 - \left(\frac{\delta}{90}\right)^2$$

$$\delta = \tan^{-1}\left(\frac{H}{V}\right) = \tan^{-1}\left(\frac{1600}{16,000}\right) = 5.71^\circ$$

$$f_{\delta} = 1 - \left(\frac{5.71}{90}\right)^2 = 0.996$$

$$f_{\beta,d} = 0.8\left(1 + \frac{d}{B}\right)^{0.1} = 0.8\left(1 + \frac{3}{4}\right)^{0.1} = 0.846$$

$$f = f_{L/B}f_{e}f_{\delta}f_{\beta,d} = (0.84)(0.99)(0.996)(0.845) = 0.7$$

Now the following table can be prepared.

$\Delta R/R_o$ (1)	$p_{p(m)}$ (kN/m <sup>2</sup> ) (2)	$S_e/B$ (3)	$S_e$ (mm) (4)	$\Gamma$ (5)	$q_o$ (kN/m <sup>2</sup> ) (6)	$Q_o$ (MN) (7)
0.002	50	0.0005	2.0	2.27	79.45	6.36
0.005	150	0.0012	4.8	2.17	227.85	18.23
0.01	250	0.0024	9.6	2.07	362.25	28.98
0.02	450	0.0048	19.2	1.83	576.45	46.12
0.04	800	0.0096	38.4	1.40	784.00	62.72
0.07	1200	0.0168	67.2	1.17	982.8	78.62
0.10	1400	0.024	96.0	1.07	1048.6	83.89
0.20	1700	0.048	192.0	0.90	1071.0	85.68

Note: Columns 1 and 2: From Figure 7.17b

Column 3: (Column 1)(0.24) =  $S_e/B$

Column 4: (Column 3)( $B = 4000$  mm) =  $S_e$

Column 5: From Figure 7.16

Column 6:  $f\Gamma p_{p(m)} = (0.7)(\Gamma)p_{p(m)} = q_o$

Column 7: (Column 6)( $B \times L$ ) =  $Q_o$

Figure 7.18 shows the plot of  $Q_o$  versus  $S_e$ . From this plot it can be seen that, for a vertical loading of 16,000 kN (16 MN), the value of  $S_e \approx 4.2$  mm.

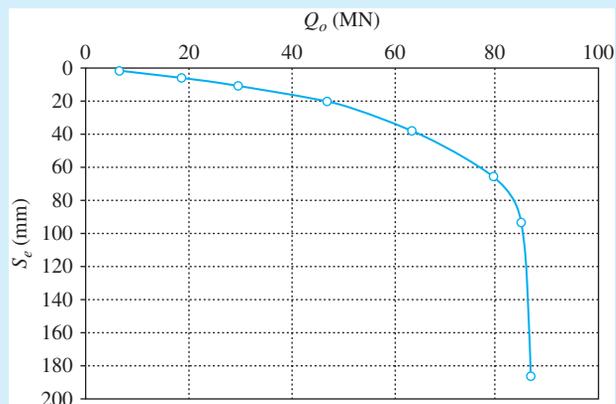


Figure 7.18

## 7.8 Effect of the Rise of Water Table on Elastic Settlement

Terzaghi (1943) suggested that the submergence of soil mass reduces the soil stiffness by about half, which in turn doubles the settlement. In most cases of foundation design, it is considered that, if the ground water table is located  $1.5B$  to  $2B$  below the bottom of the foundation, it will not have any effect on the settlement. The total elastic settlement ( $S'_e$ ) due to the rise of the ground water table can be given as

$$S'_e = S_e C_w \quad (7.59)$$

where

$S_e$  = elastic settlement before the rise of ground water table

$C_w$  = water correction factor

The following are some empirical relationships for  $C_w$  (refer to Figure 7.19).

- Peck, Hansen, and Thornburn (1974):

$$C_w = \frac{1}{0.5 + 0.5 \left( \frac{D_w}{D_f + B} \right)} \geq 1 \quad (7.60)$$

- Teng (1982):

$$C_w = \frac{1}{0.5 + 0.5 \left( \frac{D_w - D_f}{B} \right)} \leq 2 \quad \left( \begin{array}{l} \text{for water table below the} \\ \text{base of the foundation} \end{array} \right) \quad (7.61)$$

- Bowles (1977):

$$C_w = 2 - \left( \frac{D_w}{D_f + B} \right) \quad (7.62)$$

In any case, these relationships could be considered approximate, since there is a lack of agreement among geotechnical engineers about the true magnitude of  $C_w$ .

### Example 7.9

Consider the shallow foundation given in Example 7.6. Due to flooding, the ground water table rose from  $D_w = 4$  m to 2 m (Figure 7.19). Estimate the total elastic settlement  $S'_e$  after the rise of the water table. Use Eq. (7.60).

#### Solution

From Eq. (7.59),


$$S'_e = S_e C_w$$

From Eq. (7.60),

$$C_w = \frac{1}{0.5 + 0.5 \left( \frac{D_w}{D_f + B} \right)} = \frac{1}{0.5 + 0.5 \left( \frac{2}{1 + 1.75} \right)} = 1.158$$

Hence,

$$S'_e = (11.8 \text{ mm})(1.158) = \mathbf{13.66 \text{ mm}}$$

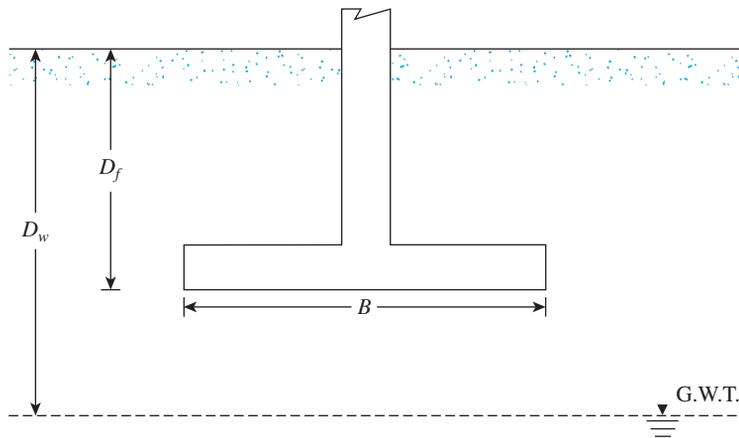

**Figure 7.19** Effect of rise of ground water table on elastic settlement in granular soil

## Consolidation Settlement

### 7.9 Primary Consolidation Settlement Relationships

As mentioned before, consolidation settlement occurs over time in saturated clayey soils subjected to an increased load caused by construction of the foundation. (See Figure 7.20.) On the basis of the one-dimensional consolidation settlement equations given in Chapter 2, we write

$$S_{c(p)} = \int \varepsilon_z dz$$

where

$\varepsilon_z$  = vertical strain

$$= \frac{\Delta e}{1 + e_o}$$

$\Delta e$  = change of void ratio

$$= f(\sigma'_o, \sigma'_c, \text{ and } \Delta\sigma')$$

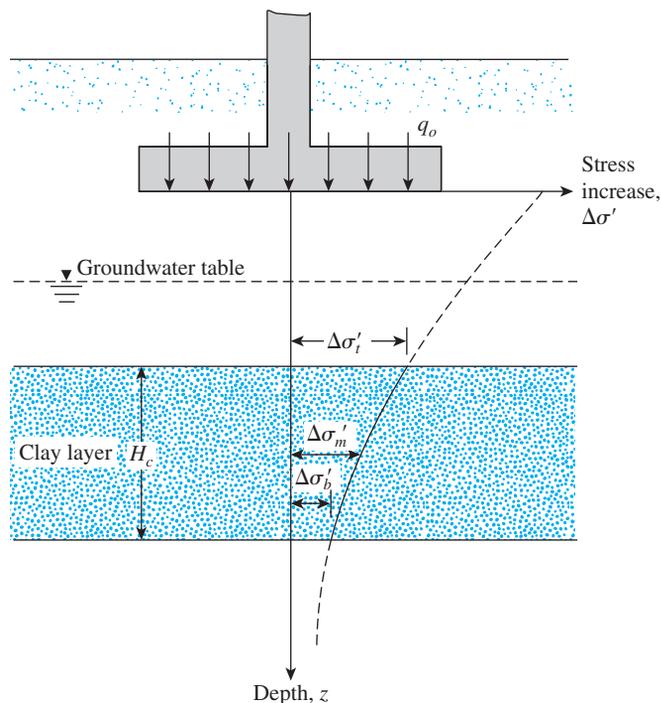


Figure 7.20 Consolidation settlement calculation

So,

$$S_{c(p)} = \frac{C_c H_c}{1 + e_o} \log \frac{\sigma'_o + \Delta\sigma'_{av}}{\sigma'_o} \quad \begin{array}{l} \text{(for normally consolidated} \\ \text{clays)} \end{array} \quad [\text{Eq. (2.65)}]$$

$$S_{c(p)} = \frac{C_s H_c}{1 + e_o} \log \frac{\sigma'_o + \Delta\sigma'_{av}}{\sigma'_o} \quad \begin{array}{l} \text{(for overconsolidated clays} \\ \text{with } \sigma'_o + \Delta\sigma'_{av} < \sigma'_c) \end{array} \quad [\text{Eq. (2.67)}]$$

$$S_{c(p)} = \frac{C_s H_c}{1 + e_o} \log \frac{\sigma'_c}{\sigma'_o} + \frac{C_c H_c}{1 + e_o} \log \frac{\sigma'_o + \Delta\sigma'_{av}}{\sigma'_c} \quad \begin{array}{l} \text{(for overconsolidated clays} \\ \text{with } \sigma'_o < \sigma'_c < \sigma'_o + \Delta\sigma'_{av}) \end{array} \quad [\text{Eq. (2.69)}]$$

where

$\sigma'_o$  = average effective pressure on the clay layer before the construction of the foundation

$\Delta\sigma'_{av}$  = average increase in effective pressure on the clay layer caused by the construction of the foundation

$\sigma'_c$  = preconsolidation pressure

$e_o$  = initial void ratio of the clay layer

$C_c$  = compression index

$C_s$  = swelling index

$H_c$  = thickness of the clay layer

The procedures for determining the compression and swelling indexes were discussed in Chapter 2.

Note that the increase in effective pressure,  $\Delta\sigma'$ , on the clay layer is not constant with depth: The magnitude of  $\Delta\sigma'$  will decrease with the increase in depth measured from the bottom of the foundation. However, the average increase in pressure may be approximated by

$$\Delta\sigma'_{av} = \frac{1}{6}(\Delta\sigma'_t + 4\Delta\sigma'_m + \Delta\sigma'_b) \quad (6.29)$$

where  $\Delta\sigma'_t$ ,  $\Delta\sigma'_m$ , and  $\Delta\sigma'_b$  are, respectively, the effective pressure increases at the *top*, *middle*, and *bottom* of the clay layer that are caused by the construction of the foundation.

The method of determining the pressure increase caused by various types of foundation load using Boussinesq's solution is discussed in Sections 6.2 through 6.9.  $\Delta\sigma'_{av}$  can also be directly obtained from the method presented in Section 6.8.

## 7.10 Three-Dimensional Effect on Primary Consolidation Settlement

The consolidation settlement calculation presented in the preceding section is based on Eqs. (2.65), (2.67), and (2.69). These equations, as shown in Chapter 2, are in turn based on one-dimensional laboratory consolidation tests. The underlying assumption is that the

increase in pore water pressure,  $\Delta u$ , immediately after application of the load equals the increase in stress,  $\Delta\sigma$ , at any depth. In this case,

$$S_{c(p)-\text{oad}} = \int \frac{\Delta e}{1 + e_o} dz = \int m_v \Delta\sigma'_{(1)} dz$$

where

$S_{c(p)-\text{oad}}$  = consolidation settlement calculated by using Eqs. (2.65), (2.67), and (2.69)

$\Delta\sigma'_{(1)}$  = effective vertical stress increase

$m_v$  = volume coefficient of compressibility (see Chapter 2)

In the field, however, when a load is applied over a limited area on the ground surface, such an assumption will not be correct. Consider the case of a circular foundation on a clay layer, as shown in Figure 7.21. The vertical and the horizontal stress increases at a point in the layer immediately below the center of the foundation are  $\Delta\sigma_{(1)}$  and  $\Delta\sigma_{(3)}$ , respectively. For a saturated clay, the pore water pressure increase at that depth (see Chapter 2) is

$$\Delta u = \Delta\sigma_{(3)} + A[\Delta\sigma_{(1)} - \Delta\sigma_{(3)}] \tag{7.63}$$

where  $A$  = pore water pressure parameter. For this case,

$$S_{c(p)} = \int m_v \Delta u dz = \int (m_v) \{ \Delta\sigma_{(3)} + A[\Delta\sigma_{(1)} - \Delta\sigma_{(3)}] \} dz \tag{7.64}$$

Thus, we can write

$$K_{\text{cir}} = \frac{S_{c(p)}}{S_{c(p)-\text{oad}}} = \frac{\int_0^{H_c} m_v \Delta u dz}{\int_0^{H_c} m_v \Delta\sigma'_{(1)} dz} = A + (1 - A) \left[ \frac{\int_0^{H_c} \Delta\sigma'_{(3)} dz}{\int_0^{H_c} \Delta\sigma'_{(1)} dz} \right] \tag{7.65}$$

where  $K_{\text{cir}}$  = settlement ratio for circular foundations.

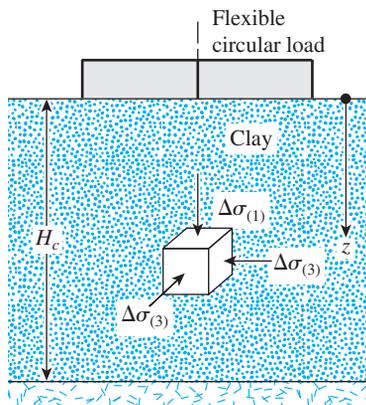


Figure 7.21 Circular foundation on a clay layer

The settlement ratio for a continuous foundation,  $K_{str}$ , can be determined in a manner similar to that for a circular foundation. The variation of  $K_{cir}$  and  $K_{str}$  with  $A$  and  $H_c/B$  is given in Figure 7.22. (Note:  $B$  = diameter of a circular foundation, and  $B$  = width of a continuous foundation.)

The preceding technique is generally referred to as the *Skempton–Bjerrum modification* (1957) for a consolidation settlement calculation.

Leonards (1976) examined the correction factor  $K_{cr}$  for a three-dimensional consolidation effect in the field for a circular foundation located over *overconsolidated clay*. Referring to Figure 7.21, we have

$$S_{c(p)} = K_{cr(OC)} S_{c(p)-oed} \quad (7.66)$$

where

$$K_{cr(OC)} = f\left(\text{OCR}, \frac{B}{H_c}\right) \quad (7.67)$$

in which


$$\text{OCR} = \text{overconsolidation ratio} = \frac{\sigma'_c}{\sigma'_o} \quad (7.68)$$

where

$\sigma'_c$  = preconsolidation pressure

$\sigma'_o$  = present average effective pressure

The interpolated values of  $K_{cr(OC)}$  from Leonard's 1976 work are given in Table 7.9.

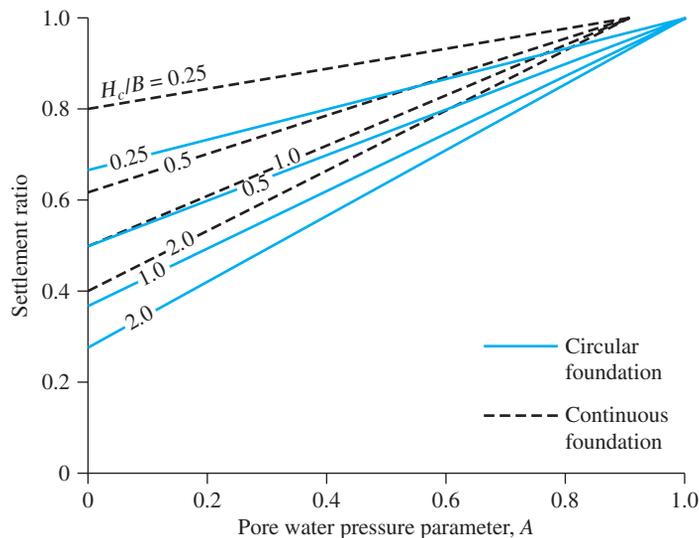


**Figure 7.22** Settlement ratios for circular ( $K_{cir}$ ) and continuous ( $K_{str}$ ) foundations

**Table 7.9** Variation of  $K_{cr(OCR)}$  with OCR and  $B/H_c$ 

OCR	$K_{cr(OCR)}$		
	$B/H_c = 4.0$	$B/H_c = 1.0$	$B/H_c = 0.2$
1	1	1	1
2	0.986	0.957	0.929
3	0.972	0.914	0.842
4	0.964	0.871	0.771
5	0.950	0.829	0.707
6	0.943	0.800	0.643
7	0.929	0.757	0.586
8	0.914	0.729	0.529
9	0.900	0.700	0.493
10	0.886	0.671	0.457
11	0.871	0.643	0.429
12	0.864	0.629	0.414
13	0.857	0.614	0.400
14	0.850	0.607	0.386
15	0.843	0.600	0.371
16	0.843	0.600	0.357

**Example 7.10**

A plan of a foundation  $1\text{ m} \times 2\text{ m}$  is shown in Figure 7.23. Estimate the consolidation settlement of the foundation, taking into account the three-dimensional effect. Given:  $A = 0.6$ .

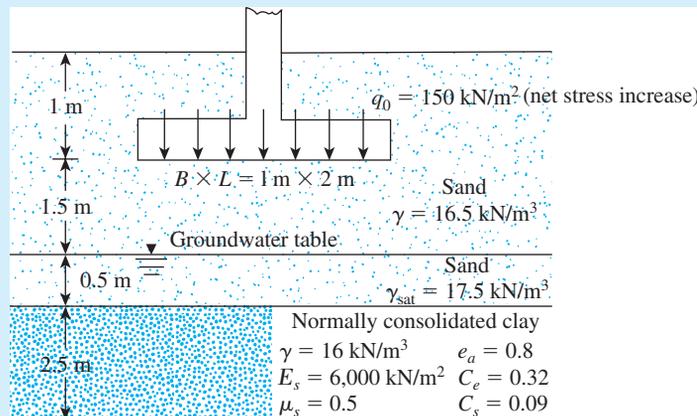**Figure 7.23** Calculation of primary consolidation settlement for a foundation

**Solution**

The clay is normally consolidated. Thus,

$$S_{c(p)\text{-oed}} = \frac{C_c H_c}{1 + e_o} \log \frac{\sigma'_o + \Delta\sigma'_{\text{av}}}{\sigma'_o}$$

so

$$\begin{aligned}\sigma'_o &= (2.5)(16.5) + (0.5)(17.5 - 9.81) + (1.25)(16 - 9.81) \\ &= 41.25 + 3.85 + 7.74 = 52.84 \text{ kN/m}^2\end{aligned}$$

From Eq. (6.29),

$$\Delta\sigma'_{\text{av}} = \frac{1}{6}(\Delta\sigma'_t + 4\Delta\sigma'_m + \Delta\sigma'_b)$$

Now the following table can be prepared (Note:  $L = 2$  m;  $B = 1$  m):

$m_1 = L/B$	$z(\text{m})$	$z/(B/2) = n_1$	$I_c^a$	$\Delta\sigma' = q_o I_c^b$
2	2	4	0.190	28.5 = $\Delta\sigma'_t$
2	2 + 2.5/2 = 3.25	6.5	≈ 0.085	12.75 = $\Delta\sigma'_m$
2	2 + 2.5 = 4.5	9	0.045	6.75 = $\Delta\sigma'_b$

<sup>a</sup>Table 6.5

<sup>b</sup>Eq. (6.14)

Now,

$$\Delta\sigma'_{\text{av}} = \frac{1}{6}(28.5 + 4 \times 12.75 + 6.75) = 14.38 \text{ kN/m}^2$$

so

$$\begin{aligned}S_{c(p)\text{-oed}} &= \frac{(0.32)(2.5)}{1 + 0.8} \log \left( \frac{52.84 + 14.38}{52.84} \right) = 0.0465 \text{ m} \\ &= \mathbf{46.5 \text{ mm}}\end{aligned}$$

Now assuming that the 2:1 method of stress increase (see Figure 6.7) holds good, the area of distribution of stress at the top of the clay layer will have dimensions

$$B' = \text{width} = B + z = 1 + (1.5 + 0.5) = 3 \text{ m}$$

and

$$L' = \text{width} = L + z = 2 + (1.5 + 0.5) = 4 \text{ m}$$

The diameter of an equivalent circular area,  $B_{\text{eq}}$ , can be given as

$$\frac{\pi}{4} B_{\text{eq}}^2 = B' L'$$

so that

$$B_{\text{eq}} = \sqrt{\frac{4B'L'}{\pi}} = \sqrt{\frac{(4)(3)(4)}{\pi}} = 3.91 \text{ m}$$

Also,

$$\frac{H_c}{B_{eq}} = \frac{2.5}{3.91} = 0.64$$

From Figure 7.22, for  $A = 0.6$  and  $H_c/B_{eq} = 0.64$ , the magnitude of  $K_{cr} \approx 0.78$ . Hence,

$$S_{e(p)} = K_{cr} S_{e(p)-oed} = (0.78)(46.5) \approx \mathbf{36.3 \text{ mm}}$$

## 7.11 Settlement Due to Secondary Consolidation

At the end of primary consolidation (i.e., after the complete dissipation of excess pore water pressure) some settlement is observed that is due to the plastic adjustment of soil fabrics. This stage of consolidation is called *secondary consolidation*. A plot of deformation against the logarithm of time during secondary consolidation is practically linear as shown in Figure 7.24. From the figure, the secondary compression index can be defined as

$$C_\alpha = \frac{\Delta e}{\log t_2 - \log t_1} = \frac{\Delta e}{\log(t_2/t_1)} \quad (7.69)$$

where


$C_\alpha$  = secondary compression index

$\Delta e$  = change of void ratio

$t_1, t_2$  = time

The magnitude of the secondary consolidation can be calculated as

$$S_{c(s)} = C'_\alpha H_c \log(t_2/t_1) \quad (7.70)$$

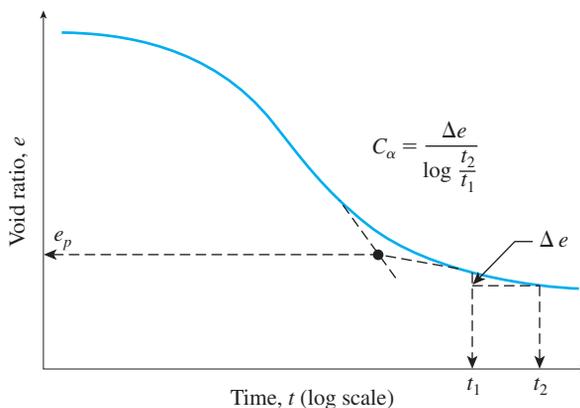

**Figure 7.24** Variation of  $e$  with  $\log t$  under a given load increment, and definition of secondary compression index

where

$$C'_\alpha = C_\alpha / (1 + e_p) \quad (7.71)$$

$e_p$  = void ratio at the end of primary consolidation

$H_c$  = thickness of clay layer

Mesri (1973) correlated  $C'_\alpha$  with the natural moisture content ( $w$ ) of several soils, from which it appears that

$$C'_\alpha \approx 0.0001w \quad (7.72)$$

where  $w$  = natural moisture content, in percent. For most overconsolidated soils,  $C'_\alpha$  varies between 0.0005 to 0.001.

Mesri and Godlewski (1977) compiled the magnitude of  $C_\alpha/C_c$  ( $C_c$  = compression index) for a number of soils. Based on their compilation, it can be summarized that

- For inorganic clays and silts:

$$C_\alpha/C_c \approx 0.04 \pm 0.01$$

- For organic clays and silts:

$$C_\alpha/C_c \approx 0.05 \pm 0.01$$

- For peats:

$$C_\alpha/C_c \approx 0.075 \pm 0.01$$

Secondary consolidation settlement is more important in the case of all organic and highly compressible inorganic soils. In overconsolidated inorganic clays, the secondary compression index is very small and of less practical significance.

There are several factors that might affect the magnitude of secondary consolidation, some of which are not yet very clearly understood (Mesri, 1973). The ratio of secondary to primary compression for a given thickness of soil layer is dependent on the ratio of the stress increment,  $\Delta\sigma'$ , to the initial effective overburden stress,  $\sigma'_o$ . For small  $\Delta\sigma'/\sigma'_o$  ratios, the secondary-to-primary compression ratio is larger.

### Example 7.11

Refer to Example 7.10. Given for the clay layer:  $C_\alpha = 0.02$ . Estimate the total consolidation settlement five years after the completion of the primary consolidation settlement. (Note: Time for completion of primary consolidation settlement is 1.3 years).

#### Solution

From Eq. (2.53),

$$C_c = \frac{e_1 - e_2}{\log \left( \frac{\sigma'_2}{\sigma'_1} \right)}$$

For this problem,  $e_1 - e_2 = \Delta e$ .

Referring to Example 7.10, we have

$$\begin{aligned}\sigma'_2 &= \sigma'_o + \Delta\sigma' = 52.84 + 14.38 = 67.22 \text{ kN/m}^2 \\ \sigma'_1 &= \sigma'_o = 52.84 \text{ kN/m}^2 \\ C_c &= 0.32\end{aligned}$$

Hence,

$$\Delta e = C_c \log \left( \frac{\sigma'_o + \Delta\sigma}{\sigma'_o} \right) = 0.32 \log \left( \frac{67.22}{52.84} \right) = 0.0335$$

Given:  $e_o = 0.8$ . Hence,

$$e_p = e_o - e = 0.8 - 0.0335 = 0.7665$$

From Eq. (7.71),

$$C'_\alpha = \frac{C_\alpha}{1 + e_p} = \frac{0.02}{1 + 0.7665} = 0.0113$$

From Eq. (7.70),

$$S_{c(s)} = C'_\alpha H_c \log \left( \frac{t_2}{t_1} \right)$$

Note:  $t_1 = 1.3$  years;  $t_2 = 1.3 + 5 = 6.3$  years.

Thus,

$$S_{c(s)} = (0.0113)(2.5 \text{ m}) \log \left( \frac{6.3}{1.3} \right) = 0.0194 \text{ m} = 19.4 \text{ mm}$$

Total consolidation settlement is

$$\begin{array}{r} \underbrace{36.3 \text{ mm}} + 19.4 = \mathbf{55.7 \text{ m}} \\ \uparrow \\ \text{Example 7.10} \\ \text{(Primary} \\ \text{consolidation} \\ \text{settlement)} \end{array}$$

## 7.12 Field Load Test

The ultimate load-bearing capacity of a foundation, as well as the allowable bearing capacity based on tolerable settlement considerations, can be effectively determined from the field load test, generally referred to as the *plate load test*. The plates that are used for tests in the field are usually made of steel and are 25 mm (1 in.) thick and 150 mm to 762 mm (6 in. to 30 in.) in diameter. Occasionally, square plates that are 305 mm  $\times$  305 mm (12 in.  $\times$  12 in.) are also used.

To conduct a plate load test, a hole is excavated with a minimum diameter of  $4B$  ( $B$  is the diameter of the test plate) to a depth of  $D_f$ , the depth of the proposed foundation. The plate is placed at the center of the hole, and a load that is about one-fourth to one-fifth of the estimated ultimate load is applied to the plate in steps by means of a jack. A schematic diagram of the test arrangement is shown in Figure 7.25a. During each step of the application of the load, the settlement of the plate is observed on dial gauges. At least one hour is allowed to elapse between each application. The test should be conducted until failure, or at least until the plate has gone through 25 mm (1 in.) of settlement. Figure 7.25b shows the nature of the load–settlement curve obtained from such tests, from which the ultimate load per unit area can be determined. Figure 7.26 shows a plate load test conducted in the field.

For tests in clay,

$$q_{u(F)} = q_{u(P)} \quad (7.73)$$

where



$q_{u(F)}$  = ultimate bearing capacity of the proposed foundation

$q_{u(P)}$  = ultimate bearing capacity of the test plate


Equation (7.73) implies that the ultimate bearing capacity in clay is virtually independent of the size of the plate.

For tests in sandy soils,

$$q_{u(F)} = q_{u(P)} \frac{B_F}{B_P} \quad (7.74)$$

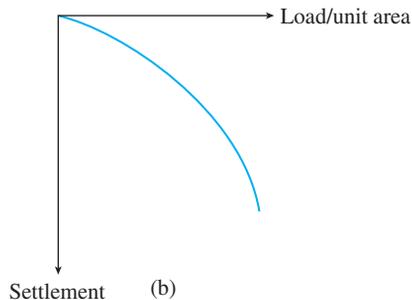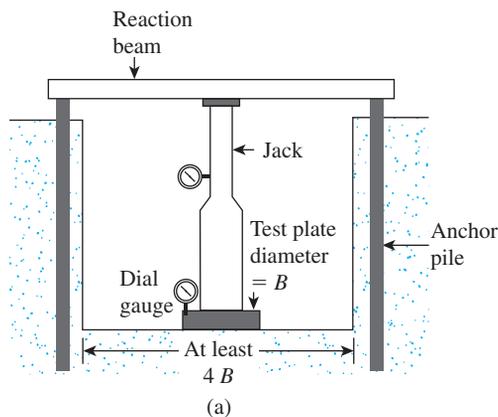

**Figure 7.25** Plate load test: (a) test arrangement; (b) nature of load–settlement curve

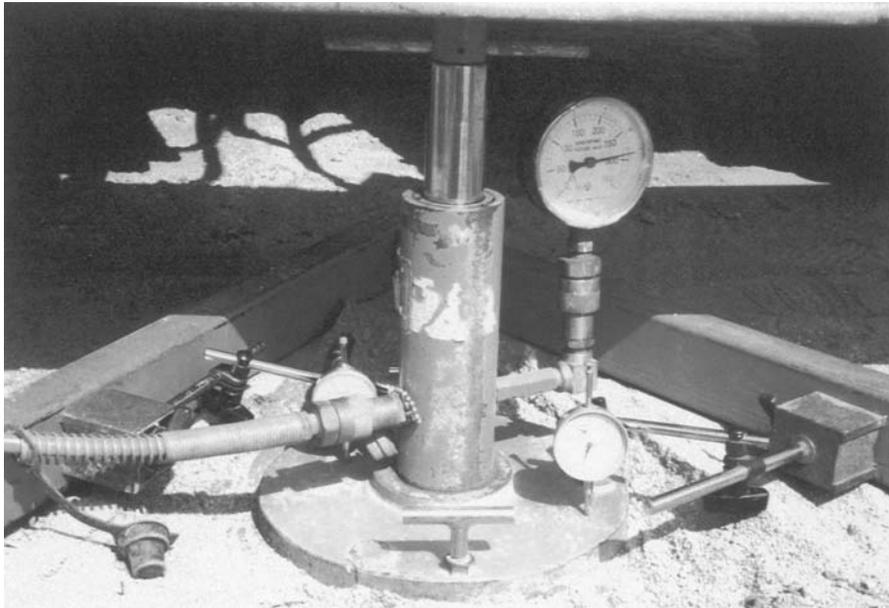

**Figure 7.26** Plate load test in the field (Courtesy of Braja M. Das, Henderson, Nevada)

where

$B_F$  = width of the foundation

$B_P$  = width of the test plate

The allowable bearing capacity of a foundation, based on settlement considerations and for a given intensity of load,  $q_o$ , is

$$S_F = S_P \frac{B_F}{B_P} \quad (\text{for clayey soil}) \quad (7.75)$$

and

$$S_F = S_P \left( \frac{2B_F}{B_F + B_P} \right)^2 \quad (\text{for sandy soil}) \quad (7.76)$$

## 7.13 Presumptive Bearing Capacity

Several building codes (e.g., the Uniform Building Code, Chicago Building Code, and New York City Building Code) specify the allowable bearing capacity of foundations on various types of soil. For minor construction, they often provide fairly acceptable guidelines. However, these bearing capacity values are based primarily on the *visual* classification of near-surface soils and generally do not take into consideration factors such as the stress history of the soil, the location of the water table, the depth of the foundation, and the tolerable settlement. So, for large construction projects, the codes' presumptive values should be used only as guides.

## 7.14 Tolerable Settlement of Buildings

In most instances of construction, the subsoil is not homogeneous and the load carried by various shallow foundations of a given structure can vary widely. As a result, it is reasonable to expect varying degrees of settlement in different parts of a given building. The *differential settlement* of the parts of a building can lead to damage of the superstructure. Hence, it is important to define certain parameters that quantify differential settlement and to develop limiting values for those parameters in order that the resulting structures be safe. Burland and Wroth (1970) summarized the important parameters relating to differential settlement.

Figure 7.27 shows a structure in which various foundations, at  $A$ ,  $B$ ,  $C$ ,  $D$ , and  $E$ , have gone through some settlement. The settlement at  $A$  is  $AA'$ , at  $B$  is  $BB'$ , etc. Based on this figure, the definitions of the various parameters are as follows:

$S_T$  = total settlement of a given point

$\Delta S_T$  = difference in total settlement between any two points

$\alpha$  = gradient between two successive points


$\beta$  = angular distortion =  $\frac{\Delta S_{T(ij)}}{l_{ij}}$

(Note:  $l_{ij}$  = distance between points  $i$  and  $j$ )

$\omega$  = tilt

$\Delta$  = relative deflection (i.e., movement from a straight line joining two reference points)

$\frac{\Delta}{L}$  = deflection ratio

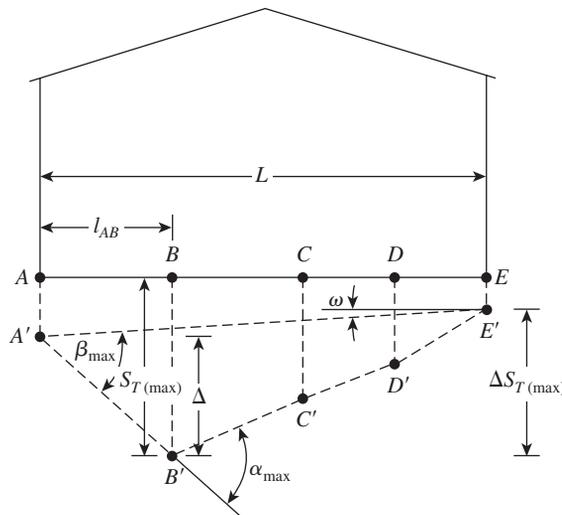

**Figure 7.27** Definition of parameters for differential settlement

Since the 1950s, various researchers and building codes have recommended allowable values for the preceding parameters. A summary of several of these recommendations is presented next.

In 1956, Skempton and McDonald proposed the following limiting values for maximum settlement and maximum angular distortion, to be used for building purposes:

Maximum settlement, $S_{T(\max)}$	
In sand	32 mm
In clay	45 mm
Maximum differential settlement, $\Delta S_{T(\max)}$	
Isolated foundations in sand	51 mm
Isolated foundations in clay	76 mm
Raft in sand	51–76 mm
Raft in clay	76–127 mm
Maximum angular distortion, $\beta_{\max}$	1/300

On the basis of experience, Polshin and Tokar (1957) suggested the following allowable deflection ratios for buildings as a function of  $L/H$ , the ratio of the length to the height of a building:

$$\begin{aligned}\Delta/L &= 0.0003 \text{ for } L/H \leq 2 \\ \Delta/L &= 0.001 \text{ for } L/H = 8\end{aligned}$$

The 1955 Soviet Code of Practice allowable values are given in Table 7.10.

Bjerrum (1963) recommended the following limiting angular distortion,  $\beta_{\max}$  for various structures, as shown in Table 7.11.

**Table 7.10**

Type of building	$L/H$	$\Delta/L$
Multistory buildings and civil dwellings	$\leq 3$	0.0003 (for sand) 0.0004 (for clay)
	$\geq 5$	0.0005 (for sand) 0.0007 (for clay)
One-story mills		0.001 (for sand and clay)

**Table 7.11**

Category of potential damage	$\beta_{\max}$
Safe limit for flexible brick wall ( $L/H > 4$ )	1/150
Danger of structural damage to most buildings	1/150
Cracking of panel and brick walls	1/150
Visible tilting of high rigid buildings	1/250
First cracking of panel walls	1/300
Safe limit for no cracking of building	1/500
Danger to frames with diagonals	1/600

**Table 7.12** Recommendations of European Committee for Standardization on Differential Settlement Parameters


Item	Parameter	Magnitude	Comments
Limiting values for serviceability (European Committee for Standardization, 1994a)	$S_T$	25 mm	Isolated shallow foundation
		50 mm	Raft foundation
	$\Delta S_T$	5 mm	Frames with rigid cladding
		10 mm	Frames with flexible cladding
Maximum acceptable foundation movement (European Committee for Standardization, 1994b)	$S_T$	20 mm	Open frames
		$\beta$	—
	$\Delta S_T$	1/500	—
		$\beta$	50
	$\beta$	20	Isolated shallow foundation
		$\approx 1/500$	—

If the maximum allowable values of  $\beta_{\max}$  are known, the magnitude of the allowable  $S_{T(\max)}$  can be calculated with the use of the foregoing correlations.

The European Committee for Standardization has also provided limiting values for serviceability and the maximum accepted foundation movements. (See Table 7.12.)

## Problems

- 7.1** Refer to Figure 7.1. A flexible foundation measuring  $1.5 \text{ m} \times 3 \text{ m}$  is supported by a saturated clay. Given:  $D_f = 1.2 \text{ m}$ ,  $H = 3 \text{ m}$ ,  $E_s$  (clay) =  $600 \text{ kN/m}^2$ , and  $q_o = 150 \text{ kN/m}^2$ . Determine the average elastic settlement of the foundation. Use Eq. (7.1).
- 7.2** A planned flexible load area (see Figure P7.2) is to be  $3 \text{ m} \times 4.6 \text{ m}$  and carries a uniformly distributed load of  $180 \text{ kN/m}^2$ . Estimate the elastic settlement below the center of the loaded area. Assume that  $D_f = 2 \text{ m}$  and  $H = \infty$ . Use Eq. (7.4).

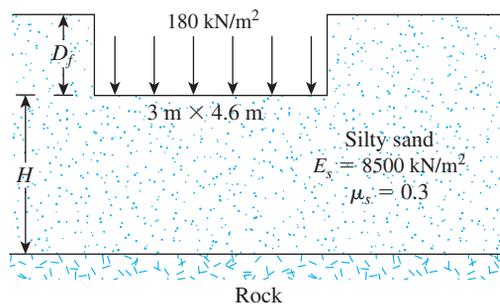**Figure P7.2**

- 7.3** Redo Problem 7.2, assuming that  $D_f = 5 \text{ m}$  and  $H = 3 \text{ m}$ .
- 7.4** Figure 7.3 shows a foundation of  $10 \text{ ft} \times 6.25 \text{ ft}$  resting on a sand deposit. The net load per unit area at the level of the foundation,  $q_o$ , is  $3000 \text{ lb/ft}^2$ . For the sand,  $\mu_s = 0.3$ ,  $E_s = 3200 \text{ lb/in.}^2$ ,  $D_f = 2.5 \text{ ft}$ , and  $H = 32 \text{ ft}$ . Assume that the foundation is rigid and determine the elastic settlement the foundation would undergo. Use Eqs. (7.4) and (7.12).
- 7.5** Repeat Problem 7.4 for a foundation of size =  $2.1 \text{ m} \times 2.1 \text{ m}$ , with  $q_o = 230 \text{ kN/m}^2$ ,  $D_f = 1.5 \text{ m}$ ,  $H = 12 \text{ m}$ , and soil conditions of  $\mu_s = 0.4$ ,  $E_s = 16,000 \text{ kN/m}^2$ , and  $\gamma = 18.1 \text{ kN/m}^3$ .

**7.6** A shallow foundation supported by a silty sand is shown in Figure 7.5. Given:

Length:  $L = 2$  m

Width:  $B = 1$  m

Depth of foundation:  $D_f = 1$  m

Thickness of foundation:  $t = 0.23$  m

Load per unit area:  $q_o = 190$  kN/m<sup>2</sup>

$$E_f = 15 \times 10^6 \text{ kN/m}^2$$

The silty sand has the following properties:

$$H = 2 \text{ m}$$

$$\mu_s = 0.4$$

$$E_o = 9000 \text{ kN/m}^2$$

$$k = 500 \text{ kN/m}^2/\text{m}$$

Using Eq. (7.17), estimate the elastic settlement of the foundation.


**7.7** A plan calls for a square foundation measuring  $3 \text{ m} \times 3 \text{ m}$  supported by a layer of sand (see Figure 7.5). Let  $D_f = 1.5$  m,  $t = 0.25$  m,  $E_o = 16,000$  kN/m<sup>2</sup>,  $k = 400$  kN/m<sup>2</sup>/m,  $\mu_s = 0.3$ ,  $H = 20$  m,  $E_f = 15 \times 10^6$  kN/m<sup>2</sup>, and  $q_o = 150$  kN/m<sup>2</sup>. Calculate the elastic settlement. Use Eq. (7.17).

**7.8** Solve Problem 7.4 with Eq. (7.20). Ignore the correction factor for creep. For the unit weight of soil, use  $\gamma = 115$  lb/ft<sup>3</sup>.

**7.9** Solve Problem 7.8 using Eq. (7.29). Ignore the post-construction settlement.

**7.10** A continuous foundation on a deposit of sand layer is shown in Figure P7.10 along with the variation of the cone penetration resistance  $q_c$ . Assuming  $\gamma = 18$  kN/m<sup>3</sup> and creep is at the end of ten years after construction, calculate the elastic settlement of the foundation using the strain influence factor method. Use Eqs. (7.20) and (7.26).

**7.11** Solve Problem 7.10 using Eqs. (7.29), (7.30), and (7.31).

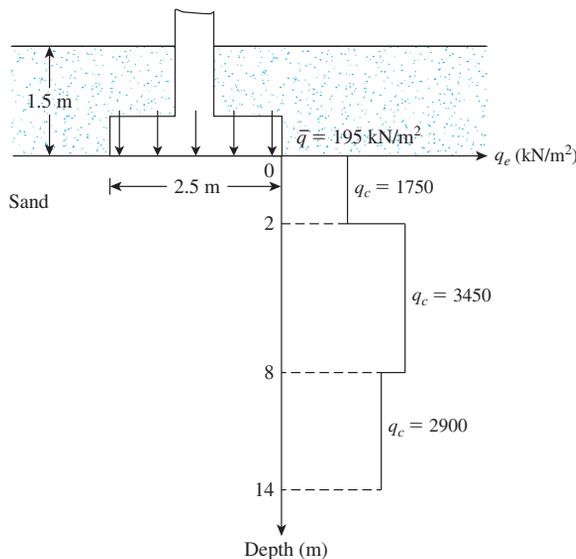

**Figure P7.10**

7.12 The following are the results of standard penetration tests in a granular soil deposit.

Depth (ft)	Standard penetration number, $N_{60}$
5	10
10	12
15	9
20	14
25	16

What will be the net allowable bearing capacity of a foundation planned to be meyerhof 5 ft  $\times$  5 ft? Let  $D_f = 3$  ft and the allowable settlement = 1 in. Use the relationships of Meyerhof presented in Section 7.6.

7.13 A shallow foundation measuring 1 m  $\times$  2 m in plan is to be constructed over a normally consolidated sand layer. Given:  $D_f = 1$  m,  $N_{60}$  increases with depth,  $\bar{N}_{60}$  (in the depth of stress influence) = 12, and  $q_{net} = 153$  kN/m<sup>2</sup>. Estimate the elastic settlement using Burland and Burbidge's method (Section 7.6).

7.14 Refer to Figure 7.15. For a foundation on a layer of sand, given:  $B = 5$  ft,  $L = 10$  ft,  $d = 5$  ft,  $\beta = 26.6^\circ$ ,  $e = 0.5$  ft, and  $\delta = 10^\circ$ . The Pressuremeter testing at the site produced a mean Pressuremeter curve for which the  $p_p(m)$  versus  $\Delta R/R_o$  points are as follow.

$\Delta R/R_o$ (1)	$p_p(m)$ (lb/in. <sup>2</sup> ) (2)
0.002	7.2
0.004	24.2
0.008	32.6
0.012	42.4
0.024	68.9
0.05	126.1
0.08	177.65
0.1	210.5
0.2	369.6

What should be the magnitude of  $Q_o$  for a settlement (center) of 1 in.?

7.15 Estimate the consolidation settlement of the clay layer shown in Figure P6.8 using the results of Problem 6.8.

## References

- BJERRUM, L. (1963). "Allowable Settlement of Structures," *Proceedings, European Conference on Soil Mechanics and Foundation Engineering*, Wiesbaden, Germany, Vol. III, pp. 135–137.
- BOWLES, J. E. (1987). "Elastic Foundation Settlement on Sand Deposits," *Journal of Geotechnical Engineering*, ASCE, Vol. 113, No. 8, pp. 846–860.
- BOWLES, J. E. (1977). *Foundation Analysis and Design*, 2nd ed., McGraw-Hill, New York.
- BRIAUD, J. L. (2007). "Spread Footings in Sand: Load Settlement Curve Approach," *Journal of Geotechnical and Geoenvironmental Engineering*, American Society of Civil Engineers, Vol. 133, No. 8, pp. 905–920.
- BURLAND, J. B. and BURBIDGE, M. C. (1985). "Settlement of Foundations on Sand and Gravel," *Proceedings, Institute of Civil Engineers*, Part I, Vol. 7, pp. 1325–1381.

- BURLAND, J. B. and WROTH, C. P. (1974). "Allowable and Differential Settlement of Structures Including Damage and Soil-Structure Interaction," *Proceedings*, Conference on Settlement of Structures, Cambridge University, England, pp. 611–654.
- CHRISTIAN, J. T. and CARRIER, W. D. (1978). "Janbu, Bjerrum, and Kjaernsli's Chart Reinterpreted," *Canadian Geotechnical Journal*, Vol. 15, pp. 124–128.
- DUNCAN, J. M. and BUCHIGNANI, A. N. (1976). *An Engineering Manual for Settlement Studies*, Department of Civil Engineering, University of California, Berkeley.
- EUROPEAN COMMITTEE FOR STANDARDIZATION (1994a). *Basis of Design and Actions on Structures*, Eurocode 1, Brussels, Belgium.
- EUROPEAN COMMITTEE FOR STANDARDIZATION (1994b). *Geotechnical Design, General Rules—Part 1*, Eurocode 7, Brussels, Belgium.
- FOX, E. N. (1948). "The Mean Elastic Settlement of a Uniformly Loaded Area at a Depth below the Ground Surface," *Proceedings, 2nd International Conference on Soil Mechanics and Foundation Engineering*, Rotterdam, Vol. 1, pp. 129–132.
- JANBU, N., BJERRUM, L. and KJAERNSLI, B. (1956). "Veiledning ved lossing av fundamentering—soppgaver," *Publication No. 18*, Norwegian Geotechnical Institute, pp. 30–32.
- LEONARDS, G. A. (1976). *Estimating Consolidation Settlement of Shallow Foundations on Overconsolidated Clay*, Special Report No. 163, Transportation Research Board, Washington, D.C., pp. 13–16.
- MAYNE, P. W. and POULOS, H. G. (1999). "Approximate Displacement Influence Factors for Elastic Shallow Foundations," *Journal of Geotechnical and Geoenvironmental Engineering*, ASCE, Vol. 125, No. 6, pp. 453–460.
- MESRI, G. (1973). "Coefficient of Secondary Compression," *Journal of the Soil Mechanics and Foundations Division*, American Society of Civil Engineers, Vol. 99, No. SM1, pp. 122–137.
- MESRI, G. and GODLEWSKI, P. M. (1977). "Time and Stress—Compressibility Interrelationship," *Journal of Geotechnical Engineering Division*, American Society of Civil Engineers, Vol. 103, No. GT5, pp. 417–430.
- MEYERHOF, G. G. (1956). "Penetration Tests and Bearing Capacity of Cohesionless Soils," *Journal of the Soil Mechanics and Foundations Division*, American Society of Civil Engineers, Vol. 82, No. SM1, pp. 1–19.
- MEYERHOF, G. G. (1965). "Shallow Foundations," *Journal of the Soil Mechanics and Foundations Division*, American Society of Civil Engineers, Vol. 91, No. SM2, pp. 21–31.
- PECK, R. B., HANSON, W. E. and THORNBURN, T. H. (1974). *Foundation Engineering*, 2nd ed., John Wiley, New York.
- POLSHIN, D. E. and TOKAR, R. A. (1957). "Maximum Allowable Nonuniform Settlement of Structures," *Proceedings, Fourth International Conference on Soil Mechanics and Foundation Engineering*, London, Vol. 1, pp. 402–405.
- SALGADO, R. (2008). *The Engineering of Foundations*, McGraw-Hill, New York.
- SCHMERTMANN, J. H., HARTMAN, J. P. and BROWN, P. R. (1978). "Improved Strain Influence Factor Diagrams," *Journal of the Geotechnical Engineering Division*, American Society of Civil Engineers, Vol. 104, No. GT8, pp. 1131–1135.
- SKEMPTON, A. W. and BJERRUM, L. (1957). "A Contribution to Settlement Analysis of Foundations in Clay," *Geotechnique*, London, Vol. 7, p. 178.
- SKEMPTON, A. W. and McDONALD, D. M. (1956). "The Allowable Settlement of Buildings," *Proceedings of Institute of Civil Engineers*, Vol. 5, Part III, p. 727.
- STEINBRENNER, W. (1934). "Tafeln zur Setzungsberechnung," *Die Strasse*, Vol. 1, pp. 121–124.
- TENG, W. C. (1962). *Foundation Design*, Prentice-Hall, New Jersey.
- TERZAGHI, K. (1943). *Theoretical Soil Mechanics*, John Wiley, New York.
- TERZAGHI, K., Peck, R. B. and Mesri, G. (1996). *Soil Mechanics in Engineering Practice*, 3rd ed., Wiley, New York.



# 8 Mat Foundations

## 8.1 Introduction

Under normal conditions, square and rectangular footings such as those described in Chapters 4 and 5 are economical for supporting columns and walls. However, under certain circumstances, it may be desirable to construct a footing that supports a line of two or more columns. These footings are referred to as *combined footings*. When more than one line of columns is supported by a concrete slab, it is called a *mat foundation*. Combined footings can be classified generally under the following categories:

- a. Rectangular combined footing
- b. Trapezoidal combined footing
- c. Strap footing

Mat foundations are generally used with soil that has a low bearing capacity. A brief overview of the principles of combined footings is given in Section 8.2, followed by a more detailed discussion on mat foundations.


## 8.2 Combined Footings

### Rectangular Combined Footing

In several instances, the load to be carried by a column and the soil bearing capacity are such that the standard spread footing design will require extension of the column foundation beyond the property line. In such a case, two or more columns can be supported on a single rectangular foundation, as shown in Figure 8.1. If the net allowable soil pressure is known, the size of the foundation ( $B \times L$ ) can be determined in the following manner:

- a. Determine the area of the foundation

$$A = \frac{Q_1 + Q_2}{q_{\text{net(alt)}}} \quad (8.1)$$

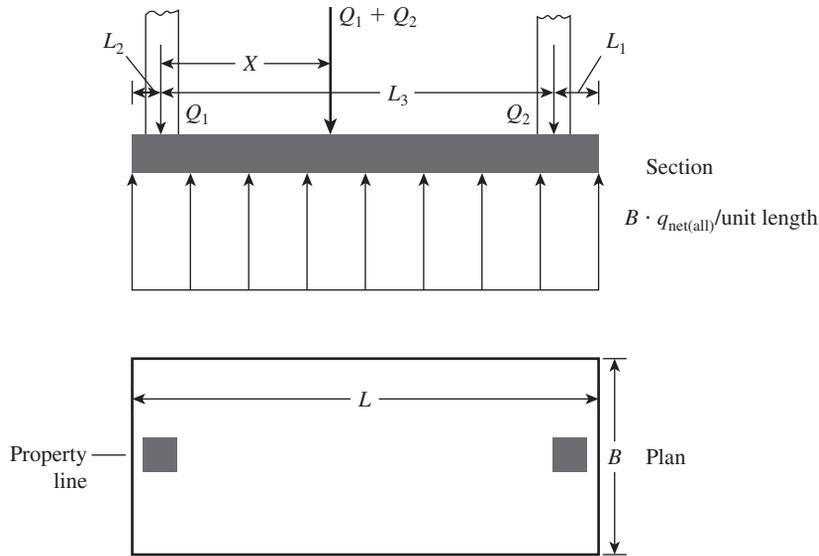

**Figure 8.1** Rectangular combined footing

where

$Q_1, Q_2$  = column loads

$q_{\text{net(all)}}$  = net allowable soil bearing capacity

- b.** Determine the location of the resultant of the column loads. From Figure 8.1,

$$X = \frac{Q_2 L_3}{Q_1 + Q_2} \quad (8.2)$$

- c.** For a uniform distribution of soil pressure under the foundation, the resultant of the column loads should pass through the centroid of the foundation. Thus,

$$L = 2(L_2 + X) \quad (8.3)$$

where  $L$  = length of the foundation.

- d.** Once the length  $L$  is determined, the value of  $L_1$  can be obtained as follows:

$$L_1 = L - L_2 - L_3 \quad (8.4)$$


Note that the magnitude of  $L_2$  will be known and depends on the location of the property line.

- e.** The width of the foundation is then

$$B = \frac{A}{L} \quad (8.5)$$

### Trapezoidal Combined Footing

Trapezoidal combined footing (see Figure 8.2) is sometimes used as an isolated spread foundation of columns carrying large loads where space is tight. The size of the

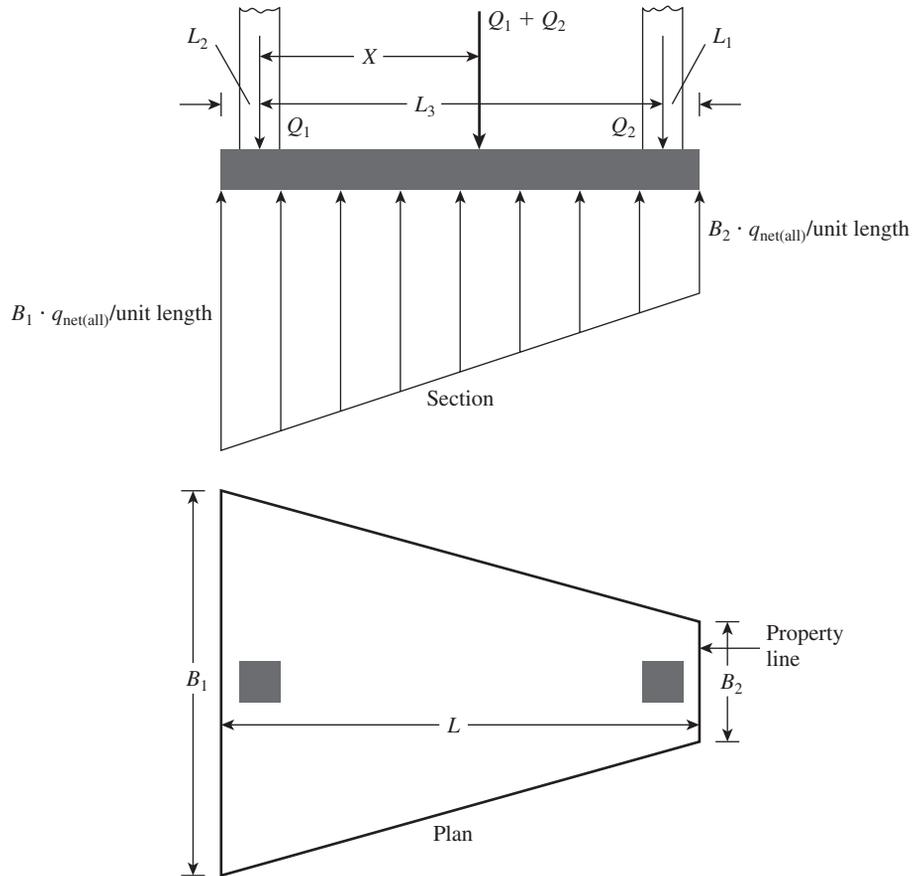

**Figure 8.2** Trapezoidal combined footing

foundation that will uniformly distribute pressure on the soil can be obtained in the following manner:

- a. If the net allowable soil pressure is known, determine the area of the foundation:

$$A = \frac{Q_1 + Q_2}{q_{\text{net(all)}}} \quad (8.6)$$

From Figure 8.2,

$$A = \frac{B_1 + B_2}{2} L \quad (8.7)$$

- b. Determine the location of the resultant for the column loads:

$$X = \frac{Q_2 L_3}{Q_1 + Q_2} \quad (8.8)$$

c. From the property of a trapezoid,


$$X + L_2 = \left( \frac{B_1 + 2B_2}{B_1 + B_2} \right) \frac{L}{3} \quad (8.9)$$

With known values of  $A$ ,  $L$ ,  $X$ , and  $L_2$ , solve Eqs. (8.7) and (8.9) to obtain  $B_1$  and  $B_2$ . Note that, for a trapezoid,

$$\frac{L}{3} < X + L_2 < \frac{L}{2}$$

### Cantilever Footing

Cantilever footing construction uses a *strap beam* to connect an eccentrically loaded column foundation to the foundation of an interior column. (See Figure 8.3). Cantilever footings may be used in place of trapezoidal or rectangular combined footings when the allowable soil bearing capacity is high and the distances between the columns are large.

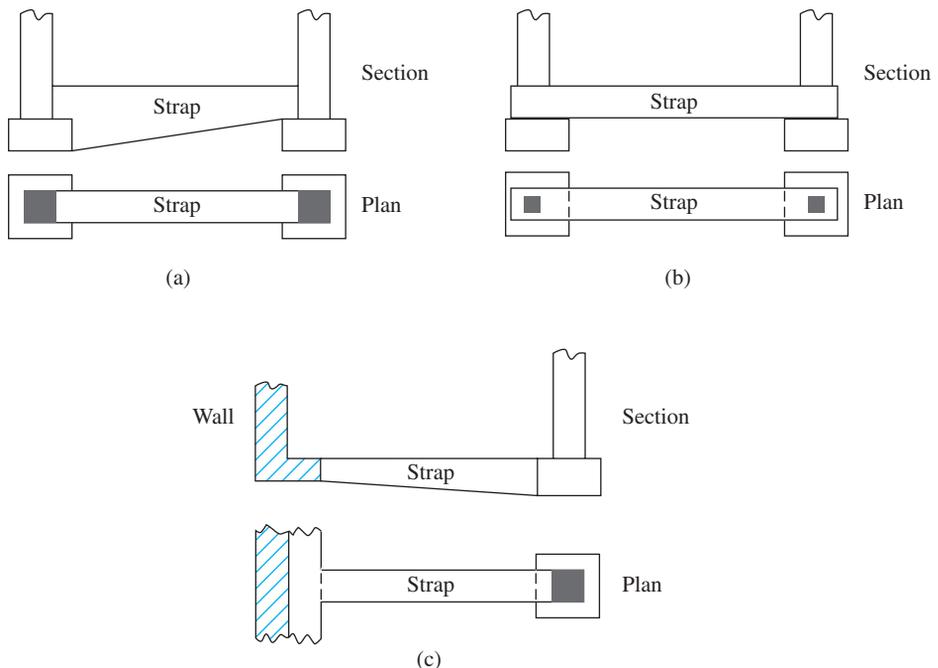

**Figure 8.3** Cantilever footing—use of strap beam

### Example 8.1

Refer to Figure 8.1. Given:

$$\begin{aligned} Q_1 &= 400 \text{ kN} \\ Q_2 &= 500 \text{ kN} \\ q_{\text{net(all)}} &= 140 \text{ kN/m}^2 \\ L_3 &= 3.5 \text{ m} \end{aligned}$$

Based on the location of the property line, it is required that  $L_2$  be 1.5 m. Determine the size ( $B \times L$ ) of the rectangular combined footing.

#### Solution

Area of the foundation required is

$$A = \frac{Q_1 + Q_2}{q_{\text{net(all)}}} = \frac{400 + 500}{140} = 6.43 \text{ m}^2$$

Location of the resultant [Eq. (8.2)] is

$$X = \frac{Q_2 L_3}{Q_1 + Q_2} = \frac{(500)(3.5)}{400 + 500} \approx 1.95 \text{ m}$$

For uniform distribution of soil pressure under the foundation from Eq. (8.3), we have

$$L = 2(L_2 + X) = 2(1.5 + 1.95) = \mathbf{6.9 \text{ m}}$$

Again, from Eq. (8.4),

$$L_1 = L - L_2 - L_3 = 6.9 - 1.5 - 3.5 = 1.9 \text{ m}$$

Thus,

$$B = \frac{A}{L} = \frac{6.43}{6.9} = \mathbf{0.93 \text{ m}}$$

### Example 8.2

Refer to Figure 8.2. Given:

$$\begin{aligned} Q_1 &= 1000 \text{ kN} \\ Q_2 &= 400 \text{ kN} \\ L_3 &= 3 \text{ m} \\ q_{\text{net(all)}} &= 120 \text{ kN/m}^2 \end{aligned}$$

Based on the space available for construction, it is required that  $L_2 = 1.2 \text{ m}$  and  $L_1 = 1 \text{ m}$ . Determine  $B_1$  and  $B_2$ .

#### Solution

The area of the trapezoidal combined footing required is [Eq. (8.6)]

$$A = \frac{Q_1 + Q_2}{q_{\text{net(all)}}} = \frac{1000 + 400}{120} = 11.67 \text{ m}^2$$

$$L = L_1 + L_2 + L_3 = 1 + 1.2 + 3 = 5.2 \text{ m}$$

From Eq. (8.7),

$$A = \frac{B_1 + B_2}{2} L$$

$$11.67 = \left( \frac{B_1 + B_2}{2} \right) (5.2)$$

or

$$B_1 + B_2 = 4.49 \text{ m} \quad (\text{a})$$

From Eq. (8.8),

$$X = \frac{Q_2 L_3}{Q_1 + Q_2} = \frac{(400)(3)}{1000 + 400} = 0.857 \text{ m}$$

Again, from Eq. (8.9),

$$X + L_2 = \left( \frac{B_1 + 2B_2}{B_1 + B_2} \right) \frac{L}{3}$$

$$0.857 + 1.2 = \left( \frac{B_1 + 2B_2}{B_1 + B_2} \right) \left( \frac{5.2}{3} \right)$$

$$\frac{B_1 + 2B_2}{B_1 + B_2} = 1.187 \quad (\text{b})$$

From Eqs. (a) and (b), we have

$$B_1 = 3.65 \text{ m}$$

$$B_2 = 0.84 \text{ m}$$

## 8.3 Common Types of Mat Foundations

The mat foundation, which is sometimes referred to as a *raft foundation*, is a combined footing that may cover the entire area under a structure supporting several columns and walls. Mat foundations are sometimes preferred for soils that have low load-bearing capacities, but that will have to support high column or wall loads. Under some conditions, spread footings would have to cover more than half the building area, and mat foundations might be more economical. Several types of mat foundations are used currently. Some of the common ones are shown schematically in Figure 8.4 and include the following:

1. Flat plate (Figure 8.4a). The mat is of uniform thickness.
2. Flat plate thickened under columns (Figure 8.4b).
3. Beams and slab (Figure 8.4c). The beams run both ways, and the columns are located at the intersection of the beams.
4. Flat plates with pedestals (Figure 8.4d).
5. Slab with basement walls as a part of the mat (Figure 8.4e). The walls act as stiffeners for the mat.

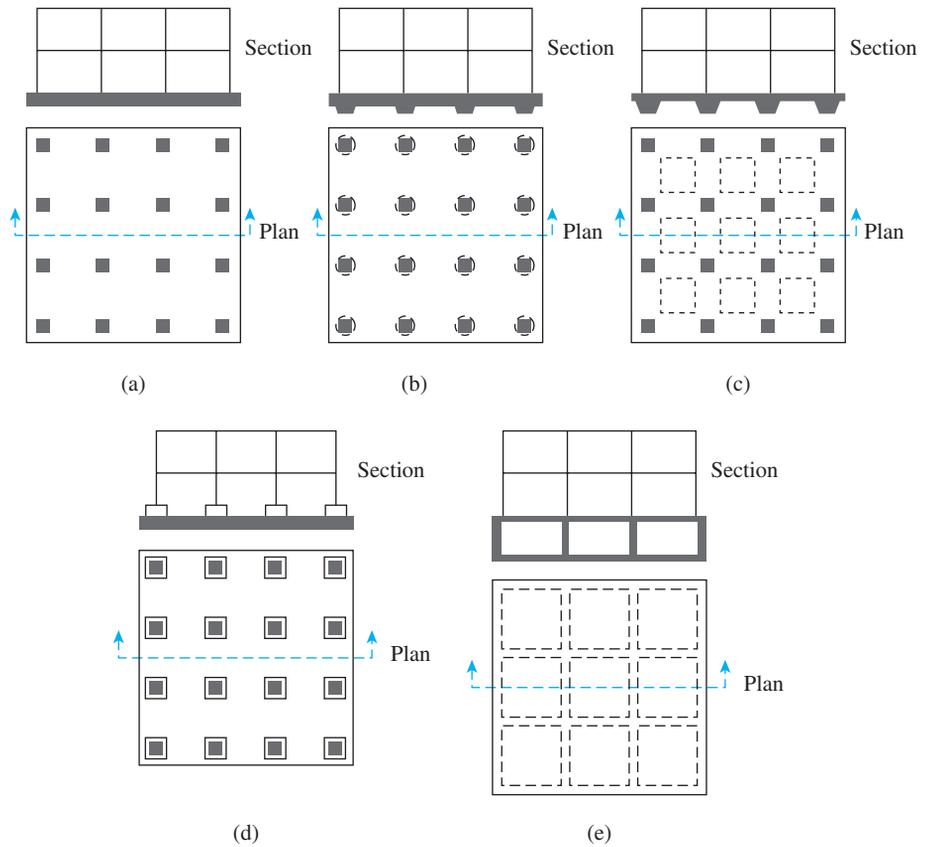


Figure 8.4 Common types of mat foundations

Mats may be supported by piles, which help reduce the settlement of a structure built over highly compressible soil. Where the water table is high, mats are often placed over piles to control buoyancy. Figure 8.5 shows the difference between the depth  $D_f$  and the width  $B$  of isolated foundations and mat foundations. Figure 8.6 shows a flat-plate mat foundation under construction.


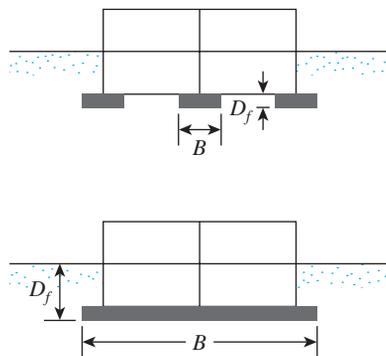


Figure 8.5 Comparison of isolated foundation and mat foundation ( $B$  = width,  $D_f$  = depth)

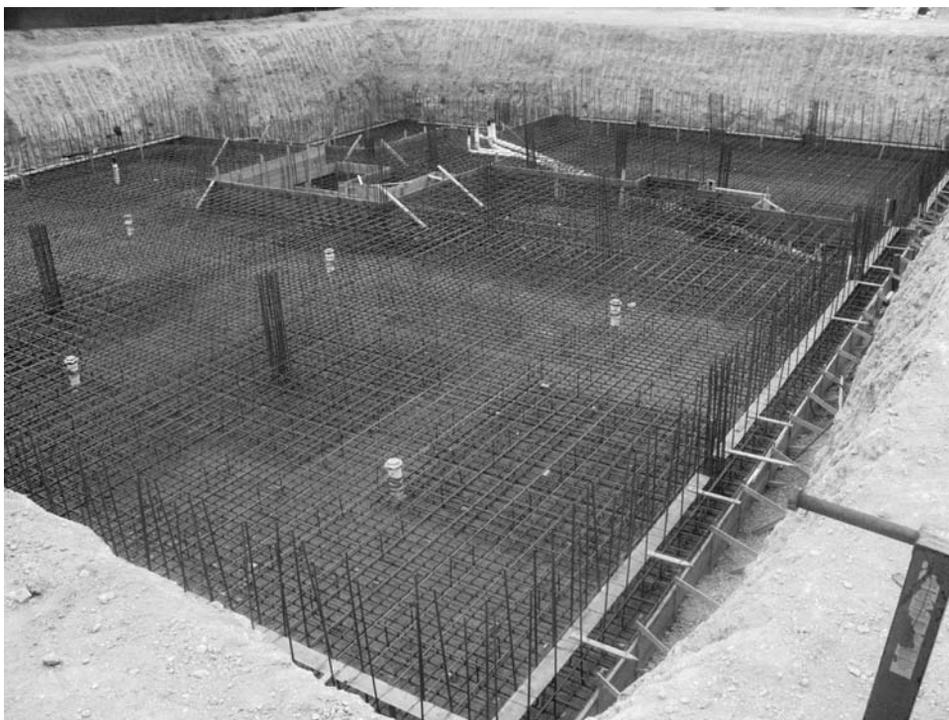

**Figure 8.6** A flat plate mat foundation under construction (Courtesy of Dharma Shakya, Geotechnical Solutions, Inc., Irvine, California)

## 8.4 Bearing Capacity of Mat Foundations

The *gross ultimate bearing capacity* of a mat foundation can be determined by the same equation used for shallow foundations (see Section 4.6), or

$$q_u = c'N_cF_{cs}F_{cd}F_{ci} + qN_qF_{qs}F_{qd}F_{qi} + \frac{1}{2}\gamma BN_\gamma F_{\gamma s}F_{\gamma d}F_{\gamma i} \quad [\text{Eq. (4.26)}]$$

(Chapter 3 gives the proper values of the bearing capacity factors, as well as the shape, depth, and load inclination factors.) The term  $B$  in Eq. (4.26) is the smallest dimension of the mat. The *net ultimate capacity* of a mat foundation is

$$q_{\text{net}(u)} = q_u - q \quad [\text{Eq. (4.21)}]$$

A suitable factor of safety should be used to calculate the net *allowable* bearing capacity. For mats on clay, the factor of safety should not be less than 3 under dead load or maximum live load. However, under the most extreme conditions, the factor of safety should be at least 1.75 to 2. For mats constructed over sand, a factor of safety of 3 should normally be used. Under most working conditions, the factor of safety against bearing capacity failure of mats on sand is very large.

For saturated clays with  $\phi = 0$  and a vertical loading condition, Eq. (4.26) gives

$$q_u = c_u N_c F_{cs} F_{cd} + q \quad (8.10)$$

where  $c_u$  = undrained cohesion. (Note:  $N_c = 5.14$ ,  $N_q = 1$ , and  $N_\gamma = 0$ .)  
From Table 4.3, for  $\phi = 0$ ,

$$F_{cs} = 1 + \frac{B}{L} \left( \frac{N_q}{N_c} \right) = 1 + \left( \frac{B}{L} \right) \left( \frac{1}{5.14} \right) = 1 + \frac{0.195B}{L}$$

and

$$F_{cd} = 1 + 0.4 \left( \frac{D_f}{B} \right)$$

Substitution of the preceding shape and depth factors into Eq. (8.10) yields

$$q_u = 5.14c_u \left( 1 + \frac{0.195B}{L} \right) \left( 1 + 0.4 \frac{D_f}{B} \right) + q \quad (8.11)$$

Hence, the net ultimate bearing capacity is

$$q_{\text{net}(u)} = q_u - q = 5.14c_u \left( 1 + \frac{0.195B}{L} \right) \left( 1 + 0.4 \frac{D_f}{B} \right) \quad (8.12)$$

For FS = 3, the net allowable soil bearing capacity becomes

$$q_{\text{net(allow)}} = \frac{q_{\text{net}(u)}}{\text{FS}} = 1.713c_u \left( 1 + \frac{0.195B}{L} \right) \left( 1 + 0.4 \frac{D_f}{B} \right) \quad (8.13)$$

The net allowable bearing capacity for mats constructed over granular soil deposits can be adequately determined from the standard penetration resistance numbers. From Eq. (7.39), for shallow foundations,

$$q_{\text{net}} (\text{kN/m}^2) = \frac{N_{60}}{0.08} \left( \frac{B + 0.3}{B} \right)^2 F_d \left( \frac{S_e}{25} \right) \quad [\text{Eq. (7.39)}]$$

where

$N_{60}$  = standard penetration resistance

$B$  = width (m)

$F_d = 1 + 0.33(D_f/B) \leq 1.33$

$S_e$  = settlement, (mm)

When the width  $B$  is large, the preceding equation can be approximated as

$$\begin{aligned}
 q_{\text{net}}(\text{kN/m}^2) &= \frac{N_{60}}{0.08} F_d \left( \frac{S_e}{25} \right) \\
 &= \frac{N_{60}}{0.08} \left[ 1 + 0.33 \left( \frac{D_f}{B} \right) \right] \left[ \frac{S_e(\text{mm})}{25} \right] \\
 &\leq 16.63 N_{60} \left[ \frac{S_e(\text{mm})}{25} \right]
 \end{aligned} \tag{8.14}$$

In English units, Eq. (8.14) may be expressed as

$$\begin{aligned}
 q_{\text{net(all)}}(\text{kip/ft}^2) &= 0.25 N_{60} \left[ 1 + 0.33 \left( \frac{D_f}{B} \right) \right] [S_e(\text{in.})] \\
 &\leq 0.33 N_{60} [S_e(\text{in.})]
 \end{aligned} \tag{8.15}$$

Generally, shallow foundations are designed for a maximum settlement of 25 mm (1 in.) and a differential settlement of about 19 mm (0.75 in.).

However, the width of the raft foundations are larger than those of the isolated spread footings. As shown in Table 6.5, the depth of significant stress increase in the soil below a foundation depends on the width of the foundation. Hence, for a raft foundation, the depth of the zone of influence is likely to be much larger than that of a spread footing. Thus, the loose soil pockets under a raft may be more evenly distributed, resulting in a smaller differential settlement. Accordingly, the customary assumption is that, *for a maximum raft settlement of 50 mm (2 in.), the differential settlement would be 19 mm (0.75 in.)*. Using this logic and conservatively assuming that  $F_d = 1$ , we can respectively approximate Eqs. (8.14) and (8.15) as

$$q_{\text{net(all)}} = q_{\text{net}}(\text{kN/m}^2) \approx 25 N_{60} \tag{8.16a}$$

and

$$q_{\text{net(all)}} = q_{\text{net}}(\text{kip/ft}^2) = 0.5 N_{60} \tag{8.16b}$$

The net pressure applied on a foundation (see Figure 8.7) may be expressed as


$$q = \frac{Q}{A} - \gamma D_f \tag{8.17}$$

where

$Q$  = dead weight of the structure and the live load

$A$  = area of the raft

In all cases,  $q$  should be less than or equal to allowable  $q_{\text{net(all)}}$ .

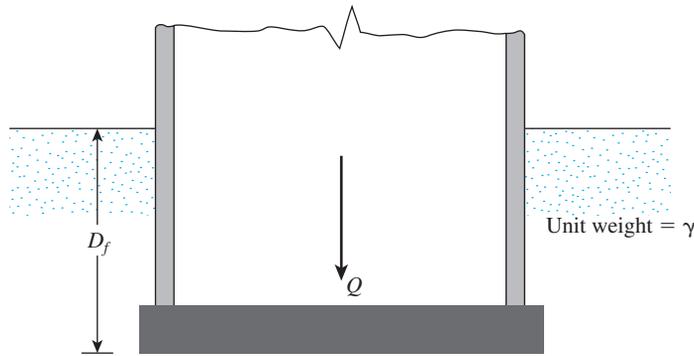

**Figure 8.7** Definition of net pressure on soil caused by a mat foundation

### Example 8.3

Determine the net ultimate bearing capacity of a mat foundation measuring  $20 \text{ m} \times 8 \text{ m}$  on a saturated clay with  $c_u = 85 \text{ kN/m}^2$ ,  $\phi = 0$ , and  $D_f = 1.5 \text{ m}$ .

#### Solution

From Eq. (8.12),

$$\begin{aligned} q_{\text{net}(u)} &= 5.14c_u \left[ 1 + \left( \frac{0.195B}{L} \right) \right] \left[ 1 + 0.4 \frac{D_f}{B} \right] \\ &= (5.14)(85) \left[ 1 + \left( \frac{0.195 \times 8}{20} \right) \right] \left[ 1 + \left( \frac{0.4 \times 1.5}{8} \right) \right] \\ &= \mathbf{506.3 \text{ kN/m}^2} \end{aligned}$$

### Example 8.4

What will be the net allowable bearing capacity of a mat foundation with dimensions of  $45 \text{ ft} \times 30 \text{ ft}$  constructed over a sand deposit? Here,  $D_f = 6.5 \text{ ft}$ , the allowable settlement is  $2 \text{ in.}$ , and the average penetration number  $N_{60} = 10$ .

#### Solution

From Eq. (8.15),

$$q_{\text{net}(\text{all})} = 0.25 N_{60} \left[ 1 + 0.33 \left( \frac{D_f}{B} \right) \right] S_e \text{ (in.)}$$

or

$$q_{\text{net}(\text{all})} = (0.25)(10) \left[ 1 + \frac{0.33 \times 6.5}{30} \right] (2) = \mathbf{5.36 \text{ kip/ft}^2}$$

## 8.5 Differential Settlement of Mats

In 1988, the American Concrete Institute Committee 336 suggested a method for calculating the differential settlement of mat foundations. According to this method, the rigidity factor  $K_r$  is calculated as

$$K_r = \frac{E'I_b}{E_s B^3} \quad (8.18)$$

where

$E'$  = modulus of elasticity of the material used in the structure

$E_s$  = modulus of elasticity of the soil

$B$  = width of foundation

$I_b$  = moment of inertia of the structure per unit length at right angles to  $B$

The term  $E'I_b$  can be expressed as

$$E'I_b = E' \left( I_F + \sum I'_b + \sum \frac{ah^3}{12} \right) \quad (8.19)$$

where

$E'I_b$  = flexural rigidity of the superstructure and foundation per unit length at right angles to  $B$

$\sum E'I'_b$  = flexural rigidity of the framed members at right angles to  $B$

$\sum (E'ah^3/12)$  = flexural rigidity of the shear walls

$a$  = shear wall thickness

$h$  = shear wall height

$E'I_F$  = flexibility of the foundation

Based on the value of  $K_r$ , the ratio ( $\delta$ ) of the differential settlement to the total settlement can be estimated in the following manner:

1. If  $K_r > 0.5$ , it can be treated as a rigid mat, and  $\delta = 0$ .
2. If  $K_r = 0.5$ , then  $\delta \approx 0.1$ .
3. If  $K_r = 0$ , then  $\delta = 0.35$  for square mats ( $B/L = 1$ ) and  $\delta = 0.5$  for long foundations ( $B/L = 0$ ).

## 8.6 Field Settlement Observations for Mat Foundations

Several field settlement observations for mat foundations are currently available in the literature. In this section, we compare the observed settlements for some mat foundations constructed over granular soil deposits with those obtained from Eqs. (8.14) and (8.15).

Meyerhof (1965) compiled the observed maximum settlements for mat foundations constructed on sand and gravel, as listed in Table 8.1. In Eq. (8.14), if the depth factor,  $1 + 0.33(D_f/B)$ , is assumed to be approximately unity, then

$$S_e(\text{mm}) \approx \frac{2q_{\text{net(all)}}}{N_{60}} \quad (8.20)$$

**Table 8.1** Settlement of Mat Foundations on Sand and Gravel [Based on Meyerhof, G. G., (1965). "Shallow Foundations," *Journal of the Soil Mechanics and Foundation Engineering Division*, American Society of Civil Engineers, Vol. 91, pp. 21–31, Table 1.]

Case No. (1)	Structure (2)	Reference (3)	B m (ft) (4)	Average $N_{60}$ (5)	$q_{\text{net(alt)}}$ kN/m <sup>2</sup> (kip/ft <sup>2</sup> ) (6)	Observed maximum settlement, $S_e$ mm (in.) (7)	Calculated maximum settlement, $S_e$ mm (in.) (8)	calculated $S_e$ / observed $S_e$ (9)
1	T. Edison São Paulo, Brazil	Rios and Silva (1948)	18.29 (60)	15	229.8 (4.8)	15.24 (0.6)	30.64 (1.21)	2.01
2	Banco do Brazil São Paulo, Brazil	Rios and Silva (1948); Vargas (1961)	22.86 (75)	18	239.4 (5.0)	27.94 (1.1)	26.6 (1.05)	0.95
3	Iparanga São Paulo, Brazil	Vargas (1948)	9.14 (30)	9	304.4 (6.4)	35.56 (1.4)	67.64 (2.66)	1.9
4	C.B.I., Esplanda São Paulo, Brazil	Vargas (1961)	14.63 (48)	22	383.0 (8.0)	27.94 (1.1)	34.82 (1.37)	1.25
5	Riscala São Paulo, Brazil	Vargas (1948)	3.96 (13)	20	229.8 (4.8)	12.7 (0.5)	22.98 (0.9)	1.81
6	Thyssen Düsseldorf, Germany	Schultze (1962)	22.55 (74)	25	239.4 (5)	24.13 (0.95)	19.15 (0.75)	0.79
7	Ministry Düsseldorf, Germany	Schultze (1962)	15.85 (52)	20	220.2 (4.6)	20.32 (0.8)	22.02 (0.87)	1.08
8	Chimney Cologne, Germany	Schultze (1962)	20.42 (67)	10	172.4 (3.6)	10.16 (0.4)	34.48 (1.36)	3.39

From the values of  $q_{\text{net(all)}}$  and  $N_{60}$  given in Columns 6 and 5, respectively, of Table 8.1, the magnitudes of  $S_e$  were calculated and are given in Column 8.

Column 9 of Table 8.1 gives the ratios of calculated to measured values of  $S_e$ . These ratios vary from about 0.79 to 3.39. Thus, calculating the net allowable bearing capacity with the use of Eq. (8.14) or (8.15) will yield safe and conservative values.

## 8.7 Compensated Foundation

Figure 8.7 and Eq. (8.17) indicate that the net pressure increase in the soil under a mat foundation can be reduced by increasing the depth  $D_f$  of the mat. This approach is generally referred to as the *compensated foundation design* and is extremely useful when structures are to be built on very soft clays. In this design, a deeper basement is made below the higher portion of the superstructure, so that the net pressure increase in soil at any depth is relatively uniform. (See Figure 8.8.) From Eq. (8.17) and Figure 8.7, the net average applied pressure on soil is

$$q = \frac{Q}{A} - \gamma D_f$$

For no increase in the net pressure on soil below a mat foundation,  $q$  should be zero. Thus,


$$D_f = \frac{Q}{A\gamma} \quad (8.21)$$

This relation for  $D_f$  is usually referred to as the depth of a *fully compensated foundation*.

The factor of safety against bearing capacity failure for partially compensated foundations (i.e.,  $D_f < Q/A\gamma$ ) may be given as

$$\text{FS} = \frac{q_{\text{net}(u)}}{q} = \frac{q_{\text{net}(u)}}{\frac{Q}{A} - \gamma D_f} \quad (8.22)$$

where  $q_{\text{net}(u)}$  = net ultimate bearing capacity.

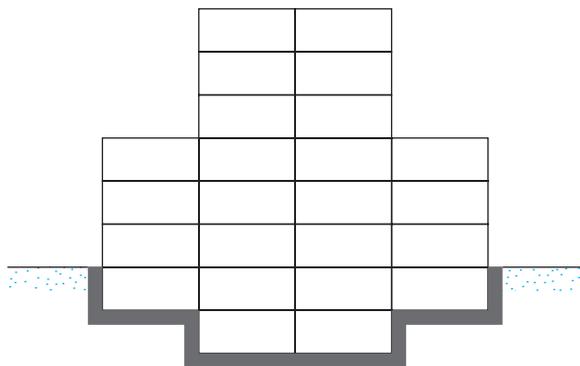

**Figure 8.8** Compensated foundation

For saturated clays, the factor of safety against bearing capacity failure can thus be obtained by substituting Eq. (8.12) into Eq. (8.22):

$$FS = \frac{5.14c_u \left(1 + \frac{0.195B}{L}\right) \left(1 + 0.4 \frac{D_f}{B}\right)}{\frac{Q}{A} - \gamma D_f} \quad (8.23)$$

### Example 8.5

The mat shown in Figure 8.7 has dimensions of 20 m × 30 m. The total dead and live load on the mat is 110 MN. The mat is placed over a saturated clay having a unit weight of 18 kN/m<sup>3</sup> and  $c_u = 140$  kN/m<sup>2</sup>. Given that  $D_f = 1.5$  m, determine the factor of safety against bearing capacity failure.

#### Solution

From Eq. (8.23), the factor of safety

$$FS = \frac{5.14c_u \left(1 + \frac{0.195B}{L}\right) \left(1 + 0.4 \frac{D_f}{B}\right)}{\frac{Q}{A} - \gamma D_f}$$

We are given that  $c_u = 140$  kN/m<sup>2</sup>,  $D_f = 1.5$  m,  $B = 20$  m,  $L = 30$  m, and  $\gamma = 18$  kN/m<sup>3</sup>. Hence,

$$FS = \frac{(5.14)(140) \left[1 + \frac{(0.195)(20)}{30}\right] \left[1 + 0.4 \left(\frac{1.5}{20}\right)\right]}{\left(\frac{110,000 \text{ kN}}{20 \times 30}\right) - (18)(1.5)} = 5.36$$


### Example 8.6

Consider a mat foundation 30 m × 40 m in plan, as shown in Figure 8.9. The total dead load and live load on the raft is  $200 \times 10^3$  kN. Estimate the consolidation settlement at the center of the foundation.

#### Solution

From Eq. (2.65)

$$S_{c(p)} = \frac{C_c H_c}{1 + e_o} \log \left( \frac{\sigma'_o + \Delta \sigma'_{av}}{\sigma'_o} \right)$$

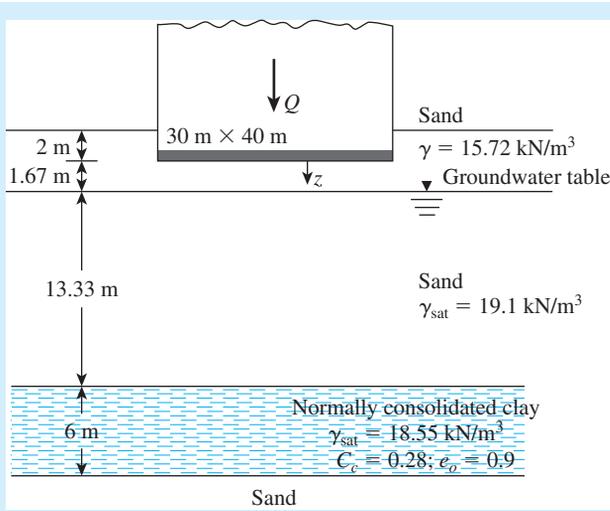

**Figure 8.9** Consolidation settlement under a mat foundation

$$\sigma'_o = (3.67)(15.72) + (13.33)(19.1 - 9.81) + \frac{6}{2}(18.55 - 9.81) \approx 208 \text{ kN/m}^2$$

$$H_c = 6 \text{ m}$$

$$C_c = 0.28$$

$$e_o = 0.9$$

For  $Q = 200 \times 10^3 \text{ kN}$ , the net load per unit area is

$$q = \frac{Q}{A} - \gamma D_f = \frac{200 \times 10^3}{30 \times 40} - (15.72)(2) \approx 135.2 \text{ kN/m}^2$$

In order to calculate  $\Delta\sigma'_{av}$  we refer to Section 6.8. The loaded area can be divided into four areas, each measuring  $15 \text{ m} \times 20 \text{ m}$ . Now using Eq. (6.23), we can calculate the average stress increase in the clay layer below the corner of each rectangular area, or

$$\begin{aligned} \Delta\sigma'_{av(H_2/H_1)} &= q_o \left[ \frac{H_2 I_{a(H_2)} - H_1 I_{a(H_1)}}{H_2 - H_1} \right] \\ &= 135.2 \left[ \frac{(1.67 + 13.33 + 6) I_{a(H_2)} - (1.67 + 13.33) I_{a(H_1)}}{6} \right] \end{aligned}$$

For  $I_{a(H_2)}$ ,

$$m_2 = \frac{B}{H_2} = \frac{15}{1.67 + 13.33 + 6} = 0.71$$

$$n_2 = \frac{L}{H_2} = \frac{20}{21} = 0.95$$

From Fig. 6.11, for  $m_2 = 0.71$  and  $n_2 = 0.95$ , the value of  $I_{a(H_2)}$  is 0.21. Again, for  $I_{a(H_1)}$ ,

$$m_2 = \frac{B}{H_1} = \frac{15}{15} = 1$$

$$n_2 = \frac{L}{H_1} = \frac{20}{15} = 1.33$$

From Figure 6.11,  $I_{a(H_1)} = 0.225$ , so

$$\Delta\sigma'_{av(H_2/H_1)} = 135.2 \left[ \frac{(21)(0.21) - (15)(0.225)}{6} \right] = 23.32 \text{ kN/m}^2$$

So, the stress increase below the center of the  $30 \text{ m} \times 40 \text{ m}$  area is  $(4)(23.32) = 93.28 \text{ kN/m}^2$ . Thus

$$S_{c(p)} = \frac{(0.28)(6)}{1 + 0.9} \log\left(\frac{208 + 93.28}{208}\right) = 0.142 \text{ m}$$

$$= \mathbf{142 \text{ mm}}$$

## 8.8 Structural Design of Mat Foundations

The structural design of mat foundations can be carried out by two conventional methods: the conventional rigid method and the approximate flexible method. Finite-difference and finite-element methods can also be used, but this section covers only the basic concepts of the first two design methods.

### Conventional Rigid Method

The *conventional rigid method* of mat foundation design can be explained step by step with reference to Figure 8.10:

*Step 1.* Figure 8.10a shows mat dimensions of  $L \times B$  and column loads of  $Q_1, Q_2, Q_3, \dots$ . Calculate the total column load as

$$Q = Q_1 + Q_2 + Q_3 + \dots \quad (8.24)$$

*Step 2.* Determine the pressure on the soil,  $q$ , below the mat at points  $A, B, C, D, \dots$ , by using the equation

$$q = \frac{Q}{A} \pm \frac{M_y x}{I_y} \pm \frac{M_x y}{I_x} \quad (8.25)$$

where


$$A = BL$$

$$I_x = (1/12)BL^3 = \text{moment of inertia about the } x\text{-axis}$$


$$I_y = (1/12)LB^3 = \text{moment of inertia about the } y\text{-axis}$$

$$M_x = \text{moment of the column loads about the } x\text{-axis} = Qe_y$$


$$M_y = \text{moment of the column loads about the } y\text{-axis} = Qe_x$$

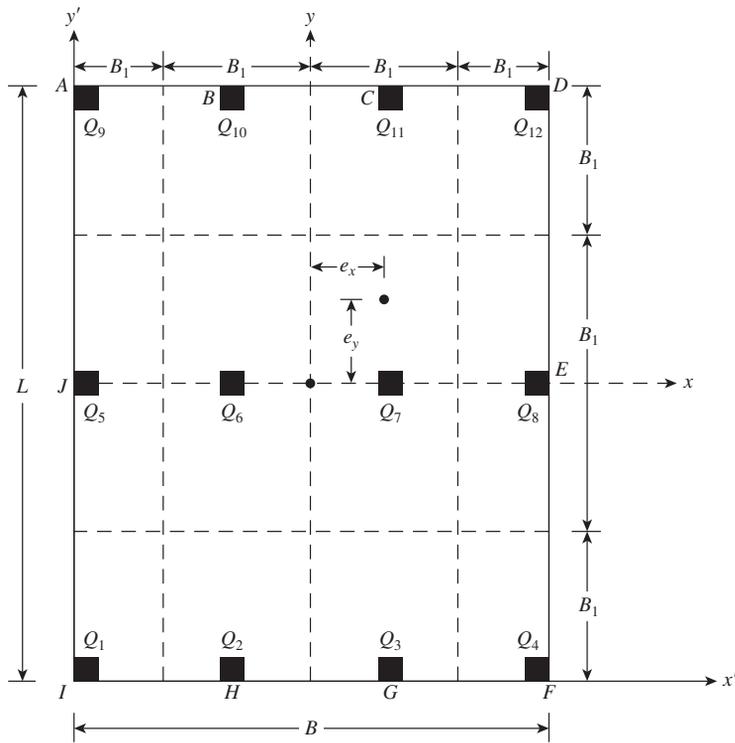

(a)

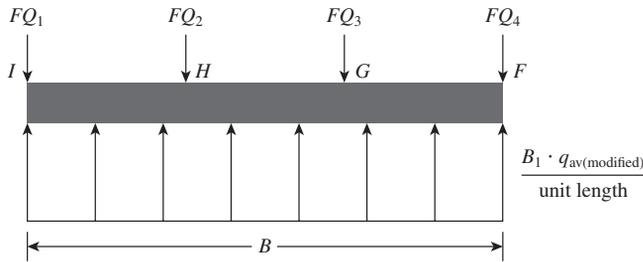

(b)

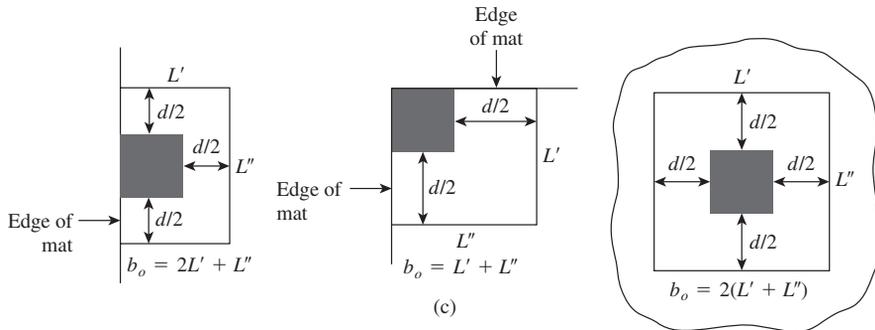

(c)

**Figure 8.10** Conventional rigid mat foundation design

The load eccentricities,  $e_x$  and  $e_y$ , in the  $x$  and  $y$  directions can be determined by using  $(x', y')$  coordinates:

$$x' = \frac{Q_1x'_1 + Q_2x'_2 + Q_3x'_3 + \cdots}{Q} \quad (8.26)$$

and

$$e_x = x' - \frac{B}{2} \quad (8.27)$$

Similarly,

$$y' = \frac{Q_1y'_1 + Q_2y'_2 + Q_3y'_3 + \cdots}{Q} \quad (8.28)$$

and

$$e_y = y' - \frac{L}{2} \quad (8.29)$$

*Step 3.* Compare the values of the soil pressures determined in Step 2 with the net allowable soil pressure to determine whether  $q \leq q_{\text{all(net)}}$ .

*Step 4.* Divide the mat into several strips in the  $x$  and  $y$  directions. (See Figure 8.10). Let the width of any strip be  $B_1$ .

*Step 5.* Draw the shear,  $V$ , and the moment,  $M$ , diagrams for each individual strip (in the  $x$  and  $y$  directions). For example, the average soil pressure of the bottom strip in the  $x$  direction of Figure 8.10a is

$$q_{\text{av}} \approx \frac{q_I + q_F}{2} \quad (8.30)$$

where  $q_I$  and  $q_F$  = soil pressures at points  $I$  and  $F$ , as determined from Step 2.

The total soil reaction is equal to  $q_{\text{av}}B_1B$ . Now obtain the total column load on the strip as  $Q_1 + Q_2 + Q_3 + Q_4$ . The sum of the column loads on the strip will not equal  $q_{\text{av}}B_1B$ , because the shear between the adjacent strips has not been taken into account. For this reason, the soil reaction and the column loads need to be adjusted, or

$$\text{Average load} = \frac{q_{\text{av}}B_1B + (Q_1 + Q_2 + Q_3 + Q_4)}{2} \quad (8.31)$$

Now, the modified average soil reaction becomes

$$q_{\text{av(modified)}} = q_{\text{av}} \left( \frac{\text{average load}}{q_{\text{av}}B_1B} \right) \quad (8.32)$$

and the column load modification factor is

$$F = \frac{\text{average load}}{Q_1 + Q_2 + Q_3 + Q_4} \quad (8.33)$$

So the modified column loads are  $FQ_1, FQ_2, FQ_3$ , and  $FQ_4$ . This modified loading on the strip under consideration is shown in Figure 8.10b. The shear and the moment diagram for this strip can now be drawn, and the procedure is repeated in the  $x$  and  $y$  directions for all strips.

*Step 6.* Determine the effective depth  $d$  of the mat by checking for diagonal tension shear near various columns. For the critical section,

$$V_c \geq U \quad (8.34)$$

where

$U$  = factored column load according to ACI Code 318-11 (2011)

$V_c$  = shear capacity at the column location

According to ACI Code 318-11 (Section 11.11.2.1) for non-prestressed slabs and footings,  $V_c$  shall be the smallest of (8.35a), (8.35b), and (8.35c). In US customary units, the equations are

$$V_c = \left(2 + \frac{4}{\beta}\right) \lambda \sqrt{f'_c} b_0 d \quad (8.35a)$$

$$V_c = \left(2 + \frac{\alpha_s d}{b_0}\right) \lambda \sqrt{f'_c} b_0 d \quad (8.35b)$$

$$V_c = 4 \lambda \sqrt{f'_c} b_0 d \quad (8.35c)$$

where

$\beta$  = ratio of long side to short side of the column

$\alpha_s$  = 40 for interior columns

= 30 for edge columns

= 20 for corner columns

$b_0$  = perimeter of the critical section for shear

$f'_c$  = compressive strength of concrete at 28 days (psi)

$\lambda$  = modification factor reflecting the reduced mechanical properties of lightweight concrete, all relative to normal weight concrete of the same compressive strength

$d$  = effective depth of the mat

The expression for  $b_0$  in terms of  $d$ , which depends on the location of the column with respect to the plan of the mat, can be obtained from Figure 8.10c.

In SI units, the equations for  $V_c$  are

$$V_c = \frac{1}{6} \left(1 + \frac{2}{\beta}\right) \lambda \sqrt{f'_c} b_0 d \quad (8.35d)$$

$$V_c = \frac{1}{12} \left(2 + \frac{\alpha_s d}{b_0}\right) \lambda \sqrt{f'_c} b_0 d \quad (8.35e)$$

$$V_c = \frac{1}{3} \lambda \sqrt{f'_c} b_0 d \quad (8.35f)$$

Step 7. From the moment diagrams of all strips *in one direction* ( $x$  or  $y$ ), obtain the maximum positive and negative moments per unit width (i.e.,  $M_u = M/B_1$ ). Since factored column loads are used in accordance with ACI Code 318-11 (see Step 6),  $M_u$  is the factored moment.

Step 8. Determine the area of steel per unit width for positive and negative reinforcement in the  $x$  and  $y$  directions. We have

$$M_u = \phi A_s f_y \left( d - \frac{a}{2} \right) \quad (8.36)$$

and

$$a = \frac{A_s f_y}{0.85 f_c' b} \quad (8.37)$$

where

- $A_s$  = area of steel per unit width
- $f_y$  = yield stress of reinforcement in tension
- $M_u$  = factored moment
- $\phi$  = 0.9 = reduction factor

Examples 8.7 and 8.8 illustrate the use of the conventional rigid method of mat foundation design.

### Approximate Flexible Method

In the conventional rigid method of design, the mat is assumed to be infinitely rigid. Also, the soil pressure is distributed in a straight line, and the centroid of the soil pressure is coincident with the line of action of the resultant column loads. (See Figure 8.11a.) In the *approximate flexible method* of design, the soil is assumed to be equivalent to an infinite number of elastic springs, as shown in Figure 8.11b. This assumption is sometimes referred to as the *Winkler foundation*. The elastic constant of these assumed springs is referred to as the *coefficient of subgrade reaction*,  $k$ .

To understand the fundamental concepts behind flexible foundation design, consider a beam of width  $B_1$  having infinite length, as shown in Figure 8.11c. The beam is subjected to a single concentrated load  $Q$ . From the fundamentals of mechanics of materials,


$$M = E_F I_F \frac{d^2 z}{dx^2} \quad (8.38)$$

where

- $M$  = moment at any section
- $E_F$  = modulus of elasticity of foundation material
- $I_F$  = moment of inertia of the cross section of the beam =  $\left(\frac{1}{12}\right) B_1 h^3$  (see Figure 8.11c).

However,

$$\frac{dM}{dx} = \text{shear force} = V$$

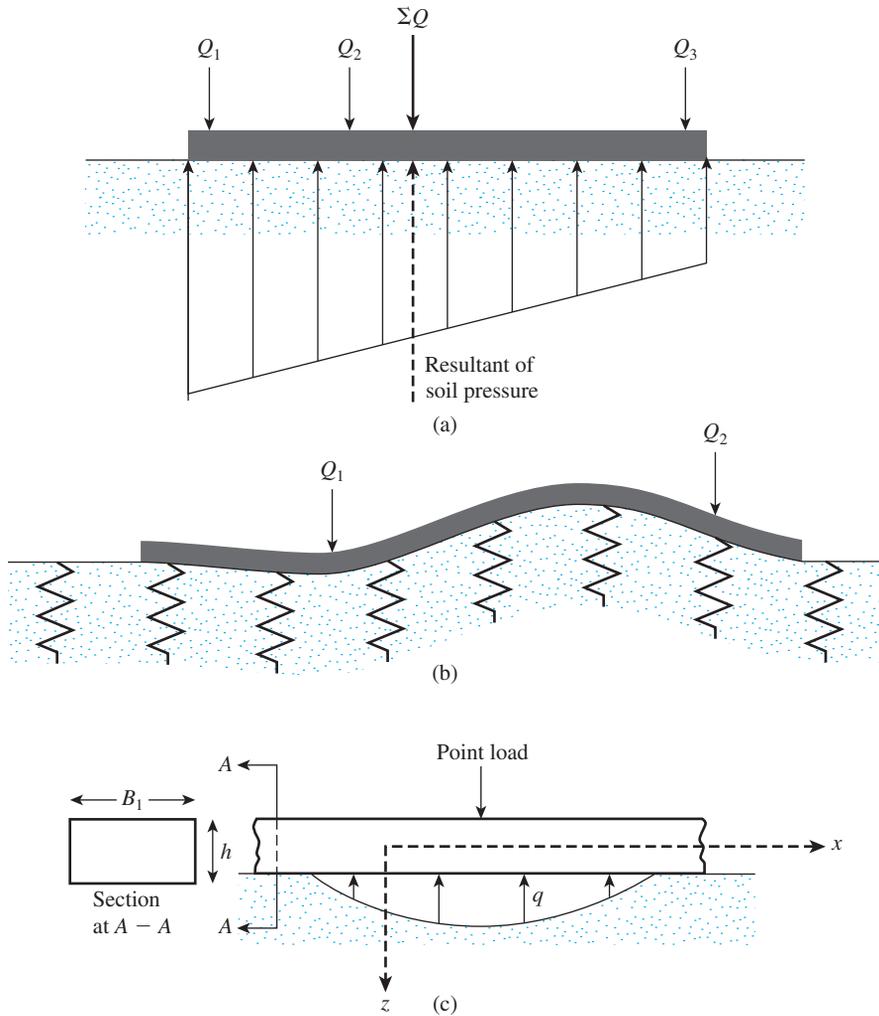

**Figure 8.11** (a) Principles of design by conventional rigid method; (b) principles of approximate flexible method; (c) derivation of Eq. (8.42) for beams on elastic foundation

and

$$\frac{dV}{dx} = q = \text{soil reaction}$$

Hence,

$$\frac{d^2M}{dx^2} = q \tag{8.39}$$

Combining Eqs. (8.38) and (8.39) yields

$$E_F I_F \frac{d^4z}{dx^4} = q \tag{8.40}$$

However, the soil reaction is

$$q = -zk'$$

where

$z$  = deflection

$k' = kB_1$

$k$  = coefficient of subgrade reaction (kN/m<sup>3</sup> or lb/in<sup>3</sup>)

So,

$$E_F I_F \frac{d^4 z}{dx^4} = -zkB_1 \quad (8.41)$$

Solving Eq. (8.41) yields

$$z = e^{-\alpha x}(A' \cos \beta x + A'' \sin \beta x) \quad (8.42)$$

where  $A'$  and  $A''$  are constants and


$$\beta = \sqrt[4]{\frac{B_1 k}{4E_F I_F}} \quad (8.43)$$

The unit of the term  $\beta$ , as defined by the preceding equation, is (length)<sup>-1</sup>. This parameter is very important in determining whether a mat foundation should be designed by the conventional rigid method or the approximate flexible method. According to the American Concrete Institute Committee 336 (1988), mats should be designed by the conventional rigid method if the spacing of columns in a strip is less than  $1.75/\beta$ . If the spacing of columns is larger than  $1.75/\beta$ , the approximate flexible method may be used.

To perform the analysis for the structural design of a flexible mat, one must know the principles involved in evaluating the coefficient of subgrade reaction,  $k$ . Before proceeding with the discussion of the approximate flexible design method, let us discuss this coefficient in more detail.

If a foundation of width  $B$  (see Figure 8.12) is subjected to a load per unit area of  $q$ , it will undergo a settlement  $\Delta$ . The coefficient of subgrade reaction can be defined as

$$k = \frac{q}{\Delta} \quad (8.44)$$

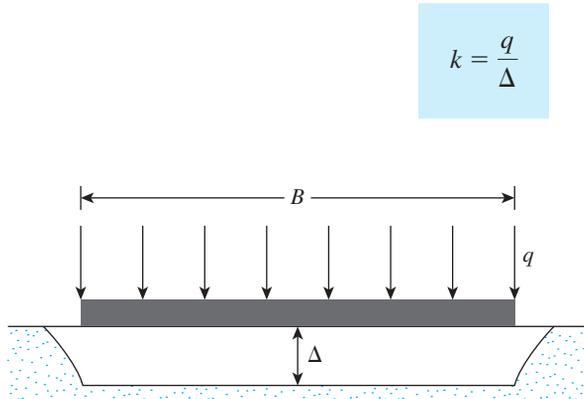

**Figure 8.12** Definition of coefficient of subgrade reaction,  $k$

The unit of  $k$  is  $\text{kN/m}^3$  (or  $\text{lb/in}^3$ ). The value of the coefficient of subgrade reaction is not a constant for a given soil, but rather depends on several factors, such as the length  $L$  and width  $B$  of the foundation and also the depth of embedment of the foundation. A comprehensive study by Terzaghi (1955) of the parameters affecting the coefficient of subgrade reaction indicated that the value of the coefficient decreases with the width of the foundation. In the field, load tests can be carried out by means of square plates measuring  $0.3 \text{ m} \times 0.3 \text{ m}$  ( $1 \text{ ft} \times 1 \text{ ft}$ ), and values of  $k$  can be calculated. The value of  $k$  can be related to large foundations measuring  $B \times B$  in the following ways:

### Foundations on Sandy Soils

For foundations on sandy soils,

$$k = k_{0.3} \left( \frac{B + 0.3}{2B} \right)^2 \quad (8.45)$$

where  $k_{0.3}$  and  $k$  = coefficients of subgrade reaction of foundations measuring  $0.3 \text{ m} \times 0.3 \text{ m}$  and  $B \text{ (m)} \times B \text{ (m)}$ , respectively (unit is  $\text{kN/m}^3$ ).

In English units, Eq. (8.45) may be expressed as

$$k = k_1 \left( \frac{B + 1}{2B} \right)^2 \quad (8.46)$$

where  $k_1$  and  $k$  = coefficients of subgrade reaction of foundations measuring  $1 \text{ ft} \times 1 \text{ ft}$  and  $B \text{ (ft)} \times B \text{ (ft)}$ , respectively (unit is  $\text{lb/in}^3$ ).

### Foundations on Clays

For foundations on clays,

$$k(\text{kN/m}^3) = k_{0.3}(\text{kN/m}^3) \left[ \frac{0.3 \text{ (m)}}{B \text{ (m)}} \right] \quad (8.47a)$$

The definitions of  $k$  and  $k_{0.3}$  in Eq. (8.47a) are the same as in Eq. (8.45).

In English units,

$$k(\text{lb/in}^3) = k_1 (\text{lb/in}^3) \left[ \frac{1 \text{ (ft)}}{B \text{ (ft)}} \right] \quad (8.47b)$$

The definitions of  $k$  and  $k_1$  are the same as in Eq. (8.46).

For rectangular foundations having dimensions of  $B \times L$  (for similar soil and  $q$ ),

$$k = \frac{k_{(B \times B)} \left( 1 + 0.5 \frac{B}{L} \right)}{1.5} \quad (8.48)$$

where

$k$  = coefficient of subgrade reaction of the rectangular foundation ( $L \times B$ )  
 $k_{(B \times B)}$  = coefficient of subgrade reaction of a square foundation having dimension of  $B \times B$

Equation (8.48) indicates that the value of  $k$  for a very long foundation with a width  $B$  is approximately  $0.67k_{(B \times B)}$ .

The modulus of elasticity of granular soils increases with depth. Because the settlement of a foundation depends on the modulus of elasticity, the value of  $k$  increases with the depth of the foundation.

Table 8.2 provides typical ranges of values for the coefficient of subgrade reaction,  $k_{0.3}(k_1)$ , for sandy and clayey soils.

For long beams, Vesic (1961) proposed an equation for estimating subgrade reaction, namely,

$$k' = Bk = 0.65 \sqrt[12]{\frac{E_s B^4}{E_F I_F}} \frac{E_s}{1 - \mu_s^2}$$

**Table 8.2** Typical Subgrade Reaction Values,  $k_{0.3}(k_1)$

Soil type	$k_{0.3}(k_1)$	
	MN/m <sup>3</sup>	lb/in. <sup>3</sup>
Dry or moist sand:		
Loose	8–25	30–90
Medium	25–125	90–450
Dense	125–375	450–1350
Saturated sand:		
Loose	10–15	35–55
Medium	35–40	125–145
Dense	130–150	475–550
Clay:		
Stiff	10–25	40–90
Very stiff	25–50	90–185
Hard	>50	>185

or

$$k = 0.65 \sqrt[12]{\frac{E_s B^4}{E_F I_F}} \frac{E_s}{B(1 - \mu_s^2)} \quad (8.49)$$

where

$E_s$  = modulus of elasticity of soil

$B$  = foundation width

$E_F$  = modulus of elasticity of foundation material

$I_F$  = moment of inertia of the cross section of the foundation

$\mu_s$  = Poisson's ratio of soil

For most practical purposes, Eq. (8.49) can be approximated as

$$k = \frac{E_s}{B(1 - \mu_s^2)} \quad (8.50)$$

Now that we have discussed the coefficient of subgrade reaction, we will proceed with the discussion of the approximate flexible method of designing mat foundations. This method, as proposed by the American Concrete Institute Committee 336 (1988), is described step by step. The use of the design procedure, which is based primarily on the theory of plates, allows the effects (i.e., moment, shear, and deflection) of a concentrated column load in the area surrounding it to be evaluated. If the zones of influence of two or more columns overlap, superposition can be employed to obtain the net moment, shear, and deflection at any point. The method is as follows:

- Step 1.* Assume a thickness  $h$  for the mat, according to Step 6 of the conventional rigid method. (*Note:*  $h$  is the *total* thickness of the mat.)
- Step 2.* Determine the flexural rigidity  $R$  of the mat as given by the formula

$$R = \frac{E_F h^3}{12(1 - \mu_F^2)} \quad (8.51)$$

where

$E_F$  = modulus of elasticity of foundation material

$\mu_F$  = Poisson's ratio of foundation material

- Step 3.* Determine the radius of effective stiffness—that is,

$$L' = \sqrt[4]{\frac{R}{k}} \quad (8.52)$$

where  $k$  = coefficient of subgrade reaction. The zone of influence of any column load will be on the order of 3 to 4  $L'$ .

Step 4. Determine the moment (in polar coordinates at a point) caused by a column load (see Figure 8.13a). The formulas to use are

$$M_r = \text{radial moment} = -\frac{Q}{4} \left[ A_1 - \frac{(1 - \mu_F)A_2}{\frac{r}{L'}} \right] \quad (8.53)$$

and

$$M_t = \text{tangential moment} = -\frac{Q}{4} \left[ \mu_F A_1 + \frac{(1 - \mu_F)A_2}{\frac{r}{L'}} \right] \quad (8.54)$$

where

$r$  = radial distance from the column load

$Q$  = column load

$A_1, A_2$  = functions of  $r/L'$

The variations of  $A_1$  and  $A_2$  with  $r/L'$  are shown in Figure 8.13b. (For details see Hetenyi, 1946.)

In the Cartesian coordinate system (see Figure 8.13a),

$$M_x = M_t \sin^2 \alpha + M_r \cos^2 \alpha \quad (8.55)$$

and

$$M_y = M_t \cos^2 \alpha + M_r \sin^2 \alpha \quad (8.56)$$

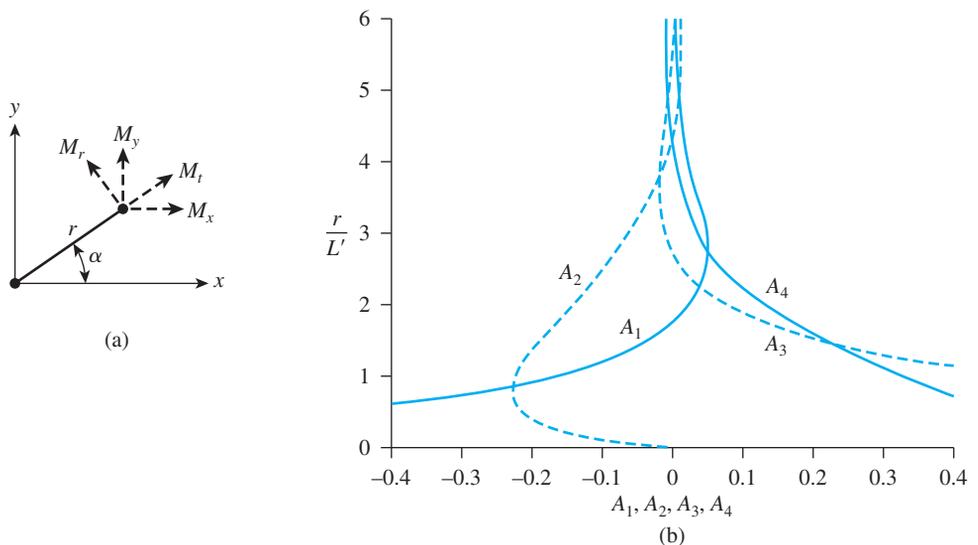


Figure 8.13 Approximate flexible method of mat design

Step 5. For the unit width of the mat, determine the shear force  $V$  caused by a column load:

$$V = \frac{Q}{4L'}A_3 \quad (8.57)$$

The variation of  $A_3$  with  $r/L'$  is shown in Figure 8.13b.

Step 6. If the edge of the mat is located in the zone of influence of a column, determine the moment and shear along the edge. (Assume that the mat is continuous.) Moment and shear opposite in sign to those determined are applied at the edges to satisfy the known conditions.

Step 7. The deflection at any point is given by

$$\delta = \frac{QL'^2}{4R}A_4 \quad (8.58)$$

The variation of  $A_4$  is presented in Figure 8.13b.

### Example 8.7

The plan of a mat foundation is shown in Figure 8.14. Calculate the soil pressure at points  $A$ ,  $B$ ,  $C$ ,  $D$ ,  $E$ , and  $F$ . (Note: All column sections are planned to be  $0.5 \text{ m} \times 0.5 \text{ m}$ .) All loads shown are factored loads according to ACI 381-11 (2011).

#### Solution

$$\text{Eq. (8.25): } q = \frac{Q}{A} \pm \frac{M_y x}{I_y} \pm \frac{M_x y}{I_x}$$

$$A = (20.5)(27.5) = 563.75 \text{ m}^2$$

$$I_x = \frac{1}{12}BL^3 = \frac{1}{12}(20.5)(27.5)^3 = 35,528 \text{ m}^4$$

$$I_y = \frac{1}{12}LB^3 = \frac{1}{12}(27.5)(20.5)^3 = 19,743 \text{ m}^4$$

$$Q = 470 + (2)(550) + 600 + (2)(660) + (2)(1600) + (4)(2000) = 14,690 \text{ kN}$$

$$M_y = Qe_x; \quad e_x = x' - \frac{B}{2}$$

$$x' = \frac{Q_1x'_1 + Q_2x'_2 + Q_3x'_3 + \dots}{Q}$$

$$= \frac{1}{14,690} \left[ \begin{array}{l} (10.25)(660 + 2000 + 2000 + 660) \\ + (20.25)(470 + 1600 + 1600 + 600) \\ + (0.25)(550 + 2000 + 2000 + 550) \end{array} \right] = 9.686 \text{ m}$$

$$e_x = x' - \frac{B}{2} = 9.686 - 10.25 = -0.565 \text{ m} \approx -0.57 \text{ m}$$

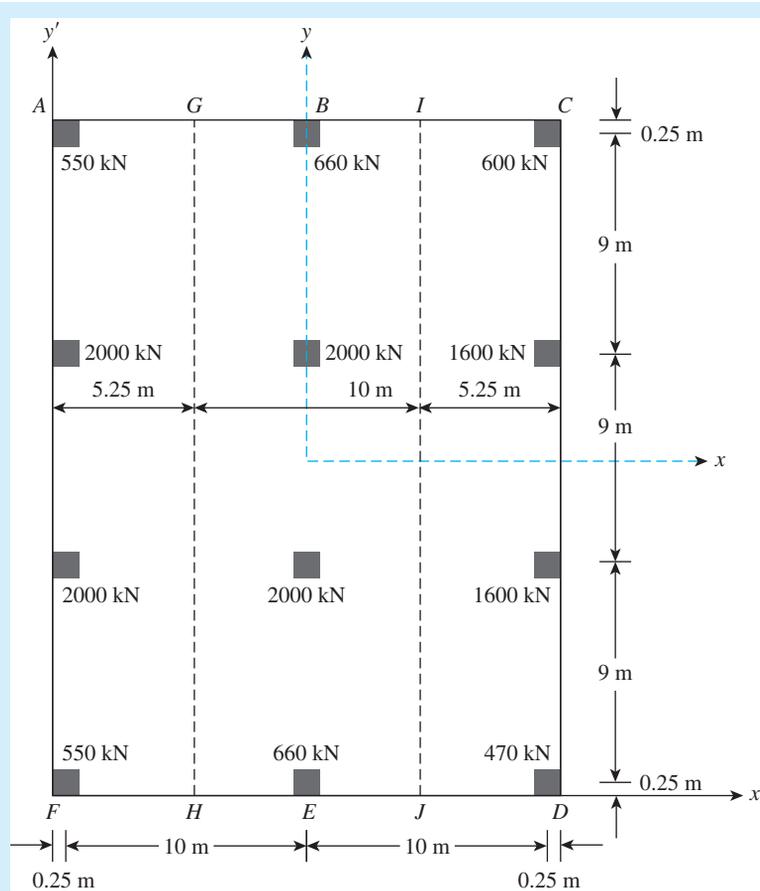


Figure 8.14 Plan of a mat foundation

Hence, the resultant line of action is located to the left of the center of the mat. So  $M_y = (14,690)(0.57) = 8373$  kN-m. Similarly

$$M_x = Qe_y; \quad e_y = y' - \frac{L}{2}$$

$$y' = \frac{Q_1y'_1 + Q_2y'_2 + Q_3y'_3 + \dots}{Q}$$

$$= \frac{1}{14,690} \left[ (0.25)(550 + 660 + 470) + (9.25)(2000 + 2000 + 1600) \right. \\ \left. + (18.25)(2000 + 2000 + 1600) + (27.25)(550 + 660 + 600) \right]$$

$$= 13.86 \text{ m}$$

$$e_y = y' - \frac{L}{2} = 13.86 - 13.75 = 0.11 \text{ m}$$

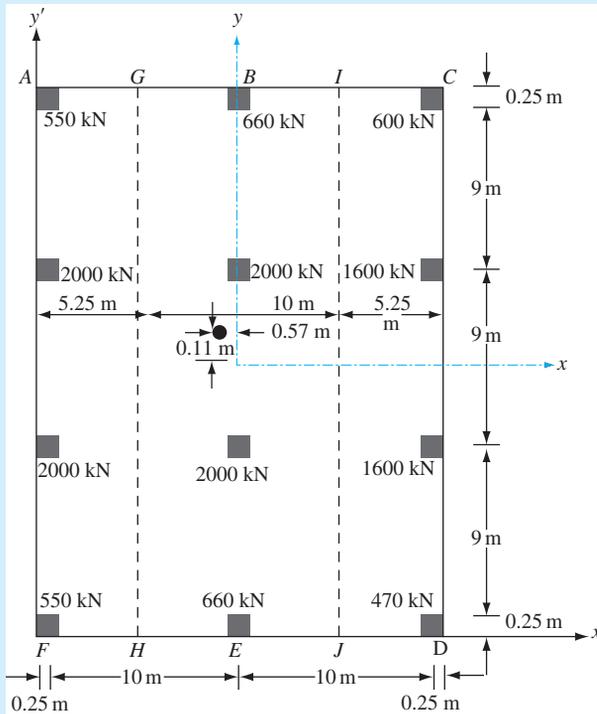


Figure 8.15

The location of the line of action of the resultant column loads is shown in Figure 8.15.

$$M_x = (14,690)(0.11) = 1616 \text{ kN-m. So}$$

$$q = \frac{14,690}{563.75} \pm \frac{8373x}{19743} \pm \frac{1616y}{35,528} = 26.0 \pm 0.42x \pm 0.05y \text{ (kN/m}^2\text{)}$$

Therefore,

$$\text{At A: } q = 26 + (0.42)(10.25) + (0.05)(13.75) = \mathbf{31.0 \text{ kN/m}^2}$$

$$\text{At B: } q = 26 + (0.42)(0) + (0.05)(13.75) = \mathbf{26.68 \text{ kN/m}^2}$$

$$\text{At C: } q = 26 - (0.42)(10.25) + (0.05)(13.75) = \mathbf{22.38 \text{ kN/m}^2}$$

$$\text{At D: } q = 26 - (0.42)(10.25) - (0.05)(13.75) = \mathbf{21.0 \text{ kN/m}^2}$$

$$\text{At E: } q = 26 + (0.42)(0) - (0.05)(13.75) = \mathbf{25.31 \text{ kN/m}^2}$$

$$\text{At F: } q = 26 + (0.42)(10.25) - (0.05)(13.75) = \mathbf{29.61 \text{ kN/m}^2}$$

### Example 8.8

Divide the mat shown in Figure 8.14 into three strips, such as  $AGHF$  ( $B_1 = 5.25 \text{ m}$ ),  $GIJH$  ( $B_1 = 10 \text{ m}$ ), and  $ICDJ$  ( $B_1 = 5.25 \text{ m}$ ). Use the result of Example 8.7, and determine the reinforcement requirements in the  $y$  direction. Here,  $f'_c = 20.7 \text{ MN/m}^2$ ,  $f_y = 413.7 \text{ MN/m}^2$ . Note: All column loads are factored loads.

**Solution**

Determination of Shear and Moment Diagrams for Strips:

**Strip AGHF:**

$$\text{Average soil pressure} = q_{\text{av}} = q_{(\text{at } A)} + q_{(\text{at } F)} = \frac{31 + 29.61}{2} = 30.305 \text{ kN/m}^2$$

$$\text{Total soil reaction} = q_{\text{av}} B_1 L = (30.305) (5.25) (27.5) = 4375 \text{ kN}$$

$$\begin{aligned} \text{Average load} &= \frac{\text{load due to soil reaction} + \text{column loads}}{2} \\ &= \frac{4375 + 5100}{2} = 4737.5 \text{ kN} \end{aligned}$$


So, modified average soil pressure,

$$q_{\text{av}(\text{modified})} = q_{\text{av}} \left( \frac{4737.5}{4375} \right) = (30.305) \left( \frac{4737.5}{4375} \right) = 32.81 \text{ kN/m}^2$$

The column loads can be modified in a similar manner by multiplying factor

$$F = \frac{4737.5}{5100} = 0.929$$

Figure 8.16 shows the loading on the strip and corresponding shear and moment diagrams. Note that the column loads shown in this figure have been multiplied by

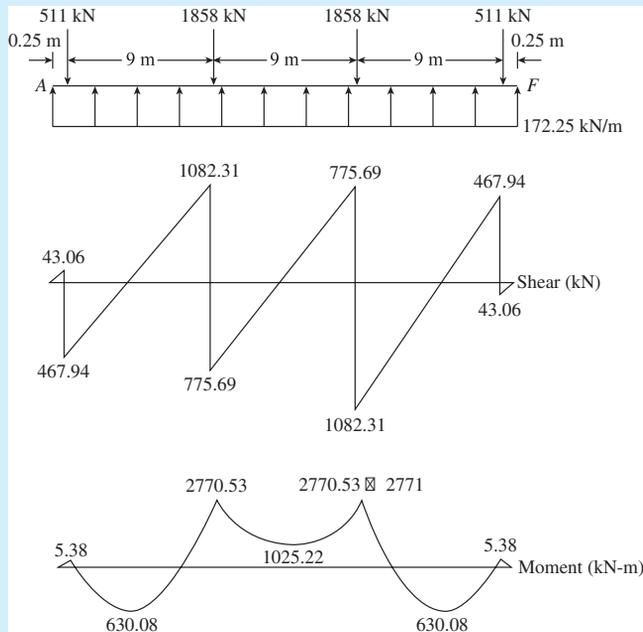

**Figure 8.16** Load, shear, and moment diagrams for strip AGHF

$F = 0.929$ . Also the load per unit length of the beam is equal to  $B_1 q_{av(\text{modified})} = (5.25)(32.81) = 172.25 \text{ kN/m}$ .

**Strip GIJH:** In a similar manner,

$$q_{av} = \frac{q_{(\text{at B})} + q_{(\text{at E})}}{2} = \frac{26.68 + 25.31}{2} = 26.0 \text{ kN/m}^2$$

$$\text{Total soil reaction} = (26)(10)(27.5) = 7150 \text{ kN}$$

$$\text{Total column load} = 5320 \text{ kN}$$


$$\text{Average load} = \frac{7150 + 5320}{2} = 6235 \text{ kN}$$

$$q_{av(\text{modified})} = (26) \left( \frac{6235}{7150} \right) = 22.67 \text{ kN/m}^2$$


$$F = \frac{6235}{5320} = 1.17$$

The load, shear, and moment diagrams are shown in Figure 8.17.

**Strip ICDJ:** Figure 8.18 shows the load, shear, and moment diagrams for this strip.

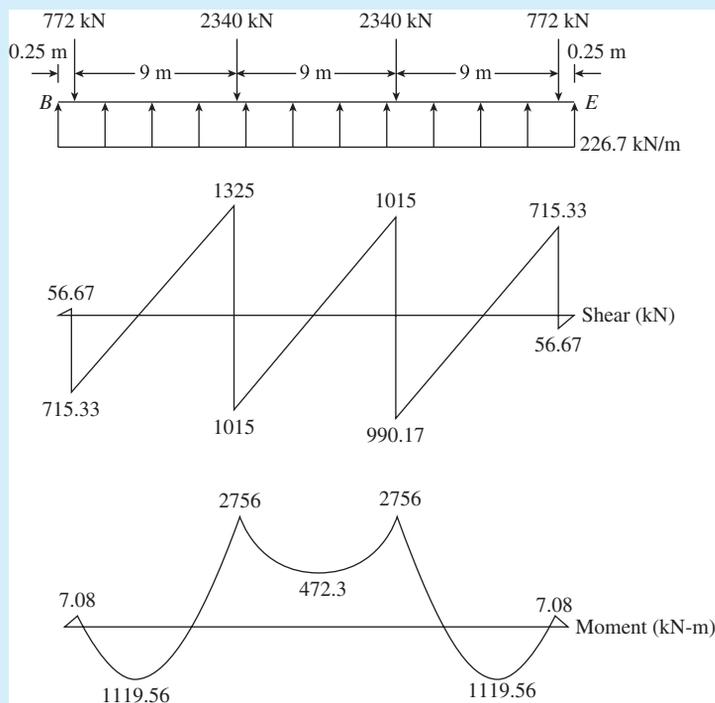

**Figure 8.17** Load, shear, and moment diagrams for strip *GIJH*

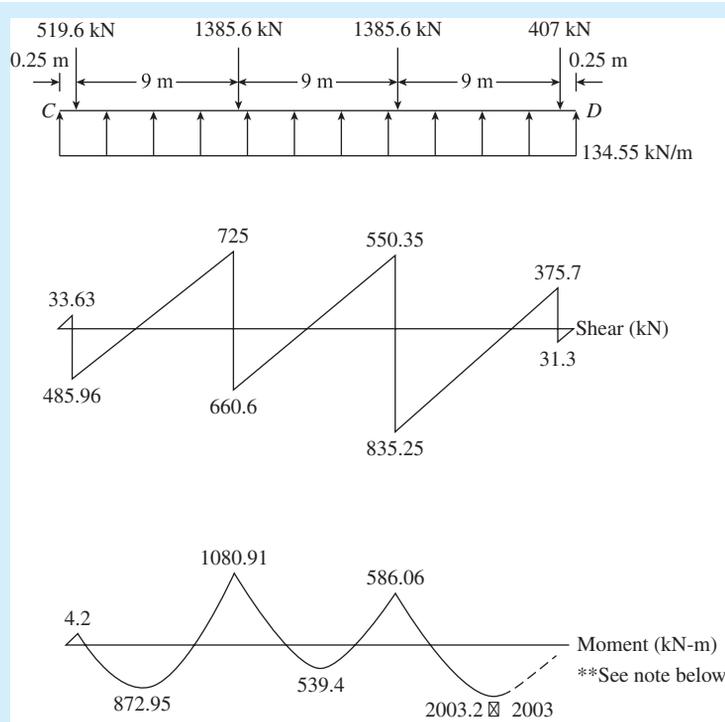

**Figure 8.18** Load, shear, and moment diagrams for strip ICDJ

\*\*Note: In view of the assumption of uniform soil reaction to non-symmetric loading, there is a discrepancy in the moment values at the right column. As a result, the moment diagram will not “close”. This is ignored since it is not the governing design moment

#### Determination of the Thickness of the Mat

For this problem, the critical section for diagonal tension shear will be at the column carrying 2000 kN of load at the edge of the mat [Figure 8.19]. So

$$U = 2000 \text{ kN} = 2 \text{ MN}$$

$$b_0 = \left(0.5 + \frac{d}{2}\right) + \left(0.5 + \frac{d}{2}\right) + (0.5 + d) = 1.5 + 2d$$

Equations (8.34), (8.35d), (8.35e), and (8.35f) are used to calculate the effective depth,  $d$ , given that:  $f'_c = 20.7 \text{ MN/m}^2$ ;  $\lambda = 1$  (normal weight concrete);  $\beta = 1$  (square columns); and  $\alpha_s = 30$  (edge column). Note that the maximum value of  $d$  is selected as the design value and it corresponds to the minimum value of  $V_c$  obtained from equations (8.35d), (8.35e), and (8.35f).

$$V_c = \frac{1}{6} \left(1 + \frac{2}{\beta}\right) \lambda \sqrt{f'_c} b_0 d \quad (8.35d)$$

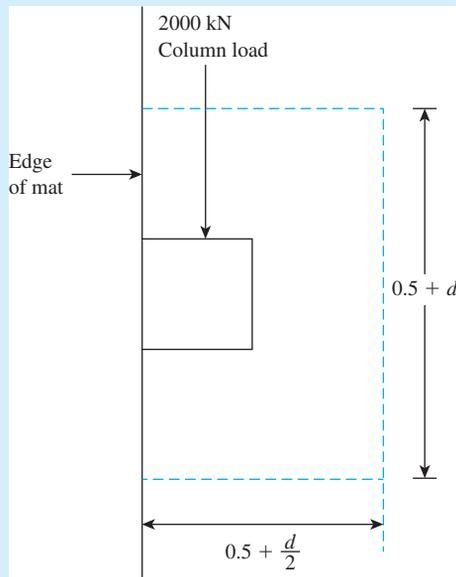


Figure 8.19 Critical perimeter column

$$2 = \frac{1}{6} \left( 1 + \frac{2}{1} \right) (1) \sqrt{20.7} (1.5 + 2d)(d)$$

$$2d^2 + 1.5d - 0.8793 = 0$$

So,  $d = 0.387$  m.

$$V_c = \frac{1}{12} \left( 2 + \frac{\alpha_s d}{b_0} \right) \lambda \sqrt{f'_c} b_0 d \quad (8.35e)$$

$$2 = \frac{1}{12} \left( 2 + \frac{(30)(d)}{1.5 + 2(d)} \right) (1) \sqrt{20.7} (1.5 + 2d)(d)$$

$$34d^2 + 3d - 5.275 = 0$$

So,  $d = 0.352$  m.

$$V_c = \frac{1}{3} \lambda \sqrt{f'_c} b_0 d \quad (8.35f)$$

$$2 = \frac{1}{3} (1) \sqrt{20.7} (1.5 + 2d)(d)$$

$$2d^2 + 1.5d - 1.318 = 0$$

So,  $d = 0.519$  m.

Therefore, the design mat thickness,  $d = 0.519$  m ( $\approx 20.5$  in.)

Assuming a minimum cover of 76 mm over the steel reinforcement and also assuming that the steel bars to be used are 25 mm in diameter, the total thickness of the slab is

$$h = 0.52 + 0.076 + 0.0125 = 0.609 \text{ m} \approx \mathbf{0.61 \text{ m}}$$

The thickness of this mat will satisfy the wide beam shear condition across the three strips under consideration.

Determination of Reinforcement

From the moment diagram shown in Figures 8.16, 8.17, and 8.18, it can be seen that the maximum positive moment is located in strip *AGHF*, and its magnitude is

$$M_u = \frac{2771}{B_1} = \frac{2771}{5.25} = 527.8 \text{ kN-m/m}$$

Similarly, the maximum negative moment is located in strip *ICDJ* and its magnitude is

$$M_u = \frac{2003}{B_1} = \frac{2003}{5.25} = 381.52 \text{ kN-m/m}$$

From Eq. (8.36),  $M_u = \phi A_s f_y \left( d - \frac{a}{2} \right)$ .

For the positive moment,

$$M_u = 527.8 = (\phi)(A_s)(413.7 \times 1000) \left( 0.61 - \frac{a}{2} \right)$$

$$\phi = 0.9. \text{ Also, from Eq. (8.37),}$$

$$a = \frac{A_s f_y}{0.85 f'_c b} = \frac{(A_s)(413.7)}{(0.85)(20.7)(1)} = 23.51 A_s; \text{ or } A_s = 0.0425 a$$

$$527.8 = (0.9)(0.0425 a)(413,700) \left( 0.61 - \frac{a}{2} \right); \text{ or } a \approx 0.0573 \text{ m}$$

$$\text{So, } A_s = (0.0425)(0.0573) = 0.002435 \text{ m}^2/\text{m} = 2435 \text{ mm}^2/\text{m}.$$

**Use 25-mm diameter bars at 200 mm center-to-center:**

$$\left[ A_s \text{ provided} = (491) \left( \frac{1000}{200} \right) = 2455 \text{ mm}^2/\text{m} \right]$$

Similarly, for negative reinforcement,


$$M_u = 381.52 = (\phi)(A_s)(413.7 \times 1000) \left( 0.61 - \frac{a}{2} \right)$$

$$\phi = 0.9, A_s = 0.0425 a$$

So

$$381.52 = (0.9)(0.0425 a)(413.7 \times 1000) \left( 0.61 - \frac{a}{2} \right); \text{ or } a \approx 0.0409 \text{ m}$$

$$\text{So, } A_s = (0.0409)(0.0425) = 0.001738 \text{ m}^2/\text{m} = 1738 \text{ mm}^2/\text{m}.$$

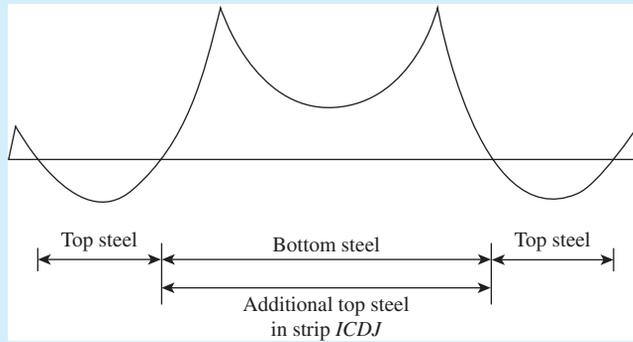

**Figure 8.20** General arrangement of reinforcement

**Use 25-mm diameter bars at 255 mm center-to-center:**

$$[A_s \text{ provided} = 1925 \text{ mm}^2]$$

Because negative moment occurs at midbay of strip *ICDJ*, reinforcement should be provided. This moment is

$$M_u = \frac{539.4}{5.25} = 102.74 \text{ kN-m/m}$$

Hence,

$$M_u = 102.74 = (0.9)(0.0425a)(413.7 \times 1000) \left( 0.61 - \frac{a}{2} \right);$$

or  $a \approx 0.0107$  m, and

$$A_s = (0.0107) (0.0425) = 0.0004547 \text{ m}^2/\text{m} = 455 \text{ mm}^2/\text{m}$$

**Provide 16-mm diameter bars at 400 mm center-to-center:**

$$[A_s \text{ provided} = 502 \text{ mm}^2]$$

For general arrangement of the reinforcement, see Figure 8.20. ■

## Problems

- 8.1** Determine the net ultimate bearing capacity of mat foundations with the following characteristics:

$$c_u = 2500 \text{ lb/ft}^2, \phi = 0, B = 20 \text{ ft}, L = 30 \text{ ft}, D_f = 6.2 \text{ ft}$$

8.2 Following are the results of a standard penetration test in the field (sandy soil):

Depth (m)	Field value of $N_{60}$
1.5	9
3.0	12
4.5	11
6.0	7
7.5	13
9.0	11
10.5	13

Estimate the net allowable bearing capacity of a mat foundation  $6.5 \text{ m} \times 5 \text{ m}$  in plan. Here,  $D_f = 1.5 \text{ m}$  and allowable settlement =  $50 \text{ mm}$ . Assume that the unit weight of soil,  $\gamma = 16.5 \text{ kN/m}^3$ .

8.3 Repeat Problem 8.2 for an allowable settlement of  $25 \text{ mm}$ .

8.4 A mat foundation on a saturated clay soil has dimensions of  $15 \text{ m} \times 20 \text{ m}$ . Given: dead and live load =  $48 \text{ MN}$ ,  $c_u = 50 \text{ kN/m}^2$ , and  $\gamma_{\text{clay}} = 17.6 \text{ kN/m}^3$ .

a. Find the depth,  $D_f$ , of the mat for a fully compensated foundation.

b. What will be the depth of the mat ( $D_f$ ) for a factor of safety of 2 against bearing capacity failure?

8.5 Repeat Problem 8.4 part b for  $c_u = 40 \text{ kN/m}^2$ .

8.6 A mat foundation is shown in Figure P8.6. The design considerations are  $L = 12 \text{ m}$ ,  $B = 10 \text{ m}$ ,  $D_f = 2.2 \text{ m}$ ,  $Q = 30 \text{ MN}$ ,  $x_1 = 2 \text{ m}$ ,  $x_2 = 2 \text{ m}$ ,  $x_3 = 5.2 \text{ m}$ , and preconsolidation pressure  $\sigma'_c \approx 105 \text{ kN/m}^2$ . Calculate the consolidation settlement under the center of the mat.

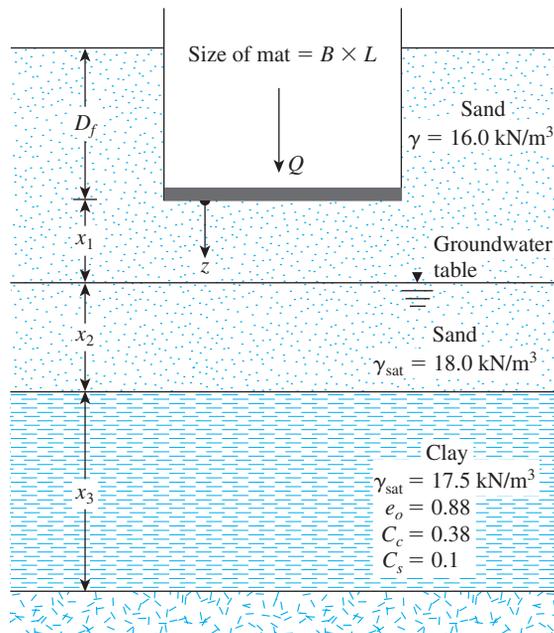


Figure P8.6

- 8.7** For the mat foundation in Problem 8.6, estimate the consolidation settlement under the corner of the mat.
- 8.8** From the plate load test (plate dimensions 1 ft  $\times$  1 ft) in the field, the coefficient of subgrade reaction of a sandy soil is determined to be 60 lb/in<sup>3</sup>. What will be the value of the coefficient of subgrade reaction on the same soil for a foundation with dimensions of 20 ft  $\times$  20 ft?
- 8.9** Refer to Problem 8.8. If the full-sized foundation had dimensions of 70 ft  $\times$  30 ft, what will be the value of the coefficient of subgrade reaction?
- 8.10** The subgrade reaction of a sandy soil obtained from the plate load test (plate dimensions 1 m  $\times$  0.7 m) is 18 MN/m<sup>3</sup>. What will be the value of  $k$  on the same soil for a foundation measuring 5 m  $\times$  3.5 m?

## References

- AMERICAN CONCRETE INSTITUTE (2011). *ACI Standard Building Code Requirements for Reinforced Concrete*, ACI 318–11, Farmington Hills, MI.
- AMERICAN CONCRETE INSTITUTE COMMITTEE 336 (1988). “Suggested Design Procedures for Combined Footings and Mats,” *Journal of the American Concrete Institute*, Vol. 63, No. 10, pp. 1041–1077.
- HETENYI, M. (1946). *Beams of Elastic Foundations*, University of Michigan Press, Ann Arbor, MI.
- MEYERHOF, G. G. (1965). “Shallow Foundations,” *Journal of the Soil Mechanics and Foundations Division*, American Society of Civil Engineers, Vol. 91, No. SM2, pp. 21–31.
- RIOS, L. and SILVA, F. P. (1948). “Foundations in Downtown São Paulo (Brazil),” *Proceedings, Second International Conference on Soil Mechanics and Foundation Engineering*, Rotterdam, Vol. 4, p. 69.
- SCHULTZE, E. (1962). “Probleme bei der Auswertung von Setzungsmessungen,” *Proceedings, Baugrundtagung*, Essen, Germany, p. 343.
- TERZAGHI, K. (1955). “Evaluation of the Coefficient of Subgrade Reactions,” *Geotechnique*, Institute of Engineers, London, Vol. 5, No. 4, pp. 197–226.
- VARGAS, M. (1948). “Building Settlement Observations in São Paulo,” *Proceedings Second International Conference on Soil Mechanics and Foundation Engineering*, Rotterdam, Vol. 4, p. 13.
- VARGAS, M. (1961). “Foundations of Tall Buildings on Sand in São Paulo (Brazil),” *Proceedings, Fifth International Conference on Soil Mechanics and Foundation Engineering*, Paris, Vol. 1, p. 841.
- VESIC, A. S. (1961). “Bending of Beams Resting on Isotropic Solid,” *Journal of the Engineering Mechanics Division*, American Society of Civil Engineers, Vol. 87, No. EM2, pp. 35–53.




# 9 Pile Foundations

## 9.1 Introduction

**P**iles are structural members that are made of steel, concrete, or timber. They are used to build pile foundations, which are deep and which cost more than shallow foundations. (See Chapters 4, 5, and 6.) Despite the cost, the use of piles often is necessary to ensure structural safety. The following list identifies some of the conditions that require pile foundations (Vesic, 1977):

1. When one or more upper soil layers are highly compressible and too weak to support the load transmitted by the superstructure, piles are used to transmit the load to underlying bedrock or a stronger soil layer, as shown in Figure 9.1a. When bedrock is not encountered at a reasonable depth below the ground surface, piles are used to transmit the structural load to the soil gradually. The resistance to the applied structural load is derived mainly from the frictional resistance developed at the soil–pile interface. (See Figure 9.1b.)
2. When subjected to horizontal forces (see Figure 9.1c), pile foundations resist by bending, while still supporting the vertical load transmitted by the superstructure. This type of situation is generally encountered in the design and construction of earth-retaining structures and foundations of tall structures that are subjected to high wind or to earthquake forces.
3. In many cases, expansive and collapsible soils may be present at the site of a proposed structure. These soils may extend to a great depth below the ground surface. Expansive soils swell and shrink as their moisture content increases and decreases, and the pressure of the swelling can be considerable. If shallow foundations are used in such circumstances, the structure may suffer considerable damage. However, pile foundations may be considered as an alternative when piles are extended beyond the active zone, which is where swelling and shrinking occur. (See Figure 9.1d.)

Soils such as loess are collapsible in nature. When the moisture content of these soils increases, their structures may break down. A sudden decrease in the void ratio of soil induces large settlements of structures supported by shallow

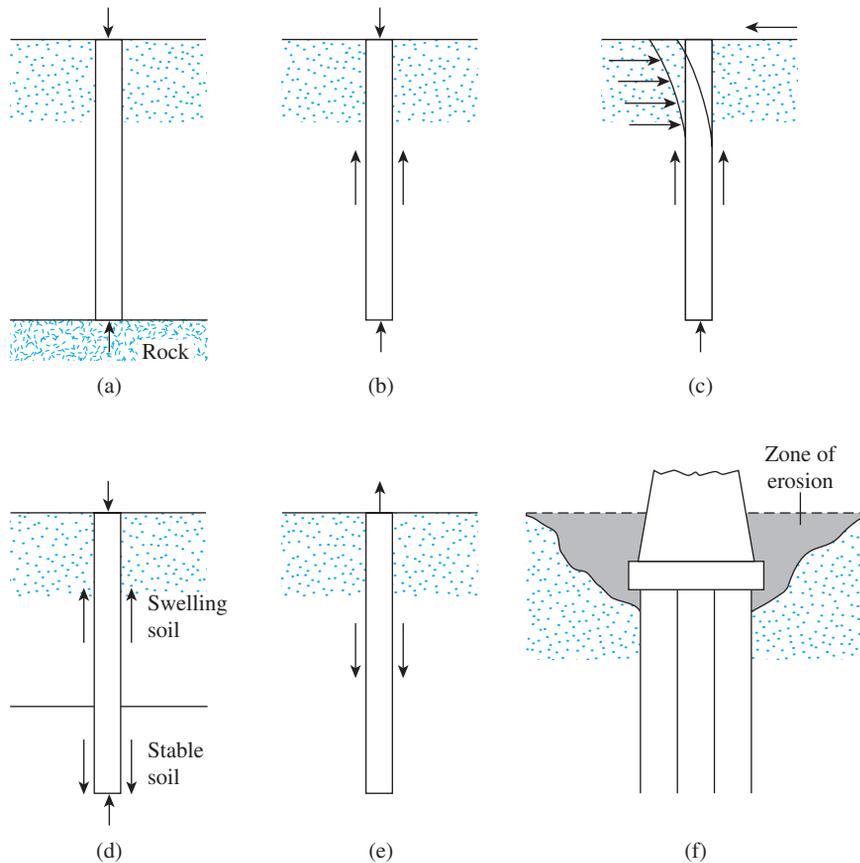

**Figure 9.1** Conditions that require the use of pile foundations

foundations. In such cases, pile foundations may be used in which the piles are extended into stable soil layers beyond the zone where moisture will change.

4. The foundations of some structures, such as transmission towers, offshore platforms, and basement mats below the water table, are subjected to uplifting forces. Piles are sometimes used for these foundations to resist the uplifting force. (See Figure 9.1e.)
5. Bridge abutments and piers are usually constructed over pile foundations to avoid the loss of bearing capacity that a shallow foundation might suffer because of soil erosion at the ground surface. (See Figure 9.1f.)

Although numerous investigations, both theoretical and experimental, have been conducted in the past to predict the behavior and the load-bearing capacity of piles in granular and cohesive soils, the mechanisms are not yet entirely understood and may never be. The design and analysis of pile foundations may thus be considered somewhat of an art as a result of the uncertainties involved in working with some subsoil conditions. This chapter discusses the present state of the art.

## 9.2 Types of Piles and Their Structural Characteristics

Different types of piles are used in construction work, depending on the type of load to be carried, the subsoil conditions, and the location of the water table. Piles can be divided into the following categories with the general descriptions for conventional steel, concrete, timber, and composite piles. More recently, continuous flight auger (CFA) piles have been used worldwide and also in the commercial market in the United States. They are described in Section 9.3.

### Steel Piles

*Steel piles* generally are either *pipe piles* or *rolled steel H-section piles*. Pipe piles can be driven into the ground with their ends open or closed. Wide-flange and I-section steel beams can also be used as piles. However, H-section piles are usually preferred because their web and flange thicknesses are equal. (In wide-flange and I-section beams, the web thicknesses are smaller than the thicknesses of the flange.) Table 9.1 gives the dimensions of some standard H-section steel piles used in the United States. Table 9.2 shows selected pipe sections frequency used for piling purposes. In many cases, the pipe piles are filled with concrete after they have been driven.

The allowable structural capacity for steel piles is

$$Q_{\text{all}} = A_s f_s \quad (9.1)$$

where

$A_s$  = cross-sectional area of the steel

$f_s$  = allowable stress of steel ( $\approx 0.33-0.5 f_y$ )

Once the design load for a pile is fixed, one should determine, on the basis of geo-technical considerations, whether  $Q_{(\text{design})}$  is within the allowable range as defined by Eq. (9.1).

When necessary, steel piles are spliced by welding or by riveting. Figure 9.2a shows a typical splice by welding for an H-pile. A typical splice by welding for a pipe pile is shown in Figure 9.2b. Figure 9.2c is a diagram of a splice of an H-pile by rivets or bolts.

When hard driving conditions are expected, such as driving through dense gravel, shale, or soft rock, steel piles can be fitted with driving points or shoes. Figures 9.2d and 9.2e are diagrams of two types of shoe used for pipe piles.

Steel piles may be subject to corrosion. For example, swamps, peats, and other organic soils are corrosive. Soils that have a pH greater than 7 are not so corrosive. To offset the effect of corrosion, an additional thickness of steel (over the actual designed cross-sectional area) is generally recommended. In many circumstances factory-applied epoxy coatings on piles work satisfactorily against corrosion. These coatings are not easily damaged by pile driving. Concrete encasement of steel piles in most corrosive zones also protects against corrosion.


Here are some general facts about steel piles:

- Usual length: 15 m to 60 m (50 ft to 200 ft)
- Usual load: 300 kN to 1200 kN (67 kip to 265 kip)

- Advantages:
  - a. Easy to handle with respect to cutoff and extension to the desired length
  - b. Can stand high driving stresses
  - c. Can penetrate hard layers such as dense gravel and soft rock
  - d. High load-carrying capacity
- Disadvantages:
  - a. Relatively costly
  - b. High level of noise during pile driving
  - c. Subject to corrosion
  - d. H-piles may be damaged or deflected from the vertical during driving through hard layers or past major obstructions

**Table 9.1a** Common H-Pile Sections used in the United States (SI Units)

Designation, size (mm) × weight (kg/m)	Depth $d_1$ (mm)	Section area ( $\text{m}^2 \times 10^{-3}$ )	Flange and web thickness $w$ (mm)	Flange width $d_2$ (mm)	Moment of inertia ( $\text{m}^4 \times 10^{-6}$ )	
					$I_{xx}$	$I_{yy}$
HP 200 × 53	204	6.84	11.3	207	49.4	16.8
HP 250 × 85	254	10.8	14.4	260	123	42
× 62	246	8.0	10.6	256	87.5	24
HP 310 × 125	312	15.9	17.5	312	271	89
× 110	308	14.1	15.49	310	237	77.5
× 93	303	11.9	13.1	308	197	63.7
× 79	299	10.0	11.05	306	164	62.9
HP 330 × 149	334	19.0	19.45	335	370	123
× 129	329	16.5	16.9	333	314	104
× 109	324	13.9	14.5	330	263	86
× 89	319	11.3	11.7	328	210	69
HP 360 × 174	361	22.2	20.45	378	508	184
× 152	356	19.4	17.91	376	437	158
× 132	351	16.8	15.62	373	374	136
× 108	346	13.8	12.82	371	303	109

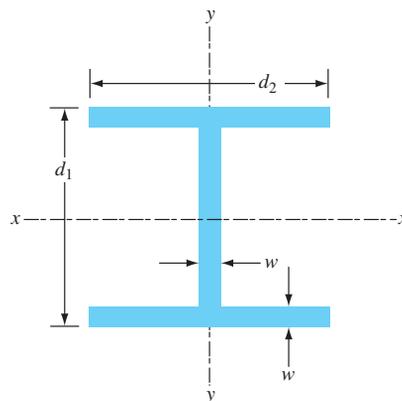

**Table 9.1b** Common H-Pile Sections used in the United States (English Units)


Designation size (in.) × weight (lb/ft)	Depth $d_1$ (in.)	Section area (in <sup>2</sup> )	Flange and web thickness $w$ (in.)	Flange width $d_2$ (in.)	Moment of inertia (in <sup>4</sup> )	
					$I_{xx}$	$I_{yy}$
HP 8 × 36	8.02	10.6	0.445	8.155	119	40.3
HP 10 × 57	9.99	16.8	0.565	10.225	294	101
× 42	9.70	12.4	0.420	10.075	210	71.7
HP 12 × 84	12.28	24.6	0.685	12.295	650	213
× 74	12.13	21.8	0.610	12.215	570	186
× 63	11.94	18.4	0.515	12.125	472	153
× 53	11.78	15.5	0.435	12.045	394	127
HP 13 × 100	13.15	29.4	0.766	13.21	886	294
× 87	12.95	25.5	0.665	13.11	755	250
× 73	12.74	21.6	0.565	13.01	630	207
× 60	12.54	17.5	0.460	12.90	503	165
HP 14 × 117	14.21	34.4	0.805	14.89	1220	443
× 102	14.01	30.0	0.705	14.78	1050	380
× 89	13.84	26.1	0.615	14.70	904	326
× 73	13.61	21.4	0.505	14.59	729	262

**Table 9.2a** Selected Pipe Pile Sections (SI Units)

Outside diameter (mm)	Wall thickness (mm)	Area of steel (cm <sup>2</sup> )
219	3.17	21.5
	4.78	32.1
	5.56	37.3
	7.92	52.7
254	4.78	37.5
	5.56	43.6
	6.35	49.4
305	4.78	44.9
	5.56	52.3
	6.35	59.7
406	4.78	60.3
	5.56	70.1
	6.35	79.8
457	5.56	80
	6.35	90
	7.92	112
508	5.56	88
	6.35	100
	7.92	125
610	6.35	121
	7.92	150
	9.53	179
	12.70	238

**Table 9.2b** Selected Pipe Pile Sections (English Units)

Outside diameter (in.)	Wall thickness (in.)	Area of steel (in <sup>2</sup> )
$8\frac{5}{8}$	0.125	3.34
	0.188	4.98
	0.219	5.78
	0.312	8.17
10	0.188	5.81
	0.219	6.75
	0.250	7.66
12	0.188	6.96
	0.219	8.11
	0.250	9.25
16	0.188	9.34
	0.219	10.86
	0.250	12.37
18	0.219	12.23
	0.250	13.94
	0.312	17.34
20	0.219	13.62
	0.250	15.51
	0.312	19.30
24	0.250	18.7
	0.312	23.2
	0.375	27.8
	0.500	36.9

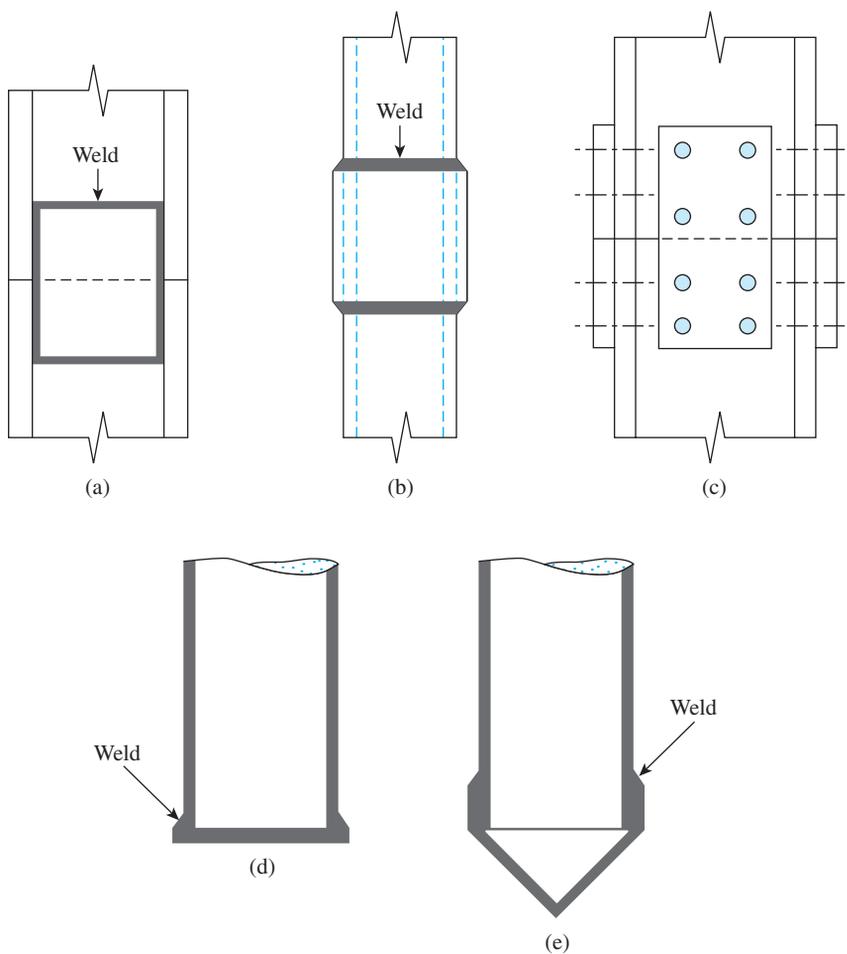


**Figure 9.2** Steel piles: (a) splicing of H-pile by welding; (b) splicing of pipe pile by welding; (c) splicing of H-pile by rivets and bolts; (d) flat driving point of pipe pile; (e) conical driving point of pipe pile

## Concrete Piles

*Concrete piles* may be divided into two basic categories: (a) precast piles and (b) cast-*in-situ* piles. *Precast piles* can be prepared by using ordinary reinforcement, and they can be square or octagonal in cross section. (See Figure 9.3.) Reinforcement is provided to enable the pile to resist the bending moment developed during pickup and transportation, the vertical load, and the bending moment caused by a lateral load. The piles are cast to desired lengths and cured before being transported to the work sites.

Some general facts about concrete piles are as follows:

- Usual length: 10 m to 15 m (30 ft to 50 ft)
- Usual load: 300 kN to 3000 kN (67 kip to 675 kip)

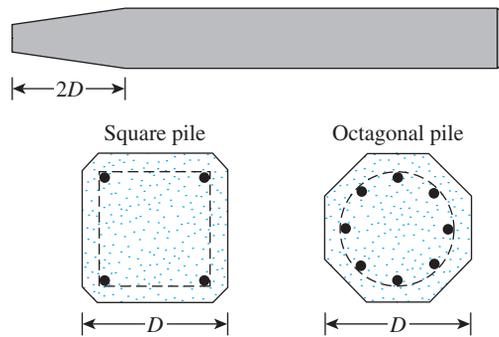

**Figure 9.3** Precast piles with ordinary reinforcement

- Advantages:
  - a. Can be subjected to hard driving
  - b. Corrosion resistant
  - c. Can be easily combined with a concrete superstructure
- Disadvantages:
  - a. Difficult to achieve proper cutoff
  - b. Difficult to transport

Precast piles can also be prestressed by the use of high-strength steel prestressing cables. The ultimate strength of these cables is about  $1800 \text{ MN/m}^2$  ( $\approx 260 \text{ ksi}$ ). During casting of the piles, the cables are pretensioned to about  $900$  to  $1300 \text{ MN/m}^2$  ( $\approx 130$  to  $190 \text{ ksi}$ ), and concrete is poured around them. After curing, the cables are cut, producing a compressive force on the pile section. Table 9.3 gives additional information about prestressed concrete piles with square and octagonal cross sections.

Some general facts about precast prestressed piles are as follows:

- Usual length: 10 m to 45 m (30 ft to 150 ft)
- Maximum length: 60 m (200 ft)
- Maximum load: 7500 kN to 8500 kN (1700 kip to 1900 kip)

The advantages and disadvantages are the same as those of precast piles.

*Cast-in-situ*, or *cast-in-place*, piles are built by making a hole in the ground and then filling it with concrete. Various types of cast-in-place concrete piles are currently used in construction, and most of them have been patented by their manufacturers. These piles may be divided into two broad categories: (a) cased and (b) uncased. Both types may have a pedestal at the bottom.

*Cased piles* are made by driving a steel casing into the ground with the help of a mandrel placed inside the casing. When the pile reaches the proper depth the mandrel is withdrawn and the casing is filled with concrete. Figures 9.4a, 9.4b, 9.4c, and 9.4d show some examples of cased piles without a pedestal. Figure 9.4e shows a cased pile with a pedestal. The pedestal is an expanded concrete bulb that is formed by dropping a hammer on fresh concrete.



Some general facts about cased cast-in-place piles are as follows:

- Usual length: 5 m to 15 m (15 ft to 50 ft)
- Maximum length: 30 m to 40 m (100 ft to 130 ft)

Table 9.3a Typical Prestressed Concrete Pile in Use (SI Units)

Pile shape <sup>a</sup>	D (mm)	Area of cross section (cm <sup>2</sup> )	Perimeter (mm)	Number of strands		Minimum effective prestress force (kN)	Section modulus (m <sup>3</sup> × 10 <sup>-3</sup> )	Design bearing capacity (kN)	
				12.7-mm diameter	11.1-mm diameter			Strength of concrete (MN/m <sup>2</sup> )	
								34.5	41.4
S	254	645	1016	4	4	312	2.737	556	778
O	254	536	838	4	4	258	1.786	462	555
S	305	929	1219	5	6	449	4.719	801	962
O	305	768	1016	4	5	369	3.097	662	795
S	356	1265	1422	6	8	610	7.489	1091	1310
O	356	1045	1168	5	7	503	4.916	901	1082
S	406	1652	1626	8	11	796	11.192	1425	1710
O	406	1368	1346	7	9	658	7.341	1180	1416
S	457	2090	1829	10	13	1010	15.928	1803	2163
O	457	1729	1524	8	11	836	10.455	1491	1790
S	508	2581	2032	12	16	1245	21.844	2226	2672
O	508	2136	1677	10	14	1032	14.355	1842	2239
S	559	3123	2235	15	20	1508	29.087	2694	3232
O	559	2587	1854	12	16	1250	19.107	2231	2678
S	610	3658	2438	18	23	1793	37.756	3155	3786
O	610	3078	2032	15	19	1486	34.794	2655	3186

<sup>a</sup>S = square section; O = octagonal section

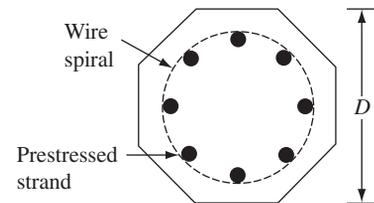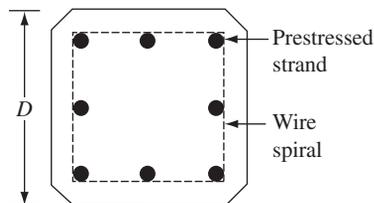

- Usual load: 200 kN to 500 kN (45 kip to 115 kip)
- Approximate maximum load: 800 kN (180 kip)
- Advantages:
  - a. Relatively cheap
  - b. Allow for inspection before pouring concrete
  - c. Easy to extend
- Disadvantages:
  - a. Difficult to splice after concreting
  - b. Thin casings may be damaged during driving
- Allowable load:

$$Q_{\text{all}} = A_s f_s + A_c f_c \quad (9.2)$$

Table 9.3b Typical Prestressed Concrete Pile in Use (English Units)

Pile shape <sup>a</sup>	D (in.)	Area of cross section (in <sup>2</sup> )	Perimeter (in.)	Number of strands		Minimum effective prestress force (kip)	Section modulus (in <sup>3</sup> )	Design bearing capacity (kip)	
				1/2-in diameter	7/16-in diameter			Strength of concrete	
								5000 psi	6000 psi
S	10	100	40	4	4	70	167	125	175
O	10	83	33	4	4	58	109	104	125
S	12	144	48	5	6	101	288	180	216
O	12	119	40	4	5	83	189	149	178
S	14	196	56	6	8	137	457	245	295
O	14	162	46	5	7	113	300	203	243
S	16	256	64	8	11	179	683	320	385
O	16	212	53	7	9	148	448	265	318
S	18	324	72	10	13	227	972	405	486
O	18	268	60	8	11	188	638	336	402
S	20	400	80	12	16	280	1333	500	600
O	20	331	66	10	14	234	876	414	503
S	22	484	88	15	20	339	1775	605	727
O	22	401	73	12	16	281	1166	502	602
S	24	576	96	18	23	403	2304	710	851
O	24	477	80	15	19	334	2123	596	716

<sup>a</sup>S = square section; O = octagonal section

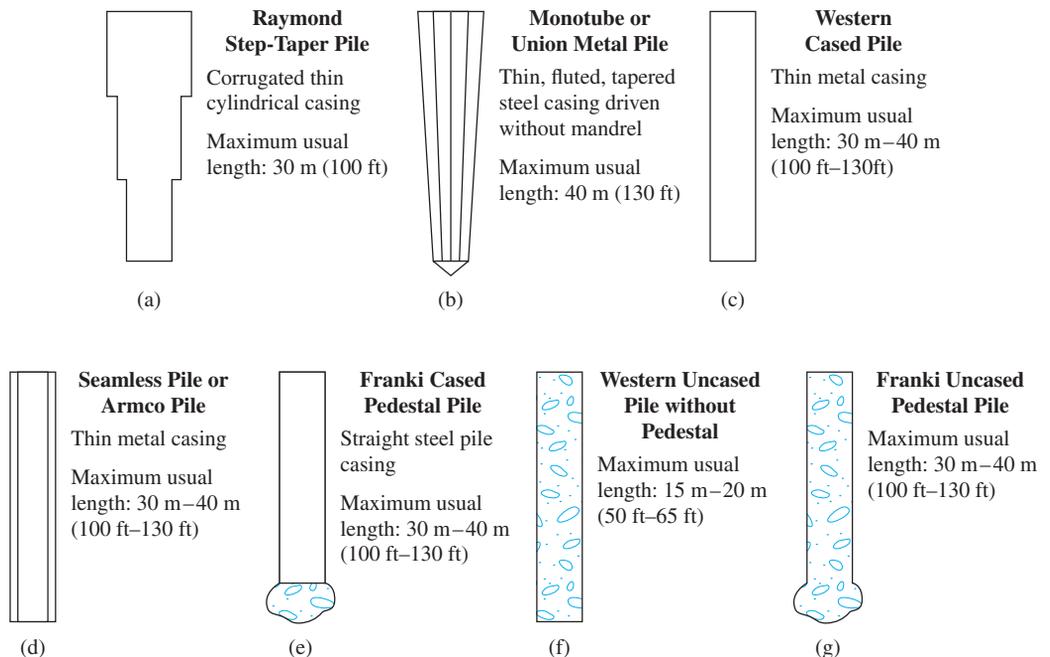


Figure 9.4 Cast-in-place concrete piles

where

$A_s$  = area of cross section of steel

$A_c$  = area of cross section of concrete

$f_s$  = allowable stress of steel

$f_c$  = allowable stress of concrete

Figures 9.4f and 9.4g are two types of uncased pile, one with a pedestal and the other without. The uncased piles are made by first driving the casing to the desired depth and then filling it with fresh concrete. The casing is then gradually withdrawn.

Following are some general facts about uncased cast-in-place concrete piles:

- Usual length: 5 m to 15 m (15 ft to 50 ft)
- Maximum length: 30 m to 40 m (100 ft to 130 ft)
- Usual load: 300 kN to 500 kN (67 kip to 115 kip)
- Approximate maximum load: 700 kN (160 kip)
- Advantages:
  - a. Initially economical
  - b. Can be finished at any elevation
- Disadvantages:
  - a. Voids may be created if concrete is placed rapidly
  - b. Difficult to splice after concreting
  - c. In soft soils, the sides of the hole may cave in, squeezing the concrete
- Allowable load:

$$Q_{\text{all}} = A_c f_c \quad (9.3)$$

where

$A_c$  = area of cross section of concrete

$f_c$  = allowable stress of concrete


## Timber Piles

*Timber piles* are tree trunks that have had their branches and bark carefully trimmed off. The maximum length of most timber piles is 10 to 20 m (30 to 65 ft). To qualify for use as a pile, the timber should be straight, sound, and without any defects. The American Society of Civil Engineers' *Manual of Practice*, No. 17 (1959), divided timber piles into three classes:

1. *Class A piles* carry heavy loads. The minimum diameter of the butt should be 356 mm (14 in.).
2. *Class B piles* are used to carry medium loads. The minimum butt diameter should be 305 to 330 mm (12 to 13 in.).
3. *Class C piles* are used in temporary construction work. They can be used permanently for structures when the entire pile is below the water table. The minimum butt diameter should be 305 mm (12 in.).

In any case, a pile tip should not have a diameter less than 150 mm (6 in.).

Timber piles cannot withstand hard driving stress; therefore, the pile capacity is generally limited. Steel shoes may be used to avoid damage at the pile tip (bottom). The tops of timber piles may also be damaged during the driving operation. The crushing of the wooden fibers caused by the impact of the hammer is referred to as *brooming*. To avoid damage to the top of the pile, a metal band or a cap may be used.

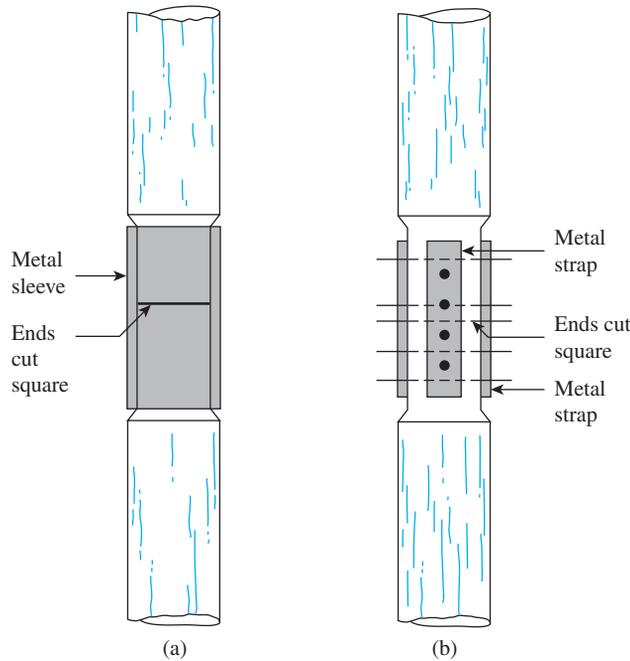

**Figure 9.5** Splicing of timber piles: (a) use of pipe sleeves; (b) use of metal straps and bolts

Splicing of timber piles should be avoided, particularly when they are expected to carry a tensile load or a lateral load. However, if splicing is necessary, it can be done by using *pipe sleeves* (see Figure 9.5a) or *metal straps and bolts* (see Figure 9.5b). The length of the sleeve should be at least five times the diameter of the pile. The butting ends should be cut square so that full contact can be maintained. The spliced portions should be carefully trimmed so that they fit tightly to the inside of the pipe sleeve. In the case of metal straps and bolts, the butting ends should also be cut square. The sides of the spliced portion should be trimmed plane for putting the straps on.

Timber piles can stay undamaged indefinitely if they are surrounded by saturated soil. However, in a marine environment, timber piles are subject to attack by various organisms and can be damaged extensively in a few months. When located above the water table, the piles are subject to attack by insects. The life of the piles may be increased by treating them with preservatives such as creosote.

The allowable load-carrying capacity of wooden piles is

$$Q_{\text{all}} = A_p f_w \quad (9.4)$$

where

$A_p$  = average area of cross section of the pile

$f_w$  = allowable stress on the timber

The following allowable stresses are for pressure-treated round timber piles made from Pacific Coast Douglas fir and Southern pine used in hydraulic structures (ASCE, 1993):

#### Pacific Coast Douglas Fir

- Compression parallel to grain: 6.04 MN/m<sup>2</sup> (875 lb/in.<sup>2</sup>)
- Bending: 11.7 MN/m<sup>2</sup> (1700 lb/in.<sup>2</sup>)

- Horizontal shear:  $0.66 \text{ MN/m}^2$  ( $95 \text{ lb/in.}^2$ )
- Compression perpendicular to grain:  $1.31 \text{ MN/m}^2$  ( $190 \text{ lb/in.}^2$ )

### Southern Pine

- Compression parallel to grain:  $5.7 \text{ MN/m}^2$  ( $825 \text{ lb/in.}^2$ )
- Bending:  $11.4 \text{ MN/m}^2$  ( $1650 \text{ lb/in.}^2$ )
- Horizontal shear:  $0.62 \text{ MN/m}^2$  ( $90 \text{ lb/in.}^2$ )
- Compression perpendicular to grain:  $1.41 \text{ MN/m}^2$  ( $205 \text{ lb/in.}^2$ )

The usual length of wooden piles is 5 m to 15 m (15 ft to 50 ft). The maximum length is about 30 m to 40 m (100 ft to 130 ft). The usual load carried by wooden piles is 300 kN to 500 kN (67 kip to 115 kip).

## Composite Piles

The upper and lower portions of *composite piles* are made of different materials. For example, composite piles may be made of steel and concrete or timber and concrete. Steel-and-concrete piles consist of a lower portion of steel and an upper portion of cast-in-place concrete. This type of pile is used when the length of the pile required for adequate bearing exceeds the capacity of simple cast-in-place concrete piles. Timber-and-concrete piles usually consist of a lower portion of timber pile below the permanent water table and an upper portion of concrete. In any case, forming proper joints between two dissimilar materials is difficult, and for that reason, composite piles are not widely used.

## 9.3 Continuous Flight Auger (CFA) Piles

The continuous flight auger (CFA) piles are also referred to as auger-cast, auger-cast-in-place, and auger-pressure grout piles. CFA piles are constructed by using continuous flight augers and by drilling to the final depth in one continuous process. When the drilling to the final depth is complete, the auger is gradually withdrawn as concrete or sand/cement grout is pumped into the hole through the hollow center of the auger pipe to the base of the auger. Reinforcement, if needed, can be placed in CFA piles immediately after the withdrawal of the auger. The reinforcement is usually confined to the top 10 to 15 m (30 to 50 ft) of the pile.

In general, CFA piles are usually 0.3 to 0.9 m (1 to 3 ft) in diameter with a length up to about 30 m (100 ft). In the United States, smaller diameter piles [i.e., 0.3 to 0.5 m (1 to 2 ft)] are generally used. However, piles with larger diameters [up to about 1.5 m (5 ft)] have been used. Typical center-to-center pile spacing is kept at 3 to 5 pile diameters. The following is a list of advantages and disadvantages of CFA piles.

- Advantages:
  - a. Noise and vibration during construction are minimized.
  - b. Eliminates splicing and cutoff.
- Disadvantages:
  - a. Structural integrity is less reliable.
  - b. Soil spoils need collection and disposal.

A detailed description of the construction procedure for CFA piles can be found in the FHWA *Geotechnical Engineering Circular (GEC) No. 8* (2007).

## 9.4 Estimating Pile Length

Selecting the type of pile to be used and estimating its necessary length are fairly difficult tasks that require good judgment. In addition to being broken down into the classification given in Section 9.2, piles can be divided into three major categories, depending on their lengths and the mechanisms of load transfer to the soil: (a) point bearing piles, (b) friction piles, and (c) compaction piles.

### Point Bearing Piles

If soil-boring records establish the presence of bedrock or rocklike material at a site within a reasonable depth, piles can be extended to the rock surface. (See Figure 9.6a.) In this case, the ultimate capacity of the piles depends entirely on the load-bearing capacity of the underlying material; thus, the piles are called *point bearing piles*. In most of these cases, the necessary length of the pile can be fairly well established.


If, instead of bedrock, a fairly compact and hard stratum of soil is encountered at a reasonable depth, piles can be extended a few meters into the hard stratum. (See Figure 9.6b.) Piles with pedestals can be constructed on the bed of the hard stratum, and the ultimate pile load may be expressed as

$$Q_u = Q_p + Q_s \quad (9.5)$$

where

$Q_p$  = load carried at the pile point

$Q_s$  = load carried by skin friction developed at the side of the pile (caused by shearing resistance between the soil and the pile)

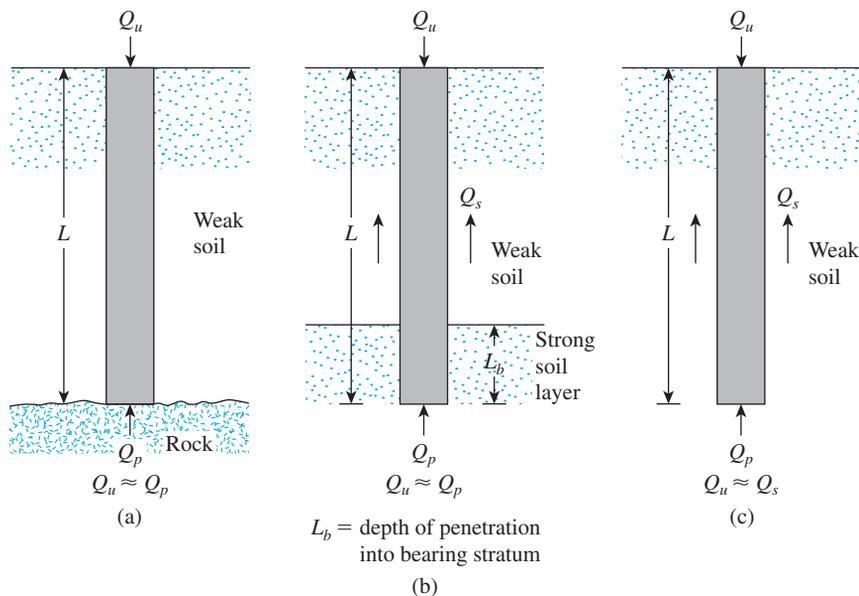

**Figure 9.6** (a) and (b) Point bearing piles; (c) friction piles

If  $Q_s$  is very small,

$$Q_s \approx Q_p \quad (9.6)$$

In this case, the required pile length may be estimated accurately if proper subsoil exploration records are available.

## Friction Piles

When no layer of rock or rocklike material is present at a reasonable depth at a site, point bearing piles become very long and uneconomical. In this type of subsoil, piles are driven through the softer material to specified depths. (See Figure 9.6c.) The ultimate load of the piles may be expressed by Eq. (9.5). However, if the value of  $Q_p$  is relatively small, then

$$Q_u \approx Q_s \quad (9.7)$$

These piles are called *friction piles*, because most of their resistance is derived from skin friction. However, the term *friction pile*, although used often in the literature, is a misnomer: In clayey soils, the resistance to applied load is also caused by *adhesion*.

The lengths of friction piles depend on the shear strength of the soil, the applied load, and the pile size. To determine the necessary lengths of these piles, an engineer needs a good understanding of soil–pile interaction, good judgment, and experience. Theoretical procedures for calculating the load-bearing capacity of piles are presented later in the chapter.


## Compaction Piles

Under certain circumstances, piles are driven in granular soils to achieve proper compaction of soil close to the ground surface. These piles are called *compaction piles*. The lengths of compaction piles depend on factors such as (a) the relative density of the soil before compaction, (b) the desired relative density of the soil after compaction, and (c) the required depth of compaction. These piles are generally short; however, some field tests are necessary to determine a reasonable length.


## 9.5 Installation of Piles

Most piles are driven into the ground by means of *hammers* or *vibratory drivers*. In special circumstances, piles can also be inserted by *jetting* or *partial augering*. The types of hammer used for pile driving include (a) the drop hammer, (b) the single-acting air or steam hammer, (c) the double-acting and differential air or steam hammer, and (d) the diesel hammer. In the driving operation, a cap is attached to the top of the pile. A cushion may be used between the pile and the cap. The cushion has the effect of reducing the impact force and spreading it over a longer time; however, the use of the cushion is optional. A hammer cushion is placed on the pile cap. The hammer drops on the cushion.

Figure 9.7 illustrates various hammers. A drop hammer (see Figure 9.7a) is raised by a winch and allowed to drop from a certain height  $H$ . It is the oldest type of hammer used for pile driving. The main disadvantage of the drop hammer is its slow rate of blows. The principle of the single-acting air or steam hammer is shown in Figure 9.7b.

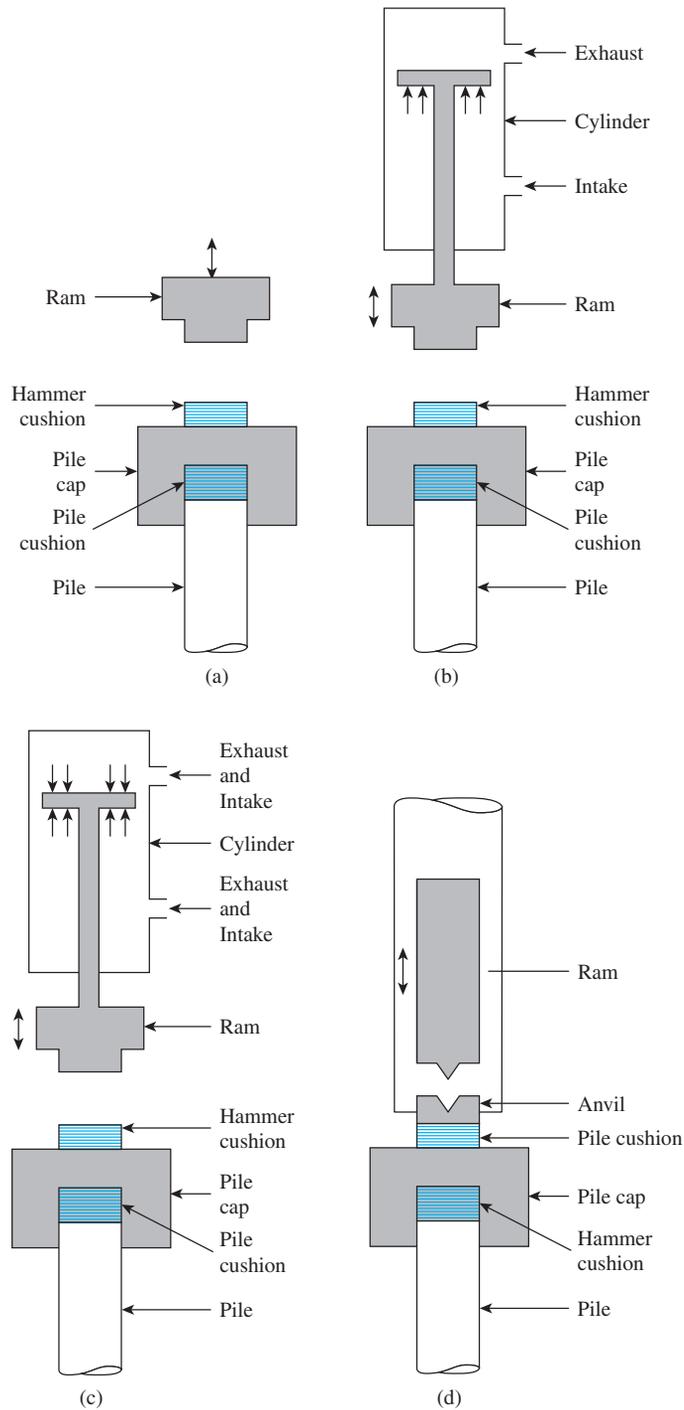

**Figure 9.7** Pile-driving equipment: (a) drop hammer; (b) single-acting air or steam hammer; (c) double-acting and differential air or steam hammer; (d) diesel hammer

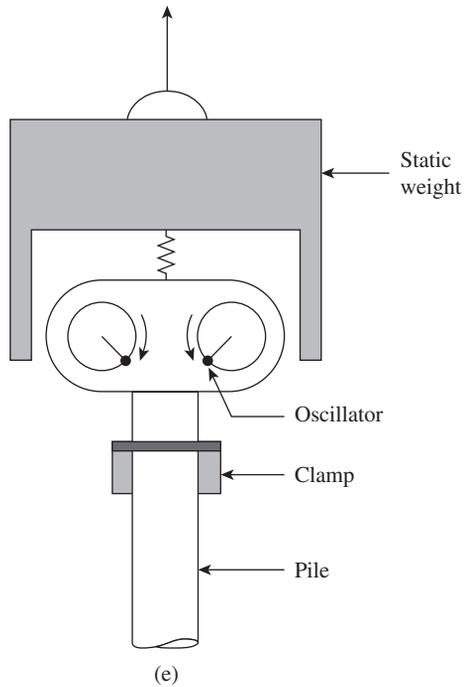

**Figure 9.7** (continued) Pile-driving equipment: (e) vibratory pile driver; (f) photograph of a vibratory pile driver (Courtesy of Reinforced Earth Company, Reston, Virginia)

The striking part, or ram, is raised by air or steam pressure and then drops by gravity. Figure 9.7c shows the operation of the double-acting and differential air or steam hammer. Air or steam is used both to raise the ram and to push it downward, thereby increasing the impact velocity of the ram. The diesel hammer (see Figure 9.7d) consists essentially of a ram, an anvil block, and a fuel-injection system. First the ram is raised and fuel is injected near the anvil. Then the ram is released. When the ram drops, it compresses the air–fuel mixture, which ignites. This action, in effect, pushes the pile downward and raises the ram. Diesel hammers work well under hard driving conditions. In soft soils, the downward movement of the pile is rather large, and the upward movement of the ram is small. This differential may not be sufficient to ignite the air–fuel system, so the ram may have to be lifted manually. Table 9.4 provides some examples of commercially available pile-driving hammers.

The principles of operation of a vibratory pile driver are shown in Figure 9.7e. This driver consists essentially of two counterrotating weights. The horizontal components of the centrifugal force generated as a result of rotating masses cancel each other. As a result, a sinusoidal dynamic vertical force is produced on the pile and helps drive the pile downward.

Figure 9.7f is a photograph of a vibratory pile driver. Figure 9.8 shows a pile-driving operation in the field.

*Jetting* is a technique that is sometimes used in pile driving when the pile needs to penetrate a thin layer of hard soil (such as sand and gravel) overlying a layer of softer soil.

**Table 9.4** Examples of Commercially Available Pile-Driving Hammers

Maker of hammer <sup>†</sup>	Model No.	Hammer type	Rated energy		Blows/min	Ram weight	
			kN-m	kip-ft		kN	kip
V	400C	Single acting	153.9	113.5	100	177.9	40.0
M	S-20		81.3	60.0	60	89.0	20.0
M	S-8		35.3	26.0	53	35.6	8.0
M	S-5		22.0	16.3	60	22.2	5.0
R	5/O		77.1	56.9	44	77.8	17.5
R	2/O		44.1	32.5	50	44.5	10.0
V	200C	Double acting or differential	68.1	50.2	98	89.0	20.0
V	140C		48.8	36.0	103	62.3	14.0
V	80C		33.1	24.5	111	35.6	8.0
V	65C		26.0	19.2	117	28.9	6.5
R	150C		66.1	48.8	95–105	66.7	15.0
V	4N100	Diesel	58.8	43.4	50–60	23.5	5.3
V	IN100		33.4	24.6	50–60	13.3	3.0
M	DE40		43.4	32.0	48	17.8	4.0
M	DE30		30.4	22.4	48	12.5	2.8

<sup>†</sup>V—Vulcan Iron Works, Florida

M—McKiernan-Terry, New Jersey

R—Raymond International, Inc., Texas

In this technique, water is discharged at the pile point by means of a pipe 50 to 75 mm (2 to 3 in.) in diameter to wash and loosen the sand and gravel.

Piles driven at an angle to the vertical, typically 14 to 20°, are referred to as *batter piles*. Batter piles are used in group piles when higher lateral load-bearing capacity is required. Piles also may be advanced by partial augering, with power augers (see Chapter 3) used to predrill holes part of the way. The piles can then be inserted into the holes and driven to the desired depth.

Piles may be divided into two categories based on the nature of their placement: *displacement piles* and *nondisplacement piles*. Driven piles are displacement piles, because they move some soil laterally; hence, there is a tendency for densification of soil surrounding them. Concrete piles and closed-ended pipe piles are high-displacement piles. However, steel H-piles displace less soil laterally during driving, so they are low-displacement piles. In contrast, bored piles are nondisplacement piles because their placement causes very little change in the state of stress in the soil.

## 9.6 Load Transfer Mechanism

The load transfer mechanism from a pile to the soil is complicated. To understand it, consider a pile of length  $L$ , as shown in Figure 9.9a. The load on the pile is gradually increased from zero to  $Q_{(z=0)}$  at the ground surface. Part of this load will be resisted by the side friction developed along the shaft,  $Q_1$ , and part by the soil below the tip of the pile,  $Q_2$ . Now, how are  $Q_1$  and  $Q_2$  related to the total load? If measurements are made to obtain the load carried by the pile shaft,  $Q_{(z)}$ , at any depth  $z$ , the nature of the variation found will



**Figure 9.8** A pile-driving operation in the field (Courtesy of E. C. Shin, University of Incheon, Korea)

be like that shown in curve 1 of Figure 9.9b. The *frictional resistance per unit area* at any depth  $z$  may be determined as

$$f_{(z)} = \frac{\Delta Q_{(z)}}{(p)(\Delta z)} \quad (9.8)$$

where  $p$  = perimeter of the cross section of the pile. Figure 9.9c shows the variation of  $f_{(z)}$  with depth.

If the load  $Q$  at the ground surface is gradually increased, maximum frictional resistance along the pile shaft will be fully mobilized when the relative displacement between

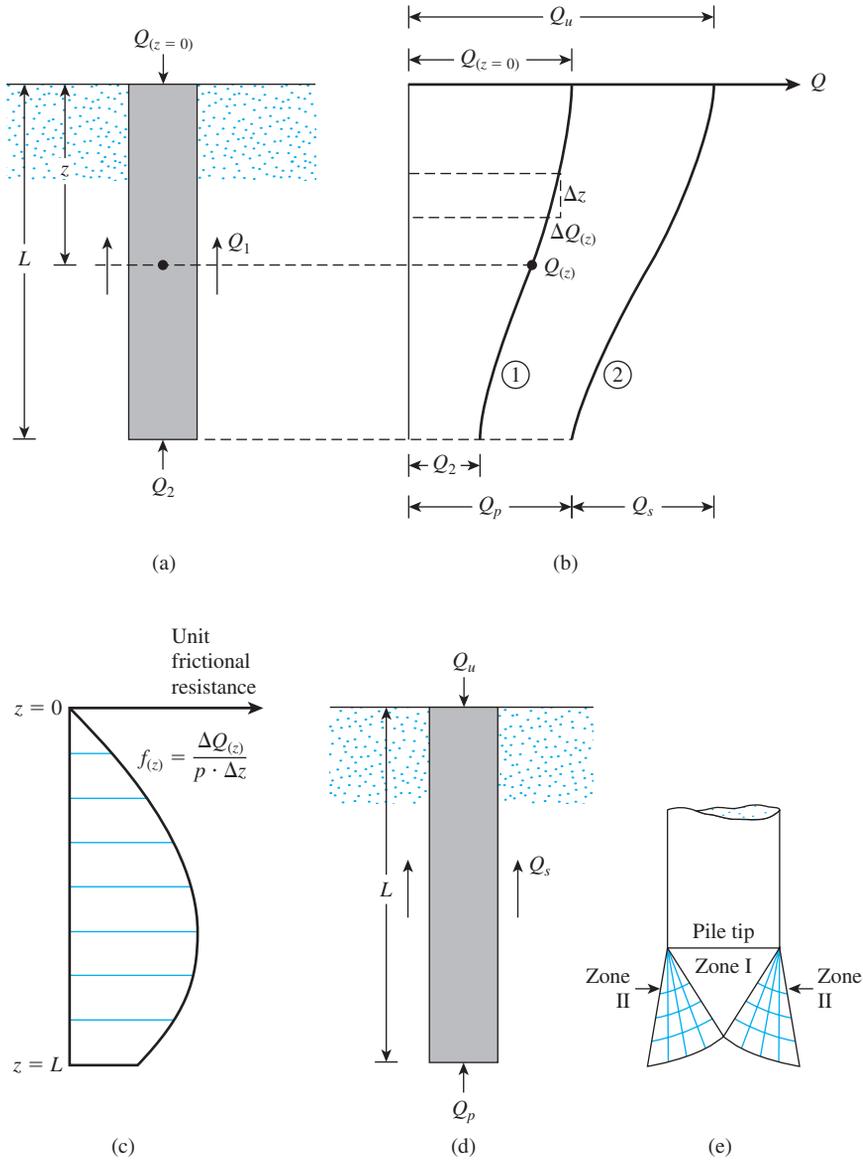


Figure 9.9 Load transfer mechanism for piles

the soil and the pile is about 5 to 10 mm (0.2 to 0.3 in.), irrespective of the pile size and length  $L$ . However, the maximum point resistance  $Q_2 = Q_p$  will not be mobilized until the tip of the pile has moved about 10 to 25% of the pile width (or diameter). (The lower limit applies to driven piles and the upper limit to bored piles). At ultimate load (Figure 9.9d and curve 2 in Figure 9.9b),  $Q_{(z=0)} = Q_u$ . Thus,

$$Q_1 = Q_s$$

and

$$Q_2 = Q_p$$

The preceding explanation indicates that  $Q_s$  (or the unit skin friction,  $f$ , along the pile shaft) is developed at a *much smaller pile displacement compared with the point resistance,  $Q_p$* . In order to demonstrate this point, let us consider the results of a pile load test conducted in the field by Mansur and Hunter (1970). The details of the pile and subsoil conditions are as follow:

Type of pile: Steel pile with 406 mm (16 in.) outside diameter with 8.15 mm (0.321 in.) wall thickness

Type of subsoil: Sand

Length of pile embedment: 16.8 m (55 ft)


Figure 9.10a shows the load test results, which is a plot of load at the top of the pile [ $Q_{(z=0)}$ ] versus settlement(s). Figure 9.10b shows the plot of the load carried by the pile shaft [ $Q_{(z)}$ ] at any depth. It was reported by Mansur and Hunter (1970) that, for this test, at failure

$$Q_u \approx 1601 \text{ kN (360 kip)}$$

$$Q_p \approx 416 \text{ kN (93.6 kip)}$$

and

$$Q_s \approx 1185 \text{ kN (266.4 kip)}$$

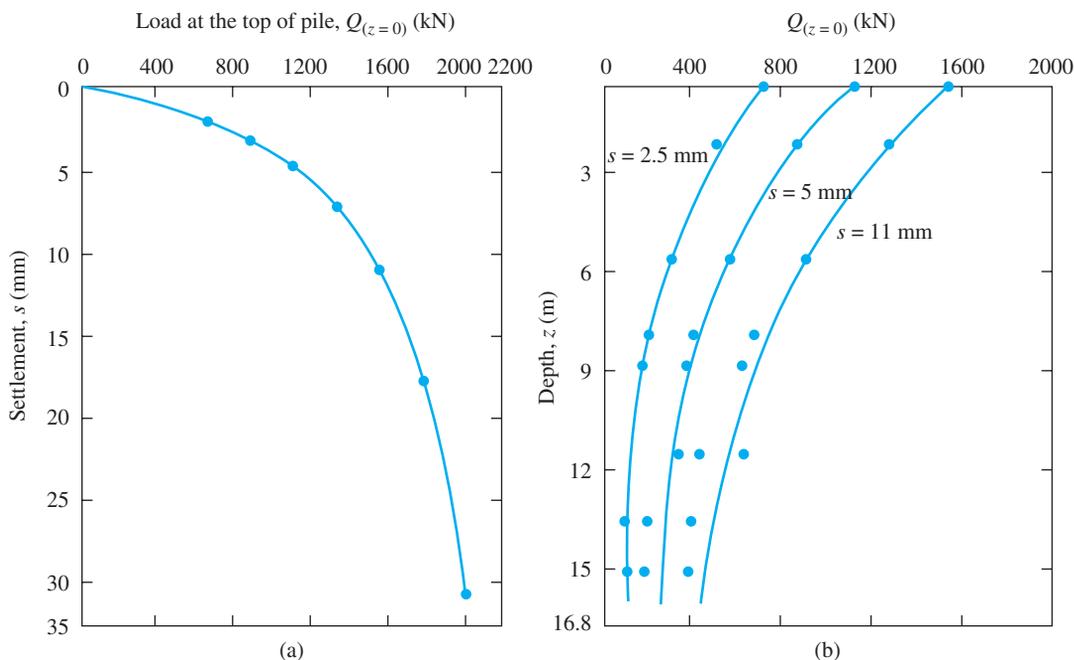

**Figure 9.10** Load test results on a pipe pile in sand (Based on Mansur and Hunter, 1970)

Now, let us consider the load distribution in Figure 9.10b when the pile settlement(s) is about 2.5 mm. For this condition,

$$\begin{aligned} Q_{(z=0)} &\approx 667 \text{ kN} \\ Q_2 &\approx 93 \text{ kN} \\ Q_1 &\approx 574 \text{ kN} \end{aligned}$$

Hence, at  $s = 2.5$  mm,

$$\frac{Q_2}{Q_p} = \frac{93}{416} (100) = 22.4\%$$

and

$$\frac{Q_1}{Q_s} = \frac{574}{1185} (100) = 48.4\%$$

Thus, it is obvious that the skin friction is mobilized faster at low settlement levels as compared to the point load.

At ultimate load, the failure surface in the soil at the pile tip (a bearing capacity failure caused by  $Q_p$ ) is like that shown in Figure 9.9e. Note that pile foundations are deep foundations and that the soil fails mostly in a *punching mode*, as illustrated previously in Figures 4.1c and 4.3. That is, a *triangular zone*, I, is developed at the pile tip, which is pushed downward without producing any other visible slip surface. In dense sands and stiff clayey soils, a *radial shear zone*, II, may partially develop. Hence, the load displacement curves of piles will resemble those shown in Figure 4.1c.

## 9.7 Equations for Estimating Pile Capacity

The ultimate load-carrying capacity  $Q_u$  of a pile is given by the equation

$$Q_u = Q_p + Q_s \quad (9.9)$$

where

$Q_p$  = load-carrying capacity of the pile point

$Q_s$  = frictional resistance (skin friction) derived from the soil–pile interface (see Figure 9.11)


Numerous published studies cover the determination of the values of  $Q_p$  and  $Q_s$ . Excellent reviews of many of these investigations have been provided by Vesic (1977), Meyerhof (1976), and Coyle and Castello (1981). These studies afford an insight into the problem of determining the ultimate pile capacity.

The ultimate load-carrying capacity relationships for CFA piles (Section 9.3) will be discussed separately in Section 9.14.

### Point Bearing Capacity, $Q_p$

The ultimate bearing capacity of shallow foundations was discussed in Chapter 4. According to Terzaghi's equations,

$$q_u = 1.3c'N_c + qN_q + 0.4\gamma BN_\gamma \quad (\text{for shallow square foundations})$$

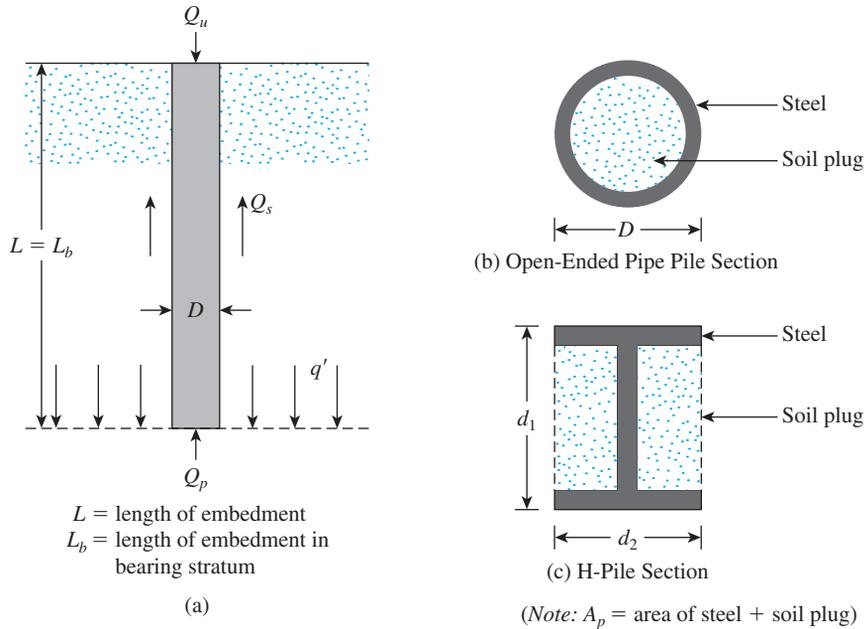

**Figure 9.11** Ultimate load-carrying capacity of pile

and

$$q_u = 1.3c'N_c + qN_q + 0.3\gamma BN_\gamma \quad (\text{for shallow circular foundations})$$

Similarly, the general bearing capacity equation for shallow foundations was given in Chapter 4 (for vertical loading) as

$$q_u = c'N_c F_{cs} F_{cd} + qN_q F_{qs} F_{qd} + \frac{1}{2}\gamma BN_\gamma F_{\gamma s} F_{\gamma d}$$

Hence, in general, the ultimate load-bearing capacity may be expressed as

$$q_u = c'N_c^* + qN_q^* + \gamma BN_\gamma^* \quad (9.10)$$

where  $N_c^*$ ,  $N_q^*$ , and  $N_\gamma^*$  are the bearing capacity factors that include the necessary shape and depth factors.

Pile foundations are deep. However, the ultimate resistance per unit area developed at the pile tip,  $q_p$ , may be expressed by an equation similar in form to Eq. (9.10), although the values of  $N_c^*$ ,  $N_q^*$ , and  $N_\gamma^*$  will change. The notation used in this chapter for the width of a pile is  $D$ . Hence, substituting  $D$  for  $B$  in Eq. (9.10) gives

$$q_u = q_p = c'N_c^* + qN_q^* + \gamma DN_\gamma^* \quad (9.11)$$

Because the width  $D$  of a pile is relatively small, the term  $\gamma DN_\gamma^*$  may be dropped from the right side of the preceding equation without introducing a serious error; thus, we have

$$q_p = c'N_c^* + q'N_q^* \quad (9.12)$$

Note that the term  $q$  has been replaced by  $q'$  in Eq. (9.12), to signify effective vertical stress. Thus, the point bearing of piles is

$$Q_p = A_p q_p = A_p (c' N_c^* + q' N_q^*) \quad (9.13)$$

where

$A_p$  = area of pile tip

$c'$  = cohesion of the soil supporting the pile tip

$q_p$  = unit point resistance

$q'$  = effective vertical stress at the level of the pile tip

$N_c^*, N_q^*$  = the bearing capacity factors

### Frictional Resistance, $Q_s$

The frictional, or skin, resistance of a pile may be written as

$$Q_s = \sum p \Delta L f \quad (9.14)$$

where

$p$  = perimeter of the pile section

$\Delta L$  = incremental pile length over which  $p$  and  $f$  are taken to be constant

$f$  = unit friction resistance at any depth  $z$

The various methods for estimating  $Q_p$  and  $Q_s$  are discussed in the next several sections. It needs to be reemphasized that, in the field, for full mobilization of the point resistance ( $Q_p$ ), the pile tip must go through a displacement of 10 to 25% of the pile width (or diameter).

### Allowable Load, $Q_{all}$

After the total ultimate load-carrying capacity of a pile has been determined by summing the point bearing capacity and the frictional (or skin) resistance, a reasonable factor of safety should be used to obtain the total allowable load for each pile, or

$$Q_{all} = \frac{Q_u}{FS}$$

where

$Q_{all}$  = allowable load-carrying capacity for each pile

FS = factor of safety

The factor of safety generally used ranges from 2.5 to 4, depending on the uncertainties surrounding the calculation of ultimate load.

## 9.8 Meyerhof's Method for Estimating $Q_p$

### Sand

The point bearing capacity,  $q_p$ , of a pile in sand generally increases with the depth of embedment in the bearing stratum and reaches a maximum value at an embedment ratio of  $L_b/D = (L_b/D)_{cr}$ . Note that in a homogeneous soil  $L_b$  is equal to the actual embedment length of the pile,  $L$ . However, where a pile has penetrated into a bearing stratum,  $L_b < L$ . Beyond the critical embedment ratio,  $(L_b/D)_{cr}$ , the value of  $q_p$  remains constant ( $q_p = q_l$ ). That is, as shown in Figure 9.12 for the case of a homogeneous soil,  $L = L_b$ .


For piles in sand,  $c' = 0$ , and Eq. (9.13) simplifies to

$$Q_p = A_p q_p = A_p q' N_q^* \quad (9.15)$$


The variation of  $N_q^*$  with soil friction angle  $\phi'$  is shown in Figure 9.13. The interpolated values of  $N_q^*$  for various friction angles are also given in Table 9.5. However,  $Q_p$  should not exceed the limiting value  $A_p q_l$ ; that is,

$$Q_p = A_p q' N_q^* \leq A_p q_l \quad (9.16)$$

**Figure 9.13** Variation of the maximum values of  $N_q^*$  with soil friction angle  $\phi'$  (Based on Meyerhof, G. G. (1976). "Bearing Capacity and Settlement of Pile Foundations," *Journal of the Geotechnical Engineering Division*, American Society of Civil Engineers, Vol. 102, No. GT3, pp. 197–228.)

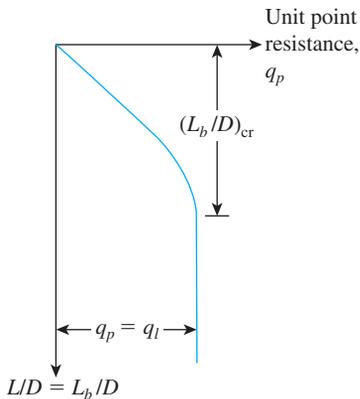

**Figure 9.12** Nature of variation of unit point resistance in a homogeneous sand

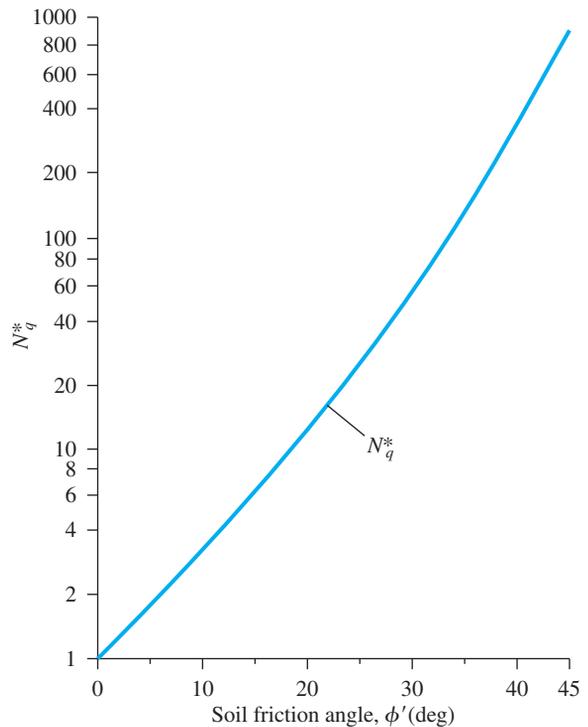

**Table 9.5** Interpolated Values of  $N_q^*$  Based on Meyerhof's Theory

Soil friction angle, $\phi$ (deg)	$N_q^*$
20	12.4
21	13.8
22	15.5
23	17.9
24	21.4
25	26.0
26	29.5
27	34.0
28	39.7
29	46.5
30	56.7
31	68.2
32	81.0
33	96.0
34	115.0
35	143.0
36	168.0
37	194.0
38	231.0
39	276.0
40	346.0
41	420.0
42	525.0
43	650.0
44	780.0
45	930.0

The limiting point resistance is

$$q_l = 0.5 p_a N_q^* \tan \phi' \quad (9.17)$$

where

$p_a$  = atmospheric pressure (= 100 kN/m<sup>2</sup> or 2000 lb/ft<sup>2</sup>)

$\phi'$  = effective soil friction angle of the bearing stratum


A good example of the concept of the critical embedment ratio can be found from the field load tests on a pile in sand at the Ogeechee River site reported by Vesic (1970). The pile tested was a steel pile with a diameter of 457 mm (18 in.). Table 9.6 shows the ultimate resistance at various depths. Figure 9.14 shows the plot of  $q_p$  with depth obtained

**Table 9.6** Ultimate Point Resistance,  $q_p$ , of Test Pile at the Ogeechee River Site as Reported by Vesic (1970)

Pile diameter, $D$ (m)	Depth of embedment, $L$ (m)	$L/D$	$q_p$ (kN/m <sup>2</sup> )
0.457	3.02	6.61	3,304
0.457	6.12	13.39	9,365
0.457	8.87	19.4	11,472
0.457	12.0	26.26	11,587
0.457	15.00	32.82	13,971

from the field tests along with the range of standard penetration resistance at the site. From the figure, the following observations can be made.

1. There is a limiting value of  $q_p$ . For the tests under consideration, it is about 12,000 kN/m<sup>2</sup>.
2. The  $(L/D)_{cr}$  value is about 16 to 18.
3. The average  $N_{60}$  value is about 30 for  $L/D \geq (L/D)_{cr}$ . Using Eq. (9.37), the limiting point resistance is  $4p_a N_{60} = (4)(100)(30) = 12,000$  kN/m<sup>2</sup>. This value is generally consistent with the field observation.

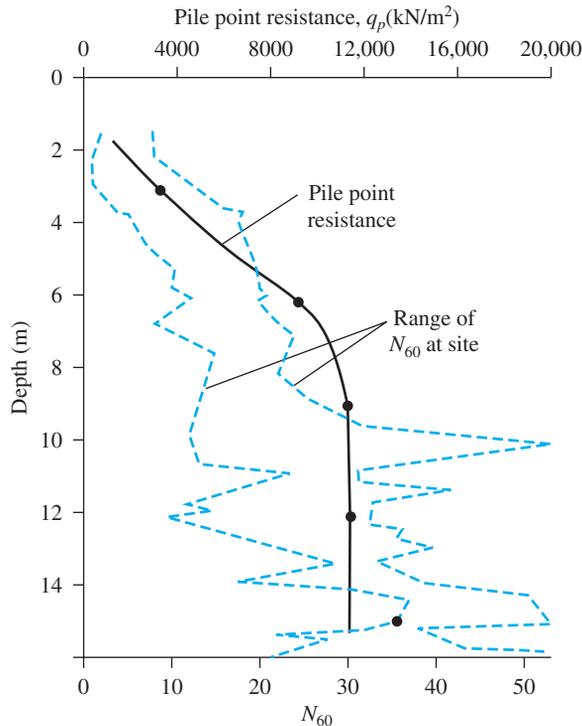

**Figure 9.14** Vesic's pile test (1970) result—variation of  $q_p$  and  $N_{60}$  with depth

### Clay ( $\phi = 0$ )

For piles in *saturated clays* under undrained conditions ( $\phi = 0$ ), the net ultimate load can be given as

$$Q_p \approx N_c^* c_u A_p = 9c_u A_p \quad (9.18)$$

where  $c_u$  = undrained cohesion of the soil below the tip of the pile.

## 9.9 Vesic's Method for Estimating $Q_p$

### Sand

Vesic (1977) proposed a method for estimating the pile point bearing capacity based on the theory of *expansion of cavities*. According to this theory, on the basis of effective stress parameters, we may write

$$Q_p = A_p q_p = A_p \bar{\sigma}'_o N_\sigma^* \quad (9.19)$$

where

$$\begin{aligned} \bar{\sigma}'_o &= \text{mean effective normal ground stress at the level of the pile point} \\ &= \left( \frac{1 + 2K_o}{3} \right) q' \end{aligned} \quad (9.20)$$

$$K_o = \text{earth pressure coefficient at rest} = 1 - \sin \phi' \quad (9.21)$$

and

$$N_\sigma^* = \text{bearing capacity factor}$$

Note that Eq. (9.19) is a modification of Eq. (9.15) with

$$N_\sigma^* = \frac{3N_q^*}{(1 + 2K_o)} \quad (9.22)$$

According to Vesic's theory,

$$N_\sigma^* = f(I_{rr}) \quad (9.23)$$

where  $I_{rr}$  = reduced rigidity index for the soil. However,

$$I_{rr} = \frac{I_r}{1 + I_r \Delta} \quad (9.24)$$

where

$$I_r = \text{rigidity index} = \frac{E_s}{2(1 + \mu_s) q' \tan \phi'} = \frac{G_s}{q' \tan \phi'} \quad (9.25)$$

$E_s$  = modulus of elasticity of soil

$\mu_s$  = Poisson's ratio of soil

$G_s$  = shear modulus of soil

$\Delta$  = average volumetric strain in the plastic zone below the pile point

The general ranges of  $I_r$  for various soils are

Sand (relative density = 50% to 80%): 75 to 150

Silt : 50 to 75

In order to estimate  $I_r$  [Eq. (9.25)] and hence  $I_{rr}$  [Eq. (9.24)], the following approximations may be used (Chen and Kulhawy, 1994)

$$\frac{E_s}{p_a} = m \quad (9.26)$$

where

$p_a$  = atmospheric pressure ( $\approx 100 \text{ kN/m}^2$  or  $2000 \text{ lb/ft}^2$ )

$$m = \begin{cases} 100 \text{ to } 200 & (\text{loose soil}) \\ 200 \text{ to } 500 & (\text{medium dense soil}) \\ 500 \text{ to } 1000 & (\text{dense soil}) \end{cases}$$

$$\mu_s = 0.1 + 0.3 \left( \frac{\phi' - 25}{20} \right) \quad (\text{for } 25^\circ \leq \phi' \leq 45^\circ) \quad (9.27)$$

$$\Delta = 0.005 \left( 1 - \frac{\phi' - 25}{20} \right) \frac{q'}{p_a} \quad (9.28)$$

On the basis of cone penetration tests in the field, Baldi et al. (1981) gave the following correlations for  $I_r$ :

$$I_r = \frac{300}{F_r(\%)} \quad (\text{for mechanical cone penetration}) \quad (9.29)$$

and

$$I_r = \frac{170}{F_r(\%)} \quad (\text{for electric cone penetration}) \quad (9.30)$$

For the definition of  $F_r$ , see Eq. (3.46). Table 9.7 gives the values of  $N_\sigma^*$  for various values of  $I_{rr}$  and  $\phi'$ .

**Table 9.7** Bearing Capacity Factors  $N_{cr}^*$  Based on the Theory of Expansion of Cavities

$\phi'$	$I_{rr}$									
	10	20	40	60	80	100	200	300	400	500
25	12.12	15.95	20.98	24.64	27.61	30.16	39.70	46.61	52.24	57.06
26	13.18	17.47	23.15	27.30	30.69	33.60	44.53	52.51	59.02	64.62
27	14.33	19.12	25.52	30.21	34.06	37.37	49.88	59.05	66.56	73.04
28	15.57	20.91	28.10	33.40	37.75	41.51	55.77	66.29	74.93	82.40
29	16.90	22.85	30.90	36.87	41.79	46.05	62.27	74.30	84.21	92.80
30	18.24	24.95	33.95	40.66	46.21	51.02	69.43	83.14	94.48	104.33
31	19.88	27.22	37.27	44.79	51.03	56.46	77.31	92.90	105.84	117.11
32	21.55	29.68	40.88	49.30	56.30	62.41	85.96	103.66	118.39	131.24
33	23.34	32.34	44.80	54.20	62.05	68.92	95.46	115.51	132.24	146.87
34	25.28	35.21	49.05	59.54	68.33	76.02	105.90	128.55	147.51	164.12
35	27.36	38.32	53.67	65.36	75.17	83.78	117.33	142.89	164.33	183.16
36	29.60	41.68	58.68	71.69	82.62	92.24	129.87	158.65	182.85	204.14
37	32.02	45.31	64.13	78.57	90.75	101.48	143.61	175.95	203.23	227.26
38	34.63	49.24	70.03	86.05	99.60	111.56	158.65	194.94	225.62	252.71
39	37.44	53.50	76.45	94.20	109.24	122.54	175.11	215.78	250.23	280.71
40	40.47	58.10	83.40	103.05	119.74	134.52	193.13	238.62	277.26	311.50
41	43.74	63.07	90.96	112.68	131.18	147.59	212.84	263.67	306.94	345.34
42	47.27	68.46	99.16	123.16	143.64	161.83	234.40	291.13	339.52	382.53
43	51.08	74.30	108.08	134.56	157.21	177.36	257.99	321.22	375.28	423.39
44	55.20	80.62	117.76	146.97	172.00	194.31	283.80	354.20	414.51	468.28
45	59.66	87.48	128.28	160.48	188.12	212.79	312.03	390.35	457.57	517.58

Based on "Design on pile foundations," by A.S. Vesic. *Synthesis of Highway Practice* by American Association of State Highway and Transportation, 1969.

**Table 9.8** Variation of  $N_c^*$  with  $I_{rr}$  for  $\phi = 0$  Condition Based on Vesic's Theory

$I_{rr}$	$N_c^*$
10	6.97
20	7.90
40	8.82
60	9.36
80	9.75
100	10.04
200	10.97
300	11.51
400	11.89
500	12.19

### Clay ( $\phi = 0$ )

In saturated clay ( $\phi = 0$  condition), the net ultimate point bearing capacity of a pile can be approximated as

$$Q_p = A_p q_p = A_p c_u N_c^* \quad (9.31)$$

where  $c_u$  = undrained cohesion

According to the *expansion of cavity* theory of Vesic (1977),

$$N_c^* = \frac{4}{3} (\ln I_{rr} + 1) + \frac{\pi}{2} + 1 \quad (9.32)$$

The variations of  $N_c^*$  with  $I_{rr}$  for  $\phi = 0$  condition are given in Table 9.8.

Now, referring to Eq. (9.24) for saturated clay with no volume change,  $\Delta = 0$ . Hence,

$$I_{rr} = I_r \quad (9.33)$$

For  $\phi = 0$ ,

$$I_r = \frac{E_s}{3c_u} \quad (9.34)$$

O' Neill and Reese (1999) suggested the following approximate relationships for  $I_r$  and the undrained cohesion,  $c_u$ .

$\frac{c_u}{p_a}$	$I_r$
0.24	50
0.48	150
$\geq 0.96$	250–300

Note:  $p_a$  = atmospheric pressure  
 $\approx 100 \text{ kN/m}^2$  or  $2000 \text{ lb/ft}^2$ .

The preceding values can be approximated as

$$I_r = 347 \left( \frac{c_u}{p_a} \right) - 33 \leq 300 \quad (9.35)$$

## 9.10 Coyle and Castello's Method for Estimating $Q_p$ in Sand

Coyle and Castello (1981) analyzed 24 large-scale field load tests of driven piles in sand. On the basis of the test results, they suggested that, in sand,


$$Q_p = q' N_q^* A_p \quad (9.36)$$

where

$q'$  = effective vertical stress at the pile tip

$N_q^*$  = bearing capacity factor

Figure 9.15 shows the variation of  $N_q^*$  with  $L/D$  and the soil friction angle  $\phi'$ .

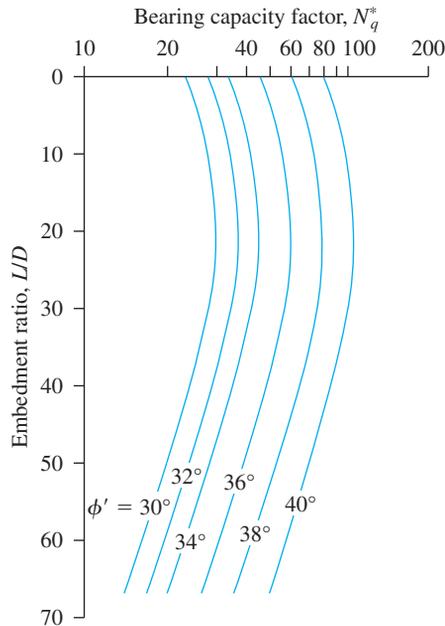

**Figure 9.15** Variation of  $N_q^*$  with  $L/D$   
(Based on Coyle and Castello, 1981)

### Example 9.1

Consider a 20-m-long concrete pile with a cross section of  $0.407 \text{ m} \times 0.407 \text{ m}$  fully embedded in sand. For the sand, given: unit weight,  $\gamma = 18 \text{ kN/m}^3$ ; and soil friction angle,  $\phi' = 35^\circ$ . Estimate the ultimate point  $Q_p$  with each of the following:

- Meyerhof's method
- Vesic's method
- The method of Coyle and Castello
- Based on the results of parts a, b, and c, adopt a value for  $Q_p$

#### Solution

Part a

From Eqs. (9.16) and (9.17),

$$Q_p = A_p q' N_q^* \leq A_p (0.5 p_a N_q^* \tan \phi')$$

For  $\phi' = 35^\circ$ , the value of  $N_q^* \approx 143$  (Table 9.5). Also,  $q' = \gamma L = (18)(20) = 360 \text{ kN/m}^2$ . Thus,

$$A_p q' N_q^* = (0.407 \times 0.407)(360)(143) \approx 8528 \text{ kN}$$

Again,

$$A_p (0.5 p_a N_q^* \tan \phi') = (0.407 \times 0.407)[(0.5)(100)(143)(\tan 35)] \approx 829 \text{ kN}$$

Hence,  $Q_p = \mathbf{829 \text{ kN}}$ .

Part b

From Eq. (9.19),

$$Q_p = A_p \bar{\sigma}'_o N_\sigma^*$$

$$\begin{aligned} \bar{\sigma}'_o &= \left[ \frac{1 + 2(1 - \sin \phi')}{3} \right] q' = \left( \frac{1 + 2(1 - \sin 35)}{3} \right) (18 \times 20) \\ &= 222.34 \text{ kN/m}^2 \end{aligned}$$

From Eq. (9.26),

$$\frac{E_s}{p_a} = m$$

Assume  $m \approx 250$  (medium sand). So,

$$E_s = (250)(100) = 25,000 \text{ kN/m}^2$$

From Eq. (9.27),

$$\mu_s = 0.1 + 0.3 \left( \frac{\phi' - 25}{20} \right) = 0.1 + 0.3 \left( \frac{35 - 25}{20} \right) = 0.25$$

From Eq. (9.28),

$$\Delta = 0.005 \left( 1 - \frac{\phi' - 25}{20} \right) \left( \frac{q'}{p_a} \right) = 0.005 \left( 1 - \frac{35 - 25}{20} \right) \left( \frac{18 \times 20}{100} \right) = 0.009$$

From Eq. (9.25),

$$I_r = \frac{E_s}{2(1 + \mu_s)q' \tan \phi'} = \frac{25,000}{(2)(1 + 0.25)(18 \times 20)(\tan 35)} = 39.67$$

From Eq. (9.24),

$$I_{rr} = \frac{I_r}{1 + I_r \Delta} = \frac{39.67}{1 + (39.67)(0.009)} = 29.23$$

From Table 9.7, for  $\phi' = 35^\circ$  and  $I_{rr} = 29.23$ , the value of  $N_\sigma^* \approx 47$ . Hence,

$$Q_p = A_p \bar{\sigma}'_\sigma N_\sigma^* = (0.407 \times 0.407)(222.34)(47) \approx \mathbf{1731 \text{ kN}}$$

Part c

From Eq. (9.36),

$$Q_p = q' N_q^* A_p$$

$$\frac{L}{D} = \frac{20}{0.407} = 49.1$$

For  $\phi' = 35^\circ$  and  $L/D = 49.1$ , the value of  $N_q^*$  is about 34 (Figure 9.15). Thus,

$$Q_p = q' N_q^* A_p = (20 \times 18)(34)(0.407 \times 0.407) \approx \mathbf{2028 \text{ kN}}$$

Part d

It appears that  $Q_p$  obtained from the method of Coyle and Castello is too large. Thus, the average of the results from parts a and b is

$$\frac{829 + 1731}{2} = 1280 \text{ kN}$$

$$\text{Use } Q_p = \mathbf{1280 \text{ kN.}}$$

## Example 9.2

Consider a pipe pile (flat driving point—see Figure 9.2d) having an outside diameter of 457 mm. The embedded length of the pile in layered saturated clay is 20 m.

The following are the details of the subsoil:

Depth from ground surface (m)	Saturated unit weight, $\gamma$ (kN/m <sup>3</sup> )	$c_u$ (kN/m <sup>2</sup> )
0–3	16	25
3–10	17	40
10–30	18	90

The groundwater table is located at a depth of 3 m from the ground surface. Estimate  $Q_p$  by using

- Meyerhof's method
- Vesic's method

### Solution

Part a

From Eq. (9.18),

$$Q_p = 9c_u A_p$$

The tip of the pile is resting on a clay with  $c_u = 90 \text{ kN/m}^2$ . So,

$$Q_p = (9)(90) \left[ \left( \frac{\pi}{4} \right) \left( \frac{457}{1000} \right)^2 \right] = \mathbf{132.9 \text{ kN}}$$

Part b

From Eq. (9.31),

$$Q_p = A_p c_u N_c^*$$

From Eq. (9.35),

$$I_r = I_{rr} = 347 \left( \frac{c_u}{p_a} \right) - 33 = 347 \left( \frac{90}{100} \right) - 33 = 279.3$$

So use  $I_{rr} = 279.3$ .

From Table 9.8 for  $I_{rr} = 279.3$ , the value of  $N_c^* \approx 11.4$ . Thus,

$$Q_p = A_p c_u N_c^* = \left[ \left( \frac{\pi}{4} \right) \left( \frac{457}{1000} \right)^2 \right] (90)(11.4) = \mathbf{168.3 \text{ kN}}$$

*Note:* The average value of  $Q_p$  is

$$\frac{132.9 + 168.3}{2} \approx \mathbf{151 \text{ kN}}$$

## 9.11 Correlations for Calculating $Q_p$ with SPT and CPT Results in Granular Soil

On the basis of field observations, Meyerhof (1976) also suggested that the ultimate point resistance  $q_p$  in a homogeneous granular soil ( $L = L_b$ ) may be obtained from standard penetration numbers as

$$q_p = 0.4p_a N_{60} \frac{L}{D} \leq 4p_a N_{60} \quad (9.37)$$

where

$N_{60}$  = the average value of the standard penetration number near the pile point (about  $10D$  above and  $4D$  below the pile point)

$p_a$  = atmospheric pressure ( $\approx 100 \text{ kN/m}^2$  or  $2000 \text{ lb/ft}^2$ )

Briaud et al. (1985) suggested the following correlation for  $q_p$  in granular soil with the standard penetration resistance  $N_{60}$ .

$$q_p = 19.7p_a(N_{60})^{0.36} \quad (9.38)$$

Meyerhof (1956) also suggested that

$$q_p \approx q_c \quad (9.39)$$

where  $q_c$  = cone penetration resistance.

### Example 9.3

Consider a concrete pile that is  $0.305 \text{ m} \times 0.305 \text{ m}$  in cross section in sand. The pile is  $12 \text{ m}$  long. The following are the variations of  $N_{60}$  with depth.

Depth below ground surface (m)	$N_{60}$
1.5	8
3.0	10
4.5	9
6.0	12
7.5	14
9.0	18
10.5	11
12.0	17
13.5	20
15.0	28
16.5	29
18.0	32
19.5	30
21.0	27

- Estimate  $Q_p$  using Eq. (9.37).
- Estimate  $Q_p$  using Eq. (9.38).

### Solution

Part a

The tip of the pile is  $12 \text{ m}$  below the ground surface. For the pile,  $D = 0.305 \text{ m}$ . The average of  $N_{60}$   $10D$  above and about  $5D$  below the pile tip is

$$N_{60} = \frac{18 + 11 + 17 + 20}{4} = 16.5 \approx 17$$

From Eq. (9.37)

$$Q_p = A_p(q_p) = A_p \left[ 0.4p_a N_{60} \left( \frac{L}{D} \right) \right] \leq A_p (4p_a N_{60})$$

$$A_p \left[ 0.4p_a N_{60} \left( \frac{L}{D} \right) \right] = (0.305 \times 0.305) \left[ (0.4)(100)(17) \left( \frac{12}{0.305} \right) \right] = 2488.8 \text{ kN}$$

$$A_p (4p_a N_{60}) = (0.305 \times 0.305) [(4)(100)(17)] = 632.6 \text{ kN} \approx 633 \text{ kN}$$

Thus,  $Q_p = 633 \text{ kN}$

Part b

From Eq. (9.38),

$$Q_p = A_p q_p = A_p [19.7p_a (N_{60})^{0.36}] = (0.305 \times 0.305) [(19.7)(100)(17)^{0.36}]$$

$$= 508.2 \text{ kN}$$

## 9.12 Frictional Resistance ( $Q_s$ ) in Sand

According to Eq. (9.14), the frictional resistance

$$Q_s = \sum p \Delta L f$$

The unit frictional resistance,  $f$ , is hard to estimate. In making an estimation of  $f$ , several important factors must be kept in mind:

1. The nature of the pile installation. For driven piles in sand, the vibration caused during pile driving helps densify the soil around the pile. The zone of sand densification may be as much as 2.5 times the pile diameter, in the sand surrounding the pile.
2. It has been observed that the nature of variation of  $f$  in the field is approximately as shown in Figure 9.16. The unit skin friction increases with depth more or less linearly to a depth of  $L'$  and remains constant thereafter. The magnitude of the critical depth  $L'$  may be 15 to 20 pile diameters. A conservative estimate would be


$$L' \approx 15D \quad (9.40)$$

3. At similar depths, the unit skin friction in loose sand is higher for a high-displacement pile, compared with a low-displacement pile.
4. At similar depths, bored, or jetted, piles will have a lower unit skin friction compared with driven piles.

Taking into account the preceding factors, we can give the following approximate relationship for  $f$  (see Figure 9.16):

For  $z = 0$  to  $L'$ ,

$$f = K\sigma'_o \tan \delta' \quad (9.41)$$

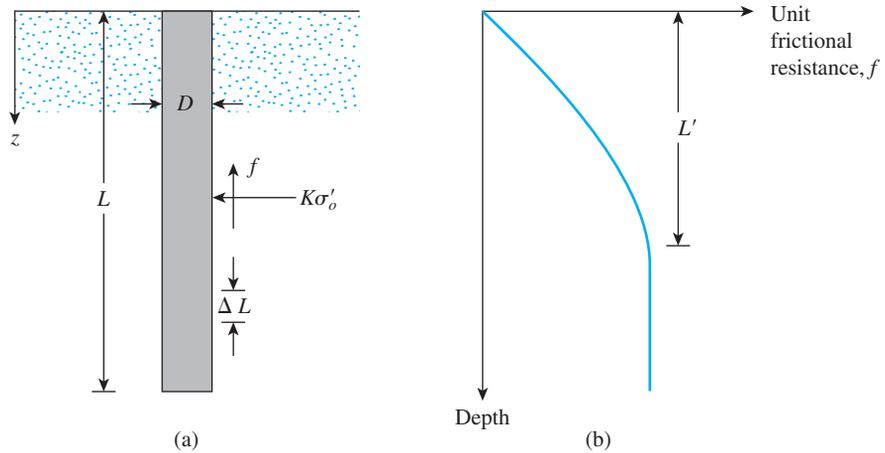

**Figure 9.16** Unit frictional resistance for piles in sand

and for  $z = L'$  to  $L$ ,

$$f = f_{z=L'} \quad (9.42)$$

In these equations,

$K$  = effective earth pressure coefficient

$\sigma'_o$  = effective vertical stress at the depth under consideration

$\delta'$  = soil-pile friction angle

In reality, the magnitude of  $K$  varies with depth; it is approximately equal to the Rankine passive earth pressure coefficient,  $K_p$ , at the top of the pile and may be less than the at-rest pressure coefficient,  $K_o$ , at a greater depth. Based on presently available results, the following average values of  $K$  are recommended for use in Eq. (9.41):

Pile type	$K$
Bored or jettied	$\approx K_o = 1 - \sin \phi'$
Low-displacement driven	$\approx K_o = 1 - \sin \phi'$ to $1.4K_o = 1.4(1 - \sin \phi')$
High-displacement driven	$\approx K_o = 1 - \sin \phi'$ to $1.8K_o = 1.8(1 - \sin \phi')$

The values of  $\delta'$  from various investigations appear to be in the range from  $0.5\phi'$  to  $0.8\phi'$ .

Based on load test results in the field, Mansur and Hunter (1970) reported the following average values of  $K$ .

H-piles. . . . .  $K = 1.65$

Steel pipe piles. . . . .  $K = 1.26$

Precast concrete piles. . . . .  $K = 1.5$

Coyle and Castello (1981), in conjunction with the material presented in Section 9.10, proposed that

$$Q_s = f_{av} pL = (K \bar{\sigma}'_o \tan \delta') pL \quad (9.43)$$


where

$\bar{\sigma}'_o$  = average effective overburden pressure

$\delta'$  = soil–pile friction angle =  $0.8\phi'$

The lateral earth pressure coefficient  $K$ , which was determined from field observations, is shown in Figure 9.17. Thus, if that figure is used,

$$Q_s = K \bar{\sigma}'_o \tan(0.8\phi') pL \quad (9.44)$$

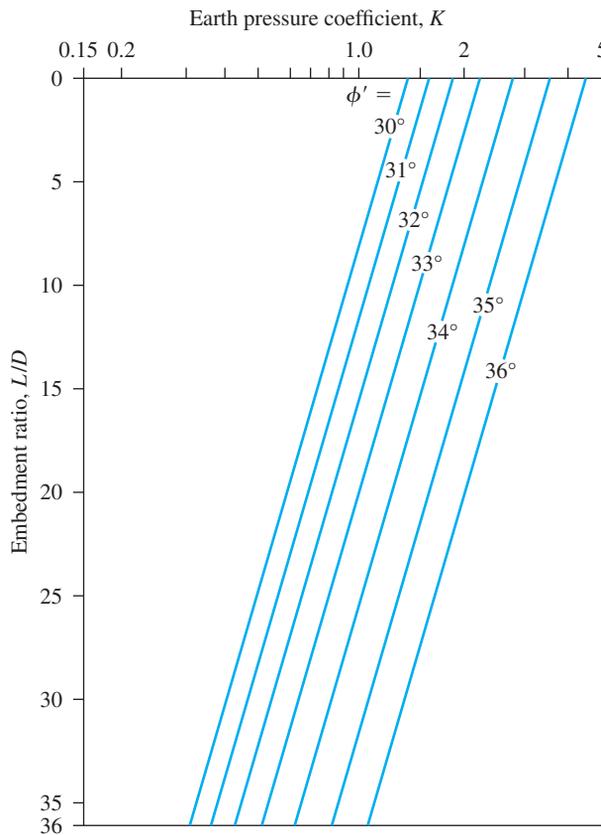

**Figure 9.17** Variation of  $K$  with  $L/D$  (Based on Coyle and Castello, 1981)

### Correlation with Standard Penetration Test Results

Meyerhof (1976) indicated that the average unit frictional resistance,  $f_{av}$ , for high-displacement driven piles may be obtained from average standard penetration resistance values as

$$f_{av} = 0.02p_a(\bar{N}_{60}) \quad (9.45)$$

where

$(\bar{N}_{60})$  = average value of standard penetration resistance  
 $p_a$  = atmospheric pressure ( $\approx 100 \text{ kN/m}^2$  or  $2000 \text{ lb/ft}^2$ )

For low-displacement driven piles

$$f_{av} = 0.01p_a(\bar{N}_{60}) \quad (9.46)$$

Briaud et al. (1985) suggested that

$$f_{av} \approx 0.224p_a(\bar{N}_{60})^{0.29} \quad (9.47)$$

Thus,

$$Q_s = pLf_{av} \quad (9.48)$$


### Correlation with Cone Penetration Test Results

Nottingham and Schmertmann (1975) and Schmertmann (1978) provided correlations for estimating  $Q_s$  using the frictional resistance ( $f_c$ ) obtained during cone penetration tests. According to this method


$$f = \alpha'f_c \quad (9.49)$$

The variations of  $\alpha'$  with  $L/D$  for electric cone and mechanical cone penetrometers are shown in Figures 9.18 and 9.19, respectively. We have

$$Q_s = \Sigma p(\Delta L)f = \Sigma p(\Delta L)\alpha'f_c \quad (9.50)$$

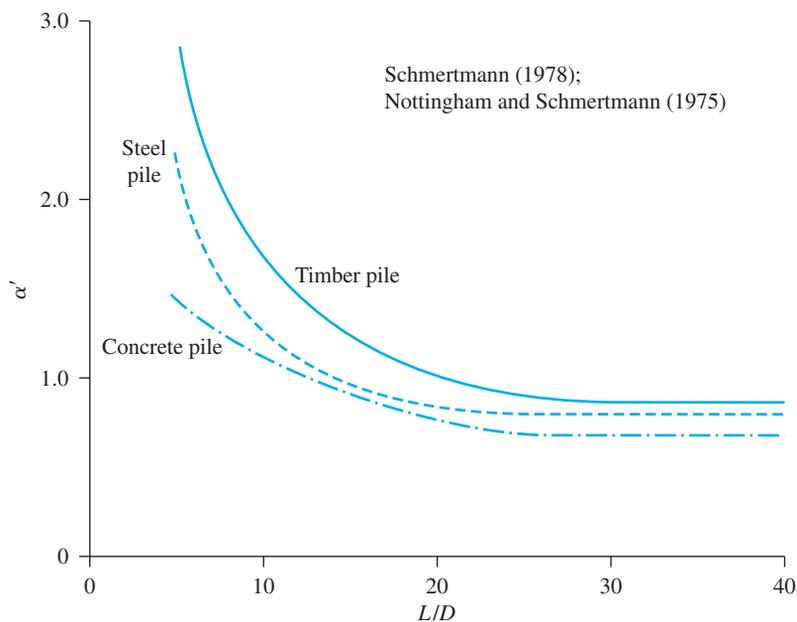

**Figure 9.18** Variation of  $\alpha'$  with embedment ratio for pile in sand: electric cone penetrometer

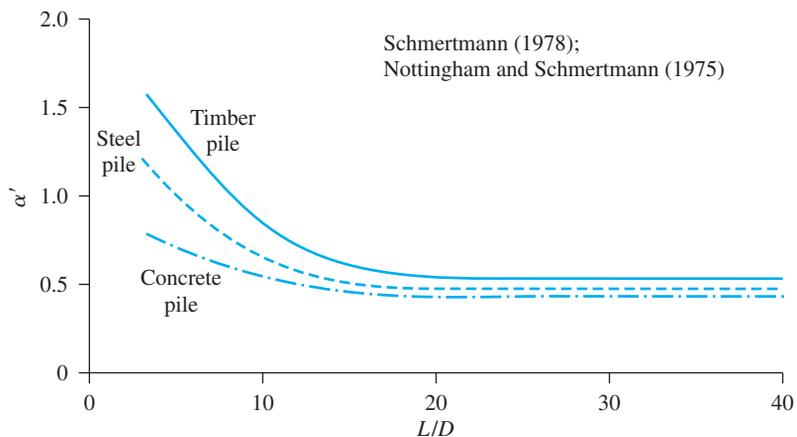

**Figure 9.19** Variation of  $\alpha'$  with embedment ratio for piles in sand: mechanical cone penetrometer

### Example 9.4

Refer to the pile described in Example 9.3. Estimate the magnitude of  $Q_s$  for the pile.

- a. Use Eq. (9.45).
- b. Use Eq. (9.47).

- c. Considering the results in Example 9.3, determine the allowable load-carrying capacity of the pile based on Meyerhof's method and Briaud's method. Use a factor of safety,  $FS = 3$ .

### Solution

The average  $N_{60}$  value for the sand for the top 12 m is

$$\bar{N}_{60} = \frac{8 + 10 + 9 + 12 + 14 + 18 + 11 + 17}{8} = 10.25 \approx 10$$

Part a

From Eq. (9.45),

$$f_{av} = 0.02p_a(\bar{N}_{60}) = (0.02)(100)(10) = 20 \text{ kN/m}^2$$

$$Q_s = pLf_{av} = (4 \times 0.305)(12)(20) = \mathbf{292.8 \text{ kN}}$$

Part b

From Eq. (9.47),

$$f_{av} = 0.224p_a(\bar{N}_{60})^{0.29} = (0.224)(100)(10)^{0.29} = 43.68 \text{ kN/m}^2$$

$$Q_s = pLf_{av} = (4 \times 0.305)(12)(43.68) = \mathbf{639.5 \text{ kN}}$$

Part c

$$\text{Meyerhof's method: } Q_{all} = \frac{Q_p + Q_s}{FS} = \frac{633 + 292.8}{3} = \mathbf{308.6 \text{ kN}}$$

$$\text{Briaud's method: } Q_{all} = \frac{Q_p + Q_s}{FS} = \frac{508.2 + 639.5}{3} = \mathbf{382.6 \text{ kN}}$$

So the allowable pile capacity may be taken to be about **345 kN**. ■

### Example 9.5

Refer to Example 9.1. For the pile, estimate the frictional resistance  $Q_s$

- Based on Eqs. (9.41) and (9.42). Use  $K = 1.3$  and  $\delta' = 0.8\phi'$ .
- Based on Eq. (9.44).
- Using the results of Part d of Example 9.1, estimate the allowable bearing capacity of the pile. Use  $FS = 3$ .

### Solution

Part a

From Eq. (9.40),  $L' = 15D = (15)(0.407) \approx 6.1$  m. Refer to Eq. (9.41):

$$\text{At } z = 0: \quad \sigma'_o = 0$$

$$f = 0$$

$$\text{At } z = 6.1 \text{ m: } \sigma'_o = (6.1)(18) = 109.8 \text{ kN/m}^2$$

So

$$f = K\sigma'_o \tan \delta' = (1.3)(109.8)[\tan (0.8 \times 35)] \approx 75.9 \text{ kN/m}^2$$

Thus,

$$\begin{aligned} Q_s &= \frac{(f_{z=0} + f_{z=6.1\text{m}})}{2} pL' + f_{z=6.1\text{m}} p(L - L') \\ &= \left( \frac{0 + 75.9}{2} \right) (4 \times 0.407)(6.1) + (75.9)(4 \times 0.407)(20 - 6.1) \\ &= 376.87 + 1717.56 = 2094.43 \text{ kN} \approx \mathbf{2094 \text{ kN}} \end{aligned}$$

Part b

From Eq. (9.44),

$$\begin{aligned} Q_s &= K\bar{\sigma}'_o \tan (0.8\phi') pL \\ \bar{\sigma}'_o &= \frac{(20)(18)}{2} = 180 \text{ kN/m}^2 \\ \frac{L}{D} &= \frac{20}{0.407} = 49.1; \phi' = 35^\circ \end{aligned}$$

From Figure 9.17,  $K \approx 0.41$  (by projection)

$$Q_s = (0.41)(180) \tan[(0.8 \times 35)](4 \times 0.407)(20) = \mathbf{1277.66 \text{ kN}}$$

Part c

The average value of  $Q_s$  from parts a and b is

$$Q_{s(\text{average})} = \frac{2094 + 1277.66}{2} = 1685.83 \approx 1686 \text{ kN} - \text{USE}$$

From part d of Example 9.1,  $Q_p = 1280 \text{ kN}$ . Thus,

$$Q_{\text{all}} = \frac{Q_p + Q_s}{\text{FS}} = \frac{1280 + 1686}{3} = \mathbf{988.7 \text{ kN}} \quad \blacksquare$$

### Example 9.6

Consider an 18-m-long concrete pile (cross section: 0.305 m  $\times$  0.305 m) fully embedded in a sand layer. For the sand layer, the following is an approximation of the cone penetration resistance  $q_c$  (mechanical cone) and the frictional resistance  $f_c$  with depth. Estimate the allowable load that the pile can carry. Use FS = 3.

Depth from ground surface (m)	$q_c$ (kN/m <sup>2</sup> )	$f_c$ (kN/m <sup>2</sup> )
0–5	3040	73
5–15	4560	102
15–25	9500	226

**Solution**

$$Q_u = Q_p + Q_s$$

From Eq. (9.39),

$$q_p \approx q_c$$

At the pile tip (i.e., at a depth of 18 m),  $q_c \approx 9500 \text{ kN/m}^2$ . Thus,

$$Q_p = A_p q_c = (0.305 \times 0.305)(9500) = 883.7 \text{ kN}$$

To determine  $Q_s$ , the following table can be prepared. (Note:  $L/D = 18/0.305 = 59$ .)

Depth from ground surface (m)	$\Delta L$ (m)	$f_c$ (kN/m <sup>2</sup> )	$\alpha'$ (Figure 9.19)	$\rho \Delta L \alpha' f_c$ (kN)
0–5	5	73	0.44	195.9
5–15	10	102	0.44	547.5
15–18	3	226	0.44	363.95

$$Q_s = 1107.35 \text{ kN}$$

Hence,

$$Q_u = Q_p + Q_s = 883.7 + 1107.35 = 1991.05 \text{ kN}$$

$$Q_{\text{all}} = \frac{Q_u}{\text{FS}} = \frac{1991.05}{3} = 663.68 \approx \mathbf{664 \text{ kN}}$$

## 9.13 Frictional (Skin) Resistance in Clay

Estimating the frictional (or skin) resistance of piles in clay is almost as difficult a task as estimating that in sand (see Section 9.12), due to the presence of several variables that cannot easily be quantified. Several methods for obtaining the unit frictional resistance of piles are described in the literature. We examine some of them next.

### $\lambda$ Method

This method, proposed by Vijayvergiya and Focht (1972), is based on the assumption that the displacement of soil caused by pile driving results in a passive lateral pressure at any depth and that the average unit skin resistance is

$$f_{\text{av}} = \lambda(\bar{\sigma}'_o + 2c_u) \quad (9.51)$$

where

$\bar{\sigma}'_o$  = mean effective vertical stress for the entire embedment length

$c_u$  = mean undrained shear strength ( $\phi = 0$ )

**Table 9.9** Variation of  $\lambda$  with Pile Embedment Length,  $L$

Embedment length, $L$ (m)	$\lambda$
0	0.5
5	0.336
10	0.245
15	0.200
20	0.173
25	0.150
30	0.136
35	0.132
40	0.127
50	0.118
60	0.113
70	0.110
80	0.110
90	0.110


The value of  $\lambda$  changes with the depth of penetration of the pile. (See Table 9.9.) Thus, the total frictional resistance may be calculated as

$$Q_s = pLf_{av}$$

Care should be taken in obtaining the values of  $\bar{\sigma}'_o$  and  $c_u$  in layered soil. Figure 9.20 helps explain the reason. Figure 9.20a shows a pile penetrating three layers of clay. According to Figure 9.20b, the mean value of  $c_u$  is  $(c_{u(1)}L_1 + c_{u(2)}L_2 + \dots)/L$ . Similarly, Figure 9.20c shows the plot of the variation of effective stress with depth. The mean effective stress is

$$\bar{\sigma}'_o = \frac{A_1 + A_2 + A_3 + \dots}{L} \quad (9.52)$$

where  $A_1, A_2, A_3, \dots$  = areas of the vertical effective stress diagrams.

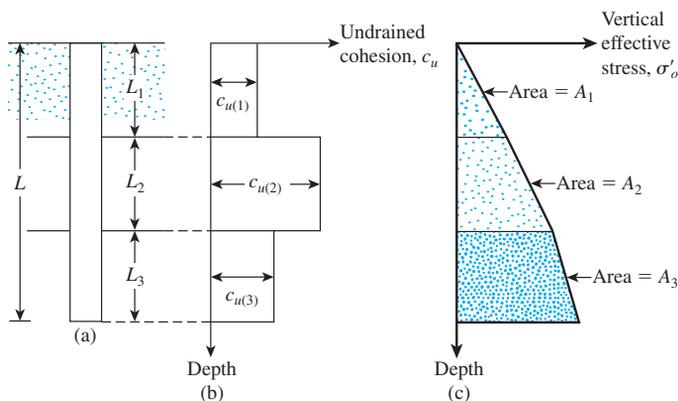

**Figure 9.20** Application of  $\lambda$  method in layered soil

## $\alpha$ Method

According to the  $\alpha$  method, the unit skin resistance in clayey soils can be represented by the equation

$$f = \alpha c_u \quad (9.53)$$

where  $\alpha$  = empirical adhesion factor. The approximate variation of the value of  $\alpha$  is shown in Table 9.10. It is important to realize that the values of  $\alpha$  given in Table 9.10 may vary somewhat, since  $\alpha$  is actually a function of vertical effective stress and the undrained cohesion. Sladen (1992) has shown that

$$\alpha = C \left( \frac{\bar{\sigma}'_o}{c_u} \right)^{0.45} \quad (9.54)$$

where

$\bar{\sigma}'_o$  = average vertical effective stress

$C \approx 0.4$  to  $0.5$  for bored piles; and  $\geq 0.5$  for driven piles

A correlation proposed by Randolph and Murphy (1987) was incorporated into the code of the American Petroleum Institute (API) in 1987 as

$$\alpha = 0.5 \left( \frac{c_u}{\bar{\sigma}'_o} \right)^{-0.5} \quad \left( \text{for } \frac{c_u}{\bar{\sigma}'_o} \leq 1 \right) \quad (9.55a)$$

**Table 9.10** Variation of  $\alpha$   
(Interpolated Values Based on  
Terzaghi, Peck and Mesri, 1996)

$\frac{c_u}{p_a}$	$\alpha$
$\leq 0.1$	1.00
0.2	0.92
0.3	0.82
0.4	0.74
0.6	0.62
0.8	0.54
1.0	0.48
1.2	0.42
1.4	0.40
1.6	0.38
1.8	0.36
2.0	0.35
2.4	0.34
2.8	0.34

Note:  $p_a$  = atmospheric pressure  
 $\approx 100 \text{ kN/m}^2$  or  $2000 \text{ lb/ft}^2$

and

$$\alpha = 0.5 \left( \frac{c_u}{\bar{\sigma}'_o} \right)^{-0.25} \quad \left( \text{for } \frac{c_u}{\bar{\sigma}'_o} > 1 \right) \quad (9.55b)$$

It was further modified by API (2007) as

$$\begin{aligned} f_{av} &= 0.5(c_u \bar{\sigma}'_o)^{0.5} \\ &\text{or} \\ &0.5(c_u)^{0.75}(\bar{\sigma}'_o)^{0.25} \\ &\text{(whichever is larger)} \end{aligned} \quad (9.56)$$

Karlsrud et al. (2005) proposed an alternate relationship for  $\alpha$  that is known as the Norwegian Geotechnical Institute (NGI)-99 method. According to this method,

$$\alpha = 0.32(\text{PI} - 10)^{0.3} (1 \geq \alpha \geq 0.2) \quad \left( \text{for } \frac{c_u}{\bar{\sigma}'_o} \leq 0.25 \right) \quad (9.57a)$$

and

$$\alpha = 0.5 \quad \left( \text{for } \frac{c_u}{\bar{\sigma}'_o} = 1 \right) \quad (9.57b)$$

The term  $\alpha$  has a log-linear relationship with  $c_u/\bar{\sigma}'_o$  between  $c_u/\bar{\sigma}'_o = 0.25$  and 1. This is shown graphically in Figure 9.21. For  $c_u/\bar{\sigma}'_o \geq 1$ ,

$$\alpha = 0.5 \left( \frac{c_u}{\bar{\sigma}'_o} \right)^{-0.3} C \quad (9.58)$$

where  $C$  = correction factor.


The interpolated values of  $\alpha$  for open-ended and closed-ended piles are given in Table 9.11.

The ultimate side resistance can thus be given as

$$Q_s = \sum f_p \Delta L = \sum \alpha c_{u,p} \Delta L \quad (9.59)$$

## **$\beta$ Method**

When piles are driven into saturated clays, the pore water pressure in the soil around the piles increases. The excess pore water pressure in normally consolidated clays may be four

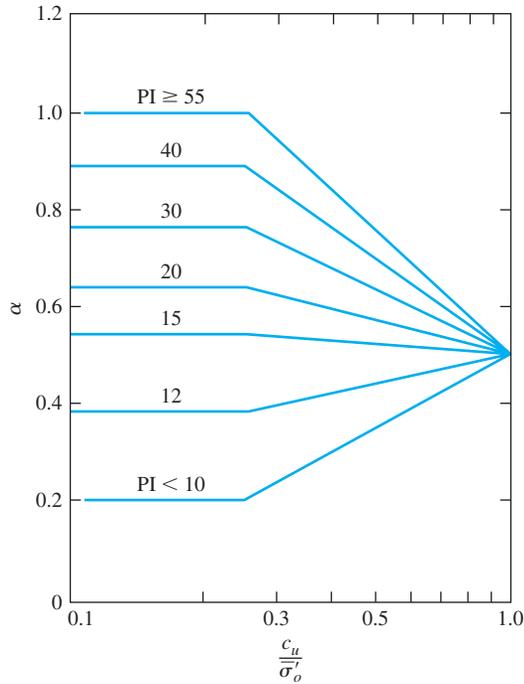

**Figure 9.21** Variation of  $\alpha$  with  $c_u/\bar{\sigma}'_o$  for the NGI-99 method [Eqs. (9.57a) and (9.57b)]

to six times  $c_u$ . However, within a month or so, this pressure gradually dissipates. Hence, the unit frictional resistance for the pile can be determined on the basis of the effective stress parameters of the clay in a remolded state ( $c' = 0$ ). Thus, at any depth,

$$f = \beta\sigma'_o \quad (9.60)$$

**Table 9.11** Variation of  $\alpha$  with  $c_u/\bar{\sigma}'_o$

$\frac{c_u}{\bar{\sigma}'_o}$	$\alpha$	
	Open-ended pile	Closed-ended pile
1	0.5	0.5
2	0.4	0.44
3	0.355	0.41
4	0.33	0.395
5	0.31	0.38
6	0.29	0.365
7	0.28	0.35
8	0.26	0.33
9	0.255	0.32
10	0.25	0.31

where

$$\begin{aligned}\sigma'_o &= \text{vertical effective stress} \\ \beta &= K \tan \phi'_R \\ \phi'_R &= \text{drained friction angle of remolded clay} \\ K &= \text{earth pressure coefficient}\end{aligned}\tag{9.61}$$

Conservatively, the magnitude of  $K$  is the earth pressure coefficient at rest, or

$$K = 1 - \sin \phi'_R \quad (\text{for normally consolidated clays})\tag{9.62}$$

and

$$K = (1 - \sin \phi'_R)\sqrt{\text{OCR}} \quad (\text{for overconsolidated clays})\tag{9.63}$$

where OCR = overconsolidation ratio.

Combining Eqs. (9.60), (9.61), (9.62), and (9.63), for normally consolidated clays yields

$$f = (1 - \sin \phi'_R) \tan \phi'_R \sigma'_o\tag{9.64}$$

and for overconsolidated clays,

$$f = (1 - \sin \phi'_R) \tan \phi'_R \sqrt{\text{OCR}} \sigma'_o\tag{9.65}$$

With the value of  $f$  determined, the total frictional resistance may be evaluated as

$$Q_s = \sum fp \Delta L$$

### Correlation with Cone Penetration Test Results

Nottingham and Schmertmann (1975) and Schmertmann (1978) found the correlation for unit skin friction in clay (with  $\phi = 0$ ) to be


$$f = \alpha' f_c\tag{9.66}$$

The variation of  $\alpha'$  with the frictional resistance  $f_c$  is shown in Figure 9.22. Thus,

$$Q_s = \sum fp(\Delta L) = \sum \alpha' f_c p(\Delta L)\tag{9.67}$$

## 9.14 Ultimate Capacity of Continuous Flight Auger Pile

In Section 9.3, a brief description of continuous flight auger piles was given. The procedure for the estimation of the ultimate bearing capacity (point and frictional/skin resistance) is briefly discussed in this section and is primarily based on the pile load test results in the field reported by Coleman and Arcement (2002) and the FHWA (2007).

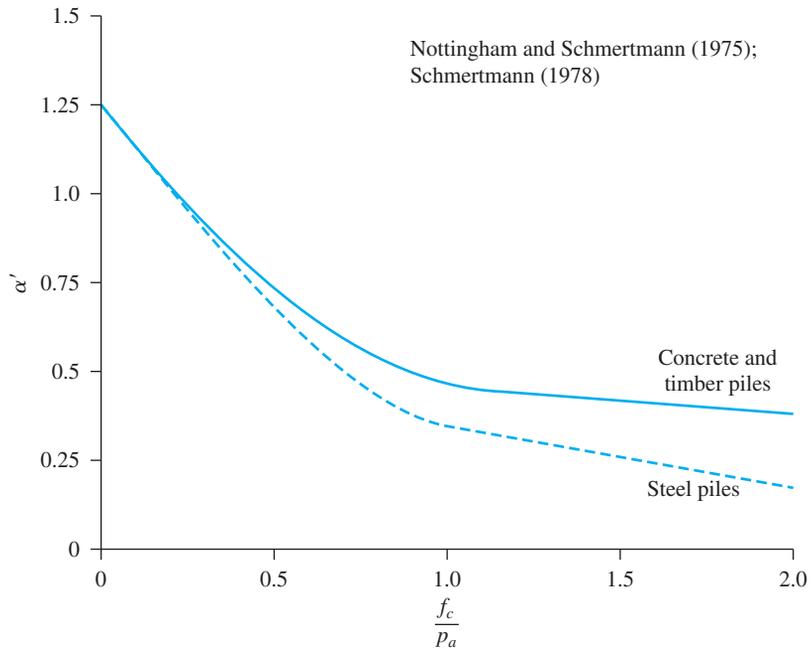

**Figure 9.22** Variation of  $\alpha'$  with  $f_c/p_a$  for piles in clay ( $p_a$  = atmospheric pressure  $\approx 100 \text{ kN/m}^2$  or  $2000 \text{ lb/ft}^2$ )

### Granular Soil

Based on the pile load tests in Mississippi and Louisiana conducted by Coleman and Arcement (2002), it has been suggested that the unit side-skin frictional resistance in sandy and silty soils (drained condition) can be given as

$$f = \beta \sigma'_o \leq 200 \text{ kN/m}^2 \text{ (4000 lb/ft}^2\text{)} \quad (9.68)$$

The values of  $\beta$  can be estimated as

$$\beta = 2.27z_m^{-0.67} \quad (\text{silty soil}) \quad (9.69)$$

and

$$\beta = 10.72z_m^{-1.3} \quad (\text{sandy soil}) \quad (9.70)$$

where  $z_m$  = depth in meters measured from the ground surface to the middle of the given soil layer (Figure 9.23).


The value of  $\beta$  is limited to  $0.2 \leq \beta \leq 2.5$ . Thus,

$$Q_s = \Sigma fp \Delta L \quad (9.71)$$

where  $p$  = pile diameter

According to the FHWA (2007), the unit ultimate point load can be given as

$$q_p \text{ (kN/m}^2\text{)} \approx 57.5N_{60} \quad (\text{for } 0 \leq N_{60} \leq 75) \quad (9.72a)$$

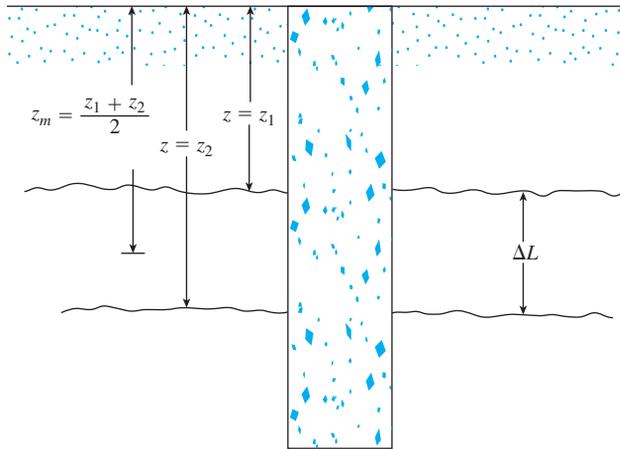

**Figure 9.23** Definition of  $z_m$  [Eqs. (9.69) and (9.70)]

and

$$q_p = 4300 \text{ kN/m}^2 \quad (\text{for } N_{60} > 75) \quad (9.72b)$$

where  $N_{60}$  = field standard penetration number that is the average of the  $N_{60}$  values between one pile diameter above and 2 to 3 pile diameters below the pile tip. Also,

$$q_p \text{ (MN/m}^2\text{)} = 0.375q_c \text{ (MN/m}^2\text{)} \quad (9.73)$$

where  $q_c$  = average cone penetration resistance between 2 to 3 pile diameters below the pile tip.

### Cohesive Soil

The CFA pile load test results of Coleman and Arcement (2002) in cohesive soils indicate (also see FHWA, 2007) that unit side-skin resistance can be expressed as [Eq. (9.53)]

$$f = \alpha c_u$$

where

$$\alpha = \frac{56.2}{c_u \text{ (kN/m}^2\text{)}} \quad (\text{for } 25 \text{ kN/m}^2 \leq c_u \leq 150 \text{ kN/m}^2) \quad (9.74)$$

The FHWA (2007) also recommends that the unit ultimate point resistance can be given as

$$q_p = 0.15q_c \quad (9.75)$$

where  $q_c$  = average cone resistance between 2 to 3 pile diameters below the pile tip.

## 9.15 Point Bearing Capacity of Piles Resting on Rock

Sometimes piles are driven to an underlying layer of rock. In such cases, the engineer must evaluate the bearing capacity of the rock. The ultimate unit point resistance in rock (Goodman, 1980) is approximately

$$q_p = q_u(N_\phi + 1) \quad (9.76)$$

where

$$N_\phi = \tan^2(45 + \phi'/2)$$

$q_u$  = unconfined compression strength of rock

$\phi'$  = drained angle of friction

The unconfined compression strength of rock can be determined by laboratory tests on rock specimens collected during field investigation. However, extreme caution should be used in obtaining the proper value of  $q_u$ , because laboratory specimens usually are small in diameter. As the diameter of the specimen increases, the unconfined compression strength decreases—a phenomenon referred to as the *scale effect*. For specimens larger than about 1 m (3 ft) in diameter, the value of  $q_u$  remains approximately constant. There appears to be a fourfold to fivefold reduction of the magnitude of  $q_u$  in this process. The scale effect in rock is caused primarily by randomly distributed large and small fractures and also by progressive ruptures along the slip lines. Hence, we always recommend that

$$q_{u(\text{design})} = \frac{q_{u(\text{lab})}}{5} \quad (9.77)$$

Table 9.12 lists some representative values of (laboratory) unconfined compression strengths of rock. Representative values of the rock friction angle  $\phi'$  are given in Table 9.13.

A factor of safety of at least 3 should be used to determine the allowable point bearing capacity of piles. Thus,

$$Q_{p(\text{all})} = \frac{[q_{u(\text{design})}(N_\phi + 1)]A_p}{\text{FS}} \quad (9.78)$$

**Table 9.12** Typical Unconfined Compressive Strength of Rocks

Type of rock	$q_u$	
	MN/m <sup>2</sup>	lb/in <sup>2</sup>
Sandstone	70–140	10,000–20,000
Limestone	105–210	15,000–30,000
Shale	35–70	5000–10,000
Granite	140–210	20,000–30,000
Marble	60–70	8500–10,000

**Table 9.13** Typical Values of Angle of Friction  $\phi'$  of Rocks

Type of rock	Angle of friction, $\phi'$ (deg)
Sandstone	27–45
Limestone	30–40
Shale	10–20
Granite	40–50
Marble	25–30

### Example 9.7

Refer to the pipe pile in saturated clay shown in Figure 9.24. For the pile,


- Calculate the skin resistance ( $Q_s$ ) by (1) the  $\alpha$  method, (2) the  $\lambda$  method, and (3) the  $\beta$  method. For the  $\beta$  method, use  $\phi'_R = 30^\circ$  for all clay layers. The top 10 m of clay is normally consolidated. The bottom clay layer has an OCR = 2. (Note: diameter of pile = 457 mm)
- Using the results of Example 9.2, estimate the allowable pile capacity ( $Q_{all}$ ). Use FS = 4.

### Solution

Part a

(1) From Eq. (9.59),

$$Q_s = \sum \alpha c_u p \Delta L$$

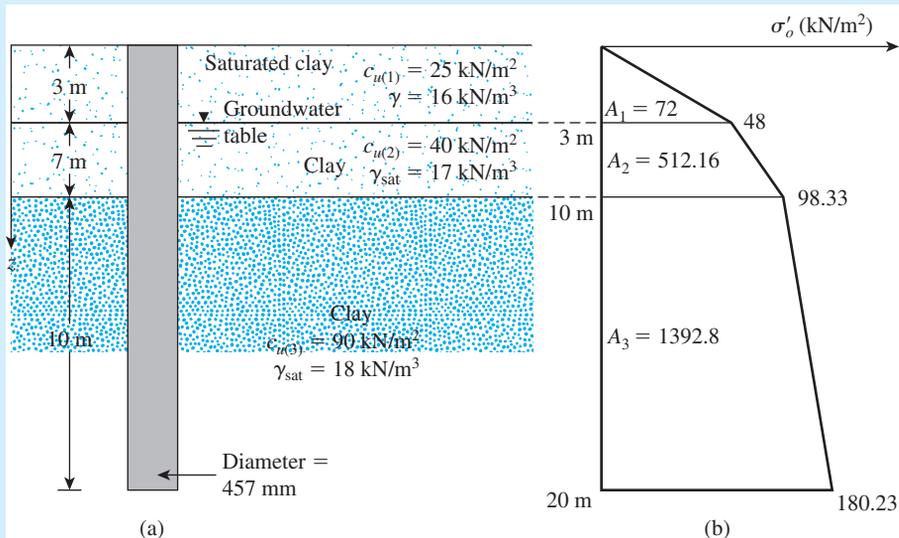

**Figure 9.24** Estimation of the load bearing capacity of a driven-pipe pile

[Note:  $p = \pi(0.457) = 1.436$  m] Now the following table can be prepared.

Depth (m)	$\Delta L$ (m)	$c_u$ (kN/m <sup>2</sup> )	$\alpha$ (Table 9.10)	$\alpha c_u p \Delta L$ (kN)
0–3	3	25	0.87	93.7
3–10	7	40	0.74	297.5
10–20	10	90	0.51	659.1

$$Q_s \approx 1050 \text{ kN}$$

(2) From Eq. 9.51,  $f_{av} = \lambda(\bar{\sigma}'_o + 2c_u)$ . Now, the average value of  $c_u$  is

$$\frac{c_{u(1)}(3) + c_{u(2)}(7) + c_{u(3)}(10)}{20} = \frac{(25)(3) + (40)(7) + (90)(10)}{20} = 62.75 \text{ kN/m}^2$$

To obtain the average value of  $\bar{\sigma}'_o$ , the diagram for vertical effective stress variation with depth is plotted in Figure 9.24b. From Eq. (9.52),

$$\bar{\sigma}'_o = \frac{A_1 + A_2 + A_3}{L} = \frac{72 + 512.16 + 1392.8}{20} = 98.85 \text{ kN/m}^2$$

From Table 9.9, the magnitude of  $\lambda$  is 0.173. So

$$f_{av} = 0.173[98.85 + (2)(62.75)] = 38.81 \text{ kN/m}^2$$

Hence,

$$Q_s = pL f_{av} = \pi(0.457)(20)(38.81) = \mathbf{1114.4 \text{ kN}}$$

(3) The top layer of clay (10 m) is normally consolidated, and  $\phi'_R = 30^\circ$ . For  $z = 0$ –3 m, from Eq. (9.64), we have

$$\begin{aligned} f_{av(1)} &= (1 - \sin \phi'_R) \tan \phi'_R \bar{\sigma}'_o \\ &= (1 - \sin 30^\circ)(\tan 30^\circ) \left( \frac{0 + 48}{2} \right) = 6.93 \text{ kN/m}^2 \end{aligned}$$

Similarly, for  $z = 3$ –10 m,

$$f_{av(2)} = (1 - \sin 30^\circ)(\tan 30^\circ) \left( \frac{48 + 98.33}{2} \right) = 21.12 \text{ kN/m}^2$$

For  $z = 10$ –20 m from Eq. (9.65),

$$f_{av} = (1 - \sin \phi'_R) \tan \phi'_R \sqrt{\text{OCR}} \bar{\sigma}'_o$$

For OCR = 2,

$$f_{av(3)} = (1 - \sin 30^\circ)(\tan 30^\circ) \sqrt{2} \left( \frac{98.33 + 180.23}{2} \right) = 56.86 \text{ kN/m}^2$$

So,

$$Q_s = p[f_{av(1)}(3) + f_{av(2)}(7) + f_{av(3)}(10)] \\ = (\pi)(0.457)[(6.93)(3) + (21.12)(7) + (56.86)(10)] = \mathbf{1058.45 \text{ kN}}$$

Part b

$$Q_u = Q_p + Q_s$$

From Example 9.2,

$$Q_p \approx 151 \text{ kN}$$

Again, the values of  $Q_s$  from the  $\alpha$  method,  $\lambda$  method, and  $\beta$  method are close. So,

$$Q_s = \frac{1050 + 1114.4 + 1058.45}{3} \approx 1074 \text{ kN}$$

$$Q_{\text{all}} = \frac{Q_u}{\text{FS}} = \frac{151 + 1074}{4} = 306.25 \text{ kN} \approx \mathbf{306 \text{ kN}}$$

### Example 9.8

A concrete pile 305 mm  $\times$  305 mm in cross section is driven to a depth of 20 m below the ground surface in a saturated clay soil. A summary of the variation of frictional resistance  $f_c$  obtained from a cone penetration test is as follows:

Depth (m)	Friction resistance, $f_c$ (kg/cm <sup>2</sup> )
0–6	0.35
6–12	0.56
12–20	0.72

Estimate the frictional resistance  $Q_s$  for the pile.

#### Solution

We can prepare the following table:

Depth (m)	$f_c$ (kN/m <sup>2</sup> )	$\alpha'$ (Figure 9.22)	$\Delta L$ (m)	$\alpha' f_c p(\Delta L)$ [Eq. (9.67)] (kN)
0–6	34.34	0.84	6	211.5
6–12	54.94	0.71	6	285.5
12–20	70.63	0.63	8	434.2

(Note:  $p = (4)(0.305) = 1.22 \text{ m}$ )

Thus,

$$Q_s = \Sigma \alpha' f_c p(\Delta L) = \mathbf{931 \text{ kN}}$$

**Example 9.9**

Refer to Example 9.7 and Figure 9.24. Using Eq. (9.56), estimate the skin resistance  $Q_s$ .

**Solution**

For  $z = 0$  to 3 m,

$$c_{u(1)} = 25 \text{ kN/m}^2; \quad \bar{\sigma}'_o = \frac{0 + 48}{2} = 24 \text{ kN/m}^2$$

$$f_{av} = 0.5(c_u \bar{\sigma}'_o)^{0.5} = 0.5[(25)(24)]^{0.5} = 12.25 \text{ kN/m}^2$$

Again,

$$f_{av} = 0.5(c_u)^{0.75}(\bar{\sigma}'_o)^{0.25} = 0.5(25)^{0.75}(24)^{0.25} = 12.37 \text{ kN/m}^2$$

Use  $f_{av} = 12.37 \text{ kN/m}^2$ .

For  $z = 3$  to 10 m,

$$c_{u(2)} = 40 \text{ kN/m}^2; \quad \bar{\sigma}'_o = \frac{48 + 98.33}{2} = 73.165 \text{ kN/m}^2$$

$$f_{av} = 0.5(c_u \bar{\sigma}'_o)^{0.5} = 0.5[(40)(73.165)]^{0.5} = 27.05 \text{ kN/m}^2$$

$$f_{av} = 0.5(c_u)^{0.75}(\bar{\sigma}'_o)^{0.25} = 0.5(40)^{0.75}(73.165)^{0.25} = 23.26 \text{ kN/m}^2$$

Use  $f_{av} = 27.05 \text{ kN/m}^2$ .

For  $z = 10$  to 20 m,

$$c_{u(3)} = 90 \text{ kN/m}^2; \quad \bar{\sigma}'_o = \frac{98.33 + 180.23}{2} = 139.28 \text{ kN/m}^2$$

$$f_{av} = 0.5(c_u \bar{\sigma}'_o)^{0.5} = 0.5[(90)(139.28)]^{0.5} = 55.98 \text{ kN/m}^2$$

$$f_{av} = 0.5(c_u)^{0.75}(\bar{\sigma}'_o)^{0.25} = 0.5(90)^{0.75}(139.28)^{0.25} = 50.19 \text{ kN/m}^2$$

Use  $f_{av} = 55.98 \text{ kN/m}^2$ .

Now,

$$Q_s = \Sigma f_{av} p \Delta L = (\pi \times 0.457)[(12.37)(3) + (27.05)(7) + (55.98)(10)] = \mathbf{1128.8 \text{ kN}} \quad \blacksquare$$

**Example 9.10**

Consider a CFA pile in granular soil (see Section 9.14) that has a nominal diameter of 0.6 m and length of 12 m. The average value of  $N_{60}$  between one pile diameter above and 3 pile diameters below the pile tips is 20. Use  $FS = 3$  and estimate the allowable load carrying capacity of the pile. Assume the unit weight of sand at  $\gamma = 16 \text{ kN/m}^3$ .

**Solution**

We will divide the pile into three segments (i.e., 4 m in length for each segment). Now we can prepare the following table.

Pile Segment No.	Depth (m)	$z_m^a$	$\beta^a$	$\beta$ to be used
1	0–4	2	4.35	2.5
2	4–8	6	1.04	1.04
3	8–12	10	0.537	0.537

<sup>a</sup>Eq. (9.70) is  $\beta = 10.72z_m^{-1.3}$  ( $0.2 < \beta < 2.5$ )

Figure 9.25 shows the variation of  $\sigma'_o$  with depth. The average values of  $\sigma'_o$  (i.e.,  $\bar{\sigma}'_o$ ) for the three segments are

$$\text{Segment 1 } \boxtimes \frac{0 + 64}{2} = 32 \text{ kN/m}^2$$

$$\text{Segment 2 } \boxtimes \frac{64 + 128}{2} = 96 \text{ kN/m}^2$$

and

$$\text{Segment 3 } \boxtimes \frac{128 + 192}{2} = 160 \text{ kN/m}^2$$


Hence, the values of  $f_{av}$  [Eq. (9.68)] are

$$\text{Segment 1 } \boxtimes f_{av} = \beta \bar{\sigma}'_o = (2.5)(32) = 80 \text{ kN/m}^2$$

$$\text{Segment 2 } \boxtimes f_{av} = (1.04)(96) = 99.84 \text{ kN/m}^2$$

and

$$\text{Segment 3 } \boxtimes f_{av} = (0.537)(160) = 85.92 \text{ kN/m}^2$$

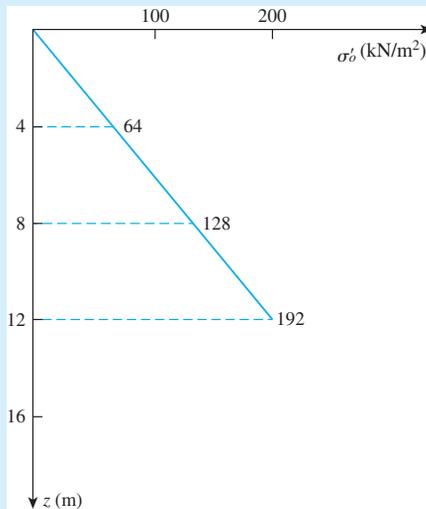

**Figure 9.25**

Hence,

$$Q_s = \sum f_{av} p \Delta L = (\pi \times 0.6)(4)(80 + 99.84 + 85.92) = \mathbf{2003.8 \text{ kN}}$$

From Eq. (9.72a),

$$q_p = 57.5 N_{60} = (57.5)(20) = 1150 \text{ kN/m}^2$$

$$Q_p = \frac{\pi}{4} D^2 q_p = \left(\frac{\pi}{4}\right)(0.6)^2(1150) = 325.15 \text{ kN}$$

and

$$Q_{\text{all}} = \frac{Q_s + Q_p}{\text{FS}} = \frac{2003.8 + 325.15}{3} = \mathbf{776.3 \text{ kN}}$$

### Example 9.11

Figure 9.26 shows an idealized variation of  $c_u$  in a saturated clay. A CFA pile is to be constructed in this clay with a length of 10 m and a diameter of  $D$  of 0.45 m. Estimate the ultimate side-skin resistance  $Q_s$  and the point load  $Q_p$  for the pile. Assume a unit weight of  $\gamma$  for the clay to be  $18 \text{ kN/m}^3$ .

#### Solution

From Eqs. (9.53) and (9.74),

$$f_{av} = \alpha c_u = \left(\frac{56.2}{c_u}\right) c_u = 56.2 \text{ kN/m}^2$$

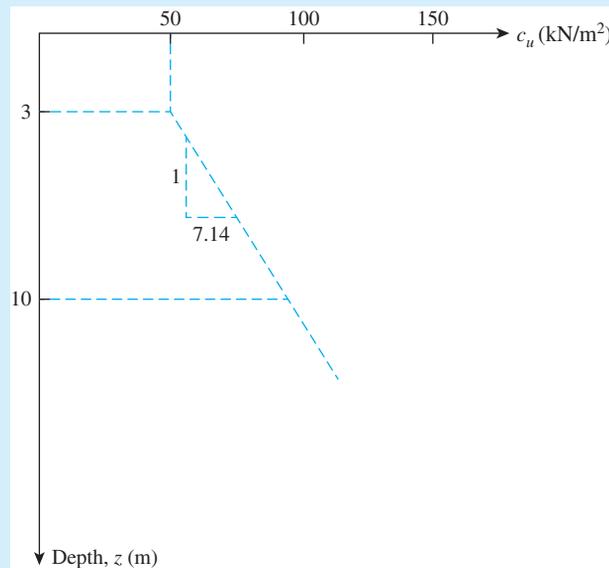


Figure 9.26

Hence,

$$Q_s = (\pi D)(f_{av})L = (\pi)(0.45)(56.2)(10) = \mathbf{252.9 \text{ kN}}$$

The magnitude of  $c_u$  at  $z = 10 \text{ m}$  is  $100 \text{ kN/m}^2$ . Similarly, the magnitude of  $c_u$  at  $z = 10 \text{ m} + 3D = 10 + (3)(0.45) = 10 + 1.35 = 11.35 \text{ m}$  is  $100 + (7.14)(1.35) = 109.6 \text{ kN/m}^2$ . Thus, the average value of  $c_u$  within a distance of  $3D$  below the pile tip is about  $(100 + 109.6)/2 = 104.8 \text{ kN/m}^2$ . Again, from Eq. (3.56),

$$c_u = \frac{q_c - \sigma_o}{N_K}$$

So,  $\sigma'_o$  at a depth of about  $11 \text{ m}$  below the ground surface is  $(\gamma)(11) = (18)(11) = 198 \text{ kN/m}^2$ . For electric cone,  $N_K \approx 15$ . Hence,

$$c_u = 104.8 = \frac{q_c - 198}{15}$$

and

$$q_c = (104.8)(15) + 198 = 1770 \text{ kN/m}^2$$

From Eq. (9.75),

$$q_p = 0.15q_c = (0.15)(1770) = 265.5 \text{ kN/m}^2$$

and

$$Q_p = \frac{\pi}{4}D^2q_p = \left(\frac{\pi}{4}\right)(0.45)^2(265.5) = \mathbf{42.2 \text{ kN}}$$


## 9.16 Pile Load Tests

In most large projects, a specific number of load tests must be conducted on piles. The primary reason is the unreliability of prediction methods. The vertical and lateral load-bearing capacity of a pile can be tested in the field. Figure 9.27a shows a schematic diagram of the pile load arrangement for testing *axial compression* in the field. The load is applied to the pile by a hydraulic jack. Step loads are applied to the pile, and sufficient time is allowed to elapse after each load so that a small amount of settlement occurs. The settlement of the pile is measured by dial gauges. The amount of load to be applied for each step will vary, depending on local building codes. Most building codes require that each step load be about one-fourth of the proposed working load. The load test should be carried out to at least a total load of two times the proposed working load. After the desired pile load is reached, the pile is gradually unloaded.

Figure 9.27b shows a load–settlement diagram obtained from field loading and unloading. For any load  $Q$ , the net pile settlement can be calculated as follows:

When  $Q = Q_1$ ,

$$\text{Net settlement, } s_{\text{net}(1)} = s_{t(1)} - s_{e(1)}$$

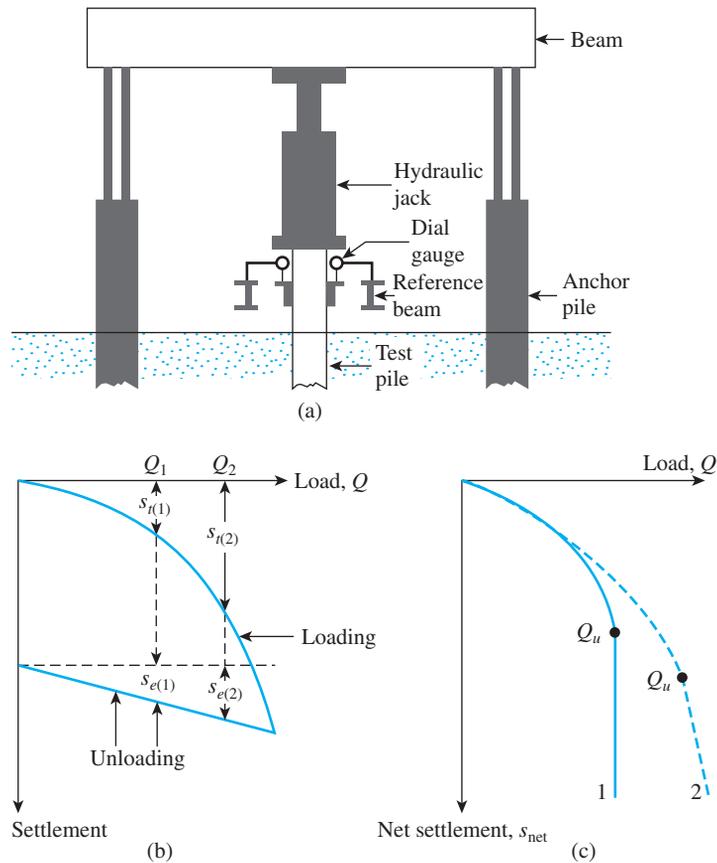

**Figure 9.27** (a) Schematic diagram of pile load test arrangement; (b) plot of load against total settlement; (c) plot of load against net settlement

When  $Q = Q_2$ ,

$$\text{Net settlement, } s_{net(2)} = s_{t(2)} - s_{e(2)}$$

⋮


where

$s_{net}$  = net settlement

$s_e$  = elastic settlement of the pile itself

$s_t$  = total settlement

These values of  $Q$  can be plotted in a graph against the corresponding net settlement,  $s_{net}$ , as shown in Figure 9.27c. The ultimate load of the pile can then be determined from the graph. Pile settlement may increase with load to a certain point, beyond which the load–settlement curve becomes vertical. The load corresponding to the point where the curve of  $Q$  versus  $s_{net}$  becomes vertical is the ultimate load,  $Q_u$ , for the pile; it is shown by curve 1 in Figure 9.27c.

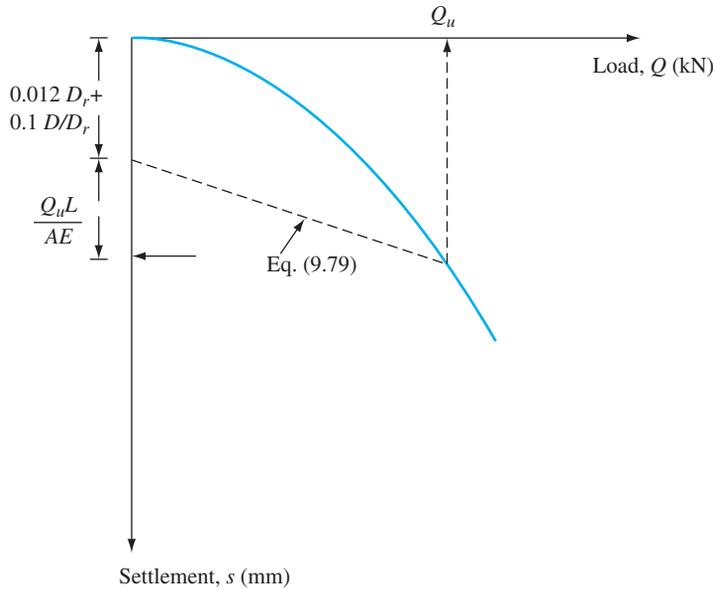

**Figure 9.28** Davisson's method for determination of  $Q_u$

In many cases, the latter stage of the load–settlement curve is almost linear, showing a large degree of settlement for a small increment of load; this is shown by curve 2 in the figure. The ultimate load,  $Q_u$ , for such a case is determined from the point of the curve of  $Q$  versus  $s_{\text{net}}$  where this steep linear portion starts.

One of the methods to obtain the ultimate load  $Q_u$  from the load-settlement plot is that proposed by Davisson (1973). Davisson's method is used more often in the field and is described here. Referring to Figure 9.28, the ultimate load occurs at a settlement level ( $s_u$ ) of

$$s_u(\text{mm}) = 0.012D_r + 0.1\left(\frac{D}{D_r}\right) + \frac{Q_u L}{A_p E_p} \quad (9.79)$$

where

$Q_u$  is in kN

$D$  is in mm

$D_r$  = reference pile diameter or width (= 300mm)

$L$  = pile length (mm)

$A_p$  = area of pile cross section ( $\text{mm}^2$ )

$E_p$  = Young's modulus of pile material ( $\text{kN}/\text{mm}^2$ )

The application of this procedure is shown in Example 9.12.


The load test procedure just described requires the application of step loads on the piles and the measurement of settlement and is called a *load-controlled* test. Another

technique used for a pile load test is the *constant-rate-of-penetration* test, wherein the load on the pile is continuously increased to maintain a constant rate of penetration, which can vary from 0.25 to 2.5 mm/min (0.01 to 0.1 in./min). This test gives a load–settlement plot similar to that obtained from the load-controlled test. Another type of pile load test is *cyclic loading*, in which an incremental load is repeatedly applied and removed.

In order to conduct a load test on piles, it is important to take into account the time lapse after the end of driving (EOD). When piles are driven into soft clay, a certain zone surrounding the clay becomes remolded or compressed, as shown in Figure 9.29a. This results in a reduction of undrained shear strength,  $c_u$  (Figure 9.29b). With time, the loss of undrained shear strength is partially or fully regained. The time lapse may range from 30 to 60 days.

For piles driven in dilative (dense to very dense) saturated fine sands, relaxation is possible. Negative pore water pressure, if developed during pile driving, will dissipate over time, resulting in a reduction in pile capacity with time after the driving operation is completed. At the same time, excess pore water pressure may be generated in contractive fine sands during pile driving. The excess pore water pressure will dissipate over time, which will result in greater pile capacity.

Several empirical relationships have been developed to predict changes in pile capacity with time. An excellent review of most of the works has been given by Sawant, Shukla, Sivakugan, and Das (2013).

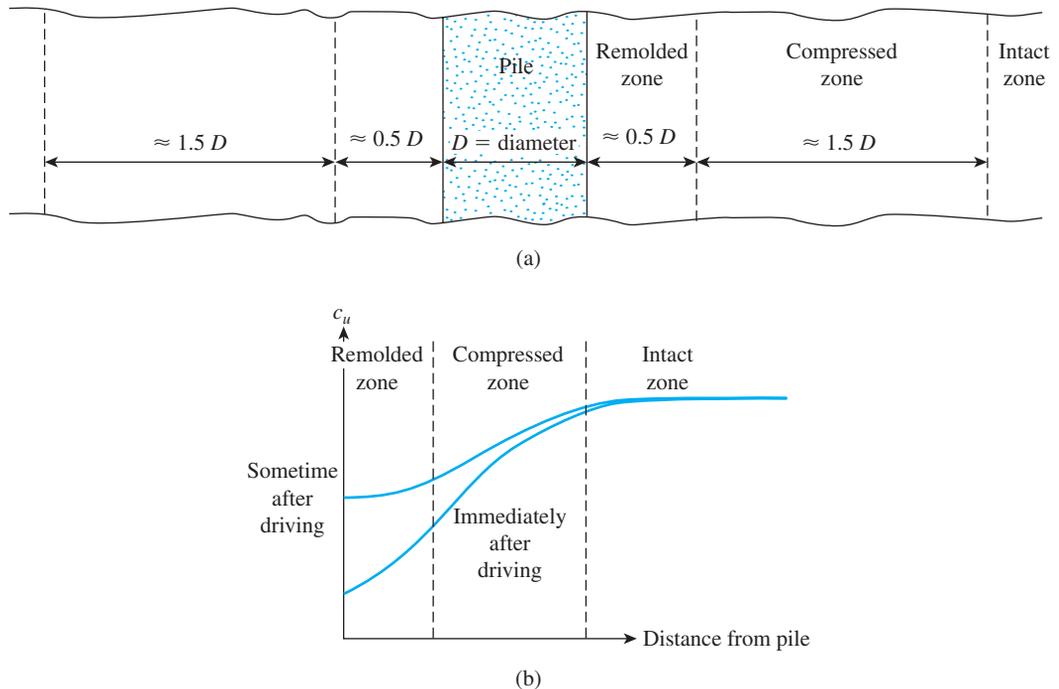

**Figure 9.29** (a) Remolded or compacted zone around a pile driven into soft clay; (b) Nature of variation of undrained shear strength ( $c_u$ ) with time around a pile driven into soft clay

### Example 9.12

Figure 9.30 shows the load test results of a 20-m-long concrete pile (406 mm × 406 mm) embedded in sand. Using Davisson's method, determine the ultimate load  $Q_u$ . Given:  $E_p = 30 \times 10^6$  kN/m<sup>2</sup>.

#### Solution

From Eq. (9.79),

$$s_u = 0.012D_r + 0.1\left(\frac{D}{D_r}\right) + \frac{Q_u L}{A_p E_p}$$

$D_r = 300$  mm,  $D = 406$  mm,  $L = 20$  m = 20,000 mm,  $A_p = 406$  mm × 406 mm = 164,836 mm<sup>2</sup>, and  $E_p = 30 \times 10^6$  kN/m<sup>2</sup>. Hence,

$$\begin{aligned} s_u &= (0.012)(300) + (0.1)\left(\frac{406}{300}\right) + \frac{(Q_u)(20,000)}{(30)(164,836)} \\ &= 3.6 + 0.135 + 0.004Q_u = 3.735 + 0.004Q_u \end{aligned}$$

The line  $s_u(\text{mm}) = 3.735 + 0.004Q_u$  is drawn in Figure 9.30. The intersection of this line with the load-settlement curve gives the failure load  $Q_u = 1640$  kN.

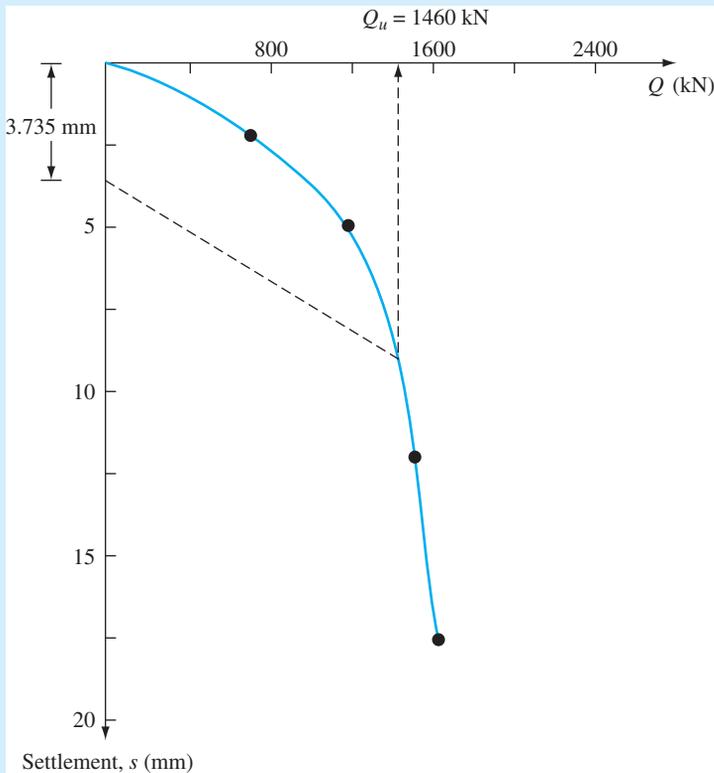


Figure 9.30

## 9.17 Elastic Settlement of Piles

The total settlement of a pile under a vertical working load  $Q_w$  is given by

$$s_e = s_{e(1)} + s_{e(2)} + s_{e(3)} \quad (9.80)$$

where

$s_{e(1)}$  = elastic settlement of pile

$s_{e(2)}$  = settlement of pile caused by the load at the pile tip

$s_{e(3)}$  = settlement of pile caused by the load transmitted along the pile shaft

If the pile material is assumed to be elastic, the deformation of the pile shaft can be evaluated, in accordance with the fundamental principles of mechanics of materials, as

$$s_{e(1)} = \frac{(Q_{wp} + \xi Q_{ws})L}{A_p E_p} \quad (9.81)$$

where

$Q_{wp}$  = load carried at the pile point under working load condition

$Q_{ws}$  = load carried by frictional (skin) resistance under working load condition

$A_p$  = area of cross section of pile

$L$  = length of pile

$E_p$  = modulus of elasticity of the pile material

The magnitude of  $\xi$  varies between 0.5 and 0.67 and will depend on the nature of the distribution of the unit friction (skin) resistance  $f$  along the pile shaft.

The settlement of a pile caused by the load carried at the pile point may be expressed in the form:

$$s_{e(2)} = \frac{q_{wp} D}{E_s} (1 - \mu_s^2) I_{wp} \quad (9.82)$$

where

$D$  = width or diameter of pile

$q_{wp}$  = point load per unit area at the pile point =  $Q_{wp}/A_p$

$E_s$  = modulus of elasticity of soil at or below the pile point

$\mu_s$  = Poisson's ratio of soil

$I_{wp}$  = influence factor  $\approx 0.85$

Vesic (1977) also proposed a semi-empirical method for obtaining the magnitude of the settlement of  $s_{e(2)}$ . His equation is

$$s_{e(2)} = \frac{Q_{wp} C_p}{D q_p} \quad (9.83)$$

**Table 9.14** Typical Values of  $C_p$  [from Eq. (9.83)]

Type of soil	Driven pile	Bored pile
Sand (dense to loose)	0.02–0.04	0.09–0.18
Clay (stiff to soft)	0.02–0.03	0.03–0.06
Silt (dense to loose)	0.03–0.05	0.09–0.12

Based on “Design on pile foundations,” by A.S. Vesic. *Synthesis of Highway Practice* by American Association of State Highway and Transportation, 1969.

where

$q_p$  = ultimate point resistance of the pile

$C_p$  = an empirical coefficient

Representative values of  $C_p$  for various soils are given in Table 9.14.

The settlement of a pile caused by the load carried by the pile shaft is given by a relation similar to Eq. (9.82), namely,

$$s_{e(3)} = \left( \frac{Q_{ws}}{pL} \right) \frac{D}{E_s} (1 - \mu_s^2) I_{ws} \quad (9.84)$$

where

$p$  = perimeter of the pile

$L$  = embedded length of pile

$I_{ws}$  = influence factor

Note that the term  $Q_{ws}/pL$  in Eq. (9.84) is the average value of  $f$  along the pile shaft. The influence factor,  $I_{ws}$ , has a simple empirical relation (Vesic, 1977):

$$I_{ws} = 2 + 0.35 \sqrt{\frac{L}{D}} \quad (9.85)$$

Vesic (1977) also proposed a simple empirical relation similar to Eq. (9.83) for obtaining  $s_{e(3)}$ :

$$s_{e(3)} = \frac{Q_{ws} C_s}{L q_p} \quad (9.86)$$

In this equation,  $C_s$  = an empirical constant =  $(0.93 + 0.16\sqrt{L/D})C_p$  (9.87)

The values of  $C_p$  for use in Eq. (9.83) may be estimated from Table 9.14.

### Example 9.13

The allowable working load on a prestressed concrete pile 21-m long that has been driven into sand is 502 kN. The pile is octagonal in shape with  $D = 356$  mm (see Table 9.3a). Skin resistance carries 350 kN of the allowable load, and point bearing carries the rest. Use  $E_p = 21 \times 10^6$  kN/m<sup>2</sup>,  $E_s = 25 \times 10^3$  kN/m<sup>2</sup>,  $\mu_s = 0.35$ , and  $\xi = 0.62$ . Determine the settlement of the pile.

#### Solution

From Eq. (9.81),

$$s_{e(1)} = \frac{(Q_{wp} + \xi Q_{ws})L}{A_p E_p}$$

From Table 9.3a for  $D = 356$  mm, the area of pile cross section,  $A_p = 1045$  cm<sup>2</sup>. Also, perimeter  $p = 1.168$  m. Given:  $Q_{ws} = 350$  kN, so

$$Q_{wp} = 502 - 350 = 152 \text{ kN}$$

$$s_{e(1)} = \frac{[152 + 0.62(350)](21)}{(0.1045 \text{ m}^2)(21 \times 10^6)} = 0.00353 \text{ m} = 3.35 \text{ mm}$$

From Eq. (9.82),

$$\begin{aligned} s_{e(2)} &= \frac{q_{wp} D}{E_s} (1 - \mu_s^2) I_{wp} = \left( \frac{152}{0.1045} \right) \left( \frac{0.356}{25 \times 10^3} \right) (1 - 0.35^2)(0.85) \\ &= 0.0155 \text{ m} = 15.5 \text{ mm} \end{aligned}$$

Again, from Eq. (9.84),

$$\begin{aligned} s_{e(3)} &= \left( \frac{Q_{ws}}{pL} \right) \left( \frac{D}{E_s} \right) (1 - \mu_s^2) I_{ws} \\ I_{ws} &= 2 + 0.35 \sqrt{\frac{L}{D}} = 2 + 0.35 \sqrt{\frac{21}{0.356}} = 4.69 \\ s_{e(3)} &= \left[ \frac{350}{(1.168)(21)} \right] \left( \frac{0.356}{25 \times 10^3} \right) (1 - 0.35^2)(4.69) \\ &= 0.00084 \text{ m} = 0.84 \text{ mm} \end{aligned}$$

Hence, total settlement is


$$s_e = s_{e(1)} + s_{e(2)} + s_{e(3)} = 3.35 + 15.5 + 0.84 = \mathbf{19.69 \text{ mm}}$$

## 9.18 Laterally Loaded Piles


A vertical pile resists a lateral load by mobilizing passive pressure in the soil surrounding it. (See Figure 9.1c.) The degree of distribution of the soil's reaction depends on (a) the stiffness of the pile, (b) the stiffness of the soil, and (c) the fixity of the ends of the pile. In general, laterally loaded piles can be divided into two major categories: (1) short or rigid piles and (2) long or elastic piles. Figures 9.31a and 9.31b show the nature of the variation of the pile deflection and the distribution of the moment and shear force along the pile length when the pile is subjected to lateral loading. We next summarize the current solutions for laterally loaded piles.

### Elastic Solution

A general method for determining moments and displacements of a vertical pile embedded in a *granular soil* and subjected to lateral load and moment at the ground surface was given by Matlock and Reese (1960). Consider a pile of length  $L$  subjected to a lateral force  $Q_g$  and a moment  $M_g$  at the ground surface ( $z = 0$ ), as shown in Figure 9.32a. Figure 9.32b shows the general deflected shape of the pile and the soil resistance caused by the applied load and the moment.

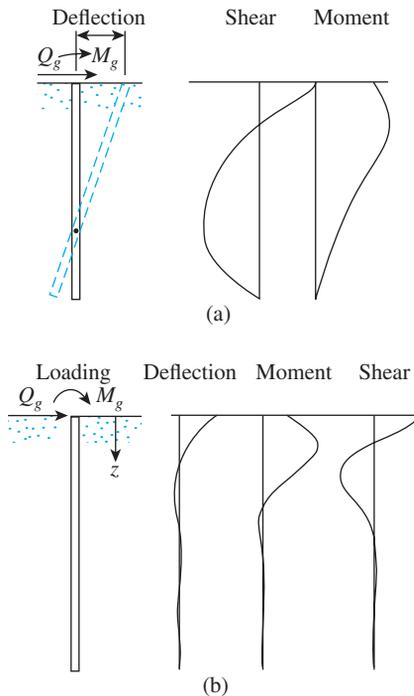

**Figure 9.31** Nature of variation of pile deflection, moment, and shear force for (a) a rigid pile and (b) an elastic pile

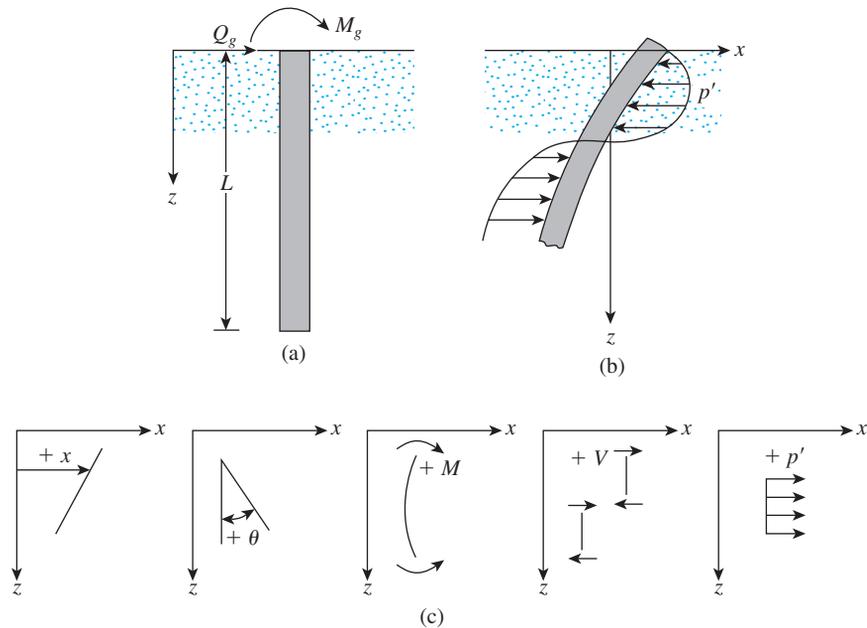

**Figure 9.32** (a) Laterally loaded pile; (b) soil resistance on pile caused by lateral load; (c) sign conventions for displacement, slope, moment, shear, and soil reaction

According to a simpler Winkler's model, an elastic medium (soil in this case) can be replaced by a series of infinitely close independent elastic springs. Based on this assumption,

$$k = \frac{p' \text{ (kN/m or lb/ft)}}{x \text{ (m or ft)}} \quad (9.88)$$

where

$k$  = modulus of subgrade reaction  
 $p'$  = pressure on soil  
 $x$  = deflection

The subgrade modulus for *granular soils* at a depth  $z$  is defined as

$$k_z = n_h z \quad (9.89)$$

where  $n_h$  = constant of modulus of horizontal subgrade reaction.

Referring to Figure 9.32b and using the theory of beams on an elastic foundation, we can write

$$E_p I_p \frac{d^4 x}{dz^4} = p' \quad (9.90)$$

where

$E_p$  = modulus of elasticity in the pile material  
 $I_p$  = moment of inertia of the pile section

Based on Winkler's model

$$p' = -kx \quad (9.91)$$

The sign in Eq. (9.91) is negative because the soil reaction is in the direction opposite that of the pile deflection.

Combining Eqs. (9.90) and (9.91) gives

$$E_p I_p \frac{d^4 x}{dz^4} + kx = 0 \quad (9.92)$$

The solution of Eq. (9.92) results in the following expressions:

**Pile Deflection at Any Depth [ $x_z(z)$ ]**

$$x_z(z) = A_x \frac{Q_g T^3}{E_p I_p} + B_x \frac{M_g T^2}{E_p I_p} \quad (9.93)$$

**Slope of Pile at Any Depth [ $\theta_z(z)$ ]**

$$\theta_z(z) = A_\theta \frac{Q_g T^2}{E_p I_p} + B_\theta \frac{M_g T}{E_p I_p} \quad (9.94)$$

**Moment of Pile at Any Depth [ $M_z(z)$ ]**

$$M_z(z) = A_m Q_g T + B_m M_g \quad (9.95)$$

**Shear Force on Pile at Any Depth [ $V_z(z)$ ]**

$$V_z(z) = A_v Q_g + B_v \frac{M_g}{T} \quad (9.96)$$

**Soil Reaction at Any Depth [ $p'_z(z)$ ]**

$$p'_z(z) = A_{p'} \frac{Q_g}{T} + B_{p'} \frac{M_g}{T^2} \quad (9.97)$$

where

$A_x, B_x, A_\theta, B_\theta, A_m, B_m, A_v, B_v, A_{p'},$  and  $B_{p'}$ , are coefficients  
 $T =$  characteristic length of the soil–pile system

$$= \sqrt[5]{\frac{E_p I_p}{n_h}} \quad (9.98)$$

$n_h$  has been defined in Eq. (9.89)

When  $L \geq 5T$ , the pile is considered to be a *long pile*. For  $L \leq 2T$ , the pile is considered to be a *rigid pile*. Table 9.15 gives the values of the coefficients for long piles ( $L/T \geq 5$ ) in Eqs. (9.93) through (9.97). Note that, in the first column of the table,

$$Z = \frac{z}{T} \quad (9.99)$$

is the nondimensional depth.

The positive sign conventions for  $x_z(z)$ ,  $\theta_z(z)$ ,  $M_z(z)$ ,  $V_z(z)$ , and  $p'_z(z)$  assumed in the derivations in Table 9.15 are shown in Figure 9.32c. Figure 9.33 shows the variation of  $A_x$ ,  $B_x$ ,  $A_m$ , and  $B_m$  for various values of  $L/T = Z_{\max}$ . It indicates that, when  $L/T$  is greater than about 5, the coefficients do not change, which is true of long piles only.

Calculating the characteristic length  $T$  for the pile requires assuming a proper value of  $n_h$ . Table 9.16 gives some representative values.

Elastic solutions similar to those given in Eqs. 9.93 through 9.97 for piles embedded in *cohesive soil* were developed by Davisson and Gill (1963). Their equations are

$$x_z(z) = A'_x \frac{Q_g R^3}{E_p I_p} + B'_x \frac{M_g R^2}{E_p I_p} \quad (9.100)$$

and

$$M_z(z) = A'_m Q_g R + B'_m M_g \quad (9.101)$$

where  $A'_x$ ,  $B_x$ ,  $A'_m$ , and  $B'_m$  are coefficients.


**Table 9.15** Coefficients for Long Piles,  $k_z = n_h z$

$Z$	$A_x$	$A_\theta$	$A_m$	$A_v$	$A_{p'}$	$B_x$	$B_\theta$	$B_m$	$B_v$	$B_{p'}$
0.0	2.435	-1.623	0.000	1.000	0.000	1.623	-1.750	1.000	0.000	0.000
0.1	2.273	-1.618	0.100	0.989	-0.227	1.453	-1.650	1.000	-0.007	-0.145
0.2	2.112	-1.603	0.198	0.956	-0.422	1.293	-1.550	0.999	-0.028	-0.259
0.3	1.952	-1.578	0.291	0.906	-0.586	1.143	-1.450	0.994	-0.058	-0.343
0.4	1.796	-1.545	0.379	0.840	-0.718	1.003	-1.351	0.987	-0.095	-0.401
0.5	1.644	-1.503	0.459	0.764	-0.822	0.873	-1.253	0.976	-0.137	-0.436
0.6	1.496	-1.454	0.532	0.677	-0.897	0.752	-1.156	0.960	-0.181	-0.451
0.7	1.353	-1.397	0.595	0.585	-0.947	0.642	-1.061	0.939	-0.226	-0.449
0.8	1.216	-1.335	0.649	0.489	-0.973	0.540	-0.968	0.914	-0.270	-0.432
0.9	1.086	-1.268	0.693	0.392	-0.977	0.448	-0.878	0.885	-0.312	-0.403
1.0	0.962	-1.197	0.727	0.295	-0.962	0.364	-0.792	0.852	-0.350	-0.364
1.2	0.738	-1.047	0.767	0.109	-0.885	0.223	-0.629	0.775	-0.414	-0.268
1.4	0.544	-0.893	0.772	-0.056	-0.761	0.112	-0.482	0.688	-0.456	-0.157
1.6	0.381	-0.741	0.746	-0.193	-0.609	0.029	-0.354	0.594	-0.477	-0.047
1.8	0.247	-0.596	0.696	-0.298	-0.445	-0.030	-0.245	0.498	-0.476	0.054
2.0	0.142	-0.464	0.628	-0.371	-0.283	-0.070	-0.155	0.404	-0.456	0.140
3.0	-0.075	-0.040	0.225	-0.349	0.226	-0.089	0.057	0.059	-0.213	0.268
4.0	-0.050	0.052	0.000	-0.106	0.201	-0.028	0.049	-0.042	0.017	0.112
5.0	-0.009	0.025	-0.033	0.015	0.046	0.000	-0.011	-0.026	0.029	-0.002


Based on *Drilled Pier Foundations*, by R. J. Woodward, W. S. Gardner, and D. M. Greer. McGraw-Hill, 1972.

**Table 9.16** Representative Values of  $n_h$ 


Soil	$n_h$	
	kN/m <sup>3</sup>	lb/in <sup>3</sup>
Dry or moist sand		
Loose	1800–2200	6.5–8.0
Medium	5500–7000	20–25
Dense	15,000–18,000	55–65
Submerged sand		
Loose	1000–1400	3.5–5.0
Medium	3500–4500	12–18
Dense	9000–12,000	32–45

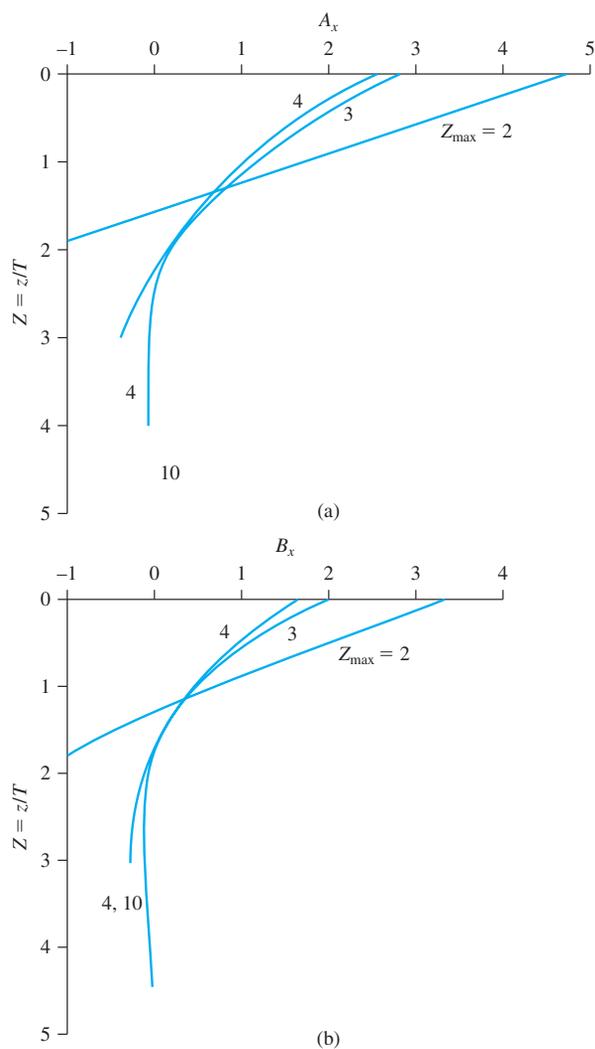

**Figure 9.33** Variation of  $A_x$ ,  $B_x$ ,  $A_m$ , and  $B_m$  with  $Z$  (Based on Matlock, H. and Reese, L. C. (1960). "Generalized Solution for Laterally Loaded Piles," *Journal of the Soil Mechanics and Foundations Division*, American Society of Civil Engineers, Vol. 86, No. SM5, Part I, pp. 63–91.)

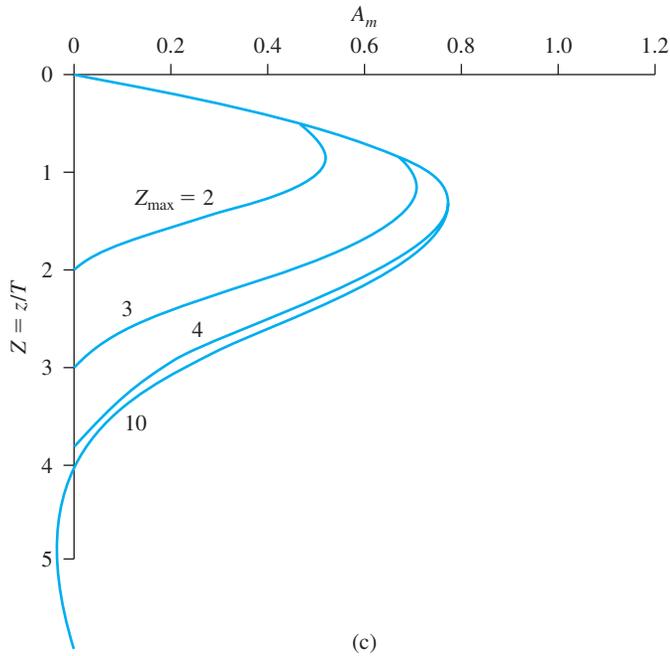

(c)

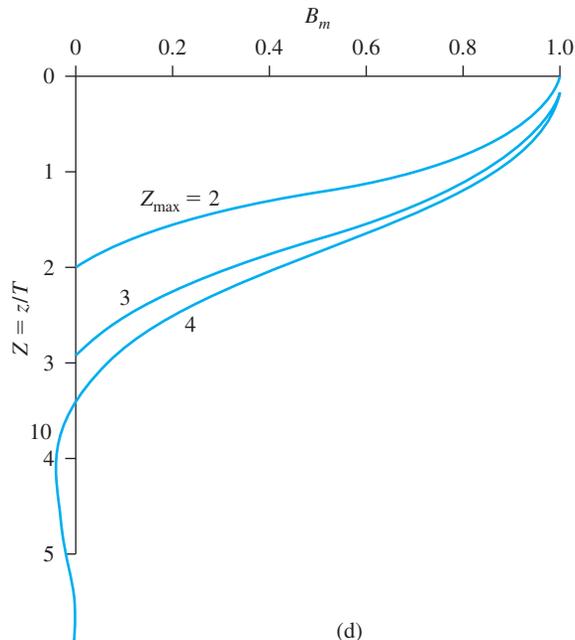

(d)

Figure 9.33 (continued)

and

$$R = \sqrt[4]{\frac{E_p I_p}{k}} \quad (9.102)$$

The values of the coefficients  $A'$  and  $B'$  are given in Figure 9.34. Note that

$$Z = \frac{z}{R} \quad (9.103)$$

and

$$Z_{\max} = \frac{L}{R} \quad (9.104)$$

The use of Eqs. (9.100) and (9.101) requires knowing the magnitude of the characteristic length,  $R$ . This can be calculated from Eq. (9.102), provided that the coefficient of the subgrade reaction is known. For sands, the coefficient of the subgrade reaction was given by Eq. (9.89), which showed a linear variation with depth. However, in cohesive soils, the subgrade reaction may be assumed to be approximately constant with depth. Vesic (1961) proposed the following equation to estimate the value of  $k$ :

$$k = 0.65 \sqrt[12]{\frac{E_s D^4}{E_p I_p}} \frac{E_s}{1 - \mu_s^2} \quad (9.105)$$

Here,

$E_s$  = modulus of elasticity of soil

$D$  = pile width (or diameter)

$\mu_s$  = Poisson's ratio for the soil

For all practical purposes, Eq. (9.105) can be written as

$$k \approx \frac{E_s}{1 - \mu_s^2} \quad (9.106)$$


### Ultimate Load Analysis: Broms's Method

For laterally loaded piles, Broms (1965) developed a simplified solution based on the assumptions of (a) shear failure in soil, which is the case for short piles, and (b) bending of the pile, governed by the plastic yield resistance of the pile section, which is applicable to long piles. Broms's solution for calculating the ultimate load resistance,  $Q_{u(g)}$ , for *short piles* is given in Figure 9.35a. A similar solution for piles embedded in cohesive soil is shown in Figure 9.35b. In Figure 9.35a, note that

$$K_p = \text{Rankine passive earth pressure coefficient} = \tan^2\left(45 + \frac{\phi'}{2}\right) \quad (9.107)$$

Similarly, in Figure 9.35b,

$$c_u = \text{undrained cohesion} \approx \frac{0.75q_u}{FS} = \frac{0.75q_u}{2} = 0.375q_u \quad (9.108)$$

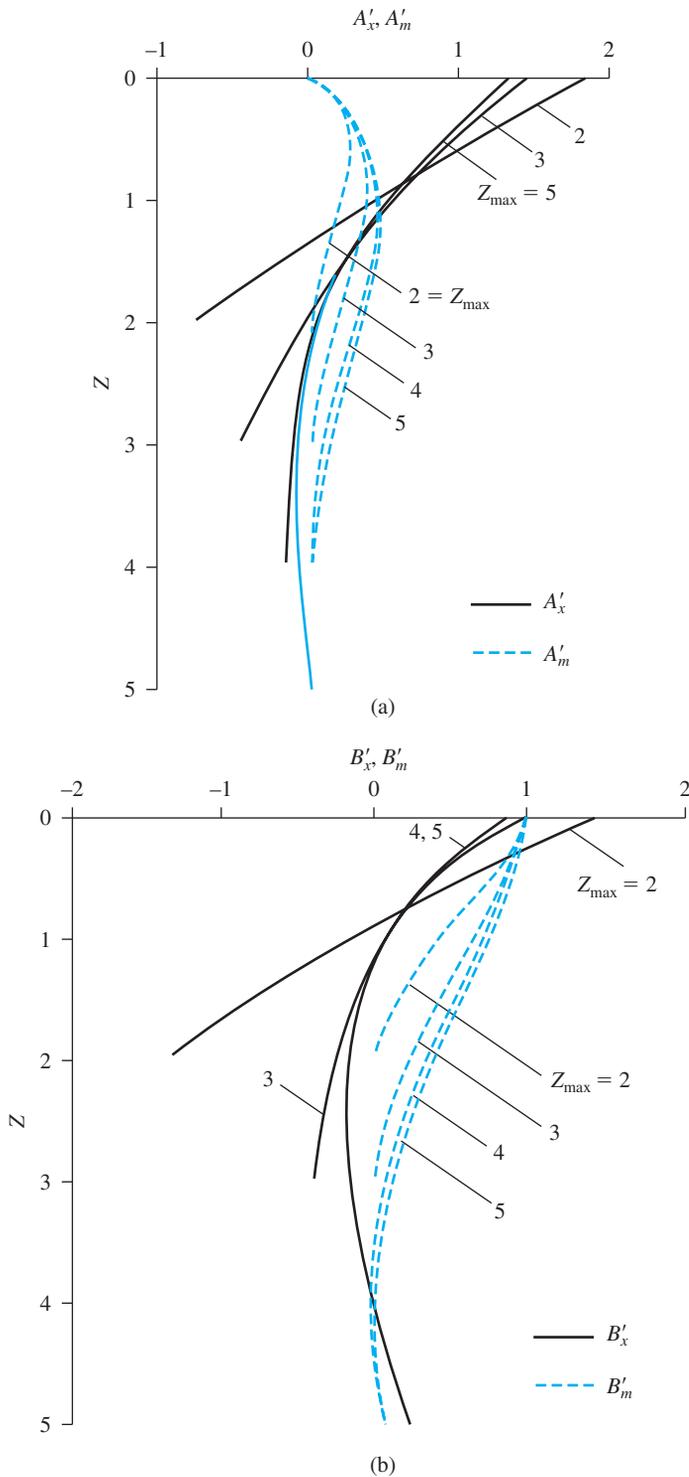

**Figure 9.34** Variation of  $A'_x$ ,  $B'_x$ ,  $A'_m$ , and  $B'_m$  with  $Z$  (Based on Davisson, M. T. and Gill, H. L. (1963). "Laterally Loaded Piles in a Layered Soil Systems," *Journal of the Soil Mechanics and Foundations Division*, American Society of Civil Engineers, Vol. 89, No. SM3, pp. 63–94.)

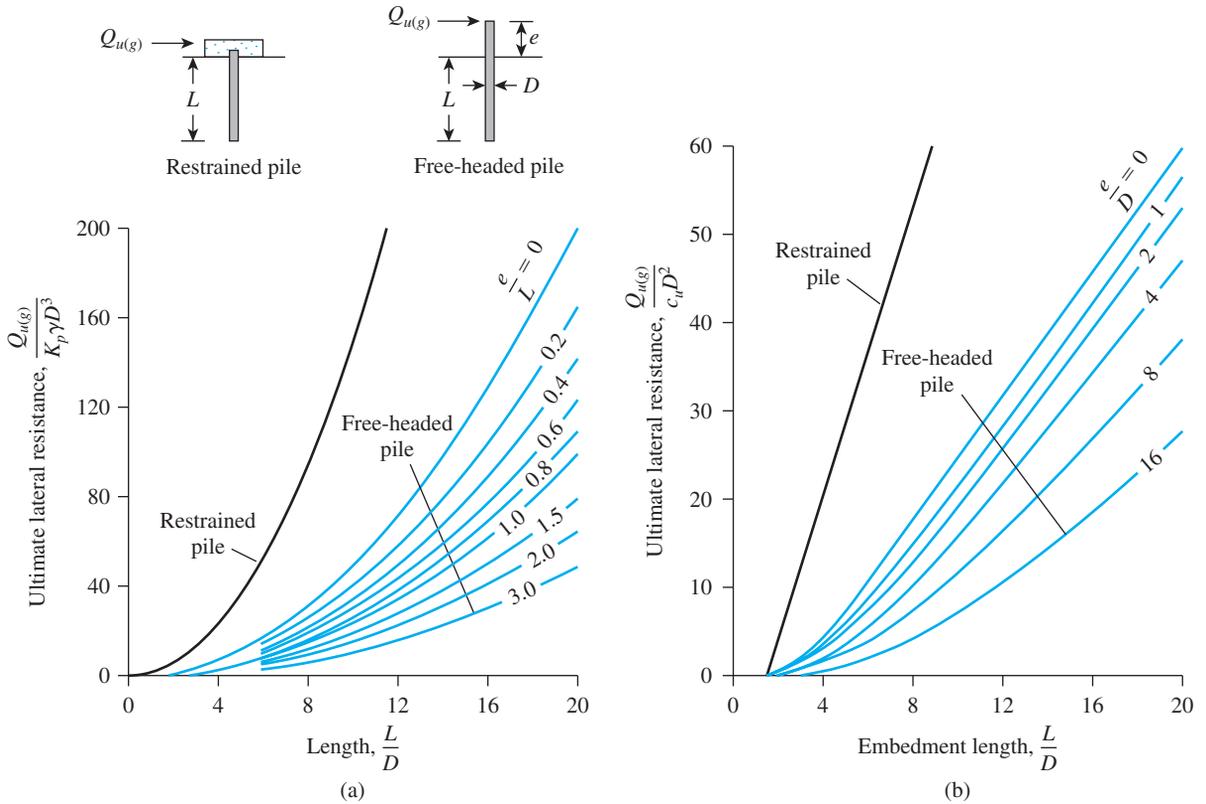


Figure 9.35 Broms's solution for ultimate lateral resistance of short piles (a) in sand and (b) in clay

where

FS = factor of safety (=2)

$q_u$  = unconfined compression strength

Figure 9.36 shows Broms's analysis of long piles. In the figure, the yield moment for the pile is

$$M_y = SF_Y \tag{9.109}$$

where



$S$  = section modulus of the pile section

$F_Y$  = yield stress of the pile material



In solving a given problem, both cases (i.e., Figure 9.35 and Figure 9.36) should be checked.

The deflection of the pile head,  $x_z(z = 0)$ , under working load conditions can be estimated from Figure 9.37. In Figure 9.37a, the term  $\eta$  can be expressed as

$$\eta = \sqrt[5]{\frac{n_h}{E_p I_p}} \tag{9.110}$$

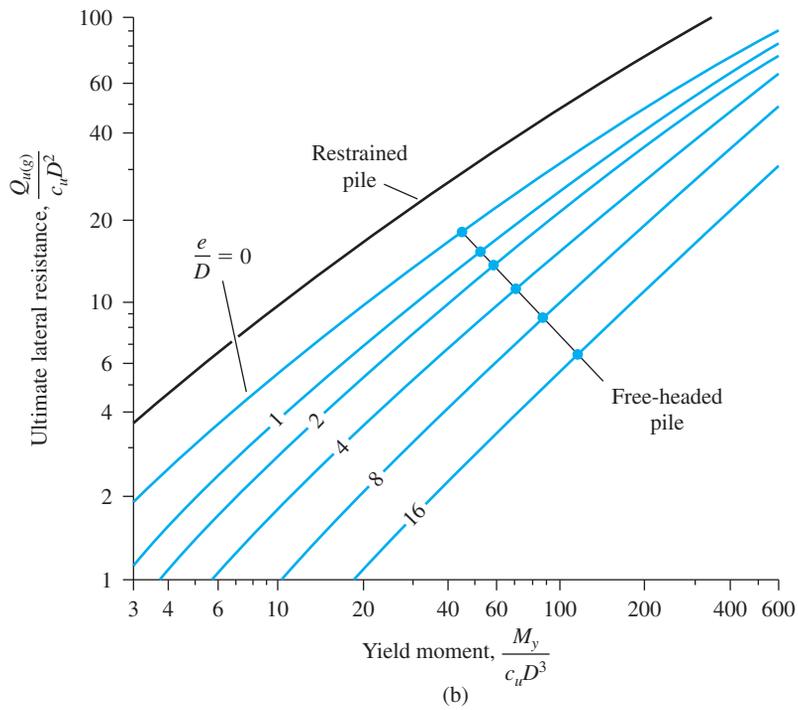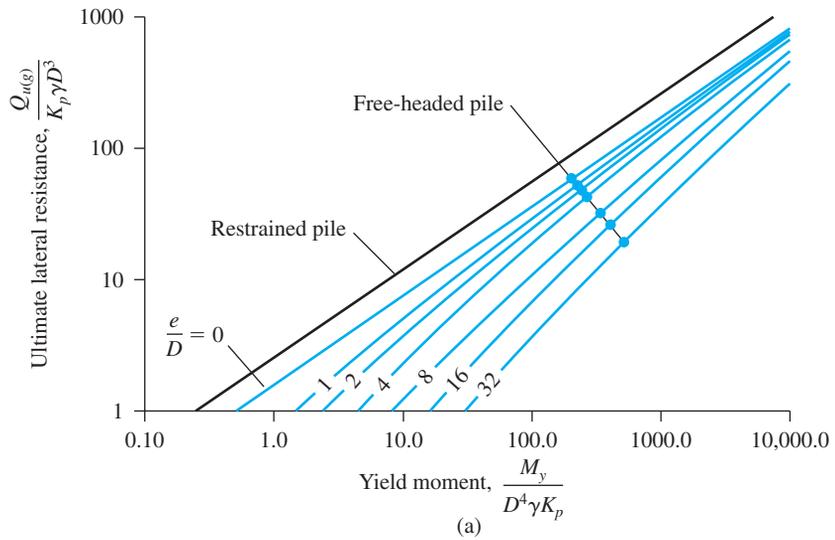

**Figure 9.36** Broms's solution for ultimate lateral resistance of long piles (a) in sand (b) in clay

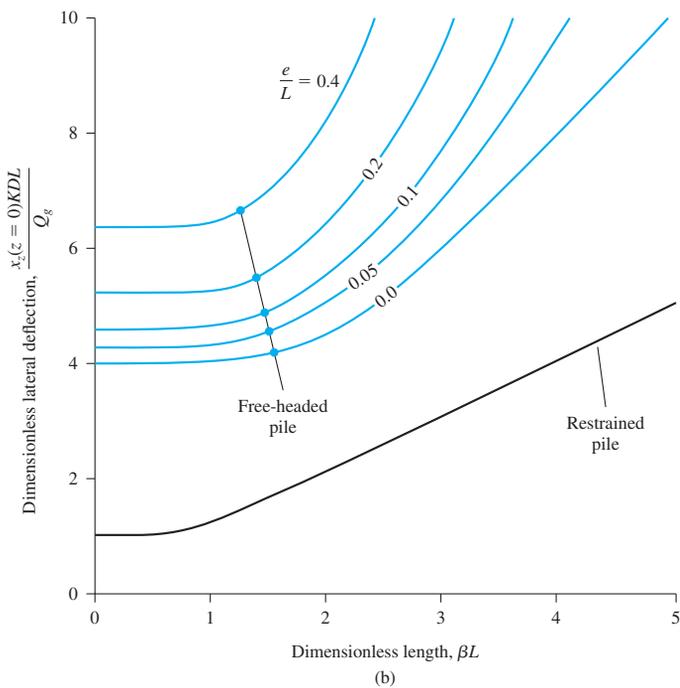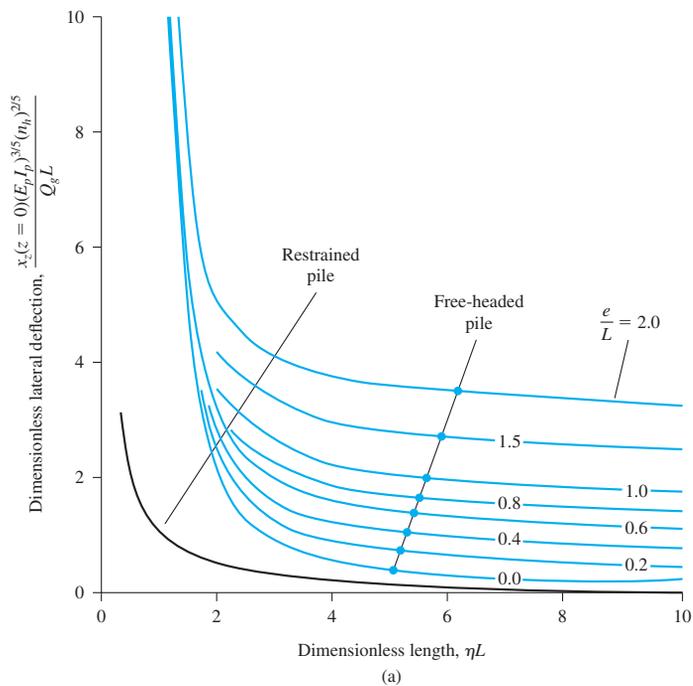

**Figure 9.37** Broms's solution for estimating deflection of pile head (a) in sand and (b) in clay

The range of  $n_h$  for granular soil is given in Table 9.16. Similarly, in Figure 9.37b, which is for clay, the term  $K$  is the horizontal soil modulus and can be defined as

$$K = \frac{\text{pressure (kN/m}^2 \text{ or lb/in}^2\text{)}}{\text{displacement (m or in.)}} \quad (9.111)$$

Also, the term  $\beta$  can be defined as

$$\beta = \sqrt[4]{\frac{KD}{4E_p I_p}} \quad (9.112)$$

Note that, in Figure 9.37,  $Q_g$  is the working load.

The following is a general range of values of  $K$  for clay soils.

Unconfined compression strength, $q_u$		$K$	
kN/m <sup>2</sup>	lb/in. <sup>2</sup>	kN/m <sup>3</sup>	lb/in. <sup>3</sup>
200	≈ 30	10,000–20,000	37–75
200–800	30–120	20,000–40,000	75–150
> 800	> 120	> 40,000	> 150

### Example 9.14

Consider a steel H-pile (HP 250 × 85) 25 m long, embedded fully in a granular soil. Assume that  $n_h = 12,000 \text{ kN/m}^3$ . The allowable displacement at the top of the pile is 8 mm. Determine the allowable lateral load,  $Q_g$ . Let  $M_g = 0$ . Use the elastic solution.

#### Solution

From Table 9.1a, for an HP 250 × 85 pile,

$$I_p = 123 \times 10^{-6} \text{ m}^4 \quad (\text{about the strong axis})$$

and let

$$E_p = 207 \times 10^6 \text{ kN/m}^2$$

From Eq. (9.98),

$$T = \sqrt[5]{\frac{E_p I_p}{n_h}} = \sqrt[5]{\frac{(207 \times 10^6)(123 \times 10^{-6})}{12,000}} = 1.16 \text{ m}$$

Here,  $L/T = 25/1.16 = 21.55 > 5$ , so the pile is a long one. Because  $M_g = 0$ , Eq. (9.93) takes the form

$$x_z(z) = A_x \frac{Q_g T^3}{E_p I_p}$$

and it follows that

$$Q_g = \frac{x_z(z)E_p I_p}{A_x T^3}$$

At  $z = 0$ ,  $x_z = 8 \text{ mm} = 0.008 \text{ m}$  and  $A_x = 2.435$  (see Table 9.15), so

$$Q_g = \frac{(0.008)(207 \times 10^6)(123 \times 10^{-6})}{(2.435)(1.16^3)} = 53.59 \text{ kN}$$

This magnitude of  $Q_g$  is based on the *limiting displacement condition only*. However, the magnitude of  $Q_g$  based on the *moment capacity* of the pile also needs to be determined. For  $M_g = 0$ , Eq. (9.95) becomes

$$M_z(z) = A_m Q_g T$$

According to Table 9.15, the maximum value of  $A_m$  at any depth is 0.772. The maximum allowable moment that the pile can carry is

$$M_{z(\max)} = F_Y \frac{I_p}{\frac{d_1}{2}}$$

Let  $F_Y = 248,000 \text{ kN/m}^2$ . From Table 9.1a,  $I_p = 123 \times 10^{-6} \text{ m}^4$  and  $d_1 = 0.254 \text{ m}$ , so

$$\frac{I_p}{\left(\frac{d_1}{2}\right)} = \frac{123 \times 10^{-6}}{\left(\frac{0.254}{2}\right)} = 968.5 \times 10^{-6} \text{ m}^3$$

Now,

$$Q_g = \frac{M_{z(\max)}}{A_m T} = \frac{(968.5 \times 10^{-6})(248,000)}{(0.772)(1.16)} = 268.2 \text{ kN}$$

Because  $Q_g = 268.2 \text{ kN} > 53.59 \text{ kN}$ , the deflection criteria apply. Hence,  $Q_g = 53.59 \text{ kN}$ . ■

### Example 9.15

Solve Example 9.14 by Broms's method. Assume that the pile is flexible and is free headed. Let the yield stress of the pile material,  $F_y = 248 \text{ MN/m}^2$ ; the unit weight of soil,  $\gamma = 18 \text{ kN/m}^3$ ; and the soil friction angle  $\phi' = 35^\circ$ .

#### Solution

We check for bending failure. From Eq. (9.109),

$$M_y = SF_y$$

From Table 9.1a,

$$S = \frac{I_p}{d_1} = \frac{123 \times 10^{-6}}{\frac{0.254}{2}}$$

Also,

$$M_y = \left[ \frac{123 \times 10^{-6}}{\frac{0.254}{2}} \right] (248 \times 10^3) = 240.2 \text{ kN-m}$$

and

$$\frac{M_y}{D^4 \gamma K_p} = \frac{M_y}{D^4 \gamma \tan^2 \left( 45 + \frac{\phi'}{2} \right)} = \frac{240.2}{(0.254)^4 (18) \tan^2 \left( 45 + \frac{35}{2} \right)} = 868.8$$

From Figure 9.36a, for  $M_y/D^4 \gamma K_p = 868.8$ , the magnitude of  $Q_{u(g)}/K_p D^3 \gamma$  (for a free-headed pile with  $e/D = 0$ ) is about 140, so

$$Q_{u(g)} = 140 K_p D^3 \gamma = 140 \tan^2 \left( 45 + \frac{35}{2} \right) (0.254)^3 (18) = 152.4 \text{ kN}$$

Next, we check for pile head deflection. From Eq. (9.110),

$$\eta = \sqrt[5]{\frac{n_h}{E_p I_p}} = \sqrt[5]{\frac{12,000}{(207 \times 10^6)(123 \times 10^{-6})}} = 0.86 \text{ m}^{-1}$$

so

$$\eta L = (0.86)(25) = 21.5$$

From Figure 9.37a, for  $\eta L = 21.5$ ,  $e/L = 0$  (free-headed pile): thus,

$$\frac{x_o(E_p I_p)^{3/5}(n_h)^{2/5}}{Q_g L} \approx 0.15 \quad (\text{by interpolation})$$

and

$$\begin{aligned} Q_g &= \frac{x_o(E_p I_p)^{3/5}(n_h)^{2/5}}{0.15L} \\ &= \frac{(0.008)[(207 \times 10^6)(123 \times 10^{-6})]^{3/5}(12,000)^{2/5}}{(0.15)(25)} = 40.2 \text{ kN} \end{aligned}$$

Hence,  $Q_g = 40.2 \text{ kN} (< 152.4 \text{ kN})$ . ■

**Example 9.16**

Assume that the 25-m-long pile described in Example 9.14 is a restrained pile and is embedded in clay soil. Given:  $c_u = 100 \text{ kN/m}^2$  and  $K = 5,000 \text{ kN/m}^3$ . The allowable lateral displacement at the top of the pile is 10 mm. Determine the allowable lateral load  $Q_g$ . Given  $M_g = 0$ . Use Broms's method.

**Solution**

From Example 9.15,  $M_y = 240.2 \text{ kN-m}$ . So

$$\frac{M_y}{c_u D^3} = \frac{240.2}{(100)(0.254)^3} = 146.6$$

For the unrestrained pile, from Figure 9.36b,

$$\frac{Q_{u(g)}}{c_u D^2} \approx 65$$

or

$$Q_{u(g)} = (65)(100)(0.254)^2 = 419.3 \text{ kN}$$

Check Pile-Head Deflection

From Eq. (9.112),

$$\beta = \sqrt[4]{\frac{KD}{4E_p I_p}} = \sqrt[4]{\frac{(5000)(0.254)}{(4)(207 \times 10^6)(123 \times 10^{-6})}} = 0.334$$

$$\beta L = (0.334)(25) = 8.35$$

From Figure 9.37b for  $\beta L = 8.35$ , by extrapolation the magnitude of

$$\frac{x_z(z=0)KDL}{Q_g} \approx 8$$

$$Q_g = \frac{x_z(z=0)KDL}{8} = \frac{\left(\frac{10}{1000}\right)(5000)(0.254)(25)}{8} = 39.7 \text{ kN}$$

Hence,  $Q_g = 39.7 \text{ kN} (< 419.3 \text{ kN})$  ■

**9.19 Pile-Driving Formulas**

To develop the desired load-carrying capacity, a point bearing pile must penetrate the dense soil layer sufficiently or have sufficient contact with a layer of rock. This requirement cannot always be satisfied by driving a pile to a predetermined depth, because soil profiles vary. For that reason, several equations have been developed to calculate the ultimate capacity of a pile

during driving. These dynamic equations are widely used in the field to determine whether a pile has reached a satisfactory bearing value at the predetermined depth. One of the earliest such equations—commonly referred to as the *Engineering News (EN) Record formula*—is derived from the work—energy theory. That is,

$$\text{Energy imparted by the hammer per blow} = (\text{pile resistance})(\text{penetration per hammer blow})$$

According to the EN formula, the pile resistance is the ultimate load  $Q_u$ , expressed as

$$Q_u = \frac{W_R h}{S + C} \quad (9.113)$$

where

- $W_R$  = weight of the ram
- $h$  = height of fall of the ram
- $S$  = penetration of pile per hammer blow
- $C$  = a constant

The pile penetration,  $S$ , is usually based on the average value obtained from the last few driving blows. In the equation's original form, the following values of  $C$  were recommended:

For drop hammers,

$$C = \begin{cases} 25.4 \text{ mm} & \text{if } S \text{ and } h \text{ are in mm} \\ 1 \text{ in.} & \text{if } S \text{ and } h \text{ are in inches} \end{cases}$$

For steam hammers,

$$C = \begin{cases} 2.54 \text{ mm} & \text{if } S \text{ and } h \text{ are in mm} \\ 0.1 \text{ in.} & \text{if } S \text{ and } h \text{ are in inches} \end{cases}$$

Also, a factor of safety  $FS = 6$  was recommended for estimating the allowable pile capacity. Note that, for single- and double-acting hammers, the term  $W_R h$  can be replaced by  $EH_E$ , where  $E$  is the efficiency of the hammer and  $H_E$  is the rated energy of the hammer. Thus,

$$Q_u = \frac{EH_E}{S + C} \quad (9.114)$$

The EN formula has been revised several times over the years, and other pile-driving formulas also have been suggested. Three of the other relationships generally used are tabulated in Table 9.17.

**Table 9.17** Pile-Driving Formulas

Name	Formula						
Modified EN formula	$Q_u = \frac{EW_R h}{S + C} \frac{W_R + n^2 W_p}{W_R + W_p}$						
where	$E$ = efficiency of hammer $C = 2.54$ mm if the units of $S$ and $h$ are in mm $C = 0.1$ in. if the units of $S$ and $h$ are in in. $W_p$ = weight of the pile $n$ = coefficient of restitution between the ram and the pile cap						
Typical values for $E$	<table> <tr> <td>Single- and double-acting hammers</td> <td>0.7–0.85</td> </tr> <tr> <td>Diesel hammers</td> <td>0.8–0.9</td> </tr> <tr> <td>Drop hammers</td> <td>0.7–0.9</td> </tr> </table>	Single- and double-acting hammers	0.7–0.85	Diesel hammers	0.8–0.9	Drop hammers	0.7–0.9
Single- and double-acting hammers	0.7–0.85						
Diesel hammers	0.8–0.9						
Drop hammers	0.7–0.9						
Typical values for $n$	<table> <tr> <td>Cast-iron hammer and concrete piles (without cap)</td> <td>0.4–0.5</td> </tr> <tr> <td>Wood cushion on steel piles</td> <td>0.3–0.4</td> </tr> <tr> <td>Wooden piles</td> <td>0.25–0.3</td> </tr> </table>	Cast-iron hammer and concrete piles (without cap)	0.4–0.5	Wood cushion on steel piles	0.3–0.4	Wooden piles	0.25–0.3
Cast-iron hammer and concrete piles (without cap)	0.4–0.5						
Wood cushion on steel piles	0.3–0.4						
Wooden piles	0.25–0.3						
Danish formula (Olson and Flaate, 1967)	$Q_u = \frac{EH_E}{S + \sqrt{\frac{EH_E L}{2A_p E_p}}}$						
where	$E$ = efficiency of hammer $H_E$ = rated hammer energy $E_p$ = modulus of elasticity of the pile material $L$ = length of the pile $A_p$ = cross-sectional area of the pile						
Janbu's formula (Janbu, 1953)	$Q_u = \frac{EH_E}{K'_u S}$						
where	$K'_u = C_d \left( 1 + \sqrt{1 + \frac{\lambda'}{C_d}} \right)$ $C_d = 0.75 + 0.14 \left( \frac{W_p}{W_R} \right)$ $\lambda' = \left( \frac{EH_E L}{A_p E_p S^2} \right)$						

The maximum stress developed on a pile during the driving operation can be estimated from the pile-driving formulas presented in Table 9.17. To illustrate, we use the modified EN formula:

$$Q_u = \frac{EW_R h}{S + C} \frac{W_R + n^2 W_p}{W_R + W_p}$$

In this equation,  $S$  is the average penetration per hammer blow, which can also be expressed as

$$S = \frac{1}{N} \quad (9.115)$$

where

$S$  is in inches

$N$  = number of hammer blows per inch of penetration

Thus,

$$Q_u = \frac{EW_R h}{(1/N) + 0.1} \frac{W_R + n^2 W_p}{W_R + W_p} \quad (9.116)$$

Different values of  $N$  may be assumed for a given hammer and pile, and  $Q_u$  may be calculated. The driving stress  $Q_u/A_p$  can then be calculated for each value of  $N$ . This procedure can be demonstrated with a set of numerical values. Suppose that a prestressed concrete pile 80 ft in length has to be driven by a hammer. The pile sides measure 10 in. From Table 9.3b, for this pile,

$$A_p = 100 \text{ in}^2$$

The weight of the pile is

$$A_p L \gamma_c = \left( \frac{100 \text{ in}^2}{144} \right) (80 \text{ ft}) (150 \text{ lb/ft}^3) = 8.33 \text{ kip}$$

If the weight of the cap is 0.67 kip, then

$$W_p = 8.33 + 0.67 = 9 \text{ kip}$$

For the hammer, let

$$\begin{aligned} \text{Rated energy} &= 19.2 \text{ kip-ft} = H_E = W_R h \\ \text{Weight of ram} &= 5 \text{ kip} \end{aligned}$$

Assume that the hammer efficiency is 0.85 and that  $n = 0.35$ . Substituting these values into Eq. (9.116) yields

$$Q_u = \left[ \frac{(0.85)(19.2 \times 12)}{\frac{1}{N} + 0.1} \right] \left[ \frac{5 + (0.35)^2(9)}{5 + 9} \right] = \frac{85.37}{\frac{1}{N} + 0.1} \text{ kip}$$

Now the following table can be prepared:

$N$	$Q_u$ (kip)	$A_p$ (in <sup>2</sup> )	$Q_u/A_p$ (kip/in <sup>2</sup> )
0	0	100	0
2	142.3	100	1.42
4	243.9	100	2.44
6	320.1	100	3.20
8	379.4	100	3.79
10	426.9	100	4.27
12	465.7	100	4.66
20	569.1	100	5.69

Both the number of hammer blows per inch and the stress can be plotted in a graph, as shown in Figure 9.38. If such a curve is prepared, the number of blows per inch of pile penetration corresponding to the allowable pile-driving stress can easily be determined.

Actual driving stresses in wooden piles are limited to about  $0.7f_u$ . Similarly, for concrete and steel piles, driving stresses are limited to about  $0.6f'_c$  and  $0.85f_y$ , respectively.

In most cases, wooden piles are driven with a hammer energy of less than 60 kN-m ( $\approx 45$  kip-ft). Driving resistances are limited mostly to 4 to 5 blows per inch of pile penetration. For concrete and steel piles, the usual values of  $N$  are 6 to 8 and 12 to 14, respectively.

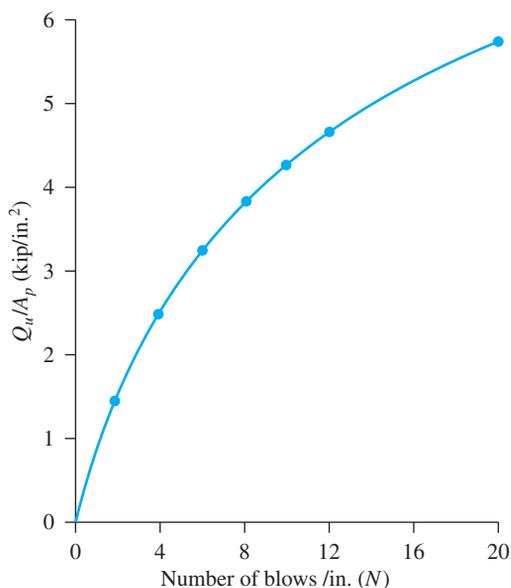


Figure 9.38 Plot of stress versus blows/in.

**Example 9.17**

A precast concrete pile 12 in.  $\times$  12 in. in cross section is driven by a hammer. Given

Maximum rated hammer energy = 30 kip-ft

Hammer efficiency = 0.8

Weight of ram = 7.5 kip

Pile length = 80 ft

Coefficient of restitution = 0.4

Weight of pile cap = 550 lb

$E_p = 3 \times 10^6$  lb/in<sup>2</sup>

Number of blows for last 1 in. of penetration = 8

Estimate the allowable pile capacity by the

a. Modified EN formula (use FS = 6)

b. Danish formula (use FS = 4)

**Solution**

Part a

$$Q_u = \frac{EW_R h}{S + C} \frac{W_R + n^2 W_p}{W_R + W_p}$$

$$\begin{aligned} \text{Weight of pile + cap} &= \left( \frac{12}{12} \times \frac{12}{12} \times 80 \right) (150 \text{ lb/ft}^3) + 550 \\ &= 12,550 \text{ lb} = 12.55 \text{ kip} \end{aligned}$$

Given:  $W_R h = 30$  kip-ft.

$$Q_u = \frac{(0.8)(30 \times 12 \text{ kip-in.})}{\frac{1}{8} + 0.1} \times \frac{7.5 + (0.4)^2(12.55)}{7.5 + 12.55} = 607 \text{ kip}$$

$$Q_{\text{all}} = \frac{Q_u}{\text{FS}} = \frac{607}{6} \approx \mathbf{101 \text{ kip}}$$

Part b

$$Q_u = \frac{EH_E}{S + \sqrt{\frac{EH_E L}{2A_p E_p}}}$$

Use  $E_p = 3 \times 10^6$  lb/in<sup>2</sup>.

$$\sqrt{\frac{EH_E L}{2A_p E_p}} = \sqrt{\frac{(0.8)(30 \times 12)(80 \times 12)}{2(12 \times 12) \left( \frac{3 \times 10^6}{1000} \text{ kip/in}^2 \right)}} = 0.566 \text{ in.}$$

$$Q_u = \frac{(0.8)(30 \times 12)}{\frac{1}{8} + 0.566} \approx 417 \text{ kip}$$

$$Q_{\text{all}} = \frac{417}{4} \approx \mathbf{104 \text{ kip}}$$

## 9.20 Pile Capacity For Vibration-Driven Piles

The principles of vibratory pile drivers (Figure 9.7e) were discussed briefly in Section 9.4. As mentioned there, the driver essentially consists of two counterrotating weights. The amplitude of the centrifugal driving force generated by a vibratory hammer can be given as

$$F_c = me\omega^2 \quad (9.117)$$

where

$m$  = total eccentric rotating mass

$e$  = distance between the center of each rotating mass and the center of rotation

$\omega$  = operating circular frequency

Vibratory hammers typically include an isolated *bias weight* that can range from 4 to 40 kN. The bias weight is isolated from oscillation by springs, so it acts as a net downward load helping the driving efficiency by increasing the penetration rate of the pile.

The use of vibratory pile drivers began in the early 1930s. Installing piles with vibratory drivers produces less noise and damage to the pile, compared with impact driving. However, because of a limited understanding of the relationships between the load, the rate of penetration, and the bearing capacity of piles, this method has not gained popularity in the United States.

Vibratory pile drivers are patented. Some examples are the Bodine Resonant Driver (BRD), the Vibro Driver of the McKiernan-Terry Corporation, and the Vibro Driver of the L. B. Foster Company. Davisson (1970) provided a relationship for estimating the ultimate pile capacity in granular soil:

In SI units,

$$Q_u(\text{kN}) = \frac{0.746(H_p) + 98(v_p \text{ m/s})}{(v_p \text{ m/s}) + (S_L \text{ m/cycle})(f \text{ Hz})} \quad (9.118)$$

In English units,

$$Q_u(\text{lb}) = \frac{550(H_p) + 22,000(v_p \text{ ft/s})}{(v_p \text{ ft/s}) + (S_L \text{ ft/cycle})(f \text{ Hz})} \quad (9.119)$$

where

$H_p$  = horsepower delivered to the pile

$v_p$  = final rate of pile penetration

$S_L$  = loss factor

$f$  = frequency, in Hz

The loss factor  $S_L$  for various types of granular soils is as follows (Bowles, 1996):

### Closed-End Pipe Piles

- Loose sand:  $0.244 \times 10^{-3}$  m/cycle (0.0008 ft/cycle)
- Medium dense sand:  $0.762 \times 10^{-3}$  m/cycle (0.0025 ft/cycle)
- Dense sand:  $2.438 \times 10^{-3}$  m/cycle (0.008 ft/cycle)

**H-Piles**

- Loose sand:  $-0.213 \times 10^{-3}$  m/cycle ( $-0.0007$  ft/cycle)
- Medium dense sand:  $0.762 \times 10^{-3}$  m/cycle ( $0.0025$  ft/cycle)
- Dense sand:  $2.134 \times 10^{-3}$  m/cycle ( $0.007$  ft/cycle)

In 2000, Feng and Deschamps provided the following relationship for the ultimate capacity of vibrodriven piles in granular soil:

$$Q_u = \frac{3.6(F_c + 11W_B)}{1 + 1.8 \times 10^{10} \frac{v_p}{c} \sqrt{\text{OCR}}} \frac{L_E}{L} \quad (9.120)$$

Here,

$F_c$  = centrifugal force

$W_B$  = bias weight

$v_p$  = final rate of pile penetration

$c$  = speed of light [ $1.8 \times 10^{10}$  m/min ( $5.91 \times 10^{10}$  ft/min)]

OCR = overconsolidation ratio

$L_E$  = embedded length of pile

$L$  = pile length

**Example 9.18**

Consider a 20-m-long steel pile driven by a Bodine Resonant Driver (Section HP 310  $\times$  125) in a medium dense sand. If  $H_p = 350$  horsepower,  $v_p = 0.0016$  m/s, and  $f = 115$  Hz, calculate the ultimate pile capacity,  $Q_u$ .

**Solution**

From Eq. (9.118),

$$Q_u = \frac{0.746H_p + 98v_p}{v_p + S_L f}$$

For an H-pile in medium dense sand,  $S_L \approx 0.762 \times 10^{-3}$  m/cycle. So

$$Q_u = \frac{(0.746)(350) + (98)(0.0016)}{0.0016 + (0.762 \times 10^{-3})(115)} = \mathbf{2928 \text{ kN}}$$

**9.21 Wave Equation Analysis**

Pile-driving formulas presented in Section 9.19 are unreliable, and engineers have never been able to agree as to which one is the best. These formulas are mostly empirical and apply only to certain types and lengths of piles. The availability of high-speed computing capabilities has given way to the development of wave equation analysis, which is pile-driving dynamics. It

considers the stress wave-propagation effect during the pile-driving process, which is somewhat similar to the propagation of stress waves along a long slender rod that can be written as

$$\frac{\partial^2 u}{\partial t^2} = v_c^2 \frac{\partial^2 u}{\partial z^2} \quad (9.121)$$

where

$u$  = displacement of pile at depth  $z$  measured from the ground surface

$t$  = time

$v_c = \sqrt{\frac{E}{\rho}}$  = velocity of longitudinal stress wave propagation

$\rho$  = mass density of the pile material

$E$  = modulus of elasticity of the pile material


A detailed derivation of Eq. (9.121) can be found in any soil dynamics book (e.g., Das and Ramana, 2011).

Smith (1960) used the wave propagation relationship given in Eq. (9.121), numerical modeling, and digital computers for the development of the fundamentals of the wave equation analysis of piles. The wave equations given are

- Pile capacity
- Equipment compatibility
- Driving stresses

The numerical model of Smith (1960) is shown as an example in Figure 9.39. The pile is divided into several short sections (elements), such as 1.5 m (5 ft) or 3 m (10 ft) in length. In Figure 9.39, the pile is divided into ten sections. The individual weight of these sections are  $W_3, W_4, \dots, W_{12}$ . The weight of the ram and pile cap are  $W_1$  and  $W_2$ , respectively. The elasticity of each pile element is represented by an individual spring, such as  $K_2, K_3, \dots, K_{11}$  in Figure 9.39. Also note that  $R_3, R_4, \dots, R_{11}$  represent side frictional resistance, and  $R_{12}$  represents the pile tip resistance. The soil–pile interface of the pile elements and the bottom of the lowest element are modeled using a series of springs and dashpots. The springs proposed by Smith (1960) are as shown in Figure 9.40(a), for example, for the pile point. The spring resistance increases with displacement in a linear manner until it reaches point A. When the displacement is  $q$ , which is known as *quake*, the ultimate resistance is  $R_u$ , beyond this point it becomes plastic. The dashpot resistance is a linear function of the velocity and is defined by the term *damping coefficient*,  $J$  (resistance/velocity =  $J$ ), as shown in Figure 9.40(b). The numerical values of the quake, ultimate resistance, and damping coefficient for each element are primarily functions of soil type. Smith (1960) suggested a quake value of 2.5 mm (0.1 in.), which has been modified by other researchers since then.

This model simulates pile driving that is initiated by imparting hammer energy to the ram. The compression stress wave thus generated travels down to the bottom of the pile and reflects back as the compression wave moving upward. Tension may develop as two compression waves travelling in opposite directions pass each other. This can happen when the pile goes through a harder layer and the pile tip is located on a softer layer. With the dissipation of the stress waves, the pile advances downward through a

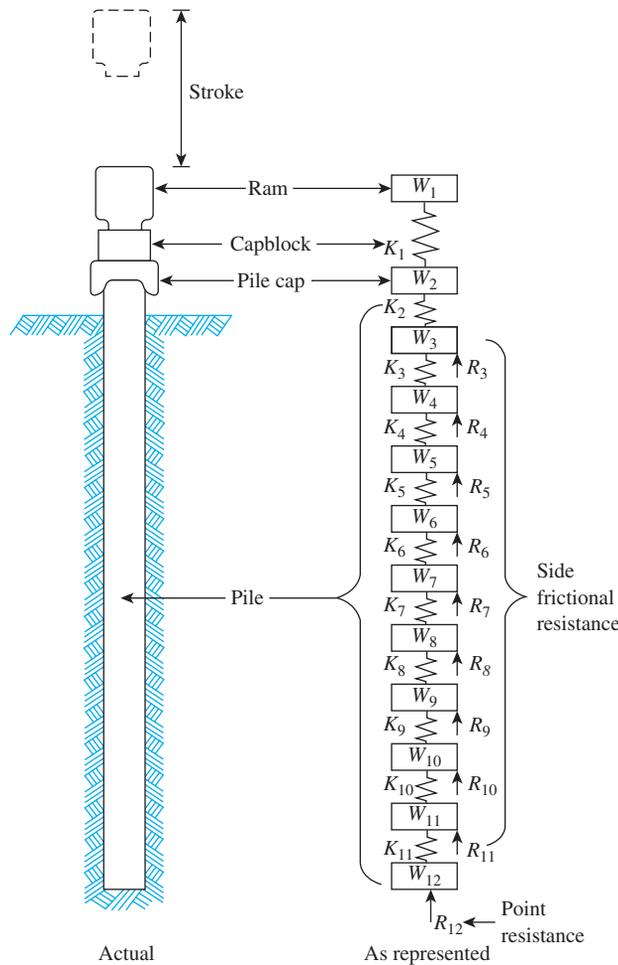


**Figure 9.39** Wave equation model for driven piles (Based on Smith, 1960)

certain distance called a *set*. Smith (1960) provided an example of time versus displacement of the pile elements, as shown in Figure 9.41. Referring to Figure 9.39, the following parameters were used:


- Steel H-pile—length 30 m (100 ft)
- Length of each unit of pile—3 m (10 ft)
- At pile point— $q = 2.5$  m (0.1 m),  $R_u = 889.6$  kN (200 kip)
- Ram impact velocity—3.78 m/sec (12.4 ft/sec)

In Figure 9.41,  $D_1$  to  $D_{12}$  are the calculated displacements of weights  $W_1$  to  $W_{12}$  as well as the plastic ground displacement  $D'_p$ , which is the permanent set of 5.159 mm (0.20311 in.).

The pile bearing capacity from the wave equation model is obtained by summing all of the  $R$ -values that represent both side friction and point bearing. The analysis is repeated with different assumed  $R$ -values to develop a plot of pile capacity versus blow count ( $N$ ), which can be used in construction control.

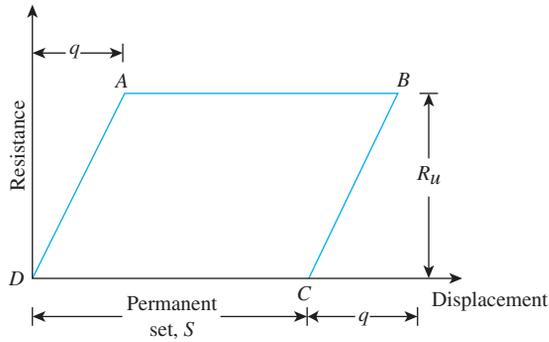


(a)

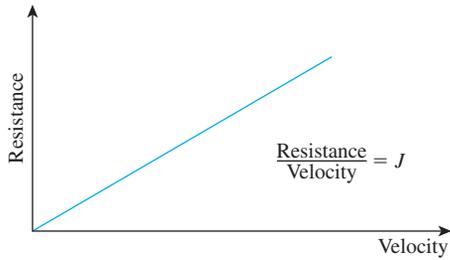

(b)

**Figure 9.40** Model for soil–pile interface at pile point: (a) bilinear spring; (b) dashpot

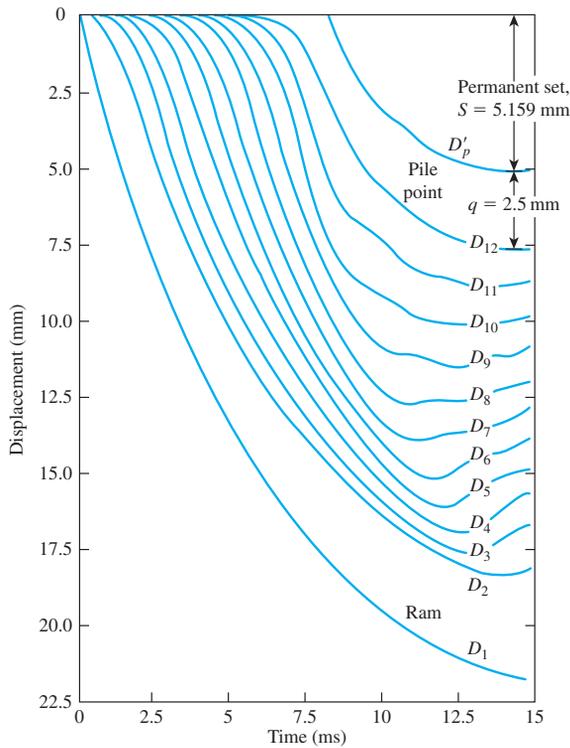

**Figure 9.41** Example of wave equation analysis (Based on Smith, 1960)

## 9.22 Negative Skin Friction

Negative skin friction is a downward drag force exerted on a pile by the soil surrounding it. Such a force can exist under the following conditions, among others:

1. If a fill of clay soil is placed over a granular soil layer into which a pile is driven, the fill will gradually consolidate. The consolidation process will exert a downward drag force on the pile (see Figure 9.42a) during the period of consolidation.
2. If a fill of granular soil is placed over a layer of soft clay, as shown in Figure 9.42b, it will induce the process of consolidation in the clay layer and thus exert a downward drag on the pile.
3. Lowering of the water table will increase the vertical effective stress on the soil at any depth, which will induce consolidation settlement in clay. If a pile is located in the clay layer, it will be subjected to a downward drag force.

In some cases, the downward drag force may be excessive and cause foundation failure. This section outlines two tentative methods for the calculation of negative skin friction.

### Clay Fill over Granular Soil (Figure 9.42a)

Similar to the  $\beta$  method presented in Section 9.13, the negative (downward) skin stress on the pile is

$$f_n = K' \sigma'_o \tan \delta' \quad (9.122)$$

where

$K'$  = earth pressure coefficient =  $K_o = 1 - \sin \phi'$

$\sigma'_o$  = vertical effective stress at any depth  $z = \gamma'_f z$

$\gamma'_f$  = effective unit weight of fill

$\delta'$  = soil–pile friction angle  $\approx 0.5\text{--}0.7\phi'$

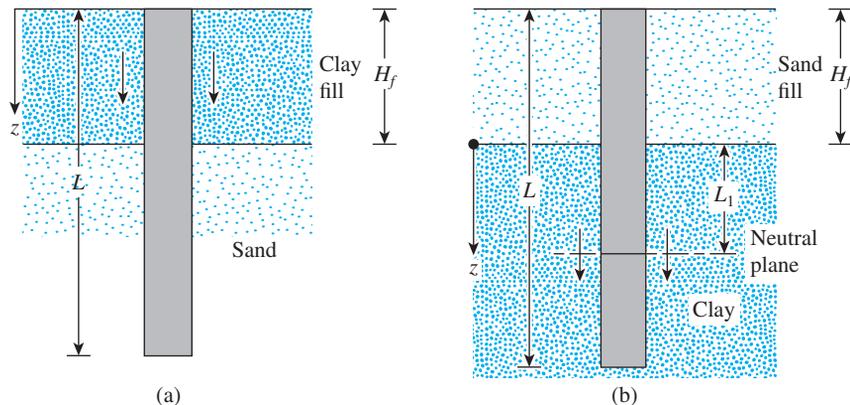


Figure 9.42 Negative skin friction

Hence, the total downward drag force on a pile is

$$Q_n = \int_0^{H_f} (pK'\gamma'_f \tan \delta')z \, dz = \frac{pK'\gamma'_f H_f^2 \tan \delta'}{2} \quad (9.123)$$

where  $H_f$  = height of the fill. If the fill is above the water table, the effective unit weight,  $\gamma'_f$ , should be replaced by the moist unit weight.

### Granular Soil Fill over Clay (Figure 9.42b)

In this case, the evidence indicates that the negative skin stress on the pile may exist from  $z = 0$  to  $z = L_1$ , which is referred to as the *neutral depth*. (See Vesic, 1977, pp. 25–26.) The neutral depth may be given as (Bowles, 1982)

$$L_1 = \frac{(L - H_f)}{L_1} \left[ \frac{L - H_f}{2} + \frac{\gamma'_f H_f}{\gamma'} \right] - \frac{2\gamma'_f H_f}{\gamma'} \quad (9.124)$$

where  $\gamma'_f$  and  $\gamma'$  = effective unit weights of the fill and the underlying clay layer, respectively.

For end-bearing piles, the neutral depth may be assumed to be located at the pile tip (i.e.,  $L_1 = L - H_f$ ).

Once the value of  $L_1$  is determined, the downward drag force is obtained in the following manner: The unit negative skin friction at any depth from  $z = 0$  to  $z = L_1$  is

$$f_n = K'\sigma'_o \tan \delta' \quad (9.125)$$

where

$$K' = K_o = 1 - \sin \phi'$$


$$\sigma'_o = \gamma'_f H_f + \gamma'z$$

$$\delta' = 0.5-0.7\phi'$$

$$\begin{aligned} Q_n &= \int_0^{L_1} p f_n \, dz = \int_0^{L_1} pK'(\gamma'_f H_f + \gamma'z) \tan \delta' \, dz \\ &= (pK'\gamma'_f H_f \tan \delta')L_1 + \frac{L_1^2 pK'\gamma' \tan \delta'}{2} \end{aligned} \quad (9.126)$$

If the soil and the fill are above the water table, the effective unit weights should be replaced by moist unit weights. In some cases, the piles can be coated with bitumen in the downdrag zone to avoid this problem.

A limited number of case studies of negative skin friction is available in the literature. Bjerrum et al. (1969) reported monitoring the downdrag force on a test pile at

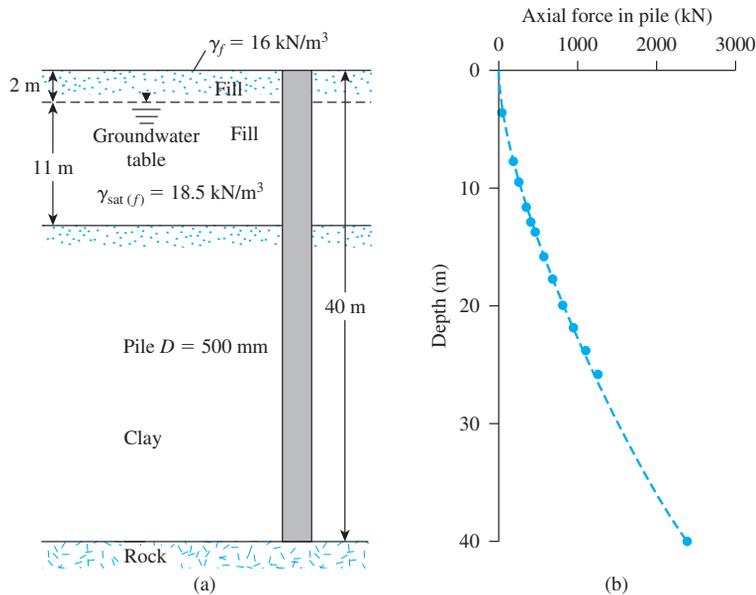

**Figure 9.43** Negative skin friction on a pile in the harbor of Oslo, Norway (Based on Bjerrum et al., (1969) and Wong and Teh (1995))

Sorenga in the harbor of Oslo, Norway (noted as pile G in the original paper). The study of Bjerrum et al. (1969) was also discussed by Wong and Teh (1995) in terms of the pile being driven to bedrock at 40 m. Figure 9.43a shows the soil profile and the pile. Wong and Teh estimated the following quantities:

- *Fill*: Moist unit weight,  $\gamma_f = 16 \text{ kN/m}^3$   
Saturated unit weight,  $\gamma_{\text{sat}(f)} = 18.5 \text{ kN/m}^3$   
So  
$$\gamma'_f = 18.5 - 9.81 = 8.69 \text{ kN/m}^3$$
and  
$$H_f = 13 \text{ m}$$
- *Clay*:  $K' \tan \delta' \approx 0.22$   
Saturated effective unit weight,  $\gamma' = 19 - 9.81 = 9.19 \text{ kN/m}^3$
- *Pile*:  $L = 40 \text{ m}$   
Diameter,  $D = 500 \text{ m}$

Thus, the maximum downdrag force on the pile can be estimated from Eq. (9.126). Since in this case the pile is a point bearing pile, the magnitude of  $L_1 = 27 \text{ m}$ , and

$$Q_n = (p)(K' \tan \delta')[\gamma_f \times 2 + (13 - 2)\gamma'_f](L_1) + \frac{L_1^2 p \gamma' (K' \tan \delta')}{2}$$

or

$$Q_n = (\pi \times 0.5)(0.22)[(16 \times 2) + (8.69 \times 11)](27) + \frac{(27)^2 (\pi \times 0.5)(9.19)(0.22)}{2}$$

$$= 2348 \text{ kN}$$

The measured value of the maximum  $Q_n$  was about 2500 kN (Figure 9.43b), which is in good agreement with the calculated value.

### Example 9.19

In Figure 9.42a, let  $H_f = 2$  m. The pile is circular in cross section with a diameter of 0.305 m. For the fill that is above the water table,  $\gamma_f = 16$  kN/m<sup>3</sup> and  $\phi' = 32^\circ$ . Determine the total drag force. Use  $\delta' = 0.6\phi'$ .

#### Solution

From Eq. (9.123),

$$Q_n = \frac{pK'\gamma_f H_f^2 \tan \delta'}{2}$$

with

$$p = \pi(0.305) = 0.958 \text{ m}$$

$$K' = 1 - \sin \phi' = 1 - \sin 32 = 0.47$$

and

$$\delta' = (0.6)(32) = 19.2^\circ$$

Thus,

$$Q_n = \frac{(0.958)(0.47)(16)(2)^2 \tan 19.2}{2} = 5.02 \text{ kN}$$

### Example 9.20

In Figure 9.42b, let  $H_f = 2$  m, pile diameter = 0.305 m,  $\gamma_f = 16.5$  kN/m<sup>3</sup>,  $\phi'_{\text{clay}} = 34^\circ$ ,  $\gamma_{\text{sat}(\text{clay})} = 17.2$  kN/m<sup>3</sup>, and  $L = 20$  m. The water table coincides with the top of the clay layer. Determine the downward drag force. Assume that  $\delta' = 0.6\phi'_{\text{clay}}$ .

#### Solution

The depth of the neutral plane is given in Eq. (9.124) as

$$L_1 = \frac{L - H_f}{L_1} \left( \frac{L - H_f}{2} + \frac{\gamma_f H_f}{\gamma'} \right) - \frac{2\gamma_f H_f}{\gamma'}$$

Note that  $\gamma'_f$  in Eq. (9.124) has been replaced by  $\gamma_f$  because the fill is above the water table, so

$$L_1 = \frac{(20 - 2)}{L_1} \left[ \frac{(20 - 2)}{2} + \frac{(16.5)(2)}{(17.2 - 9.81)} \right] - \frac{(2)(16.5)(2)}{(17.2 - 9.81)}$$

or

$$L_1 = \frac{242.4}{L_1} - 8.93; L_1 = 11.75 \text{ m}$$

Now, from Eq. (9.126), we have

$$Q_n = (pK'\gamma_f H_f \tan \delta')L_1 + \frac{L_1^2 pK'\gamma' \tan \delta'}{2}$$

with

$$p = \pi(0.305) = 0.958 \text{ m}$$

and

$$K' = 1 - \sin 34^\circ = 0.44$$

Hence,

$$\begin{aligned} Q_n &= (0.958)(0.44)(16.5)(2)[\tan(0.6 \times 34)](11.75) \\ &\quad + \frac{(11.75)^2(0.958)(0.44)(17.2 - 9.81)[\tan(0.6 \times 34)]}{2} \\ &= 60.78 + 79.97 = \mathbf{140.75 \text{ kN}} \end{aligned}$$

■

## Group Piles

### 9.23 Group Efficiency

In most cases, piles are used in groups, as shown in Figure 9.44, to transmit the structural load to the soil. A *pile cap* is constructed over *group piles*. The cap can be in contact with the ground, as in most cases (see Figure 9.44a), or well above the ground, as in the case of offshore platforms (see Figure 9.44b).

Determining the load-bearing capacity of group piles is extremely complicated and has not yet been fully resolved. When the piles are placed close to each other, a reasonable assumption is that the stresses transmitted by the piles to the soil will overlap (see Figure 9.44c), reducing the load-bearing capacity of the piles. Ideally, the piles in a group should be spaced so that the load-bearing capacity of the group is not less than the sum of the bearing capacity of the individual piles. In practice, the minimum center-to-center pile spacing,  $d$ , is  $2.5D$  and, in ordinary situations, is actually about 3 to  $3.5D$ .

The efficiency of the load-bearing capacity of a group pile may be defined as

$$\eta = \frac{Q_{g(u)}}{\sum Q_u} \quad (9.127)$$

where

- $\eta$  = group efficiency
- $Q_{g(u)}$  = ultimate load-bearing capacity of the group pile
- $Q_u$  = ultimate load-bearing capacity of each pile without the group effect

Figure 9.45 shows the driving of piles in a group.

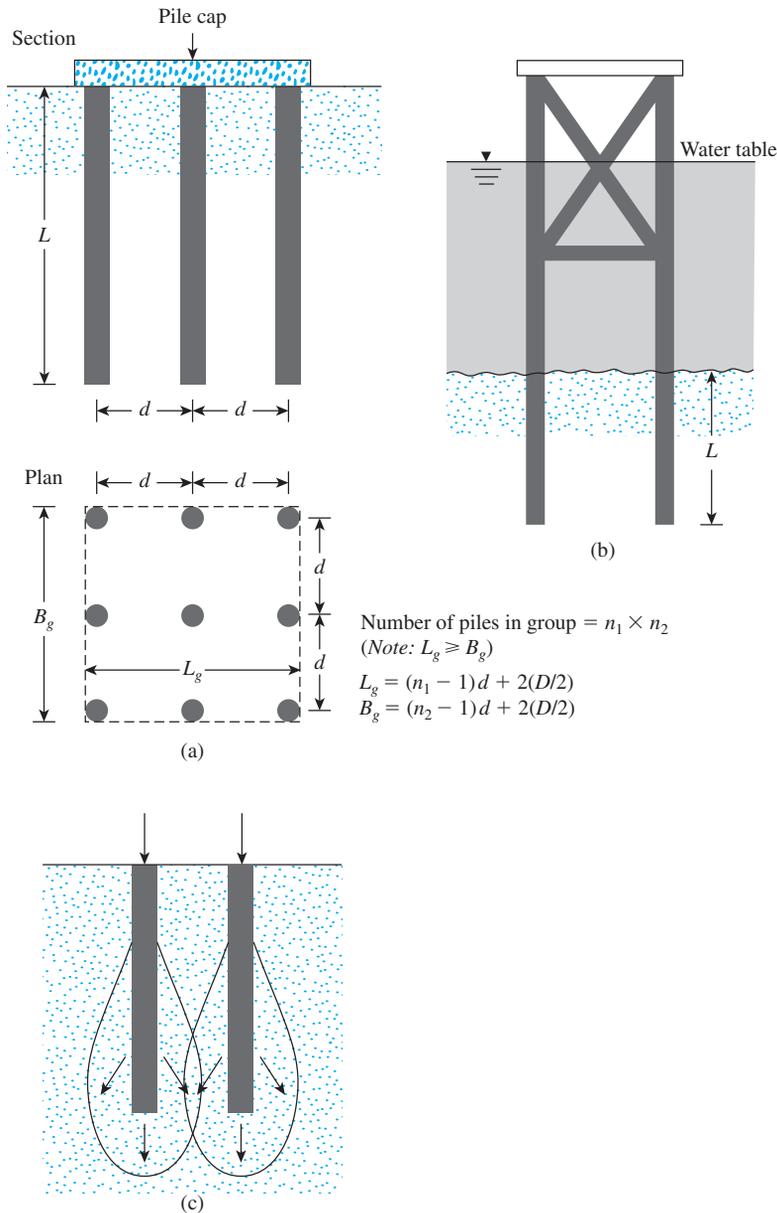


Figure 9.44 Group piles

Many structural engineers use a simplified analysis to obtain the group efficiency for *friction piles*, particularly in sand. This type of analysis can be explained with the aid of Figure 9.44a. Depending on their spacing within the group, the piles may act in one of two ways: (1) as a *block*, with dimensions  $L_g \times B_g \times L$ , or (2) as *individual piles*. If the piles act as a block, the frictional capacity is  $f_{av} p_g L \approx Q_{g(u)}$ . [Note:  $p_g$  = perimeter of the cross section of block =  $2(n_1 + n_2 - 2)d + 4D$ , and  $f_{av}$  = average unit frictional resistance.]



**Figure 9.45** Driving of piles in a group  
(Courtesy of N. Sivakugan, James Cook University, Australia)

Similarly, for each pile acting individually,  $Q_u \approx pLf_{av}$ . (Note:  $p$  = perimeter of the cross section of each pile.) Thus,

$$\begin{aligned}\eta &= \frac{Q_{g(u)}}{\Sigma Q_u} = \frac{f_{av}[2(n_1 + n_2 - 2)d + 4D]L}{n_1 n_2 p L f_{av}} \\ &= \frac{2(n_1 + n_2 - 2)d + 4D}{pn_1 n_2}\end{aligned}\quad (9.128)$$

Hence,

$$Q_{g(u)} = \left[ \frac{2(n_1 + n_2 - 2)d + 4D}{pn_1 n_2} \right] \Sigma Q_u \quad (9.129)$$

From Eq. (9.129), if the center-to-center spacing  $d$  is large enough,  $\eta > 1$ . In that case, the piles will behave as individual piles. Thus, in practice, if  $\eta < 1$ , then

$$Q_{g(u)} = \eta \Sigma Q_u$$

and if  $\eta \geq 1$ , then

$$Q_{g(u)} = \Sigma Q_u$$

There are several other equations like Eq. (9.129) for calculating the group efficiency of friction piles. Some of these are given in Table 9.18.

It is important, however, to recognize that relationships such as Eq. (9.129) are simplistic and should not be used.

**Table 9.18** Equations for Group Efficiency of Friction Piles

Name	Equation
Converse–Labarre equation	$\eta = 1 - \left[ \frac{(n_1 - 1)n_2 + (n_2 - 1)n_1}{90n_1n_2} \right] \theta$ <p>where <math>\theta(\text{deg}) = \tan^{-1}(D/d)</math></p>
Los Angeles Group Action equation	$\eta = 1 - \frac{D}{\pi d n_1 n_2} [n_1(n_2 - 1) + n_2(n_1 - 1) + \sqrt{2}(n_1 - 1)(n_2 - 1)]$
Seiler–Keeney equation (Seiler and Keeney, 1944)	$\eta = \left\{ 1 - \left[ \frac{11d}{7(d^2 - 1)} \right] \left[ \frac{n_1 + n_2 - 2}{n_1 + n_2 - 1} \right] \right\} + \frac{0.3}{n_1 + n_2}$ <p>where <math>d</math> is in ft</p>

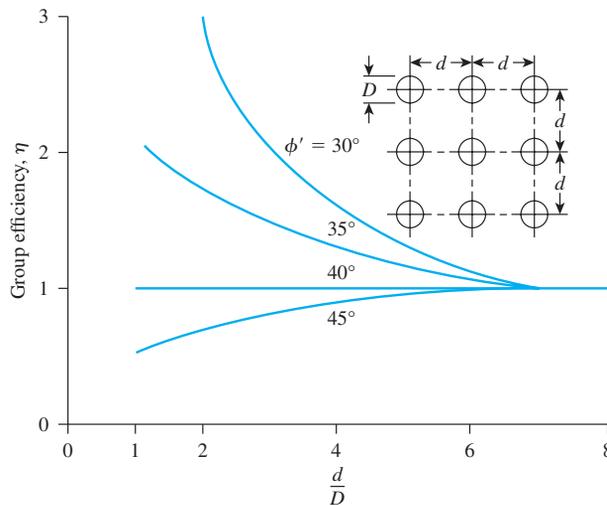

**Figure 9.46** Variation of efficiency of pile groups in sand (Based on Kishida and Meyerhof, 1965)


Figure 9.46 shows the variation of the group efficiency  $\eta$  for a  $3 \times 3$  group pile in sand (Kishida and Meyerhof, 1965). It can be seen that, for loose and medium sands, the magnitude of the group efficiency can be larger than unity. This is due primarily to the densification of sand surrounding the pile.

## 9.24 Ultimate Capacity of Group Piles in Saturated Clay

Figure 9.47 shows a group pile in saturated clay. Using the figure, one can estimate the ultimate load-bearing capacity of group piles in the following manner:

*Step 1.* Determine  $\Sigma Q_u = n_1 n_2 (Q_p + Q_s)$ . From Eq. (9.18),

$$Q_p = A_p [9c_{u(p)}]$$

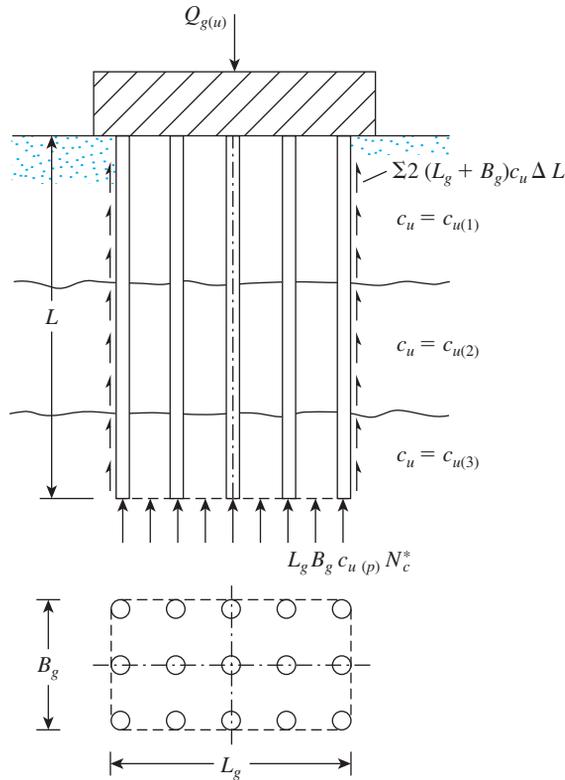

**Figure 9.47** Ultimate capacity of group piles in clay

where  $c_{u(p)}$  = undrained cohesion of the clay at the pile tip.

Also, from Eq. (9.59),

$$Q_s = \sum \alpha p c_u \Delta L$$

So,

$$\sum Q_u = n_1 n_2 [9A_p c_{u(p)} + \sum \alpha p c_u \Delta L] \quad (9.130)$$

**Step 2.** Determine the ultimate capacity by assuming that the piles in the group act as a block with dimensions  $L_g \times B_g \times L$ . The skin resistance of the block is

$$\sum p_g c_u \Delta L = \sum 2(L_g + B_g)c_u \Delta L$$


Calculate the point bearing capacity:

$$A_p q_p = A_p c_{u(p)} N_c^* = (L_g B_g) c_{u(p)} N_c^*$$

Obtain the value of the bearing capacity factor  $N_c^*$  from Figure 9.48. Thus, the ultimate load is

$$\sum Q_u = L_g B_g c_{u(p)} N_c^* + \sum 2(L_g + B_g)c_u \Delta L \quad (9.131)$$

**Step 3.** Compare the values obtained from Eqs. (9.130) and (9.131). The *lower* of the two values is  $Q_{g(u)}$ .

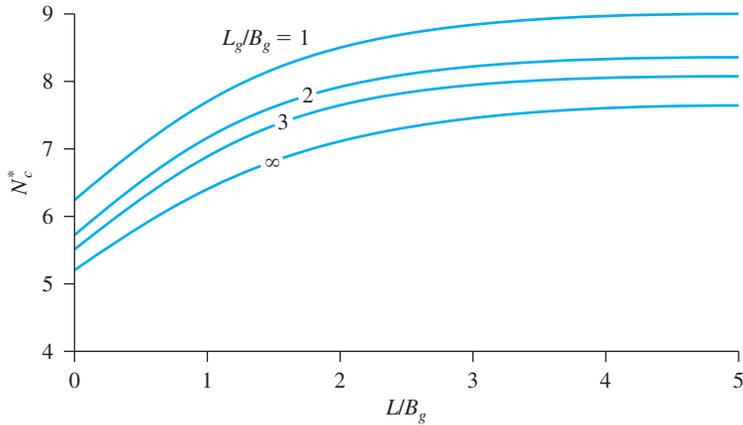

**Figure 9.48** Variation of  $N_c^*$  with  $L_g/B_g$  and  $L/B_g$

### Example 9.21

The section of a  $3 \times 4$  group pile in a layered saturated clay is shown in Figure 9.49. The piles are square in cross section (14 in.  $\times$  14 in.). The center-to-center spacing,  $d$ , of the piles is 35 in. Determine the allowable load-bearing capacity of the pile group. Use FS = 4. Note that the groundwater table coincides with the ground surface.

#### Solution

From Eq. (9.130),

$$\Sigma Q_u = n_1 n_2 [9A_p c_{u(p)} + \alpha_1 p c_{u(1)} L_1 + \alpha_2 p c_{u(2)} L_2]$$

From Figure 9.49,  $c_{u(1)} = 1050 \text{ lb/ft}^2$  and  $c_{u(2)} = 1775 \text{ lb/ft}^2$ .

For the top layer with  $c_{u(1)} = 1050 \text{ lb/ft}^2$ ,

$$\frac{c_{u(1)}}{p_a} = \frac{1050}{2000} = 0.525$$

From Table 9.10,  $\alpha_1 \approx 0.68$ . Similarly,

$$\frac{c_{u(2)}}{p_a} = \frac{1775}{2000} \approx 0.89$$

$$\alpha_2 = 0.51$$

$$\Sigma Q_u = \frac{(3)(4)}{1000} \left[ (9) \left( \frac{14}{12} \right)^2 (1775) + (0.68) \left( 4 \times \frac{14}{12} \right) (1050)(15) \right. \\ \left. + (0.51) \left( 4 \times \frac{14}{12} \right) (1775)(45) \right] = 3141.9 \text{ kip}$$

For piles acting as a group.

$$L_g = (3)(35) + 14 = 119 \text{ in.} = 9.92 \text{ ft}$$

$$B_g = (2)(35) + 14 = 84 \text{ in.} = 7 \text{ ft}$$

$$\frac{L_g}{B_g} = \frac{9.92}{7} = 1.42$$


$$\frac{L}{B_g} = \frac{60}{7} = 8.57$$

From Figure 9.48,  $N_c^* = 8.75$ . From Eq. (9.131),

$$\begin{aligned} \Sigma Q_u &= L_g B_g c_{u(p)} N_c^* + \Sigma 2(L_g + B_g) c_u \Delta L \\ &= (9.92)(7)(1775)(8.75) + (2)(9.92 + 7)[(1050)(15) + (1775)(45)] \\ &= 4313,000 \text{ lb} = 4313 \text{ kip} \end{aligned}$$

Hence,  $\Sigma Q_u = 3141.9 \text{ kip}$ .

$$\Sigma Q_{\text{all}} = \frac{3141.9}{\text{FS}} = \frac{3141.9}{4} \approx 785.5 \text{ kip}$$

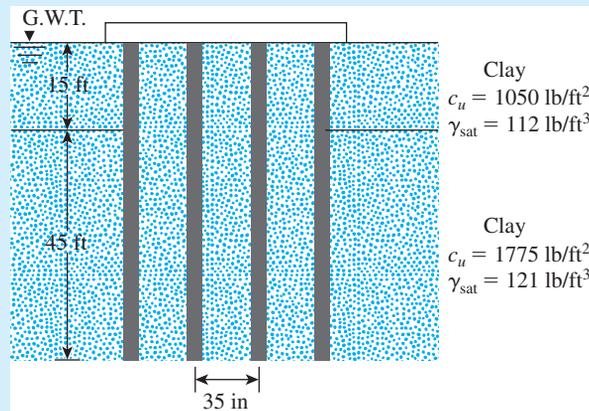

**Figure 9.49** Group pile of layered saturated clay

## 9.25 Elastic Settlement of Group Piles

In general, the settlement of a group pile under a similar working load per pile increases with the width of the group ( $B_g$ ) and the center-to-center spacing of the piles ( $d$ ). Several investigations relating to the settlement of group piles have been reported in the literature,

with widely varying results. The simplest relation for the settlement of group piles was given by Vesic (1969), namely,

$$s_{g(e)} = \sqrt{\frac{B_g}{D}} s_e \quad (9.132)$$

where

$s_{g(e)}$  = elastic settlement of group piles

$B_g$  = width of group pile section

$D$  = width or diameter of each pile in the group

$s_e$  = elastic settlement of each pile at comparable working load (see Section 9.17)

For group piles in sand and gravel, for elastic settlement, Meyerhof (1976) suggested the empirical relation

$$s_{g(e)}(\text{in.}) = \frac{2q\sqrt{B_g}I}{N_{60}} \quad (9.133)$$

where

$$q = Q_g/(L_g B_g) (\text{in U.S. ton/ft}^2) \quad (9.134)$$

and

$L_g$  and  $B_g$  = length and width of the group pile section, respectively (ft)

$N_{60}$  = average standard penetration number within seat of settlement ( $\approx B_g$  deep below the tip of the piles)

$I$  = influence factor =  $1 - L/8B_g \geq 0.5$  (9.135)

$L$  = length of embedment of piles (ft)

In SI units,

$$S_{g(e)}(\text{mm}) = \frac{0.96q\sqrt{B_g}I}{N_{60}} \quad (9.136)$$

where  $q$  is in  $\text{kN/m}^2$  and  $B_g$  and  $L_g$  are in m, and

$$I = 1 - \frac{L(\text{m})}{8B_g(\text{m})}$$

Similarly, the group pile settlement is related to the cone penetration resistance by the formula

$$S_{g(e)} = \frac{qB_g I}{2q_c} \quad (9.137)$$

where  $q_c$  = average cone penetration resistance within the seat of settlement. (Note that, in Eq. (9.137), all quantities are expressed in consistent units.)

### Example 9.22

Consider a  $3 \times 4$  group of prestressed concrete piles, each 21 m long, in a sand layer. The details of each pile and the sand are similar to that described in Example 9.13. The working load for the pile group is 6024 kN ( $3 \times 4 \times Q_{\text{all}}$ —where  $Q_{\text{all}} = 502$  kN as in Example 9.13), and  $d/D = 3$ . Estimate the elastic settlement of the pile group. Use Eq. (9.132).

#### Solution

$$s_{e(g)} = \sqrt{\frac{B_g}{D}} s_e$$

$$B_g = (3 - 1)d + \frac{2D}{2} = (2)(3D) + D = 7D = (7)(0.356 \text{ m}) = 2.492 \text{ m}$$

From Example 9.13,  $s_e = 19.69$  mm. Hence,

$$s_{e(g)} = \sqrt{\frac{2.492}{0.356}} (19.69) = \mathbf{52.09 \text{ mm}}$$

## 9.26 Consolidation Settlement of Group Piles

The consolidation settlement of a group pile in clay can be estimated by using the 2:1 stress distribution method. The calculation involves the following steps (see Figure 9.50):

- Step 1.* Let the depth of embedment of the piles be  $L$ . The group is subjected to a total load of  $Q_g$ . If the pile cap is below the original ground surface,  $Q_g$  equals the total load of the superstructure on the piles, minus the effective weight of soil above the group piles removed by excavation.
- Step 2.* Assume that the load  $Q_g$  is transmitted to the soil beginning at a depth of  $2L/3$  from the top of the pile, as shown in the figure. The load  $Q_g$  spreads out along two vertical to one horizontal line from this depth. Lines  $aa'$  and  $bb'$  are the two 2:1 lines.
- Step 3.* Calculate the increase in effective stress caused at the middle of each soil layer by the load  $Q_g$ . The formula is

$$\Delta\sigma'_i = \frac{Q_g}{(B_g + z_i)(L_g + z_i)} \quad (9.138)$$

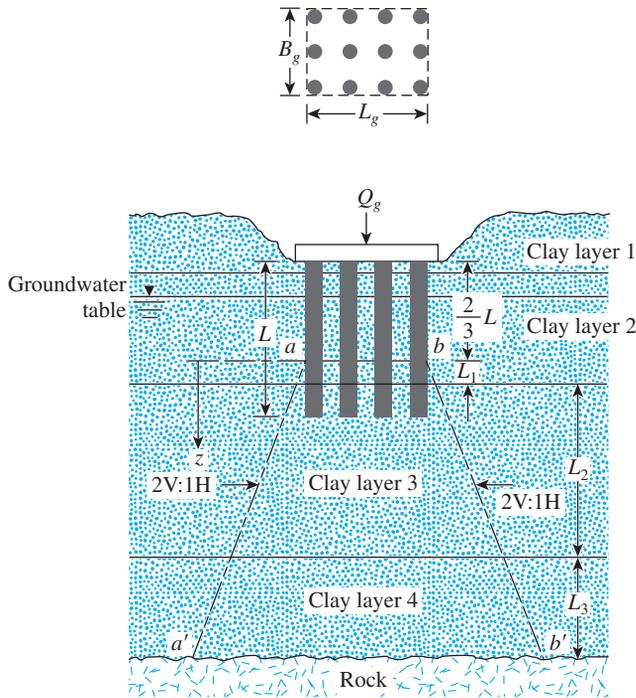


Figure 9.50 Consolidation settlement of group piles

where

- $\Delta\sigma'_i$  = increase in effective stress at the middle of layer  $i$
- $L_g, B_g$  = length and width, respectively of the planned group piles
- $z_i$  = distance from  $z = 0$  to the middle of the clay layer  $i$

For example, in Figure 9.50, for layer 2,  $z_i = L_1/2$ ; for layer 3,  $z_i = L_1 + L_2/2$ ; and for layer 4,  $z_i = L_1 + L_2 + L_3/2$ . Note, however, that there will be no increase in stress in clay layer 1, because it is above the horizontal plane ( $z = 0$ ) from which the stress distribution to the soil starts.

**Step 4.** Calculate the consolidation settlement of each layer caused by the increased stress. The formula is

$$\Delta s_{c(i)} = \left[ \frac{\Delta e_{(i)}}{1 + e_{o(i)}} \right] H_i \tag{9.139}$$

where

- $\Delta s_{c(i)}$  = consolidation settlement of layer  $i$
- $\Delta e_{(i)}$  = change of void ratio caused by the increase in stress in layer  $i$
- $e_{o(i)}$  = initial void ratio of layer  $i$  (before construction)
- $H_i$  = thickness of layer  $i$  (Note: In Figure 9.50, for layer 2,  $H_i = L_1$ ; for layer 3,  $H_i = L_2$ ; and for layer 4,  $H_i = L_3$ .)

Relationships involving  $\Delta e_{(i)}$  are given in Chapter 2.

**Step 5.** The total consolidation settlement of the group piles is then

$$\Delta s_{c(g)} = \sum \Delta s_{c(i)} \tag{9.140}$$

Note that the consolidation settlement of piles may be initiated by fills placed nearby, adjacent floor loads, or the lowering of water tables.

### Example 9.23

A group pile in clay is shown in Figure 9.51. Determine the consolidation settlement of the piles. All clays are normally consolidated.

#### Solution

Because the lengths of the piles are 15 m each, the stress distribution starts at a depth of 10 m below the top of the pile. We are given that  $Q_g = 2000$  kN.

Calculation of Settlement of Clay Layer 1

For normally consolidated clays,

$$\Delta s_{c(1)} = \left[ \frac{C_{c(1)} H_1}{1 + e_{o(1)}} \right] \log \left[ \frac{\sigma'_{o(1)} + \Delta \sigma'_{(1)}}{\sigma'_{o(1)}} \right]$$

$$\Delta \sigma'_{(1)} = \frac{Q_g}{(L_g + z_1)(B_g + z_1)} = \frac{2000}{(3.3 + 3.5)(2.2 + 3.5)} = 51.6 \text{ kN/m}^2$$

and

$$\sigma'_{o(1)} = 2(16.2) + 12.5(18.0 - 9.81) = 134.8 \text{ kN/m}^2$$

So

$$\Delta s_{c(1)} = \frac{(0.3)(7)}{1 + 0.82} \log \left[ \frac{134.8 + 51.6}{134.8} \right] = 0.1624 \text{ m} = \mathbf{162.4 \text{ mm}}$$

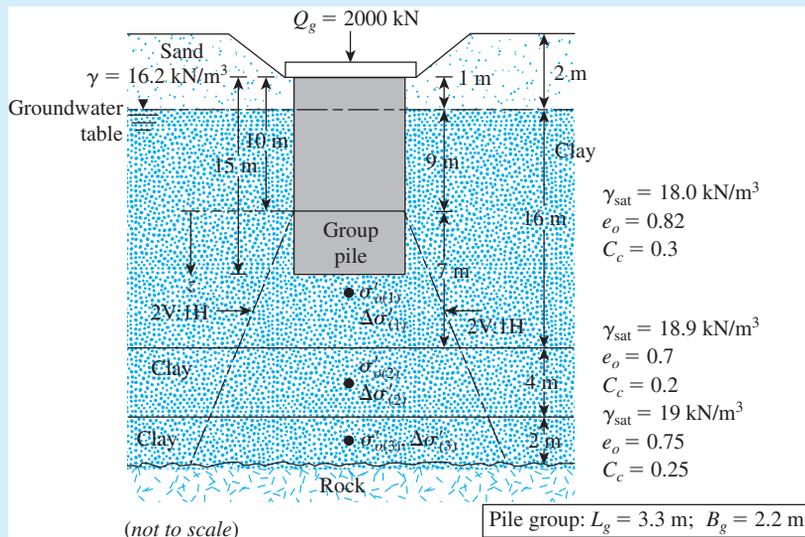


Figure 9.51 Consolidation settlement of a pile group

Settlement of Layer 2

As with layer 1,

$$\Delta s_{c(2)} = \frac{C_{c(2)}H_2}{1 + e_{o(2)}} \log \left[ \frac{\sigma'_{o(2)} + \Delta\sigma_{(2)}}{\sigma'_{o(2)}} \right]$$

$$\sigma'_{o(2)} = 2(16.2) + 16(18.0 - 9.81) + 2(18.9 - 9.81) = 181.62 \text{ kN/m}^2$$

and

$$\Delta\sigma'_{(2)} = \frac{2000}{(3.3 + 9)(2.2 + 9)} = 14.52 \text{ kN/m}^2$$

Hence,

$$\Delta s_{c(2)} = \frac{(0.2)(4)}{1 + 0.7} \log \left[ \frac{181.62 + 14.52}{181.62} \right] = 0.0157 \text{ m} = \mathbf{15.7 \text{ mm}}$$

Settlement of Layer 3

Continuing analogously, we have

$$\sigma'_{o(3)} = 181.62 + 2(18.9 - 9.81) + 1(19 - 9.81) = 208.99 \text{ kN/m}^2$$

$$\Delta\sigma'_{(3)} = \frac{2000}{(3.3 + 12)(2.2 + 12)} = 9.2 \text{ kN/m}^2$$

$$\Delta s_{c(3)} = \frac{(0.25)(2)}{1 + 0.75} \log \left( \frac{208.99 + 9.2}{208.99} \right) = 0.0054 \text{ m} = \mathbf{5.4 \text{ mm}}$$

Hence, the total settlement is

$$\Delta s_{c(g)} = 162.4 + 15.7 + 5.4 = \mathbf{183.5 \text{ mm}}$$

## 9.27 Piles in Rock

For point bearing piles resting on rock, most building codes specify that  $Q_{g(u)} = \Sigma Q_u$ , provided that the minimum center-to-center spacing of the piles is  $D + 300$  mm. For H-piles and piles with square cross sections, the magnitude of  $D$  is equal to the diagonal dimension of the cross section of the pile.

### Problems

- 9.1** A 20-m-long concrete pile is shown in Figure P9.1. Estimate the ultimate point load  $Q_p$  by
- Meyerhof's method
  - Vesic's method
  - Coyle and Castello's method
- Use  $m = 600$  in Eq. (9.26).

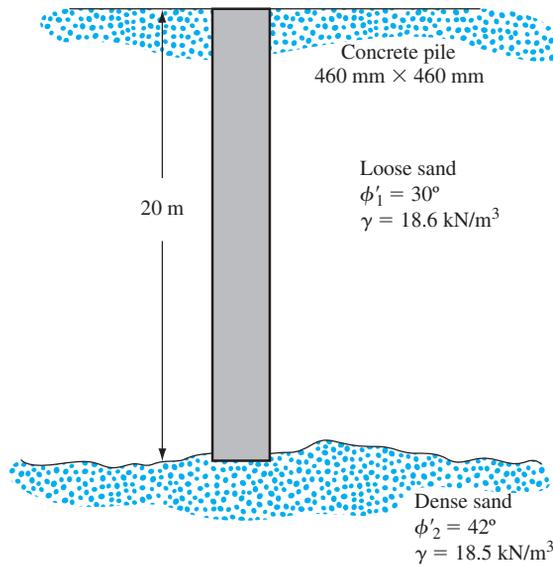


Figure P9.1

- 9.2 Refer to the pile shown in Figure P9.1. Estimate the side resistance  $Q_s$  by
- Using Eqs. (9.40) through (9.42). Use  $K = 1.5$  and  $\delta' = 0.6\phi'$
  - Coyle and Castello's method [Eq. (9.44)]
- 9.3 Based on the results of Problems 9.1 and 9.2, recommend an allowable load for the pile. Use  $FS = 4$ .
- 9.4 A driven closed-ended pile, circular in cross section, is shown in Figure P9.4. Calculate the following.
- The ultimate point load using Meyerhof's procedure.
  - The ultimate point load using Vesic's procedure. Take  $I_{rr} = 50$ .
  - An approximate ultimate point load on the basis of parts (a) and (b).
  - The ultimate frictional resistance  $Q_s$ . [Use Eqs. (9.40) through (9.42), and take  $K = 1.4$  and  $\delta' = 0.6\phi'$ .]
  - The allowable load of the pile (use  $FS = 4$ ).
- 9.5 Following is the variation of  $N_{60}$  with depth in a granular soil deposit. A concrete pile 9 m long (460 mm × 460 mm in cross section) is driven into the sand and fully embedded in the sand.

Depth (m)	$N_{60}$
1.5	4
3.0	7
4.5	9
6.0	10
7.5	16
9.0	20
10.5	21
11.0	23
12.5	20
14.0	21

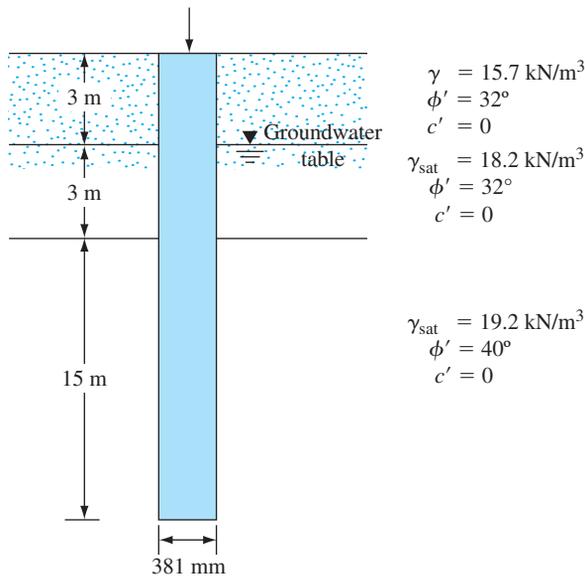


Figure P9.4

Estimate the allowable load-carrying capacity of the pile ( $Q_{\text{all}}$ ). Use FS = 4 and Meyerhof's equations [Eqs. (9.37) and (9.45)].

- 9.6** Solve Problem 9.5 using the equation of Briaud et al. [Eqs. (9.38) and (9.47)].
- 9.7** A concrete pile 50 ft long having a cross section of 15 in.  $\times$  15 in. is fully embedded in a saturated clay layer for which  $\gamma_{\text{sat}} = 121 \text{ lb/ft}^3$ ,  $\phi = 0$ , and  $c_u = 1600 \text{ lb/ft}^2$ . Determine the allowable load that the pile can carry. (Let FS = 3.) Use the  $\alpha$  method Eq. (9.59) and Table 9.10 to estimate the skin friction and Vesic's method for point load estimation.
- 9.8** Redo Problem 9.7 using the  $\lambda$  method for estimating the skin friction and Meyerhof's method for the point load estimation.
- 9.9** A concrete pile 20 m long having a cross section of 0.46 m  $\times$  0.46 m is fully embedded in a saturated clay layer. For the clay, given:  $\gamma_{\text{sat}} = 18 \text{ kN/m}^3$ ,  $\phi = 0$ , and  $c_u = 80 \text{ kN/m}^2$ . Determine the allowable load that the pile can carry (FS = 3). Use the  $\lambda$  method to estimate the skin resistance.
- 9.10** A concrete pile 16 in.  $\times$  16 in. in cross section is shown in Figure P9.10. Calculate the ultimate skin friction resistance by using the
- $\alpha$  method [use Eq. (9.59) and Table 9.10]
  - $\lambda$  method
  - $\beta$  method
- Use  $\phi'_R = 20^\circ$  for all clays, which are normally consolidated.
- 9.11** Solve Problem 9.10 using Eq. (9.56).
- 9.12** Solve Problem 9.10 using Eqs. (9.57) and (9.58).
- 9.13** Consider a continuous flight auger pile in a sandy soil deposit 10 m long with a diameter of 0.45 m. Following is the variation of standard penetration resistance values ( $N_{60}$ ) with depth.

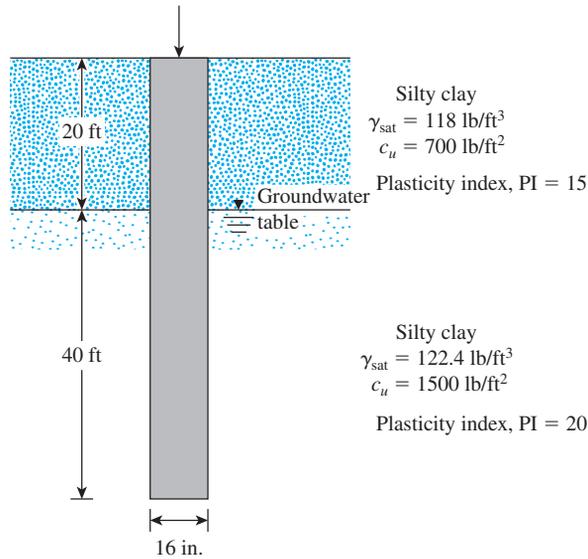


Figure P9.10

Depth (m)	$N_{60}$
1.5	6
3.0	7
4.5	5
6.0	8
7.5	10
9.0	10
10.5	13
12.0	15
13.5	18
15.0	20
17.0	17
18.5	18
20.0	21

Estimate the ultimate load-carrying capacity of the pile. Assume unit weight of soil,  $\gamma = 15.5 \text{ kN/m}^3$ .

9.14 The average values of the undrained shear strength ( $c_u$ ) with depth are given below.

Depth (m)	$c_u$ (kN/m <sup>2</sup> )
0–3	20
3–8	35
8–12	80
12–16	95

If a CFA pile having a diameter of 0.6 m and length of 10 m is to be constructed in this clayey soil, estimate the ultimate side skin resistance  $Q_s$ .

- 9.15** A steel pile (H-section; HP 310  $\times$  125; see Table 11.1a) is driven into a layer of sandstone. The length of the pile is 25 m. Following are the properties of the sandstone: unconfined compression strength =  $q_{u(\text{lab})} = 80 \text{ MN/m}^2$  and angle of friction =  $36^\circ$ . Using a factor of safety of 3, estimate the allowable point load that can be carried by the pile. Use  $[q_{u(\text{design})} = q_{u(\text{lab})}/5]$ .
- 9.16** A concrete pile is 20 m long and has a cross section of 0.46 m  $\times$  0.46 m. The pile is embedded in a sand having  $\gamma = 17 \text{ kN/m}^3$  and  $\phi' = 38^\circ$ . The allowable working load is 1200 kN. If 700 kN are contributed by the frictional resistance and 500 kN are from the point load, determine the elastic settlement of the pile. Given:  $E_p = 2.1 \times 10^6 \text{ kN/m}^2$ ,  $E_s = 30 \times 10^3 \text{ kN/m}^2$ ,  $\mu_s = 0.38$ , and  $\xi = 0.57$  [Eq. (9.81)].
- 9.17** Solve Problem 9.16 with the following: length of pile = 15 m, pile cross section = 0.305 m  $\times$  0.305 m, allowable working load = 338 kN, contribution of frictional resistance to working load = 280 kN,  $E_p = 21 \times 10^6 \text{ kN/m}^2$ ,  $E_s = 30,000 \text{ kN/m}^2$ ,  $\mu_s = 0.3$ , and  $\xi = 0.62$  [Eq. (9.81)].
- 9.18** A 30-m-long concrete pile is 305 mm  $\times$  305 mm in cross section and is fully embedded in a sand deposit. If  $n_h = 9200 \text{ kN/m}^2$ , the moment at ground level,  $M_g = 0$ , the allowable displacement of pile head = 12 mm;  $E_p = 21 \times 10^6 \text{ kN/m}^2$ ; and  $F_{Y(\text{pile})} = 21,000 \text{ kN/m}^2$ , calculate the allowable lateral load,  $Q_g$ , at the ground level. Use the elastic solution method.
- 9.19** Solve Problem 9.18 using Brom's method. Assume that the pile is flexible and free headed. Let the soil unit weight,  $\gamma = 16 \text{ kN/m}^3$ ; the soil friction angle,  $\phi' = 30^\circ$ ; and the yield stress of the pile material,  $F_Y = 21 \text{ MN/m}^2$ .
- 9.20** A steel H-pile (section HP13  $\times$  100) is driven by a hammer. The maximum rated hammer energy is 40 kip-ft, the weight of the ram is 12 kip, and the length of the pile is 90 ft. Also, we have coefficient of restitution = 0.35, weight of the pile cap = 2.4 kip, hammer efficiency = 0.85, number of blows for the last inch of penetration = 10, and  $E_p = 30 \times 10^6 \text{ lb/in.}^2$ . Estimate the pile capacity using Eq. (9.114). Take FS = 6.
- 9.21** Solve Problem 9.20 using the modified EN formula. (See Table 9.17). Use FS = 3.
- 9.22** Solve Problem 9.20 using the Danish formula (See Table 9.17). Use FS = 3.
- 9.23** Figure 9.42a shows a pile. Let  $L = 15 \text{ m}$ ,  $D$  (pile diameter) = 305 mm,  $H_f = 3 \text{ m}$ ,  $\gamma_{\text{fill}} = 17.5 \text{ kN/m}^3$ , and  $\phi'_{\text{fill}} = 25^\circ$ . Determine the total downward drag force on the pile. Assume that the fill is located above the water table and that  $\delta' = 0.5\phi'_{\text{fill}}$ .
- 9.24** Redo Problem 9.23 assuming that the water table coincides with the top of the fill and that  $\gamma_{\text{sat}(\text{fill})} = 19.8 \text{ kN/m}^3$ . If the other quantities remain the same, what would be the downward drag force on the pile? Assume  $\delta' = 0.5\phi'_{\text{fill}}$ .
- 9.25** Refer to Figure 9.42b. Let  $L = 18 \text{ m}$ ,  $\gamma_{\text{fill}} = 17 \text{ kN/m}^3$ ,  $\gamma_{\text{sat}(\text{clay})} = 19.8 \text{ kN/m}^3$ ,  $\phi'_{\text{clay}} = 20^\circ$ ,  $H_f = 3.5 \text{ m}$ , and  $D$  (pile diameter) = 406 mm. The water table coincides with the top of the clay layer. Determine the total downward drag force on the pile. Assume  $\delta' = 0.6\phi'_{\text{clay}}$ .
- 9.26** A concrete pile measuring 16 in.  $\times$  16 in. in cross section is 60 ft long. It is fully embedded in a layer of sand. The following is an approximation of the mechanical

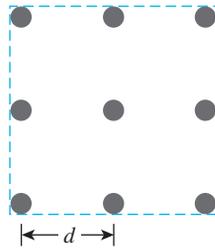


Figure P9.27

cone penetration resistance ( $q_c$ ) and the friction ratio ( $F_r$ ) for the sand layer. Estimate the allowable bearing capacity of the pile. Use FS = 4.

Depth below ground surface (ft)	$q_c$ (kip/ft <sup>2</sup> )	$F_r$ (%)
0–20	58.5	2.3
20–45	78.2	2.7
45–65	168.1	2.8

- 9.27** The plan of a group pile is shown in Figure P9.27. Assume that the piles are embedded in a saturated homogeneous clay having a  $c_u = 90$  kN/m<sup>2</sup>. Given: diameter of piles ( $D$ ) = 316 mm, center-to-center spacing of piles = 600 mm, and length of piles = 20 m. Find the allowable load-carrying capacity of the pile group. Use Table 9.10 and FS = 3.
- 9.28** Redo Problem 9.27 with the following: center-to-center spacing of piles = 30 in., length of piles = 45 ft,  $D = 12$  in.,  $c_u = 860$  lb/ft<sup>2</sup>, and FS = 3. Use Table 9.10.
- 9.29** The section of a  $4 \times 4$  group pile in a layered saturated clay is shown in Figure P9.29. The piles are square in cross section (356 mm  $\times$  356 mm). The center-to-center spacing ( $d$ ) of the piles is 1 m. Determine the allowable load-bearing capacity of the pile group. Use FS = 3 and Table 9.10.
- 9.30** Figure P9.30 shows a group pile in clay. Determine the consolidation settlement of the group. Use the 2:1 method of estimate the average effective stress in the clay layers.

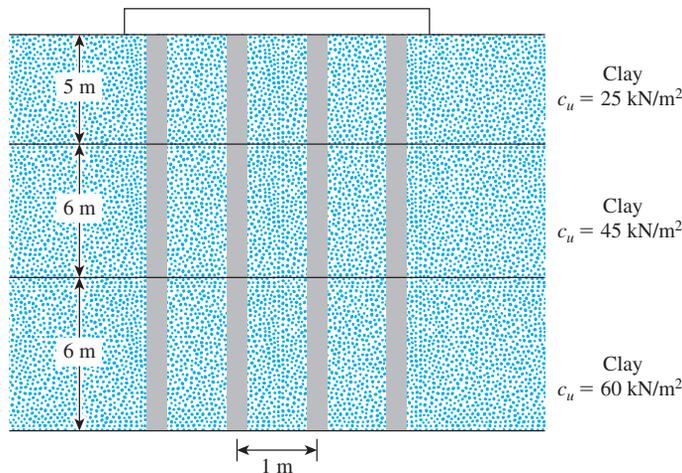


Figure P9.29

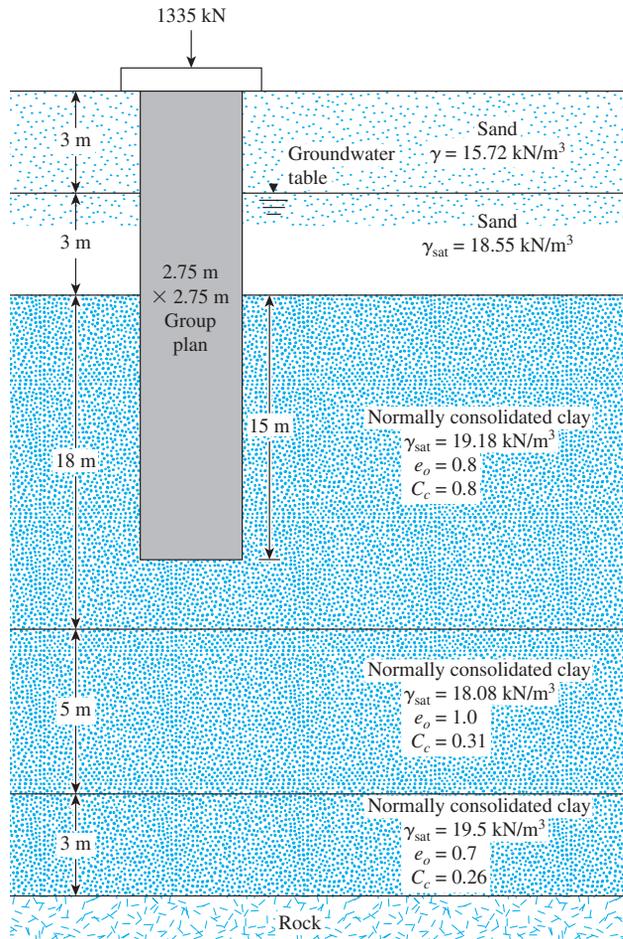


Figure P9.30

## References

- AMERICAN PETROLEUM INSTITUTE (API) (1987). "Recommended Practice for Planning." *Designing, and Constructing Fixed Offshore Platforms, API RP2A*, 17th ed., American Petroleum Institute, Washington, D.C.
- AMERICAN PETROLEUM INSTITUTE (API) (2007). "Recommended Practice for Planning." *Designing, and Constructing Fixed Offshore Platforms, API RP2A*, 22nd ed., American Petroleum Institute, Washington, D.C.
- AMERICAN SOCIETY OF CIVIL ENGINEERS (1959). "Timber Piles and Construction Timbers," *Manual of Practice*, No. 17, American Society of Civil Engineers, New York.
- AMERICAN SOCIETY OF CIVIL ENGINEERS (1993). *Design of Pile Foundations (Technical Engineering and Design Guides as Adapted from the U.S. Army Corps of Engineers, No. 1)*, American Society of Civil Engineers, New York.
- BALDI, G., BELLOTTI, R., GHIONNA, V., JAMIOLKOWSKI, M., and PASQUALINI, E. (1981). "Cone Resistance in Dry N.C. and O.C. Sands, Cone Penetration Testing and Experience," *Proceedings, ASCE Specialty Conference*, St. Louis, pp. 145–177.

- BJERRUM, L., JOHANNESSEN, I. J., and EIDE, O. (1969). "Reduction of Skin Friction on Steel Piles to Rock," *Proceedings, Seventh International Conference on Soil Mechanics and Foundation Engineering*, Mexico City, Vol. 2, pp. 27–34.
- BOWLES, J. E. (1982). *Foundation Analysis and Design*, McGraw-Hill, New York.
- BOWLES, J. E. (1996). *Foundation Analysis and Design*, McGraw-Hill, New York.
- BRIAUD, J. L., TUCKER, L., LYTTON, R. L., and COYLE, H. M. (1985). *Behavior of Piles and Pile Groups*, Report No. FHWA/RD-83/038, Federal Highway Administration, Washington, DC.
- BROMS, B. B. (1965). "Design of Laterally Loaded Piles," *Journal of the Soil Mechanics and Foundations Division*, American Society of Civil Engineers, Vol. 91, No. SM3, pp. 79–99.
- CHEN, Y. J. and KULHAWY, F. H. (1994). "Case History Evaluation of the Behavior of Drilled Shafts under Axial and Lateral Loading," *Final Report, Project 1493-04, EPRI TR-104601*, Geotechnical Group, Cornell University, Ithaca, NY, December.
- COLEMAN D. M. and ARCEMENT, B. J. (2002). "Evaluation of Design Methods for Auger Cast Piles in Mixed Soil Conditions." *Proceeding, International Deep Foundations Congress*, Orlando, FL, M. W. O'Neill and F. C. Townsends (eds.), American Society of Civil Engineers, pp. 1404–1420.
- COYLE, H. M. and CASTELLO, R. R. (1981). "New Design Correlations for Piles in Sand," *Journal of the Geotechnical Engineering Division*, American Society of Civil Engineers, Vol. 107, No. GT7, pp. 965–986.
- DAS, B. M. and RAMANA, G. V. (2011). *Principles of Soil Dynamics*, Cengage Learning, Stamford, CT.
- DAVISSON, M. T. (1973). "High Capacity Piles" in *Innovations in Foundation Construction*, Proceedings of a Lecture Series, Illinois Section, American Society of Civil Engineers, Chicago.
- DAVISSON, M. T. (1970). "BRD Vibratory Driving Formula," *Foundation Facts*, Vol. VI, No. 1, pp. 9–11.
- DAVISSON, M. T. and GILL, H. L. (1963). "Laterally Loaded Piles in a Layered Soil System," *Journal of the Soil Mechanics and Foundations Division*, American Society of Civil Engineers, Vol. 89, No. SM3, pp. 63–94.
- FEDERAL HIGHWAY ADMINISTRATION (FHWA) (2007). *Design and Construction of Continuous Flight Auger Piles*, Geotechnical Engineering Circular (GEC) No. 8, Washington, D.C.
- FENG, Z. and DESCHAMPS, R. J. (2000). "A Study of the Factors Influencing the Penetration and Capacity of Vibratory Driven Piles," *Soils and Foundations*, Vol. 40, No. 3, pp. 43–54.
- GOODMAN, R. E. (1980). *Introduction to Rock Mechanics*, Wiley, New York.
- JANBU, N. (1953). *An Energy Analysis of Pile Driving with the Use of Dimensionless Parameters*, Norwegian Geotechnical Institute, Oslo, Publication No. 3.
- KARLSRUD, K., CLAUSEN, C. J. F., and AAS, P. M. (2005). "Bearing Capacity of Driven Piles in Clay, the NGI Approach." *Frontiers in Offshore Geotechnics : ISFOG*, S. Gourvenec and M. Cassidy, eds., Taylor and Francis Group, Perth, Australia, pp. 775–782.
- KISHIDA, H. and MEYERHOF, G. G. (1965). "Bearing Capacity of Pile Groups under Eccentric Loads in Sand," *Proceedings, Sixth International Conference on Soil Mechanics and Foundation Engineering*, Montreal, Vol. 2, pp. 270–274.
- LIU, J. L., YUAN, Z. I., and ZHANG, K. P. (1985). "Cap-Pile-Soil Interaction of Bored Pile Groups," *Proceedings, Eleventh International Conference on Soil Mechanics and Foundation Engineering*, San Francisco, Vol. 3, pp. 1433–1436.
- MANSUR, C. I. and HUNTER, A. H. (1970). "Pile Tests—Arkansas River Project," *Journal of the Soil Mechanics and Foundations Division*, American Society of Civil Engineers, Vol. 96, No. SM6, pp. 1545–1582.
- MATLOCK, H. and REESE, L. C. (1960). "Generalized Solution for Laterally Loaded Piles," *Journal of the Soil Mechanics and Foundations Division*, American Society of Civil Engineers, Vol. 86, No. SM5, Part I, pp. 63–91.
- MEYERHOF, G. G. (1976). "Bearing Capacity and Settlement of Pile Foundations," *Journal of the Geotechnical Engineering Division*, American Society of Civil Engineers, Vol. 102, No. GT3, pp. 197–228.

- NOTTINGHAM, L. C. and SCHMERTMANN, J. H. (1975). *An Investigation of Pile Capacity Design Procedures*, Research Report No. D629, Department of Civil Engineering, University of Florida, Gainesville, FL.
- OLSON, R. E. and FLAATE, K. S. (1967). "Pile Driving Formulas for Friction Piles in Sand," *Journal of the Soil Mechanics and Foundations Division*, American Society of Civil Engineers, Vol. 93, No. SM6, pp. 279–296.
- O'NEILL, M. W. and REESE, L. C. (1999). *Drilled Shafts: Construction Procedure and Design Methods*, FHWA Report No. IF-99-025.
- RANDOLPH M. F. and MURPHY, B. S. (1985). "Shaft Capacity of Driven Piles in Clay," *Proceedings, 17th Annual Offshore Technology Conference*, Houston, TX, pp. 371–378.
- SAWANT, V. A., SHUKLA, S. K., SIVAKUGAN, N., and DAS, B. M. (2013). "An Insight into the Pile Setup and the Load-Carrying Capacity of Driven Piles," *International Journal of Geotechnical Engineering*, Vol. 7, No. 1, pp. 71–83.
- SCHMERTMANN, J. H. (1978). *Guidelines for Cone Penetration Test: Performance and Design*, Report FHWA-TS-78-209, Federal Highway Administration, Washington, DC.
- SEILER, J. F. and KEENEY, W. D. (1944). "The Efficiency of Piles in Groups," *Wood Preserving News*, Vol. 22, No. 11 (November).
- SLADEN, J. A. (1992). "The Adhesion Factor: Applications and Limitations," *Canadian Geotechnical Journal*, Vol. 29, No. 2, pp. 323–326.
- SMITH, E. A. L. (1960). "Pile-Driving Analysis by the Wave Equation," *Journal of the Soil Mechanics and Foundations Division*, American Society of Civil Engineers, Vol. 86, No. SM4, pp. 35–61.
- TERZAGHI, K., PECK, R. B., and MESRI, G. (1996). *Soil Mechanics in Engineering Practice*, John Wiley, NY.
- VESIC, A. S. (1961). "Bending of Beams Resting on Isotropic Elastic Solids," *Journal of the Engineering Mechanics Division*, American Society of Civil Engineers, Vol. 87, No. EM2, pp. 35–53.
- VESIC, A. S. (1969). *Experiments with Instrumented Pile Groups in Sand*, American Society for Testing and Materials, Special Technical Publication No. 444, pp. 177–222.
- VESIC, A. S. (1970). "Tests on Instrumental Piles—Ogeechee River Site," *Journal of the Soil Mechanics and Foundations Division*, American Society of Civil Engineers, Vol. 96, No. SM2, pp. 561–584.
- VESIC, A. S. (1977). *Design of Pile Foundations*, National Cooperative Highway Research Program Synthesis of Practice No. 42, Transportation Research Board, Washington, D.C.
- VIJAYVERGIYA, V. N. and FOCHT, J. A., JR. (1972). *A New Way to Predict Capacity of Piles in Clay*, Offshore Technology Conference Paper 1718, Fourth Offshore Technology Conference, Houston.
- WONG, K. S. and TEH, C. I. (1995). "Negative Skin Friction on Piles in Layered Soil Deposit," *Journal of Geotechnical and Geoenvironmental Engineering*, American Society of Civil Engineers, Vol. 121, No. 6, pp. 457–465.
- WOODWARD, R. J., GARDNER, W. S., and GREER, D. M. (1972). *Drilled Pier Foundations*, McGraw-Hill, New York.



# 10 Drilled-Shaft Foundations

## 10.1 Introduction

The terms *caisson*, *pier*, *drilled shaft*, and *drilled pier* are often used interchangeably in foundation engineering; all refer to a *cast-in-place pile generally having a diameter of about 750 mm ( $\approx 2.5$  ft) or more*, with or without steel reinforcement and with or without an enlarged bottom. Sometimes the diameter can be as small as 305 mm ( $\approx 1$  ft).

To avoid confusion, we use the term *drilled shaft* for a hole drilled or excavated to the bottom of a structure's foundation and then filled with concrete. Depending on the soil conditions, casings may be used to prevent the soil around the hole from caving in during construction. The diameter of the shaft is usually large enough for a person to enter for inspection.

The use of drilled-shaft foundations has several advantages:

1. A single drilled shaft may be used instead of a group of piles and the pile cap.
2. Constructing drilled shafts in deposits of dense sand and gravel is easier than driving piles.
3. Drilled shafts may be constructed before grading operations are completed.
4. When piles are driven by a hammer, the ground vibration may cause damage to nearby structures. The use of drilled shafts avoids this problem.
5. Piles driven into clay soils may produce ground heaving and cause previously driven piles to move laterally. This does not occur during the construction of drilled shafts.
6. There is no hammer noise during the construction of drilled shafts; there is during pile driving.
7. Because the base of a drilled shaft can be enlarged, it provides great resistance to the uplifting load.
8. The surface over which the base of the drilled shaft is constructed can be visually inspected.

9. The construction of drilled shafts generally utilizes mobile equipment, which, under proper soil conditions, may prove to be more economical than methods of constructing pile foundations.
10. Drilled shafts have high resistance to lateral loads.


There are also a couple of drawbacks to the use of drilled-shaft construction. For one thing, the concreting operation may be delayed by bad weather and always needs close supervision. For another, as in the case of braced cuts, deep excavations for drilled shafts may induce substantial ground loss and damage to nearby structures.

## 10.2 Types of Drilled Shafts

Drilled shafts are classified according to the ways in which they are designed to transfer the structural load to the substratum. Figure 10.1a shows a drilled *straight shaft*. It extends through the upper layer(s) of poor soil, and its tip rests on a strong load-bearing soil layer or rock. The shaft can be cased with steel shell or pipe when required (as it is with cased, cast-in-place concrete piles). For such shafts, the resistance to the applied load may develop from end bearing and also from side friction at the shaft perimeter and soil interface.

A *belled shaft* (see Figures 10.1b and c) consists of a straight shaft with a bell at the bottom, which rests on good bearing soil. The bell can be constructed in the shape of a dome (see Figure 10.1b), or it can be angled (see Figure 10.1c). For angled bells, the underreaming tools that are commercially available can make 30 to 45° angles with the vertical.

Straight shafts can also be extended into an underlying rock layer. (See Figure 10.1d.) In the calculation of the load-bearing capacity of such shafts, the end bearing and the shear stress developed along the shaft perimeter and rock interface can be taken into account.

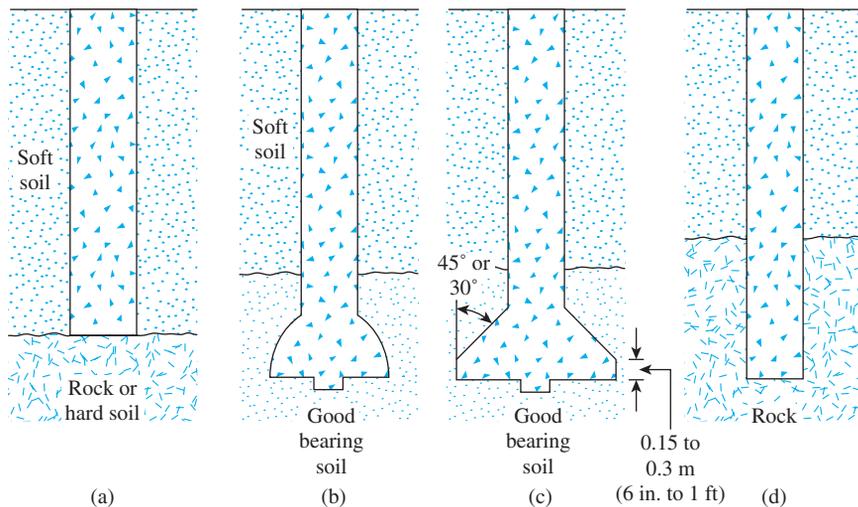

**Figure 10.1** Types of drilled shaft: (a) straight shaft; (b) and (c) belled shaft; (d) straight shaft socketed into rock

## 10.3 Construction Procedures

The most common construction procedure used in the United States involves rotary drilling. There are three major types of construction methods: the dry method, the casing method, and the wet method.

### Dry Method of Construction

This method is employed in soils and rocks that are above the water table and that will not cave in when the hole is drilled to its full depth. The sequence of construction, shown in Figure 10.2, is as follows:

- Step 1.* The excavation is completed (and belled if desired), using proper drilling tools, and the spoils from the hole are deposited nearby. (See Figure 10.2a.)
- Step 2.* Concrete is then poured into the cylindrical hole. (See Figure 10.2b.)
- Step 3.* If desired, a rebar cage is placed in the upper portion of the shaft. (See Figure 10.2c.)
- Step 4.* Concreting is then completed, and the drilled shaft will be as shown in Figure 10.2d.


### Casing Method of Construction

This method is used in soils or rocks in which caving or excessive deformation is likely to occur when the borehole is excavated. The sequence of construction is shown in Figure 10.3 and may be explained as follows:


- Step 1.* The excavation procedure is initiated as in the case of the dry method of construction. (See Figure 10.3a.)
- Step 2.* When the caving soil is encountered, bentonite slurry is introduced into the borehole. (See Figure 10.3b.) Drilling is continued until the excavation goes past the caving soil and a layer of impermeable soil or rock is encountered.
- Step 3.* A casing is then introduced into the hole. (See Figure 10.3c.)
- Step 4.* The slurry is bailed out of the casing with a submersible pump. (See Figure 10.3d.)
- Step 5.* A smaller drill that can pass through the casing is introduced into the hole, and excavation continues. (See Figure 10.3e.)
- Step 6.* If needed, the base of the excavated hole can then be enlarged, using an underreamer. (See Figure 10.3f.)
- Step 7.* If reinforcing steel is needed, the rebar cage needs to extend the full length of the excavation. Concrete is then poured into the excavation and the casing is gradually pulled out. (See Figure 10.3g.)
- Step 8.* Figure 10.3h shows the completed drilled shaft.

### Wet Method of Construction

This method is sometimes referred to as the *slurry displacement method*. Slurry is used to keep the borehole open during the entire depth of excavation. (See Figure 10.4.) Following are the steps involved in the wet method of construction:

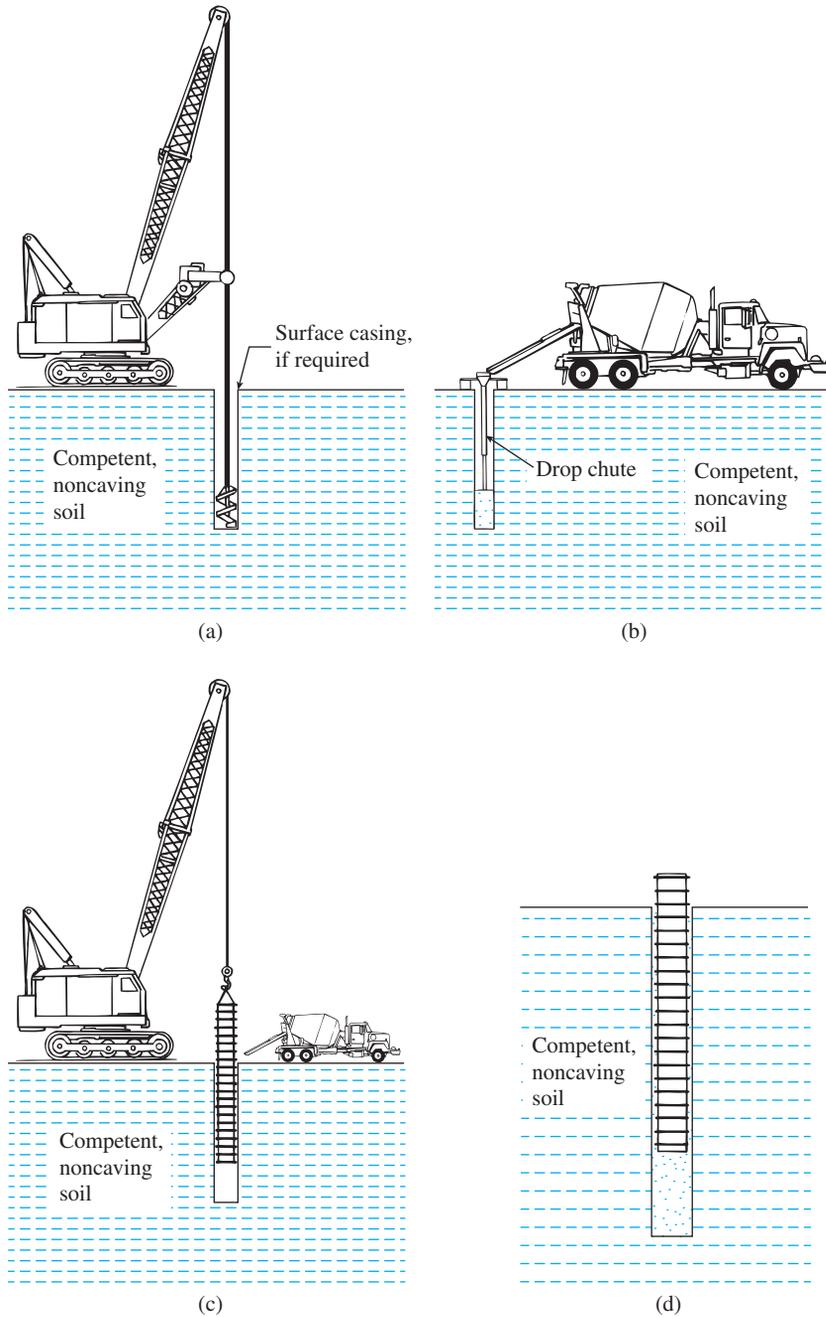

**Figure 10.2** Dry method of construction: (a) initiating drilling; (b) starting concrete pour; (c) placing rebar cage; (d) completed shaft (Based on O'Neill and Reese, 1999)

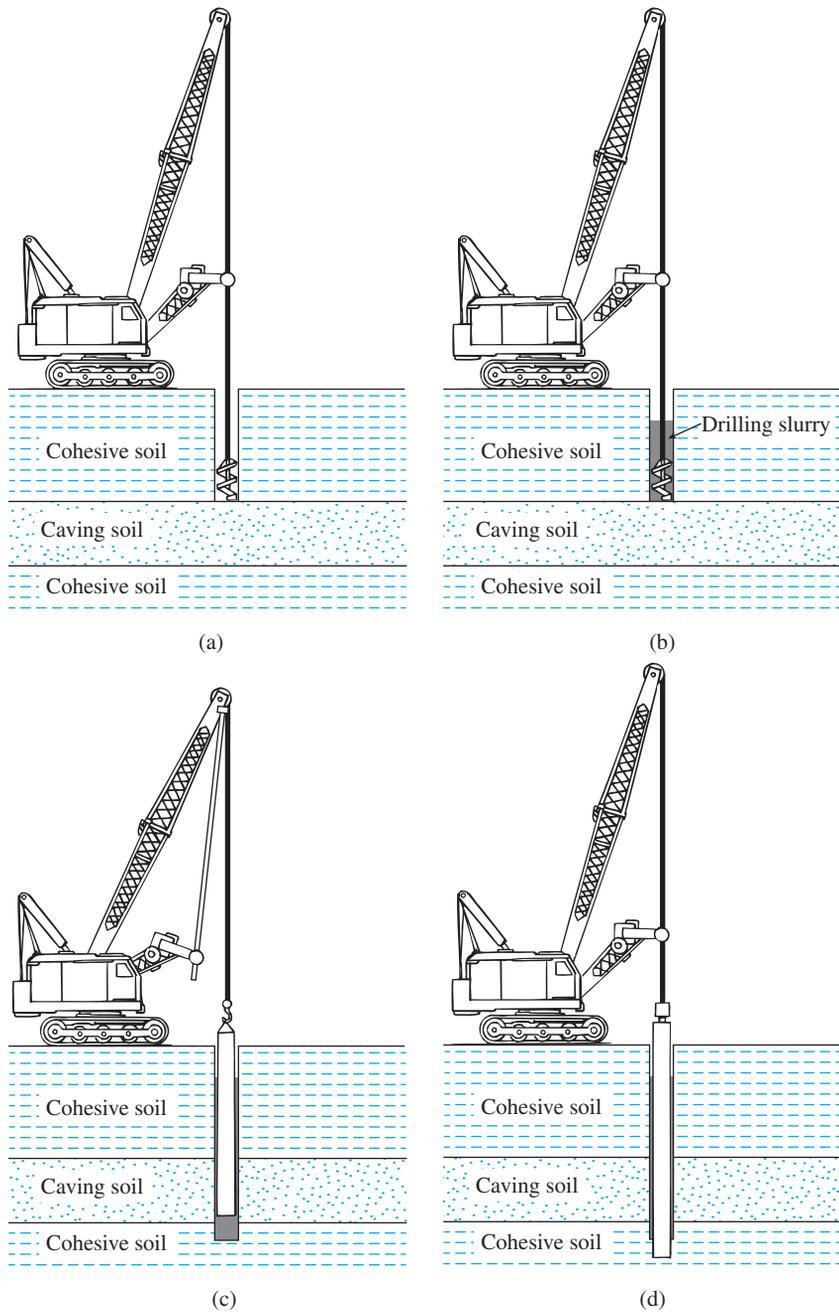

**Figure 10.3** Casing method of construction: (a) initiating drilling; (b) drilling with slurry; (c) introducing casing; (d) casing is sealed and slurry is being removed from interior of casing; (e) drilling below casing; (f) underreaming; (g) removing casing; (h) completed shaft (Based on O’Neill and Reese, 1999)


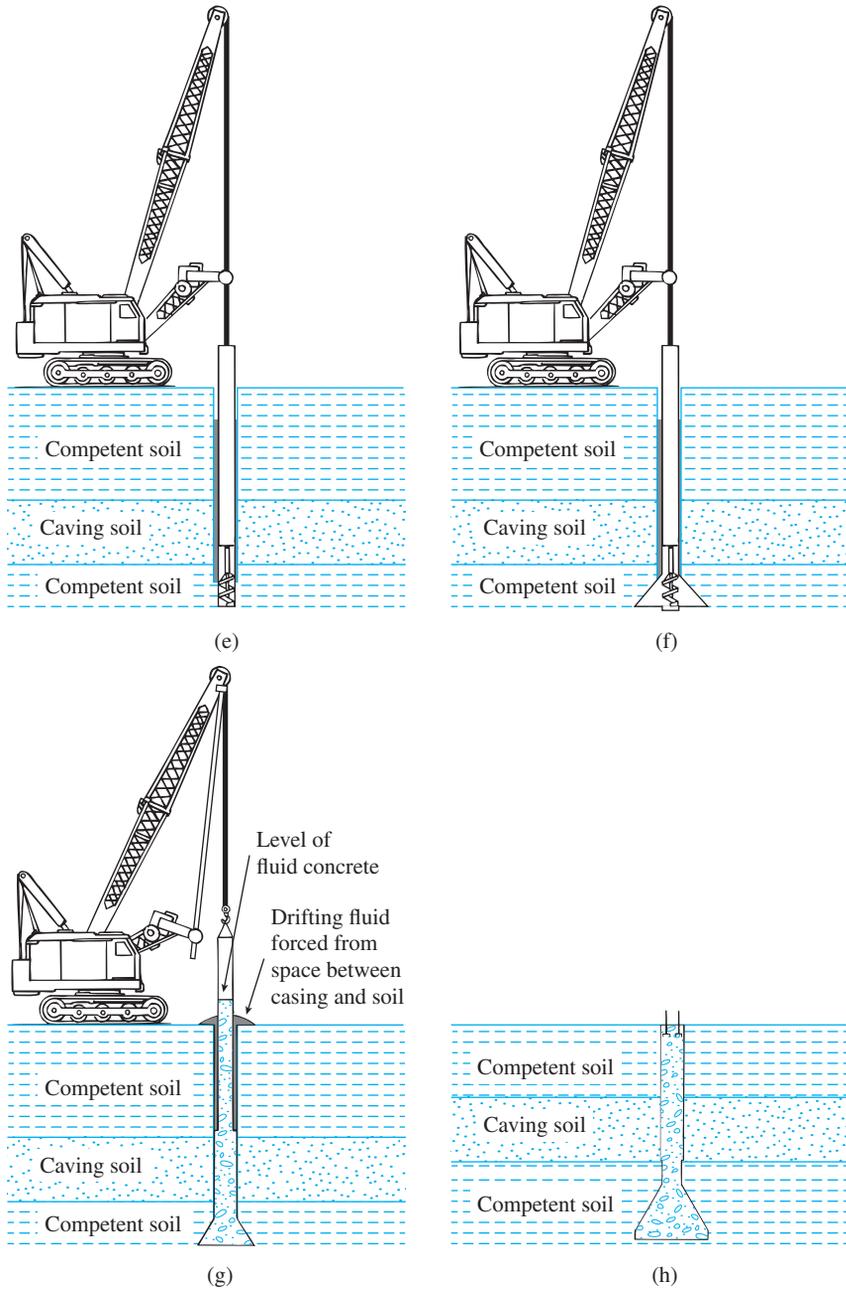


Figure 10.3 (Continued)

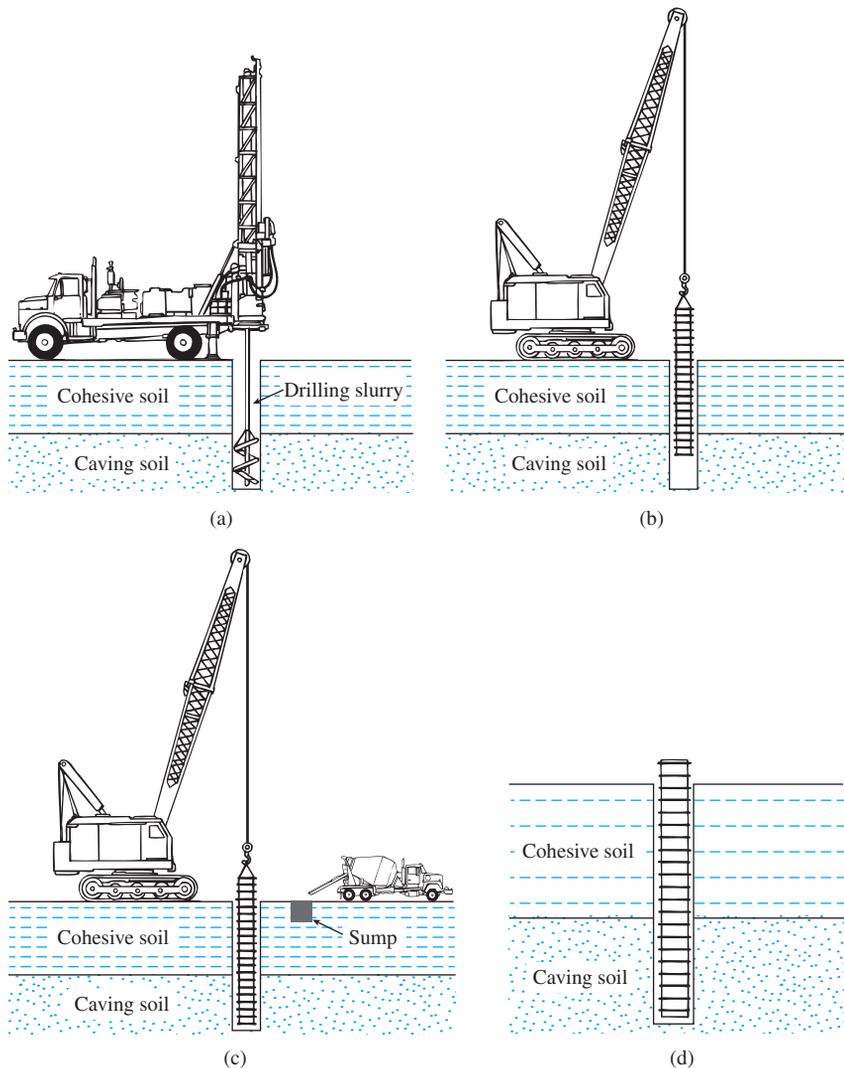

**Figure 10.4** Slurry method of construction: (a) drilling to full depth with slurry; (b) placing rebar cage; (c) placing concrete; (d) completed shaft (After O’Neill and Reese, 1999)

- Step 1.* Excavation continues to full depth with slurry. (See Figure 10.4a.)
- Step 2.* If reinforcement is required, the rebar cage is placed in the slurry. (See Figure 10.4b.)
- Step 3.* Concrete that will displace the volume of slurry is then placed in the drill hole. (See Figure 10.4c.)
- Step 4.* Figure 10.4d shows the completed drilled shaft.

Figure 10.5 shows a drilled shaft under construction using the dry method. The construction of a drilled shaft using the wet method is shown in Figure 10.6. A typical auger, a reinforcement cage, and a typical clean-out bucket are shown in Figure 10.7.



**Figure 10.5** Drilled shaft construction using the dry method (Courtesy of Sanjeev Kumar, Southern Illinois University, Carbondale, Illinois)



**Figure 10.6** Drilled shaft construction using wet method (Courtesy of Khaled Sobhan, Florida Atlantic University, Boca Raton, Florida)



(a)



(b)



(c)

**Figure 10.7** Drilled shaft construction: (a) A typical auger; (b) a reinforcement cage; (c) a clean-out bucket (Courtesy of Khaled Sobhan, Florida Atlantic University, Boca Raton, Florida)

## 10.4 Other Design Considerations

For the design of ordinary drilled shafts without casings, a minimum amount of vertical steel reinforcement is always desirable. Minimum reinforcement is 1% of the gross cross-sectional area of the shaft. For drilled shafts with nominal reinforcement, most building codes suggest using a design concrete strength,  $f_c$ , on the order of  $f'_c/4$ . Thus, the minimum shaft diameter becomes

$$f_c = 0.25f'_c = \frac{Q_w}{A_{gs}} = \frac{Q_w}{\frac{\pi D_s^2}{4}}$$

or

$$D_s = \sqrt{\frac{Q_w}{\left(\frac{\pi}{4}\right)(0.25)f'_c}} = 2.257 \sqrt{\frac{Q_u}{f'_c}} \quad (10.1)$$

where

- $D_s$  = diameter of the shaft
- $f'_c$  = 28-day concrete strength
- $Q_w$  = working load of the drilled shaft
- $A_{gs}$  = gross cross-sectional area of the shaft

If drilled shafts are likely to be subjected to tensile loads, reinforcement should be continued for the entire length of the shaft.

### Concrete Mix Design

The concrete mix design for drilled shafts is not much different from that for any other concrete structure. When a reinforcing cage is used, consideration should be given to the ability of the concrete to flow through the reinforcement. In most cases, a concrete slump of about 15.0 mm (6 in.) is considered satisfactory. Also, the maximum size of the aggregate should be limited to about 20 mm (0.75 in.)


## 10.5 Load Transfer Mechanism

The load transfer mechanism from drilled shafts to soil is similar to that of piles, as described in Section 9.6. Figure 10.8 shows the load test results of a drilled shaft, conducted in a clay soil by Reese et al. (1976). The shaft (Figure 10.8a) had a diameter of 762 mm (30 in.) and a depth of penetration of 6.94 m (22.75 ft). Figure 10.8b shows the load-settlement curves. It can be seen that the total load carried by the drilled shaft was 1246 kN (140 tons). The load carried by side resistance was about 800 kN (90 tons), and the rest was carried by point bearing. It is interesting to note that, with a downward movement of about 6 mm (0.25 in), full side resistance was mobilized. However, about 25 mm ( $\approx 1$  in.) of downward movement was required for mobilization of full point resistance. This situation is similar to that observed in the case of piles. Figure 10.8c shows the average load-distribution curves for different stages of the loading.

## 10.6 Estimation of Load-Bearing Capacity

The ultimate load-bearing capacity of a drilled shaft (see Figure 10.9) is

$$Q_u = Q_p + Q_s \quad (10.2)$$

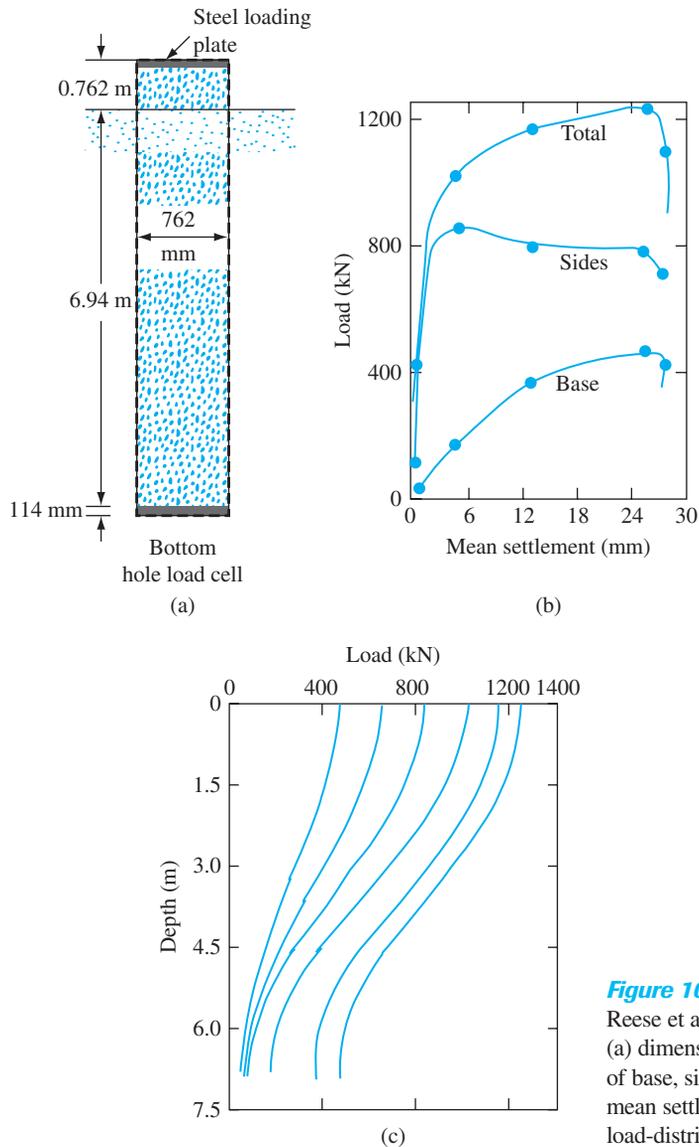

**Figure 10.8** Load test results of Reese et al. (1976) on a drilled shaft: (a) dimensions of the shaft; (b) plot of base, sides, and total load with mean settlement; (c) plot of load-distribution curve with depth

where


$Q_u$  = ultimate load

$Q_p$  = ultimate load-carrying capacity at the base

$Q_s$  = frictional (skin) resistance

The ultimate base load  $Q_p$  can be expressed in a manner similar to the way it is expressed in the case of shallow foundations [Eq. (4.26)], or

$$Q_p = A_p \left( c' N_c F_{cs} F_{cd} F_{cc} + q' N_q F_{qs} F_{qd} F_{qc} + \frac{1}{2} \gamma' N_\gamma F_{\gamma s} F_{\gamma d} F_{\gamma c} \right) \quad (10.3)$$

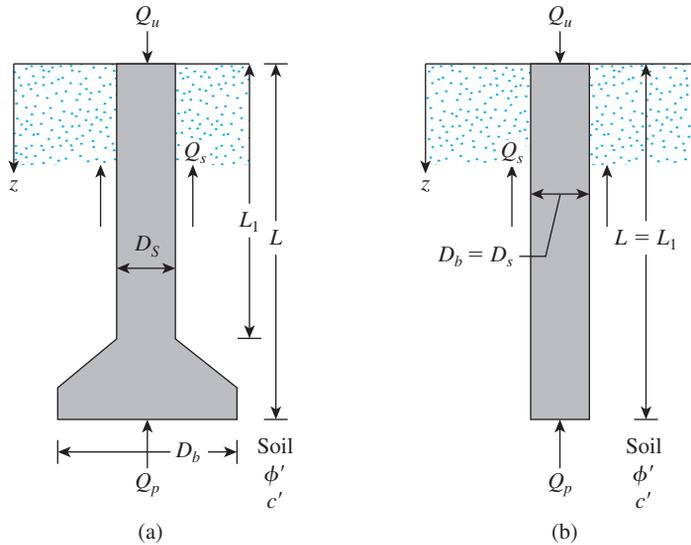

**Figure 10.9** Ultimate bearing capacity of drilled shafts: (a) with bell and (b) straight shaft

where

$$\begin{aligned}
 c' &= \text{cohesion} \\
 N_c, N_q, N_\gamma &= \text{bearing capacity factors} \\
 F_{cs}, F_{qs}, F_{\gamma s} &= \text{shape factors} \\
 F_{cd}, F_{qd}, F_{\gamma d} &= \text{depth factors} \\
 F_{cc}, F_{qc}, F_{\gamma c} &= \text{compressibility factors} \\
 \gamma' &= \text{effective unit weight of soil at the base of the shaft} \\
 q' &= \text{effective vertical stress at the base of the shaft} \\
 A_p &= \text{area of the base} = \frac{\pi}{4} D_b^2
 \end{aligned}$$

In most instances, the last term (the one containing  $N_\gamma$ ) is neglected, except in the case of a relatively short drilled shaft. With this assumption, we can write

$$Q_u = A_p(c'N_cF_{cs}F_{cd}F_{cc} + qN_qF_{qs}F_{qd}F_{qc}) + Q_s \quad (10.4)$$

The procedure to estimate the ultimate capacity of drilled shafts in granular and cohesive soil is described in the following sections.

## 10.7 Drilled Shafts in Granular Soil: Load-Bearing Capacity

### Estimation of $Q_p$

For a drilled shaft with its base located on a granular soil (that is,  $c' = 0$ ), the *net ultimate load-carrying capacity* at the base can be obtained from Eq. (10.4) as

$$Q_{p(\text{net})} = A_p[q'(N_q - 1)F_{qs}F_{qd}F_{qc}] \quad (10.5)$$

The bearing capacity factor,  $N_q$ , for various soil friction angles ( $\phi'$ ) can be taken from Table 4.2. It is also given in Table 10.1. Also,

$$F_{qs} = 1 + \tan \phi' \quad (10.6)$$

$$F_{qd} = 1 + C \underbrace{\tan^{-1}\left(\frac{L}{D_b}\right)}_{\text{radian}} \quad (10.7)$$

$$C = 2 \tan \phi' (1 - \sin \phi')^2 \quad (10.8)$$

The variations of  $F_{qs}$  and  $C$  with  $\phi'$  are given in Table 10.1.

According to Chen and Kulhawy (1994),  $F_{qc}$  can be calculated in the following manner.

*Step 1.* Calculate the critical rigidity index as

$$I_{cr} = 0.5 \exp\left[2.85 \cot\left(45 - \frac{\phi'}{2}\right)\right] \quad (10.9)$$

where  $I_{cr}$  = critical rigidity index (see Table 10.1).

**Table 10.1** Variation of  $N_q$ ,  $F_{qs}$ ,  $C$ ,  $I_{cr}$ ,  $\mu_s$ , and  $n$  with  $\phi'$

Soil friction angle, $\phi'$ (deg)	$N_q$ (Table 4.2)	$F_{qs}$ [Eq. (10.6)]	$C$ [Eq. (10.8)]	$I_{cr}$ [Eq. (10.9)]	$\mu_s$ [Eq. (10.13)]	$n$ [Eq. (10.15)]
25	10.66	1.466	0.311	43.84	0.100	0.00500
26	11.85	1.488	0.308	47.84	0.115	0.00475
27	13.20	1.510	0.304	52.33	0.130	0.00450
28	14.72	1.532	0.299	57.40	0.145	0.00425
29	16.44	1.554	0.294	63.13	0.160	0.00400
30	18.40	1.577	0.289	69.63	0.175	0.00375
31	20.63	1.601	0.283	77.03	0.190	0.00350
32	23.18	1.625	0.276	85.49	0.205	0.00325
33	26.09	1.649	0.269	95.19	0.220	0.00300
34	29.44	1.675	0.262	106.37	0.235	0.00275
35	33.30	1.700	0.255	119.30	0.250	0.00250
36	37.75	1.727	0.247	134.33	0.265	0.00225
37	42.92	1.754	0.239	151.88	0.280	0.00200
38	48.93	1.781	0.231	172.47	0.295	0.00175
39	55.96	1.810	0.223	196.76	0.310	0.00150
40	64.20	1.839	0.214	225.59	0.325	0.00125
41	73.90	1.869	0.206	259.98	0.340	0.00100
42	85.38	1.900	0.197	301.29	0.355	0.00075
43	99.02	1.933	0.189	351.22	0.370	0.00050
44	115.31	1.966	0.180	412.00	0.385	0.00025
45	134.88	2.000	0.172	486.56	0.400	0.00000

Step 2. Calculate the reduced rigidity index as

$$I_{rr} = \frac{I_r}{1 + I_r \Delta} \quad (10.10)$$

where

$$I_r = \text{soil rigidity index} = \frac{E_s}{2(1 + \mu_s)q' \tan \phi'} \quad (10.11)$$

in which

$$E_s = \text{drained modulus of elasticity of soil} = mp_a \quad (10.12)$$

$p_a = \text{atmospheric pressure} (\approx 100 \text{ kN/m}^2 \text{ or } 2000 \text{ lb/ft}^2)$

$$m = \begin{cases} 100 \text{ to } 200 \text{ (loose soil)} \\ 200 \text{ to } 500 \text{ (medium dense soil)} \\ 500 \text{ to } 1000 \text{ (dense soil)} \end{cases}$$

$$\mu_s = \text{Poisson's ratio of soil} = 0.1 + 0.3 \left( \frac{\phi' - 25}{20} \right)$$

$$(\text{for } 25^\circ \leq \phi' \leq 45^\circ) \text{ (see Table 10.1)} \quad (10.13)$$

$$\Delta = n \frac{q'}{p_a} \quad (10.14)$$

$$n = 0.005 \left( 1 - \frac{\phi' - 25}{20} \right) \text{ (see Table 10.1)} \quad (10.15)$$

Step 3. If  $I_{rr} \geq I_{cr}$ , then

$$F_{qc} = 1 \quad (10.16)$$

However, if  $I_{rr} < I_{cr}$ , then

$$F_{qc} = \exp \left\{ (-3.8 \tan \phi') + \left[ \frac{(3.07 \sin \phi') (\log_{10} 2I_{rr})}{1 + \sin \phi'} \right] \right\} \quad (10.17)$$

The magnitude of  $Q_{p(\text{net})}$  also can be reasonably estimated from a relationship based on the analysis of Berezantzev et al. (1961) that can be expressed as

$$Q_{p(\text{net})} = A_p q' (\omega N_q^* - 1) \quad (10.18)$$

where

$$N_q^* = \text{bearing capacity factor} = 0.21e^{0.17\phi'} \quad (\text{See Table 10.2}) \quad (10.19)$$

$$\omega = \text{correction factor} = f(L/D_b)$$

In Eq. (10.19),  $\phi'$  is in degrees. The variation of  $\omega$  (interpolated values) with  $L/D_b$  is given in Table 10.3.

**Table 10.2** Variation of  $N_q^*$  with  $\phi'$  [Eq. (10.19)]

$\phi'$ (deg)	$N_q^*$
25	14.72
26	17.45
27	20.68
28	24.52
29	29.06
30	34.44
31	40.83
32	48.39
33	57.36
34	67.99
35	80.59
36	95.52
37	113.22
38	134.20
39	159.07
40	188.55
41	223.49
42	264.90
43	313.99
44	372.17
45	441.14

**Table 10.3** Variation of  $\omega$  with  $\phi'$  and  $L/D_b$

Soil friction angle, $\phi'$ (deg)	$L/D_b$				
	5	10	15	20	25
26	0.744	0.619	0.546	0.49	0.439
28	0.757	0.643	0.572	0.525	0.475
30	0.774	0.671	0.606	0.568	0.525
32	0.787	0.697	0.641	0.615	0.581
34	0.804	0.727	0.680	0.654	0.632
36	0.822	0.753	0.716	0.692	0.675
38	0.839	0.774	0.746	0.723	0.712
40	0.849	0.796	0.770	0.744	0.735

### Estimation of $Q_s$

The frictional resistance at ultimate load,  $Q_s$ , developed in a drilled shaft may be calculated as

$$Q_s = \int_0^{L_1} p f dz \quad (10.20)$$

where

$$p = \text{shaft perimeter} = \pi D_s$$

$$f = \text{unit frictional (or skin) resistance} = K \sigma'_o \tan \delta' \quad (10.21)$$

$$K = \text{earth pressure coefficient} \approx K_o = 1 - \sin \phi' \quad (10.22)$$

$\sigma'_o$  = effective vertical stress at any depth  $z$

Thus,

$$Q_s = \int_0^{L_1} p f dz = \pi D_s (1 - \sin \phi') \int_0^{L_1} \sigma'_o \tan \delta' dz \quad (10.23)$$

The value of  $\sigma'_o$  will increase to a depth of about  $15D_s$  and will remain constant thereafter, as shown in Figure 9.16.

For cast-in-pile concrete and good construction techniques, a rough interface develops and, hence,  $\delta'/\phi'$  may be taken to be one. With poor slurry construction,  $\delta'/\phi' \approx 0.7$  to  $0.8$ .

### Allowable Net Load, $Q_{\text{all (net)}}$

An appropriate factor of safety should be applied to the ultimate load to obtain the net allowable load, or

$$Q_{\text{all (net)}} = \frac{Q_{p(\text{net})} + Q_s}{\text{FS}} \quad (10.24)$$

## 10.8 Load-Bearing Capacity Based on Settlement

On the basis of a database of 41 loading tests, Reese and O'Neill (1989) proposed a method for calculating the load-bearing capacity of drilled shafts that is based on settlement. The method is applicable to the following ranges:

1. Shaft diameter:  $D_s = 0.52$  to  $1.2$  m (1.7 to 3.93 ft)
2. Bell depth:  $L = 4.7$  to  $30.5$  m (15.4 to 100 ft)
3. Field standard penetration resistance:  $N_{60} = 5$  to  $60$
4. Concrete slump =  $100$  to  $225$  mm (4 to 9 in.)

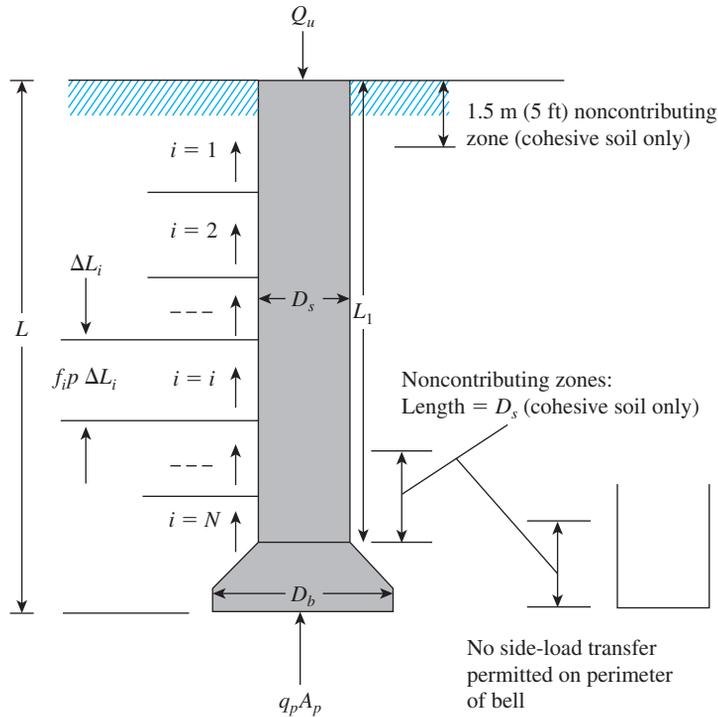


Figure 10.10 Development of Eq. (10.25)

Reese and O'Neill's procedure (see Figure 10.10) gives

$$Q_{u(\text{net})} = \sum_{i=1}^N f_i p \Delta L_i + q_p A_p \quad (10.25)$$

where

$f_i$  = ultimate unit shearing resistance in layer  $i$

$p$  = perimeter of the shaft =  $\pi D_s$

$q_p$  = unit point resistance

$A_p$  = area of the base =  $(\pi/4)D_b^2$

$$f_i = \beta_1 \sigma'_{\text{oz}i} < \beta_2 \quad (10.26)$$

where  $\sigma'_{\text{oz}i}$  = vertical effective stress at the middle of layer  $i$ .

$$\beta_1 = \beta_3 - \beta_4 z_i^{0.5} \quad (\text{for } 0.25 \leq \beta_1 \leq 1.2) \quad (10.27)$$

The units for  $f_i$ ,  $z_i$ , and  $\sigma'_{ozi}$  and the magnitude of  $\beta_2$ ,  $\beta_3$ , and  $\beta_4$  in the SI and English systems are

Item	SI	English
$f_i$	kN/m <sup>2</sup>	kip/ft <sup>2</sup>
$z_i$	m	ft
$\sigma'_{ozi}$	kN/m <sup>2</sup>	kip/ft <sup>2</sup>
$\beta_2$	192 kN/m <sup>2</sup>	4 kip/ft <sup>2</sup>
$\beta_3$	1.5	1.5
$\beta_4$	0.244	0.135

The point bearing capacity is

$$q_p = \beta_5 N_{60} \leq \beta_6 \quad [\text{for } D_b < 1.27 \text{ m (50 in.)}] \quad (10.28)$$

where  $N_{60}$  = field standard penetration number within a distance of  $2D_b$  below the base of the drilled shaft.

The magnitudes of  $\beta_5$  and  $\beta_6$  and the unit of  $q_p$  in the SI and English systems are given here.

Item	SI	English
$\beta_5$	57.5	1.2
$\beta_6$	4310 kN/m <sup>2</sup>	90 kip/ft <sup>2</sup>
$q_p$	kN/m <sup>2</sup>	kip/ft <sup>2</sup>

If  $D_b$  is equal to or greater than 1.27 m (50 in.), excessive settlement may occur. In that case,  $q_p$  may be replaced by  $q_{pr}$ .

SI Units:

$$q_{pr} = \frac{1.27}{D_b(\text{m})} q_p \quad (10.29a)$$

English Units:

$$q_{pr} = \frac{50}{D_b(\text{in.})} q_p \quad (10.29b)$$

Based on the desired level of settlement, Figures 10.11 and 10.12 may now be used to calculate the allowable load,  $Q_{\text{all}(\text{net})}$ . Note that the trend lines given in these figures is the average of all test results.

Rollins et al. (2005) have modified Eq. (10.27) for gravelly sands as follows.

- For sand with 25 to 50% gravel,

$$\beta_1 = \beta_7 - \beta_8 z_i^{0.75} \quad (\text{for } 0.25 \leq \beta_1 \leq 1.8) \quad (10.30)$$

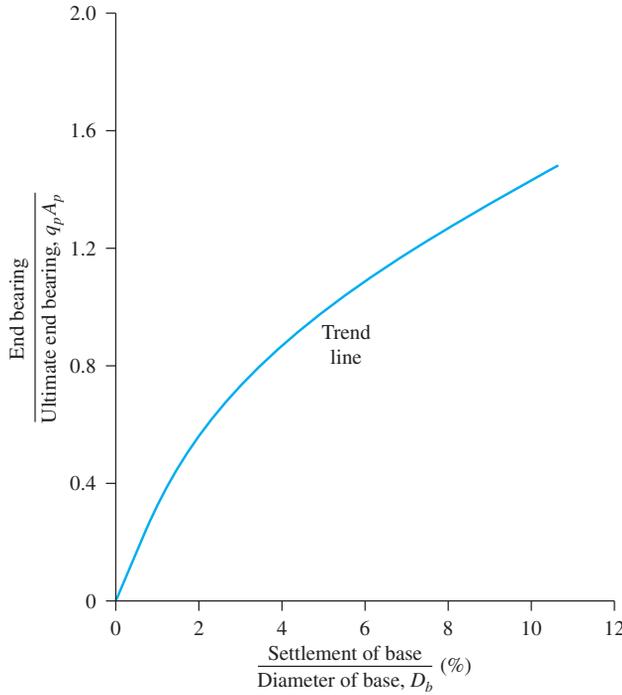


Figure 10.11 Normalized base-load transfer versus settlement in sand

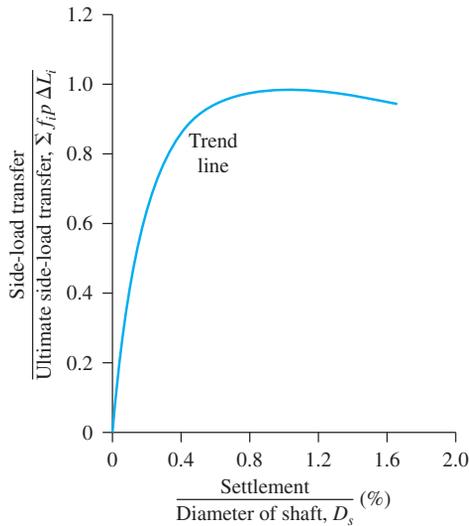


Figure 10.12 Normalized side-load transfer versus settlement in sand



- For sand with more than 50% gravel,

$$\beta_1 = \beta_9 e^{-\beta_{10} z_i} \text{ (for } 0.25 \leq \beta_1 \leq 3.0) \tag{10.31}$$

The magnitudes of  $\beta_7$ ,  $\beta_8$ ,  $\beta_9$ , and  $\beta_{10}$  and the unit of  $z_i$  in the SI and English systems are given here.

Item	SI	English
$\beta_7$	2.0	2.0
$\beta_8$	0.15	0.062
$\beta_9$	3.4	3.4
$\beta_{10}$	-0.085	-0.026
$z_i$	m	ft

Figure 10.13 provides the normalized side-load transfer trend based on the desired level of settlement for gravelly sand and gravel.

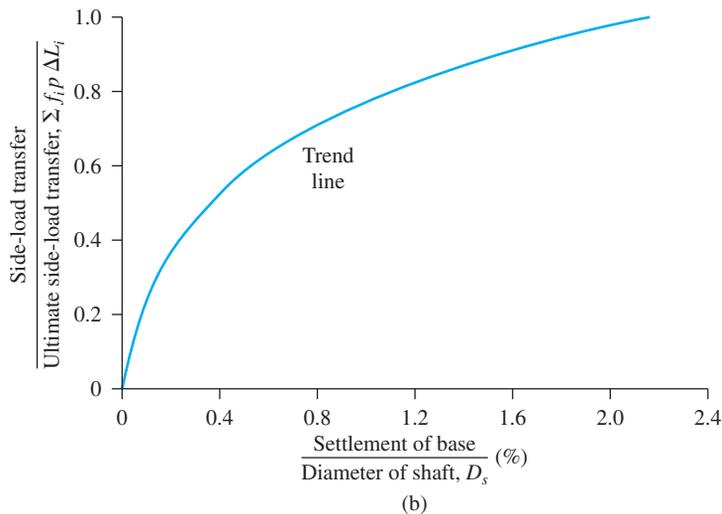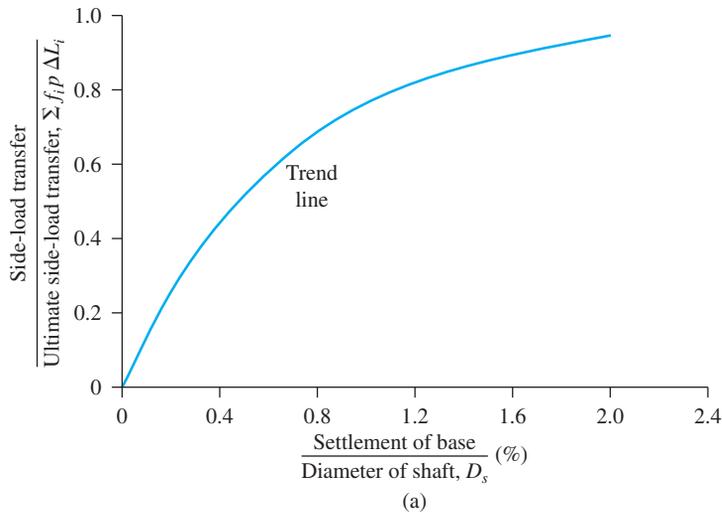

**Figure 10.13** Normalized side-load transfer versus settlement: (a) gravelly sand (gravel 25 to 50%) and (b) gravel (more than 50%)

### Example 10.1

A soil profile is shown in Figure 10.14. A point bearing drilled shaft with a bell is placed in a layer of dense sand and gravel. Determine the allowable load the drilled shaft could carry. Use Eq. (10.5) and a factor of safety of 4. Take  $D_s = 1$  m and  $D_b = 1.75$  m. For the dense sand layer,  $\phi' = 36^\circ$ ;  $E_s = 500p_a$ . Ignore the frictional resistance of the shaft.

#### Solution

We have

$$Q_{p(\text{net})} = A_p[q'(N_q - 1)F_{qs}F_{qd}F_{qc}]$$

and

$$q' = (6)(16.2) + (2)(19.2) = 135.6 \text{ kN/m}^2$$

For  $\phi' = 36^\circ$ , from Table 10.1,  $N_q = 37.75$ . Also,

$$F_{qs} = 1.727$$

and

$$\begin{aligned} F_{qd} &= 1 + C \tan^{-1}\left(\frac{L}{D_b}\right) \\ &= 1 + 0.247 \tan^{-1}\left(\frac{8}{1.75}\right) = 1.335 \end{aligned}$$

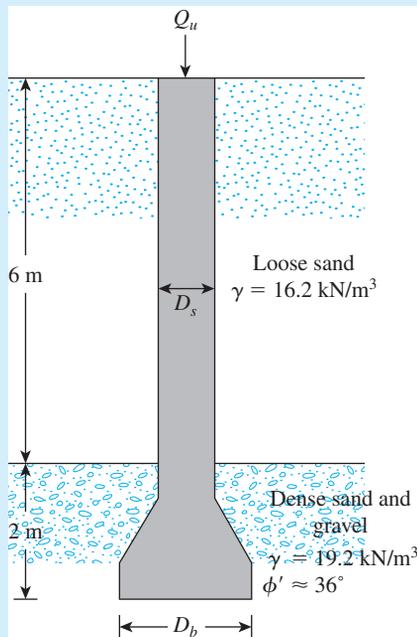


Figure 10.14 Allowable load of drilled shaft

From Eq. (10.9),

$$I_{cr} = 0.5 \exp \left[ 2.85 \cot \left( 45 - \frac{\phi'}{2} \right) \right] = 134.3 \quad (\text{See Table 10.1})$$

From Eq. (10.12),  $E_s = mp_a$ . With  $m = 500$ , we have

$$E_s = (500)(100) = 50,000 \text{ kN/m}^2$$

From Eq. (10.13) and Table 10.1,

$$\mu_s = 0.265$$

So

$$I_r = \frac{E_s}{2(1 + \mu_s)(q')(\tan \phi')} = \frac{50,000}{2(1 + 0.265)(135.6)(\tan 36)} = 200.6$$

From Eq. (10.10),

$$I_{rr} = \frac{I_r}{1 + I_r \Delta}$$

with

$$\Delta = n \frac{q'}{p_a} = 0.00225 \left( \frac{135.6}{100} \right) = 0.0031$$

it follows that

$$I_{rr} = \frac{200.6}{1 + (200.6)(0.0031)} = 123.7$$

$I_{rr}$  is less than  $I_{cr}$ . So, from Eq. (10.17),

$$\begin{aligned} F_{qc} &= \exp \left\{ (-3.8 \tan \phi') + \left[ \frac{(3.07 \sin \phi')(\log_{10} 2I_{rr})}{1 + \sin \phi'} \right] \right\} \\ &= \exp \left\{ (-3.8 \tan 36) + \left[ \frac{(3.07 \sin 36) \log (2 \times 123.7)}{1 + \sin 36} \right] \right\} = 0.958 \end{aligned}$$

Hence,

$$Q_{p(\text{net})} = \left[ \left( \frac{\pi}{4} \right) (1.75)^2 \right] (135.6) (37.75 - 1) (1.727) (1.335) (0.958) = 26,474 \text{ kN}$$

and

$$Q_{p(\text{all})} = \frac{Q_{p(\text{net})}}{\text{FS}} = \frac{26,474}{4} \approx \mathbf{6619 \text{ kN}}$$

### Example 10.2

Solve Example 10.1 using Eq. (10.18).

#### Solution

Equation (10.18) asserts that

$$Q_{p(\text{net})} = A_p q' (\omega N_q^* - 1)$$

We have (also see Table 10.2)

$$N_q^* = 0.21e^{0.17\phi'} = 0.21e^{(0.17)(36)} = 95.52$$

and

$$\frac{L}{D_b} = \frac{8}{1.75} = 4.57$$

From Table 10.3, for  $\phi' = 36^\circ$  and  $L/D_b = 4.57$ , the value of  $\omega$  is about 0.83. So

$$Q_{p(\text{net})} = \left[ \left( \frac{\pi}{4} \right) (1.75)^2 \right] (135.6) [(0.83)(95.52) - 1] = 25,532 \text{ kN}$$

and

$$Q_{p(\text{all})} = \frac{25,532}{4} = \mathbf{6383 \text{ kN}}$$

### Example 10.3

A drilled shaft is shown in Figure 10.15. The uncorrected average standard penetration number ( $N_{60}$ ) within a distance of  $2D_b$  below the base of the shaft is about 30. Determine

- The ultimate load-carrying capacity
- The load-carrying capacity for a settlement of 12mm. Use Eq. (10.30).

#### Solution

Part a


From Eqs. (10.26) and (10.27),

$$f_i = \beta_1 \sigma'_{ozi}$$

and from Eq. (10.30),

$$\beta_1 = 2.0 - 0.15z_i^{0.75}$$

We can divide the sandy gravel layer into two layers, each having a thickness of 3 m. Now the following table can be prepared.

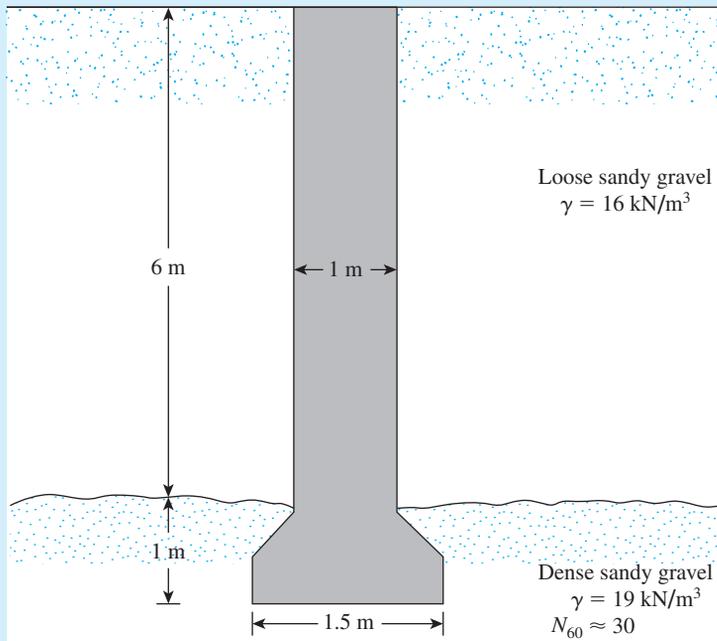

**Figure 10.15** Drilled shaft supported by a dense layer of sandy gravel

Layer no.	Depth to the middle of the layer, $z_i$ (m)	$\beta_i = 2 - 0.15z_i^{0.75}$	$\sigma'_{ozi} = \gamma z_i$ (kN/m <sup>2</sup> )	$f_i = \beta_i \sigma'_{ozi}$ (kN/m <sup>2</sup> )
1	1.5	1.797	24	43.13
2	4.5	1.537	72	110.66

Thus,

$$\sum f_i p \Delta L_i = (\pi \times 1)[(43.13)(3) + (110.66)(3)] = 1449.4 \text{ kN}$$

From Eq. (10.28),

$$q_p = 57.5N_{60} = (57.5)(30) = 1725 \text{ kN/m}^2$$

Note that  $D_b$  is greater than 1.27. So we will use Eq. (10.29a).

$$q_{pr} = \left(\frac{1.27}{D_b}\right)q_p = \left(\frac{1.27}{1.5}\right)(1725) \approx 1461 \text{ kN/m}^2$$

Now

$$q_{pr}A_p = (1461)\left(\frac{\pi}{4} \times 1.5^2\right) \approx 2582 \text{ kN}$$

Hence,

$$Q_{\text{ult}(\text{net})} = q_{pr}A_p + \sum f_i p \Delta L_i = 2582 + 1449.4 = \mathbf{4031.4 \text{ kN}}$$

Part b

We have

$$\frac{\text{Allowable settlement}}{D_s} = \frac{12}{(1.0)(1000)} = 0.12 = 1.2\%$$

The trend line in Figure 10.13a shows that, for a normalized settlement of 1.2%, the normalized load is about 0.8. Thus, the side-load transfer is  $(0.8)(1449.4) \approx 1160 \text{ kN}$ . Similarly,

$$\frac{\text{Allowable settlement}}{D_b} = \frac{12}{(1.5)(1000)} = 0.008 = 0.8\%$$

The trend line shown in Figure 10.11 indicates that, for a normalized settlement of 0.8%, the normalized base load is 0.235. So the base load is  $(0.235)(2582) = 606.77 \text{ kN}$ . Hence, the total load is

$$Q = 1160 + 606.77 \approx \mathbf{1767 \text{ kN}} \quad \blacksquare$$

## 10.9 Drilled Shafts in Clay: Load-Bearing Capacity

For saturated clays with  $\phi = 0$ , the bearing capacity factor  $N_q$  in Eq. (10.4) is equal to unity. Thus, for this case,

$$Q_{p(\text{net})} \approx A_p c_u N_c F_{cs} F_{cd} F_{cc} \quad (10.32)$$

where  $c_u$  = undrained cohesion.

Assuming that  $L \geq 3D_b$ , we can rewrite Eq. (10.32) as

$$Q_{p(\text{net})} = A_p c_u N_c^* \quad (10.33)$$

where  $N_c^* = N_c F_{cs} F_{cd} F_{cc} = 1.33[(\ln I_r) + 1]$  in which  $\left(\text{for } \frac{L}{D_b} > 3\right) I_r$  = soil rigidity index. (10.34)

The soil rigidity index was defined in Eq. (10.11). For  $\phi = 0$ ,

$$I_r = \frac{E_s}{3c_u} \quad (10.35)$$

**Table 10.4** Approximate Variation of  $E_s/3c_u$  with  $N_c^*$  and  $c_u/p_a$  (Based on data from Reese and O'Neill, 1999)

$c_u/p_a$	$E_s/3c_u$	$N_c^*$
0.25	50	6.5
0.5	150	8.0
$\geq 1.0$	250–300	9.0

O'Neill and Reese (1999) provided an approximate relationship between  $c_u$  and  $E_s/3c_u$ . This is summarized in Table 10.4. For all practical purposes, if  $c_u/p_a$  is equal to or greater than unity ( $p_a =$  atmospheric pressure  $\approx 100 \text{ kN/m}^2$  or  $2000 \text{ lb/ft}^2$ ), then the magnitude of  $N_c^*$  can be taken to be 9.

For  $L/D_b < 3$  (O'Neill and Reese, 1999),

$$Q_{p(\text{net})} = A_p \left\{ \frac{2}{3} \left[ 1 + \frac{1}{6} \left( \frac{L}{D_b} \right) \right] \right\} c_u N_c^* \quad (10.36)$$

Experiments by Whitaker and Cooke (1966) showed that, for belled shafts, the full value of  $N_c^* = 9$  is realized with a base movement of about 10 to 15% of  $D_b$ . Similarly, for straight shafts ( $D_b = D_s$ ), the full value of  $N_c^* = 9$  is obtained with a base movement of about 20% of  $D_b$ .

The expression for the skin resistance of drilled shafts in clay is similar to Eq. (9.59), or

$$Q_s = \sum_{L=0}^{L=L_1} \alpha^* c_u p \Delta L \quad (10.37)$$

Kulhawy and Jackson (1989) reported the field-test result of 106 straight drilled shafts—65 in uplift and 41 in compression. The best correlation obtained from the results is

$$\alpha^* = 0.21 + 0.25 \left( \frac{p_a}{c_u} \right) \leq 1 \quad (10.38)$$

where  $p_a =$  atmospheric pressure  $\approx 100 \text{ kN/m}^2$  ( $\approx 2000 \text{ lb/ft}^2$ ).

So, conservatively, we may assume that

$$\alpha^* = 0.4 \quad (10.39)$$

## 10.10 Load-Bearing Capacity Based on Settlement

Reese and O'Neill (1989) suggested a procedure for estimating the ultimate and allowable (based on settlement) bearing capacities for drilled shafts in clay. According to this procedure, we can use Eq. (10.25) for the net ultimate load, or

$$Q_{\text{ult(net)}} = \sum_{i=1}^n f_i p \Delta L_i + q_p A_p$$

The unit skin friction resistance can be given as

$$f_i = \alpha_i^* c_{u(i)} \quad (10.40)$$

The following values are recommended for  $\alpha_i^*$ :

$\alpha_i^* = 0$  for the top 1.5 m (5 ft) and bottom 1 diameter,  $D_s$ , of the drilled shaft. (*Note:* If  $D_b > D_s$ , then  $\alpha^* = 0$  for 1 diameter above the top of the bell and for the peripheral area of the bell itself.)

$\alpha_i^* = 0.55$  elsewhere.

The expression for  $q_p$  (point load per unit area) can be given as

$$q_p = 6c_{ub} \left( 1 + 0.2 \frac{L}{D_b} \right) \leq 9c_{ub} \leq 40p_a \quad (10.41)$$

where

$c_{ub}$  = average undrained cohesion within a vertical distance of  $2D_b$  below the base

$p_a$  = atmospheric pressure

If  $D_b$  is large, excessive settlement will occur at the ultimate load per unit area,  $q_p$ , as given by Eq. (10.41). Thus, for  $D_b > 1.91$  m (75 in.),  $q_p$  may be replaced by

$$q_{pr} = F_r q_p \quad (10.42)$$

where

$$F_r = \frac{2.5}{\psi_1 D_b + \psi_2} \leq 1 \quad (10.43)$$

The relations for  $\psi_1$  and  $\psi_2$  along with the unit of  $D_b$  in the SI and English systems are given in Table 10.5.

Figures 10.16 and 10.17 may now be used to evaluate the allowable load-bearing capacity, based on settlement. (Note that the ultimate bearing capacity in Figure 10.16 is  $q_p$ , not  $q_{pr}$ .) To do so,

**Table 10.5** Relationships for  $\psi_1$  and  $\psi_2$ 


Item	SI	English
$\psi_1$	$\psi_1 = 2.78 \times 10^{-4} + 8.26 \times 10^{-5} \left( \frac{L}{D_b} \right) \leq 5.9 \times 10^{-4}$	$\psi_1 = 0.0071 + 0.0021 \left( \frac{L}{D_b} \right) \leq 0.015$
$\psi_2$	$\psi_2 = 0.065 [c_{ub} (\text{kN/m}^2)]^{0.5}$ ( $0.5 \leq \psi_2 \leq 1.5$ )	$\psi_2 = 0.45 [c_{ub} (\text{kip/ft}^2)]^{0.5}$ $0.5 \leq \psi_2 \leq 1.5$
$D_b$	mm	in.

*Step 1.* Select a value of settlement,  $s$ .


*Step 2.* Calculate  $\sum_{i=1}^N f_i p \Delta L_i$  and  $q_p A_p$ .

*Step 3.* Using Figures 10.16 and 10.17 and the calculated values in Step 2, determine the *side load* and the *end bearing load*.

*Step 4.* The sum of the side load and the end bearing load gives the total allowable load.

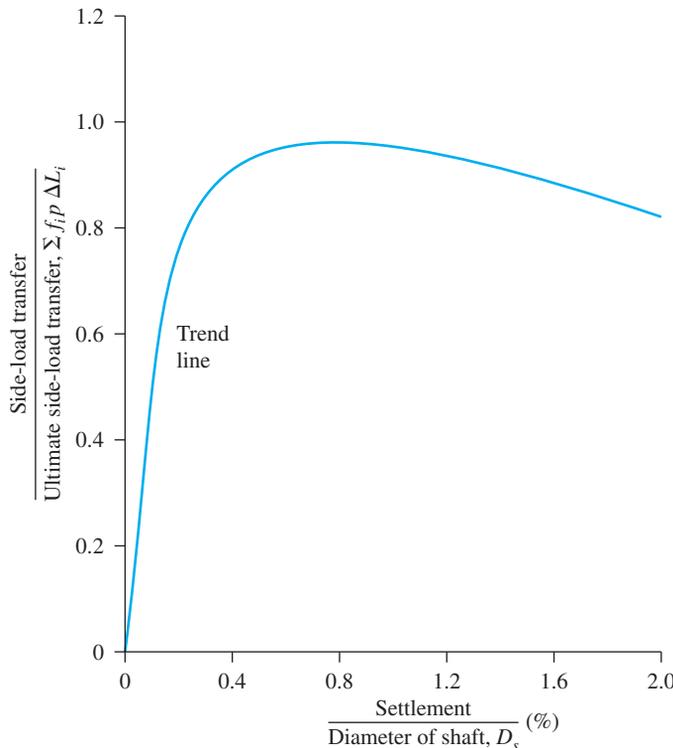

**Figure 10.16** Normalized side-load transfer versus settlement in cohesive soil

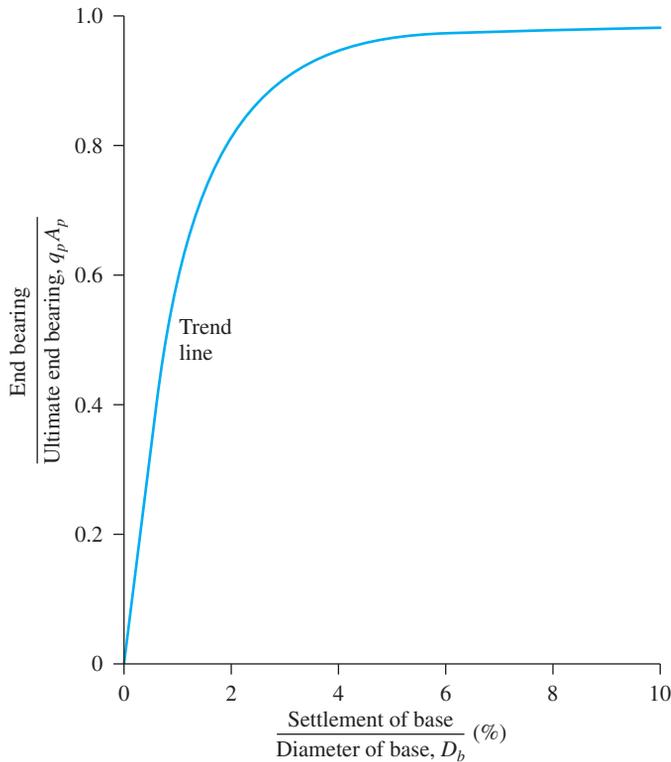

**Figure 10.17** Normalized base-load transfer versus settlement in cohesive soil

### Example 10.4

Figure 10.18 shows a drilled shaft without a bell. Here,  $L_1 = 27$  ft,  $L_2 = 8.5$  ft,  $D_s = 3.3$  ft,  $c_{u(1)} = 1000$  lb/ft<sup>2</sup>, and  $c_{u(2)} = 2175$  lb/ft<sup>2</sup>. Determine

- The net ultimate point bearing capacity
- The ultimate skin resistance
- The working load,  $Q_w$  (FS = 3)

Use Eqs. (10.33), (10.37), and (10.39).


### Solution

Part a

From Eq. (10.33),

$$Q_{p(\text{net})} = A_p c_{u(2)} N_c^* = A_p c_{u(2)} N_c^* = \left[ \left( \frac{\pi}{4} \right) (3.3)^2 \right] (2175)(9) = 167,425 \text{ lb} \\ \approx 167.4 \text{ kip}$$

(Note: Since  $c_{u(2)}/p_a > 1$ ,  $N_c^* \approx 9$ .)

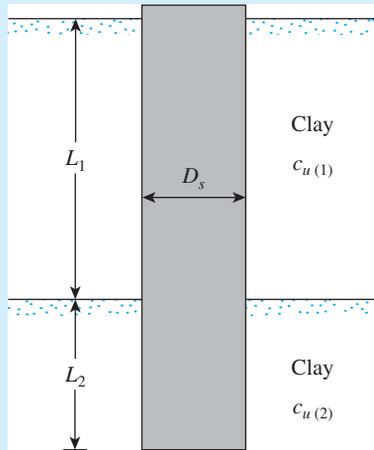

**Figure 10.18** A drill shaft without a bell

Part b

From Eq. (10.37),

$$Q_s = \Sigma \alpha^* c_u p \Delta L$$

From Eq. (10.39),

$$\alpha^* = 0.4$$

$$p = \pi D_s = (3.14)(3.3) = 10.37 \text{ ft}$$

and

$$Q_s = (0.4)(10.37)[(1000 \times 27) + (2175 \times 8.5)] = \mathbf{188,682 \text{ lb}}$$

$$\approx \mathbf{188.7 \text{ kip}}$$


Part c

$$Q_w = \frac{Q_{p(\text{net})} + Q_s}{\text{FS}} = \frac{167.4 + 188.7}{3} = \mathbf{118.7 \text{ kip}}$$

### Example 10.5

A drilled shaft in a cohesive soil is shown in Figure 10.19. Use Reese and O'Neill's method to determine the following.

- The ultimate load-carrying capacity.
- The load-carrying capacity for an allowable settlement of 12 mm.

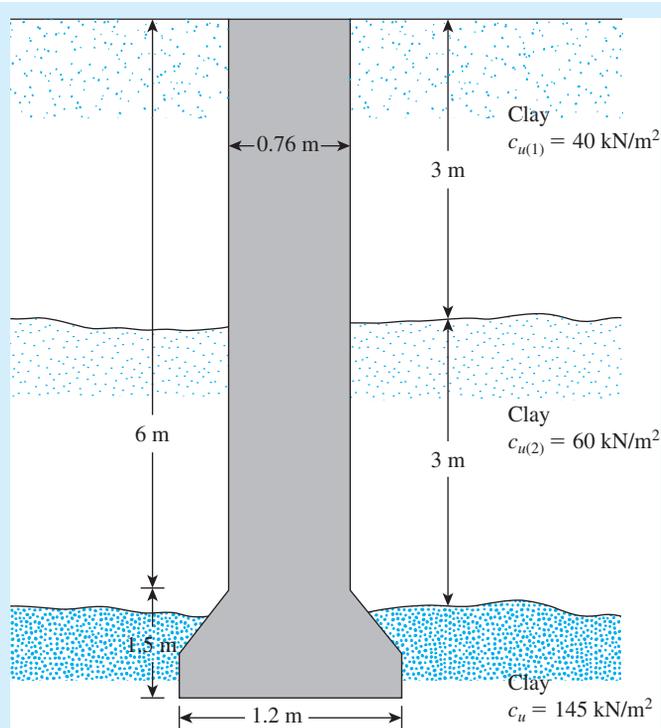

**Figure 10.19** A drilled shaft in layered clay

### Solution

Part a

From Eq. (10.40),

$$f_i = \alpha_i^* c_{u(i)}$$

From Figure 10.19,

$$\Delta L_1 = 3 - 1.5 = 1.5 \text{ m}$$

$$\Delta L_2 = (6 - 3) - D_s = (6 - 3) - 0.76 = 2.24 \text{ m}$$

$$c_{u(1)} = 40 \text{ kN/m}^2$$

and

$$c_{u(2)} = 60 \text{ kN/m}^2$$

Hence,

$$\begin{aligned} \sum f_i p \Delta L_i &= \sum \alpha_i^* c_{u(i)} p \Delta L_i \\ &= (0.55)(40)(\pi \times 0.76)(1.5) + (0.55)(60)(\pi \times 0.76)(2.24) \\ &= 255.28 \text{ kN} \end{aligned}$$

Again, from Eq. (10.41),

$$q_p = 6c_{ub} \left( 1 + 0.2 \frac{L}{D_b} \right) = (6)(145) \left[ 1 + 0.2 \left( \frac{6 + 1.5}{1.2} \right) \right] = 1957.5 \text{ kN/m}^2$$

A check reveals that

$$q_p = 9c_{ub} = (9)(145) = 1305 \text{ kN/m}^2 < 1957.5 \text{ kN/m}^2$$

So we use  $q_p = 1305 \text{ kN/m}^2$

$$q_p A_p = q_p \left( \frac{\pi}{4} D_b^2 \right) = (1305) \left[ \left( \frac{\pi}{4} \right) (1.2)^2 \right] = 1475.9 \text{ kN}$$

Hence,

$$Q_{\text{ult}} = \sum \alpha_i^* c_{u(i)} p \Delta L_i + q_p A_p = 255.28 + 1475.9 \approx \mathbf{1731 \text{ kN}}$$

Part b

We have

$$\frac{\text{Allowable settlement}}{D_s} = \frac{12}{(0.76)(1000)} = 0.0158 = 1.58\%$$

The trend line shown in Figure 10.16 indicates that, for a normalized settlement of 1.58%, the normalized side load is about 0.9. Thus, the side load is

$$(0.9)(\sum f_i p \Delta L_i) = (0.9)(255.28) = 229.8 \text{ kN}$$

Again,

$$\frac{\text{Allowable settlement}}{D_b} = \frac{12}{(1.2)(1000)} = 0.01 = 1.0\%$$

The trend line shown in Figure 10.17 indicates that, for a normalized settlement of 1.0%, the normalized end bearing is about 0.63, so

$$\text{Base load} = (0.63)(q_p A_p) = (0.63)(1475.9) = 929.8 \text{ kN}$$

Thus, the total load is

$$Q = 229.8 + 929.8 = \mathbf{1159.6 \text{ kN}} \quad \blacksquare$$

## 10.11 Settlement of Drilled Shafts at Working Load

The settlement of drilled shafts at working load is calculated in a manner similar to that outlined in Section 9.17. In many cases, the load carried by shaft resistance is small compared with the load carried at the base. In such cases, the contribution of  $s_3$  may be ignored. (Note that in Eqs. (9.82) and (9.83) the term  $D$  should be replaced by  $D_b$  for drilled shafts.)

**Example 10.6**

Refer to Figure 10.18. Given:  $L_1 = 8$  m,  $L_2 = 3$  m,  $D_s = 1.5$  m,  $c_{u(1)} = 50$  kN/m<sup>2</sup>,  $c_{u(2)} = 150$  kN/m<sup>2</sup>, and working load  $Q_w = 1005$  kN. Estimate the elastic settlement at the working load. Use Eqs. (9.81), (9.83), and (9.84). Take  $\xi = 0.65$ ,  $E_p = 21 \times 10^6$  kN/m<sup>2</sup>,  $E_s = 14,000$  kN/m<sup>2</sup>,  $\mu_s = 0.3$ , and  $Q_{wp} = 205$  kN.

**Solution**

From Eq. (9.81),

$$s_{e(1)} = \frac{(Q_{wp} + \xi Q_{ws})L}{A_p E_p}$$

Now,

$$Q_{ws} = 1005 - 250 = 755 \text{ kN}$$

so

$$s_{e(1)} = \frac{[250 + (0.65)(755)](11)}{\left(\frac{\pi}{4} \times 1.5^2\right)(21 \times 10^6)} = 0.00022 \text{ m} = 0.22 \text{ mm}$$

From Eq. (9.83),

$$s_{e(2)} = \frac{Q_{wp} C_p}{D_b q_p}$$

From Table 9.14, for stiff clay,  $C_p \approx 0.04$ ; also,

$$q_p = c_{u(b)} N_c^* = (105)(9) = 945 \text{ kN/m}^2$$

Hence,

$$s_{e(2)} = \frac{(250)(0.04)}{(1.5)(945)} = 0.0071 \text{ m} = 7.1 \text{ mm}$$

Again, from Eqs. (9.84) and (9.85),

$$s_{e(3)} = \left(\frac{Q_{ws}}{pL}\right) \left(\frac{D_s}{E_s}\right) (1 - \mu_s^2) I_{ws}$$

where

$$I_{ws} = 2 + 0.35 \sqrt{\frac{L}{D_s}} = 2 + 0.35 \sqrt{\frac{11}{1.5}} = 2.95$$

$$s_{e(3)} = \left[ \frac{755}{(\pi \times 1.5)(11)} \right] \left( \frac{1.5}{14,000} \right) (1 - 0.3^2)(2.95) = 0.0042 \text{ m} = 4.2 \text{ mm}$$

The total settlement is

$$s_e = s_{e(1)} + s_{e(2)} + s_{e(3)} = 0.22 + 7.1 + 4.2 \approx \mathbf{11.52 \text{ mm}}$$

## 10.12 Lateral Load-Carrying Capacity—Characteristic Load and Moment Method

Several methods for analyzing the lateral load-carrying capacity of piles, as well as the load-carrying capacity of drilled shafts, were presented in Section 9.18; therefore, they will not be repeated here. In 1994, Duncan et al. developed a *characteristic load method* for estimating the lateral load capacity for drilled shafts that is fairly simple to use. We describe this method next.

According to the characteristic load method, the *characteristic load*  $Q_c$  and *moment*  $M_c$  form the basis for the dimensionless relationship that can be given by the following correlations:

### Characteristic Load

$$Q_c = 7.34D_s^2 (E_p R_I) \left( \frac{c_u}{E_p R_I} \right)^{0.68} \quad (\text{for clay}) \quad (10.44)$$

$$Q_c = 1.57D_s^2 (E_p R_I) \left( \frac{\gamma' D_s \phi' K_p}{E_p R_I} \right)^{0.57} \quad (\text{for sand}) \quad (10.45)$$

### Characteristic Moment

$$M_c = 3.86D_s^3 (E_p R_I) \left( \frac{c_u}{E_p R_I} \right)^{0.46} \quad (\text{for clay}) \quad (10.46)$$

$$M_c = 1.33D_s^3 (E_p R_I) \left( \frac{\gamma' D_s \phi' K_p}{E_p R_I} \right)^{0.40} \quad (\text{for sand}) \quad (10.47)$$

In these equations,

$D_s$  = diameter of drilled shafts

$E_p$  = modulus of elasticity of drilled shafts

$R_I$  = ratio of moment of inertia of drilled shaft section to moment of inertia of a solid section (*Note:*  $R_I = 1$  for uncracked shaft without central void)


$\gamma'$  = effective unit weight of sand

$\phi'$  = effective soil friction angle (degrees)

$K_p$  = Rankine passive pressure coefficient =  $\tan^2(45 + \phi'/2)$

### Deflection Due to Load $Q_g$ Applied at the Ground Line

Figures 10.20 and 10.21 give the plot of  $Q_g/Q_c$  versus  $x_o/D_s$  for drilled shafts in sand and clay due to the load  $Q_g$  applied at the ground surface. Note that  $x_o$  is the ground line

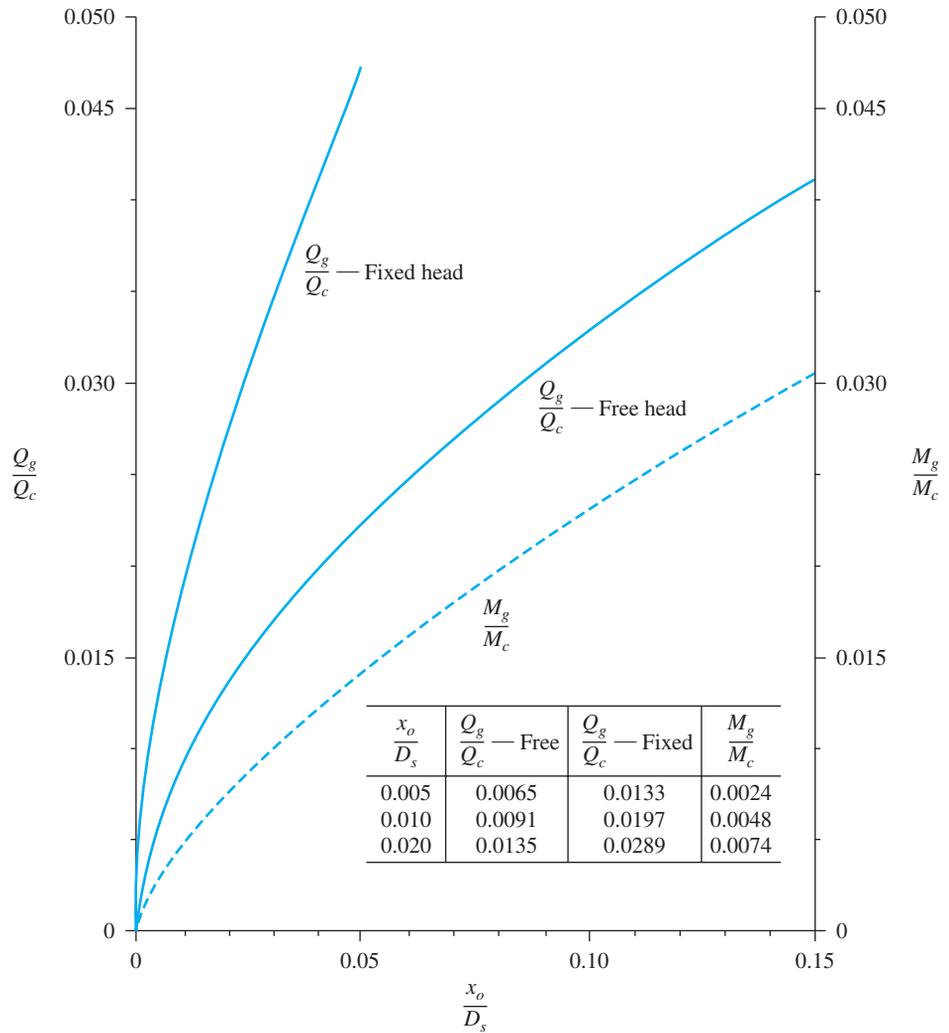


**Figure 10.20** Plot of  $\frac{Q_g}{Q_c}$  and  $\frac{M_g}{M_c}$  versus  $\frac{x_o}{D_s}$  in clay

deflection. If the magnitudes of  $Q_g$  and  $Q_c$  are known, the ratio  $Q_g/Q_c$  can be calculated. The figure can then be used to estimate the corresponding value of  $x_o/D_s$  and, hence,  $x_o$ .

### Deflection Due to Moment Applied at the Ground Line

Figures 10.20 and 10.21 give the variation plot of  $M_g/M_c$  with  $x_o/D_s$  for drilled shafts in sand and clay due to an applied moment  $M_g$  at the ground line. Again,  $x_o$  is the ground line deflection. If the magnitudes of  $M_g$ ,  $M_c$ , and  $D_s$  are known, the value of  $x_o$  can be calculated with the use of the figure.

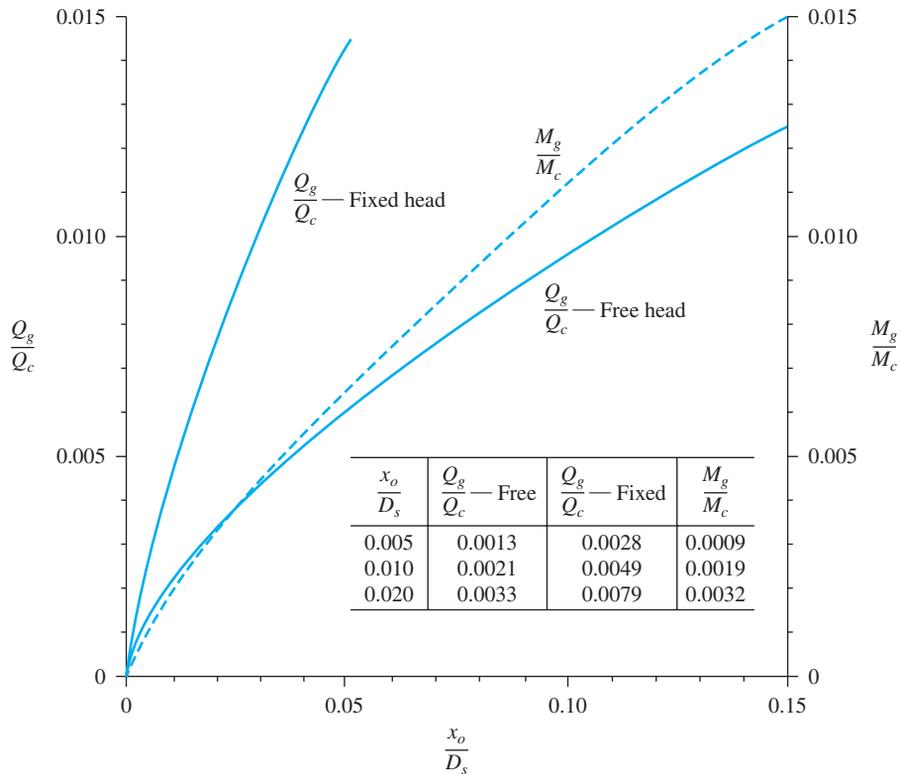


**Figure 10.21** Plot of  $\frac{Q_g}{Q_c}$  and  $\frac{M_g}{M_c}$  versus  $\frac{x_o}{D_s}$  in sand

### Deflection Due to Load Applied above the Ground Line

When a load  $Q$  is applied above the ground line, it induces both a load  $Q_g = Q$  and a moment  $M_g = Qe$  at the ground line, as shown in Figure 10.22a. A superposition solution can now be used to obtain the ground line deflection. The step-by-step procedure is as follows (refer to Figure 10.22b):

- Step 1.* Calculate  $Q_g$  and  $M_g$ .
- Step 2.* Calculate the deflection  $x_{oQ}$  that would be caused by the load  $Q_g$  acting alone.
- Step 3.* Calculate the deflection  $x_{oM}$  that would be caused by the moment acting alone.
- Step 4.* Determine the value of a load  $Q_{gM}$  that would cause the same deflection as the moment (i.e.,  $x_{oM}$ ).
- Step 5.* Determine the value of a moment  $M_{gQ}$  that would cause the same deflection as the load (i.e.,  $x_{oQ}$ ).
- Step 6.* Calculate  $(Q_g + Q_{gM})/Q_c$  and determine  $x_{oQM}/D_s$ .
- Step 7.* Calculate  $(M_g + M_{gQ})/M_c$  and determine  $x_{oMQ}/D_s$ .

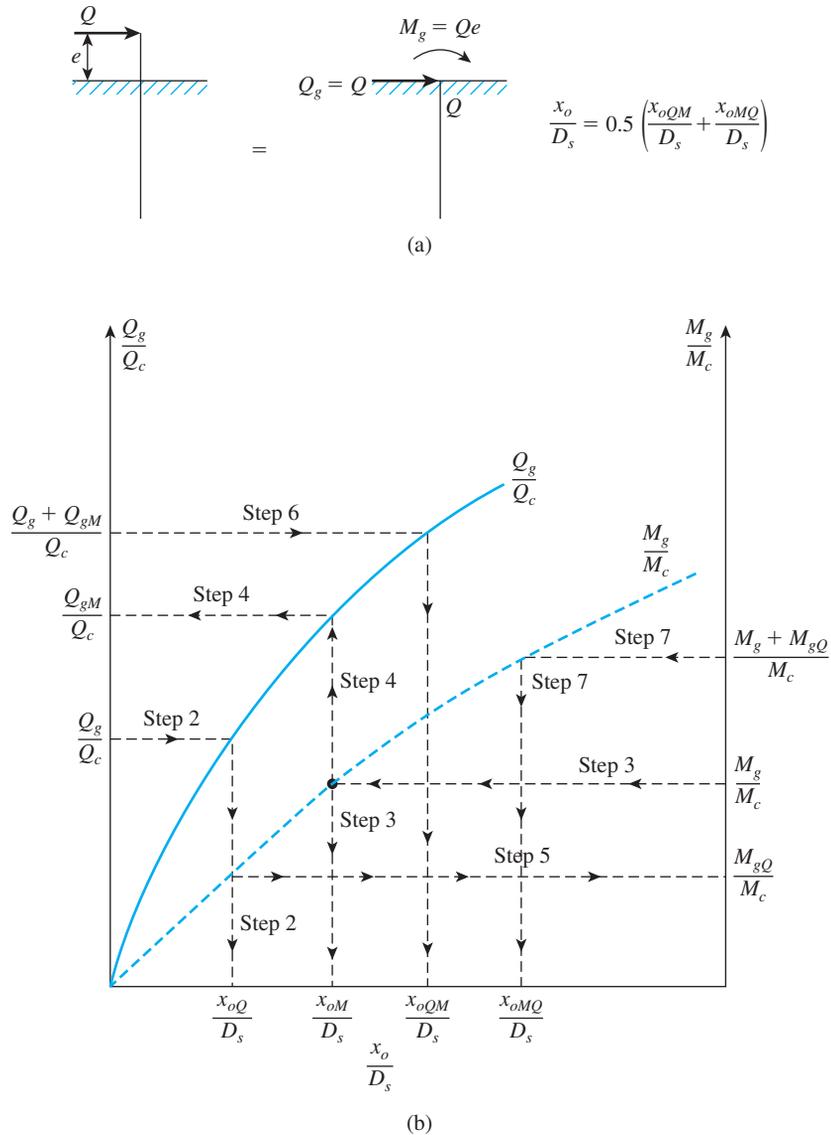


**Figure 10.22** Superposition of deflection due to load and moment

**Step 8.** Calculate the combined deflection:

$$x_{o(\text{combined})} = 0.5(x_{oQM} + x_{oMQ}) \quad (10.48)$$

### Maximum Moment in Drilled Shaft Due to Ground Line Load Only

Figure 10.23 shows the plot of  $Q_g/Q_c$  with  $M_{\max}/M_c$  for fixed- and free-headed drilled shafts due only to the application of a ground line load  $Q_g$ . For fixed-headed

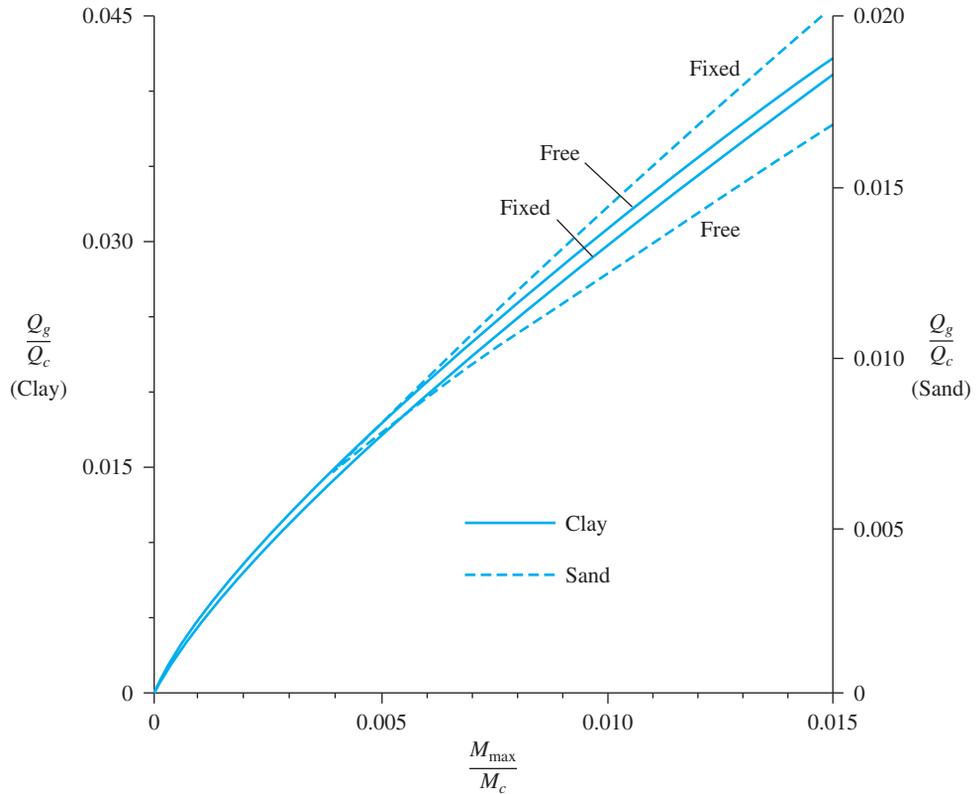

**Figure 10.23** Variation of  $\frac{Q_g}{Q_c}$  with  $\frac{M_{\max}}{M_c}$

shafts, the maximum moment in the shaft,  $M_{\max}$ , occurs at the ground line. For this condition, if  $Q_c$ ,  $M_c$ , and  $Q_g$  are known, the magnitude of  $M_{\max}$  can be easily calculated.

### Maximum Moment Due to Load and Moment at Ground Line

If a load  $Q_g$  and a moment  $M_g$  are applied at the ground line, the maximum moment in the drilled shaft can be determined in the following manner:

- Step 1.* Using the procedure described before, calculate  $x_{o(\text{combined})}$  from Eq. (10.48).
- Step 2.* To solve for the characteristic length  $T$ , use the following equation:

$$x_{o(\text{combined})} = \frac{2.43Q_g}{E_p I_p} T^3 + \frac{1.62M_g}{E_p I_p} T^2 \quad (10.49)$$

Step 3. The moment in the shaft at a depth  $z$  below the ground surface can be calculated as

$$M_z = A_m Q_g T + B_m M_g \quad (10.50)$$

where  $A_m, B_m$  = dimensionless moment coefficients (Matlock and Reese, 1961); see Figure 10.24.

The value of the maximum moment  $M_{\max}$  can be obtained by calculating  $M_z$  at various depths in the upper part of the drilled shaft.

The characteristic load method just described is valid only if  $L/D_s$  has a certain minimum value. If the actual  $L/D_s$  is less than  $(L/D_s)_{\min}$ , then the ground line deflections will be underestimated and the moments will be overestimated. The values of  $(L/D_s)_{\min}$  for drilled shafts in sand and clay are given in the following table:

Clay		Sand	
$\frac{E_p R_f}{c_u}$	$(L/D_s)_{\min}$	$\frac{E_p R_f}{\gamma' D_s \phi' K_p}$	$(L/D_s)_{\min}$
$1 \times 10^5$	6	$1 \times 10^4$	8
$3 \times 10^5$	10	$4 \times 10^4$	11
$1 \times 10^6$	14	$2 \times 10^5$	14
$3 \times 10^6$	18		

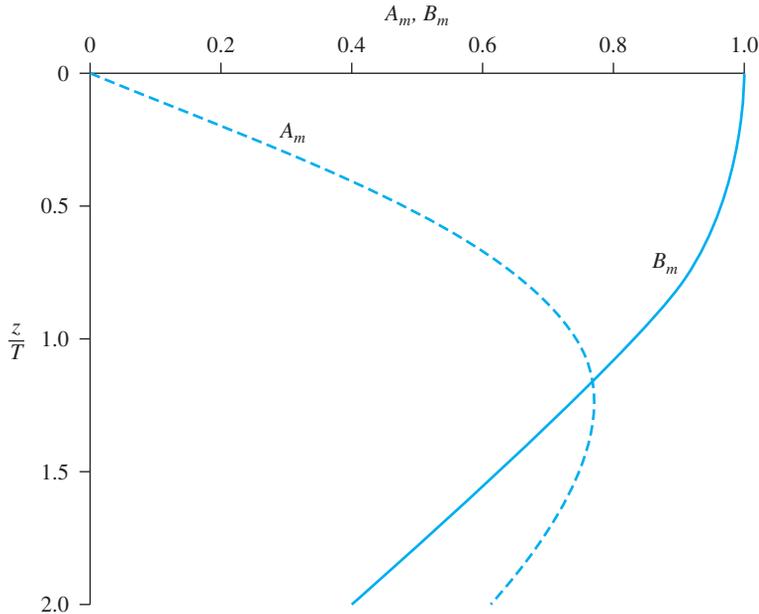


Figure 10.24 Variation of  $A_m$  and  $B_m$  with  $z/T$

**Example 10.7**

A free-headed drilled shaft in clay is shown in Figure 10.25. Let  $E_p = 22 \times 10^6$  kN/m<sup>2</sup>. Determine

- The ground line deflection,  $x_{o(\text{combined})}$
- The maximum bending moment in the drilled shaft
- The maximum tensile stress in the shaft
- The minimum penetration of the shaft needed for this analysis

**Solution**

We are given

$$D_s = 1 \text{ m}$$

$$c_u = 100 \text{ kN/m}^2$$

$$R_f = 1$$

$$E_p = 22 \times 10^6 \text{ kN/m}^2$$


and

$$I_p = \frac{\pi D_s^4}{64} = \frac{(\pi)(1)^4}{64} = 0.049 \text{ m}^4$$

Part a

From Eq. (10.44),

$$\begin{aligned} Q_c &= 7.34 D_s^2 (E_p R_f) \left( \frac{c_u}{E_p R_f} \right)^{0.68} \\ &= (7.34)(1)^2 [(22 \times 10^6)(1)] \left[ \frac{100}{(22 \times 10^6)(1)} \right]^{0.68} \\ &= 37,607 \text{ kN} \end{aligned}$$

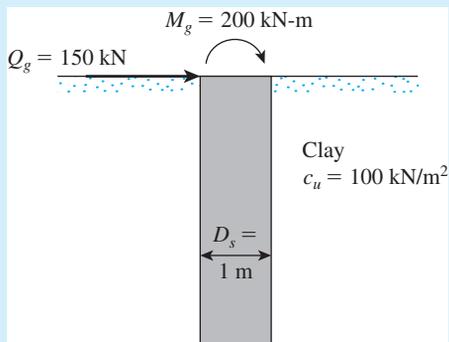

**Figure 10.25** Free-headed drilled shaft

From Eq. (10.46),

$$\begin{aligned} M_c &= 3.86D_s^3 (E_p R_f) \left( \frac{c_u}{E_p R_f} \right)^{0.46} \\ &= (3.86)(1)^3 [(22 \times 10^6)(1)] \left[ \frac{100}{(22 \times 10^6)(1)} \right]^{0.46} \\ &= 296,139 \text{ kN-m} \end{aligned}$$

Thus,

$$\frac{Q_g}{Q_c} = \frac{150}{37,607} = 0.004$$

From Figure 10.20,  $x_{oQ} \approx (0.0025)D_s = 0.0025 \text{ m} = 2.5 \text{ mm}$ . Also,

$$\frac{M_g}{M_c} = \frac{200}{296,139} = 0.000675$$

From Figure 10.20,  $x_{oM} \approx (0.0014)D_s = 0.0014 \text{ m} = 1.4 \text{ mm}$ , so

$$\frac{x_{oM}}{D_s} = \frac{0.0014}{1} = 0.0014$$

From Figure 10.20, for  $x_{oM}/D_s = 0.0014$ , the value of  $Q_{gM}/Q_c \approx 0.002$ . Hence,

$$\frac{x_{oQ}}{D_s} = \frac{0.0025}{1} = 0.0025$$

From Figure 10.20, for  $x_{oQ}/D_s = 0.0025$ , the value of  $M_{gQ}/M_c \approx 0.0013$ , so

$$\frac{Q_g}{Q_c} + \frac{Q_{gM}}{Q_c} = 0.004 + 0.002 = 0.006$$

From Figure 10.20, for  $(Q_g + Q_{gM})/Q_c = 0.006$ , the value of  $x_{oQM}/D_s \approx 0.0046$ . Hence,

$$x_{oQM} = (0.0046)(1) = 0.0046 \text{ m} = 4.6 \text{ mm}$$

Thus, we have

$$\frac{M_g}{M_c} + \frac{M_{gQ}}{M_c} = 0.000675 + 0.0013 \approx 0.00198$$

From Figure 10.20 for  $(M_g + M_{gQ})/M_c = 0.00198$ , the value of  $x_{oMQ}/D_s \approx 0.0041$ . Hence,

$$x_{oMQ} = (0.0041)(1) = 0.0041 \text{ m} = 4.1 \text{ mm}$$

Consequently,

$$x_o (\text{combined}) = 0.5 (x_{oQM} + x_{oMQ}) = (0.5) (4.6 + 4.1) = \mathbf{4.35 \text{ mm}}$$

Part b

From Eq. (10.49),

$$x_o (\text{combined}) = \frac{2.43Q_g}{E_p I_p} T^3 + \frac{1.62M_g}{E_p I_p} T^2$$

so

$$0.00435 \text{ m} = \frac{(2.43)(150)}{(22 \times 10^6)(0.049)} T^3 + \frac{(1.62)(200)}{(22 \times 10^6)(0.049)} T^2$$

or

$$0.00435 \text{ m} = 338 \times 10^{-6} T^3 + 300.6 \times 10^{-6} T^2$$

and it follows that

$$T \approx 2.05 \text{ m}$$

From Eq. (10.50),

$$M_z = A_m Q_g T + B_m M_g = A_m (150) (2.05) + B_m (200) = 307.5 A_m + 200 B_m$$

Now the following table can be prepared:

$\frac{z}{T}$	$A_m$ (Figure 10.24)	$B_m$ (Figure 10.24)	$M_z$ (kN-m)
0	0	1.0	200
0.4	0.36	0.98	306.7
0.6	0.52	0.95	349.9
0.8	0.63	0.9	373.7
1.0	0.75	0.845	399.6
1.1	0.765	0.8	395.2
1.25	0.75	0.73	376.6

So the maximum moment is 399.4 kN-m  $\approx$  400 kN-m and occurs at  $z/T \approx 1$ . Hence,

$$z = (1)(T) = (1)(2.05 \text{ m}) = \mathbf{2.05 \text{ m}}$$

Part c

The maximum tensile stress is

$$\sigma_{\text{tensile}} = \frac{M_{\max} \left( \frac{D_s}{2} \right)}{I_p} = \frac{(400) \left( \frac{1}{2} \right)}{0.049} = \mathbf{4081.6 \text{ kN/m}^2}$$

Part d  
We have


$$\frac{E_p R_I}{c_u} = \frac{(22 \times 10^6)(1)}{100} = 2.2 \times 10^5$$

By interpolation, for  $(E_p R_I)/c_u = 2.2 \times 10^5$ , the value of  $(L/D_s)_{\min} \approx 8.5$ . So

$$L \approx (8.5)(1) = 8.5 \text{ m}$$

## 10.13 Drilled Shafts Extending into Rock

In Section 10.1, we noted that drilled shafts can be extended into rock. Figure 10.26 shows a drilled shaft whose depth of embedment in rock is equal to  $L$ . When considering drilled shafts in rock, we can find several correlations between the end bearing capacity and the *unconfined compression strength of intact rocks*,  $q_u$ . It is important to recognize that, in the field, there are cracks, joints, and discontinuities in the rock, and the influence of those factors should be considered. Following are two procedures for determination of the ultimate bearing capacity of drilled shafts extending into rock. The procedures were developed by Reese and O'Neill (1988, 1989) and Zhang and Einstein (1998).

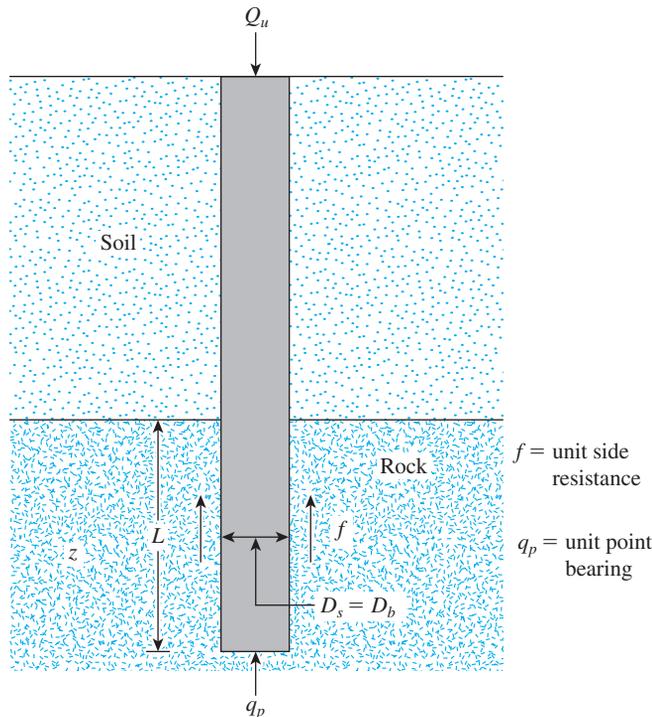

**Figure 10.26** Drilled shaft socketed into rock

### Procedure of Reese and O'Neill (1988, 1989)

Following is a step-by-step outline to estimate the ultimate bearing capacity. In this design procedure, it is assumed that there is either *side resistance between the shaft and the rock* or *point resistance at the bottom*.

*Step 1.* Calculate the ultimate unit side resistance as

$$f(\text{lb/in}^2) = 2.5q_u^{0.5} \leq 0.15q_u \quad (10.51a)$$

where  $q_u$  = unconfined compression strength of rock core of NW size of larger or of the drilled shaft concrete, whichever is smaller in (lb/in<sup>2</sup>).

In SI units, Eq. (10.51a) can be expressed as

$$f(\text{kN/m}^2) = 6.564q_u^{0.5}(\text{kN/m}^2) \leq 0.15q_u(\text{kN/m}^2) \quad (10.51b)$$

*Step 2.* Calculate the ultimate capacity based on side resistance only, or

$$Q_u = \pi D_s L f \quad (10.52)$$

*Step 3.* Calculate the settlement  $s_e$  of the shaft at the top of the rock socket, or

$$s_e = s_{e(s)} + s_{e(b)} \quad (10.53)$$

where

$s_{e(s)}$  = elastic compression of the drilled shaft within the socket, assuming no side resistance

$s_{e(b)}$  = settlement of the base

However,

$$s_{e(s)} = \frac{Q_u L}{A_c E_c} \quad (10.54)$$

and

$$s_{e(b)} = \frac{Q_u I_f}{D_s E_{\text{mass}}} \quad (10.55)$$

where

$Q_u$  = ultimate load obtained from Eq. (10.52) (this assumes that the contribution of the overburden to the side shear is negligible)

$A_c$  = cross-sectional area of the drilled shaft in the socket

$$= \frac{\pi}{4} D_s^2$$

$E_c$  = Young's modulus of the concrete and reinforcing steel in the shaft

$E_{\text{mass}}$  = Young's modulus of the rock mass into which the socket is drilled

$I_f$  = elastic influence coefficient (see Table 10.6)

The magnitude of  $E_{\text{mass}}$  can be taken as

$$\frac{E_{\text{mass}}}{E_{\text{core}}} \approx 0.0266(\text{RDQ}) - 1.66 \quad (10.56)$$

**Table 10.6** Settlement Influence Factor,  $I_f$  (interpolated values from O'Neill and Reese, 1989)

$L/D_s$	$I_f$			
	$E_c/E_{\text{mass}}$			
	10	50	100	5000
0	1.10	1.10	1.10	1.10
1	0.51	0.47	0.47	0.47
2	0.47	0.37	0.35	0.32
4	0.43	0.31	0.28	0.23
6	0.41	0.27	0.24	0.18
8	0.40	0.25	0.21	0.14
10	0.39	0.24	0.18	0.12
12	0.38	0.22	0.16	0.10
20	0.37	0.20	0.15	0.08

where

RDQ = rock quality designation in %

$E_{\text{core}}$  = Young's modulus of intact specimens of rock cores of NW size or larger

However, unless the socket is very long

$$s_e \approx s_{e(b)} = \frac{Q_u I_f}{D_s E_{\text{mass}}} \quad (10.57)$$

*Step 4.* If  $s_e$  is less than 10 mm ( $\approx 0.4$  in.), the ultimate load-carrying capacity is that calculated by Eq. (10.52). If  $s_e \geq 10$  mm. (0.4 in.), then go to Step 5.

*Step 5.* If  $s_e \geq 10$  mm (0.4 in.), there may be rapid, progressive side shear failure in the rock socket resulting in a complete loss of side resistance. In that case, the ultimate capacity is equal to the point resistance, or (for hard rocks such as limestone, schist, etc.). Thus,

$$Q_u = 3A_p \left[ \frac{3 + \frac{c_s}{D_s}}{10 \left( 1 + 300 \frac{\delta}{c_s} \right)^{0.5}} \right] q_u \quad (10.58)$$

where

$c_s$  = spacing of discontinuities (same unit as  $D_s$ )

$\delta$  = thickness of individual discontinuity (same unit as  $D_s$ )

$q_u$  = unconfined compression strength of the rock beneath the base of the socket or the drilled shaft concrete, whichever is smaller

Note that Eq. (10.58) applies for horizontally stratified discontinuities with  $c_s > 305$  mm (12 in.) and  $\delta < 5$  mm (0.2 in.).

### Procedure of Zhang and Einstein (1998)

Zhang and Einstein (1988) analyzed a database of 39 full-scale drilled shaft tests in which shaft bases were cast on or in generally *soft rock* with some degree of jointing. Based on these results, they proposed

$$Q_{u(\text{net})} = Q_p + Q_s = q_p A_p + fpL \quad (10.59)$$

where end bearing capacity  $Q_p$  can be expressed as

$$Q_p(\text{MN}) = q_p A_p = [4.83(q_u \text{ MN/m}^2)^{0.51}][A_p(\text{m}^2)] \quad (10.60)$$

Also, the side resistance  $Q_s$  is

$$Q_s(\text{MN}) = fpL = [0.4(q_u \text{ MN/m}^2)^{0.5}][\pi D_s(\text{m})][L(\text{m})] \quad (10.61)$$

(for smooth socket)

and

$$Q_s(\text{MN}) = fpL = [0.8(q_u \text{ MN/m}^2)^{0.5}][\pi D_s(\text{m})][L(\text{m})] \quad (10.62)$$

(for rough socket)

### Example 10.8

Consider the case of drilled shaft extending into rock, as shown in Figure 10.27. Let  $L = 4.5$  m,  $D_s = 0.9$  m,  $q_u$  (rock) = 72,450 kN/m<sup>2</sup>,  $q_u$  (concrete) = 20,700 kN/m<sup>2</sup>,  $E_c = 20.7 \times 10^6$  kN/m<sup>2</sup>, RQD (rock) = 80%,  $E_{\text{core}}$  (rock) =  $2.48 \times 10^6$  kN/m<sup>2</sup>,  $c_s = 457$  mm, and  $\delta = 3.81$  mm. Estimate the allowable load-bearing capacity of the drilled shaft. Use a factor of safety (FS) = 3. Use the Reese and O'Neill method.

#### Solution

*Step 1.* From Eq. (10.51b),

$$f(\text{kN/m}^2) = 6.564q_u^{0.5} \leq 0.15q_u$$

Since  $q_u$  (concrete) <  $q_u$  (rock), use  $q_u$  (concrete) in Eq. (10.51b). Hence,

$$f = 6.564(20,700)^{0.5} = 944.4 \text{ kN/m}^2$$

As a check, we have

$$f = 0.15q_u = (0.15)(20,700) = 3105 \text{ kN/m}^2 > 944.4 \text{ kN/m}^2$$

So use  $f = 944.4 \text{ kN/m}^2$

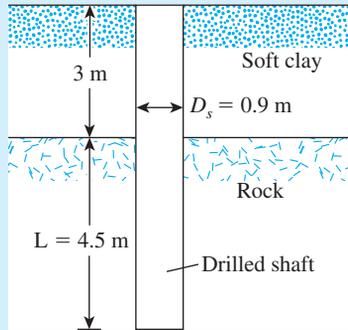


Figure 10.27 Drilled shaft extending into rock

Step 2. From Eq. (10.52),

$$Q_u = \pi D_s L f = (\pi)(0.9)(4.5)(944.4) = 12,016 \text{ kN}$$

Step 3. From Eqs. (10.53), (10.54), and (10.55),

$$S_e = \frac{Q_u L}{A_c E_c} + \frac{Q_u I_f}{D_s E_{\text{mass}}}$$

From Eq. (10.56), For RDQ = 80%

$$\frac{E_{\text{mass}}}{E_{\text{core}}} = (0.0266)(80) - 1.66 = 0.468$$

$$E_{\text{mass}} = 0.468 E_{\text{core}} = (0.468)(2.48 \times 10^6) = 1.16 \times 10^6 \text{ kN/m}^2$$

so

$$\frac{E_c}{E_{\text{mass}}} = \frac{20.7 \times 10^6}{1.16 \times 10^6} \approx 17.84$$

and

$$\frac{L}{D_s} = \frac{4.5}{0.9} = 5$$

From Table 10.6, for  $E_c/E_{\text{mass}} = 17.84$  and  $L/D_s = 5$ , the magnitude of  $I_f$  is about 0.35. Hence,

$$\begin{aligned} s_e &= \frac{(12,016)(4.5)}{\frac{\pi}{4}(0.9)^2(20.7 \times 10^6)} + \frac{(12,016)(0.35)}{(0.9)(1.16 \times 10^6)} \\ &= 0.008128 \text{ m} \approx 8.13 \text{ mm} < 10 \text{ mm} \end{aligned}$$

Therefore,

$$Q_u = 12,016 \text{ kN}$$

and

$$Q_{\text{all}} = \frac{Q_u}{\text{FS}} = \frac{12,016}{3} = 4005 \text{ kN} \approx 4 \text{ MN}$$

### Example 10.9

Figure 10.28 shows a drilled shaft extending into a shale formation. For the intact rock cores, given  $q_u = 4.2 \text{ MN/m}^2$ . Estimate the allowable load-bearing capacity of the drilled shaft. Use a factor of safety (FS) = 3. Assume a smooth socket for side resistance. Use the Zhang and Einstein method.

#### Solution

From Eq. (10.60),

$$Q_p = A_p [4.83(q_u)^{0.51}] = \frac{\pi}{4} (1)^2 [(4.83)(4.2)^{0.51}] = 7.89 \text{ MN}$$

Again, from Eq. (10.61),

$$Q_s = 0.4(q_u)^{0.5}(\pi D_s L) = 0.4(4.2)^{0.5}[(\pi)(1)(4)] = 10.3 \text{ MN}$$

Hence,

$$Q_{\text{all}} = \frac{Q_u}{\text{FS}} = \frac{Q_p + Q_s}{\text{FS}} = \frac{7.89 + 10.3}{3} = \mathbf{6.06 \text{ MN}}$$

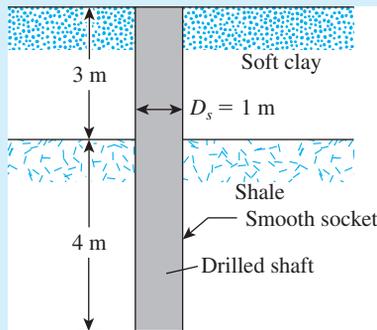


Figure 10.28 Drilled shaft extending into rock

## Problems

- 10.1** A drilled shaft is shown in Figure P10.1. Determine the net allowable point bearing capacity. Given

$$\begin{aligned} D_b &= 2 \text{ m} & \gamma_c &= 15.6 \text{ kN/m}^3 \\ D_s &= 1.2 \text{ m} & \gamma_s &= 17.6 \text{ kN/m}^3 \\ L_1 &= 6 \text{ m} & \phi' &= 35^\circ \\ L_2 &= 3 \text{ m} & c_u &= 35 \text{ kN/m}^2 \\ \text{Factor of safety} &= 3 \end{aligned}$$

Use Eq. (10.18).

- 10.2** Redo Problem 10.1, this time using Eq. (10.5). Let  $E_s = 600p_a$ .
- 10.3** For the drilled shaft described in Problem 10.1, what skin resistance would develop in the top 6 m, which are in clay? Use Eqs. (10.37) and (10.39).

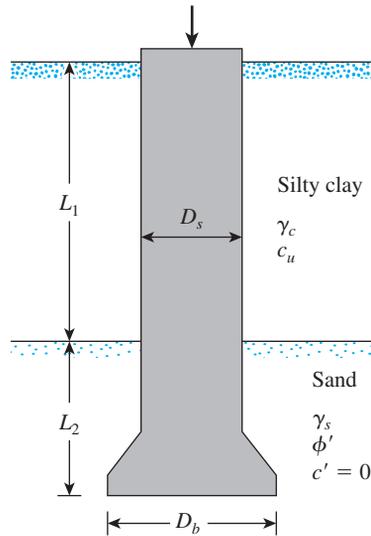


Figure P10.1

**10.4** Redo Problem 10.1 with the following:

$$\begin{aligned} D_b &= 1.75 \text{ m} & \gamma_c &= 17.8 \text{ kN/m}^3 \\ D_s &= 1 \text{ m} & \gamma_s &= 18.2 \text{ kN/m}^3 \\ L_1 &= 6.25 \text{ m} & \phi' &= 32^\circ \\ L_2 &= 2.5 \text{ m} & c_u &= 32 \text{ kN/m}^2 \end{aligned}$$

Factor of safety = 4

**10.5** Redo Problem 10.4 using Eq. (10.5). Let  $E_s = 400p_u$ .

**10.6** For the drilled shaft described in Problem 10.4, what skin friction would develop in the top 6.25 m?

**a.** Use Eqs. (10.37) and (10.39).

**b.** Use Eq. (10.40).

**10.7** Figure P10.7 shows a drilled shaft without a bell. Assume the following values:

$$\begin{aligned} L_1 &= 6 \text{ m} & c_{u(1)} &= 50 \text{ kN/m}^2 \\ L_2 &= 7 \text{ m} & c_{u(2)} &= 75 \text{ kN/m}^2 \\ D_s &= 1.5 \text{ m} \end{aligned}$$

Determine:

**a.** The net ultimate point bearing capacity [use Eqs. (10.33) and (10.34)]

**b.** The ultimate skin friction [use Eqs. (10.37) and (10.39)]

**c.** The working load  $Q_w$  (factor of safety = 3)

**10.8** Repeat Problem 10.7 with the following data:

$$\begin{aligned} L_1 &= 20 \text{ ft} & c_{u(1)} &= 1400 \text{ lb/ft}^2 \\ L_2 &= 10 \text{ ft} & c_{u(2)} &= 2400 \text{ lb/ft}^2 \\ D_s &= 3 \text{ ft} \end{aligned}$$

Use Eqs. (10.40) and (10.41).

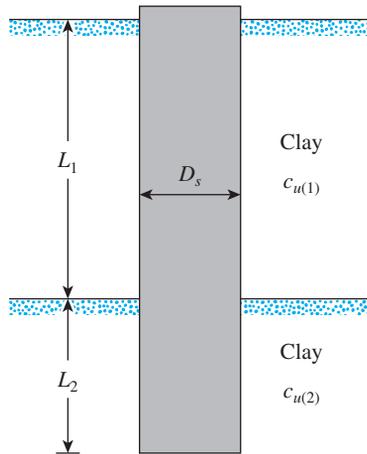


Figure P10.7

- 10.9** A drilled shaft in a medium sand is shown in Figure P10.9. Using the method proposed by Reese and O'Neill, determine the following:
- The net allowable point resistance for a base movement of 25 mm
  - The shaft frictional resistance for a base movement of 25 mm
  - The total load that can be carried by the drilled shaft for a total base movement of 25 mm

Assume the following values:

$$\begin{aligned}
 L &= 12 \text{ m} & \gamma &= 18 \text{ kN/m}^3 \\
 L_1 &= 11 \text{ m} & \phi' &= 38^\circ \\
 D_s &= 1 \text{ m} & D_r &= 65\%(\text{medium sand}) \\
 D_b &= 2 \text{ m}
 \end{aligned}$$

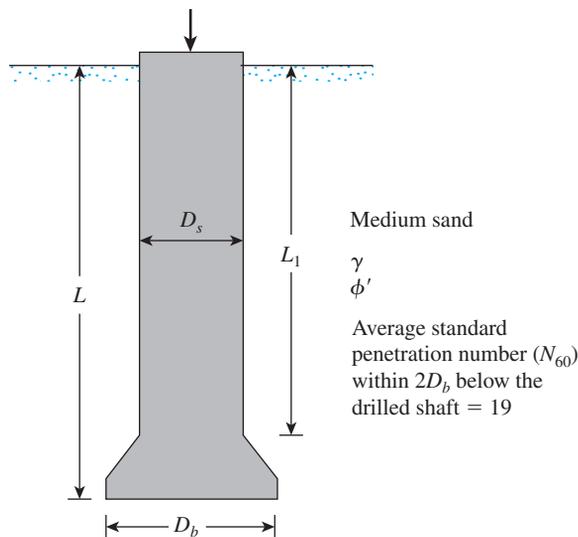


Figure P10.9

**10.10** In Figure P10.9, let  $L = 7$  m,  $L_1 = 6$  m,  $D_s = 0.75$  m,  $D_b = 1.25$  m,  $\gamma = 18$  kN/m<sup>3</sup>, and  $\phi' = 37^\circ$ . The average uncorrected standard penetration number ( $N_{60}$ ) within  $2D_b$  below the drilled shaft is 29. Determine

- The ultimate load-carrying capacity
- The load-carrying capacity for a settlement of 12 mm.

The sand has 35% gravel. Use Eq. (10.30) and Figures 10.11 and 10.13.

**10.11** For the drilled shaft described in Problem 10.7, determine

- The ultimate load-carrying capacity
- The load carrying capacity for a settlement of 25 mm

Use the procedure outlined by Reese and O'Neill. (See Figures 10.16 and 10.17.)

**10.12** For the drilled shaft described in Problem 10.7, estimate the total elastic settlement at working load. Use Eqs. (9.81), (9.83), and (9.84). Assume that  $E_p = 20 \times 10^6$  kN/m<sup>2</sup>,  $C_p = 0.03$ ,  $\xi = 0.65$ ,  $\mu_s = 0.3$ ,  $E_s = 12,000$  kN/m<sup>2</sup>, and  $Q_{ws} = 0.8Q_w$ . Use the value of  $Q_w$  from Part (c) of Problem 10.7.

**10.13** For the drilled shaft described in Problem 10.8, estimate the total elastic settlement at working load. Use Eqs. (9.81), (9.83), and (9.84). Assume that  $E_p = 3 \times 10^6$  lb/in<sup>2</sup>,  $C_p = 0.03$ ,  $\xi = 0.65$ ,  $\mu_s = 0.3$ ,  $E_s = 2000$  lb/in<sup>2</sup>, and  $Q_{ws} = 0.83Q_w$ . Use the value of  $Q_w$  from Part (c) of Problem 10.8.

**10.14** Figure P10.14 shows a drilled shaft extending into clay shale. Given:  $q_u$  (clay shale) = 1.81 MN/m<sup>2</sup>. Considering the socket to be rough, estimate the allowable load-carrying capacity of the drilled shaft. Use FS = 4. Use the Zhang and Einstein procedure.

**10.15** A free-headed drilled shaft is shown in Figure P10.15. Let  $Q_g = 260$  kN,  $M_g = 0$ ,  $\gamma = 17.5$  kN/m<sup>3</sup>,  $\phi' = 35^\circ$ ,  $c' = 0$ , and  $E_p = 22 \times 10^6$  kN/m<sup>2</sup>. Determine

- The ground line deflection,  $x_o$
- The maximum bending moment in the drilled shaft
- The maximum tensile stress in the shaft
- The minimum penetration of the shaft needed for this analysis

**10.16** Refer to Figure P10.14. Assume the bottom 8 m to be hard rock and the following values.

$$q_{u(\text{concrete})} = 28,000 \text{ kN/m}^2$$

$$q_{u(\text{rock})} = 46,000 \text{ kN/m}^2$$

$$\text{RDQ}_{(\text{rock})} = 75\%$$

$$E_{(\text{concrete})} = 22 \times 10^6 \text{ kN/m}^2$$

$$E_{\text{core}(\text{rock})} = 12.1 \times 10^6 \text{ kN/m}^2$$

Spacing of discontinuity in rock = 500 mm

Thickness of individual discontinuity in rock = 3 mm

Estimate the allowable load-bearing capacity of the drilled shaft using the procedure of Reese and O'Neill. Use FS = 3.

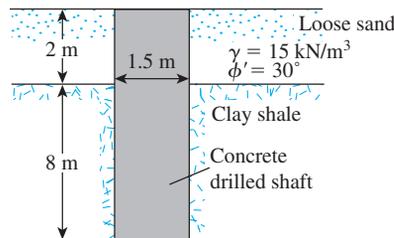


Figure P10.14

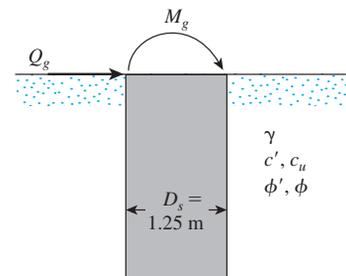


Figure P10.15

## References

- BEREZANTZEV, V. G., KHRISTOFOROV, V. S., and GOLUBKOV, V. N. (1961). "Load Bearing Capacity and Deformation of Piled Foundations," *Proceedings, Fifth International Conference on Soil Mechanics and Foundation Engineering*, Paris, Vol. 2, pp. 11–15.
- CHEN, Y.-J. and KULHAWY, F. H. (1994). "Case History Evaluation of the Behavior of Drilled Shafts under Axial and Lateral Loading," *Final Report, Project 1493-04, EPRI TR-104601*, Geotechnical Group, Cornell University, Ithaca, NY, December.
- DUNCAN, J. M., EVANS, L. T., JR., and OOI, P. S. K. (1994). "Lateral Load Analysis of Single Piles and Drilled Shafts," *Journal of Geotechnical Engineering*, ASCE, Vol. 120, No. 6, pp. 1018–1033.
- KULHAWY, F. H. and JACKSON, C. S. (1989). "Some Observations on Undrained Side Resistance of Drilled Shafts," *Proceedings, Foundation Engineering: Current Principles and Practices*, American Society of Civil Engineers, Vol. 2, pp. 1011–1025.
- MATLOCK, H. and REESE, L.C. (1961). "Foundation Analysis of Offshore Pile-Supported Structures," in *Proceedings, Fifth International Conference on Soil Mechanics and Foundation Engineering*, Vol. 2, Paris, pp. 91–97.
- O'NEILL, M. W. (1997). Personal communication.
- O'NEILL, M.W. and REESE, L.C. (1999). *Drilled Shafts: Construction Procedure and Design Methods*, FHWA Report No. IF-99-025.
- REESE, L. C. and O'NEILL, M. W. (1988). *Drilled Shafts: Construction and Design*, FHWA, Publication No. HI-88-042.
- REESE, L. C. and O'NEILL, M. W. (1989). "New Design Method for Drilled Shafts from Common Soil and Rock Tests," *Proceedings, Foundation Engineering: Current Principles and Practices*, American Society of Civil Engineers, Vol. 2, pp. 1026–1039.
- REESE, L. C., TOUMA, F. T., and O'NEILL, M. W. (1976). "Behavior of Drilled Piers under Axial Loading," *Journal of Geotechnical Engineering Division*, American Society of Civil Engineers, Vol. 102, No. GT5, pp. 493–510.
- ROLLINS, K. M., CLAYTON, R. J., MIKESELL, R. C., and BLAISE, B. C. (2005). "Drilled Shaft Side Friction in Gravelly Soils," *Journal of Geotechnical and Geoenvironmental Engineering*, American Society of Civil Engineers, Vol. 131, No. 8, pp. 987–1003.
- WHITAKER, T. and COOKE, R. W. (1966). "An Investigation of the Shaft and Base Resistance of Large Bored Piles in London Clay," *Proceedings, Conference on Large Bored Piles*, Institute of Civil Engineers, London, pp. 7–49.
- ZHANG, L. and EINSTEIN, H. H. (1998). "End Bearing Capacity of Drilled Shafts in Rock," *Journal of Geotechnical and Geoenvironmental Engineering*, American Society of Civil Engineers, Vol. 124, No. 7, pp. 574–584.

# 11

## Foundations on Difficult Soils

### 11.1 Introduction


In many areas of the United States and other parts of the world, certain soils make the construction of foundations extremely difficult. For example, expansive or collapsible soils may cause high differential movements in structures through excessive heave or settlement. Similar problems can also arise when foundations are constructed over sanitary landfills. Foundation engineers must be able to identify difficult soils when they are encountered in the field. Although not all the problems caused by all soils can be solved, preventive measures can be taken to reduce the possibility of damage to structures built on them. This chapter outlines the fundamental properties of three major soil conditions—collapsible soils, expansive soils, and sanitary landfills—and methods of careful construction of foundations.

---

### ***Collapsible Soil***

### 11.2 Definition and Types of Collapsible Soil

*Collapsible soils*, which are sometimes referred to as *metastable soils*, are unsaturated soils that undergo a large change in volume upon saturation. The change may or may not be the result of the application of additional load. The behavior of collapsing soils under load is best explained by the typical void ratio effective pressure plot ( $e$  against  $\log \sigma'$ ) for a collapsing soil, as shown in Figure 11.1. Branch  $ab$  is determined from the consolidation test on a specimen at its natural moisture content. At an effective pressure level of  $\sigma'_w$ , the equilibrium void ratio is  $e_1$ . However, if water is introduced into the specimen for saturation, the soil structure will collapse. After saturation, the equilibrium void ratio at the same effective pressure level  $\sigma'_w$  is  $e_2$ ;  $cd$  is the branch of the  $e$ – $\log \sigma'$  curve under additional load after saturation. Foundations that are constructed on such soils may undergo large and sudden settlement if the soil under

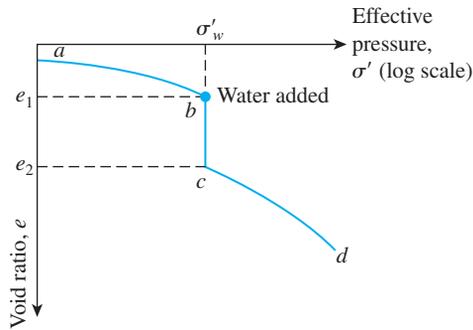

**Figure 11.1** Nature of variation of void ratio with pressure for a collapsing soil

them becomes saturated with an unanticipated supply of moisture. The moisture may come from any of several sources, such as (a) broken water pipelines, (b) leaky sewers, (c) drainage from reservoirs and swimming pools, (d) a slow increase in groundwater, and so on. This type of settlement generally causes considerable structural damage. Hence, identifying collapsing soils during field exploration is crucial.

The majority of naturally occurring collapsing soils are *aeolian*—that is, wind-deposited sands or silts, such as loess, aeolic beaches, and volcanic dust deposits. The deposits have high void ratios and low unit weights and are cohesionless or only slightly cohesive. *Loess* deposits have silt-sized particles. The cohesion in loess may be the result of clay coatings surrounding the silt-size particles. The coatings hold the particles in a rather stable condition in an unsaturated state. The cohesion also may be caused by the presence of chemical precipitates leached by rainwater. When the soil becomes saturated, the clay binders lose their strength and undergo a structural collapse. In the United States, large parts of the Midwest and the arid West have such types of deposit. Loess deposits are also found over 15 to 20% of Europe and over large parts of China. The thickness of loess deposits can range up to about 10 m (33 ft) in the central United States. In parts of China it can be up to 100 m (330 ft). Figure 11.2 shows the extent of the loess deposits in the Mississippi River basin.

Many collapsing soils may be residual soils that are products of the weathering of parent rocks. Weathering produces soils with a large range of particle-size distribution. Soluble and colloidal materials are leached out by weathering, resulting in large void ratios and thus unstable structures. Many parts of South Africa and Zimbabwe have residual soils that are decomposed granites. Sometimes collapsing soil deposits may be left by flash floods and mudflows. These deposits dry out and are poorly consolidated. An excellent review of collapsing soils is that of Clemence and Finbarr (1981).

### 11.3 Physical Parameters for Identification

Several investigators have proposed various methods for evaluating the physical parameters of collapsing soils for identification. Some of these methods are discussed briefly in Table 11.1.

Jennings and Knight (1975) suggested a procedure for describing the *collapse potential* of a soil: An undisturbed soil specimen is taken at its natural moisture content in a consolidation ring. Step loads are applied to the specimen up to a pressure



**Figure 11.2** Loess deposit in Mississippi River basin

level  $\sigma'_w$  of  $200 \text{ kN/m}^2$  ( $\approx 29 \text{ lb/in}^2$ ). (In Figure 11.1, this is  $\sigma'_w$ .) At that pressure, the specimen is flooded for saturation and left for 24 hours. This test provides the void ratios  $e_1$  and  $e_2$  before and after flooding, respectively. The collapse potential may now be calculated as

$$C_p = \Delta\varepsilon = \frac{e_1 - e_2}{1 + e_o} \quad (11.1)$$

where

$e_o$  = natural void ratio of the soil

$\Delta\varepsilon$  = vertical strain

The severity of foundation problems associated with a collapsible soil have been correlated with the collapse potential  $C_p$  by Jennings and Knight (1975). They were summarized by Clemence and Finbarr (1981) and are given in Table 11.2.

Holtz and Hilf (1961) suggested that a loessial soil that has a void ratio large enough to allow its moisture content to exceed its liquid limit upon saturation is susceptible to collapse. So, for collapse,

$$w_{(\text{saturated})} \geq \text{LL} \quad (11.2)$$

where LL = liquid limit.

However, for saturated soils,

$$e_o = wG_s \quad (11.3)$$

where  $G_s$  = specific gravity of soil solids.

**Table 11.1** Reported Criteria for Identification of Collapsing Soil<sup>a</sup>

Investigator	Year	Criteria
Denisov	1951	Coefficient of subsidence: $K = \frac{\text{void ratio at liquid limit}}{\text{natural void ratio}}$ $K = 0.5\text{--}0.75$ : highly collapsible $K = 1.0$ : noncollapsible loam $K = 1.5\text{--}2.0$ : noncollapsible soils
Clevenger	1958	If dry unit weight is less than $12.6 \text{ kN/m}^3 (\approx 80 \text{ lb/ft}^3)$ , settlement will be large; if dry unit weight is greater than $14 \text{ kN/m}^3 (\approx 90 \text{ lb/ft}^3)$ settlement will be small.
Priklonski	1952	$K_D = \frac{\text{natural moisture content} - \text{plastic limit}}{\text{plasticity index}}$ $K_D < 0$ : highly collapsible soils $K_D > 0.5$ : noncollapsible soils $K_D > 1.0$ : swelling soils
Gibbs	1961	Collapse ratio, $R = \frac{\text{saturation moisture content}}{\text{liquid limit}}$ This was put into graph form.
Soviet Building Code	1962	$L = \frac{e_o - e_L}{1 + e_o}$ where $e_o$ = natural void ratio and $e_L$ = void ratio at liquid limit. For natural degree of saturation less than 60%, if $L > -0.1$ , the soil is a collapsing soil.
Feda	1964	$K_L = \frac{w_o}{S_r} - \frac{\text{PL}}{\text{PI}}$ where $w_o$ = natural water content, $S_r$ = natural degree of saturation, PL = plastic limit, and PI = plasticity index. For $S_r < 100\%$ , if $K_L > 0.85$ , the soil is a subsident soil.
Benites	1968	A dispersion test in which 2 g of soil are dropped into 12 ml of distilled water and specimen is timed until dispersed; dispersion times of 20 to 30 s were obtained for collapsing Arizona soils.
Handy	1973	Iowa loess with clay (<0.002 mm) contents: <16%: high probability of collapse 16–24%: probability of collapse 24–32%: less than 50% probability of collapse >32%: usually safe from collapse

<sup>a</sup>Based on data from Lutenegeger and Saber (1988)

**Table 11.2** Relation of Collapse Potential to the Severity of Foundation Problems<sup>a</sup>

$C_p$ (%)	Severity of problem
0–1	No problem
1–5	Moderate trouble
5–10	Trouble
10–20	Severe trouble
20	Very severe trouble

<sup>a</sup>Based on data from Clemence, S. P., and Finbarr, A. O. (1981). “Design Considerations for Collapsible Soils,” *Journal of the Geotechnical Engineering Division*, American Society of Civil Engineers, Vol. 107, GT3 pp. 305–317.

Combining Eqs. (11.2) and (11.3) for collapsing soils yields


$$e_o \geq (\text{LL})(G_s) \quad (11.4)$$

The natural dry unit weight of the soil required for its collapse is

$$\gamma_d \leq \frac{G_s \gamma_w}{1 + e_o} = \frac{G_s \gamma_w}{1 + (\text{LL})(G_s)} \quad (11.5)$$

For an average value of  $G_s = 2.65$ , the limiting values of  $\gamma_d$  for various liquid limits may now be calculated from Eq. (11.5).

Figure 11.3 shows a plot of the preceding limiting values of dry unit weights against the corresponding liquid limits. For any soil, if the natural dry unit weight falls below the limiting line, the soil is likely to collapse.

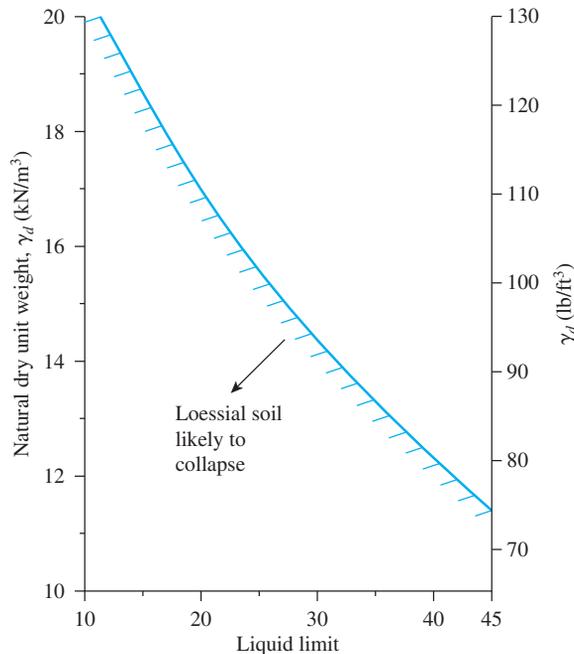


**Figure 11.3** Loessial soil likely to collapse

Care should be taken to obtain undisturbed samples for determining the collapse potentials and dry unit weights—preferably block samples cut by hand. The reason is that samples obtained by thin-walled tubes may undergo some compression during the sampling process. However, if cut block samples are used, the boreholes should be made *without water*.

## 11.4 Procedure for Calculating Collapse Settlement

Jennings and Knight (1975) proposed the following laboratory procedure for determining the collapse settlement of structures upon saturation of soil:

- Step 1. Obtain *two* undisturbed soil specimens for tests in a standard consolidation test apparatus (oedometer).
- Step 2. Place the two specimens under  $1 \text{ kN/m}^2 (0.15 \text{ lb/in}^2)$  pressure for 24 hours.
- Step 3. After 24 hours, saturate one specimen by flooding. Keep the other specimen at its natural moisture content.
- Step 4. After 24 hours of flooding, resume the consolidation test on both specimens by doubling the load (the same as in the standard consolidation test) to the desired pressure level.
- Step 5. Plot the  $e$ - $\log \sigma'$  graphs for both specimens (Figures 11.4a and b).
- Step 6. Calculate the *in situ* effective pressure,  $\sigma'_o$ . Draw a vertical line corresponding to the pressure  $\sigma'_o$ .
- Step 7. From the  $e$ - $\log \sigma'_o$  curve of the soaked specimen, determine the preconsolidation pressure,  $\sigma'_c$ . If  $\sigma'_c/\sigma'_o$  is 0.8 to 1.5, the soil is normally consolidated; however, if  $\sigma'_c/\sigma'_o > 1.5$ , the soil is preconsolidated.
- Step 8. Determine  $e'_o$ , corresponding to  $\sigma'_o$  from the  $e$ - $\log \sigma'_o$  curve of the soaked specimen. (This procedure for normally consolidated and overconsolidated soils is shown in Figures 11.4a and b, respectively.)

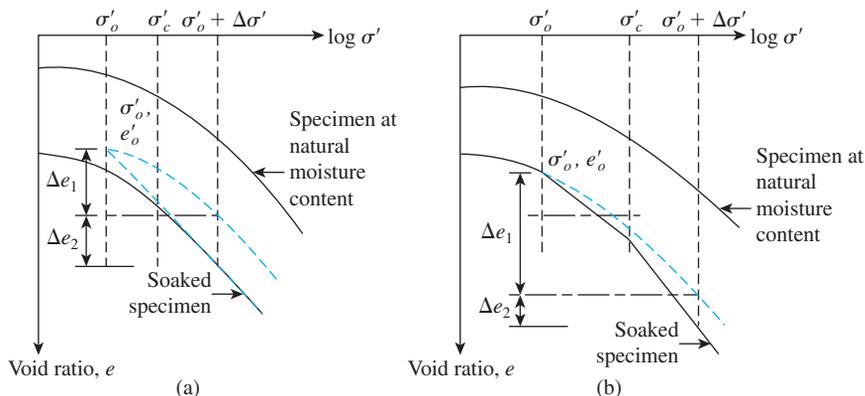

**Figure 11.4** Settlement calculation from double oedometer test: (a) normally consolidated soil; (b) overconsolidated soil

- Step 9.* Through point  $(\sigma'_o, e'_o)$  draw a curve that is similar to the  $e$ - $\log \sigma'_o$  curve obtained from the specimen tested at its natural moisture content.
- Step 10.* Determine the incremental pressure,  $\Delta\sigma'$ , on the soil caused by the construction of the foundation. Draw a vertical line corresponding to the pressure of  $\sigma'_o + \Delta\sigma'$  in the  $e$ - $\log \sigma'$  curve.
- Step 11.* Now, determine  $\Delta e_1$  and  $\Delta e_2$ . The settlement of soil without change in the natural moisture content is

$$S_{c(1)} = \frac{\Delta e_1}{1 + e'_o} (H) \quad (11.6)$$

where  $H$  = thickness of soil susceptible to collapse.


Also, the settlement caused by collapse in the soil structure is

$$S_{c(2)} = \frac{\Delta e_2}{1 + e'_o} (H) \quad (11.7)$$

## 11.5 Foundation Design in Soils Not Susceptible to Wetting

For actual foundation design purposes, some standard field load tests may also be conducted. Figure 11.5 shows the relation of the nature of load per unit area versus settlement in a field load test in a loessial deposit. Note that the load–settlement relationship is essentially linear up to a certain critical pressure,  $\sigma'_{cr}$ , at which there is a breakdown of the soil structure and hence a large settlement. Sudden breakdown of soil structure is more common with soils having a high natural moisture content than with normally dry soils.

If enough precautions are taken in the field to prevent moisture from increasing under structures, spread foundations and mat foundations may be built on collapsible soils. However, the foundations must be proportioned so that the critical stresses (see Figure 11.5)

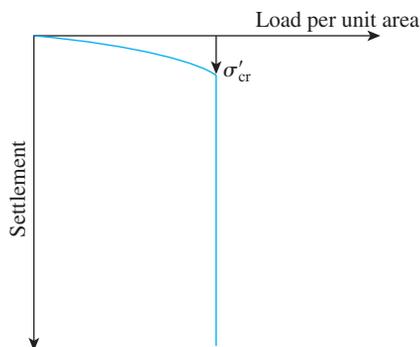

**Figure 11.5** Field load test in loessial soil: load per unit area versus settlement

in the field are never exceeded. A factor of safety of about 2.5 to 3 should be used to calculate the allowable soil pressure, or

$$\sigma'_{\text{all}} = \frac{\sigma'_{\text{cr}}}{\text{FS}} \quad (11.8)$$

where

$\sigma'_{\text{all}}$  = allowable soil pressure


FS = factor of safety

The differential and total settlements of these foundations should be similar to those of foundations designed for sandy soils.

Continuous foundations may be safer than isolated foundations over collapsible soils in that they can effectively minimize differential settlement. Figure 11.6 shows a typical procedure for constructing continuous foundations. This procedure uses footing beams and longitudinal load-bearing beams.

In the construction of heavy structures, such as grain elevators, over collapsible soils, settlements up to about 0.3 m ( $\approx 1$  ft) are sometimes allowed (Peck, Hanson, and Thornburn, 1974). In this case, tilting of the foundation is not likely to occur, because there is no eccentric loading. The total expected settlement for such structures can be estimated from standard consolidation tests on specimens of field moisture content. Without eccentric loading, the foundations will exhibit uniform settlement over loessial deposits; however, if the soil is of residual or colluvial nature, settlement may not be uniform. The reason is the nonuniformity generally encountered in residual soils.

Extreme caution must be used in building heavy structures over collapsible soils. If large settlements are expected, drilled-shaft and pile foundations should be considered. These types of foundation can transfer the load to a stronger load-bearing stratum.

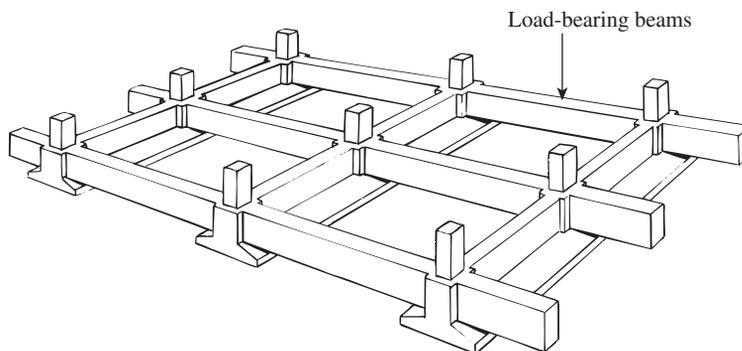

**Figure 11.6** Continuous foundation with load-bearing beams (Based on data from Clemence, S. P., and Finbarr, A. O. (1981). “Design Considerations for Collapsible Soils,” *Journal of the Geotechnical Engineering Division*, American Society of Civil Engineers, Vol. 107, GT3 pp. 305–317.)

## 11.6 Foundation Design in Soils Susceptible to Wetting


If the upper layer of soil is likely to get wet and collapse sometime after construction of the foundation, several design techniques to avoid failure of the foundation may be considered. They are as follow:

### Dynamic Compaction

If the expected depth of wetting is about 1.5 to 2 m ( $\approx 5$  to 6.5 ft) from the ground surface, the soil may be moistened and recompacted by heavy rollers. Spread footings and mats may be constructed over the compacted soil. An alternative to recompaction by heavy rollers is *heavy tamping*, which is sometimes referred to as *dynamic compaction*. (See Chapter 16.) Heavy tamping consists primarily of dropping a heavy weight repeatedly on the ground. The height of the drop can vary from 8 to 30 m ( $\approx 25$  to 100 ft). The stress waves generated by the dropping weight help in the densification of the soil.

Lutenegger (1986) reported the use of dynamic compaction to stabilize a thick layer of friable loess before construction of a foundation in Russe, Bulgaria. During field exploration, the water table was not encountered to a depth of 10 m (33 ft), and the natural moisture content was below the plastic limit. Initial density measurements made on undisturbed soil specimens indicated that the moisture content at saturation would exceed the liquid limit, a property usually encountered in collapsible loess. For dynamic compaction of the soil, the upper 1.7 m (5.6 ft) of crust material was excavated. A circular concrete weight of 133 kN ( $\approx 15$  ton) was used as a hammer. At each grid point, compaction was achieved by dropping the hammer 7 to 12 times through a vertical distance of 2.5 m (8.2 ft).

Figure 11.7 shows the dry unit weight of the soil before and after compaction. The increase in dry unit weight of the soil shows that dynamic compaction can be used effectively to stabilize collapsible soil.

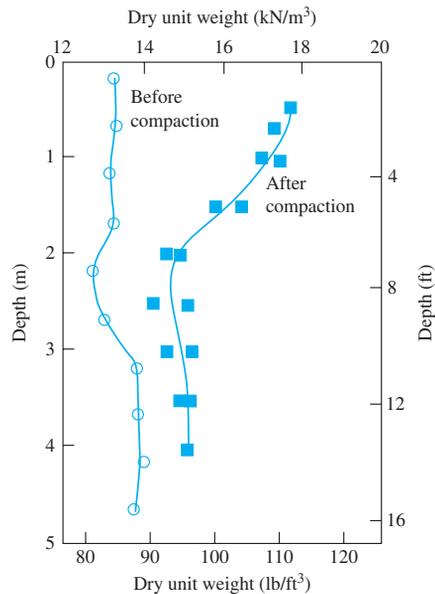

**Figure 11.7** Dynamic compaction of a friable loess layer in Russe, Bulgaria (Based on Lutenegeger, 1986)

## Chemical Stabilization

If conditions are favorable, foundation trenches can be flooded with solutions of sodium silicate and calcium chloride to stabilize the soil chemically. The soil will then behave like a soft sandstone and resist collapse upon saturation. This method is successful only if the solutions can penetrate to the desired depth; thus, it is most applicable to fine sand deposits. Silicates are rather costly and are not generally used. However, in some parts of Denver, silicates have been used successfully.

The injection of a sodium silicate solution to stabilize collapsible soil deposits has been used extensively in the former Soviet Union and Bulgaria (Houston and Houston, 1989). This process, which is used for dry collapsible soils and for wet collapsible soils that are likely to compress under the added weight of the structure to be built, consists of three steps:

- Step 1. Injection of carbon dioxide to remove any water that is present and for preliminary activation of the soil
- Step 2. Injection of sodium silicate grout
- Step 3. Injection of carbon dioxide to neutralize alkalies.

## Vibroflotation and Ponding

When the soil layer is susceptible to wetting to a depth of about 10 m ( $\approx 30$  ft), several techniques may be used to cause collapse of the soil *before* construction of the foundation is begun. Two of these techniques are *vibroflotation* and *ponding* (also called *flooding*). Vibroflotation is used successfully in free-draining soil. (See Chapter 16.) Ponding—by constructing low dikes—is utilized at sites that have no impervious layers. However, even after saturation and collapse of the soil by ponding, some additional settlement of the soil may occur after construction of the foundation is begun. Additional settlement may also be caused by incomplete saturation of the soil at the time of construction. Ponding may be used successfully in the construction of earth dams.

## Extending Foundation Beyond Zone of Wetting

If precollapsing the soil is not practical, foundations may be extended beyond the zone of possible wetting, although the technique may require drilled shafts and piles. The design of drilled shafts and piles must take into consideration the effect of negative skin friction resulting from the collapse of the soil structure and the associated settlement of the zone of subsequent wetting.

In some cases, a *rock-column type of foundation (vibroreplacement)* may be considered. Rock columns are built with large boulders that penetrate the collapsible soil layer. They act as piles in transferring the load to a more stable soil layer.

---

## Expansive Soils

### 11.7 General Nature of Expansive Soils

Many plastic clays swell considerably when water is added to them and then shrink with the loss of water. Foundations constructed on such clays are subjected to large uplifting forces caused by the swelling. These forces induce heaving, cracking, and the




**Figure 11.8** Cracks in a wall due to heaving of an expansive clay (Courtesy of Anand Puppala, University of Texas at Arlington, Arlington, Texas)

breakup of both building foundations and slab-on-grade members. Figure 11.8 shows the cracks in a wall due to excessive heaving. Expansive clays cover large parts of the United States, South America, Africa, Australia, and India. In the United States, these clays are predominant in Texas, Oklahoma, and the upper Missouri Valley. In general, expansive clays have liquid limits and plasticity indices greater than about 40 and 15, respectively.

As noted, the increase and decrease in moisture content causes clay to swell and shrink. Figure 11.9 shows shrinkage cracks on the ground surface of a clay weathered from the Eagle Ford shale formation in the Dallas-Fort Worth, Texas area. The depth in a soil to which periodic changes of moisture occur is usually referred to as the *active zone* (see Figure 11.10). The depth of the active zone varies, depending on the location of the site. Some typical active-zone depths in American cities are given in Table 11.3. In some clays and clay shales in the western United States, the depth of the active zone can be as much as 15 m ( $\approx 50$  ft). The active-zone depth can easily be determined by plotting the liquidity



**Figure 11.9** Shrinkage cracks on ground surface in a clay weathered from Eagle Ford shale formation in the Dallas-Fort Worth area (Courtesy of Thomas M. Petry, Missouri University of Science and Technology, Rolla, Missouri)

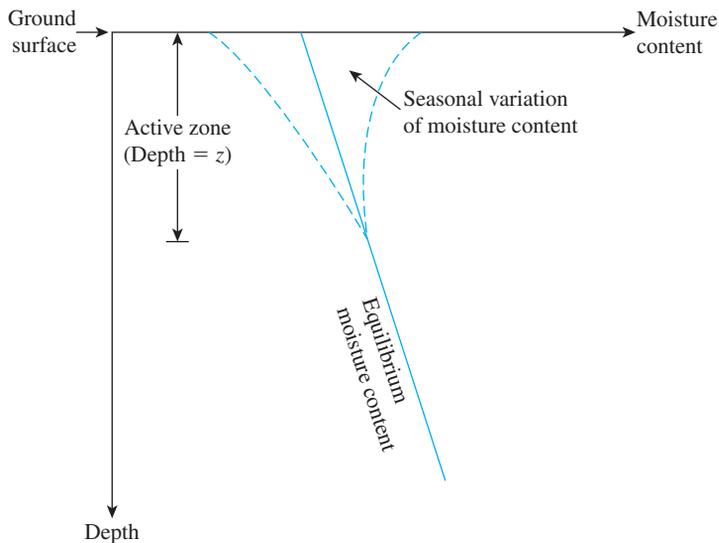

**Figure 11.10** Definition of active zone


**Table 11.3** Typical Active-Zone Depths in Some U.S. Cities<sup>a</sup>

City	Depth of active zone	
	(m)	(ft)
Houston	1.5 to 3	5 to 10
Dallas	2.1 to 4.6	7 to 15
San Antonio	3 to 9	10 to 30
Denver	3 to 4.6	10 to 15


<sup>a</sup>After O'Neill and Poormoayed (1980) (Based on data from O'Neill and Poormoayed (1980) (O'Neill, M. W., and Poormoayed, N. (1980). "Methodology for Foundations on Expansive Clays," *Journal of the Geotechnical Engineering Division*, American Society of Civil Engineers, Vol. 106, No. GT12, pp. 1345–1367.)

index against the depth of the soil profile over several seasons. Figure 11.11 shows such a plot for the Beaumont formation in the Houston area.

Shrinkage cracks can extend deep into the active zone. Figure 11.12 shows interconnected shrinkage cracks extending from the ground surface into the active zone in an expansive clay.

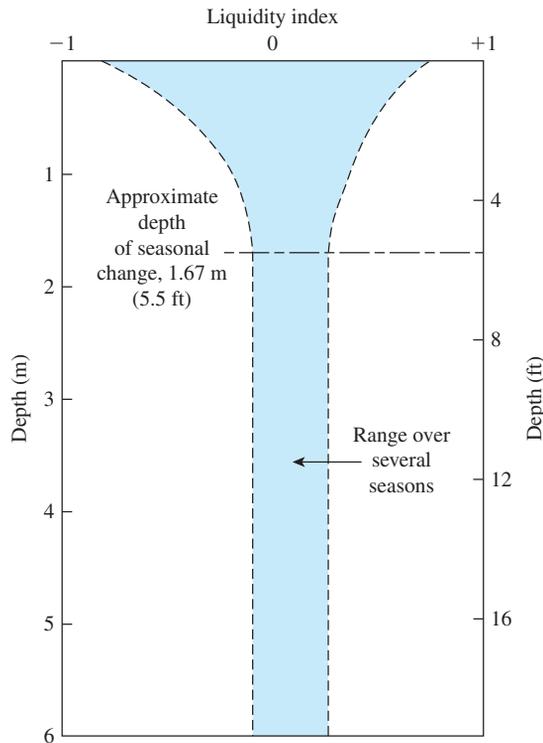

**Figure 11.11** Active zone in Houston area, Beaumont formation (Based on O'Neill, M. W., and Poormoayed, N. (1980). "Methodology for Foundations on Expansive Clays," *Journal of the Geotechnical Engineering Division*, American Society of Civil Engineers, Vol. 106, No. GT12, pp. 1345–1367.)

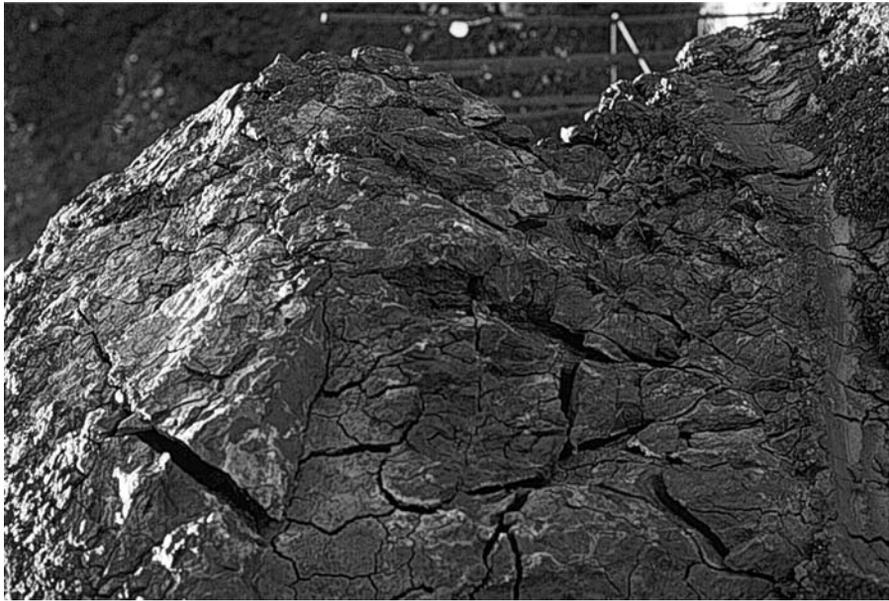

**Figure 11.12** Interconnected shrinkage cracks extended from the ground surface into the active zone (Courtesy of Thomas M. Petry, Missouri University of Science and Technology, Rolla, Missouri)

To study the magnitude of possible swell in a clay, simple laboratory oedometer tests can be conducted on undisturbed specimens. Two common tests are the *unrestrained swell test* and the *swelling pressure test*. They are described in the following sections.

## 11.8 Unrestrained Swell Test


In the *unrestrained swell test*, the specimen is placed in an oedometer under a small surcharge of about  $6.9 \text{ kN/m}^2$  ( $1 \text{ lb/in}^2$ ). Water is then added to the specimen, and the expansion of the volume of the specimen (i.e., its height; the area of cross section is constant) is measured until equilibrium is reached. The percentage of free swell may then be expressed as the ratio

$$s_{w(\text{free})}(\%) = \frac{\Delta H}{H} (100) \quad (11.9)$$

where

- $s_{w(\text{free})}$  = free swell, as a percentage
- $\Delta H$  = height of swell due to saturation
- $H$  = original height of the specimen

Vijayvergiya and Ghazzaly (1973) analyzed various soil test results obtained in this manner and prepared a correlation chart of the free swell, liquid limit, and natural

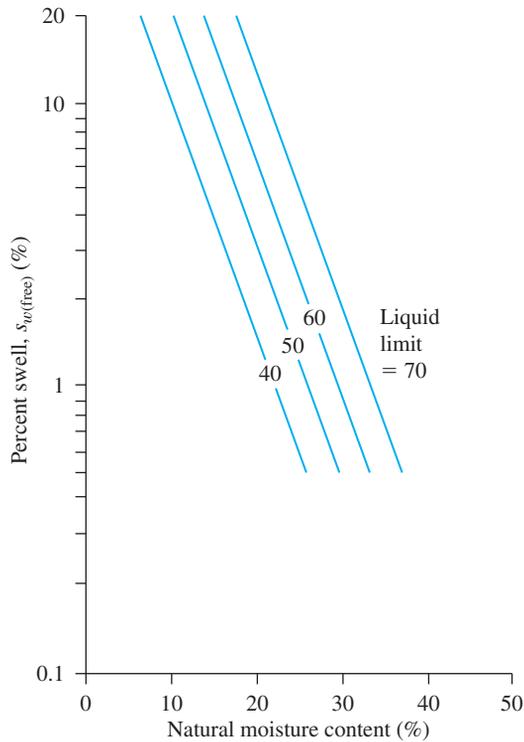

**Figure 11.13** Relation between percentage of free swell, liquid limit, and natural moisture content (Based on Vijayvergiya, V. N. and Ghazzaly, O. I. (1973). “Prediction of Swelling Potential of Natural Clays,” *Proceedings, Third International Research and Engineering Conference on Expansive Clays*, pp. 227–234.)

moisture content, as shown in Figure 11.13. O’Neill and Poormoayed (1980) developed a relationship for calculating the free surface swell from this chart:

$$\Delta S_F = 0.0033Zs_{w(\text{free})} \quad (11.10)$$

where

$\Delta S_F$  = free surface swell

$Z$  = depth of active zone


$s_{w(\text{free})}$  = free swell, as a percentage

## 11.9 Swelling Pressure Test

The swelling pressure can be determined from two different types of tests. They are

- Conventional consolidation test
- Constant volume test

The two methods are briefly described here.

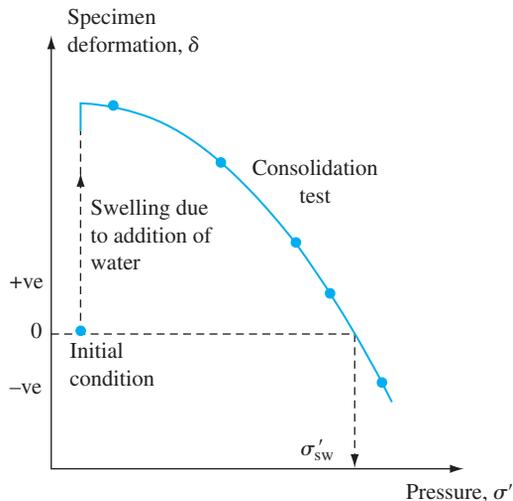

**Figure 11.14** Zero swell pressure from conventional consolidation test

### Conventional Consolidation Test

In this type of test, the specimen is placed in a oedometer under a small surcharge of about  $6.9 \text{ kN/m}^2$  ( $1 \text{ lb/in}^2$ ). Water is added to the specimen, allowing it to swell and reach an equilibrium position after some time. Subsequently, loads are added in convenient steps, and the specimen is consolidated. The plot of specimen deformation ( $\delta$ ) versus  $\log \sigma'$  is shown in Figure 11.14. The  $\delta$  versus  $\log \sigma'$  plot crosses the horizontal line through the point of initial condition. The pressure corresponding to the point of intersection is the *zero swell pressure*,  $\sigma'_{sw}$ .

### Constant Volume Test

The *constant volume test* can be conducted by taking a specimen in a consolidation ring and applying a pressure equal to the effective overburden pressure,  $\sigma'_o$ , plus the approximate anticipated surcharge caused by the foundation,  $\sigma'_s$ . Water is then added to the specimen. As the specimen starts to swell, pressure is applied in small increments to prevent swelling. Pressure is maintained until full swelling pressure is developed on the specimen, at which time the total pressure is

$$\sigma'_{sw} = \sigma'_o + \sigma'_s + \sigma'_1 \quad (11.11)$$


where

$\sigma'_{sw}$  = total pressure applied to prevent swelling, or zero swell pressure

$\sigma'_1$  = additional pressure applied to prevent swelling after addition of water

Figure 11.15 shows the variation of the percentage of swell with effective pressure during a swelling pressure test. (For more information on this type of test, see Sridharan et al., 1986.)

A  $\sigma'_{sw}$  of about  $20$  to  $30 \text{ kN/m}^2$  ( $400$  to  $650 \text{ lb/ft}^2$ ) is considered to be low, and a  $\sigma'_{sw}$  of  $1500$  to  $2000 \text{ kN/m}^2$  ( $30,000$  to  $40,000 \text{ lb/ft}^2$ ) is considered to be high. After zero swell pressure is attained, the soil specimen can be unloaded in steps to the level of the effective overburden pressure,  $\sigma'_o$ . The unloading process will cause the specimen to swell. The

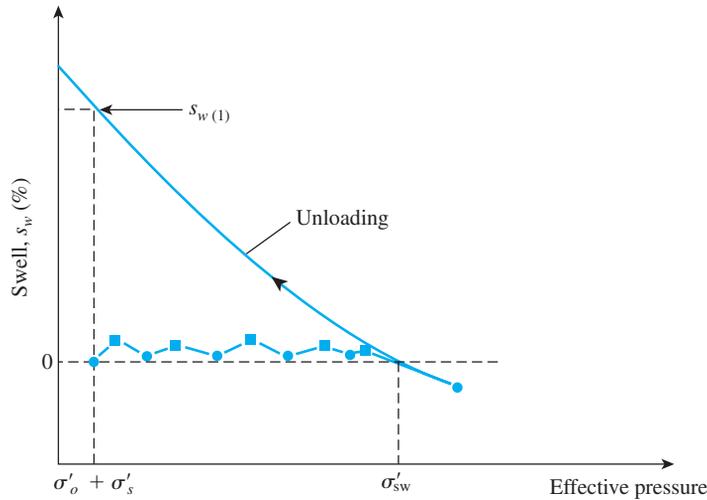

**Figure 11.15**  
Swelling pressure test

equilibrium swell for each pressure level is also recorded. The variation of the swell,  $s_w$  in percent, and the applied pressure on the specimen will be like that shown in Figure 11.15.

The constant volume test can be used to determine the surface heave,  $\Delta S$ , for a foundation (O'Neill and Poormoayed, 1980) as given by the formula

$$\Delta S = \sum_{i=1}^n [s_{w(1)} (\%)] (H_i) (0.01) \quad (11.12)$$

where


$s_{w(1)} (\%)$  = swell, in percent, for layer  $i$  under a pressure of  $\sigma'_o + \sigma'_s$  (see Figure 11.15)

$\Delta H_i$  = thickness of layer  $i$

It is important to point out that the zero swell pressure ( $\sigma'_{sw}$ ) obtained from the conventional consolidation test and the constant volume test may not be the same. Table 11.4 summarizes some laboratory test results of Sridharan et al. (1986) to illustrate this point. It also was shown by Sridharan et al. (1986) that the zero swell pressure is a function of the dry unit weight of soil, but not of the initial moisture content (Figure 11.16).

**Table 11.4** Comparison of Zero Swell Pressure Obtained from Conventional Consolidation Tests and Constant Volume Tests—Summary of Test Results of Sridharan et al. (1986)

Soil	Liquid limit	Plasticity index	Initial void ratio, $e_i$	$\sigma'_{sw}$ (kN/m <sup>2</sup> )	
				Consolidation test	Constant volume test
BC-1	80	44	0.893	294.3	186.4
BC-4	98	57	1.002	382.6	251.8
BC-5	96	65	0.742	500.3	304.1
BC-7	96	66	0.572	1275.3	372.8
BC-8	94	62	0.656	147.2	68.7

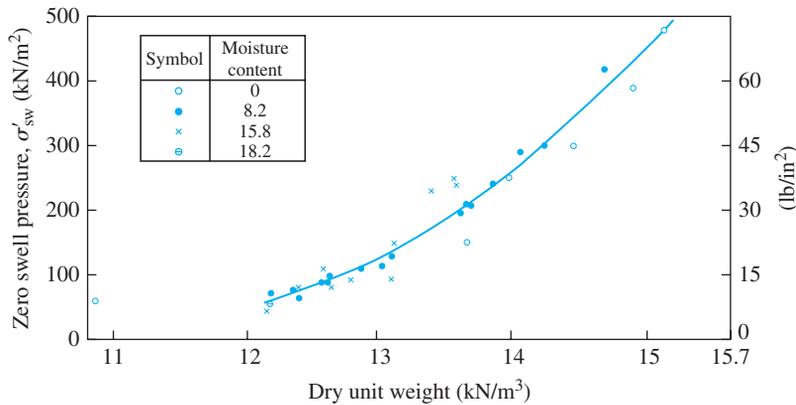

**Figure 11.16** Plot of zero swell pressure with the dry unit weight of soil (Based on Sridharan et al., 1986.)

### Example 11.1

A soil profile has an active zone of expansive soil of 2 m. The liquid limit and the average natural moisture content during the construction season are 60% and 30%, respectively. Determine the free surface swell.

#### Solution

From Figure 11.13 for  $LL = 60\%$  and  $w = 30\%$ ,  $s_{w(\text{free})} = 1\%$ . From Eq. (11.10),

$$\Delta S_F = 0.0033Zs_{w(\text{free})}$$

Hence,

$$\Delta S_F = 0.0033(2)(1)(1000) = \mathbf{6.6 \text{ mm}}$$

### Example 11.2

An expansive soil profile has an active-zone thickness of 5.2 m. A shallow foundation is to be constructed 1.2 m below the ground surface. A swelling pressure test provided the following data:

Depth below ground surface (m)	Swell under overburden and estimated foundation surcharge pressure, $s_{w(1)}$ (%)
1.2	3.0
2.2	2.0
3.2	1.2
4.2	0.55
5.2	0.0

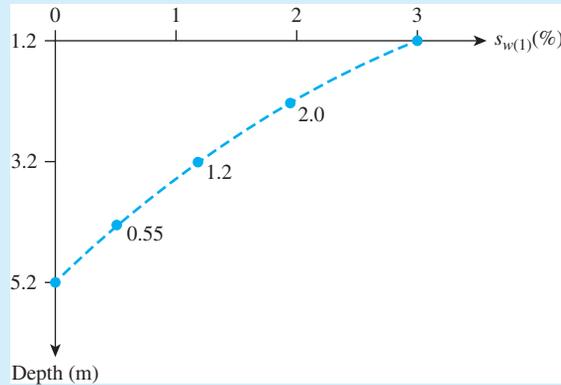


Figure 11.17

- Estimate the total possible swell under the foundation.
- If the allowable total swell is 15 mm, what would be the necessary undercut?

### Solution

Part a

Figure 11.17 shows the plot of depth versus  $s_w(1)(\%)$ . The area of this diagram will be the total swell. Thus

$$\begin{aligned} \Delta S &= \frac{1}{100} \left[ \left( \frac{1}{2} \right) (0.55 + 0)(1) + \left( \frac{1}{2} \right) (0.55 + 1.2)(1) \right. \\ &\quad \left. + \left( \frac{1}{2} \right) (1.2 + 2)(1) + \left( \frac{1}{2} \right) (2 + 3)(1) \right] \\ &= 0.0525 \text{ m} = \mathbf{52.5 \text{ mm}} \end{aligned}$$

Part b

Total swell at various depths can be calculated as follows:

Depth (m)	Total swell, $\Delta S$ (m)
5.2	0
4.2	$0 + \frac{1}{2}(0.55 + 0)(1)(1/100) = 0.00275$
3.2	$0.00275 + \frac{1}{2}(1.2 + 0.55)(1)(1/100) = 0.0115$
2.2	$0.0115 + \frac{1}{2}(2 + 1.2)(1)(1/100) = 0.0275$
1.2	$0.0275 + \frac{1}{2}(2 + 3)(1)(1/100) = 0.0525$

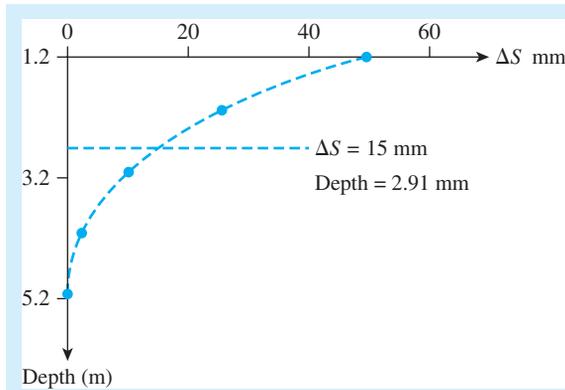


Figure 11.18

The plot of  $\Delta S$  versus depth is shown in Figure 11.18. From this figure, the depth of undercut is  $2.91 - 1.2 = 1.71$  m below the bottom of the foundation. ■

## 11.10 Classification of Expansive Soil on the Basis of Index Tests

Classification systems for expansive soils are based on the problems they create in the construction of foundations (potential swell). Most of the classifications contained in the literature are summarized in Figure 11.19 and Table 11.5. However, the classification system developed by the U.S. Army Waterways Experiment Station (Snethen et al., 1977)

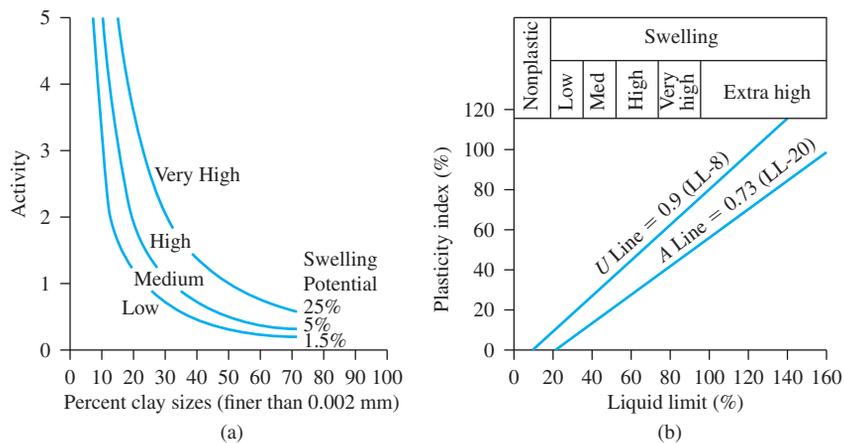
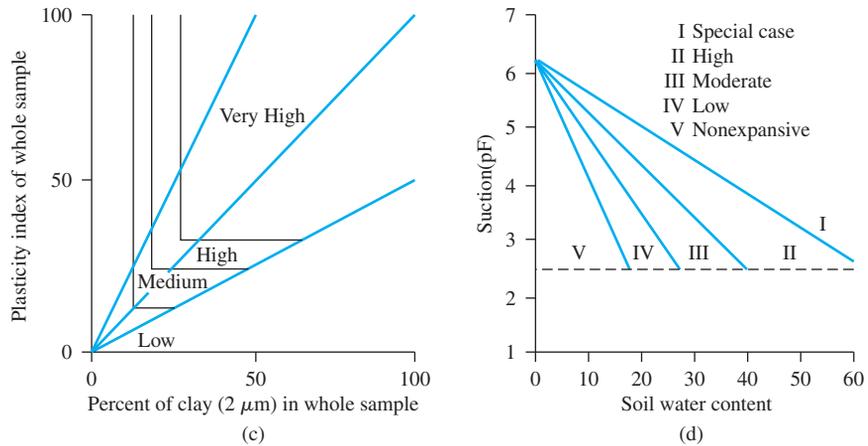


Figure 11.19 Commonly used criteria for determining swell potential (Based on Abduljawwad, S. N. and Al-Sulaimani, G. J. (1993). “Determination of Swell Potential of Al-Qatif Clay,” *Geotechnical testing Journal*, American Society for Testing and Materials, Vol. 16, No. 4, pp. 469–484.)


**Figure 11.19** (Continued)

**Table 11.5** Summary of Some Criteria for Identifying Swell Potential (Based on Abduljawwad, S. N. and Al-Sulaimani, G. J. (1993). “Determination of Swell Potential of Al-Qatif Clay,” *Geotechnical testing Journal*, American Society for Testing and Materials, Vol. 16, No. 4, pp. 469–484.)

Reference	Criteria	Remarks
Holtz (1959)	$CC > 28$ , $PI > 35$ , and $SL < 11$ (very high) $20 \leq CC \leq 31$ , $25 \leq PI \leq 41$ , and $7 \leq SL \leq 12$ (high) $13 \leq CC \leq 23$ , $15 \leq PI \leq 28$ , and $10 \leq SL \leq 16$ (medium) $CC \leq 15$ , $PI \leq 18$ , and $SL \geq 15$ (low)	Based on CC, PI, and SL
Seed et al. (1962)	See Figure 11.19a	Based on oedometer test using compacted specimen, percentage of clay $< 2 \mu\text{m}$ , and activity
Altmeyer (1955)	$LS < 5$ , $SI > 12$ , and $PS < 0.5$ (noncritical) $5 \leq LS \leq 8$ , $10 \leq SL \leq 12$ , and $0.5 \leq PS \leq 1.5$ (marginal) $LS > 8$ , $SL < 10$ , and $PS > 1.5$ (critical)	Based on LS, SL, and PS Remolded sample ( $\rho_{d(\text{max})}$ and $w_{\text{opt}}$ ) soaked under 6.9 kPa surcharge
Dakshanamany and Raman (1973)	See Figure 11.19b	Based on plasticity chart
Raman (1967)	$PI > 32$ and $SI > 40$ (very high) $23 \leq PI \leq 32$ and $30 \leq SI \leq 40$ (high) $12 \leq PI \leq 23$ and $15 \leq SI \leq 30$ (medium) $PI < 12$ and $SI < 15$ (low)	Based on PI and SI
Sowers and Sowers (1970)	$SL < 10$ and $PI > 30$ (high) $10 \leq SL \leq 12$ and $15 \leq PI \leq 30$ (moderate) $SL > 12$ and $PI < 15$ (low)	Little swell will occur when $w_o$ results in LI of 0.25
Van Der Merwe (1964)	See Figure 11.19c	Based on PI, percentage of clay $< 2 \mu\text{m}$ , and activity

(Continued)

Table 11.5 (Continued)

Reference	Criteria	Remarks
Uniform Building Code, 1968	$EI > 130$ (very high) and $91 \leq EI \leq 130$ (high) $51 \leq EI \leq 90$ (medium) and $21 \leq EI \leq 50$ (low) $0 \leq EI \leq 20$ (very low)	Based on oedometer test on compacted specimen with degree of saturation close to 50% and surcharge of 6.9 kPa
Snethen (1984)	$LL > 60$ , $PI > 35$ , $\tau_{nat} > 4$ , and $SP > 1.5$ (high) $30 \leq LL \leq 60$ , $25 \leq PI \leq 35$ , $1.5 \leq \tau_{nat} \leq 4$ , and $0.5 \leq SP \leq 1.5$ (medium) $LL < 30$ , $PI < 25$ , $\tau_{nat} < 1.5$ , and $SP < 0.5$ (low)	PS is representative for field condition and can be used without $\tau_{nat}$ , but accuracy will be reduced
Chen (1988)	$PI \geq 35$ (very high) and $20 \leq PI \leq 55$ (high) $10 \leq PI \leq 35$ (medium) and $PI \leq 15$ (low)	Based on PI
McKeen (1992)	Figure 11.19d	Based on measurements of soil water content, suction, and change in volume on drying
Vijayvergiya and Ghazzaly (1973)	$\log SP = (1/12)(0.44 LL - w_o + 5.5)$	Empirical equations
Nayak and Christensen (1974)	$SP = (0.00229 PI)(1.45C)/w_o + 6.38$	Empirical equations
Weston (1980)	$SP = 0.00411(LL_w)^{4.17} q^{-3.86} w_o^{-2.33}$	Empirical equations
Note: C = clay, %		PS = probable swell, %
CC = colloidal content, %		q = surcharge
EI = Expansion index = $100 \times$ percent swell $\times$ fraction passing No. 4 sieve		SI = shrinkage index = $LL - SL$ , %
LI = liquidity index, %		SL = shrinkage limit, %
LL = liquid limit, %		SP = swell potential, %
$LL_w$ = weighted liquid limit, %		$w_o$ = natural soil moisture
LS = linear shrinkage, %		$w_{opt}$ = optimum moisture content, %
PI = plasticity index, %		$\tau_{nat}$ = natural soil suction in tsf
		$\rho_{d(max)}$ = maximum dry density

is the one most widely used in the United States. It has also been summarized by O'Neill and Poormoayed (1980); see Table 11.6. Sridharan (2005) proposed an index called the *free swell ratio* to predict the clay type, potential swell classification, and dominant clay minerals present in a given soil. The free swell ratio can be determined by finding the

Table 11.6 Expansive Soil Classification System<sup>a</sup>

Liquid limit	Plasticity index	Potential swell (%)	Potential swell classification
<50	<25	<0.5	Low
50–60	25–35	0.5–1.5	Marginal
>60	>35	>1.5	High

Potential swell = vertical swell under a pressure equal to overburden pressure

<sup>a</sup>Based on data from O'Neill and Poormoayed (1980)


**Table 11.7** Expansive Soil Classification Based on Free Swell Ratio

Free swell ratio	Clay type	Potential swell classification	Dominant clay mineral
≤1.0	Non-swelling	Negligible	Kaolinite
1.0–1.5	Mixture of swelling and non-swelling	Low	Kaolinite and montmorillonite
1.5–2.0	Swelling	Moderate	Montmorillonite
2.0–4.0	Swelling	High	Montmorillonite
> 4.0	Swelling	Very High	Montmorillonite

equilibrium sediment volumes of 10 grams of an oven-dried specimen passing No. 40 U.S. sieve (0.425 mm opening) in distilled water ( $V_d$ ) and in  $\text{CCl}_4$  or kerosene ( $V_K$ ). The free swell ratio (FSR) is defined as

$$\text{FSR} = \frac{V_d}{V_K} \quad (11.13)$$

Table 11.7 gives the expansive soil classification based on free swell ratio. Also, Figure 11.20 shows the classification of soil based on the free swell ratio.

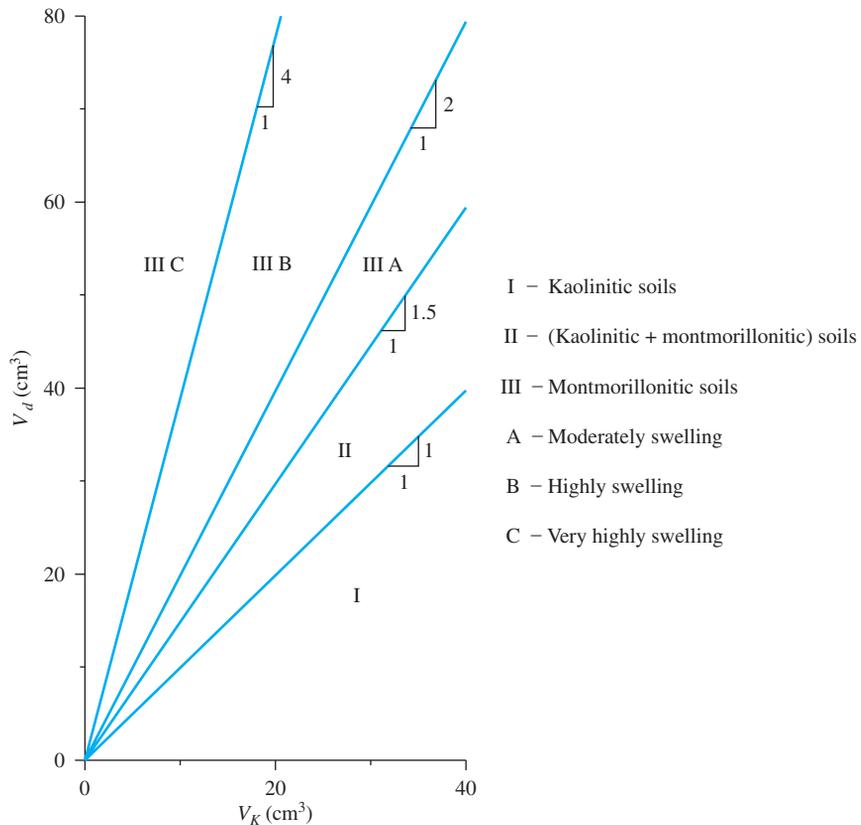
**Figure 11.20** Classification based on free swell ratio (Based on Sridharan, 2005)

## 11.11 Foundation Considerations for Expansive Soils

If a soil has a low swell potential, standard construction practices may be followed. However, if the soil possesses a marginal or high swell potential, precautions need to be taken, which may entail

1. Replacing the expansive soil under the foundation
2. Changing the nature of the expansive soil by compaction control, prewetting, installation of moisture barriers, or chemical stabilization
3. Strengthening the structures to withstand heave, constructing structures that are flexible enough to withstand the differential soil heave without failure, or constructing isolated deep foundations below the depth of the active zone


One particular method may not be sufficient in all situations. Combining several techniques may be necessary, and local construction experience should always be considered. Following are some details regarding the commonly used techniques for dealing with expansive soils.

### Replacement of Expansive Soil

When shallow, moderately expansive soils are present at the surface, they can be removed and replaced by less expansive soils and then compacted properly.


### Changing the Nature of Expansive Soil

1. *Compaction:* The heave of expansive soils decreases substantially when the soil is compacted to a lower unit weight on the high side of the optimum moisture content (possibly 3 to 4% above the optimum moisture content). Even under such conditions, a slab-on-ground type of construction should not be considered when the total probable heave is expected to be about 38 mm (1.5 in.) or more.
2. *Prewetting:* One technique for increasing the moisture content of the soil is ponding and hence achieving most of the heave before construction. However, this technique may be time consuming because the seepage of water through highly plastic clays is slow. After ponding, 4 to 5% of hydrated lime may be added to the top layer of the soil to make it less plastic and more workable (Gromko, 1974).
3. *Installation of moisture barriers:* The long-term effect of the differential heave can be reduced by controlling the moisture variation in the soil. This is achieved by providing vertical moisture barriers about 1.5 m ( $\approx$ 5 ft) deep around the perimeter of slabs for the slab-on-grade type of construction. These moisture barriers may be constructed in trenches filled with gravel, lean concrete, or impervious membranes.
4. *Stabilization of soil:* Chemical stabilization with the aid of lime and cement has often proved useful. A mix containing about 5% lime is sufficient in most cases. The effect of lime in stabilizing expansive soils, thereby reducing the shrinking and swelling characteristics, can be demonstrated with the aid of Figure 11.21. For this, expansive clay weathered from the Eagle Ford shale formation in the Dallas-Fort Worth, Texas area was taken. Some of it was mixed with water to about its liquid limit. It was placed in two molds that were about 152 mm (6 in.) long and 12.7 mm  $\times$  12.7 mm (0.5 in.  $\times$  0.5 in.) in cross section. Figure 11.21a shows the shrinkage of the soil specimens in the mold in a *dry condition*. The same soil also was mixed with 6% lime (by dry weight) and then with a similar amount of water and placed in

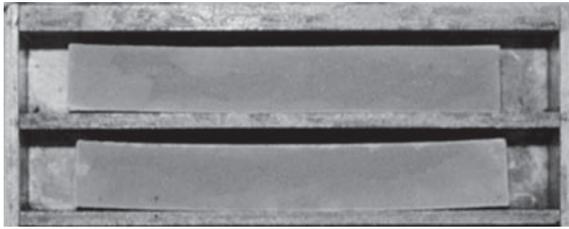

(a)


**Figure 11.21** Shrinkage of expansive clay (Eagle Ford soil) mixed with water to about its liquid limit in molds of 152 mm × 12.7 mm × 12.7 mm (6 in. × ½ in. × ½ in.): (a) without addition of lime; (b) with addition of 6% lime by weight (Courtesy of Thomas M. Petry, Missouri University of Science and Technology, Rolla, Missouri)

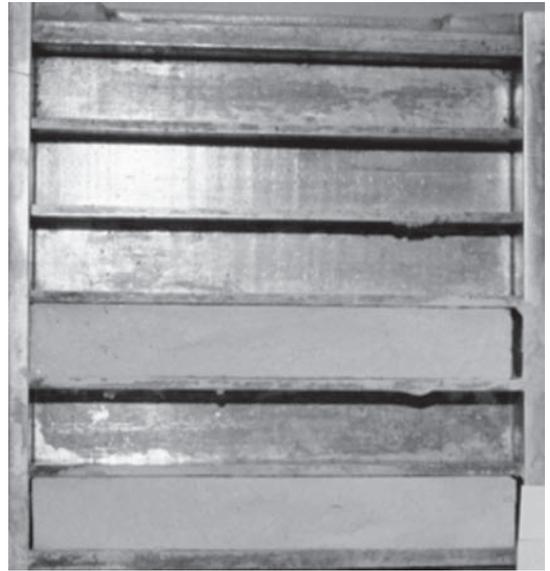

(b)

six similar molds. Figure 11.21b shows the shrinkage of the lime-stabilized specimens in a dry condition, which was practically negligible compared to that seen in Figure 11.21a. Lime or cement and water are mixed with the top layer of soil and compacted. The addition of lime or cement will decrease the liquid limit, the plasticity index, and the swell characteristics of the soil. This type of stabilization work can be done to a depth of 1 to 1.5 m (≈3 to 5 ft). Hydrated high-calcium lime and dolomite lime are generally used for lime stabilization.

Another method of stabilization of expansive soil is the *pressure injection* of lime slurry or lime–fly-ash slurry into the soil, usually to a depth of 4 to 5 m or (12 to 16 ft) and occasionally deeper to cover the active zone. Further details of the pressure injection technique are presented in Chapter 16. Depending on the soil conditions at a site, single or multiple injections can be planned, as shown in Figure 11.22. Figure 11.23 shows

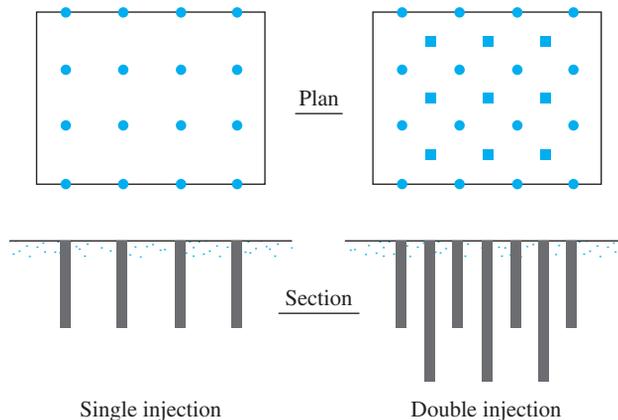

**Figure 11.22** Multiple lime slurry injection planning for a building pad



**Figure 11.23** Pressure injection of lime slurry for a building pad (Courtesy of Hayward Baker Inc., Odenton, Maryland.)



**Figure 11.24** Slope stabilization of a canal bank by pressure injection of lime–fly-ash slurry (Courtesy of Hayward Baker Inc., Odenton, Maryland.)

the slurry pressure injection work for a building pad. The stakes that are marked are the planned injection points. Figure 11.24 shows lime–fly-ash stabilization by pressure injection of the bank of a canal that had experienced sloughs and slides.

## 11.12 Construction on Expansive Soils

Care must be exercised in choosing the type of foundation to be used on expansive soils. Table 11.8 shows some recommended construction procedures based on the total predicted heave,  $\Delta S$ , and the length-to-height ratio of the wall panels. For example, the table

**Table 11.8** Construction Procedures for Expansive Clay Soils<sup>a</sup>

Total predicted heave (mm)		Recommended construction	Method	Remarks
$L/H = 1.25$	$L/H = 2.5$			
0 to 6.35	12.7	No precaution		
6.35 to 12.7	12.7 to 50.8	Rigid building tolerating movement (steel reinforcement as necessary)	<i>Foundations:</i> Pads Strip footings mat (waffle)  <i>Floor slabs:</i> Waffle Tile  <i>Walls:</i>	Footings should be small and deep, consistent with the soil-bearing capacity. Mats should resist bending. Slabs should be designed to resist bending and should be independent of grade beams. Walls on a mat should be as flexible as the mat. There should be no vertical rigid connections. Brickwork should be strengthened with tie bars or bands.
12.7 to 50.8	50.8 to 101.6	Building damping movement	<i>Joints:</i> Clear Flexible  <i>Walls:</i> Flexible Unit construction Steel frame  <i>Foundations:</i> Three point Cellular Jacks	Contacts between structural units should be avoided, or flexible, waterproof material may be inserted in the joints. Walls or rectangular building units should heave as a unit. Cellular foundations allow slight soil expansion to reduce swelling pressure. Adjustable jacks can be inconvenient to owners. Three-point loading allows motion without duress.
>50.8	>101.6	Building independent of movement	<i>Foundation drilled shaft:</i> Straight shaft Bell bottom  <i>Suspended floor:</i>	Smallest-diameter and widely spaced shafts compatible with the load should be placed. Clearance should be allowed under grade beams. Floor should be suspended on grade beams 305 to 460 mm above the soil.

<sup>a</sup>Gromko, G. J., (1974). "Review of Expansive Soils," *Journal of the Geotechnical Engineering Division*, American Society of Civil Engineers, Vol. 100, No. GT6, pp. 667–687.

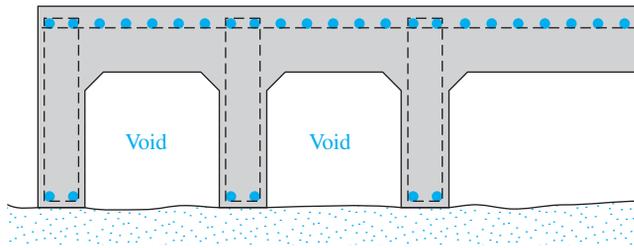


Figure 11.25 Waffle slab

proposes the use of waffle slabs as an alternative in designing rigid buildings that are capable of tolerating movement. Figure 11.25 shows a schematic diagram of a waffle slab. In this type of construction, the ribs hold the structural load. The waffle voids allow the expansion of soil.

Table 11.8 also suggests the use of a drilled shaft foundation with a suspended floor slab when structures are constructed independently of movement of the soil. Figure 11.26 a shows a schematic diagram of such an arrangement. The bottom of the shafts should be placed below the active zone of the expansive soil. For the design of the shafts, the uplifting force,  $U$ , may be estimated (see Figure 11.26b) from the equation

$$U = \pi D_s Z \sigma'_{sw} \tan \phi'_{ps} \quad (11.14)$$

where

$D_s$  = diameter of the shaft

$Z$  = depth of the active zone

$\phi'_{ps}$  = effective angle of plinth–soil friction

$\sigma'_{sw}$  = pressure for zero swell (see Figures 11.14 and 11.15;  $\sigma'_{sw} = \sigma'_o + \sigma'_s + \sigma'_1$ )

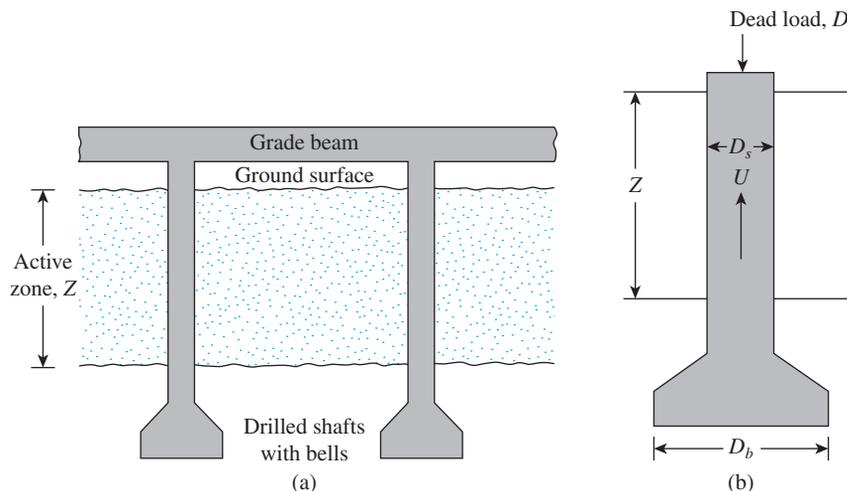


Figure 11.26 (a) Construction of drilled shafts with bells and grade beam; (b) definition of parameters in Eq. (11.14)

In most cases, the value of  $\phi'_{ps}$  varies between 10 and 20°. An average value of the zero horizontal swell pressure must be determined in the laboratory. In the absence of laboratory results,  $\sigma'_{sw} \tan \phi'_{ps}$  may be considered equal to the undrained shear strength of clay,  $c_u$ , in the active zone.

The belled portion of the drilled shaft will act as an anchor to resist the uplifting force. Ignoring the weight of the drilled shaft, we have

$$Q_{\text{net}} = U - D \quad (11.15)$$

where

$$Q_{\text{net}} = \text{net uplift load}$$

$$D = \text{dead load}$$

Now,

$$Q_{\text{net}} \approx \frac{c_u N_c}{\text{FS}} \left( \frac{\pi}{4} \right) (D_b^2 - D_s^2) \quad (11.16)$$

where

$c_u$  = undrained cohesion of the clay in which the bell is located

$N_c$  = bearing capacity factor

FS = factor of safety

$D_b$  = diameter of the bell of the drilled shaft

Combining Eqs. (11.15) and (11.16) gives

$$U - D = \frac{c_u N_c}{\text{FS}} \left( \frac{\pi}{4} \right) (D_b^2 - D_s^2) \quad (11.17)$$

Conservatively, from Tables 4.2 and 4.3,

$$N_c \approx N_{c(\text{strip})} F_{cs} = N_{c(\text{strip})} \left( 1 + \frac{N_q B}{N_c L} \right) \approx 5.14 \left( 1 + \frac{1}{5.14} \right) = 6.14$$

A drilled-shaft design is examined in Example 11.3.

### Example 11.3

Figure 11.27 shows a drilled shaft with a bell. The depth of the active zone is 5 m. The zero swell pressure of the swelling clay ( $\sigma'_{sw}$ ) is 450 kN/m<sup>2</sup>. For the drilled shaft, the dead load ( $D$ ) is 600 kN and the live load is 300 kN. Assume  $\phi'_{ps} = 12^\circ$ .

- Determine the diameter of the bell,  $D_b$ .
- Check the bearing capacity of the drilled shaft assuming zero uplift force.

#### Solution

Part a: Determining the Bell Diameter,  $D_b$

The uplift force, Eq. (11.14), is

$$U = \pi D_s Z \sigma'_{sw} \tan \phi'_{ps}$$

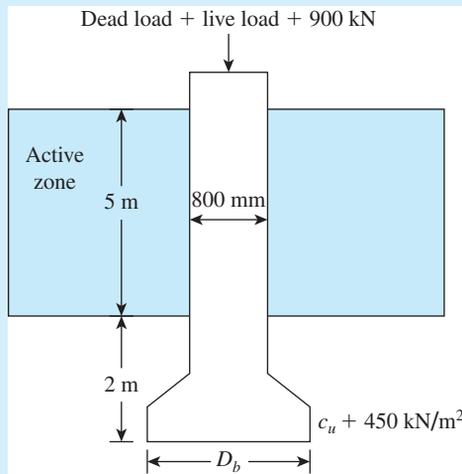


Figure 11.27 Drilled shaft in a swelling clay

Given:  $Z = 5 \text{ m}$  and  $\sigma'_{sw} = 450 \text{ kN/m}^2$ . Then

$$U = \pi(0.8)(5)(450) \tan 12^\circ = 1202 \text{ kN}$$

Assume the dead load and live load to be zero, and FS in Eq. (11.17) to be 1.25. So, from Eq. (11.17),

$$U = \frac{c_u N_c \left( \frac{\pi}{4} \right) (D_b^2 - D_s^2)}{\text{FS}}$$

$$1202 = \frac{(450)(6.14) \left( \frac{\pi}{4} \right) (D_b^2 - 0.8^2)}{1.25}; \quad D_b = \mathbf{1.15 \text{ m}}$$

The factor of safety against uplift with the dead load also should be checked. A factor of safety of at least 2 is desirable. So, from Eq. (11.17)

$$\text{FS} = \frac{c_u N_c \left( \frac{\pi}{4} \right) (D_b^2 - D_s^2)}{U - D}$$

$$= \frac{(450)(6.14) \left( \frac{\pi}{4} \right) (1.15^2 - 0.8^2)}{1202 - 600} = \mathbf{2.46 > 2—OK}$$

Part b: Check for Bearing Capacity

Assume that  $U = 0$ . Then

$$\text{Dead load + live load} = 600 + 300 = 900 \text{ kN}$$

$$\text{Downward load per unit area} = \frac{900}{\left( \frac{\pi}{4} \right) (D_b^2)} = \frac{900}{\left( \frac{\pi}{4} \right) (1.15^2)} = 866.5 \text{ kN/m}^2$$

$$\begin{aligned}\text{Net bearing capacity of the soil under the bell} &= q_{u(\text{net})} = c_u N_c \\ &= (450)(6.14) = 2763 \text{ kN/m}^2\end{aligned}$$

Hence, the factor of safety against bearing capacity failure is

$$\text{FS} = \frac{2763}{866.5} = 3.19 > 3 \text{—OK}$$




## Sanitary Landfills

### 11.13 General Nature of Sanitary Landfills

Sanitary landfills provide a way to dispose of refuse on land without endangering public health. Sanitary landfills are used in almost all countries, to varying degrees of success. The refuse disposed of in sanitary landfills may contain organic, paper, and fibrous wastes, or demolition wastes such as bricks and stones. The refuse is dumped and compacted at frequent intervals and is then covered with a layer of soil, as shown in Figure 11.28. In the compacted state, the average unit weight of the refuse may vary between 5 and 10 kN/m<sup>3</sup> (32 to 64 lb/ft<sup>3</sup>). A typical city in the United States, with a population of 1 million, generates about  $3.8 \times 10^6 \text{ m}^3$  ( $\approx 135 \times 10^6 \text{ ft}^3$ ) of compacted landfill material per year.

As property values continue to increase in densely populated areas, constructing structures over sanitary landfills becomes more and more tempting. In some instances, a visual site inspection may not be enough to detect an old sanitary landfill. However, construction of foundations over sanitary landfills is generally problematic because of poisonous gases (e.g., methane), excessive settlement, and low inherent bearing capacity.

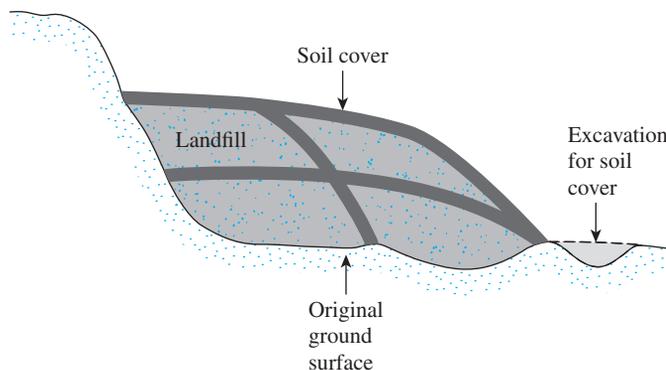

**Figure 11.28** Schematic diagram of a sanitary landfill in progress

## 11.14 Settlement of Sanitary Landfills

Sanitary landfills undergo large continuous settlements over a long time. Yen and Scanlon (1975) documented the settlement of several landfill sites in California. After completion of the landfill, the settlement rate (Figure 11.29) may be expressed as

$$m = \frac{\Delta H_f \text{ (m or ft)}}{\Delta t \text{ (month)}} \quad (11.18)$$

where

$m$  = settlement rate

$H_f$  = maximum height of the sanitary landfill

On the basis of several field observations, Yen and Scanlon determined the following empirical correlations for the settlement rate:

$$m = a - b \log t_1 \quad [\text{for fill heights ranging from 12 to 24 m (40 to 80 ft)}] \quad (11.19)$$

$$m = c - d \log t_1 \quad [\text{for fill heights ranging from 24 to 30 m (80 to 100 ft)}] \quad (11.20)$$

$$m = e - f \log t_1 \quad [\text{for fill heights larger than 30 m (100 ft)}] \quad (11.21)$$

In these equations,

$m$  is in m/mo(ft/mo).

$t_1$  is the median fill age, in months

In SI and English units, the values of  $a$ ,  $b$ ,  $c$ ,  $d$ ,  $e$ , and  $f$  given in Eqs. (11.19) through (11.21) are

Item	SI	English
$a$	0.0268	0.088
$b$	0.0116	0.038
$c$	0.038	0.125
$d$	0.0155	0.051
$e$	0.0435	0.142
$f$	0.0183	0.060

The median fill age may be defined from Figure 11.29 as

$$t_1 = t - \frac{t_c}{2} \quad (11.22)$$

where

$t$  = time from the beginning of the landfill

$t_c$  = time for completion of the landfill

Equations (11.19), (11.20), and (11.21) are based on field data from landfills for which  $t_c$  varied from 70 to 82 months. To get an idea of the approximate length of time required for a sanitary landfill to undergo complete settlement, consider Eq. (11.19). For a fill 12 m high and for  $t_c = 72$  months,

$$m = 0.0268 - 0.0116 \log t_1$$

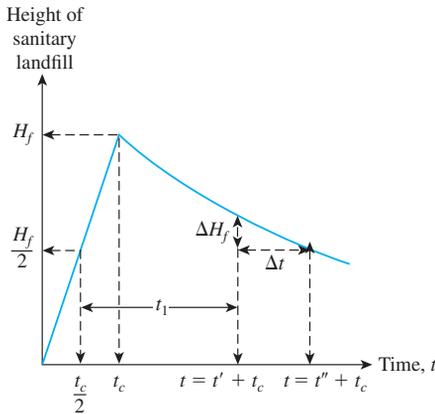


Figure 11.29 Settlement of sanitary landfills

so

$$\log t_1 = \frac{0.0268 - m}{0.0116}$$

If  $m = 0$  (zero settlement rate),  $\log t_1 = 2.31$ , or  $t_1 \approx 200$  months. Thus, settlement will continue for  $t_1 - t_c/2 = 200 - 36 = 164$  months ( $\approx 14$  years) after completion of the fill—a fairly long time. This calculation emphasizes the need to pay close attention to the settlement of foundations constructed on sanitary landfills.

A comparison of Eqs. (11.19) through (11.21) for rates of settlement shows that the value of  $m$  increases with the height of the fill. However, for fill heights greater than about 30 m (100 ft), the rate of settlement should not be much different from that obtained from Eq. (11.21). The reason is that the decomposition of organic matter close to the surface is mainly the result of an anaerobic environment. For deeper fills, the decomposition is slower. Hence, for fill heights greater than about 30 m (100 ft), the rate of settlement does not exceed that for fills that are about 30 m in height.

Sowers (1973) also proposed a formula for calculating the settlement of a sanitary landfill, namely,

$$\Delta H_f = \frac{\alpha H_f}{1 + e} \log \left( \frac{t''}{t'} \right) \quad (11.23)$$

where

$H_f$  = height of the fill

$e$  = void ratio

$\alpha$  = a coefficient for settlement

$t'$ ,  $t''$  = times (see Figure 11.29)

$\Delta H_f$  = settlement between times  $t'$  and  $t''$

The coefficients  $\alpha$  fall between

$$\alpha = 0.09e \quad (\text{for conditions favorable to decomposition}) \quad (11.24)$$

and

$$\alpha = 0.03e \quad (\text{for conditions unfavorable to decomposition}) \quad (11.25)$$

Equation (11.23) is similar to the equation for secondary consolidation settlement.

## Problems

- 11.1** For leossil soil, given  $G_s = 2.74$ . Plot a graph of  $\gamma_d$  ( $\text{kN/m}^3$ ) versus liquid limit to identify the zone in which the soil is likely to collapse on saturation. If a soil has a liquid limit of 27,  $G_s = 2.74$ , and  $\gamma_d = 14.5 \text{ kN/m}^3$ , is collapse likely to occur?
- 11.2** A collapsible soil layer in the field has a thickness of 3 m. The average effective overburden pressure on the soil layer is  $62 \text{ kN/m}^2$ . An undisturbed specimen of this soil was subjected to a double oedometer test. The preconsolidation pressure of the specimen as determined from the soaked specimen was  $84 \text{ kN/m}^2$ . Is the soil in the field normally consolidated or preconsolidated?
- 11.3** An expansive soil has an active-zone thickness of 10 ft. The natural moisture content of the soil is 25% and its liquid limit is 60. Calculate the free surface swell of the expansive soil upon saturation.
- 11.4** An expansive soil profile has an active-zone thickness of 12 ft. A shallow foundation is to be constructed at a depth of 4 ft below the ground surface. Based on the swelling pressure test, the following are given.

Depth from ground surface (ft)	Swell under overburden and estimated foundation surcharge pressure, $s_{w(t)}$ (%)
4	4.75
6	2.75
8	1.5
10	0.6
12	0.0

Estimate the total possible swell under the foundation.

- 11.5** Refer to Problem 11.4. If the allowable total swell is 1 in., what would be the necessary undercut?
- 11.6** Repeat Problem 11.4 with the following: active zone thickness = 6 m, depth of shallow foundation = 1.5 m.

Depth from ground surface (m)	Swell under overburden and estimated foundation surcharge pressure, $s_{w(t)}$ (%)
1.5	5.5
2.0	3.1
3.0	1.5
4.0	0.75
5.0	0.4
6.0	0.0

- 11.7** Refer to Problem 11.6. If the allowable total swell is 30 mm, what would be the necessary undercut?
- 11.8** Refer to Figure 11.26b. For the drilled shaft with bell, given:

Thickness of active zone,  $Z = 9 \text{ m}$

Dead load = 1500 kN

Live load = 300 kN

Diameter of the shaft,  $D_s = 1$  m

Zero swell pressure for the clay in the active zone = 600 kN/m<sup>2</sup>

Average angle of plinth-soil friction,  $\phi'_{ps} = 20^\circ$

Average undrained cohesion of the clay around the bell = 150 kN/m<sup>2</sup>

Determine the diameter of the bell,  $D_b$ . A factor of safety of 3 against uplift is required with the assumption that dead load plus live load is equal to zero.

- 11.9** Refer to Problem 11.8. If an additional requirement is that the factor of safety against uplift is at least 4 with the dead load on (live load = 0), what should be the diameter of the bell?

## References

- ABDULJAUWAD, S. N. and AL-SULAIMANI, G. J. (1993). "Determination of Swell Potential of Al-Qatif Clay," *Geotechnical Testing Journal*, American Society for Testing and Materials, Vol. 16, No. 4, pp. 469–484.
- ALTMAYER, W. T. (1955). "Discussion of Engineering Properties of Expansive Clays," *Journal of the Soil Mechanics and Foundations Division*, American Society of Civil Engineers, Vol. 81, No. SM2, pp. 17–19.
- BENITES, L. A. (1968). "Geotechnical Properties of the Soils Affected by Piping near the Benson Area, Cochise County, Arizona," M. S. Thesis, University of Arizona, Tucson.
- CHEN, F. H. (1988). *Foundations on Expansive Soils*, Elsevier, Amsterdam.
- CLEMENCE, S. P. and FINBARR, A. O. (1981). "Design Considerations for Collapsible Soils," *Journal of the Geotechnical Engineering Division*, American Society of Civil Engineers, Vol. 107, No. GT3, pp. 305–317.
- CLEVENGER, W. (1958). "Experience with Loess as Foundation Material," *Transactions*, American Society of Civil Engineers, Vol. 123, pp. 151–170.
- DAKSHANAMANTHY, V. and RAMAN, V. (1973). "A Simple Method of Identifying an Expansive Soil," *Soils and Foundations*, Vol. 13, No. 1, pp. 97–104.
- DENISOV, N. Y. (1951). *The Engineering Properties of Loess and Loess Loams*, Gosstroizdat, Moscow.
- FEDA, J. (1964). "Colloidal Activity, Shrinking and Swelling of Some Clays," *Proceedings, Soil Mechanics Seminar*, Loda, Illinois, pp. 531–546.
- GIBBS, H. J. (1961). *Properties Which Divide Loose and Dense Uncemented Soils*, Earth Laboratory Report EM-658, Bureau of Reclamation, U.S. Department of the Interior, Washington, DC.
- GROMKO, G. J. (1974). "Review of Expansive Soils," *Journal of the Geotechnical Engineering Division*, American Society of Civil Engineers, Vol. 100, No. GT6, pp. 667–687.
- HANDY, R. L. (1973). "Collapsible Loess in Iowa," *Proceedings, Soil Science Society of America*, Vol. 37, pp. 281–284.
- HOLTZ, W. G. (1959). "Expansive Clays—Properties and Problems," *Journal of the Colorado School of Mines*, Vol. 54, No. 4, pp. 89–125.
- HOLTZ, W. G. and HILF, J. W. (1961). "Settlement of Soil Foundations Due to Saturation," *Proceedings, Fifth International Conference on Soil Mechanics and Foundation Engineering*, Paris, Vol. 1, 1961, pp. 673–679.
- HOUSTON, W. N. and HOUSTON, S. L. (1989). "State-of-the-Practice Mitigation Measures for Collapsible Soil Sites," *Proceedings, Foundation Engineering: Current Principles and Practices*, American Society of Civil Engineers, Vol. 1, pp. 161–175.
- JENNINGS, J. E. and KNIGHT, K. (1975). "A Guide to Construction on or with Materials Exhibiting Additional Settlements Due to 'Collapse' of Grain Structure," *Proceedings, Sixth Regional Conference for Africa on Soil Mechanics and Foundation Engineering*, Johannesburg, pp. 99–105.

- LUTENEGGER, A. J. (1986). "Dynamic Compaction in Friable Loess," *Journal of Geotechnical Engineering*, American Society of Civil Engineers, Vol. 112, No. GT6, pp. 663–667.
- LUTENEGGER, A. J. and SABER, R. T. (1988). "Determination of Collapse Potential of Soils," *Geotechnical Testing Journal*, American Society for Testing and Materials, Vol. 11, No. 3, pp. 173–178.
- McKEEN, R. G. (1992). "A Model for Predicting Expansive Soil Behavior," *Proceedings, Seventh International Conference on Expansive Soils*, Dallas, Vol. 1, pp. 1–6.
- NAYAK, N. V. and CHRISTENSEN, R. W. (1974). "Swell Characteristics of Compacted Expansive Soils," *Clay and Clay Minerals*, Vol. 19, pp. 251–261.
- O'NEILL, M. W. and POORMOAYED, N. (1980). "Methodology for Foundations on Expansive Clays," *Journal of the Geotechnical Engineering Division*, American Society of Civil Engineers, Vol. 106, No. GT12, pp. 1345–1367.
- PECK, R. B., HANSON, W. E., and Thornburn, T. B. (1974). *Foundation Engineering*, Wiley, New York.
- PRIKLONSKII, V. A. (1952). *Gruntovedenic, Vtoraya Chast'*, Gosgeolizdat, Moscow.
- RAMAN, V. (1967). "Identification of Expansive Soils from the Plasticity Index and the Shrinkage Index Data," *The Indian Engineer*, Vol. 11, No. 1, pp. 17–22.
- SEED, H. B., WOODWARD, R. J., JR., and LUNDGREN, R. (1962). "Prediction of Swelling Potential for Compacted Clays," *Journal of the Soil Mechanics and Foundations Division*, American Society of Civil Engineers, Vol. 88, No. SM3, pp. 53–87.
- SEMKIN, V. V., ERMOSHIN, V. M., and OKISHEV, N. D. (1986). "Chemical Stabilization of Loess Soils in Uzbekistan," *Soil Mechanics and Foundation Engineering* (trans. from Russian), Vol. 23, No. 5, pp. 196–199.
- SNETHEN, D. R. (1984). "Evaluation of Expedient Methods for Identification and Classification of Potentially Expansive Soils," *Proceedings, Fifth International Conference on Expansive Soils*, Adelaide, pp. 22–26.
- SNETHEN, D. R., JOHNSON, L. D., and Patrick, D. M. (1977). *An Evaluation of Expedient Methodology for Identification of Potentially Expansive Soils*, Report No. FHWA-RD-77-94, U.S. Army Engineers Waterways Experiment Station, Vicksburg, MS.
- SOWERS, G. F. (1973). "Settlement of Waste Disposal Fills," *Proceedings, Eighth International Conference on Soil Mechanics and Foundation Engineering*, Moscow, pp. 207–210.
- SOWERS, G. B. and SOWERS, G. F. (1970). *Introductory Soil Mechanics and Foundations*, 3d ed. Macmillan, New York.
- SRIDHARAN, A. (2005). "On Swelling Behaviour of Clays," *Proceedings, International Conference on Problematic Soils*, North Cyprus, Vol. 2, pp. 499–516.
- SRIDHARAN, A., RAO, A. S., and SIVAPULLAIAH, P. V. (1986). "Swelling Pressure of Clays," *Geotechnical Testing Journal*, American Society for Testing and Materials, Vol. 9, No. 1, pp. 24–33.
- UNIFORM BUILDING CODE (1968). *UBC Standard No. 29-2*.
- VAN DER MERWE, D. H. (1964). "The Prediction of Heave from the Plasticity Index and Percentage Clay Fraction of Soils," *Civil Engineer in South Africa*, Vol. 6, No. 6, pp. 103–106.
- VIJAYVERGIYA, V. N. and GHAZZALY, O. I. (1973). "Prediction of Swelling Potential of Natural Clays," *Proceedings, Third International Research and Engineering Conference on Expansive Clays*, pp. 227–234.
- WESTON, D. J. (1980). "Expansive Roadbed Treatment for Southern Africa," *Proceedings, Fourth International Conference on Expansive Soils*, Vol. 1, pp. 339–360.
- YEN, B. C. and SCANLON, B. (1975). "Sanitary Landfill Settlement Rates," *Journal of the Geotechnical Engineering Division*, American Society of Civil Engineers, Vol. 101, No. GT5, pp. 475–487.



# **PART 3**

# **Lateral Earth Pressure and Earth-Retaining Structures**



**Chapter 12: Lateral Earth Pressure**

**Chapter 13: Retaining Walls**

**Chapter 14: Sheet Pile Walls**

**Chapter 15: Braced Cuts**



# 12 Lateral Earth Pressure

## 12.1 Introduction

Vertical or near-vertical slopes of soil are supported by retaining walls, cantilever sheet-pile walls, sheet-pile bulkheads, braced cuts, and other, similar structures. The proper design of those structures requires an estimation of lateral earth pressure, which is a function of several factors, such as (a) the type and amount of wall movement, (b) the shear strength parameters of the soil, (c) the unit weight of the soil, and (d) the drainage conditions in the backfill. Figure 12.1 shows a retaining wall of height  $H$ . For similar types of backfill,

- The wall may be restrained from moving (Figure 12.1a). The lateral earth pressure on the wall at any depth is called the *at-rest earth pressure*.
- The wall may tilt away from the soil that is retained (Figure 12.1b). With sufficient wall tilt, a triangular soil wedge behind the wall will fail. The lateral pressure for this condition is referred to as *active earth pressure*.
- The wall may be pushed into the soil that is retained (Figure 12.1c). With sufficient wall movement, a soil wedge will fail. The lateral pressure for this condition is referred to as *passive earth pressure*.


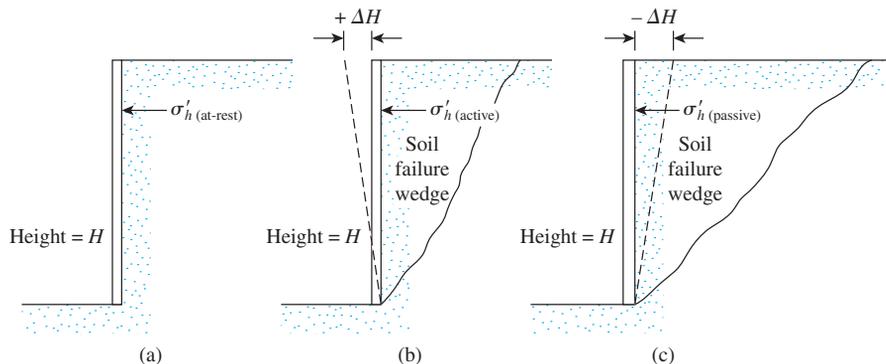


Figure 12.1 Nature of lateral earth pressure on a retaining wall

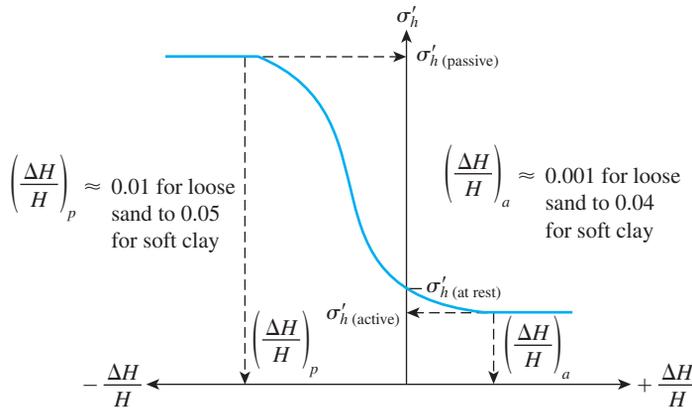

**Figure 12.2** Nature of variation of lateral earth pressure at a certain depth


Figure 12.2 shows the nature of variation of the lateral pressure,  $\sigma'_h$ , at a certain depth of the wall with the magnitude of wall movement.

In the sections that follow, we will discuss various relationships to determine the at-rest, active, and passive pressures on a retaining wall. It is assumed that the reader has studied lateral earth pressure in the past, so this chapter will serve as a review.

## 12.2 Lateral Earth Pressure at Rest

Consider a vertical wall of height  $H$ , as shown in Figure 12.3, retaining a soil having a unit weight of  $\gamma$ . A uniformly distributed load,  $q$ /unit area, is also applied at the ground surface. The shear strength of the soil is

$$s = c' + \sigma' \tan \phi'$$

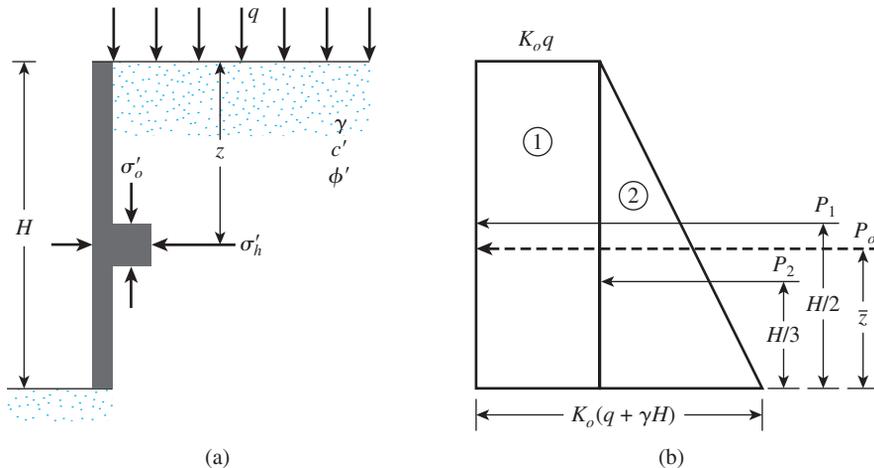

**Figure 12.3** At-rest earth pressure

where

$c'$  = cohesion  
 $\phi'$  = effective angle of friction  
 $\sigma'$  = effective normal stress

At any depth  $z$  below the ground surface, the vertical subsurface stress is

$$\sigma'_o = q + \gamma z \quad (12.1)$$

If the wall is at rest and is not allowed to move at all, either away from the soil mass or into the soil mass (i.e., there is zero horizontal strain), the lateral pressure at a depth  $z$  is

$$\sigma_h = K_o \sigma'_o + u \quad (12.2)$$

where

$u$  = pore water pressure  
 $K_o$  = coefficient of at-rest earth pressure

For normally consolidated soil, the relation for  $K_o$  (Jaky, 1944) is

$$K_o \approx 1 - \sin \phi' \quad (12.3)$$

Equation (12.3) is an empirical approximation.

For overconsolidated soil, the at-rest earth pressure coefficient may be expressed as (Mayne and Kulhawy, 1982)

$$K_o = (1 - \sin \phi') \text{OCR}^{\sin \phi'} \quad (12.4)$$

where OCR = overconsolidation ratio.

With a properly selected value of the at-rest earth pressure coefficient, Eq. (12.2) can be used to determine the variation of lateral earth pressure with depth  $z$ . Figure 12.3b shows the variation of  $\sigma'_h$  with depth for the wall depicted in Figure 12.3a. Note that if the surcharge  $q = 0$  and the pore water pressure  $u = 0$ , the pressure diagram will be a triangle. The total force,  $P_o$ , per unit length of the wall given in Figure 12.3a can now be obtained from the area of the pressure diagram given in Figure 12.3b and is


$$P_o = P_1 + P_2 = qK_oH + \frac{1}{2}\gamma H^2K_o \quad (12.5)$$

where

$P_1$  = area of rectangle 1  
 $P_2$  = area of triangle 2

The location of the line of action of the resultant force,  $P_o$ , can be obtained by taking the moment about the bottom of the wall. Thus,

$$\bar{z} = \frac{P_1 \left( \frac{H}{2} \right) + P_2 \left( \frac{H}{3} \right)}{P_o} \quad (12.6)$$

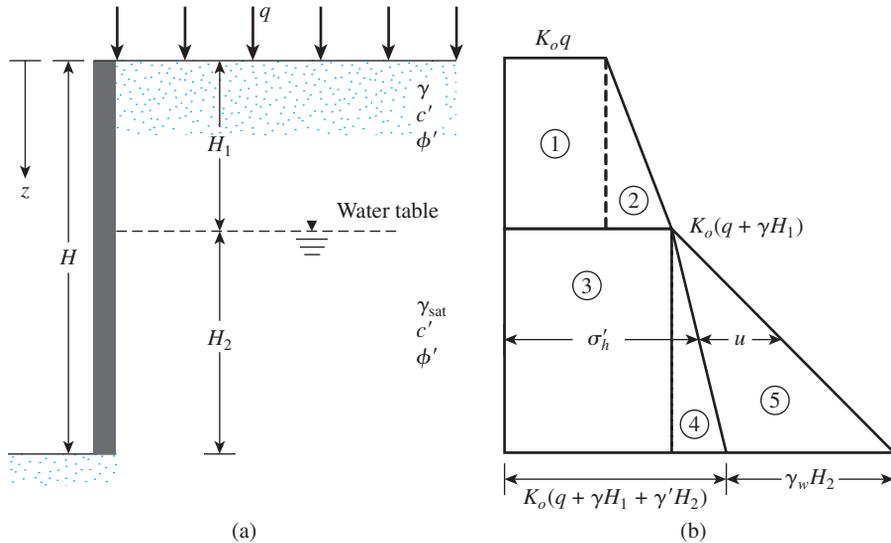

**Figure 12.4** At-rest earth pressure with water table located at a depth  $z < H$

If the water table is located at a depth  $z < H$ , the at-rest pressure diagram shown in Figure 12.3b will have to be somewhat modified, as shown in Figure 12.4. If the effective unit weight of soil below the water table equals  $\gamma'$  (i.e.,  $\gamma_{\text{sat}} - \gamma_w$ ), then

$$\text{at } z = 0, \quad \sigma'_h = K_o \sigma'_o = K_o q$$

$$\text{at } z = H_1, \quad \sigma'_h = K_o \sigma'_o = K_o(q + \gamma H_1)$$

and

$$\text{at } z = H_2, \quad \sigma'_h = K_o \sigma'_o = K_o(q + \gamma H_1 + \gamma' H_2)$$

Note that in the preceding equations,  $\sigma'_o$  and  $\sigma'_h$  are effective vertical and horizontal pressures, respectively. Determining the total pressure distribution on the wall requires adding the hydrostatic pressure  $u$ , which is zero from  $z = 0$  to  $z = H_1$  and is  $H_2 \gamma_w$  at  $z = H_2$ . The variation of  $\sigma'_h$  and  $u$  with depth is shown in Figure 12.4b. Hence, the total force per unit length of the wall can be determined from the area of the pressure diagram. Specifically,

$$P_o = A_1 + A_2 + A_3 + A_4 + A_5$$

where  $A$  = area of the pressure diagram.

So,

$$P_o = K_o q H_1 + \frac{1}{2} K_o \gamma H_1^2 + K_o(q + \gamma H_1) H_2 + \frac{1}{2} K_o \gamma' H_2^2 + \frac{1}{2} \gamma_w H_2^2 \quad (12.7)$$

### Example 12.1

For the retaining wall shown in Figure 12.5a, determine the lateral earth force at rest per unit length of the wall. Also determine the location of the resultant force. Assume  $\text{OCR} = 1$ .

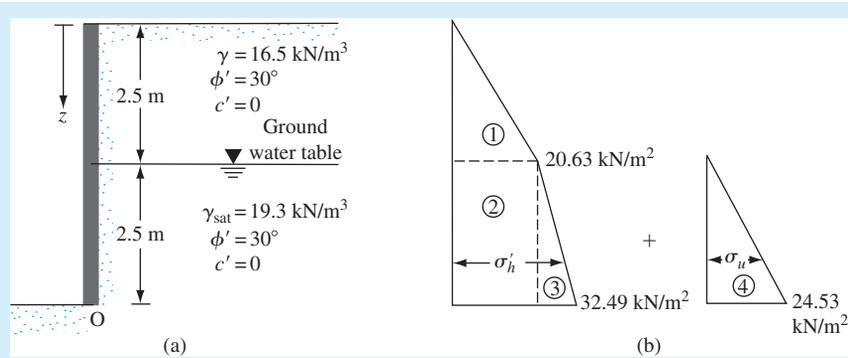


Figure 12.5

## Solution

$$K_o = 1 - \sin \phi' = 1 - \sin 30^\circ = 0.5$$

$$\text{At } z = 0, \sigma'_o = 0; \sigma'_h = 0$$

$$\text{At } z = 2.5 \text{ m}, \sigma'_o = (16.5)(2.5) = 41.25 \text{ kN/m}^2;$$

$$\sigma'_h = K_o \sigma'_o = (0.5)(41.25) = 20.63 \text{ kN/m}^2$$

$$\text{At } z = 5 \text{ m}, \sigma'_o = (16.5)(2.5) + (19.3 - 9.81)2.5 = 64.98 \text{ kN/m}^2;$$

$$\sigma'_h = K_o \sigma'_o = (0.5)(64.98) = 32.49 \text{ kN/m}^2$$

The hydrostatic pressure distribution is as follows:

$$\text{From } z = 0 \text{ to } z = 2.5 \text{ m}, u = 0. \text{ At } z = 5 \text{ m}, u = \gamma_{w0}(2.5) = (9.81)(2.5) = 24.53 \text{ kN/m}^2.$$

The pressure distribution for the wall is shown in Figure 12.5b.

The total force per unit length of the wall can be determined from the area of the pressure diagram, or

$$\begin{aligned} P_o &= \text{Area 1} + \text{Area 2} + \text{Area 3} + \text{Area 4} \\ &= \frac{1}{2}(2.5)(20.63) + (2.5)(20.63) + \frac{1}{2}(2.5)(32.49 - 20.63) \\ &\quad + \frac{1}{2}(2.5)(24.53) = \mathbf{122.85 \text{ kN/m}} \end{aligned}$$

The location of the center of pressure measured from the bottom of the wall (point O) =

$$\begin{aligned} \bar{z} &= \frac{(\text{Area 1})\left(2.5 + \frac{2.5}{3}\right) + (\text{Area 2})\left(\frac{2.5}{2}\right) + (\text{Area 3} + \text{Area 4})\left(\frac{2.5}{3}\right)}{P_o} \\ &= \frac{(25.788)(3.33) + (51.575)(1.25) + (14.825 + 30.663)(0.833)}{122.85} \\ &= \frac{85.87 + 64.47 + 37.89}{122.85} = \mathbf{1.53 \text{ m}} \end{aligned}$$

## Active Pressure

### 12.3 Rankine Active Earth Pressure

The lateral earth pressure described in Section 12.2 involves walls that do not yield at all. However, if a wall tends to move away from the soil a distance  $\Delta x$ , as shown in Figure 12.6a, the soil pressure on the wall at any depth will decrease. For a wall that is *frictionless*, the horizontal stress,  $\sigma'_h$ , at depth  $z$  will equal  $K_o\sigma'_o$  ( $=K_o\gamma z$ ) when  $\Delta x$  is zero. However, with  $\Delta x > 0$ ,  $\sigma'_h$  will be less than  $K_o\sigma'_o$ .

The Mohr's circles corresponding to wall displacements of  $\Delta x = 0$  and  $\Delta x > 0$  are shown as circles *a* and *b*, respectively, in Figure 12.6b. If the displacement of the wall,  $\Delta x$ , continues to increase, the corresponding Mohr's circle eventually will just touch the Mohr–Coulomb failure envelope defined by the equation

$$s = c' + \sigma' \tan \phi'$$

This circle, marked *c* in the figure, represents the failure condition in the soil mass; the horizontal stress then equals  $\sigma'_a$ , referred to as the *Rankine active pressure*. The *slip lines* (failure planes) in the soil mass will then make angles of  $\pm(45 + \phi'/2)$  with the horizontal, as shown in Figure 12.6a.

Equation (2.91) relates the principal stresses for a Mohr's circle that touches the Mohr–Coulomb failure envelope:

$$\sigma'_1 = \sigma'_3 \tan^2\left(45 + \frac{\phi'}{2}\right) + 2c' \tan\left(45 + \frac{\phi'}{2}\right)$$

For the Mohr's circle *c* in Figure 12.6b,

Major principal stress,  $\sigma'_1 = \sigma'_o$

and

Minor principal stress,  $\sigma'_3 = \sigma'_a$

Thus,

$$\begin{aligned} \sigma'_o &= \sigma'_a \tan^2\left(45 + \frac{\phi'}{2}\right) + 2c' \tan\left(45 + \frac{\phi'}{2}\right) \\ \sigma'_a &= \frac{\sigma'_o}{\tan^2\left(45 + \frac{\phi'}{2}\right)} - \frac{2c'}{\tan\left(45 + \frac{\phi'}{2}\right)} \end{aligned}$$

or

$$\begin{aligned} \sigma'_a &= \sigma'_o \tan^2\left(45 - \frac{\phi'}{2}\right) - 2c' \tan\left(45 - \frac{\phi'}{2}\right) \\ &= \sigma'_o K_a - 2c' \sqrt{K_a} \end{aligned} \quad (12.8)$$

where  $K_a = \tan^2(45 - \phi'/2) =$  Rankine active-pressure coefficient.

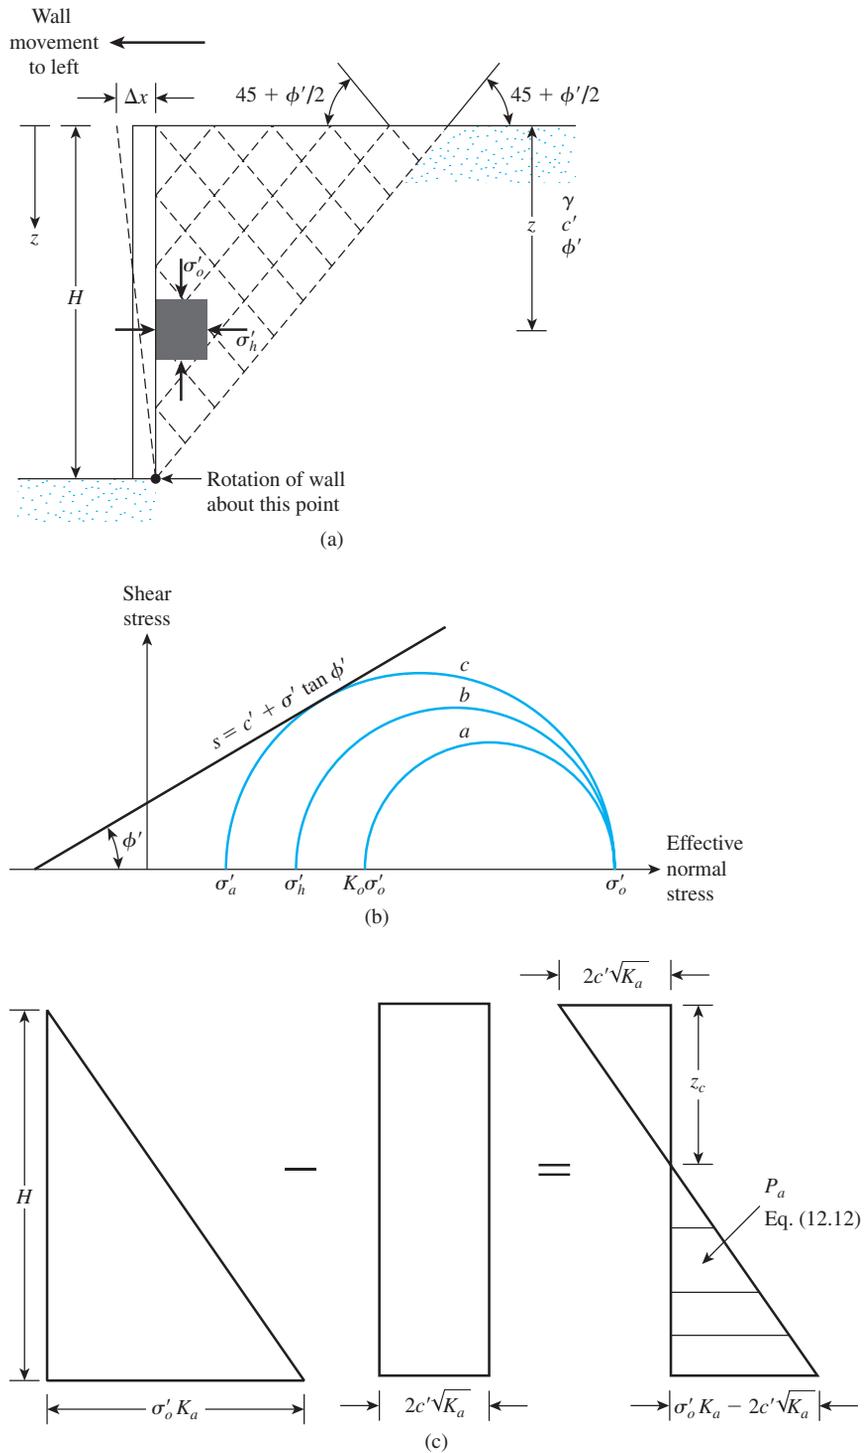


Figure 12.6 Rankine active pressure

The variation of the active pressure with depth for the wall shown in Figure 12.6a is given in Figure 12.6c. Note that  $\sigma'_o = 0$  at  $z = 0$  and  $\sigma'_o = \gamma H$  at  $z = H$ . The pressure distribution shows that at  $z = 0$  the active pressure equals  $-2c'\sqrt{K_a}$ , indicating a tensile stress that decreases with depth and becomes zero at a depth  $z = z_c$ , or

$$\gamma z_c K_a - 2c'\sqrt{K_a} = 0$$

and

$$z_c = \frac{2c'}{\gamma\sqrt{K_a}} \quad (12.9)$$

The depth  $z_c$  is usually referred to as the *depth of tensile crack*, because the tensile stress in the soil will eventually cause a crack along the soil–wall interface. Thus, the total Rankine active force per unit length of the wall before the tensile crack occurs is

$$\begin{aligned} P_a &= \int_0^H \sigma'_a dz = \int_0^H \gamma z K_a dz - \int_0^H 2c'\sqrt{K_a} dz \\ &= \frac{1}{2}\gamma H^2 K_a - 2c'H\sqrt{K_a} \end{aligned} \quad (12.10)$$

After the tensile crack appears, the force per unit length on the wall will be caused only by the pressure distribution between depths  $z = z_c$  and  $z = H$ , as shown by the hatched area in Figure 12.6c. This force may be expressed as

$$P_a = \frac{1}{2}(H - z_c)(\gamma H K_a - 2c'\sqrt{K_a}) \quad (12.11)$$

or

$$P_a = \frac{1}{2}\left(H - \frac{2c'}{\gamma\sqrt{K_a}}\right)\left(\gamma H K_a - 2c'\sqrt{K_a}\right) \quad (12.12)$$

However, it is important to realize that the active earth pressure condition will be reached only if the wall is allowed to “yield” sufficiently. The necessary amount of outward displacement of the wall is about  $0.001H$  to  $0.004H$  for granular soil backfills and about  $0.01H$  to  $0.04H$  for cohesive soil backfills.

Note further that if the *total stress* shear strength parameters ( $c$ ,  $\phi$ ) were used, an equation similar to Eq. (12.8) could have been derived, namely,

$$\sigma_a = \sigma_o \tan^2\left(45 - \frac{\phi}{2}\right) - 2c \tan\left(45 - \frac{\phi}{2}\right)$$

### Example 12.2

A 6-m-high retaining wall is to support a soil with unit weight  $\gamma = 17.4 \text{ kN/m}^3$ , soil friction angle  $\phi' = 26^\circ$ , and cohesion  $c' = 14.36 \text{ kN/m}^2$ . Determine the Rankine active force per unit length of the wall both before and after the tensile crack occurs, and determine the line of action of the resultant in both cases.

**Solution**

For  $\phi' = 26^\circ$ ,

$$K_a = \tan^2\left(45 - \frac{\phi'}{2}\right) = \tan^2(45 - 13) = 0.39$$

$$\sqrt{K_a} = 0.625$$

$$\sigma'_a = \gamma H K_a - 2c'\sqrt{K_a}$$

From Figure 12.6c, at  $z = 0$ ,

$$\sigma'_a = -2c'\sqrt{K_a} = -2(14.36)(0.625) = -17.95 \text{ kN/m}^2$$

and at  $z = 6 \text{ m}$ ,

$$\begin{aligned}\sigma'_a &= (17.4)(6)(0.39) - 2(14.36)(0.625) \\ &= 40.72 - 17.95 = 22.77 \text{ kN/m}^2\end{aligned}$$

Active Force before the Tensile Crack Appeared: Eq. (12.10)

$$\begin{aligned}P_a &= \frac{1}{2}\gamma H^2 K_a - 2c'H\sqrt{K_a} \\ &= \frac{1}{2}(6)(40.72) - (6)(17.95) = 122.16 - 107.7 = \mathbf{14.46 \text{ kN/m}}\end{aligned}$$

The line of action of the resultant can be determined by taking the moment of the area of the pressure diagrams about the bottom of the wall, or

$$P_a \bar{z} = (122.16)\left(\frac{6}{3}\right) - (107.7)\left(\frac{6}{2}\right)$$

Thus,

$$\bar{z} = \frac{244.32 - 323.1}{14.46} = -\mathbf{5.45 \text{ m.}}$$

Active Force after the Tensile Crack Appeared: Eq. (12.9)

$$z_c = \frac{2c'}{\gamma\sqrt{K_a}} = \frac{2(14.36)}{(17.4)(0.625)} = 2.64 \text{ m}$$

Using Eq. (12.11) gives

$$P_a = \frac{1}{2}(H - z_c)(\gamma H K_a - 2c'\sqrt{K_a}) = \frac{1}{2}(6 - 2.64)(22.77) = \mathbf{38.25 \text{ kN/m}}$$

Figure 12.6c indicates that the force  $P_a = 38.25 \text{ kN/m}$  is the area of the hatched triangle. Hence, the line of action of the resultant will be located at a height  $\bar{z} = (H - z_c)/3$  above the bottom of the wall, or

$$\bar{z} = \frac{6 - 2.64}{3} = \mathbf{1.12 \text{ m}}$$

### Example 12.3

Assume that the retaining wall shown in Figure 12.7a can yield sufficiently to develop an active state. Determine the Rankine active force per unit length of the wall and the location of the resultant line of action.

#### Solution

If the cohesion,  $c'$ , is zero, then

$$\sigma'_a = \sigma'_o K_a$$

For the top layer of soil,  $\phi'_1 = 30^\circ$ , so

$$K_{a(1)} = \tan^2\left(45 - \frac{\phi'_1}{2}\right) = \tan^2(45 - 15) = \frac{1}{3}$$

Similarly, for the bottom layer of soil,  $\phi'_2 = 36^\circ$ , and it follows that

$$K_{a(2)} = \tan^2\left(45 - \frac{36}{2}\right) = 0.26$$

The following table shows the calculation of  $\sigma'_a$  and  $u$  at various depths below the ground surface.

Depth, $z$ (ft)	$\sigma'_o$ (lb/ft <sup>2</sup> )	$K_a$	$\sigma'_a = K_a \sigma'_o$ (lb/ft <sup>2</sup> )	$u$ (lb/ft <sup>2</sup> )
0	0	1/3	0	0
10 <sup>-</sup>	(102)(10) = 1020	1/3	340	0
10 <sup>+</sup>	1020	0.26	265.2	0
20	(102)(10) + (121 - 62.4)(10) = 1606	0.26	417.6	(62.4)(10) = 624

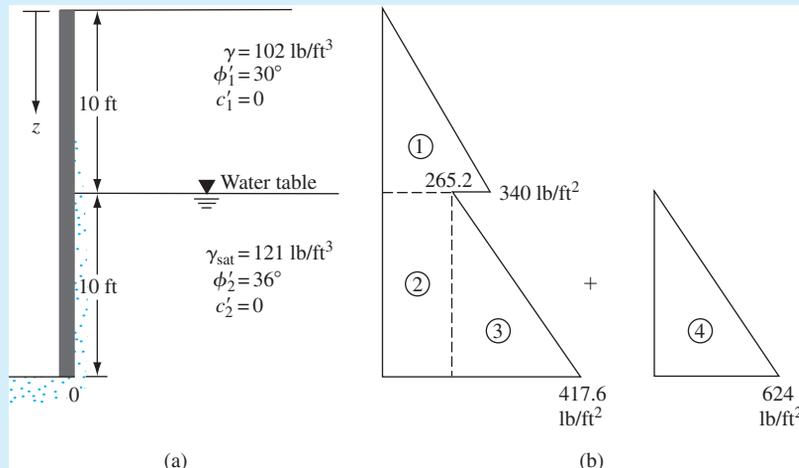


Figure 12.7 Rankine active force behind a retaining wall

The pressure distribution diagram is plotted in Figure 12.7b. The force per unit length is

$$\begin{aligned} P_a &= \text{area 1} + \text{area 2} + \text{area 3} + \text{area 4} \\ &= \frac{1}{2}(10)(340) + (265.2)(10) + \frac{1}{2}(417.6 - 265.2)(10) + \frac{1}{2}(624)(10) \\ &= 1700 + 2652 + 762 + 3120 = \mathbf{8234 \text{ lb/ft}} \end{aligned}$$


The distance of the line of action of the resultant force from the bottom of the wall can be determined by taking the moments about the bottom of the wall (point O in Figure 12.7a) and is

$$\bar{z} = \frac{(1700)\left(10 + \frac{10}{2}\right) + (2652)\left(\frac{10}{2}\right) + (762 + 3120)\left(\frac{10}{3}\right)}{8234} = \mathbf{5.93 \text{ ft}}$$

## 12.4 A Generalized Case for Rankine Active Pressure—Granular Backfill

In Section 12.3, the relationship was developed for Rankine active pressure for a retaining wall with a vertical back and a horizontal backfill. That can be extended to general cases of frictionless walls with inclined backs and inclined backfills.

Figure 12.8 shows a retaining wall whose back is inclined at an angle  $\theta$  with the vertical. The granular backfill is inclined at an angle  $\alpha$  with the horizontal.

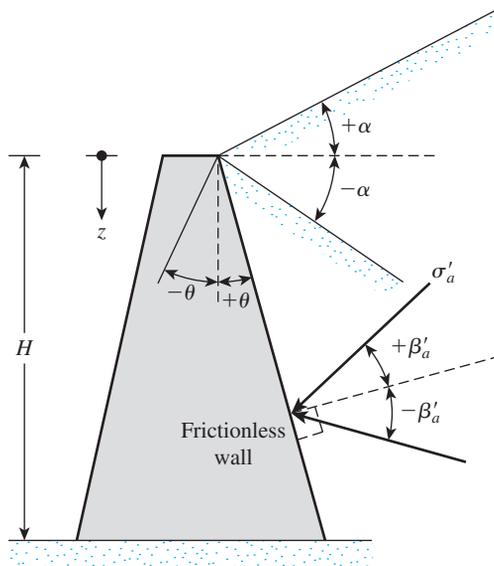

**Figure 12.8** General case for a retaining wall with granular backfill

For a Rankine active case, the lateral earth pressure ( $\sigma'_a$ ) at a depth  $z$  can be given as (Chu, 1991),

$$\sigma'_a = \frac{\gamma z \cos \alpha \sqrt{1 + \sin^2 \phi' - 2 \sin \phi' \cos \psi_a}}{\cos \alpha + \sqrt{\sin^2 \phi' - \sin^2 \alpha}} \quad (12.13)$$

where  $\psi_a = \sin^{-1} \left( \frac{\sin \alpha}{\sin \phi'} \right) - \alpha + 2\theta$ . (12.14)

The pressure  $\sigma'_a$  will be inclined at an angle  $\beta'_a$  with the plane drawn at right angle to the backface of the wall, and

$$\beta'_a = \tan^{-1} \left( \frac{\sin \phi' \sin \psi_a}{1 - \sin \phi' \cos \psi_a} \right) \quad (12.15)$$

The active force  $P_a$  for unit length of the wall then can be calculated as

$$P_a = \frac{1}{2} \gamma H^2 K_a \quad (12.16)$$

where

$$\begin{aligned} K_{a(R)} &= \frac{\cos(\alpha - \theta) \sqrt{1 + \sin^2 \phi' - 2 \sin \phi' \cos \psi_a}}{\cos^2 \theta (\cos \alpha + \sqrt{\sin^2 \phi' - \sin^2 \alpha})} \\ &= \text{Rankine active earth-pressure coefficient for generalized case} \end{aligned} \quad (12.17)$$


The location and direction of the resultant force  $P_a$  is shown in Figure 12.9. Also shown in this figure is the failure wedge,  $ABC$ . Note that  $BC$  will be inclined at an angle  $\eta$ . Or

$$\eta_a = \frac{\pi}{4} + \frac{\phi'}{2} + \frac{\alpha}{2} - \frac{1}{2} \sin^{-1} \left( \frac{\sin \alpha}{\sin \phi'} \right) \quad (12.18)$$

Tables 12.1 and 12.2 give the variations of  $K_a$  [Eq. (12.17)] and  $\beta'_a$  [Eq. (12.15)] for various values of  $\alpha$ ,  $\theta$ , and  $\phi'$ .

### Granular Backfill with Vertical Back Face of Wall

As a special case, for a vertical back face of a wall (that is,  $\theta = 0$ ), as shown in Figure 12.10, Eqs. (12.13), (12.16) and (12.17) simplify to the following.

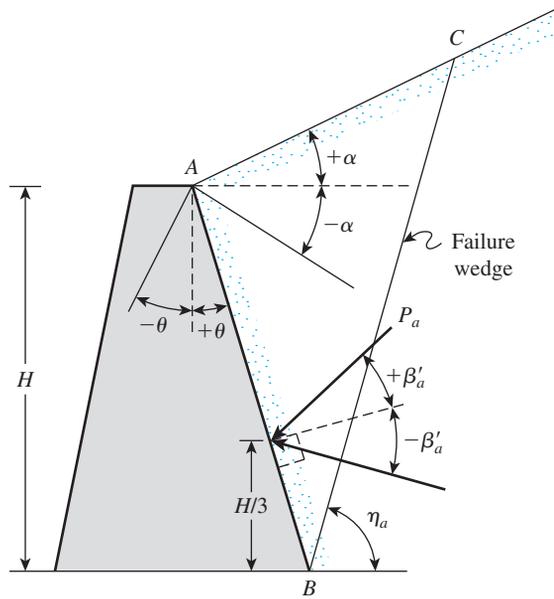

$$\eta_a = \frac{\pi}{4} + \frac{\phi'}{2} + \frac{\alpha}{2} - \frac{1}{2} \sin^{-1} \left( \frac{\sin \alpha}{\sin \phi'} \right)$$

**Figure 12.9** Location and direction of Rankine active force

If the backfill of a frictionless retaining wall is a *granular soil* ( $c' = 0$ ) and rises at an angle  $\alpha$  with respect to the horizontal (see Figure 12.10), the *active earth-pressure coefficient* may be expressed in the form

$$K_a = \cos \alpha \frac{\cos \alpha - \sqrt{\cos^2 \alpha - \cos^2 \phi'}}{\cos \alpha + \sqrt{\cos^2 \alpha - \cos^2 \phi'}} \quad (12.19)$$

where  $\phi' =$  angle of friction of soil.

At any depth  $z$ , the *Rankine active pressure* may be expressed as

$$\sigma'_a = \gamma z K_a \quad (12.20)$$

Also, the total force per unit length of the wall is


$$P_a = \frac{1}{2} \gamma H^2 K_a \quad (12.21)$$

Table 12.1 Variation of  $K_{a(R)}$  [Eq. (12.17)]

$\alpha$ (deg)	$\theta$ (deg)	$K_{a(R)}$						
		$\phi'$ (deg)						
		28	30	32	34	36	38	40
0	0	0.361	0.333	0.307	0.283	0.260	0.238	0.217
	2	0.363	0.335	0.309	0.285	0.262	0.240	0.220
	4	0.368	0.341	0.315	0.291	0.269	0.248	0.228
	6	0.376	0.350	0.325	0.302	0.280	0.260	0.242
	8	0.387	0.362	0.338	0.316	0.295	0.276	0.259
	10	0.402	0.377	0.354	0.333	0.314	0.296	0.280
	15	0.450	0.428	0.408	0.390	0.373	0.358	0.345
5	0	0.366	0.337	0.311	0.286	0.262	0.240	0.219
	2	0.373	0.344	0.317	0.292	0.269	0.247	0.226
	4	0.383	0.354	0.328	0.303	0.280	0.259	0.239
	6	0.396	0.368	0.342	0.318	0.296	0.275	0.255
	8	0.412	0.385	0.360	0.336	0.315	0.295	0.276
	10	0.431	0.405	0.380	0.358	0.337	0.318	0.300
	15	0.490	0.466	0.443	0.423	0.405	0.388	0.373
10	0	0.380	0.350	0.321	0.294	0.270	0.246	0.225
	2	0.393	0.362	0.333	0.306	0.281	0.258	0.236
	4	0.408	0.377	0.348	0.322	0.297	0.274	0.252
	6	0.426	0.395	0.367	0.341	0.316	0.294	0.273
	8	0.447	0.417	0.389	0.363	0.339	0.317	0.297
	10	0.471	0.441	0.414	0.388	0.365	0.344	0.324
	15	0.542	0.513	0.487	0.463	0.442	0.422	0.404
15	0	0.409	0.373	0.341	0.311	0.283	0.258	0.235
	2	0.427	0.391	0.358	0.328	0.300	0.274	0.250
	4	0.448	0.411	0.378	0.348	0.320	0.294	0.271
	6	0.472	0.435	0.402	0.371	0.344	0.318	0.295
	8	0.498	0.461	0.428	0.398	0.371	0.346	0.323
	10	0.527	0.490	0.457	0.428	0.400	0.376	0.353
	15	0.610	0.574	0.542	0.513	0.487	0.463	0.442
20	0	0.461	0.414	0.374	0.338	0.306	0.277	0.250
	2	0.486	0.438	0.397	0.360	0.328	0.298	0.271
	4	0.513	0.465	0.423	0.386	0.353	0.323	0.296
	6	0.543	0.495	0.452	0.415	0.381	0.351	0.324
	8	0.576	0.527	0.484	0.446	0.413	0.383	0.355
	10	0.612	0.562	0.518	0.481	0.447	0.417	0.390
	15	0.711	0.660	0.616	0.578	0.545	0.515	0.488

**Table 12.2** Variation of  $\beta'_a$  [Eq. (12.15)]

$\alpha$ (deg)	$\theta$ (deg)	$\beta'_a$						
		$\phi'$ (deg)						
		28	30	32	34	36	38	40
0	0	0.000	0.000	0.000	0.000	0.000	0.000	0.000
	2	3.525	3.981	4.484	5.041	5.661	6.351	7.124
	4	6.962	7.848	8.821	9.893	11.075	12.381	13.827
	6	10.231	11.501	12.884	14.394	16.040	17.837	19.797
	8	13.270	14.861	16.579	18.432	20.428	22.575	24.876
	10	16.031	17.878	19.850	21.951	24.184	26.547	29.039
	15	21.582	23.794	26.091	28.464	30.905	33.402	35.940
5	0	5.000	5.000	5.000	5.000	5.000	5.000	5.000
	2	8.375	8.820	9.311	9.854	10.455	11.123	11.870
	4	11.553	12.404	13.336	14.358	15.482	16.719	18.085
	6	14.478	15.679	16.983	18.401	19.942	21.618	23.441
	8	17.112	18.601	20.203	21.924	23.773	25.755	27.876
	10	19.435	21.150	22.975	24.915	26.971	29.144	31.434
	15	23.881	25.922	28.039	30.227	32.479	34.787	37.140
10	0	10.000	10.000	10.000	10.000	10.000	10.000	10.000
	2	13.057	13.491	13.967	14.491	15.070	15.712	16.426
	4	15.839	16.657	17.547	18.519	19.583	20.751	22.034
	6	18.319	19.460	20.693	22.026	23.469	25.032	26.726
	8	20.483	21.888	23.391	24.999	26.720	28.559	30.522
	10	22.335	23.946	25.653	27.460	29.370	31.385	33.504
	15	25.683	27.603	29.589	31.639	33.747	35.908	38.114
15	0	15.000	15.000	15.000	15.000	15.000	15.000	15.000
	2	17.576	18.001	18.463	18.967	19.522	20.134	20.812
	4	19.840	20.631	21.485	22.410	23.417	24.516	25.719
	6	21.788	22.886	24.060	25.321	26.677	28.139	29.716
	8	23.431	24.778	26.206	27.722	29.335	31.052	32.878
	10	24.783	26.328	27.950	29.654	31.447	33.332	35.310
	15	27.032	28.888	30.793	32.747	34.751	36.802	38.894
20	0	20.000	20.000	20.000	20.000	20.000	20.000	20.000
	2	21.925	22.350	22.803	23.291	23.822	24.404	25.045
	4	23.545	24.332	25.164	26.054	27.011	28.048	29.175
	6	24.876	25.966	27.109	28.317	29.604	30.980	32.455
	8	25.938	27.279	28.669	30.124	31.657	33.276	34.989
	10	26.755	28.297	29.882	31.524	33.235	35.021	36.886
	15	27.866	29.747	31.638	33.552	35.498	37.478	39.491

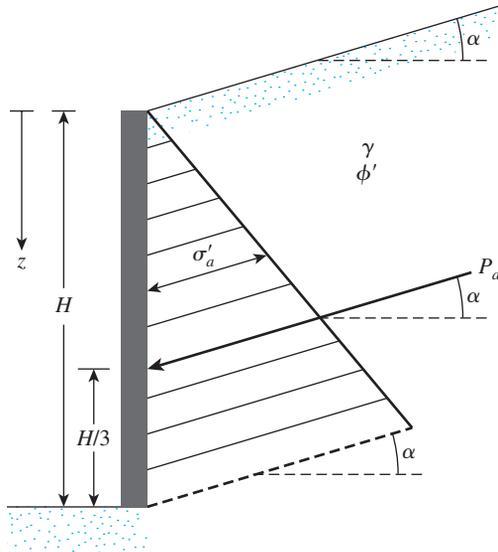

**Figure 12.10** Notations for active pressure—Eqs. (12.19), (12.20), (12.21)

Note that, in this case, the direction of the resultant force  $P_a$  is *inclined at an angle  $\alpha$  with the horizontal* and intersects the wall at a distance  $H/3$  from the base of the wall. Table 12.3 presents the values of  $K_a$  (active earth pressure) for various values of  $\alpha$  and  $\phi'$ .

## 12.5 Rankine Active Pressure with Vertical Wall Backface and Inclined $c' - \phi'$ Soil Backfill

For a frictionless retaining wall with a vertical back face ( $\theta = 0$ ) and inclined backfill of  $c' - \phi'$  soil (see Figure 12.10), the active pressure at any depth  $z$  can be given as (Mazindrani and Ganjali, 1997)

$$\sigma'_a = \gamma z K_a = \gamma z K'_a \cos \alpha \quad (12.22)$$

where

$$K'_a = \frac{1}{\cos^2 \phi'} \left\{ \begin{array}{l} 2 \cos^2 \alpha + 2 \left( \frac{c'}{\gamma z} \right) \cos \phi' \sin \phi' \\ - \sqrt{4 \cos^2 \alpha (\cos^2 \alpha - \cos^2 \phi') + 4 \left( \frac{c'}{\gamma z} \right)^2 \cos^2 \phi' + 8 \left( \frac{c'}{\gamma z} \right) \cos^2 \alpha \sin \phi' \cos \phi'} \end{array} \right\} - 1 \quad (12.23)$$

**Table 12.3** Values of  $K_a$  [Eq. (12.19)]

$\alpha$ (deg)	$\phi'$ (deg) $\rightarrow$																			
	28	29	30	31	32	33	34	35	36	37	38	39	40							
0	0.3610	0.3470	0.3333	0.3201	0.3073	0.2948	0.2827	0.2710	0.2596	0.2486	0.2379	0.2275	0.2174							
1	0.3612	0.3471	0.3335	0.3202	0.3074	0.2949	0.2828	0.2711	0.2597	0.2487	0.2380	0.2276	0.2175							
2	0.3618	0.3476	0.3339	0.3207	0.3078	0.2953	0.2832	0.2714	0.2600	0.2489	0.2382	0.2278	0.2177							
3	0.3627	0.3485	0.3347	0.3214	0.3084	0.2959	0.2837	0.2719	0.2605	0.2494	0.2386	0.2282	0.2181							
4	0.3639	0.3496	0.3358	0.3224	0.3094	0.2967	0.2845	0.2726	0.2611	0.2500	0.2392	0.2287	0.2186							
5	0.3656	0.3512	0.3372	0.3237	0.3105	0.2978	0.2855	0.2736	0.2620	0.2508	0.2399	0.2294	0.2192							
6	0.3676	0.3531	0.3389	0.3253	0.3120	0.2992	0.2868	0.2747	0.2631	0.2518	0.2409	0.2303	0.2200							
7	0.3701	0.3553	0.3410	0.3272	0.3138	0.3008	0.2883	0.2761	0.2644	0.2530	0.2420	0.2313	0.2209							
8	0.3730	0.3580	0.3435	0.3294	0.3159	0.3027	0.2900	0.2778	0.2659	0.2544	0.2432	0.2325	0.2220							
9	0.3764	0.3611	0.3463	0.3320	0.3182	0.3049	0.2921	0.2796	0.2676	0.2560	0.2447	0.2338	0.2233							
10	0.3802	0.3646	0.3495	0.3350	0.3210	0.3074	0.2944	0.2818	0.2696	0.2578	0.2464	0.2354	0.2247							
11	0.3846	0.3686	0.3532	0.3383	0.3241	0.3103	0.2970	0.2841	0.2718	0.2598	0.2482	0.2371	0.2263							
12	0.3896	0.3731	0.3573	0.3421	0.3275	0.3134	0.2999	0.2868	0.2742	0.2621	0.2503	0.2390	0.2281							
13	0.3952	0.3782	0.3620	0.3464	0.3314	0.3170	0.3031	0.2898	0.2770	0.2646	0.2527	0.2412	0.2301							
14	0.4015	0.3839	0.3671	0.3511	0.3357	0.3209	0.3068	0.2931	0.2800	0.2674	0.2552	0.2435	0.2322							
15	0.4086	0.3903	0.3729	0.3564	0.3405	0.3253	0.3108	0.2968	0.2834	0.2705	0.2581	0.2461	0.2346							
16	0.4165	0.3975	0.3794	0.3622	0.3458	0.3302	0.3152	0.3008	0.2871	0.2739	0.2612	0.2490	0.2373							
17	0.4255	0.4056	0.3867	0.3688	0.3518	0.3356	0.3201	0.3053	0.2911	0.2776	0.2646	0.2521	0.2401							
18	0.4357	0.4146	0.3948	0.3761	0.3584	0.3415	0.3255	0.3102	0.2956	0.2817	0.2683	0.2555	0.2433							
19	0.4473	0.4249	0.4039	0.3842	0.3657	0.3481	0.3315	0.3156	0.3006	0.2862	0.2724	0.2593	0.2467							
20	0.4605	0.4365	0.4142	0.3934	0.3739	0.3555	0.3381	0.3216	0.3060	0.2911	0.2769	0.2634	0.2504							
21	0.4758	0.4498	0.4259	0.4037	0.3830	0.3637	0.3455	0.3283	0.3120	0.2965	0.2818	0.2678	0.2545							
22	0.4936	0.4651	0.4392	0.4154	0.3934	0.3729	0.3537	0.3356	0.3186	0.3025	0.2872	0.2727	0.2590							
23	0.5147	0.4829	0.4545	0.4287	0.4050	0.3832	0.3628	0.3438	0.3259	0.3091	0.2932	0.2781	0.2638							
24	0.5404	0.5041	0.4724	0.4440	0.4183	0.3948	0.3731	0.3529	0.3341	0.3164	0.2997	0.2840	0.2692							
25	0.5727	0.5299	0.4936	0.4619	0.4336	0.4081	0.3847	0.3631	0.3431	0.3245	0.3070	0.2905	0.2750							

**Table 12.4** Values of  $K'_a$ 

$\phi'$ (deg)	$\alpha$ (deg)	$\frac{c'}{\gamma z}$			
		0.025	0.05	0.1	0.5
15	0	0.550	0.512	0.435	-0.179
	5	0.566	0.525	0.445	-0.184
	10	0.621	0.571	0.477	-0.186
20	15	0.776	0.683	0.546	-0.196
	0	0.455	0.420	0.350	-0.210
	5	0.465	0.429	0.357	-0.212
25	10	0.497	0.456	0.377	-0.218
	15	0.567	0.514	0.417	-0.229
	0	0.374	0.342	0.278	-0.231
30	5	0.381	0.348	0.283	-0.233
	10	0.402	0.366	0.296	-0.239
	15	0.443	0.401	0.321	-0.250
30	0	0.305	0.276	0.218	-0.244
	5	0.309	0.280	0.221	-0.246
	10	0.323	0.292	0.230	-0.252
	15	0.350	0.315	0.246	-0.263

Some values of  $K'_a$  are given in Table 12.4. For a problem of this type, the depth of tensile crack is given as

$$z_c = \frac{2c'}{\gamma} \sqrt{\frac{1 + \sin \phi'}{1 - \sin \phi'}} \quad (12.24)$$

For this case, the active pressure is inclined at an angle  $\alpha$  with the horizontal.

### Example 12.4

Refer to the retaining wall in Figure 12.9. The backfill is granular soil. Given:

$$\begin{aligned} \text{Wall:} \quad & H = 10 \text{ ft} \\ & \theta = +10^\circ \\ \text{Backfill:} \quad & \alpha = 15^\circ \\ & \phi' = 35^\circ \\ & c' = 0 \\ & \gamma = 110 \text{ lb/ft}^3 \end{aligned}$$

Determine the Rankine active force,  $P_a$ , and its location and direction.

#### Solution

From Table 12.1, for  $\alpha = 15^\circ$  and  $\theta = +10^\circ$ , the value of  $K_a \approx 0.42$ . From Eq. (12.16),

$$P_a = \frac{1}{2} \gamma H^2 K_a = \left(\frac{1}{2}\right)(110)(10)^2(0.42) = \mathbf{2310 \text{ lb/ft}}$$

Again, from Table 12.2, for  $\alpha = 15^\circ$  and  $\theta = +10^\circ$ ,  $\beta'_a \approx \mathbf{30.5^\circ}$ .

The force  $P_a$  will act at a distance of  $10/3 = 3.33$  ft above the bottom of the wall and will be inclined at an angle of  $+30.5^\circ$  to the normal drawn to the back face of the wall. ■

### Example 12.5

For the retaining wall shown in Figure 12.10,  $H = 7.5$  m,  $\gamma = 18$  kN/m<sup>3</sup>,  $\phi' = 20^\circ$ ,  $c' = 13.5$  kN/m<sup>2</sup>, and  $\alpha = 10^\circ$ . Calculate the Rankine active force,  $P_a$ , per unit length of the wall and the location of the resultant force after the occurrence of the tensile crack.

#### Solution

From Eq. (12.24).

$$z_r = \frac{2c'}{\gamma} \sqrt{\frac{1 + \sin \phi'}{1 - \sin \phi'}} = \frac{(2)(13.5)}{18} \sqrt{\frac{1 + \sin 20^\circ}{1 - \sin 20^\circ}} = 2.14 \text{ m}$$

At  $z = 7.5$  m,

$$\frac{c'}{\gamma z} = \frac{13.5}{(18)(7.5)} = 0.1$$

From Table 12.4, for  $\phi' = 20^\circ$ ,  $c'/\gamma z = 0.1$ , and  $\alpha = 10^\circ$ , the value of  $K'_a$  is 0.377, so at  $z = 7.5$  m,

$$\sigma'_a = \gamma z K'_a \cos \alpha = (18)(7.5)(0.377)(\cos 10^\circ) = 50.1 \text{ kN/m}^2$$

After the occurrence of the tensile crack, the pressure distribution on the wall will be as shown in Figure 12.11, so

$$P_a = \left(\frac{1}{2}\right)(50.1)(7.5 - 2.14) = 134.3 \text{ kN/m}$$

and

$$\bar{z} = \frac{7.5 - 2.14}{3} = 1.79 \text{ m}$$

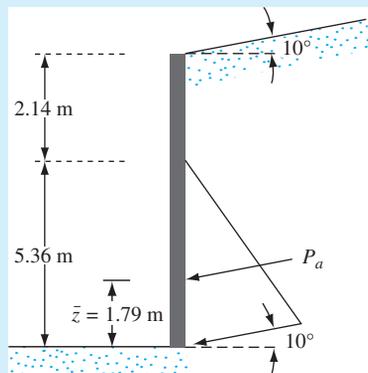


Figure 12.11 Calculation of Rankine active force,  $c' - \phi'$  soil ■

## 12.6 Coulomb's Active Earth Pressure

The Rankine active earth pressure calculations discussed in the preceding sections were based on the assumption that the wall is frictionless. In 1776, Coulomb proposed a theory for calculating the lateral earth pressure on a retaining wall with granular soil backfill. This theory takes wall friction into consideration.

To apply Coulomb's active earth pressure theory, let us consider a retaining wall with its back face inclined at an angle  $\beta$  with the horizontal, as shown in Figure 12.12a. The backfill is a granular soil that slopes at an angle  $\alpha$  with the horizontal. Also, let  $\delta'$  be the angle of friction between the soil and the wall (i.e., the angle of wall friction).

Under active pressure, the wall will move away from the soil mass (to the left in the figure). Coulomb assumed that, in such a case, the failure surface in the soil mass would be a plane (e.g.,  $BC_1$ ,  $BC_2$ , ...). So, to find the active force, consider a possible soil failure wedge  $ABC_1$ . The forces acting on this wedge (per unit length at right angles to the cross section shown) are as follows:

1. The weight of the wedge,  $W$ .
2. The resultant,  $R$ , of the normal and resisting shear forces along the surface,  $BC_1$ . The force  $R$  will be inclined at an angle  $\phi'$  to the normal drawn to  $BC_1$ .
3. The active force per unit length of the wall,  $P_a$ , which will be inclined at an angle  $\delta'$  to the normal drawn to the back face of the wall.

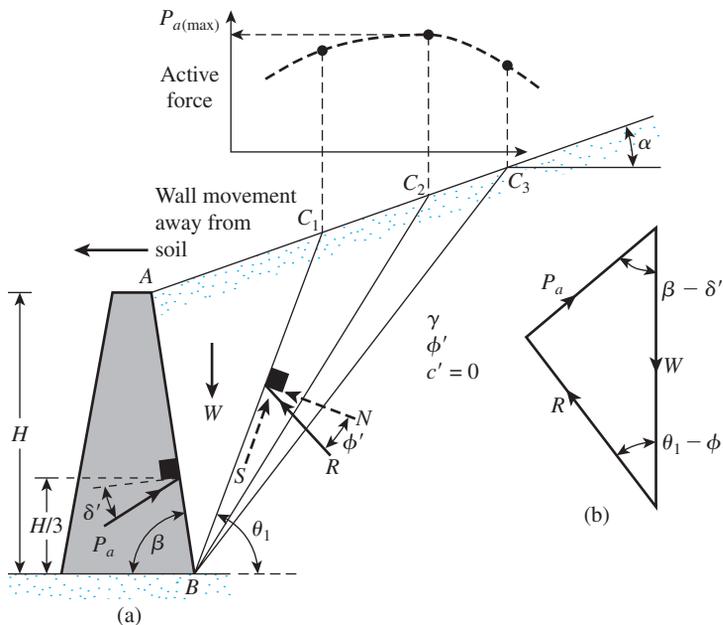


Figure 12.12 Coulomb's active pressure

For equilibrium purposes, a force triangle can be drawn, as shown in Figure 12.12b. Note that  $\theta_1$  is the angle that  $BC_1$  makes with the horizontal. Because the magnitude of  $W$ , as well as the directions of all three forces, are known, the value of  $P_a$  can now be determined. Similarly, the active forces of other trial wedges, such as  $ABC_2$ ,  $ABC_3$ , ..., can be determined. The maximum value of  $P_a$  thus determined is Coulomb's active force (see top part of Figure 12.12a), which may be expressed as

$$P_a = \frac{1}{2}K_a\gamma H^2 \quad (12.25)$$

where

$$K_a = \text{Coulomb's active earth pressure coefficient} \\ = \frac{\sin^2(\beta + \phi')}{\sin^2\beta \sin(\beta - \delta') \left[ 1 + \sqrt{\frac{\sin(\phi' + \delta')\sin(\phi' - \alpha)}{\sin(\beta - \delta')\sin(\alpha + \beta)}} \right]^2} \quad (12.26)$$

and  $H$  = height of the wall.

The values of the active earth pressure coefficient,  $K_a$ , for a vertical retaining wall ( $\beta = 90^\circ$ ) with horizontal backfill ( $\alpha = 0^\circ$ ) are given in Table 12.5. Note that the line of action of the resultant force ( $P_a$ ) will act at a distance  $H/3$  above the base of the wall and will be inclined at an angle  $\delta'$  to the normal drawn to the back of the wall.

In the actual design of retaining walls, the value of the wall friction angle  $\delta'$  is assumed to be between  $\phi'/2$  and  $\frac{2}{3}\phi'$ . The active earth pressure coefficients for various values of  $\phi'$ ,  $\alpha$ , and  $\beta$  with  $\delta' = \frac{1}{2}\phi'$  and  $\frac{2}{3}\phi'$  are respectively given in Tables 12.6 and 12.7. These coefficients are very useful design considerations.

If a uniform surcharge of intensity  $q$  is located above the backfill, as shown in

**Table 12.5** Values of  $K_a$  [Eq. (12.26)] for  $\beta = 90^\circ$  and  $\alpha = 0^\circ$

$\phi'$ (deg)	$\delta'$ (deg)					
	0	5	10	15	20	25
28	0.3610	0.3448	0.3330	0.3251	0.3203	0.3186
30	0.3333	0.3189	0.3085	0.3014	0.2973	0.2956
32	0.3073	0.2945	0.2853	0.2791	0.2755	0.2745
34	0.2827	0.2714	0.2633	0.2579	0.2549	0.2542
36	0.2596	0.2497	0.2426	0.2379	0.2354	0.2350
38	0.2379	0.2292	0.2230	0.2190	0.2169	0.2167
40	0.2174	0.2098	0.2045	0.2011	0.1994	0.1995
42	0.1982	0.1916	0.1870	0.1841	0.1828	0.1831

**Table 12.6** Values of  $K_a$  [from Eq. (12.26)] for  $\delta' = \frac{2}{3}\phi'$ 

$\alpha$ (deg)	$\phi'$ (deg)	$\beta$ (deg)						
		90	85	80	75	70	65	
0	28	0.3213	0.3588	0.4007	0.4481	0.5026	0.5662	
	29	0.3091	0.3467	0.3886	0.4362	0.4908	0.5547	
	30	0.2973	0.3349	0.3769	0.4245	0.4794	0.5435	
	31	0.2860	0.3235	0.3655	0.4133	0.4682	0.5326	
	32	0.2750	0.3125	0.3545	0.4023	0.4574	0.5220	
	33	0.2645	0.3019	0.3439	0.3917	0.4469	0.5117	
	34	0.2543	0.2916	0.3335	0.3813	0.4367	0.5017	
	35	0.2444	0.2816	0.3235	0.3713	0.4267	0.4919	
	36	0.2349	0.2719	0.3137	0.3615	0.4170	0.4824	
	37	0.2257	0.2626	0.3042	0.3520	0.4075	0.4732	
	38	0.2168	0.2535	0.2950	0.3427	0.3983	0.4641	
	39	0.2082	0.2447	0.2861	0.3337	0.3894	0.4553	
	40	0.1998	0.2361	0.2774	0.3249	0.3806	0.4468	
	41	0.1918	0.2278	0.2689	0.3164	0.3721	0.4384	
	42	0.1840	0.2197	0.2606	0.3080	0.3637	0.4302	
	5	28	0.3431	0.3845	0.4311	0.4843	0.5461	0.6190
		29	0.3295	0.3709	0.4175	0.4707	0.5325	0.6056
		30	0.3165	0.3578	0.4043	0.4575	0.5194	0.5926
		31	0.3039	0.3451	0.3916	0.4447	0.5067	0.5800
		32	0.2919	0.3329	0.3792	0.4324	0.4943	0.5677
		33	0.2803	0.3211	0.3673	0.4204	0.4823	0.5558
		34	0.2691	0.3097	0.3558	0.4088	0.4707	0.5443
35		0.2583	0.2987	0.3446	0.3975	0.4594	0.5330	
36		0.2479	0.2881	0.3338	0.3866	0.4484	0.5221	
37		0.2379	0.2778	0.3233	0.3759	0.4377	0.5115	
38		0.2282	0.2679	0.3131	0.3656	0.4273	0.5012	
39		0.2188	0.2582	0.3033	0.3556	0.4172	0.4911	
10	28	0.3702	0.4164	0.4686	0.5287	0.5992	0.6834	
	29	0.3548	0.4007	0.4528	0.5128	0.5831	0.6672	
	30	0.3400	0.3857	0.4376	0.4974	0.5676	0.6516	
	31	0.3259	0.3713	0.4230	0.4826	0.5526	0.6365	
	32	0.3123	0.3575	0.4089	0.4683	0.5382	0.6219	
	33	0.2993	0.3442	0.3953	0.4545	0.5242	0.6078	
	34	0.2868	0.3314	0.3822	0.4412	0.5107	0.5942	
	35	0.2748	0.3190	0.3696	0.4283	0.4976	0.5810	
	36	0.2633	0.3072	0.3574	0.4158	0.4849	0.5682	
	37	0.2522	0.2957	0.3456	0.4037	0.4726	0.5558	
	38	0.2415	0.2846	0.3342	0.3920	0.4607	0.5437	
	39	0.2313	0.2740	0.3231	0.3807	0.4491	0.5321	
40	0.2214	0.2636	0.3125	0.3697	0.4379	0.5207		
41	0.2119	0.2537	0.3021	0.3590	0.4270	0.5097		
42	0.2027	0.2441	0.2921	0.3487	0.4164	0.4990		

Table 12.6 (Continued)

$\alpha$ (deg)	$\phi'$ (deg)	$\beta$ (deg)					
		90	85	80	75	70	65
15	28	0.4065	0.4585	0.5179	0.5868	0.6685	0.7670
	29	0.3881	0.4397	0.4987	0.5672	0.6483	0.7463
	30	0.3707	0.4219	0.4804	0.5484	0.6291	0.7265
	31	0.3541	0.4049	0.4629	0.5305	0.6106	0.7076
	32	0.3384	0.3887	0.4462	0.5133	0.5930	0.6895
	33	0.3234	0.3732	0.4303	0.4969	0.5761	0.6721
	34	0.3091	0.3583	0.4150	0.4811	0.5598	0.6554
	35	0.2954	0.3442	0.4003	0.4659	0.5442	0.6393
	36	0.2823	0.3306	0.3862	0.4513	0.5291	0.6238
	37	0.2698	0.3175	0.3726	0.4373	0.5146	0.6089
	38	0.2578	0.3050	0.3595	0.4237	0.5006	0.5945
	39	0.2463	0.2929	0.3470	0.4106	0.4871	0.5805
	40	0.2353	0.2813	0.3348	0.3980	0.4740	0.5671
	41	0.2247	0.2702	0.3231	0.3858	0.4613	0.5541
20	28	0.4602	0.5205	0.5900	0.6714	0.7689	0.8880
	29	0.4364	0.4958	0.5642	0.6445	0.7406	0.8581
	30	0.4142	0.4728	0.5403	0.6195	0.7144	0.8303
	31	0.3935	0.4513	0.5179	0.5961	0.6898	0.8043
	32	0.3742	0.4311	0.4968	0.5741	0.6666	0.7799
	33	0.3559	0.4121	0.4769	0.5532	0.6448	0.7569
	34	0.3388	0.3941	0.4581	0.5335	0.6241	0.7351
	35	0.3225	0.3771	0.4402	0.5148	0.6044	0.7144
	36	0.3071	0.3609	0.4233	0.4969	0.5856	0.6947
	37	0.2925	0.3455	0.4071	0.4799	0.5677	0.6759
	38	0.2787	0.3308	0.3916	0.4636	0.5506	0.6579
	39	0.2654	0.3168	0.3768	0.4480	0.5342	0.6407
	40	0.2529	0.3034	0.3626	0.4331	0.5185	0.6242
	41	0.2408	0.2906	0.3490	0.4187	0.5033	0.6083
42	0.2294	0.2784	0.3360	0.4049	0.4888	0.5930	

Table 12.7 Values of  $K_a$  [from Eq. (12.26)] for  $\delta' = \phi'/2$ 

$\alpha$ (deg)	$\phi'$ (deg)	$\beta$ (deg)					
		90	85	80	75	70	65
0	28	0.3264	0.3629	0.4034	0.4490	0.5011	0.5616
	29	0.3137	0.3502	0.3907	0.4363	0.4886	0.5492
	30	0.3014	0.3379	0.3784	0.4241	0.4764	0.5371
	31	0.2896	0.3260	0.3665	0.4121	0.4645	0.5253
	32	0.2782	0.3145	0.3549	0.4005	0.4529	0.5137
	33	0.2671	0.3033	0.3436	0.3892	0.4415	0.5025
	34	0.2564	0.2925	0.3327	0.3782	0.4305	0.4915
	35	0.2461	0.2820	0.3221	0.3675	0.4197	0.4807

(Continued)

Table 12.7 (Continued)

$\alpha$ (deg)	$\phi'$ (deg)	$\beta$ (deg)					
		90	85	80	75	70	65
5	36	0.2362	0.2718	0.3118	0.3571	0.4092	0.4702
	37	0.2265	0.2620	0.3017	0.3469	0.3990	0.4599
	38	0.2172	0.2524	0.2920	0.3370	0.3890	0.4498
	39	0.2081	0.2431	0.2825	0.3273	0.3792	0.4400
	40	0.1994	0.2341	0.2732	0.3179	0.3696	0.4304
	41	0.1909	0.2253	0.2642	0.3087	0.3602	0.4209
	42	0.1828	0.2168	0.2554	0.2997	0.3511	0.4177
	28	0.3477	0.3879	0.4327	0.4837	0.5425	0.6115
	29	0.3337	0.3737	0.4185	0.4694	0.5282	0.5972
	30	0.3202	0.3601	0.4048	0.4556	0.5144	0.5833
	31	0.3072	0.3470	0.3915	0.4422	0.5009	0.5698
	32	0.2946	0.3342	0.3787	0.4292	0.4878	0.5566
	33	0.2825	0.3219	0.3662	0.4166	0.4750	0.5437
	34	0.2709	0.3101	0.3541	0.4043	0.4626	0.5312
	35	0.2596	0.2986	0.3424	0.3924	0.4505	0.5190
	36	0.2488	0.2874	0.3310	0.3808	0.4387	0.5070
	37	0.2383	0.2767	0.3199	0.3695	0.4272	0.4954
	38	0.2282	0.2662	0.3092	0.3585	0.4160	0.4840
39	0.2185	0.2561	0.2988	0.3478	0.4050	0.4729	
40	0.2090	0.2463	0.2887	0.3374	0.3944	0.4620	
41	0.1999	0.2368	0.2788	0.3273	0.3840	0.4514	
42	0.1911	0.2276	0.2693	0.3174	0.3738	0.4410	
10	28	0.3743	0.4187	0.4688	0.5261	0.5928	0.6719
	29	0.3584	0.4026	0.4525	0.5096	0.5761	0.6549
	30	0.3432	0.3872	0.4368	0.4936	0.5599	0.6385
	31	0.3286	0.3723	0.4217	0.4782	0.5442	0.6225
	32	0.3145	0.3580	0.4071	0.4633	0.5290	0.6071
	33	0.3011	0.3442	0.3930	0.4489	0.5143	0.5920
	34	0.2881	0.3309	0.3793	0.4350	0.5000	0.5775
	35	0.2757	0.3181	0.3662	0.4215	0.4862	0.5633
	36	0.2637	0.3058	0.3534	0.4084	0.4727	0.5495
	37	0.2522	0.2938	0.3411	0.3957	0.4597	0.5361
	38	0.2412	0.2823	0.3292	0.3833	0.4470	0.5230
	39	0.2305	0.2712	0.3176	0.3714	0.4346	0.5103
40	0.2202	0.2604	0.3064	0.3597	0.4226	0.4979	
41	0.2103	0.2500	0.2956	0.3484	0.4109	0.4858	
42	0.2007	0.2400	0.2850	0.3375	0.3995	0.4740	
15	28	0.4095	0.4594	0.5159	0.5812	0.6579	0.7498
	29	0.3908	0.4402	0.4964	0.5611	0.6373	0.7284
	30	0.3730	0.4220	0.4777	0.5419	0.6175	0.7080
	31	0.3560	0.4046	0.4598	0.5235	0.5985	0.6884
	32	0.3398	0.3880	0.4427	0.5059	0.5803	0.6695
	33	0.3244	0.3721	0.4262	0.4889	0.5627	0.6513

Table 12.7 (Continued)

$\alpha$ (deg)	$\phi'$ (deg)	$\beta$ (deg)					
		90	85	80	75	70	65
20	34	0.3097	0.3568	0.4105	0.4726	0.5458	0.6338
	35	0.2956	0.3422	0.3953	0.4569	0.5295	0.6168
	36	0.2821	0.3282	0.3807	0.4417	0.5138	0.6004
	37	0.2692	0.3147	0.3667	0.4271	0.4985	0.5846
	38	0.2569	0.3017	0.3531	0.4130	0.4838	0.5692
	39	0.2450	0.2893	0.3401	0.3993	0.4695	0.5543
	40	0.2336	0.2773	0.3275	0.3861	0.4557	0.5399
	41	0.2227	0.2657	0.3153	0.3733	0.4423	0.5258
	42	0.2122	0.2546	0.3035	0.3609	0.4293	0.5122
	28	0.4614	0.5188	0.5844	0.6608	0.7514	0.8613
	29	0.4374	0.4940	0.5586	0.6339	0.7232	0.8313
	30	0.4150	0.4708	0.5345	0.6087	0.6968	0.8034
	31	0.3941	0.4491	0.5119	0.5851	0.6720	0.7772
	32	0.3744	0.4286	0.4906	0.5628	0.6486	0.7524
	33	0.3559	0.4093	0.4704	0.5417	0.6264	0.7289
	34	0.3384	0.3910	0.4513	0.5216	0.6052	0.7066
	35	0.3218	0.3736	0.4331	0.5025	0.5851	0.6853
	36	0.3061	0.3571	0.4157	0.4842	0.5658	0.6649
	37	0.2911	0.3413	0.3991	0.4668	0.5474	0.6453
	38	0.2769	0.3263	0.3833	0.4500	0.5297	0.6266
39	0.2633	0.3120	0.3681	0.4340	0.5127	0.6085	
40	0.2504	0.2982	0.3535	0.4185	0.4963	0.5912	
41	0.2381	0.2851	0.3395	0.4037	0.4805	0.5744	
42	0.2263	0.2725	0.3261	0.3894	0.4653	0.5582	


Figure 12.13, the active force,  $P_a$ , can be calculated as

$$P_a = \frac{1}{2} K_a \gamma_{\text{eq}} H^2 \quad (12.27)$$

↑  
Eq. (12.25)

where

$$\gamma_{\text{eq}} = \gamma + \left[ \frac{\sin \beta}{\sin(\beta + \alpha)} \right] \left( \frac{2q}{H} \right) \quad (12.28)$$

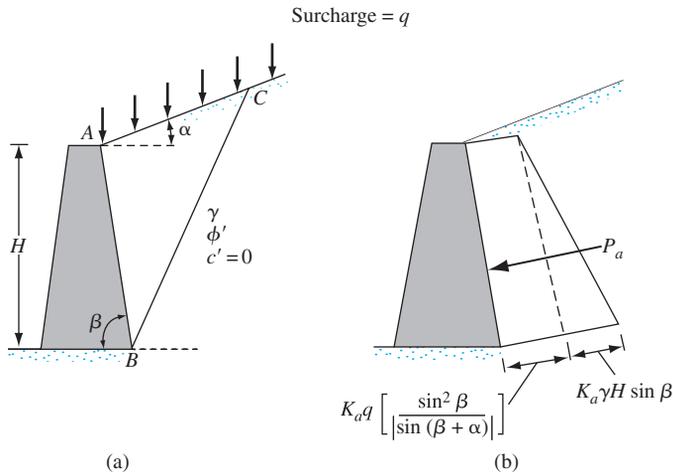

**Figure 12.13** Coulomb's active pressure with a surcharge on the backfill

### Example 12.6

Consider the retaining wall shown in Figure 12.12a. Given:  $H = 5$  m; unit weight of soil  $= 17.6$  kN/m<sup>3</sup>; angle of friction of soil  $= 35^\circ$ ; wall friction-angle,  $\delta' = \frac{2}{3}\phi'$ , soil cohesion,  $c' = 0$ ;  $\alpha = 0$ , and  $\beta = 90^\circ$ . Calculate the Coulomb's active force per unit length of the wall.

#### Solution

From Eq. (12.25)

$$P_a = \frac{1}{2}\gamma H^2 K_a$$

From Table 12.6, for  $\alpha = 0^\circ$ ,  $\beta = 90^\circ$ ,  $\phi' = 35^\circ$ , and  $\delta' = \frac{2}{3}\phi' = 23.33^\circ$ ,  $K_a = 0.2444$ . Hence,

$$P_a = \frac{1}{2}(17.6)(5)^2(0.2444) = 53.77 \text{ kN/m}$$

### Example 12.7

Refer to Figure 12.13a. Given:  $H = 20$  ft,  $\phi' = 30^\circ$ ,  $\delta' = 20^\circ$ ,  $\alpha = 5^\circ$ ,  $\beta = 85^\circ$ ,  $q = 2000$  lb/ft<sup>2</sup>, and  $\gamma = 115$  lb/ft<sup>3</sup>. Determine Coulomb's active force and the location of the line of action of the resultant  $P_a$ .

**Solution**

For  $\beta = 85^\circ$ ,  $\alpha = 5^\circ$ ,  $\delta' = 20^\circ$ ,  $\phi' = 30^\circ$ , and  $K_a = 0.3578$  (Table 12.6). From Eqs. (12.27) and (12.28),

$$\begin{aligned}
 P_a &= \frac{1}{2}K_a\gamma_{\text{eq}}H^2 = \frac{1}{2}K_a\left[\gamma + \frac{2q}{H} \frac{\sin\beta}{\sin(\beta + \alpha)}\right]H^2 = \underbrace{\frac{1}{2}K_a\gamma H^2}_{P_{a(1)}} \\
 &\quad + \underbrace{K_a Hq \left[\frac{\sin\beta}{\sin(\beta + \alpha)}\right]}_{P_{a(2)}} \\
 &= (0.5)(0.3578)(115)(20)^2 + (0.3578)(20)(2000) \left[\frac{\sin 85}{\sin(85 + 5)}\right] \\
 &= 8229.4 + 14,257.5 = \mathbf{22,486.9 \text{ lb/ft}}
 \end{aligned}$$

Location of the line of action of the resultant:

$$P_a \bar{z} = P_{a(1)} \frac{H}{3} + P_{a(2)} \frac{H}{2}$$

or

$$\begin{aligned}
 \bar{z} &= \frac{(8229.4)\left(\frac{20}{3}\right) + (14,257.5)\left(\frac{20}{2}\right)}{22,486.9} \\
 &= \mathbf{8.78 \text{ ft}} \text{ (measured vertically from the bottom of the wall)}
 \end{aligned}$$

## 12.7 Lateral Earth Pressure Due to Surcharge



In several instances, the theory of elasticity is used to determine the lateral earth pressure on unyielding retaining structures caused by various types of surcharge loading, such as *line loading* (Figure 12.14a) and *strip loading* (Figure 12.14b).

According to the theory of elasticity, the stress at any depth,  $z$ , on a retaining structure caused by a line load of intensity  $q$ /unit length (Figure 12.14a) may be given as

$$\sigma = \frac{2q}{\pi H} \frac{a^2 b}{(a^2 + b^2)^2} \quad (12.29)$$

where  $\sigma$  = horizontal stress at depth  $z = bH$

(See Figure 12.14a for explanations of the terms  $a$  and  $b$ .)

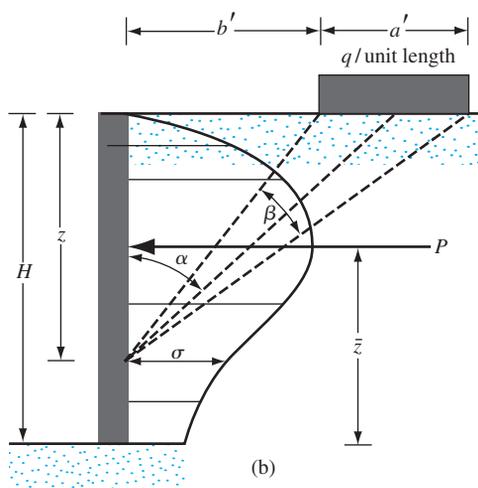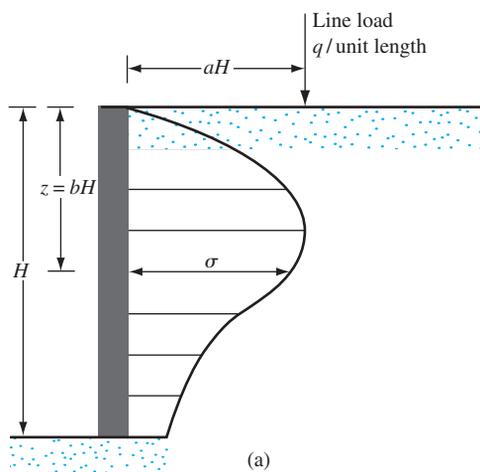

**Figure 12.14** Lateral earth pressure caused by (a) line load and (b) strip load

However, because soil is not a perfectly elastic medium, some deviations from Eq. (12.29) may be expected. The modified forms of this equation generally accepted for use with soils are as follows:

$$\sigma = \frac{4a}{\pi H} \frac{a^2 b}{(a^2 + b^2)} \quad \text{for } a > 0.4 \quad (12.30)$$

and

$$\sigma = \frac{q}{H} \frac{0.203b}{(0.16 + b^2)^2} \quad \text{for } a \leq 0.4 \quad (12.31)$$

Figure 12.14b shows a strip load with an intensity of  $q$ /unit area located at a distance  $b'$  from a wall of height  $H$ . Based on the theory of elasticity, the horizontal stress,  $\sigma$ , at any depth  $z$  on a retaining structure is

$$\sigma = \frac{q}{\pi}(\beta - \sin \beta \cos 2\alpha) \quad (12.32)$$

(The angles  $\alpha$  and  $\beta$  are defined in Figure 12.14b.)

However, in the case of soils, the right-hand side of Eq. (12.32) is doubled to account for the yielding soil continuum, or

$$\sigma = \frac{2q}{\pi}(\beta - \sin \beta \cos 2\alpha) \quad (12.33)$$

The total force per unit length ( $P$ ) due to the *strip loading only* (Jarquio, 1981) may be expressed as

$$P = \frac{q}{90} [H(\theta_2 - \theta_1)] \quad (12.34)$$

where

$$\theta_1 = \tan^{-1}\left(\frac{b'}{H}\right) (\text{deg}) \quad (12.35)$$

$$\theta_2 = \tan^{-1}\left(\frac{a' + b'}{H}\right) (\text{deg}) \quad (12.36)$$

The location  $\bar{z}$  (see Figure 12.14b) of the resultant force,  $P$ , can be given as

$$\bar{z} = H - \left[ \frac{H^2(\theta_2 - \theta_1) + (R - Q) - 57.3a'H}{2H(\theta_2 - \theta_1)} \right] \quad (12.37)$$

where

$$R = (a' + b')^2(90 - \theta_2) \quad (12.38)$$

$$Q = b'^2(90 - \theta_1) \quad (12.39)$$

### EXAMPLE 12.8

Refer to Figure 12.14a which shows a line load surcharge. Given:  $H = 6$  m,  $a = 0.25$ , and  $q = 3$  kN/m. Calculate the variation of the lateral stress  $\sigma$  on the retaining structure at  $z = 1, 2, 3, 4, 5$ , and 6 m.

**Solution**

For  $a = 0.25$ , which is less than 0.4, we will use Eq. (12.31). Now the following table can be prepared.

$z$ (m)	$H$ (m)	$b = z/H$	$a$	$\sigma$ (kN/m <sup>2</sup> )
1	6	0.167	0.25	<b>0.48</b>
2	6	0.333	0.25	<b>0.46</b>
3	6	0.5	0.25	<b>0.302</b>
4	6	0.667	0.25	<b>0.185</b>
5	6	0.833	0.25	<b>0.116</b>
6	6	1	0.25	<b>0.073</b>

**Example 12.9**

Refer to Figure 12.14b. Here,  $a' = 2$  m,  $b' = 1$  m,  $q = 40$  kN/m<sup>2</sup>, and  $H = 6$  m. Determine the total force on the wall (kN/m) caused by the strip loading only.

**Solution**

From Eqs. (12.35) and (12.36),

$$\theta_1 = \tan^{-1}\left(\frac{1}{6}\right) = 9.46^\circ$$

$$\theta_2 = \tan^{-1}\left(\frac{2+1}{6}\right) = 26.57^\circ$$

From Eq. (12.34)

$$P = \frac{q}{90} [H(\theta_2 - \theta_1)] = \frac{40}{90} [6(26.57 - 9.46)] = \mathbf{45.63 \text{ kN/m}} \quad \blacksquare$$

**Example 12.10**

Refer to Example 12.9. Determine the location of the resultant  $\bar{z}$ .

**Solution**

From Eqs. (12.38) and (12.39),

$$R = (a' + b')^2(90 - \theta_2) = (2 + 1)^2(90 - 26.57) = 570.87$$

$$Q = b'^2(90 - \theta_1) = (1)^2(90 - 9.46) = 80.54$$

From Eq. (12.37),

$$\begin{aligned} \bar{z} &= H - \left[ \frac{H^2(\theta_2 - \theta_1) + (R - Q) - 57.3a'H}{2H(\theta_2 - \theta_1)} \right] \\ &= 6 - \left[ \frac{(6)^2(26.57 - 9.46) + (570.87 - 80.54) - (57.3)(2)(6)}{(2)(6)(26.57 - 9.46)} \right] = \mathbf{3.96 \text{ m}} \quad \blacksquare \end{aligned}$$



$$\theta' = \tan^{-1} \left[ \frac{k_h}{(1 - k_v)} \right] \quad (12.44)$$

Note that for no earthquake condition,  $k_h = 0$ ,  $k_v = 0$ , and  $\theta' = 0$ . Hence  $K_{ae} = K_a$  [as given by Eq. (12.26)].

Some values of  $K_{ae}$  for  $\beta = 90^\circ$  and  $k_v = 0$  are given in Table 12.8.

The magnitude of  $P_{ae}$  as given in Eq. (12.42) also can be determined as (Seed and Whitman, 1970),

$$P_{ae} = \frac{1}{2} \gamma H^2 (1 - k_v) [K_a(\beta', \alpha')] \left( \frac{\sin^2 \beta'}{\cos \theta' \sin^2 \beta} \right) \quad (12.45)$$

where

$$\beta' = \beta - \theta' \quad (12.46)$$

$$\alpha' = \theta' + \alpha \quad (12.47)$$

$K_a(\beta', \alpha')$  = Coulomb's active earth-pressure coefficient on a wall with a back face inclination of  $\beta'$  with the horizontal and with a back fill inclined at an angle  $\alpha'$  with the horizontal (such as Tables 12.6 and 12.7)

Equation (12.42) is usually referred to as the *Mononobe–Okabe* solution. Unlike the case shown in Figure 12.12a, the resultant earth pressure in this situation, as calculated by Eq. (12.42) *does not act* at a distance of  $H/3$  from the bottom of the wall. The following procedure may be used to obtain the location of the resultant force  $P_{ae}$ :

*Step 1.* Calculate  $P_{ae}$  by using Eq. (12.42)

*Step 2.* Calculate  $P_a$  by using Eq. (12.25)

*Step 3.* Calculate

$$\Delta P_{ae} = P_{ae} - P_a \quad (12.48)$$

*Step 4.* Assume that  $P_a$  acts at a distance of  $H/3$  from the bottom of the wall (Figure 12.16)


*Step 5.* Assume that  $\Delta P_{ae}$  acts at a distance of  $0.6H$  from the bottom of the wall (Figure 12.16)

*Step 6.* Calculate the location of the resultant as

$$\bar{z} = \frac{(0.6H)(\Delta P_{ae}) + \left(\frac{H}{3}\right)(P_a)}{P_{ae}} \quad (12.49)$$

**Table 12.8** Values of  $K_{ae}$  [Eq. (12.43)] for  $\beta = 90^\circ$  and  $k_v = 0$ 

$k_h$	$\delta'$ (deg)	$\alpha$ (deg)	$\phi'$ (deg)				
			28	30	35	40	45
0.1	0	0	0.427	0.397	0.328	0.268	0.217
0.2			0.508	0.473	0.396	0.382	0.270
0.3			0.611	0.569	0.478	0.400	0.334
0.4			0.753	0.697	0.581	0.488	0.409
0.5			1.005	0.890	0.716	0.596	0.500
0.1	0	5	0.457	0.423	0.347	0.282	0.227
0.2			0.554	0.514	0.424	0.349	0.285
0.3			0.690	0.635	0.522	0.431	0.356
0.4			0.942	0.825	0.653	0.535	0.442
0.5			—	—	0.855	0.673	0.551
0.1	0	10	0.497	0.457	0.371	0.299	0.238
0.2			0.623	0.570	0.461	0.375	0.303
0.3			0.856	0.748	0.585	0.472	0.383
0.4			—	—	0.780	0.604	0.486
0.5			—	—	—	0.809	0.624
0.1	$\phi'/2$	0	0.396	0.368	0.306	0.253	0.207
0.2			0.485	0.452	0.380	0.319	0.267
0.3			0.604	0.563	0.474	0.402	0.340
0.4			0.778	0.718	0.599	0.508	0.433
0.5			1.115	0.972	0.774	0.648	0.522
0.1	$\phi'/2$	5	0.428	0.396	0.326	0.268	0.218
0.2			0.537	0.497	0.412	0.342	0.283
0.3			0.699	0.640	0.526	0.438	0.367
0.4			1.025	0.881	0.690	0.568	0.475
0.5			—	—	0.962	0.752	0.620
0.1	$\phi'/2$	10	0.472	0.433	0.352	0.285	0.230
0.2			0.616	0.562	0.454	0.371	0.303
0.3			0.908	0.780	0.602	0.487	0.400
0.4			—	—	0.857	0.656	0.531
0.5			—	—	—	0.944	0.722
0.1	$\frac{2}{3}\phi'$	0	0.393	0.366	0.306	0.256	0.212
0.2			0.486	0.454	0.384	0.326	0.276
0.3			0.612	0.572	0.486	0.416	0.357
0.4			0.801	0.740	0.622	0.533	0.462
0.5			1.177	1.023	0.819	0.693	0.600
0.1	$\frac{2}{3}\phi'$	5	0.427	0.395	0.327	0.271	0.224
0.2			0.541	0.501	0.418	0.350	0.294
0.3			0.714	0.655	0.541	0.455	0.386
0.4			1.073	0.921	0.722	0.600	0.509
0.5			—	—	1.034	0.812	0.679
0.1	$\frac{2}{3}\phi'$	10	0.472	0.434	0.354	0.290	0.237
0.2			0.625	0.570	0.463	0.381	0.317
0.3			0.942	0.807	0.624	0.509	0.423
0.4			—	—	0.909	0.699	0.573
0.5			—	—	—	1.037	0.800

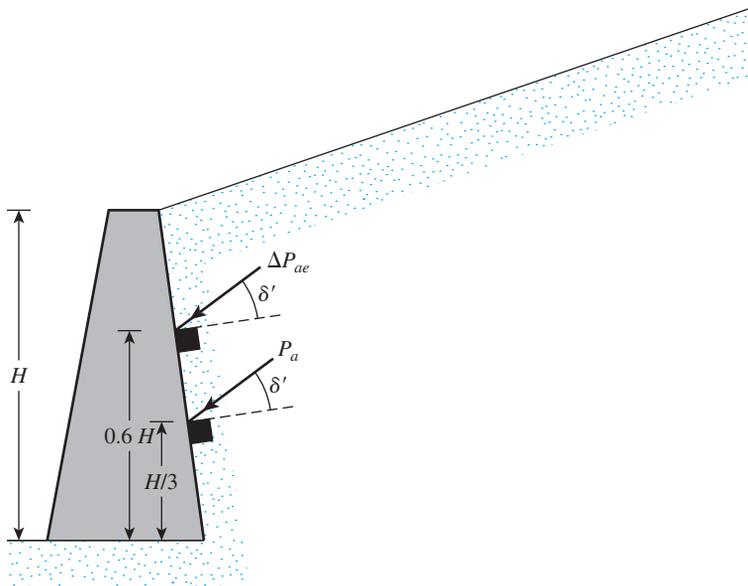

**Figure 12.16** Determining the line of action of  $P_{ae}$

### Example 12.11

Refer to Figure 12.15. Given:  $H = 10$  ft,  $\beta = 85^\circ$ ,  $\alpha = 5^\circ$ ,  $k_v = 0$ , and  $k_h = 0.3$ . For the backfill,  $\phi' = 35^\circ$ ,  $\gamma = 105$  lb/ft<sup>3</sup>, and  $\delta' = 17.5^\circ$ . Determine:

- $P_{ae}$  using Eq. (12.45)
- The location of the resultant,  $\bar{z}$ , from the bottom of the wall

#### Solution

Part a

From Eq. (12.44),

$$\theta' = \tan^{-1}\left(\frac{k_h}{1 - k_v}\right) = \tan^{-1}\left(\frac{0.3}{1 - 0}\right) = 16.7^\circ$$

From Eqs. (12.46) and (12.47),

$$\beta' = \beta - \theta' = 85 - 16.7 = 68.3^\circ$$

$$\alpha' = \theta' + \alpha = 16.7 + 5 = 21.7^\circ$$

$$\frac{\delta'}{\phi'} = \frac{17.5}{35} = 0.5$$

We will refer to Eq. (12.26). For  $\phi' = 35^\circ$ ,  $\delta'/\phi' = 0.5$ ,  $\beta' = 68.3^\circ$ , and  $\alpha' = 21.7^\circ$ , the value of  $K_a(\beta', \alpha') \approx 0.642$ . Thus, from Eq. (12.45),

$$P_{ae} = \frac{1}{2} \gamma H^2 (1 - k_v) [K_a(\beta', \alpha')] \left( \frac{\sin^2 \beta'}{\cos \theta' \sin^2 \beta} \right)$$

$$= \frac{1}{2} (105)(10^2)(1 - 0)(0.642) \left( \frac{\sin^2 68.3}{\cos 21.7 \sin^2 85} \right) = 3155.6 \text{ lb/ft}$$

Part b

From Eq. (12.25),

$$P_a = \frac{1}{2} \gamma H^2 K_a$$

From Eq. (12.26) with  $\delta' = 17.5^\circ$ ,  $\beta = 85^\circ$ , and  $\alpha = 5^\circ$ ,  $K_a \approx 0.2986$  (Table 12.7).

$$P_a = \frac{1}{2} (105)(10)^2 (0.2986) = 1568 \text{ lb/ft}$$

$$\Delta P_{ae} = P_{ae} - P_a = 3155.6 - 1568 = 1587.6 \text{ lb/ft}$$

From Eq. (12.49),


$$\bar{z} = \frac{(0.6H)(\Delta P_{ae}) + (H/3)(P_a)}{P_{ae}}$$

$$= \frac{[(0.6)(10)](1587.6) + (10/3)(1568)}{3155.6} = 4.67 \text{ ft}$$

## 12.9 Active Earth Pressure for Earthquake Condition (Vertical Backface of Wall and $c' - \phi'$ Backfill)

Shukla et al. (2009) developed a procedure for estimation of  $P_{ae}$  for a retaining wall with a vertical back face and horizontal backfill with a  $c' - \phi'$  soil (Figure 12.17a). In Figure 12.17a,  $ABC$  is the trial failure wedge. The following assumptions have been made in the analysis:

1. The effect of tensile crack is not taken into account.
2. The friction and adhesion between the back face of the wall and backfill are neglected.

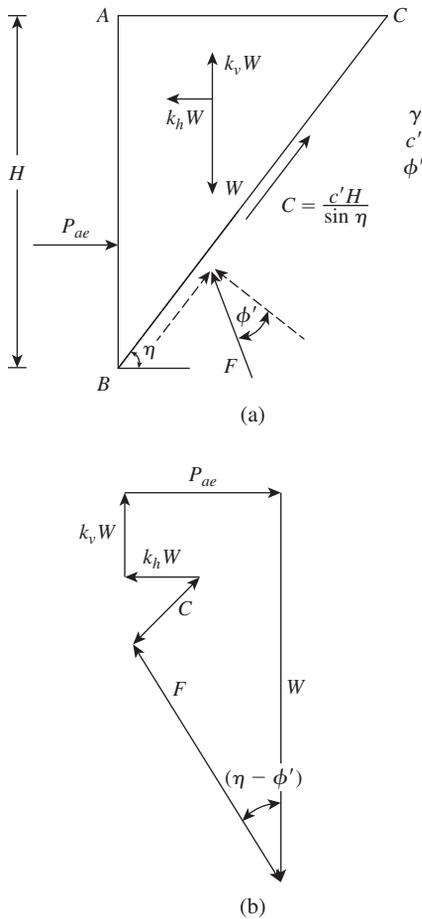

**Figure 12.17** Estimation of  $P_{ae}$  with  $c'-\phi'$  backfill: (a) trail failure wedge; (b) force polygon

Figure 12.17b shows the polygon for all the forces acting on the wedge  $ABC$ . The notations are similar to those shown in Figure 12.15. According to this analysis, the critical wedge angle  $\eta = \eta_c$  for maximum value of  $P_{ae}$  can be given as

$$\tan \eta_c = \frac{\sin \phi' \sin(\phi' - \theta') + m \sin 2\phi' + \left[ \sin \phi' \sin(\phi' - \theta') \cos \theta' + 4m^2 \cos^2 \phi' + 2m \cos \phi' \{ \sin \phi' \cos \theta' + \sin(\phi' - \theta') \} \right]^{0.5}}{\sin \phi' \cos(\phi' - \theta') + 2m \cos^2 \phi'} \quad (12.50)$$

where

$$m = \frac{c' \cos \theta'}{\gamma H(1 - k_v)} \quad (12.51)$$

For definition of  $\theta'$ , see Eq. (12.44)

Thus, the magnitude of  $P_{ae}$  can be expressed as

$$\frac{P_{ae}}{\gamma H^2} = P_{ae}^* = \frac{1}{2}(1 - k_v)K_{ae\gamma} - c^*K_{aec} \quad (12.52)$$


where

$$c^* = \frac{c'}{\gamma H} \quad (12.53)$$

$$K_{ae\gamma} = \frac{\cos(\phi' - \theta') - \frac{\sin(\phi' - \theta')}{\tan \eta_c}}{\cos \theta' (\cos \phi' + \tan \eta_c \sin \phi')} \quad (12.54)$$

$$K_{aec} = \frac{\cos \phi' (1 + \tan^2 \eta_c)}{\tan \eta_c (\cos \phi' + \tan \eta_c \sin \phi')} \quad (12.55)$$

Figure 12.18 gives plots of  $P_{ae}^*$  against  $\phi'$  for various of  $c^*$  and  $k_h$  ( $k_v = 0$ ).

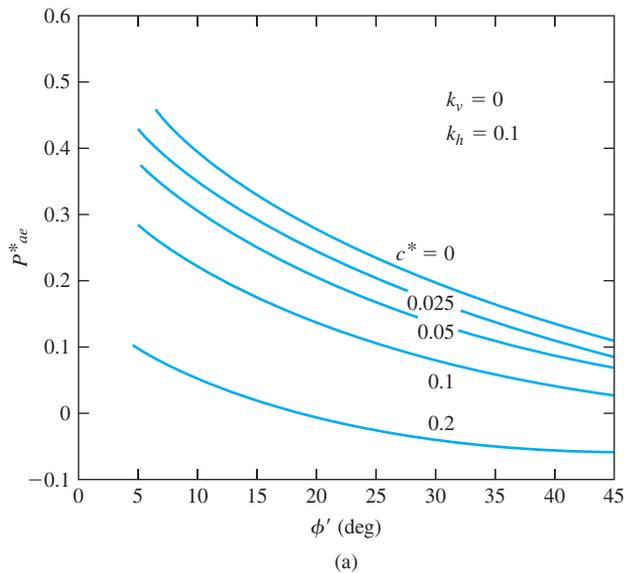

**Figure 12.18** Plot of  $P_{ae}^*$  vs.  $\phi'$  for various values of  $c^*$ : (a)  $k_h = 0.1$ ; (b)  $k_h = 0.2$ ; (c)  $k_h = 0.3$ ; (d)  $k_h = 0.4$  (Note:  $k_v = 0$ )

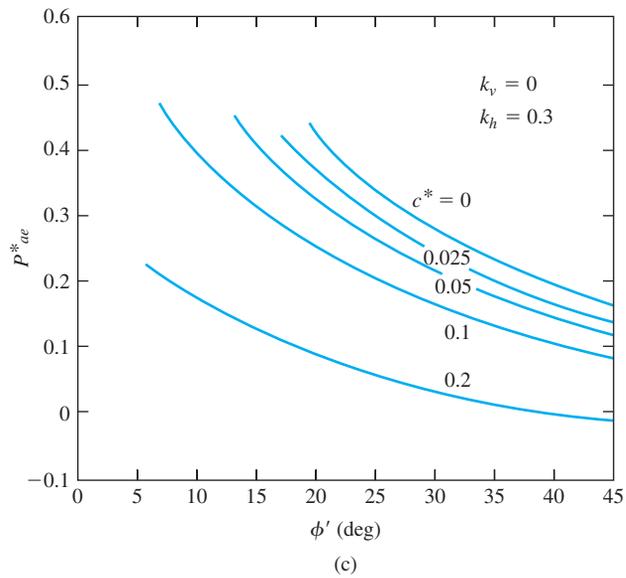
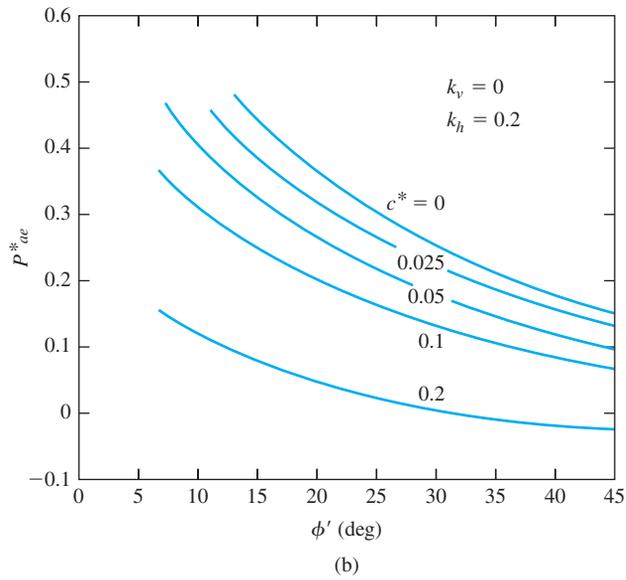


Figure 12.18 (Continued)

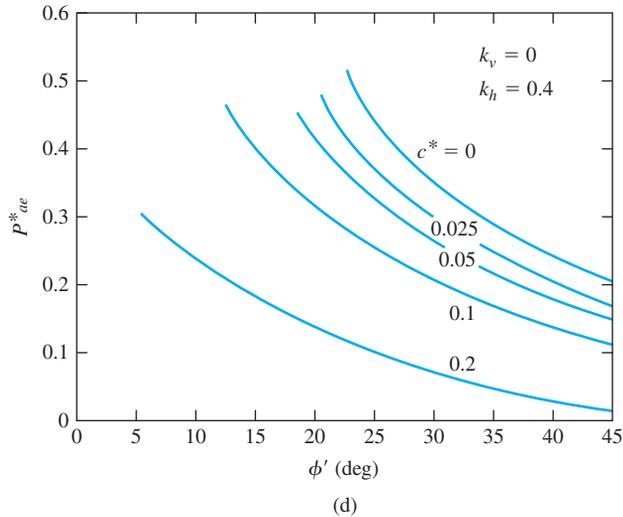


Figure 12.18 (Continued)

### Example 12.12

For a retaining wall with a vertical back face and horizontal backfill, the following are given.

- $H = 28$  ft
- $\phi' = 20^\circ$
- $c' = 165$  lb/ft<sup>2</sup>
- $\gamma = 118$  lb/ft<sup>3</sup>
- $k_h = 0.1$

Determine the magnitude of the active force,  $P_{ae}$ .

#### Solution

From Eq. (12.53)

$$c^* = \frac{c'}{\gamma H} = \frac{165}{(118)(28)} = 0.0499 \approx 0.05$$

$$\phi' = 20^\circ$$

From Figure 12.18a, for  $\phi' = 20^\circ$  and  $c^* = 0.05$ , the value of  $P_{ae}^* = 0.207$ . Hence

$$P_{ae} = P_{ae}^* \gamma H^2 = (0.207)(118)(28)^2 = \mathbf{19,150 \text{ lb/ft}}$$

## Passive Pressure

### 12.10 Rankine Passive Earth Pressure

Figure 12.19a shows a vertical frictionless retaining wall with a horizontal backfill. At depth  $z$ , the effective vertical pressure on a soil element is  $\sigma'_o = \gamma z$ . Initially, if the wall does not yield at all, the lateral stress at that depth will be  $\sigma'_h = K_o \sigma'_o$ . This state of stress is illustrated by the Mohr's circle  $a$  in Figure 12.19b. Now, if the wall is pushed into the soil mass by an amount  $\Delta x$ , as shown in Figure 12.19a, the vertical stress at depth  $z$  will stay the same; however, the horizontal stress will increase. Thus,  $\sigma'_h$  will be greater than  $K_o \sigma'_o$ . The state of stress can now be represented by the Mohr's circle  $b$  in Figure 12.19b. If the wall moves farther inward (i.e.,  $\Delta x$  is increased still more), the stresses at depth  $z$  will ultimately reach the state represented by Mohr's circle  $c$ . Note that this Mohr's circle touches the Mohr–Coulomb failure envelope, which implies that the soil behind the wall will fail by being pushed upward. The horizontal stress,  $\sigma'_h$ , at this point is referred to as the *Rankine passive pressure*, or  $\sigma'_h = \sigma'_p$ .

For Mohr's circle  $c$  in Figure 12.19b, the major principal stress is  $\sigma'_p$ , and the minor principal stress is  $\sigma'_o$ . Substituting these quantities into Eq. (2.91) yields

$$\sigma'_p = \sigma'_o \tan^2 \left( 45 + \frac{\phi'}{2} \right) + 2c' \tan \left( 45 + \frac{\phi'}{2} \right) \quad (12.56)$$

Now, let

$$\begin{aligned} K_p &= \text{Rankine passive earth pressure coefficient} \\ &= \tan^2 \left( 45 + \frac{\phi'}{2} \right) \end{aligned} \quad (12.57)$$

Then, from Eq. (12.56), we have

$$\sigma'_p = \sigma'_o K_p + 2c' \sqrt{K_p} \quad (12.58)$$

Equation (12.58) produces (Figure 12.19c), the passive pressure diagram for the wall shown in Figure 12.19a. Note that at  $z = 0$ ,

$$\sigma'_o = 0 \quad \text{and} \quad \sigma'_p = 2c' \sqrt{K_p}$$

and at  $z = H$ ,

$$\sigma'_o = \gamma H \quad \text{and} \quad \sigma'_p = \gamma H K_p + 2c' \sqrt{K_p}$$

The passive force per unit length of the wall can be determined from the area of the pressure diagram, or

$$P_p = \frac{1}{2} \gamma H^2 K_p + 2c' H \sqrt{K_p} \quad (12.59)$$

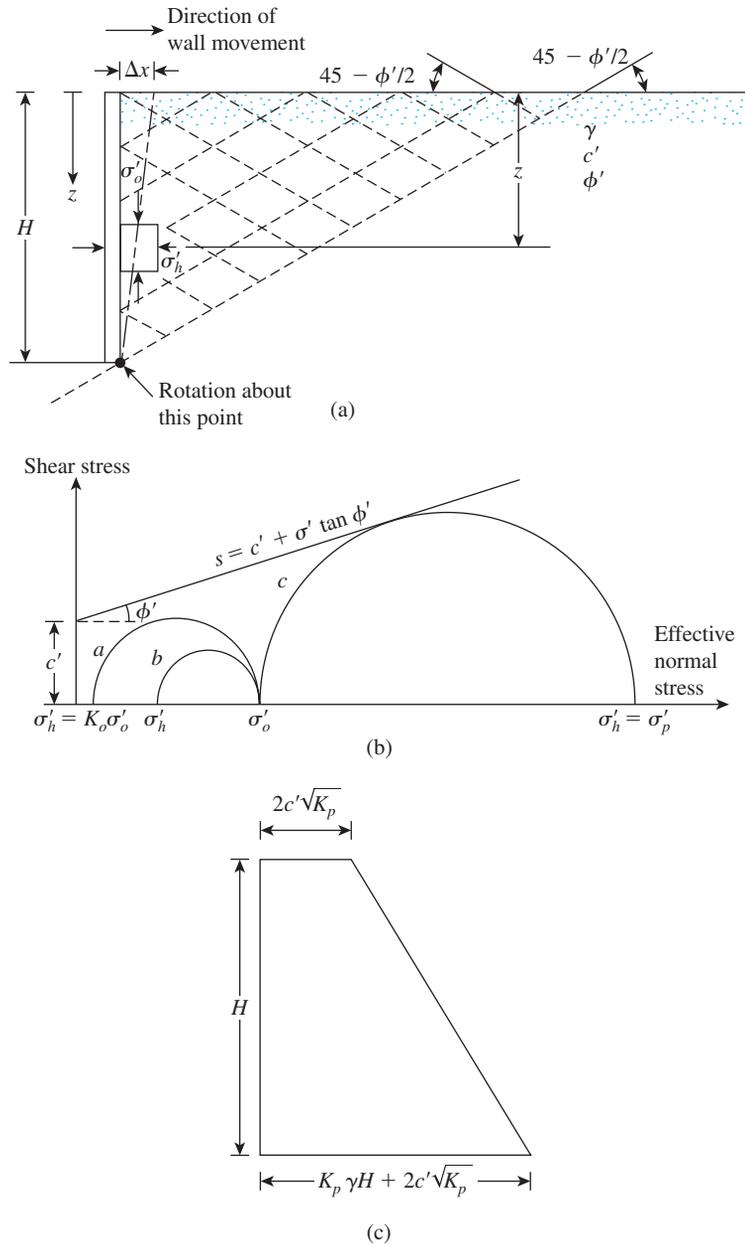


Figure 12.19 Rankine passive pressure

The approximate magnitudes of the wall movements,  $\Delta x$ , required to develop failure under passive conditions are as follows:

Soil type	Wall movement for passive condition, $\Delta x$
Dense sand	$0.005H$
Loose sand	$0.01H$
Stiff clay	$0.01H$
Soft clay	$0.05H$

If the backfill behind the wall is a granular soil (i.e.,  $c' = 0$ ), then, from Eq. (12.59), the passive force per unit length of the wall will be

$$P_p = \frac{1}{2} \gamma H^2 K_p \quad (12.60)$$

### Example 12.13

A 3-m-high wall is shown in Figure 12.20a. Determine the Rankine passive force per unit length of the wall.

#### Solution

For the top layer

$$K_{p(1)} = \tan^2\left(45 + \frac{\phi'_1}{2}\right) = \tan^2(45 + 15) = 3$$

From the bottom soil layer

$$K_{p(2)} = \tan^2\left(45 + \frac{\phi'_2}{2}\right) = \tan^2(45 + 13) = 2.56$$

$$\sigma'_p = \sigma'_o K_p + 2c'\sqrt{K_p}$$

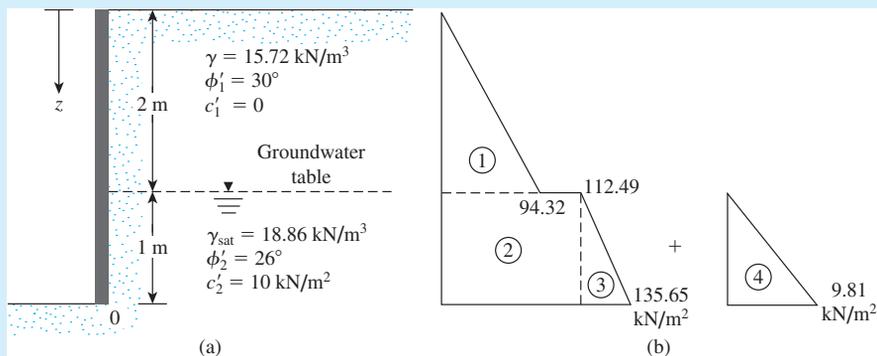


Figure 12.20

where

$\sigma'_o$  = effective vertical stress

at  $z = 0$ ,  $\sigma'_o = 0$ ,  $c'_1 = 0$ ,  $\sigma'_p = 0$

at  $z = 2$  m,  $\sigma'_o = (15.72)(2) = 31.44$  kN/m<sup>2</sup>,  $c'_1 = 0$

So, for the top soil layer

$$\sigma'_p = 31.44K_{p(1)} + 2(0)\sqrt{K_{p(1)}} = 31.44(3) = 94.32 \text{ kN/m}^2$$

At this depth, that is  $z = 2$  m, for the bottom soil layer

$$\begin{aligned}\sigma'_p &= \sigma'_o K_{p(2)} + 2c'_2\sqrt{K_{p(2)}} = 31.44(2.56) + 2(10)\sqrt{2.56} \\ &= 80.49 + 32 = 112.49 \text{ kN/m}^2\end{aligned}$$

Again, at  $z = 3$  m,

$$\begin{aligned}\sigma'_o &= (15.72)(2) + (\gamma_{\text{sat}} - \gamma_w)(1) \\ &= 31.44 + (18.86 - 9.81)(1) = 40.49 \text{ kN/m}^2\end{aligned}$$

Hence,

$$\begin{aligned}\sigma'_p &= \sigma'_o K_{p(2)} + 2c'_2\sqrt{K_{p(2)}} = 40.49(2.56) + (2)(10)(1.6) \\ &= \mathbf{135.65 \text{ kN/m}^2}\end{aligned}$$

Note that, because a water table is present, the hydrostatic stress,  $u$ , also has to be taken into consideration. For  $z = 0$  to 2 m,  $u = 0$ ;  $z = 3$  m,  $u = (1)(\gamma_w) = 9.81$  kN/m<sup>2</sup>.

The passive pressure diagram is plotted in Figure 12.20b. The passive force per unit length of the wall can be determined from the area of the pressure diagram as follows:

Area no.	Area	
1	$(\frac{1}{2})(2)(94.32)$	= 94.32
2	$(112.49)(1)$	= 112.49
3	$(\frac{1}{2})(1)(135.65 - 112.49)$	= 11.58
4	$(\frac{1}{2})(9.81)(1)$	= 4.905
		$P_p \approx 223.3 \text{ kN/m}$

## 12.11 Rankine Passive Earth Pressure—Vertical Backface and Inclined Backfill

### Granular Soil

For a frictionless vertical retaining wall (Figure 12.10) with a *granular backfill* ( $c' = 0$ ), the Rankine passive pressure at any depth can be determined in a manner similar to that done in the case of active pressure in Section 12.4. The pressure is

$$\sigma'_p = \gamma z K_p \quad (12.61)$$

**Table 12.9** Passive Earth Pressure Coefficient  $K_p$  [from Eq. (12.63)]

$\downarrow \alpha$ (deg)	$\phi'$ (deg) $\rightarrow$						
	28	30	32	34	36	38	40
0	2.770	3.000	3.255	3.537	3.852	4.204	4.599
5	2.715	2.943	3.196	3.476	3.788	4.136	4.527
10	2.551	2.775	3.022	3.295	3.598	3.937	4.316
15	2.284	2.502	2.740	3.003	3.293	3.615	3.977
20	1.918	2.132	2.362	2.612	2.886	3.189	3.526
25	1.434	1.664	1.894	2.135	2.394	2.676	2.987

and the passive force is

$$P_p = \frac{1}{2} \gamma H^2 K_p \quad (12.62)$$

where

$$K_p = \cos \alpha \frac{\cos \alpha + \sqrt{\cos^2 \alpha - \cos^2 \phi'}}{\cos \alpha - \sqrt{\cos^2 \alpha - \cos^2 \phi'}} \quad (12.63)$$

As in the case of the active force, the resultant force,  $P_p$ , is inclined at an angle  $\alpha$  with the horizontal and intersects the wall at a distance  $H/3$  from the bottom of the wall. The values of  $K_p$  (the passive earth pressure coefficient) for various values of  $\alpha$  and  $\phi'$  are given in Table 12.9.

### $c' - \phi'$ Soil

If the backfill of the frictionless vertical retaining wall is a  $c - \phi'$  soil (see Figure 12.10), then (Mazindrani and Ganjali, 1997)

$$\sigma'_p = \gamma z K_p = \gamma z K'_p \cos \alpha \quad (12.64)$$

where

$$K'_p = \frac{1}{\cos^2 \phi'} \left\{ \frac{2 \cos^2 \alpha + 2 \left( \frac{c'}{\gamma z} \right) \cos \phi' \sin \phi'}{\sqrt{4 \cos^2 \alpha (\cos^2 \alpha - \cos^2 \phi') + 4 \left( \frac{c'}{\gamma z} \right)^2 \cos^2 \phi' + 8 \left( \frac{c'}{\gamma z} \right) \cos^2 \alpha \sin \phi' \cos \phi'}} \right\} - 1 \quad (12.65)$$

The variation of  $K'_p$  with  $\phi'$ ,  $\alpha$ , and  $c'/\gamma z$  is given in Table 12.10 (Mazindrani and Ganjali, 1997).

**Table 12.10** Values of  $K'_p$ 

$\phi'$ (deg)	$\alpha$ (deg)	$c'/\gamma z$			
		0.025	0.050	0.100	0.500
15	0	1.764	1.829	1.959	3.002
	5	1.716	1.783	1.917	2.971
	10	1.564	1.641	1.788	2.880
	15	1.251	1.370	1.561	2.732
20	0	2.111	2.182	2.325	3.468
	5	2.067	2.140	2.285	3.435
	10	1.932	2.010	2.162	3.339
	15	1.696	1.786	1.956	3.183
25	0	2.542	2.621	2.778	4.034
	5	2.499	2.578	2.737	3.999
	10	2.368	2.450	2.614	3.895
	15	2.147	2.236	2.409	3.726
30	0	3.087	3.173	3.346	4.732
	5	3.042	3.129	3.303	4.674
	10	2.907	2.996	3.174	4.579
	15	2.684	2.777	2.961	4.394

## 12.12 Coulomb's Passive Earth Pressure

Coulomb (1776) also presented an analysis for determining the passive earth pressure (i.e., when the wall moves *into* the soil mass) for walls possessing friction ( $\delta'$  = angle of wall friction) and retaining a granular backfill material similar to that discussed in Section 12.6.

To understand the determination of Coulomb's passive force,  $P_p$ , consider the wall shown in Figure 12.21a. As in the case of active pressure, Coulomb assumed that the potential failure surface in soil is a plane. For a trial failure wedge of soil, such as  $ABC_1$ , the forces per unit length of the wall acting on the wedge are

1. The weight of the wedge,  $W$
2. The resultant,  $R$ , of the normal and shear forces on the plane  $BC_1$ , and
3. The passive force,  $P_p$

Figure 12.21b shows the force triangle at equilibrium for the trial wedge  $ABC_1$ . From this force triangle, the value of  $P_p$  can be determined, because the direction of all three forces and the magnitude of one force are known.

Similar force triangles for several trial wedges, such as  $ABC_1, ABC_2, ABC_3, \dots$ , can be constructed, and the corresponding values of  $P_p$  can be determined. The top part of Figure 12.21a shows the nature of variation of the  $P_p$  values for different wedges. The *minimum* value of  $P_p$  in this diagram is *Coulomb's passive force*, mathematically expressed as

$$P_p = \frac{1}{2}\gamma H^2 K_p \quad (12.66)$$

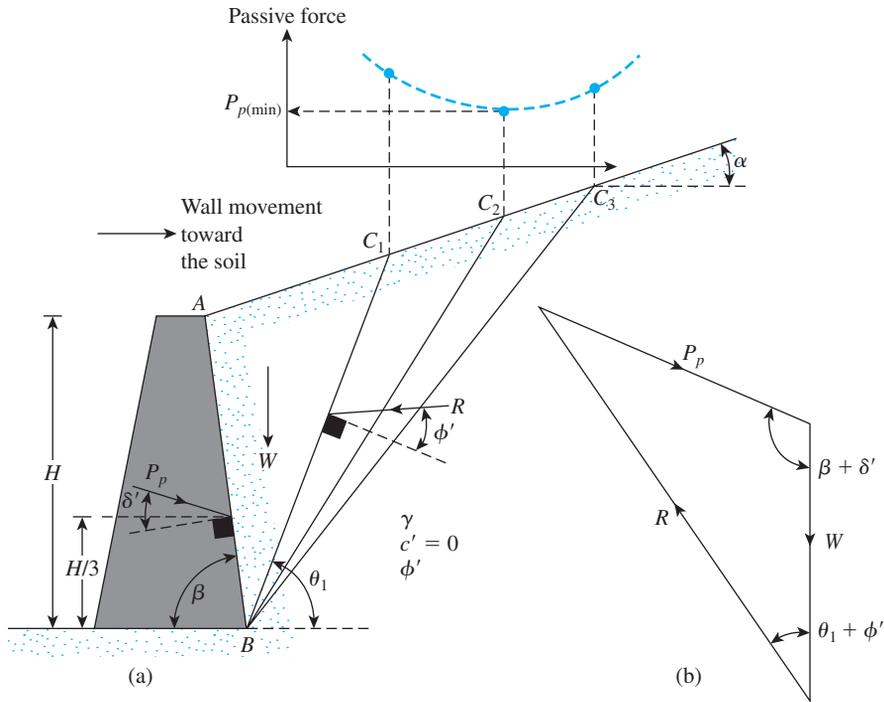


Figure 12.21 Coulomb's passive pressure

where

$$\begin{aligned}
 K_p &= \text{Coulomb's passive pressure coefficient} \\
 &= \frac{\sin^2(\beta - \phi')}{\sin^2\beta \sin(\beta + \delta') \left[ 1 - \sqrt{\frac{\sin(\phi' + \delta') \sin(\phi' + \alpha)}{\sin(\beta + \delta') \sin(\beta + \alpha)}} \right]^2} \quad (12.67)
 \end{aligned}$$

The values of the passive pressure coefficient,  $K_p$ , for various values of  $\phi'$  and  $\delta'$  are given in Table 12.11 ( $\beta = 90^\circ$ ,  $\alpha = 0^\circ$ ).


Note that the resultant passive force,  $P_p$ , will act at a distance  $H/3$  from the bottom of the wall and will be inclined at an angle  $\delta'$  to the normal drawn to the back face of the wall.

**Table 12.11** Values of  $K_p$  [from Eq. (12.67)] for  $\beta = 90^\circ$  and  $\alpha = 0^\circ$ 

$\phi'$ (deg)	$\delta'$ (deg)				
	0	5	10	15	20
15	1.698	1.900	2.130	2.405	2.735
20	2.040	2.313	2.636	3.030	3.525
25	2.464	2.830	3.286	3.855	4.597
30	3.000	3.506	4.143	4.977	6.105
35	3.690	4.390	5.310	6.854	8.324
40	4.600	5.590	6.946	8.870	11.772

## 12.13 Comments on the Failure Surface Assumption for Coulomb's Pressure Calculations

Coulomb's pressure calculation methods for active and passive pressure have been discussed in Sections 12.6 and 12.12. The fundamental assumption in these analyses is the acceptance of *plane failure surface*. However, for walls with friction, this assumption does not hold in practice. The nature of *actual* failure surface in the soil mass for active and passive pressure is shown in Figure 12.22a and b, respectively (for a vertical wall with a horizontal backfill). Note that the failure surface  $BC$  is curved and that the failure surface  $CD$  is a plane.

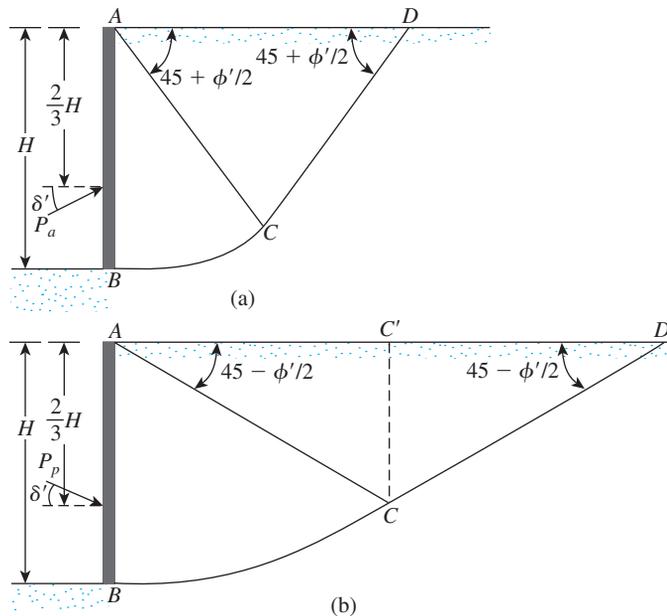

**Figure 12.22** Nature of failure surface in soil with wall friction: (a) active pressure; (b) passive pressure

Although the actual failure surface in soil for the case of active pressure is somewhat different from that assumed in the calculation of the Coulomb pressure, the results are not greatly different. However, in the case of passive pressure, as the value of  $\delta'$  increases, Coulomb's method of calculation gives increasingly erroneous values of  $P_p$ . This factor of error could lead to an unsafe condition because the values of  $P_p$  would become higher than the soil resistance.


Several studies have been conducted to determine the passive force  $P_p$ , assuming that the curved portion  $BC$  in Figure 12.22b is an arc of a circle, an ellipse, or a logarithmic spiral (e.g., Caquot and Kerisel, 1948; Terzaghi and Peck, 1967; Shields and Tolunay, 1973; Zhu and Qian, 2000). Section 12.14 presents the solution of Caquot and Kerisel (1948) which will suffice the purpose of this text.

## 12.14 Caquot and Kerisel Solution for Passive Earth Pressure (Granular Backfill)

Figure 12.23 shows a retaining wall with an inclined back and a horizontal backfill. For this case, the passive pressure per unit length of the wall can be calculated as

$$P_p = \frac{1}{2} \gamma H_1^2 K_p \quad (12.68)$$

where  $K_p$  = the passive pressure coefficient.

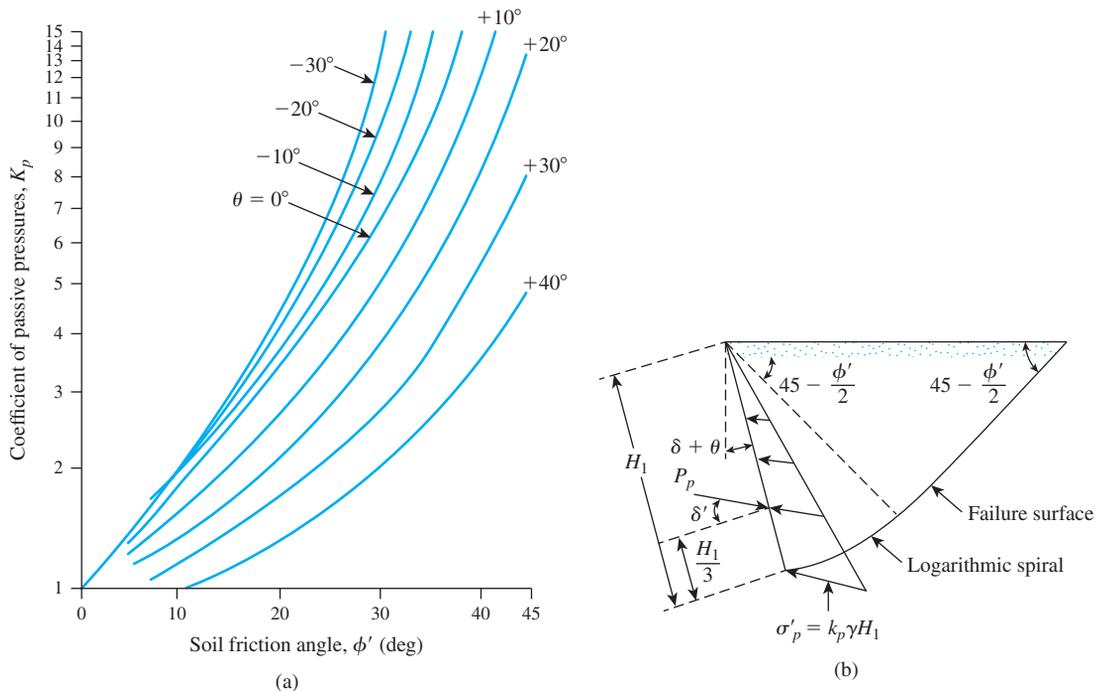


**Figure 12.23** Caquot and Kerisel's solution for  $K_p$  [Eq.(12.68)]

For definition of  $H_1$ , refer to Figure 12.23b. The variation of  $K_p$  determined by Caquot and Kerisel (1948) also is shown in Figure 12.23a. It is important to note that the  $K_p$  values shown are for  $\delta'/\phi' = 1$ . If  $\delta'/\phi' \neq 1$ , the following procedure must be used to determine  $K_p$ .

1. Assume  $\delta'$  and  $\phi'$ .
2. Calculate  $\delta'/\phi'$ .
3. Using the ratio of  $\delta'/\phi'$  (step 2), determine the reduction factor,  $R'$ , from Table 12.12.
4. Determine  $K_p$  from Figure 12.23 for  $\delta'/\phi' = 1$
5. Calculate  $K_p$  for the required  $\delta'/\phi'$  as

$$K_p = (R')[K_{p(\delta'/\phi'=1)}] \quad (12.69)$$

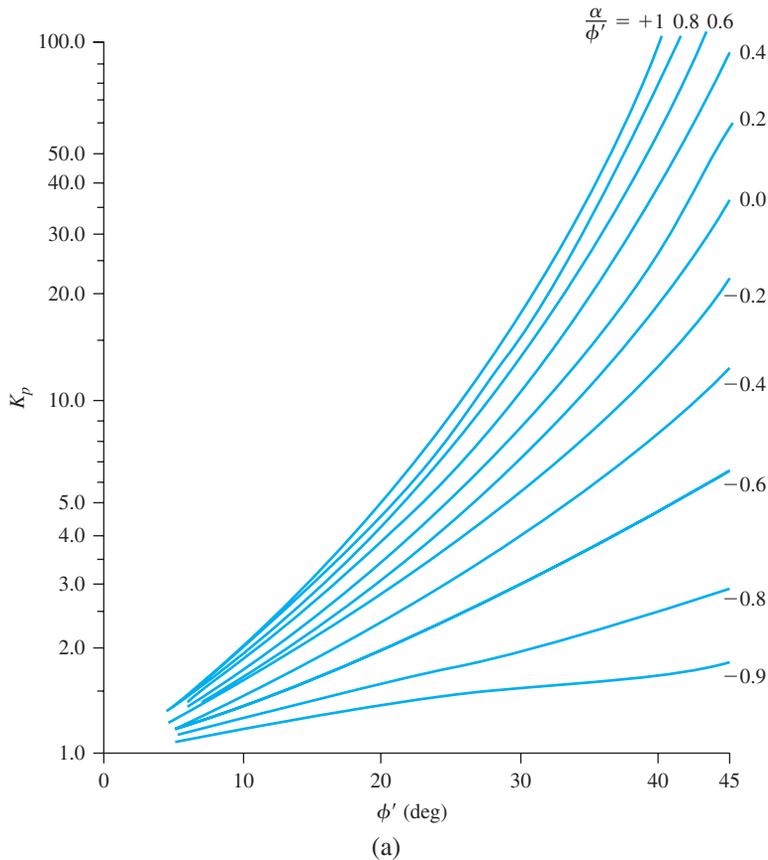

**Figure 12.24** Caquot and Kerisel's solution for  $K_p$  [Eq.(12.70)]

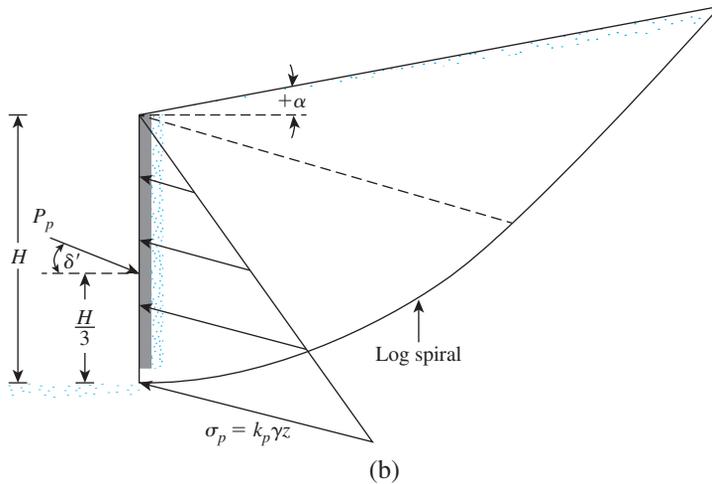


Figure 12.24 (Continued)

Table 12.12 Caquot and Kerisel's Reduction Factor,  $R'$ , for Passive Pressure Calculation

$\phi'$	$\delta'/\phi'$							
	0.7	0.6	0.5	0.4	0.3	0.2	0.1	0.0
10	0.978	0.962	0.946	0.929	0.912	0.898	0.881	0.864
15	0.961	0.934	0.907	0.881	0.854	0.830	0.803	0.775
20	0.939	0.901	0.862	0.824	0.787	0.752	0.716	0.678
25	0.912	0.860	0.808	0.759	0.711	0.666	0.620	0.574
30	0.878	0.811	0.746	0.686	0.627	0.574	0.520	0.467
35	0.836	0.752	0.674	0.603	0.536	0.475	0.417	0.362
40	0.783	0.682	0.592	0.512	0.439	0.375	0.316	0.262
45	0.718	0.600	0.500	0.414	0.339	0.276	0.221	0.174

Figure 12.24b shows a vertical retaining wall with an inclined granular backfill. For this case,

$$P_p = \frac{1}{2} \gamma H^2 K_p \quad (12.70)$$

Caquot and Kerisel's solution (1948) for  $K_p$  to use in Eq. (12.70) is given in Figure 12.24a for  $\delta'/\phi' = 1$ . In order to determine  $K_p$  via Figure 12.24a, the following steps are necessary:

- Step 1. Determine  $\alpha/\phi'$  (note the sign of  $\alpha$ ).
- Step 2. Knowing  $\phi'$  and  $\alpha/\phi'$ , use Figure 12.24a to determine  $K_p$  for  $\delta'/\phi' = 1$ .
- Step 3. Calculate  $\delta'/\phi'$ .
- Step 4. Go to Table 12.12 to determine the reduction factor,  $R'$ .
- Step 5.  $K_p = (R') [K_{p(\delta'/\phi'=1)}]$ . (12.71)

**Example 12.14**

Consider a 3-m-high ( $H$ ) retaining wall a vertical back ( $\theta = 0^\circ$ ) and a horizontal granular backfill. Given:  $\gamma = 15.7 \text{ kN/m}^3$ ,  $\delta' = 15^\circ$ , and  $\phi' = 30^\circ$ . Estimate the passive force,  $P_p$ , by using

- Coulomb's theory
- Caquot and Kerisel's theory

**Solution**

Part a

From Eq. (12.66)

$$P_p = \frac{1}{2} K_p \gamma H^2$$

From Table 12.11, for  $\phi' = 30^\circ$  and  $\delta' = 15^\circ$ , the value of  $K_p$  is 4.977. Thus,

$$P_p = \left(\frac{1}{2}\right)(4.977)(15.7)(3)^2 = \mathbf{351.6 \text{ kN/m}}$$

Part b

From Eq. (12.68), with  $\theta = 0$ ,  $H_1 = H$ ,

$$P_p = \frac{1}{2} \gamma H^2 K_p$$


From Figure 12.23a, for  $\phi' = 30^\circ$  and  $\delta'/\phi' = 1$ , the value of  $K_{p(\delta'/\phi'=1)}$  is about 5.9. Also, from Table 12.12, with  $\phi' = 30^\circ$  and  $\delta'/\phi' = 0.5$ , the value of  $R'$  is 0.746.

Hence,


$$P_p = \frac{1}{2} \gamma H^2 K_p = \frac{1}{2} (15.7)(3)^2 (0.746 \times 5.9) \approx \mathbf{311 \text{ kN/m}}$$

## 12.15 Passive Pressure under Earthquake Conditions

The relationship for passive earth pressure on a retaining wall with a granular backfill and under earthquake conditions was evaluated by Subba Rao and Choudhury (2005) by the method of limit equilibrium using the pseudo-static approach. Figure 12.25 shows the

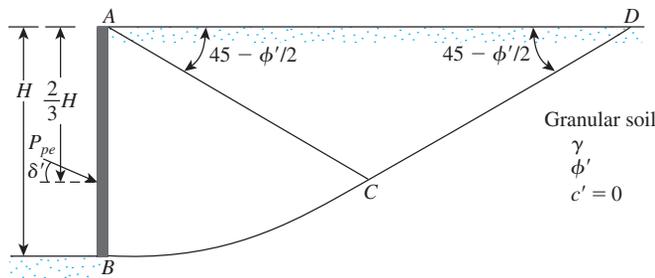

**Figure 12.25** Nature of failure surface in soil considered in the analysis to determine  $P_{pe}$

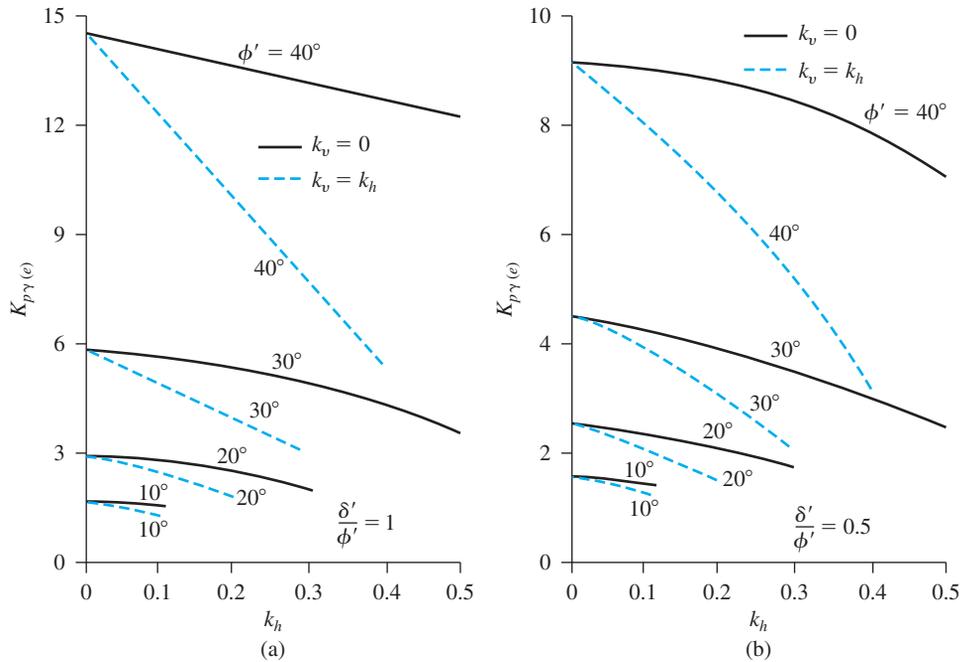

**Figure 12.26** Variation of  $K_{p\gamma(e)}$ ; (a)  $\frac{\delta'}{\phi'} = 1$ ; (b)  $\frac{\delta'}{\phi'} = 0.5$

nature of failure surface in soil considered in this analysis. The passive pressure,  $P_{pe}$ , can be expressed as

$$P_{pe} = \left[ \frac{1}{2} \gamma H^2 K_{p\gamma(e)} \right] \frac{1}{\cos \delta'} \quad (12.72)$$

where  $K_{p\gamma(e)}$  = passive earth-pressure coefficient in the normal direction to the wall.

$K_{p\gamma(e)}$  is a function of  $k_h$  and  $k_v$  that are, respectively, coefficient of horizontal and vertical acceleration due to earthquake. The variations of  $K_{p\gamma(e)}$  for  $\delta'/\phi' = 0.5$  and 1 are shown in Figures 12.26a and b. The passive pressure  $P_{pe}$  will be inclined at an angle  $\delta'$  to the back face of the wall and will act at a distance of  $H/3$  above the bottom of the wall.

### Example 12.15

Refer to Example 12.14. For an earthquake condition with  $k_v = 0$  and  $k_k = 0.2$ , estimate the passive pressure  $P_{pe}$  per unit length of the wall.

#### Solution

For this case,  $\phi' = 30^\circ$ ,  $\delta'/\phi' = 0.5$ ,  $k_v = 0$ ,  $k_k = 0.2$ . From Figure 12.26b,  $K_{p\gamma(e)} \approx 4$ . From Eq. (12.72),

$$P_{pe} = \left[ \frac{1}{2} \gamma H^2 K_{p\gamma(e)} \right] \frac{1}{\cos \delta'} = \left[ \left( \frac{1}{2} \right) (15.7)(3)^2(4) \right] \frac{1}{\cos 15} = \mathbf{292.6 \text{ kN/m}} \quad \blacksquare$$

## Problems

- 12.1** Refer to Figure 12.3a. Given:  $H = 12$  ft,  $q = 0$ ,  $\gamma = 108$  lb/ft<sup>3</sup>,  $c' = 0$ , and  $\phi' = 30^\circ$ . Determine the at-rest lateral earth force per foot length of the wall. Also, find the location of the resultant. Use Eq. (12.4) and  $\text{OCR} = 2$ .
- 12.2** Use Eq. (12.3), Figure P12.2, and the following values to determine the at-rest lateral earth force per unit length of the wall. Also find the location of the resultant.  $H = 5$  m,  $H_1 = 2$  m,  $H_2 = 3$  m,  $\gamma = 15.5$  kN/m<sup>3</sup>,  $\gamma_{\text{sat}} = 18.5$  kN/m<sup>3</sup>,  $\phi' = 34^\circ$ ,  $c' = 0$ ,  $q = 20$  kN/m<sup>2</sup>, and  $\text{OCR} = 1$ .
- 12.3** Refer to Figure 12.6a. Given the height of the retaining wall,  $H$  is 18 ft; the backfill is a saturated clay with  $\phi = 0^\circ$ ,  $c = 500$  lb/ft<sup>2</sup>,  $\gamma_{\text{sat}} = 120$  lb/ft<sup>3</sup>,
- Determine the Rankine active pressure distribution diagram behind the wall.
  - Determine the depth of the tensile crack,  $z_c$ .
  - Estimate the Rankine active force per foot length of the wall before and after the occurrence of the tensile crack.
- 12.4** A vertical retaining wall (Figure 12.6a) is 7 m high with a horizontal backfill. For the backfill, assume that  $\gamma = 16.5$  kN/m<sup>3</sup>,  $\phi' = 26^\circ$ , and  $c' = 18$  kN/m<sup>2</sup>. Determine the Rankine active force per unit length of the wall after the occurrence of the tensile crack.
- 12.5** Refer to Problem 12.2. For the retaining wall, determine the Rankine active force per unit length of the wall and the location of the line of action of the resultant.
- 12.6** Refer to Figure 12.10. For the retaining wall,  $H = 8$  m,  $\phi' = 36^\circ$ ,  $\alpha = 10^\circ$ ,  $\gamma = 17$  kN/m<sup>3</sup>, and  $c' = 0$ .
- Determine the intensity of the Rankine active force at  $z = 2$  m, 4 m, and 6 m.
  - Determine the Rankine active force per meter length of the wall and also the location and direction of the resultant.
- 12.7** Refer to Figure 12.10. Given:  $H = 7$  m,  $\gamma = 18$  kN/m<sup>3</sup>,  $\phi' = 25^\circ$ ,  $c' = 12$  kN/m<sup>2</sup>, and  $\alpha = 10^\circ$ . Calculate the Rankine active force per unit length of the wall after the occurrence of the tensile crack.

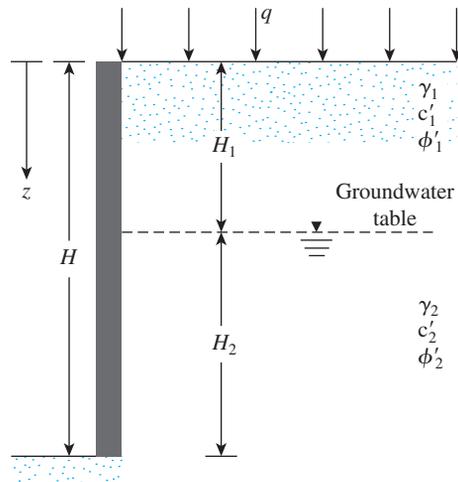


Figure P12.2

- 12.8** Refer to Figure 12.12a. Given:  $H = 4$  m,  $\gamma = 16.5$  kN/m<sup>3</sup>,  $\phi' = 30^\circ$ ,  $c' = 0$ , and  $\beta = 85^\circ$ . Determine the Coulomb's active force per meter length of the wall and the location and direction of the resultant for the following cases:
- $\alpha = 10^\circ$  and  $\delta' = 20^\circ$
  - $\alpha = 20^\circ$  and  $\delta' = 15^\circ$
- 12.9** Refer to Figure 12.13a. Given  $H = 4$  m,  $\alpha = 0$ ,  $\beta = 85^\circ$ ,  $\gamma = 17$  kN/m<sup>3</sup>,  $c' = 0$ ,  $\phi' = 36^\circ$ ,  $\delta'/\phi' = 0.5$ , and  $q = 30$  kN/m<sup>2</sup>. Determine the Coulomb's active force per unit length of the wall.
- 12.10** Refer to Figure 12.14b. Given  $H = 3.3$  m,  $a' = 1$  m,  $b' = 1.5$  m, and  $q = 25$  kN/m<sup>2</sup>. Determine the lateral force per unit length of the unyielding wall caused by the surcharge loading only.
- 12.11** Refer to Figure 12.15. Here,  $H = 5$  m,  $\gamma = 18.2$  kN/m<sup>3</sup>,  $\phi' = 30^\circ$ ,  $\delta' = 20^\circ$ ,  $c' = 0$ ,  $\alpha = 10^\circ$ , and  $\beta = 85^\circ$ . Determine the Coulomb's active force for earthquake conditions ( $P_{ae}$ ) per meter length of the wall and the location and direction of the resultant. Given  $k_h = 0.2$  and  $k_v = 0$ .
- 12.12** For a retaining wall with a vertical back and horizontal backfill with a  $c' - \phi'$  soil, the following are given:
- $$\begin{array}{ll} H = 10 \text{ ft} & \gamma = 115 \text{ lb/ft}^3 \\ \phi' = 25^\circ & k_h = 0.2 \\ c' = 113 \text{ lb/ft}^2 & k_v = 0 \end{array}$$

Determine the magnitude of active force  $P_{ae}$  on the wall.

- 12.13** Refer to Problem 12.3.
- Draw the Rankine passive pressure distribution diagram behind the wall.
  - Estimate the Rankine passive force per foot length of the wall and also the location of the resultant.
- 12.14** In Figure 12.24, which shows a vertical retaining wall with a granular backfill, let  $H = 4$  m,  $\alpha = 17.5^\circ$ ,  $\gamma = 16.5$  kN/m<sup>3</sup>,  $\phi' = 35^\circ$ , and  $\delta' = 10^\circ$ . Based on Caquot and Kerisel's solution, what would be the passive force per meter length of the wall?
- 12.15** Consider a 4-m-high retaining wall with a vertical back and horizontal granular backfill, as shown in Figure 12.25. Given:  $\gamma = 18$  kN/m<sup>3</sup>,  $\phi' = 40^\circ$ ,  $c' = 0$ ,  $\delta' = 20^\circ$ ,  $k_v = 0$ , and  $k_h = 0.2$ . Determine the passive force  $P_{pe}$  per unit length of the wall taking the earthquake effect into consideration.

## References

- CHU, S. C. (1991). "Rankine Analysis of Active and Passive Pressures on Dry Sand," *Soils and Foundations*, Vol. 31, No. 4, pp. 115–120.
- COULOMB, C. A. (1776). *Essai sur une Application des Règles de Maximis et Minimum à quelques Problemes de Statique Relatifs à l'Architecture*, Mem. Acad. Roy. des Sciences, Paris, Vol. 3, p. 38.
- JAKY, J. (1944). "The Coefficient of Earth Pressure at Rest," *Journal for the Society of Hungarian Architects and Engineers*, October, pp. 355–358.
- JARQUIO, R. (1981). "Total Lateral Surcharge Pressure Due to Strip Load," *Journal of the Geotechnical Engineering Division*, American Society of Civil Engineers, Vol. 107, No. GT10, pp. 1424–1428.

- MAYNE, P. W. and KULHAWY, F. H. (1982). " $K_o$ -OCR Relationships in Soil," *Journal of the Geotechnical Engineering Division*, ASCE, Vol. 108, No. GT6, pp. 851–872.
- MAZINDRANI, Z. H. and GANJALI, M. H. (1997). "Lateral Earth Pressure Problem of Cohesive Backfill with Inclined Surface," *Journal of Geotechnical and Geoenvironmental Engineering*, ASCE, Vol. 123, No. 2, pp. 110–112.
- SEED, H. B. and WHITMAN, R. V. (1970). "Design of Earth Retaining Structures for Dynamic Loads," *Proceedings, Specialty Conference on Lateral Stresses in the Ground and Design of Earth Retaining Structures*, American Society of Civil Engineers, pp. 103–147.
- SHIELDS, D. H. and TOLUNAY, A. Z. (1973). "Passive Pressure Coefficients by Method of Slices," *Journal of the Soil Mechanics and Foundations Division*, ASCE, Vol. 99, No. SM12, pp. 1043–1053.
- SHUKLA, S. K., GUPTA, S. K., and SIVAKUGAN, N. (2009). "Active Earth Pressure on Retaining Wall for  $c$ - $\phi$  Soil Backfill Under Seismic Loading Condition," *Journal of Geotechnical and Geoenvironmental Engineering*, ASCE, Vol. 135, No. 5, 690–696.
- SUBBA RAO, K. S. and CHOUDHURY, D. (2005). "Seismic Passive Earth Pressures in Soil," *Journal of Geotechnical and Geoenvironmental Engineering*, ASCE, Vol. 131, No. 1, pp. 131–135.
- TERZAGHI, K. and PECK, R. B. (1967). *Soil Mechanics in Engineering Practice*, 2nd ed. New York.
- ZHU, D. Y. and QIAN, Q. (2000). "Determination of Passive Earth Pressure Coefficient by the Method of Triangular Slices," *Canadian Geotechnical Journal*, Vol. 37, No. 2, pp. 485–491.

# 13 Retaining Walls



## 13.1 Introduction

In Chapter 12, you were introduced to various theories of lateral earth pressure. Those theories will be used in this chapter to design various types of retaining walls. In general, retaining walls can be divided into two major categories: (a) conventional retaining walls and (b) mechanically stabilized earth walls.

Conventional retaining walls can generally be classified into four varieties:

1. Gravity retaining walls
2. Semigravity retaining walls
3. Cantilever retaining walls
4. Counterfort retaining walls


*Gravity retaining walls* (Figure 13.1a) are constructed with plain concrete or stone masonry. They depend for stability on their own weight and any soil resting on the masonry. This type of construction is not economical for high walls.

In many cases, a small amount of steel may be used for the construction of gravity walls, thereby minimizing the size of wall sections. Such walls are generally referred to as *semigravity walls* (Figure 13.1b).

*Cantilever retaining walls* (Figure 13.1c) are made of reinforced concrete that consists of a thin stem and a base slab. This type of wall is economical to a height of about 8 m (25 ft). Figure 13.2 shows a cantilever retaining wall under construction.

*Counterfort retaining walls* (Figure 13.1d) are similar to cantilever walls. At regular intervals, however, they have thin vertical concrete slabs known as *counterforts* that tie the wall and the base slab together. The purpose of the counterforts is to reduce the shear and the bending moments.

To design retaining walls properly, an engineer must know the basic parameters—the *unit weight*, *angle of friction*, and *cohesion*—of the soil retained behind the wall and the soil below the base slab. Knowing the properties of the soil behind the wall enables the engineer to determine the lateral pressure distribution that has to be designed for.

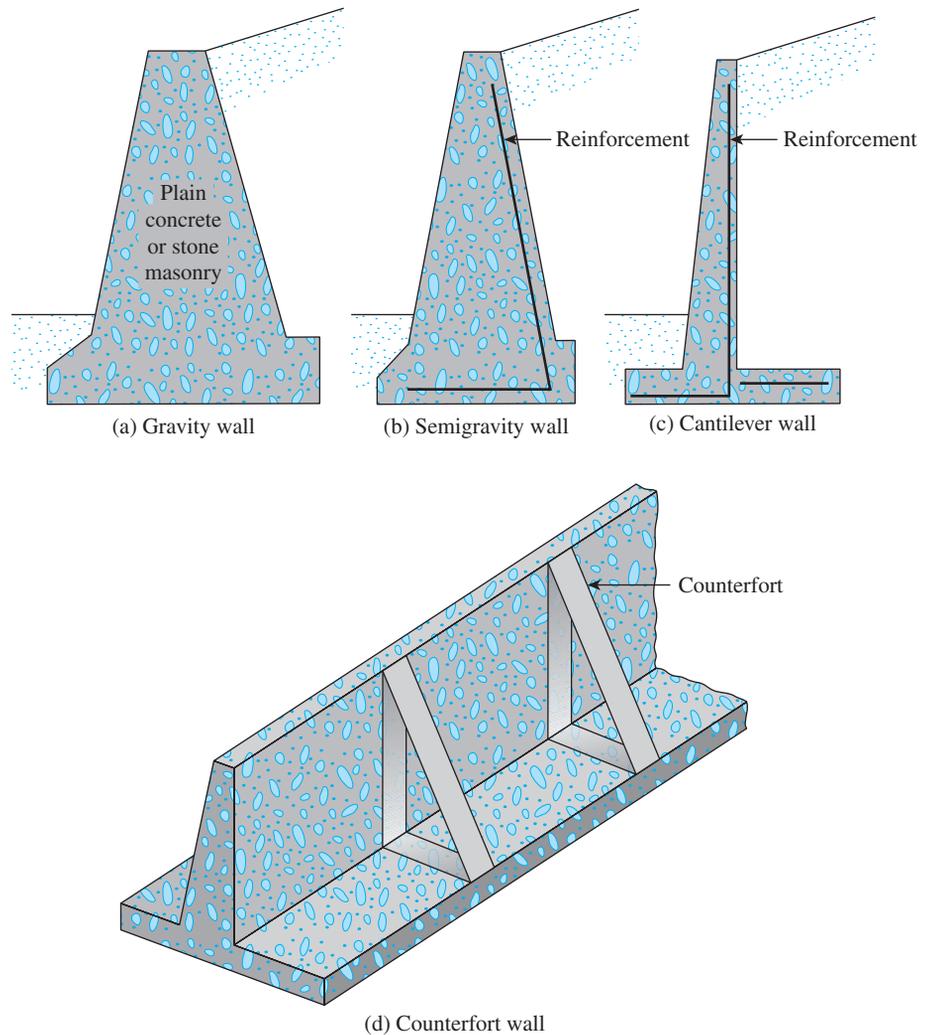

**Figure 13.1** Types of retaining wall

There are two phases in the design of a conventional retaining wall. First, with the lateral earth pressure known, the structure as a whole is checked for *stability*. The structure is examined for possible *overturning*, *sliding*, and *bearing capacity* failures. Second, each component of the structure is checked for *strength*, and the *steel reinforcement* of each component is determined.

This chapter presents the procedures for determining the stability of the retaining wall. Checks for strength can be found in any textbook on reinforced concrete.

Some retaining walls have their backfills stabilized mechanically by including reinforcing elements such as metal strips, bars, welded wire mats, geotextiles, and



**Figure 13.2** A cantilever retaining wall under construction (Courtesy of Dharma Shakya, Geotechnical Solutions, Inc., Irvine, California)

geogrids. These walls are relatively flexible and can sustain large horizontal and vertical displacements without much damage.

---


## Gravity and Cantilever Walls

### 13.2 Proportioning Retaining Walls

In designing retaining walls, an engineer must assume some of their dimensions. Called *proportioning*, such assumptions allow the engineer to check trial sections of the walls for stability. If the stability checks yield undesirable results, the sections can be changed and rechecked. Figure 13.3 shows the general proportions of various retaining-wall components that can be used for initial checks.

Note that the top of the stem of any retaining wall should not be less than about 0.3 m. ( $\approx 12$  in.) for proper placement of concrete. The depth,  $D$ , to the bottom of the base slab should be a minimum of 0.6 m ( $\approx 2$  ft). However, the bottom of the base slab should be positioned below the seasonal frost line.

For counterfort retaining walls, the general proportion of the stem and the base slab is the same as for cantilever walls. However, the counterfort slabs may be about 0.3 m ( $\approx 12$  in.) thick and spaced at center-to-center distances of  $0.3H$  to  $0.7H$ .

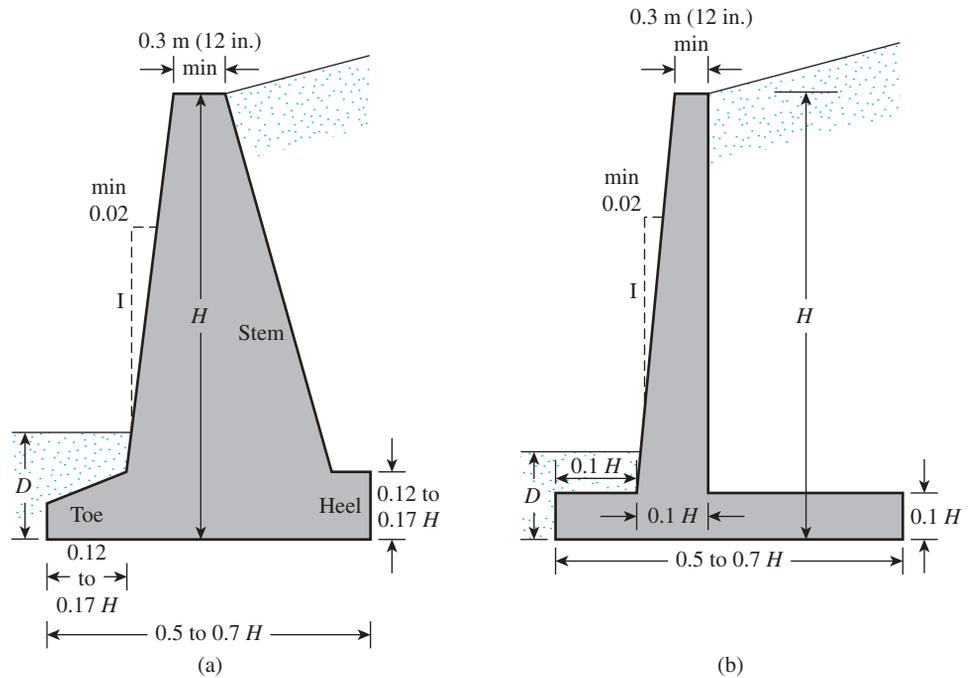



**Figure 13.3** Approximate dimensions for various components of retaining wall for initial stability checks: (a) gravity wall; (b) cantilever wall

## 13.3 Application of Lateral Earth Pressure Theories to Design

The fundamental theories for calculating lateral earth pressure were presented in Chapter 12. To use these theories in design, an engineer must make several simple assumptions. In the case of cantilever walls, the use of the Rankine earth pressure theory for stability checks involves drawing a vertical line  $AB$  through point  $A$ , located at the edge of the heel of the base slab in Figure 13.4a. The Rankine active condition is assumed to exist along the vertical plane  $AB$ . Rankine active earth pressure equations may then be used to calculate the lateral pressure on the face  $AB$  of the wall. In the analysis of the wall's stability, the force  $P_{a(\text{Rankine})}$ , the weight of soil above the heel, and the weight  $W_c$  of the concrete all should be taken into consideration. The assumption for the development of Rankine active pressure along the soil face  $AB$  is theoretically correct if the shear zone bounded by the line  $AC$  is not obstructed by the stem of the wall. The angle,  $\eta$ , that the line  $AC$  makes with the vertical is

$$\eta = 45 + \frac{\alpha}{2} - \frac{\phi'}{2} - \frac{1}{2} \sin^{-1} \left( \frac{\sin \alpha}{\sin \phi'} \right) \quad (13.1)$$

A similar type of analysis may be used for gravity walls, as shown in Figure 13.4b. However, *Coulomb's active earth pressure theory* also may be used, as shown in Figure 13.4c. If it is used, the only forces to be considered are  $P_{a(\text{Coulomb})}$  and the weight of the wall,  $W_c$ .

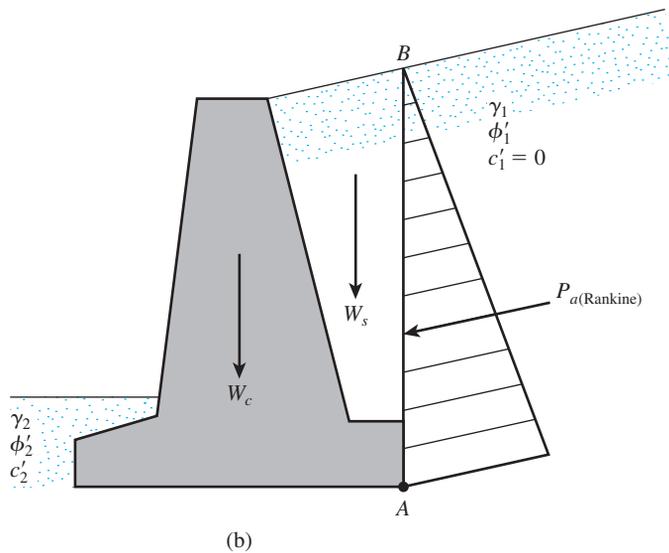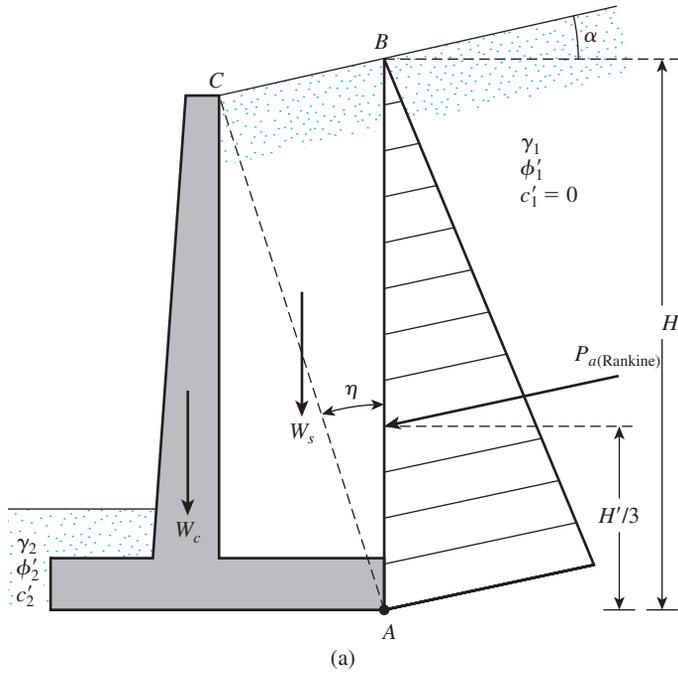

**Figure 13.4** Assumption for the determination of lateral earth pressure: (a) cantilever wall; (b) and (c) gravity wall

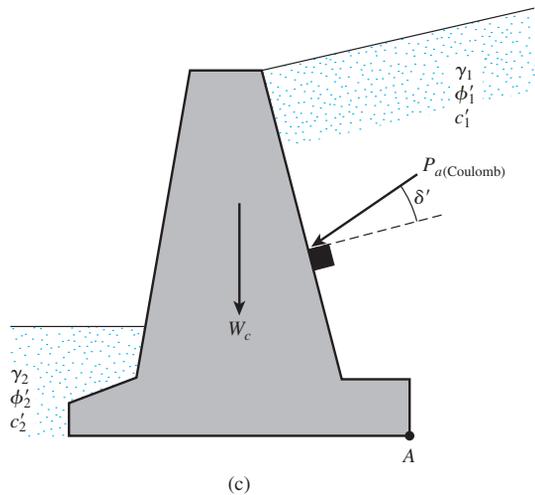


Figure 13.4 (continued)

If Coulomb's theory is used, it will be necessary to know the range of the wall friction angle  $\delta'$  with various types of backfill material. Following are some ranges of wall friction angle for masonry or mass concrete walls:

Backfill material	Range of $\delta'$ (deg)
Gravel	27–30
Coarse sand	20–28
Fine sand	15–25
Stiff clay	15–20
Silty clay	12–16

In the case of ordinary retaining walls, water table problems and hence hydrostatic pressure are not encountered. Facilities for drainage from the soils that are retained are always provided.

## 13.4 Stability of Retaining Walls

A retaining wall may fail in any of the following ways:

- It may overturn about its toe. (See Figure 13.5a.)
- It may *slide* along its base. (See Figure 13.5b.)
- It may fail due to the loss of *bearing capacity* of the soil supporting the base. (See Figure 13.5c.)
- It may undergo deep-seated shear failure. (See Figure 13.5d.)
- It may go through excessive settlement.

The checks for stability against overturning, sliding, and bearing capacity failure will be described in Sections 13.5, 13.6, and 13.7. The principles used to estimate settlement were covered in Chapter 7 and will not be discussed further. When a weak soil layer is located at a shallow depth—that is, within a depth of 1.5 times the width



depth of about 1.5 times the width of the base slab of the retaining wall. In such cases, the critical cylindrical failure surface  $abc$  has to be determined by trial and error, using various centers such as  $O$ . The failure surface along which the minimum factor of safety is obtained is the *critical surface of sliding*. For the backfill slope with  $\alpha$  less than about  $10^\circ$ , the critical failure circle apparently passes through the edge of the heel slab (such as  $def$  in the figure). In this situation, the minimum factor of safety also has to be determined by trial and error by changing the center of the trial circle.

## 13.5 Check for Overturning

Figure 13.7 shows the forces acting on a cantilever and a gravity retaining wall, based on the assumption that the Rankine active pressure is acting along a vertical plane  $AB$  drawn through the heel of the structure.  $P_p$  is the Rankine passive pressure; recall that its magnitude is [from Eq. (12.59)].

$$P_p = \frac{1}{2}K_p\gamma_2D^2 + 2c_2'\sqrt{K_p}D$$

where

$\gamma_2$  = unit weight of soil in front of the heel and under the base slab  
 $K_p$  = Rankine passive earth pressure coefficient =  $\tan^2(45 + \phi_2'/2)$   
 $c_2'$ ,  $\phi_2'$  = cohesion and effective soil friction angle, respectively

The factor of safety against overturning about the toe—that is, about point  $C$  in Figure 13.7—may be expressed as

$$FS_{(\text{overturning})} = \frac{\sum M_R}{\sum M_o} \quad (13.2)$$

where

$\sum M_o$  = sum of the moments of forces tending to overturn about point  $C$   
 $\sum M_R$  = sum of the moments of forces tending to resist overturning about point  $C$


The overturning moment is

$$\sum M_o = P_h \left( \frac{H'}{3} \right) \quad (13.3)$$

where  $P_h = P_a \cos \alpha$ .

To calculate the resisting moment,  $\sum M_R$  (neglecting  $P_p$ ), a table such as Table 13.1 can be prepared. The weight of the soil above the heel and the weight of the concrete (or masonry) are both forces that contribute to the resisting moment. Note that the force  $P_v$  also contributes to the resisting moment.  $P_v$  is the vertical component of the active force  $P_a$ , or

$$P_v = P_a \sin \alpha$$

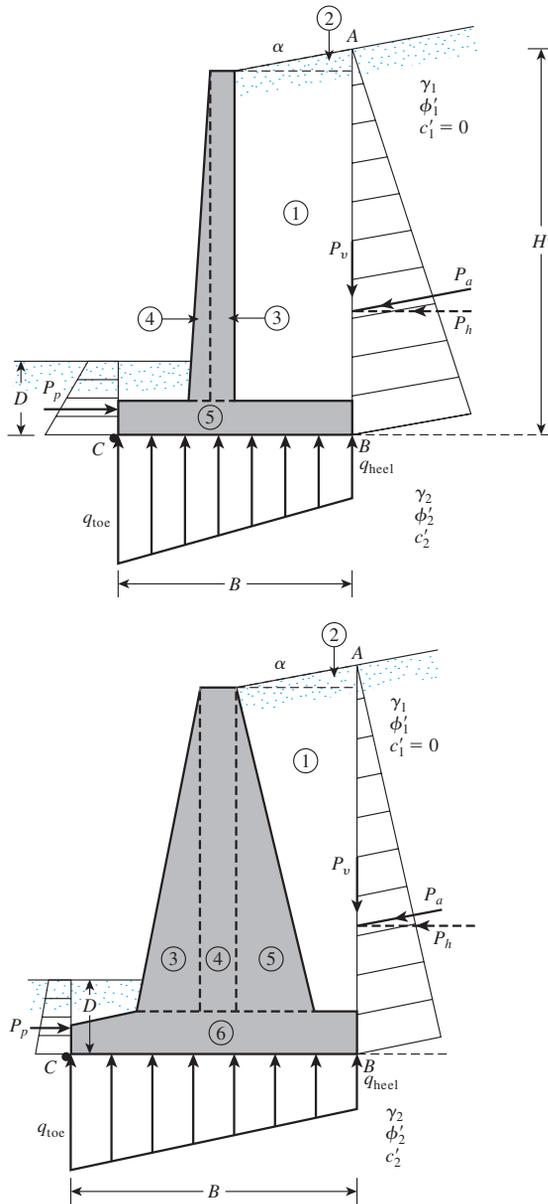

**Figure 13.7** Check for overturning, assuming that the Rankine pressure is valid

The moment of the force  $P_v$  about C is

$$M_v = P_v B = P_a \sin \alpha B \tag{13.4}$$

where  $B$  = width of the base slab.

Once  $\Sigma M_R$  is known, the factor of safety can be calculated as

$$FS_{(\text{overturning})} = \frac{M_1 + M_2 + M_3 + M_4 + M_5 + M_6 + M_v}{P_a \cos \alpha (H'/3)} \tag{13.5}$$

**Table 13.1** Procedure for Calculating  $\Sigma M_R$ 

Section (1)	Area (2)	Weight/unit length of wall (3)	Moment arm measured from C (4)	Moment about C (5)
1	$A_1$	$W_1 = \gamma_1 \times A_1$	$X_1$	$M_1$
2	$A_2$	$W_2 = \gamma_1 \times A_2$	$X_2$	$M_2$
3	$A_3$	$W_3 = \gamma_c \times A_3$	$X_3$	$M_3$
4	$A_4$	$W_4 = \gamma_c \times A_4$	$X_4$	$M_4$
5	$A_5$	$W_5 = \gamma_c \times A_5$	$X_5$	$M_5$
6	$A_6$	$W_6 = \gamma_c \times A_6$	$X_6$	$M_6$
		$P_v$	$B$	$M_v$
		$\Sigma V$		$\Sigma M_R$

(Note:  $\gamma_1$  = unit weight of backfill

$\gamma_c$  = unit weight of concrete

$X_i$  = horizontal distance between C and the centroid of the section)

The usual minimum desirable value of the factor of safety with respect to overturning is 2 to 3.

Some designers prefer to determine the factor of safety against overturning with the formula

$$FS_{(\text{overturning})} = \frac{M_1 + M_2 + M_3 + M_4 + M_5 + M_6}{P_a \cos \alpha (H'/3) - M_v} \quad (13.6)$$

## 13.6 Check for Sliding along the Base

The factor of safety against sliding may be expressed by the equation

$$FS_{(\text{sliding})} = \frac{\Sigma F_{R'}}{\Sigma F_d} \quad (13.7)$$

where

$\Sigma F_{R'}$  = sum of the horizontal resisting forces

$\Sigma F_d$  = sum of the horizontal driving forces

Figure 13.8 indicates that the shear strength of the soil immediately below the base slab may be represented as

$$s = \sigma' \tan \delta' + c'_a$$


where

$\delta'$  = angle of friction between the soil and the base slab

$c'_a$  = adhesion between the soil and the base slab

Thus, the maximum resisting force that can be derived from the soil per unit length of the wall along the bottom of the base slab is

$$R' = s(\text{area of cross section}) = s(B \times 1) = B\sigma' \tan \delta' + Bc'_a$$

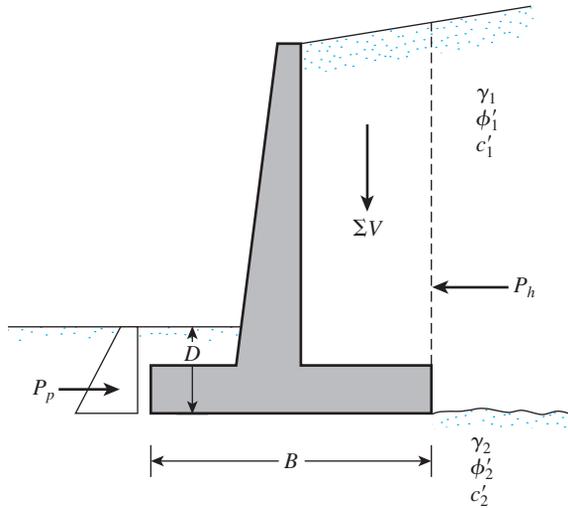

**Figure 13.8** Check for sliding along the base

However,

$$B\sigma' = \text{sum of the vertical force} = \Sigma V \text{ (see Table 13.1)}$$

so

$$R' = (\Sigma V) \tan \delta' + Bc'_a$$

Figure 13.8 shows that the passive force  $P_p$  is also a horizontal resisting force. Hence,

$$\Sigma F_{R'} = (\Sigma V) \tan \delta' + Bc'_a + P_p \quad (13.8)$$

The only horizontal force that will tend to cause the wall to slide (a *driving force*) is the horizontal component of the active force  $P_a$ , so

$$\Sigma F_d = P_a \cos \alpha \quad (13.9)$$


Combining Eqs. (13.7), (13.8), and (13.9) yields

$$\text{FS}_{(\text{sliding})} = \frac{(\Sigma V) \tan \delta' + Bc'_a + P_p}{P_a \cos \alpha} \quad (13.10)$$

A minimum factor of safety of 1.5 against sliding is generally required.

In many cases, the passive force  $P_p$  is ignored in calculating the factor of safety with respect to sliding. In general, we can write  $\delta' = k_1 \phi'_2$  and  $c'_a = k_2 c'_2$ . In most cases,  $k_1$  and  $k_2$  are in the range from  $\frac{1}{2}$  to  $\frac{2}{3}$ . Thus,

$$\text{FS}_{(\text{sliding})} = \frac{(\Sigma V) \tan (k_1 \phi'_2) + Bk_2 c'_2 + P_p}{P_a \cos \alpha} \quad (13.11)$$

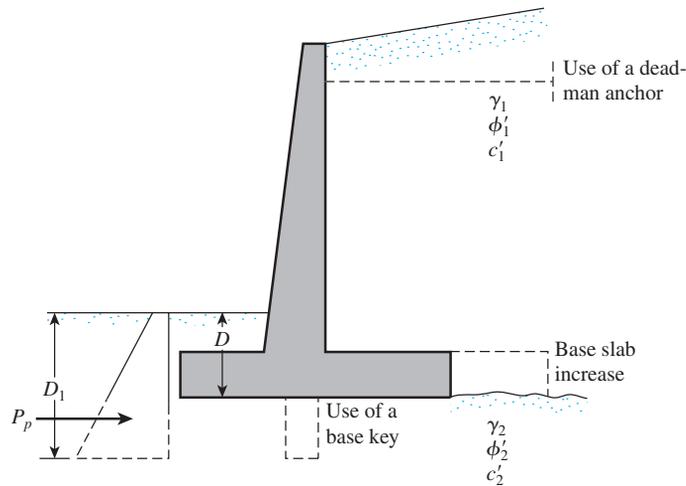

**Figure 13.9** Alternatives for increasing the factor of safety with respect to sliding

If the desired value of  $FS_{(\text{sliding})}$  is not achieved, several alternatives may be investigated (see Figure 13.9):

- Increase the width of the base slab (i.e., the heel of the footing).
- Use a key to the base slab. If a key is included, the passive force per unit length of the wall becomes

$$P_p = \frac{1}{2} \gamma_2 D_1^2 K_p + 2c'_2 D_1 \sqrt{K_p}$$

$$\text{where } K_p = \tan^2 \left( 45 + \frac{\phi'_2}{2} \right).$$

- Use a *deadman anchor* at the stem of the retaining wall.
- Another possible way to increase the value of  $FS_{(\text{sliding})}$  is to consider reducing the value of  $P_a$  [see Eq. (13.11)]. One possible way to do so is to use the method developed by Elman and Terry (1988). The discussion here is limited to the case in which the retaining wall has a horizontal granular backfill (Figure 13.10). In Figure 13.10, the active force,  $P_a$ , is horizontal ( $\alpha = 0$ ) so that

$$P_a \cos \alpha = P_h = P_a$$

and

$$P_a \sin \alpha = P_v = 0$$

However,

$$P_a = P_{a(1)} + P_{a(2)} \quad (13.12)$$

The magnitude of  $P_{a(2)}$  can be reduced if the heel of the retaining wall is sloped as shown in Figure 13.10. For this case,

$$P_a = P_{a(1)} + AP_{a(2)} \quad (13.13)$$

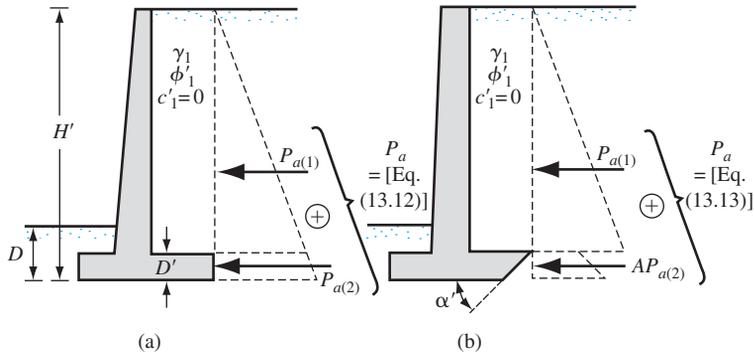


Figure 13.10 Retaining wall with sloped heel

The magnitude of  $A$ , as shown in Table 13.2, is valid for  $\alpha' = 45^\circ$ . However note that in Figure 13.10a

$$P_{a(1)} = \frac{1}{2} \gamma_1 K_a (H' - D')^2$$

and

$$P_a = \frac{1}{2} \gamma_1 K_a H'^2$$

Hence,

$$P_{a(2)} = \frac{1}{2} \gamma_1 K_a [H'^2 - (H' - D')^2]$$

So, for the active pressure diagram shown in Figure 13.10b,

$$P_a = \frac{1}{2} \gamma_1 K_a (H' - D')^2 + \frac{A}{2} \gamma_1 K_a [H'^2 - (H' - D')^2] \quad (13.14)$$

Sloping the heel of a retaining wall can thus be extremely helpful in some cases.

Table 13.2 Variation of  $A$  with  $\phi'_1$  (for  $\alpha' = 45^\circ$ )

Soil friction angle, $\phi'_1$ (deg)	$A$
20	0.28
25	0.14
30	0.06
35	0.03
40	0.018

## 13.7 Check for Bearing Capacity Failure

The vertical pressure transmitted to the soil by the base slab of the retaining wall should be checked against the ultimate bearing capacity of the soil. The nature of variation of the vertical pressure transmitted by the base slab into the soil is shown in Figure 13.11. Note that  $q_{\text{toe}}$  and  $q_{\text{heel}}$  are the *maximum* and the *minimum* pressures occurring at the ends of the toe and heel sections, respectively. The magnitudes of  $q_{\text{toe}}$  and  $q_{\text{heel}}$  can be determined in the following manner:

The sum of the vertical forces acting on the base slab is  $\Sigma V$  (see column 3 of Table 13.1), and the horizontal force  $P_h$  is  $P_a \cos \alpha$ . Let


$$\mathbf{R} = \Sigma \mathbf{V} + \mathbf{P}_h \quad (13.15)$$

be the resultant force. The net moment of these forces about point  $C$  in Figure 13.11 is

$$M_{\text{net}} = \Sigma M_R - \Sigma M_o \quad (13.16)$$

Note that the values of  $\Sigma M_R$  and  $\Sigma M_o$  were previously determined. [See Column 5 of Table 13.1 and Eq. (13.3)]. Let the line of action of the resultant  $R$  intersect the base slab at  $E$ . Then the distance

$$\overline{CE} = \bar{X} = \frac{M_{\text{net}}}{\Sigma V} \quad (13.17)$$

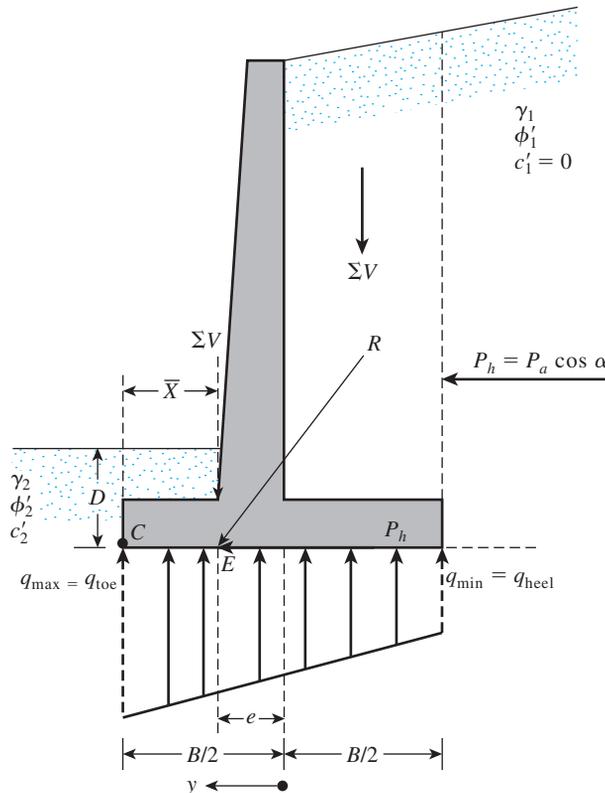

**Figure 13.11** Check for bearing capacity failure

Hence, the eccentricity of the resultant  $R$  may be expressed as

$$e = \frac{B}{2} - \overline{CE} \quad (13.18)$$

The pressure distribution under the base slab may be determined by using simple principles from the mechanics of materials. First, we have

$$q = \frac{\Sigma V}{A} \pm \frac{M_{\text{net}} y}{I} \quad (13.19)$$

where

$M_{\text{net}}$  = moment =  $(\Sigma V)e$

$I$  = moment of inertia per unit length of the base section  
 $= \frac{1}{12}(1)(B^3)$

For maximum and minimum pressures, the value of  $y$  in Eq. (13.19) equals  $B/2$ . Substituting into Eq. (13.19) gives

$$q_{\text{max}} = q_{\text{toe}} = \frac{\Sigma V}{(B)(1)} + \frac{e(\Sigma V)\frac{B}{2}}{\left(\frac{1}{12}\right)(B^3)} = \frac{\Sigma V}{B} \left(1 + \frac{6e}{B}\right) \quad (13.20)$$

Similarly,

$$q_{\text{min}} = q_{\text{heel}} = \frac{\Sigma V}{B} \left(1 - \frac{6e}{B}\right) \quad (13.21)$$

Note that  $\Sigma V$  includes the weight of the soil, as shown in Table 13.1, and that when the value of the eccentricity  $e$  becomes greater than  $B/6$ ,  $q_{\text{min}}$  [Eq. (13.21)] becomes negative. Thus, there will be some tensile stress at the end of the heel section. This stress is not desirable, because the tensile strength of soil is very small. If the analysis of a design shows that  $e > B/6$ , the design should be repropportioned and calculations redone.

The relationships pertaining to the ultimate bearing capacity of a shallow foundation were discussed in Chapter 4. Recall that [Eq. (4.51)].

$$q_u = c'_2 N_c F_{cd} F_{ci} + q N_q F_{qd} F_{qi} + \frac{1}{2} \gamma_2 B' N_\gamma F_{\gamma d} F_{\gamma i} \quad (13.22)$$

where

$$q = \gamma_2 D$$

$$B' = B - 2e$$

$$F_{cd} = F_{qd} - \frac{1 - F_{qd}}{N_c \tan \phi'_2}$$

$$F_{qd} = 1 + 2 \tan \phi'_2 (1 - \sin \phi'_2)^2 \frac{D}{B'}$$

$$F_{\gamma d} = 1$$

$$F_{ci} = F_{qi} = \left(1 - \frac{\psi^\circ}{90^\circ}\right)^2$$

$$F_{\gamma i} = \left(1 - \frac{\psi^\circ}{\phi_2^\circ}\right)^2$$

$$\psi^\circ = \tan^{-1}\left(\frac{P_a \cos \alpha}{\Sigma V}\right)$$

Note that the shape factors  $F_{cs}$ ,  $F_{qs}$ , and  $F_{\gamma s}$  given in Chapter 4 are all equal to unity, because they can be treated as a continuous foundation. For this reason, the shape factors are not shown in Eq. (13.22).

Once the ultimate bearing capacity of the soil has been calculated by using Eq. (13.22), the factor of safety against bearing capacity failure can be determined:

$$FS_{(\text{bearing capacity})} = \frac{q_u}{q_{\max}} \quad (13.23)$$

Generally, a factor of safety of 3 is required. In Chapter 4, we noted that the ultimate bearing capacity of shallow foundations occurs at a settlement of about 10% of the foundation width. In the case of retaining walls, the width  $B$  is large. Hence, the ultimate load  $q_u$  will occur at a fairly large foundation settlement. A factor of safety of 3 against bearing capacity failure may not ensure that settlement of the structure will be within the tolerable limit in all cases. Thus, this situation needs further investigation.

### Example 13.1

The cross section of a cantilever retaining wall is shown in Figure 13.12. Calculate the factors of safety with respect to overturning, sliding, and bearing capacity.

#### Solution

From the figure,

$$\begin{aligned} H' &= H_1 + H_2 + H_3 = 2.6 \tan 10^\circ + 6 + 0.7 \\ &= 0.458 + 6 + 0.7 = 7.158 \text{ m} \end{aligned}$$


The Rankine active force per unit length of wall  $= P_p = \frac{1}{2} \gamma_1 H'^2 K_a$ . For  $\phi_1' = 30^\circ$  and  $\alpha = 10^\circ$ ,  $K_a$  is equal to 0.3495. (See Table 12.1.) Thus,

$$P_a = \frac{1}{2}(18)(7.158)^2(0.3495) = 161.2 \text{ kN/m}$$

$$P_v = P_a \sin 10^\circ = 161.2 (\sin 10^\circ) = 28.0 \text{ kN/m}$$

and

$$P_h = P_a \cos 10^\circ = 161.2 (\cos 10^\circ) = 158.75 \text{ kN/m}$$

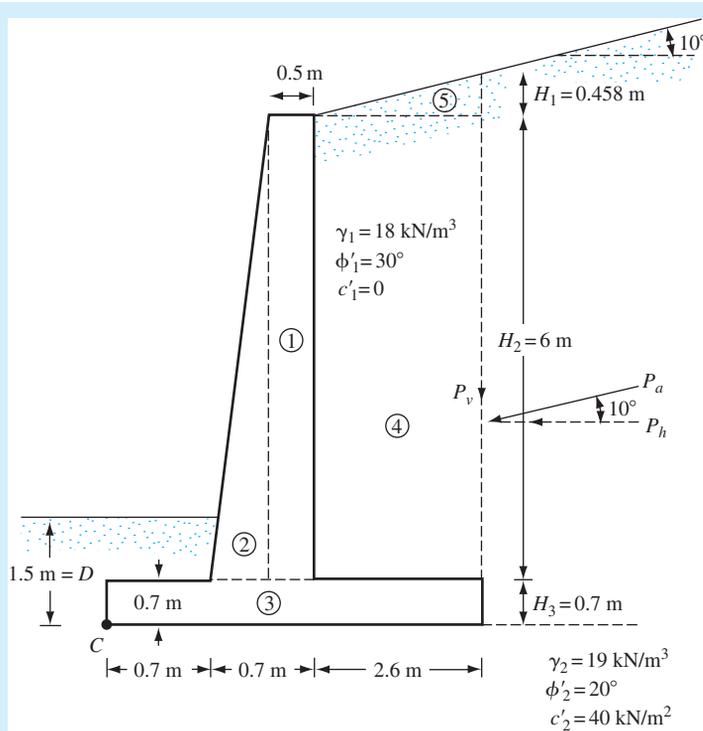

**Figure 13.12** Calculation of stability of a retaining wall

Factor of Safety against Overturning

The following table can now be prepared for determining the resisting moment:

Section no. <sup>a</sup>	Area (m <sup>2</sup> )	Weight/unit length (kN/m)	Moment arm from point C (m)	Moment (kN-m/m)
1	$6 \times 0.5 = 3$	70.74	1.15	81.35
2	$\frac{1}{2}(0.2)6 = 0.6$	14.15	0.833	11.79
3	$4 \times 0.7 = 2.8$	66.02	2.0	132.04
4	$6 \times 2.6 = 15.6$	280.80	2.7	758.16
5	$\frac{1}{2}(2.6)(0.458) = 0.595$	10.71	3.13	33.52
		$P_v = 28.0$	4.0	112.0
		$\Sigma V = 470.42$		$1128.86 = \Sigma M_R$

<sup>a</sup>For section numbers, refer to Figure 13.12

$\gamma_{\text{concrete}} = 23.58 \text{ kN/m}^3$

The overturning moment

$$M_o = P_h \left( \frac{H'}{3} \right) = 158.75 \left( \frac{7.158}{3} \right) = 378.78 \text{ kN-m/m}$$

and

$$FS_{(\text{overturning})} = \frac{\Sigma M_R}{M_o} = \frac{1128.86}{378.78} = \mathbf{2.98 > 2, OK}$$

Factor of Safety against Sliding

From Eq. (12.11),

$$FS_{(\text{sliding})} = \frac{(\Sigma V) \tan(k_1 \phi'_2) + Bk_2 c'_2 + P_p}{P_a \cos \alpha}$$

Let  $k_1 = k_2 = \frac{2}{3}$ . Also,

$$P_p = \frac{1}{2} K_p \gamma_2 D^2 + 2c'_2 \sqrt{K_p} D$$

$$K_p = \tan^2 \left( 45 + \frac{\phi'_2}{2} \right) = \tan^2(45 + 10) = 2.04$$

and

$$D = 1.5 \text{ m}$$

So

$$\begin{aligned} P_p &= \frac{1}{2}(2.04)(19)(1.5)^2 + 2(40)(\sqrt{2.04})(1.5) \\ &= 43.61 + 171.39 = 215 \text{ kN/m} \end{aligned}$$

Hence,

$$\begin{aligned} FS_{(\text{sliding})} &= \frac{(470.42) \tan \left( \frac{2 \times 20}{3} \right) + (4) \left( \frac{2}{3} \right) (40) + 215}{158.75} \\ &= \frac{111.49 + 106.67 + 215}{158.75} = \mathbf{2.73 > 1.5, OK} \end{aligned}$$

*Note:* For some designs, the depth  $D$  in a passive pressure calculation may be taken to be equal to the thickness of the base slab.

Factor of Safety against Bearing Capacity Failure

Combining Eqs. (13.16), (13.17), and (13.18) yields

$$\begin{aligned} e &= \frac{B}{2} - \frac{\Sigma M_R - \Sigma M_o}{\Sigma V} = \frac{4}{2} - \frac{1128.86 - 378.78}{470.42} \\ &= 0.406 \text{ m} < \frac{B}{6} = \frac{4}{6} = 0.666 \text{ m} \end{aligned}$$

Again, from Eqs. (13.20) and (13.21)

$$\begin{aligned} q_{\text{heel}}^{\text{toe}} &= \frac{\Sigma V}{B} \left( 1 \pm \frac{6e}{B} \right) = \frac{470.42}{4} \left( 1 \pm \frac{6 \times 0.406}{4} \right) = 189.2 \text{ kN/m}^2 \text{ (toe)} \\ &= 45.98 \text{ kN/m}^2 \text{ (heel)} \end{aligned}$$

The ultimate bearing capacity of the soil can be determined from Eq. (13.22)

$$q_u = c'_2 N_c F_{cd} F_{ci} + q N_q F_{qd} F_{qi} + \frac{1}{2} \gamma_2 B' N_\gamma F_{\gamma d} F_{\gamma i}$$

For  $\phi'_2 = 20^\circ$  (see Table 4.2),  $N_c = 14.83$ ,  $N_q = 6.4$ , and  $N_\gamma = 5.39$ . Also,

$$q = \gamma_2 D = (19)(1.5) = 28.5 \text{ kN/m}^2$$

$$B' = B - 2e = 4 - 2(0.406) = 3.188 \text{ m}$$

$$F_{cd} = F_{qd} - \frac{1 - F_{qd}}{N_c \tan \phi'_2} = 1.148 - \frac{1 - 1.148}{(14.83)(\tan 20)} = 1.175$$

$$F_{qd} = 1 + 2 \tan \phi'_2 (1 - \sin \phi'_2)^2 \left( \frac{D}{B'} \right) = 1 + 0.315 \left( \frac{1.5}{3.188} \right) = 1.148$$

$$F_{\gamma d} = 1$$

$$F_{ci} = F_{qi} = \left( 1 - \frac{\psi^\circ}{90^\circ} \right)^2$$

and

$$\psi = \tan^{-1} \left( \frac{P_a \cos \alpha}{\Sigma V} \right) = \tan^{-1} \left( \frac{158.75}{470.42} \right) = 18.65^\circ$$

So

$$F_{ci} = F_{qi} = \left( 1 - \frac{18.65}{90} \right)^2 = 0.628$$

and

$$F_{\gamma i} = \left( 1 - \frac{\psi}{\phi'_2} \right)^2 = \left( 1 - \frac{18.65}{20} \right)^2 \approx 0$$

Hence,

$$\begin{aligned} q_u &= (40)(14.83)(1.175)(0.628) + (28.5)(6.4)(1.148)(0.628) \\ &\quad + \frac{1}{2}(19)(5.39)(3.188)(1)(0) \\ &= 437.72 + 131.5 + 0 = 569.22 \text{ kN/m}^2 \end{aligned}$$

and

$$FS_{\text{(bearing capacity)}} = \frac{q_u}{q_{\text{toe}}} = \frac{569.22}{189.2} = \mathbf{3.0 \text{ OK}}$$

### Example 13.2

A gravity retaining wall is shown in Figure 13.13. Use  $\delta' = 2/3\phi'_1$  and Coulomb's active earth pressure theory. Determine

- The factor of safety against overturning
- The factor of safety against sliding
- The pressure on the soil at the toe and heel

#### Solution

The height

$$H' = 5 + 1.5 = 6.5 \text{ m}$$

Coulomb's active force is

$$P_a = \frac{1}{2}\gamma_1 H'^2 K_a$$

With  $\alpha = 0^\circ$ ,  $\beta = 75^\circ$ ,  $\delta' = 2/3\phi'_1$ , and  $\phi'_1 = 32^\circ$ ,  $K_a = 0.4023$ . (See Table 12.6.) So,

$$P_a = \frac{1}{2}(18.5)(6.5)^2(0.4023) = 157.22 \text{ kN/m}$$

$$P_h = P_a \cos(15 + \frac{2}{3}\phi'_1) = 157.22 \cos 36.33 = 126.65 \text{ kN/m}$$

and

$$P_v = P_a \sin(15 + \frac{2}{3}\phi'_1) = 157.22 \sin 36.33 = 93.14 \text{ kN/m}$$

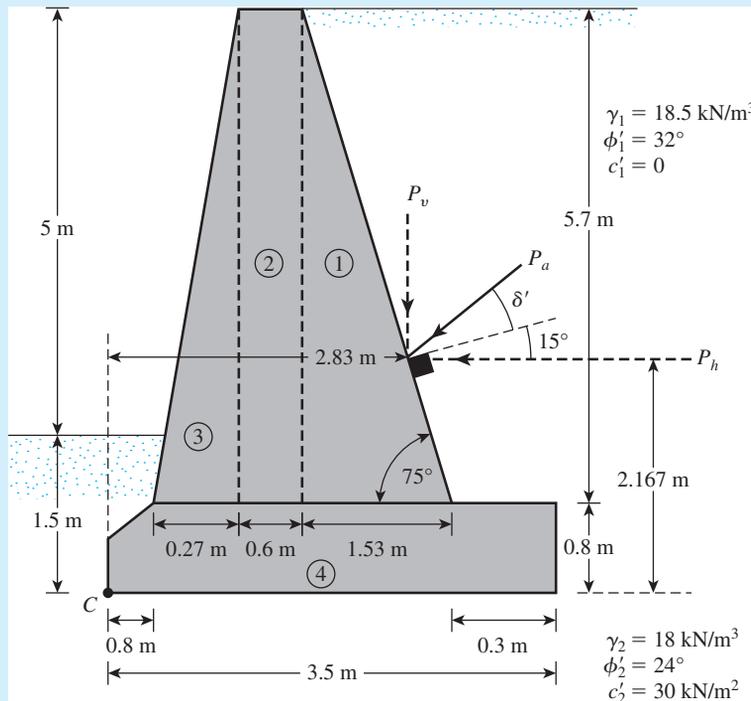


Figure 13.13 Gravity retaining wall (not to scale)

Part a: Factor of Safety against Overturning

From Figure 13.13, one can prepare the following table:

Area no.	Area (m <sup>2</sup> )	Weight* (kN/m)	Moment arm from C (m)	Moment (kN-m/m)
1	$\frac{1}{2}(5.7)(1.53) = 4.36$	102.81	2.18	224.13
2	$(0.6)(5.7) = 3.42$	80.64	1.37	110.48
3	$\frac{1}{2}(0.27)(5.7) = 0.77$	18.16	0.98	17.80
4	$\approx (3.5)(0.8) = 2.8$	66.02	1.75	115.54
		$P_v = 93.14$	2.83	263.59
		$\Sigma V = 360.77 \text{ kN/m}$		$\Sigma M_R = 731.54 \text{ kN-m/m}$

$$*\gamma_{\text{concrete}} = 23.58 \text{ kN/m}^3$$

Note that the weight of the soil above the back face of the wall is not taken into account in the preceding table. We have

$$\text{Overturning moment} = M_o = P_h \left( \frac{H'}{3} \right) = 126.65(2.167) = 274.45 \text{ kN-m/m}$$

Hence,

$$\text{FS}_{(\text{overturning})} = \frac{\Sigma M_R}{\Sigma M_o} = \frac{731.54}{274.45} = \mathbf{2.67 > 2, \text{ OK}}$$

Part b: Factor of Safety against Sliding

We have

$$\text{FS}_{(\text{sliding})} = \frac{(\Sigma V) \tan \left( \frac{2}{3} \phi'_2 \right) + \frac{2}{3} c'_2 B + P_p}{P_h}$$

$$P_p = \frac{1}{2} K_p \gamma_2 D^2 + 2c'_2 \sqrt{K_p} D$$

and

$$K_p = \tan^2 \left( 45 + \frac{24}{2} \right) = 2.37$$

Hence,

$$P_p = \frac{1}{2}(2.37)(18)(1.5)^2 + 2(30)(1.54)(1.5) = 186.59 \text{ kN/m}$$

So

$$\begin{aligned} \text{FS}_{(\text{sliding})} &= \frac{360.77 \tan \left( \frac{2}{3} \times 24 \right) + \frac{2}{3}(30)(3.5) + 186.59}{126.65} \\ &= \frac{103.45 + 70 + 186.59}{126.65} = \mathbf{2.84} \end{aligned}$$

If  $P_p$  is ignored, the factor of safety is **1.37**.

Part c: Pressure on Soil at Toe and Heel  
From Eqs. (13.16), (13.17), and (13.18),

$$e = \frac{B}{2} - \frac{\sum M_R - \sum M_o}{\sum V} = \frac{3.5}{2} - \frac{731.54 - 274.45}{360.77} = 0.483 < \frac{B}{6} = 0.583$$

$$q_{\text{toe}} = \frac{\sum V}{B} \left[ 1 + \frac{6e}{B} \right] = \frac{360.77}{3.5} \left[ 1 + \frac{(6)(0.483)}{3.5} \right] = \mathbf{188.43 \text{ kN/m}^2}$$

and

$$q_{\text{heel}} = \frac{V}{B} \left[ 1 - \frac{6e}{B} \right] = \frac{360.77}{3.5} \left[ 1 - \frac{(6)(0.483)}{3.5} \right] = \mathbf{17.73 \text{ kN/m}^2}$$

## 13.8 Construction Joints and Drainage from Backfill

### Construction Joints


A retaining wall may be constructed with one or more of the following joints:

1. *Construction joints* (see Figure 13.14a) are vertical and horizontal joints that are placed between two successive pours of concrete. To increase the shear at the joints, keys may be used. If keys are not used, the surface of the first pour is cleaned and roughened before the next pour of concrete.
2. *Contraction joints* (Figure 13.14b) are vertical joints (grooves) placed in the face of a wall (from the top of the base slab to the top of the wall) that allow the concrete to shrink without noticeable harm. The grooves may be about 6 to 8 mm ( $\approx 0.25$  to 0.3 in.) wide and 12 to 16 mm ( $\approx 0.5$  to 0.6 in.) deep.
3. *Expansion joints* (Figure 13.14c) allow for the expansion of concrete caused by temperature changes; vertical expansion joints from the base to the top of the wall may also be used. These joints may be filled with flexible joint fillers. In most cases, horizontal reinforcing steel bars running across the stem are continuous through all joints. The steel is greased to allow the concrete to expand.


### Drainage from the Backfill

As the result of rainfall or other wet conditions, the backfill material for a retaining wall may become saturated, thereby increasing the pressure on the wall and perhaps creating an unstable condition. For this reason, adequate drainage must be provided by means of *weep holes* or *perforated drainage pipes*. (See Figure 13.15.)

When provided, weep holes should have a minimum diameter of about 0.1 m (4 in.) and be adequately spaced. Note that there is always a possibility that backfill material may be washed into weep holes or drainage pipes and ultimately clog them. Thus, a filter

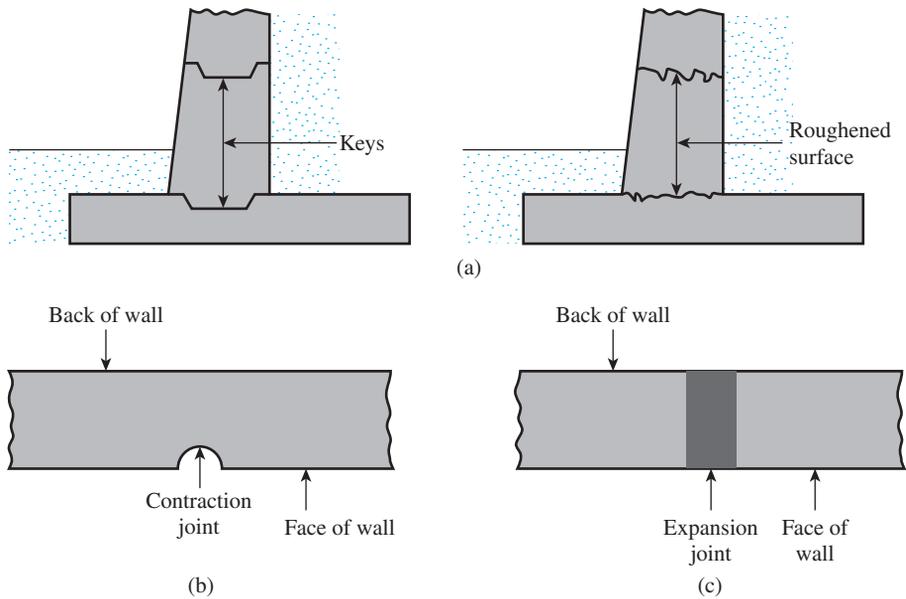

**Figure 13.14** (a) Construction joints; (b) contraction joint; (c) expansion joint

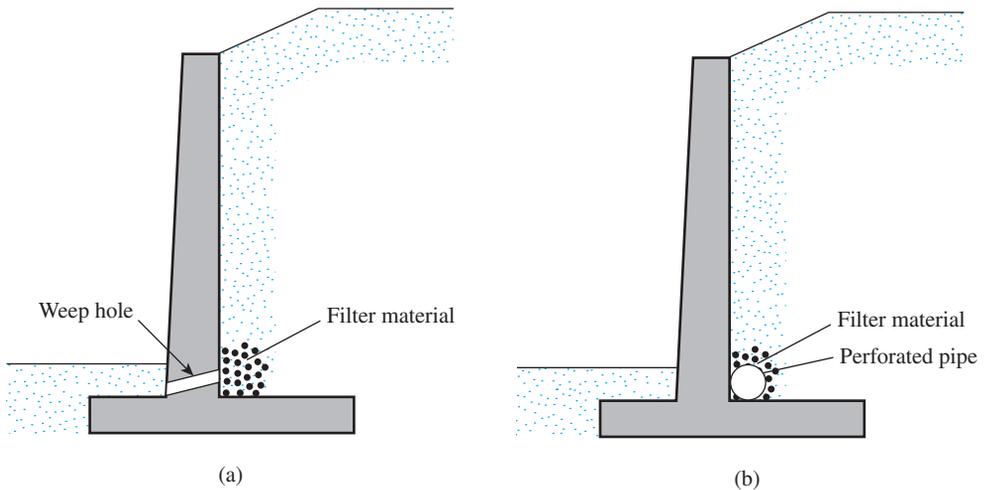

**Figure 13.15** Drainage provisions for the backfill of a retaining wall: (a) by weep holes; (b) by a perforated drainage pipe

material needs to be placed behind the weep holes or around the drainage pipes, as the case may be; geotextiles now serve that purpose.

Two main factors influence the choice of filter material: The grain-size distribution of the materials should be such that (a) the soil to be protected is not washed into the filter and (b) excessive hydrostatic pressure head is not created in the soil with a lower hydraulic

conductivity (in this case, the backfill material). The preceding conditions can be satisfied if the following requirements are met (Terzaghi and Peck, 1967):

$$\frac{D_{15(F)}}{D_{85(B)}} < 5 \quad [\text{to satisfy condition(a)}] \quad (13.24)$$

$$\frac{D_{15(F)}}{D_{15(B)}} > 4 \quad [\text{to satisfy condition(b)}] \quad (13.25)$$

In these relations, the subscripts *F* and *B* refer to the *filter* and the *base* material (i.e., the backfill soil), respectively. Also,  $D_{15}$  and  $D_{85}$  refer to the diameters through which 15% and 85% of the soil (filter or base, as the case may be) will pass. Example 13.3 gives the procedure for designing a filter.

### Example 13.3

Figure 13.16 shows the grain-size distribution of a backfill material. Using the conditions outlined in Section 13.8, determine the range of the grain-size distribution for the filter material.


#### Solution

From the grain-size distribution curve given in the figure, the following values can be determined:

$$D_{15(B)} = 0.04 \text{ mm}$$

$$D_{85(B)} = 0.25 \text{ mm}$$

$$D_{50(B)} = 0.13 \text{ mm}$$

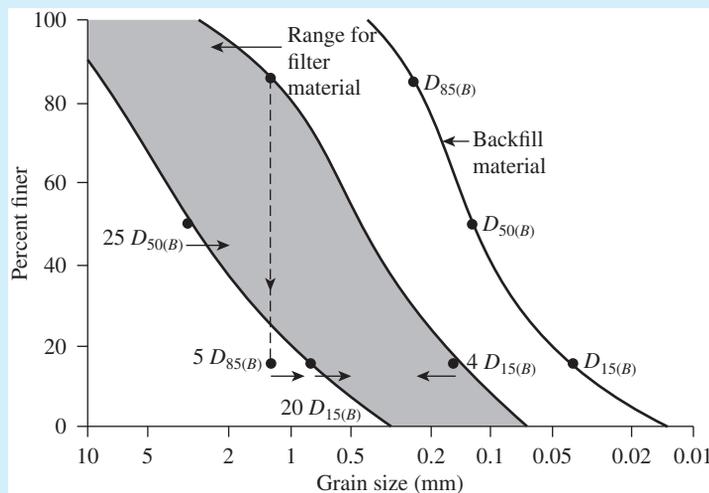

**Figure 13.16** Determination of grain-size distribution of filter material

## Conditions of Filter

1.  $D_{15(F)}$  should be less than  $5D_{85(B)}$ ; that is,  $5 \times 0.25 = 1.25$  mm.
2.  $D_{15(F)}$  should be greater than  $4D_{15(B)}$ ; that is,  $4 \times 0.04 = 0.16$  mm.
3.  $D_{50(F)}$  should be less than  $25D_{50(B)}$ ; that is,  $25 \times 0.13 = 3.25$  mm.
4.  $D_{15(F)}$  should be less than  $20D_{15(B)}$ ; that is,  $20 \times 0.04 = 0.8$  mm.

These limiting points are plotted in Figure 13.16. Through them, two curves can be drawn that are similar in nature to the grain-size distribution curve of the backfill material. These curves define the range of the filter material to be used. ■

## 13.9 Comments on Design of Retaining Walls and a Case Study

In Section 13.3, it was suggested that the *active earth pressure coefficient* be used to estimate the lateral force on a retaining wall due to the backfill. It is important to recognize the fact that the active state of the backfill can be established only if the wall yields sufficiently, which does not happen in all cases. The degree to which the wall yields depends on its *height* and the *section modulus*. Furthermore, the lateral force of the backfill depends on several factors identified by Casagrande (1973):


1. Effect of temperature
2. Groundwater fluctuation
3. Readjustment of the soil particles due to creep and prolonged rainfall
4. Tidal changes
5. Heavy wave action
6. Traffic vibration
7. Earthquakes

Insufficient wall yielding combined with other unforeseen factors may generate a larger lateral force on the retaining structure, compared with that obtained from the active earth-pressure theory. This is particularly true in the case of gravity retaining walls, bridge abutments, and other heavy structures that have a large section modulus.

### Case Study for the Performance of a Cantilever Retaining Wall

Bentler and Labuz (2006) have reported the performance of a cantilever retaining wall built along Interstate 494 in Bloomington, Minnesota. The retaining wall had 83 panels, each having a length of 9.3 m (30.5 ft). The panel height ranged from 4.0 m to 7.9 m (13 ft to 26 ft). One of the 7.9-m-high (26 ft) panels was instrumented with earth pressure cells, tiltmeters, strain gauges, and inclinometer casings. Figure 13.17 shows a schematic diagram (cross section) of the wall panel. Some details on the backfill and the foundation material are:

- Granular Backfill
  - Effective size,  $D_{10} = 0.13$  mm
  - Uniformity coefficient,  $C_u = 3.23$
  - Coefficient of gradation,  $C_c = 1.4$

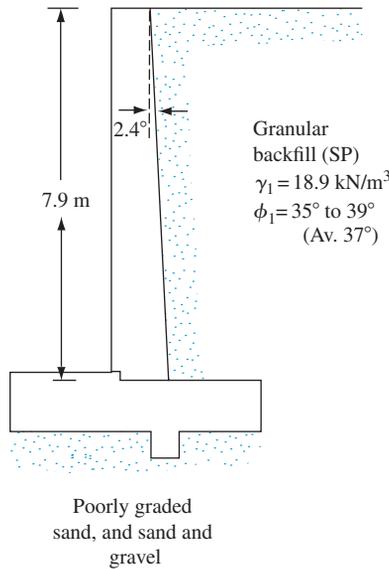

**Figure 13.17** Schematic diagram of the retaining wall (drawn to scale)

Unified soil classification – SP

Compacted unit weight,  $\gamma_1 = 18.9 \text{ kN/m}^3$  (120 lb/ft<sup>3</sup>)

Triaxial friction angle,  $\phi_1' = 35^\circ$  to  $39^\circ$  (average  $37^\circ$ )


- Foundation Material  
 Poorly graded sand and sand with gravel (medium dense to dense)

The backfill and compaction of the granular material started on October 28, 2001 in stages and reached a height of 7.6 m (25 ft) on November 21, 2001. The final 0.3 m (1 ft) of soil was placed the following spring. During backfilling, the wall was continuously going through translation. Table 13.3 is a summary of the backfill height and horizontal translation of the wall.

Figure 13.18 shows a typical plot of the variation of lateral earth pressure *after compaction*,  $\sigma_a'$ , when the backfill height was 6.1 m (October 31, 2001) along with the

**Table 13.3** Horizontal Translation with Backfill Height


Day	Backfill height (m)	Horizontal translation (mm)
1	0.0	0
2	1.1	0
2	2.8	0
3	5.2	2
4	6.1	4
5	6.4	6
11	6.7	9
24	7.3	12
54	7.6	11

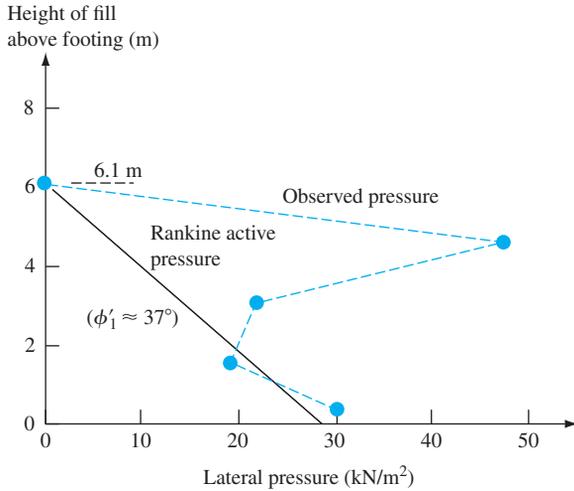

**Figure 13.18** Observed lateral pressure distribution after fill height reached 6.1 m (Based on Bentler and Labuz, 2006)

plot of Rankine active earth pressure ( $\phi'_1 = 37^\circ$ ). Note that the measured lateral (horizontal) pressure is higher at most heights than that predicted by the Rankine active pressure theory, which may be due to residual lateral stresses caused by compaction. The measured lateral stress gradually reduced with time. This is demonstrated in Figure 13.19 which shows a plot of the variation of  $\sigma'_a$  with depth (November 27, 2001) when the height of the backfill was 7.6 m. The lateral pressure was lower at practically all depths compared to the Rankine active earth pressure.

Another point of interest is the nature of variation of  $q_{\max}$  and  $q_{\min}$  (see Figure 13.11). As shown in Figure 13.11, if the wall rotates about  $C$ ,  $q_{\max}$  will be at the toe and  $q_{\min}$  will be at the heel. However, for the case of the retaining wall under consideration (undergoing horizontal translation),  $q_{\max}$  was at the heel of the wall with  $q_{\min}$  at the toe. On November 27, 2001, when the height of the fill was 7.6 m (25 ft),  $q_{\max}$  at the heel was

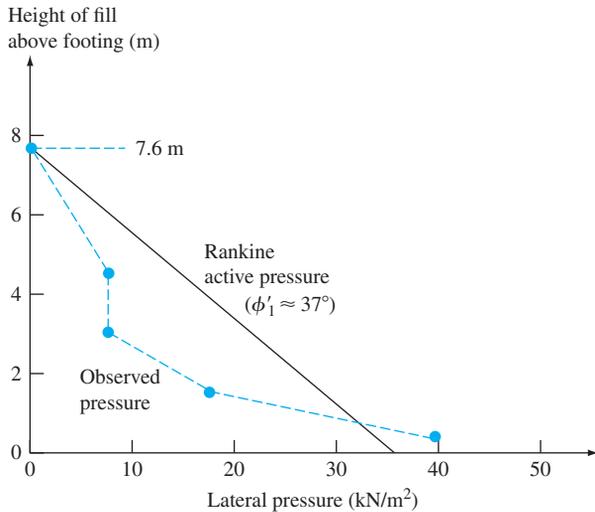

**Figure 13.19** Observed pressure distribution on November 27, 2001 (Based on Bentler and Labuz, 2006)

about  $140 \text{ kN/m}^2$  ( $2922 \text{ lb/ft}^2$ ), which was approximately equal to  $(\gamma_1)(\text{height of fill}) = (18.9)(7.6) = 143.6 \text{ kN/m}^2$ . Also, at the toe,  $q_{\min}$  was about  $40 \text{ kN/m}^2$  ( $835 \text{ lb/ft}^2$ ), which suggests that the moment from lateral force had little effect on the vertical effective stress below the heel.

The lessons learned from this case study are the following:

- a. Retaining walls may undergo lateral translation which will affect the variation of  $q_{\max}$  and  $q_{\min}$  along the base slab.
- b. Initial lateral stress caused by compaction gradually decreases with time and lateral movement of the wall.

---

## Mechanically Stabilized Retaining Walls

More recently, soil reinforcement has been used in the construction and design of foundations, retaining walls, embankment slopes, and other structures. Depending on the type of construction, the reinforcements may be galvanized metal strips, geotextiles, geogrids, or geocomposites. Sections 13.10 and 13.11 provide a general overview of soil reinforcement and various reinforcement materials.

Reinforcement materials such as metallic strips, geotextiles, and geogrids are now being used to reinforce the backfill of retaining walls, which are generally referred to as *mechanically stabilized retaining walls*. The general principles for designing these walls are given in the following sections.

### 13.10 Soil Reinforcement

The use of reinforced earth is a recent development in the design and construction of foundations and earth-retaining structures. *Reinforced earth* is a construction material made from soil that has been strengthened by tensile elements such as metal rods or strips, nonbiodegradable fabrics (geotextiles), geogrids, and the like. The fundamental idea of reinforcing soil is not new; in fact, it goes back several centuries. However, the present concept of systematic analysis and design was developed by a French engineer, H. Vidal (1966). The French Road Research Laboratory has done extensive research on the applicability and the beneficial effects of the use of reinforced earth as a construction material. This research has been documented in detail by Darbin (1970), Schlosser and Long (1974), and Schlosser and Vidal (1969). The tests that were conducted involved the use of metallic strips as reinforcing material.

Retaining walls with reinforced earth have been constructed around the world since Vidal began his work. The first reinforced-earth retaining wall with metal strips as reinforcement in the United States was constructed in 1972 in southern California.

The beneficial effects of soil reinforcement derive from (a) the soil's increased tensile strength and (b) the shear resistance developed from the friction at the soil-reinforcement interfaces. Such reinforcement is comparable to that of concrete structures. Currently, most reinforced-earth design is done with *free-draining granular soil only*. Thus, the effect of pore water development in cohesive soils, which, in turn, reduces the shear strength of the soil, is avoided.

## 13.11 Considerations in Soil Reinforcement

### Metal Strips

In most instances, galvanized steel strips are used as reinforcement in soil. However, galvanized steel is subject to corrosion. The rate of corrosion depends on several environmental factors. Binquet and Lee (1975) suggested that the average rate of corrosion of galvanized steel strips varies between 0.025 and 0.050 mm/yr. So, in the actual design of reinforcement, allowance must be made for the rate of corrosion. Thus,

$$t_c = t_{\text{design}} + r (\text{life span of structure})$$

where

- $t_c$  = actual thickness of reinforcing strips to be used in construction
- $t_{\text{design}}$  = thickness of strips determined from design calculations
- $r$  = rate of corrosion

### Nonbiodegradable Fabrics

Nonbiodegradable fabrics are generally referred to as *geotextiles*. Since 1970, the use of geotextiles in construction has increased greatly around the world. The fabrics are usually made from petroleum products—polyester, polyethylene, and polypropylene. They may also be made from fiberglass. Geotextiles are not prepared from natural fabrics, because they decay too quickly. Geotextiles may be woven, knitted, or nonwoven.

*Woven geotextiles* are made of two sets of parallel filaments or strands of yarn systematically interlaced to form a planar structure. *Knitted geotextiles* are formed by interlocking a series of loops of one or more filaments or strands of yarn to form a planar structure. *Nonwoven geotextiles* are formed from filaments or short fibers arranged in an oriented or random pattern in a planar structure. These filaments or short fibers are arranged into a loose web in the beginning and then are bonded by one or a combination of the following processes:

1. *Chemical bonding*—by glue, rubber, latex, a cellulose derivative, or the like
2. *Thermal bonding*—by heat for partial melting of filaments
3. *Mechanical bonding*—by needle punching

*Needle-punched nonwoven geotextiles* are thick and have high in-plane permeability.

Geotextiles have four primary uses in foundation engineering:

1. *Drainage*: The fabrics can rapidly channel water from soil to various outlets, thereby providing a higher soil shear strength and hence stability.
2. *Filtration*: When placed between two soil layers, one coarse grained and the other fine grained, the fabric allows free seepage of water from one layer to the other. However, it protects the fine-grained soil from being washed into the coarse-grained soil.
3. *Separation*: Geotextiles help keep various soil layers separate after construction and during the projected service period of the structure. For example, in the construction of highways, a clayey subgrade can be kept separate from a granular base course.
4. *Reinforcement*: The tensile strength of geofabrics increases the load-bearing capacity of the soil.

## Geogrids


*Geogrids* are high-modulus polymer materials, such as polypropylene and polyethylene, and are prepared by tensile drawing. Netlon, Ltd., of the United Kingdom was the first producer of geogrids. In 1982, the Tensar Corporation, presently Tensar International Corporation, introduced geogrids into the United States.

Geogrids generally are of two types: (a) uniaxial and (b) biaxial. Figures 13.20a and b show these two types of geogrids, which are produced by Tensar International Corporation.


Commercially available geogrids may be categorized by manufacturing process, principally: extruded, woven, and welded. Extruded geogrids are formed using a thick sheet of polyethylene or polypropylene that is punched and drawn to create apertures and to enhance engineering properties of the resulting ribs and nodes. Woven geogrids are manufactured by grouping polymeric—usually polyester and polypropylene—and weaving them into a mesh pattern that is then coated with a polymeric lacquer. Welded geogrids are manufactured by fusing junctions of polymeric strips. Extruded geogrids have shown good performance when compared to other types for pavement reinforcement applications.

The commercial geogrids currently available for soil reinforcement have nominal rib thicknesses of about 0.5 to 1.5 mm (0.02 to 0.06 in.) and junctions of about 2.5 to 5 mm (0.1 to 0.2 in.). The grids used for soil reinforcement usually have openings or apertures that are rectangular or elliptical. The dimensions of the apertures vary from about 25 to 150 mm (1 to 6 in.). Geogrids are manufactured so that the open areas of the grids are greater than 50% of the total area. They develop reinforcing strength at low strain levels, such as 2% (Carroll, 1988).

The major function of geogrids is *reinforcement*. They are relatively stiff. The apertures are large enough to allow interlocking with surrounding soil or rock (Figure 13.21) to perform the function of reinforcement or segregation (or both). Sarsby (1985) investigated the influence of aperture size on the size of soil particles for maximum frictional

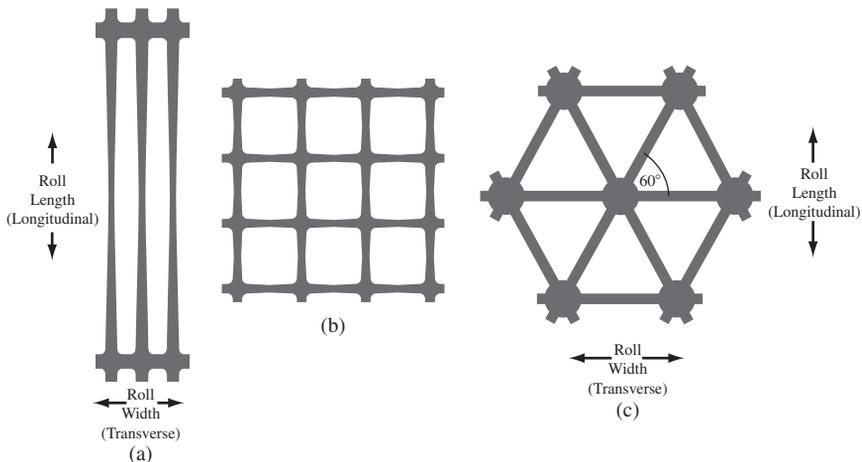

**Figure 13.20** Geogrid: (a) uniaxial; (b) biaxial; (c) with triangular apertures  
(Based on of Tensar International Corporation)

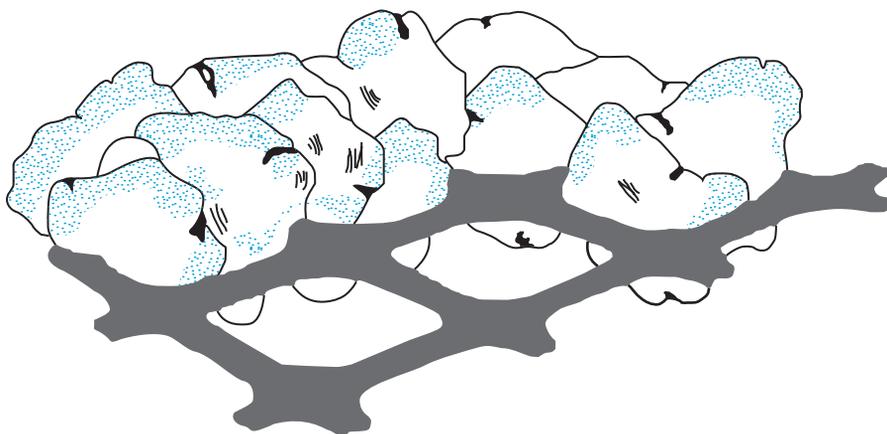

**Figure 13.21** Geogrid apertures allowing interlocking with surrounding soil

efficiency (or efficiency against pullout). According to this study, the highest efficiency occurs when

$$B_{GG} > 3.5D_{50} \quad (13.26)$$

where

$B_{GG}$  = minimum width of the geogrid aperture

$D_{50}$  = the particle size through which 50% of the backfill soil passes (i.e., the average particle size)


More recently, geogrids with triangular apertures (Figure 13.20c) have been introduced for construction purposes. Geogrids with triangular apertures are manufactured from a punched polypropylene sheet, which is then oriented in three substantially equilateral directions so that the resulting ribs shall have a high degree of molecular orientation.

## 13.12 General Design Considerations

The general design procedure of any mechanically stabilized retaining wall can be divided into two parts:

1. Satisfying *internal stability* requirements
2. Checking the *external stability* of the wall

The internal stability checks involve determining tension and pullout resistance in the reinforcing elements and ascertaining the integrity of facing elements. The external stability checks include checks for overturning, sliding, and bearing capacity failure (Figure 13.22). The sections that follow will discuss the retaining-wall design procedures for use with metallic strips, geotextiles, and geogrids.

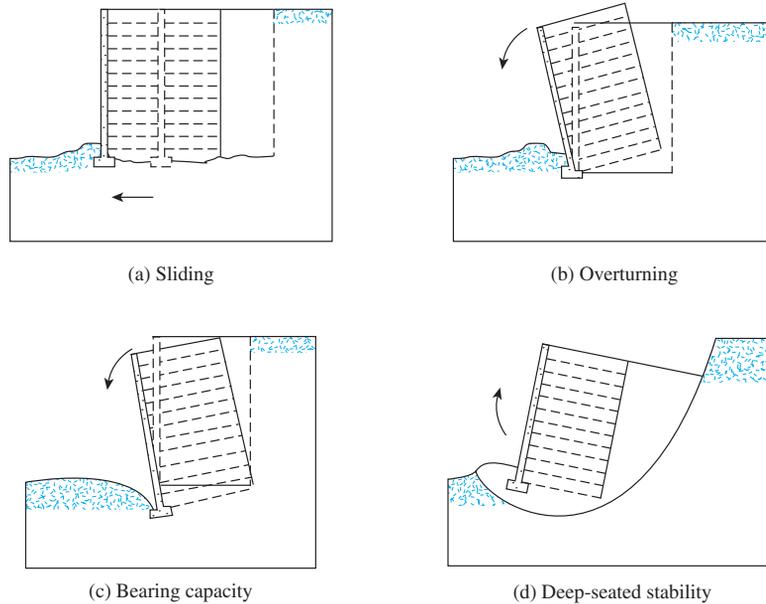

**Figure 13.22** External stability checks (After Transportation Research Board, 1995) (Based on *Transportation Research Circular 444: Mechanically Stabilized Earth Walls*. Transportation Research Board, National Research Council, Washington, D.C., 1995.)

## 13.13 Retaining Walls with Metallic Strip Reinforcement


Reinforced-earth walls are flexible walls. Their main components are

1. *Backfill*, which is granular soil
2. *Reinforcing strips*, which are thin, wide strips placed at regular intervals, and
3. A *cover* or *skin*, on the front face of the wall

Figure 13.23 is a diagram of a reinforced-earth retaining wall. Note that, at any depth, the reinforcing strips or ties are placed with a horizontal spacing of  $S_H$  center to center; the vertical spacing of the strips or ties is  $S_V$  center to center. The skin can be constructed with sections of relatively flexible thin material. Lee et al. (1973) showed that, with a conservative design, a 5 mm-thick ( $\approx 0.2$  in.) galvanized steel skin would be enough to hold a wall about 14 to 15 m (45 to 50 ft) high. In most cases, precast concrete slabs also can be used as skin. The slabs are grooved to fit into each other so that soil cannot flow out between the joints. When metal skins are used, they are bolted together, and reinforcing strips are placed between the skins.

Figures 13.24 and 13.25 show a reinforced-earth retaining wall under construction; its skin (facing) is a precast concrete slab. Figure 13.26 shows a metallic reinforcement tie attached to the concrete slab.

The simplest and most common method for the design of ties is the *Rankine method*. We discuss this procedure next.

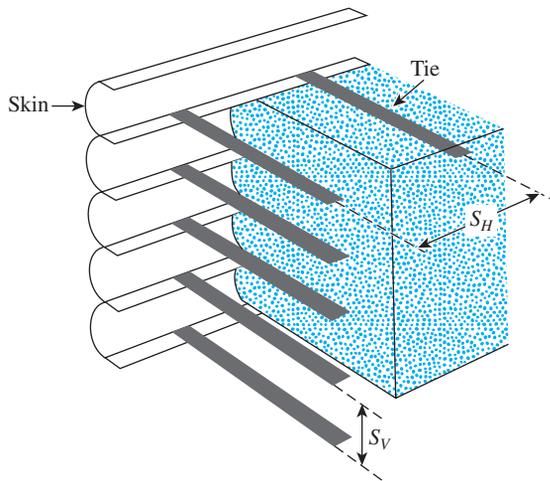


**Figure 13.23** Reinforced-earth retaining wall



**Figure 13.24** Reinforced-earth retaining wall (with metallic strip) under construction  
(Courtesy of Braja M. Das, Henderson, Nevada)



**Figure 13.25** Another view of the retaining wall shown in Figure 13.24 (Courtesy of Braja M. Das, Henderson, Nevada)

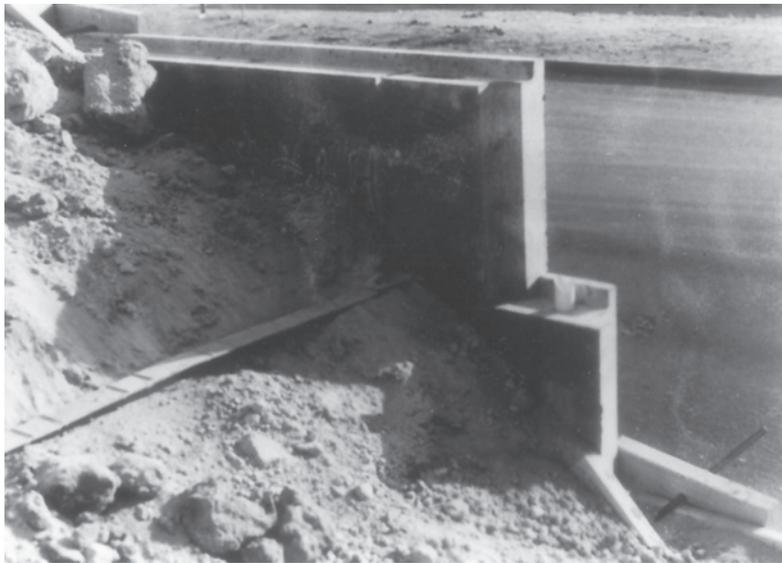

**Figure 13.26** Metallic strip attachment to the precast concrete slab used as the skin (Courtesy of Braja M. Das, Henderson, Nevada)

## Calculation of Active Horizontal and Vertical Pressure

Figure 13.27 shows a retaining wall with a granular backfill having a unit weight of  $\gamma_1$  and a friction angle of  $\phi'_1$ . Below the base of the retaining wall, the *in situ* soil has been excavated and recompacted, with granular soil used as backfill. Below the backfill, the *in situ* soil has a unit weight of  $\gamma_2$ , friction angle of  $\phi'_2$ , and cohesion of  $c'_2$ . A surcharge having an intensity of  $q$  per unit area lies atop the retaining wall, which has reinforcement ties at depths  $z = 0, S_V, 2S_V, \dots, NS_V$ . The height of the wall is  $NS_V = H$ .

According to the Rankine active pressure theory (Section 12.3)


$$\sigma'_a = \sigma'_o K_a - 2c' \sqrt{K_a}$$

where  $\sigma'_a$  = Rankine active pressure at any depth  $z$ .

For dry granular soils with no surcharge at the top,  $c' = 0$ ,  $\sigma'_o = \gamma_1 z$ , and  $K_a = \tan^2(45 - \phi'_1/2)$ . Thus,

$$\sigma'_{a(1)} = \gamma_1 z K_a \quad (13.27)$$

When a surcharge is added at the top, as shown in Figure 13.27,

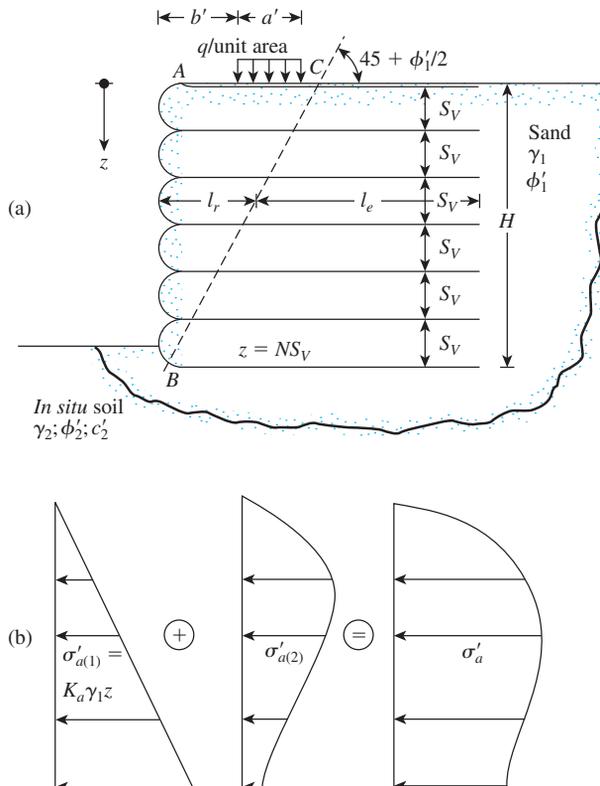

**Figure 13.27** Analysis of a reinforced-earth retaining wall

$$\begin{aligned}\sigma'_o &= \sigma'_{o(1)} && + \sigma'_{o(2)} && (13.28) \\ &\uparrow && \uparrow && \\ &= \gamma_1 z && \text{Due to the} && \\ &\text{Due to} && \text{surchage} && \\ &\text{soil only} && && \end{aligned}$$

The magnitude of  $\sigma'_{o(2)}$  can be calculated by using the 2:1 method of stress distribution described in Eq. (6.18) and Figure 6.7. The 2:1 method of stress distribution is shown in Figure 13.28a. According to Laba and Kennedy (1986),


$$\sigma'_{o(2)} = \frac{qa'}{a' + z} \quad (\text{for } z \leq 2b') \quad (13.29)$$

and

$$\sigma'_{o(2)} = \frac{qa'}{a' + \frac{z}{2} + b'} \quad (\text{for } z > 2b') \quad (13.30)$$

Also, when a surcharge is added at the top, the lateral pressure at any depth is

$$\begin{aligned}\sigma'_a &= \sigma'_{a(1)} && + \sigma'_{a(2)} && (13.31) \\ &\uparrow && \uparrow && \\ &= K_a \gamma_1 z && \text{Due to the} && \\ &\text{Due to} && \text{surchage} && \\ &\text{soil only} && && \end{aligned}$$

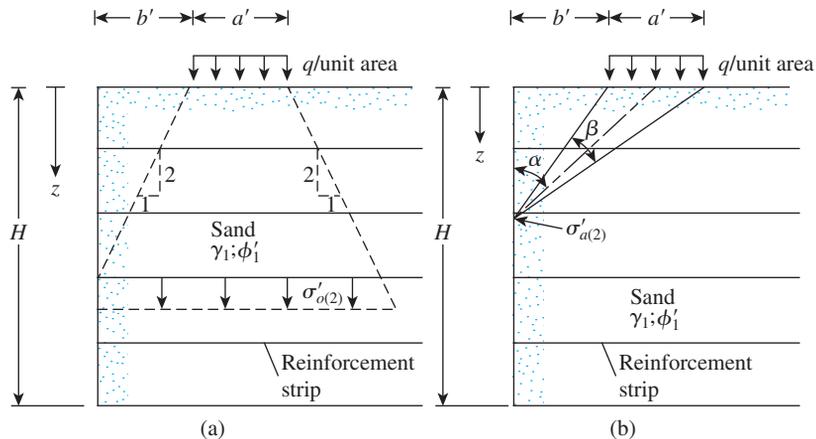

**Figure 13.28** (a) Notation for the relationship of  $\sigma'_{o(2)}$  in Eqs. (13.29) and (13.30); (b) notation for the relationship of  $\sigma'_{a(2)}$  in Eqs. (13.32) and (13.33)

According to Laba and Kennedy (1986),  $\sigma'_{a(2)}$  may be expressed (see Figure 13.28b) as

$$\sigma'_{a(2)} = M \left[ \frac{2q}{\pi} (\beta - \sin \beta \cos 2\alpha) \right] \quad (13.32)$$

$\uparrow$   
 (in radians)

where

$$M = 1.4 - \frac{0.4b'}{0.14H} \geq 1 \quad (13.33)$$

The net active (lateral) pressure distribution on the retaining wall calculated by using Eqs. (13.31), (13.32), and (13.33) is shown in Figure 13.27b.

### Tie Force

The tie force *per unit length of the wall* developed at any depth  $z$  (see Figure 13.27) is

$$\begin{aligned} T &= \text{active earth pressure at depth } z \\ &\quad \times \text{ area of the wall to be supported by the tie} \\ &= (\sigma'_a) (S_V S_H) \end{aligned} \quad (13.34)$$

### Factor of Safety against Tie Failure

The reinforcement ties at each level, and thus the walls, could fail by either (a) tie breaking or (b) tie pullout.

The factor of safety against *tie breaking* may be determined as

$$\begin{aligned} \text{FS}_{(B)} &= \frac{\text{yield or breaking strength of each tie}}{\text{maximum force in any tie}} \\ &= \frac{w t f_y}{\sigma'_a S_V S_H} \end{aligned} \quad (13.35)$$

where

$w$  = width of each tie

$t$  = thickness of each tie

$f_y$  = yield or breaking strength of the tie material

A factor of safety of about 2.5 to 3 is generally recommended for ties at all levels.

Reinforcing ties at any depth  $z$  will fail by pullout if the frictional resistance developed along the surfaces of the ties is less than the force to which the ties are being subjected. The *effective length* of the ties along which frictional resistance is developed

may be conservatively taken as the length that extends *beyond the limits of the Rankine active failure zone*, which is the zone *ABC* in Figure 13.27. Line *BC* makes an angle of  $45 + \phi'_1/2$  with the horizontal. Now, the maximum friction force that can be realized for a tie at depth *z* is

$$F_R = 2l_e w \sigma'_o \tan \phi'_\mu \quad (13.36)$$

where

$l_e$  = effective length

$\sigma'_o$  = effective vertical pressure at a depth *z*

$\phi'_\mu$  = soil–tie friction angle

Thus, the factor of safety against *tie pullout* at any depth *z* is

$$\text{FS}_{(P)} = \frac{F_R}{T} \quad (13.37)$$

Substituting Eqs. (13.34) and (13.36) into Eq. (13.37) yields

$$\text{FS}_{(P)} = \frac{2l_e w \sigma'_o \tan \phi'_\mu}{\sigma'_a S_V S_H} \quad (13.38)$$

### Total Length of Tie

The total length of ties at any depth is

$$L = l_r + l_e \quad (13.39)$$

where

$l_r$  = length within the Rankine failure zone

$l_e$  = effective length

For a given  $\text{FS}_{(P)}$  from Eq. (13.38),

$$l_e = \frac{\text{FS}_{(P)} \sigma'_a S_V S_H}{2w \sigma'_o \tan \phi'_\mu} \quad (13.40)$$

Again, at any depth *z*,

$$l_r = \frac{(H - z)}{\tan\left(45 + \frac{\phi'_1}{2}\right)} \quad (13.41)$$

So, combining Eqs. (13.39), (13.40), and (13.41) gives

$$L = \frac{(H - z)}{\tan\left(45 + \frac{\phi'_1}{2}\right)} + \frac{\text{FS}_{(P)} \sigma'_a S_V S_H}{2w \sigma'_o \tan \phi'_\mu} \quad (13.42)$$

## 13.14 Step-by-Step-Design Procedure Using Metallic Strip Reinforcement

Following is a step-by-step procedure for the design of reinforced-earth retaining walls.

### General

- Step 1. Determine the height of the wall,  $H$ , and the properties of the granular backfill material, such as the unit weight ( $\gamma_1$ ) and the angle of friction ( $\phi'_1$ ).
- Step 2. Obtain the soil–tie friction angle,  $\phi'_\mu$ , and the required value of  $FS_{(B)}$  and  $FS_{(P)}$ .

### Internal Stability

- Step 3. Assume values for horizontal and vertical tie spacing. Also, assume the width of reinforcing strip,  $w$ , to be used.
- Step 4. Calculate  $\sigma'_a$  from Eqs. (13.31), (13.32), and (13.33).
- Step 5. Calculate the tie forces at various levels from Eq. (12.34).
- Step 6. For the known values of  $FS_{(B)}$ , calculate the thickness of ties,  $t$ , required to resist the tie breakout:

$$T = \sigma'_a S_V S_H = \frac{w t f_y}{FS_{(B)}}$$

or

$$t = \frac{(\sigma'_a S_V S_H)[FS_{(B)}]}{w f_y} \quad (13.43)$$

The convention is to keep the magnitude of  $t$  the same at all levels, so  $\sigma'_a$  in Eq. (13.43) should equal  $\sigma'_{a(\max)}$ .

- Step 7. For the known values of  $\phi'_\mu$  and  $FS_{(P)}$ , determine the length  $L$  of the ties at various levels from Eq. (13.42).
- Step 8. The magnitudes of  $S_V$ ,  $S_H$ ,  $t$ ,  $w$ , and  $L$  may be changed to obtain the most economical design.

### External Stability

- Step 9. Check for *overturning*, using Figure 13.29 as a guide. Taking the moment about  $B$  yields the overturning moment for the unit length of the wall:


$$M_o = P_a z' \quad (13.44)$$

Here,

$$P_a = \text{active force} = \int_0^H \sigma'_a dz$$

The resisting moment per unit length of the wall is

$$M_R = W_1 x_1 + W_2 x_2 + \cdots + q a' \left( b' + \frac{a'}{2} \right) \quad (13.45)$$

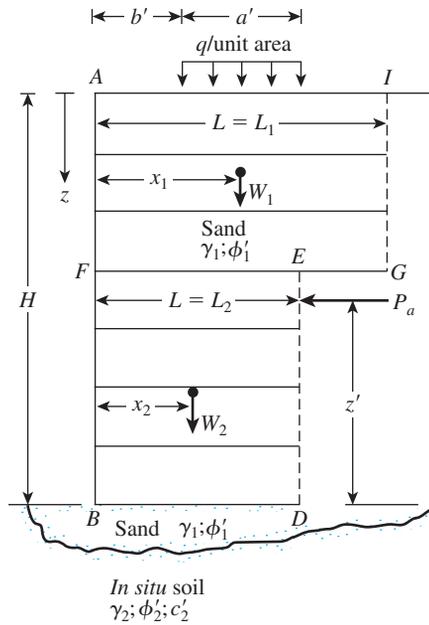

**Figure 13.29** Stability check for the retaining wall

where

$$W_1 = (\text{area } AFEG)(1)(\gamma_1)$$

$$W_2 = (\text{area } FBDE)(1)(\gamma_1)$$

⋮

So,

$$\begin{aligned}
 \text{FS}_{(\text{overturning})} &= \frac{M_R}{M_o} \\
 &= \frac{W_1 x_1 + W_2 x_2 + \cdots + qa' \left( b' + \frac{a'}{2} \right)}{\left( \int_0^H \sigma'_a dz \right) z'}
 \end{aligned} \tag{13.46}$$

*Step 10.* The check for *sliding* can be done by using Eq. (13.11), or

$$\text{FS}_{(\text{sliding})} = \frac{(W_1 + W_2 + \cdots + qa') [\tan(k\phi_1')]}{P_a} \tag{13.47}$$

where  $k \approx \frac{2}{3}$ .

*Step 11.* Check for ultimate bearing capacity failure, which can be given as

$$q_u = c'_2 N_c + \frac{1}{2} \gamma_2 L_2 N_\gamma \tag{13.48}$$

The bearing capacity factors  $N_c$  and  $N_\gamma$  correspond to the soil friction angle  $\phi'_2$ . (See Table 4.2.)

From Eq. 13.28, the vertical stress at  $z = H$  is

$$\sigma'_{o(H)} = \gamma_1 H + \sigma'_{o(2)} \quad (13.49)$$

So the factor of safety against bearing capacity failure is

$$FS_{(\text{bearing capacity})} = \frac{q_{\text{ult}}}{\sigma'_{o(H)}} \quad (13.50)$$

Generally, minimum values of  $FS_{(\text{overturning})} = 3$ ,  $FS_{(\text{sliding})} = 3$ , and  $FS_{(\text{bearing capacity failure})} = 3$  to 5 are recommended.

### Example 13.4

A 10-m-high retaining wall with galvanized steel-strip reinforcement in a granular backfill has to be constructed. Referring to Figure 13.27, given:

*Granular backfill:*  $\phi'_1 = 36^\circ$   
 $\gamma_1 = 16.5 \text{ kN/m}^3$

*Foundation soil:*  $\phi'_2 = 28^\circ$   
 $\gamma_2 = 17.3 \text{ kN/m}^3$   
 $c'_2 = 50 \text{ kN/m}^2$

*Galvanized steel reinforcement:*

Width of strip,  $w = 75 \text{ mm}$   
 $S_V = 0.6 \text{ m center-to-center}$   
 $S_H = 1 \text{ m center-to-center}$   
 $f_y = 240,00 \text{ kN/m}^2$   
 $\phi'_{\mu} = 20^\circ$

Required  $FS_{(B)} = 3$

Required  $FS_{(P)} = 3$

Check for the external and internal stability. Assume the corrosion rate of the galvanized steel to be 0.025 mm/year and the life span of the structure to be 50 years.

### Solution

Internal Stability Check

**Tie thickness:** Maximum tie force,  $T_{\text{max}} = \sigma'_{a(\text{max})} S_V S_H$

$$\sigma'_{a(\text{max})} = \gamma_1 H K_a = \gamma_1 H \tan^2 \left( 45 - \frac{\phi'_1}{2} \right)$$

so

$$T_{\max} = \gamma_1 H \tan^2 \left( 45 - \frac{\phi'_1}{2} \right) S_V S_H$$

From Eq. (13.43), for *tie break*,

$$t = \frac{(\sigma'_a S_V S_H) [\text{FS}_{(B)}]}{w f_y} = \frac{\left[ \gamma_1 H \tan^2 \left( 45 - \frac{\phi'_1}{2} \right) S_V S_H \right] \text{FS}_{(B)}}{w f_y}$$

or

$$t = \frac{\left[ (16.5)(10) \tan^2 \left( 45 - \frac{36}{2} \right) (0.6)(1) \right] (3)}{(0.075 \text{ m})(240,000 \text{ kN/m}^2)} = 0.00428 \text{ m} = 4.28 \text{ mm}$$

If the rate of corrosion is 0.025 mm/yr and the life span of the structure is 50 yr, then the actual thickness,  $t$ , of the ties will be

$$t = 4.28 + (0.025)(50) = 5.53 \text{ mm}$$

So a **tie thickness of 6 mm** would be enough.

**Tie length:** Refer to Eq. (13.42). For this case,  $\sigma'_a = \gamma_1 z K_a$  and  $\sigma'_o = \gamma_1 z$ , so

$$L = \frac{(H - z)}{\tan \left( 45 + \frac{\phi'_1}{2} \right)} + \frac{\text{FS}_{(p)} \gamma_1 z K_a S_V S_H}{2w \gamma_1 z \tan \phi'_\mu}$$

Now the following table can be prepared. (*Note:*  $\text{FS}_{(p)} = 3$ ,  $H = 10 \text{ m}$ ,  $w = 75 \text{ mm}$ , and  $\phi'_\mu = 20^\circ$ .)


$z(\text{m})$	Tie length $L$ (m) [Eq. (13.42)]
2	12.65
4	11.63
6	10.61
8	9.59
10	8.57

So use a **tie length of  $L = 13 \text{ m}$** .

External Stability Check

**Check for overturning:** Refer to Figure 13.30. For this case, using Eq. (13.46)

$$\text{FS}_{(\text{overturning})} = \frac{W_1 x_1}{\left[ \int_0^H \sigma'_a dz \right] z'}$$

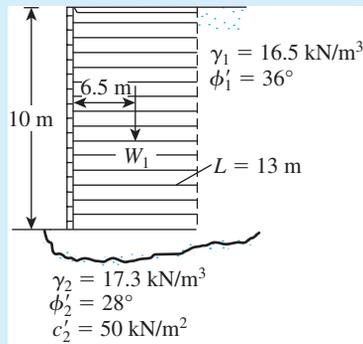

**Figure 13.30** Retaining wall with galvanized steel-strip reinforcement in the backfill

$$W_1 = \gamma_1 HL = (16.5)(10)(13) = 2145 \text{ kN/m}$$

$$x_1 = 6.5 \text{ m}$$

$$P_a = \int_0^H \sigma'_a dz = \frac{1}{2} \gamma_1 K_a H^2 = \left(\frac{1}{2}\right)(16.5)(0.26)(10)^2 = 214.5 \text{ kN/m}$$

$$z' = \frac{10}{3} = 3.33 \text{ m}$$

$$FS_{(\text{overturning})} = \frac{(2145)(6.5)}{(214.5)(3.33)} = \mathbf{19.52 > 3—OK}$$

**Check for sliding:** From Eq. (13.47)

$$FS_{(\text{sliding})} = \frac{W_1 \tan(k\phi'_1)}{P_a} = \frac{2145 \tan\left[\left(\frac{2}{3}\right)(36)\right]}{214.5} = \mathbf{4.45 > 3—OK}$$

**Check for bearing capacity:** For  $\phi'_2 = 28^\circ$ ,  $N_c = 25.8$ ,  $N_\gamma = 16.78$  (Table 4.2). From Eq. (13.48),

$$q_{\text{ult}} = c'_2 N_c + \frac{1}{2} \gamma_2 L N_\gamma$$

$$q_{\text{ult}} = (50)(25.8) + \left(\frac{1}{2}\right)(17.3)(13)(16.72) = 3170.16 \text{ kN/m}^2$$


From Eq. (13.49),

$$\sigma'_{o(H)} = \gamma_1 H = (16.5)(10) = 165 \text{ kN/m}^2$$

$$FS_{(\text{bearing capacity})} = \frac{q_{\text{ult}}}{\sigma'_{o(H)}} = \frac{3170.16}{165} = \mathbf{19.2 > 5—OK}$$

## 13.15 Retaining Walls with Geotextile Reinforcement


Figure 13.31 shows a retaining wall in which layers of geotextile have been used as reinforcement. As in Figure 13.29, the backfill is a granular soil. In this type of retaining wall, the facing of the wall is formed by lapping the sheets as shown with a lap length of  $l_l$ . When construction is finished, the exposed face of the wall must be covered; otherwise, the geotextile will deteriorate from exposure to ultraviolet light. *Bitumen emulsion* or *Gunitite* is sprayed on the wall face. A wire mesh anchored to the geotextile facing may be necessary to keep the coating on. Figure 13.32 shows the construction of a geotextile-reinforced retaining wall. Figure 13.33 shows a completed geosynthetic-reinforced soil wall. The wall is in

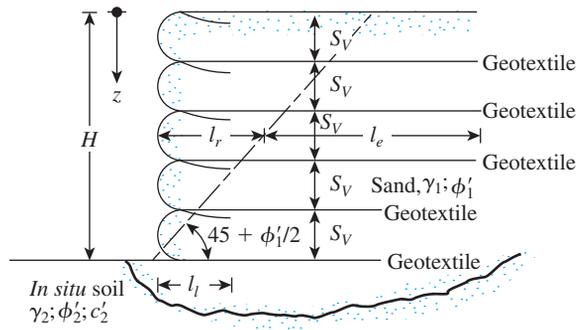

**Figure 13.31** Retaining wall with geotextile reinforcement



**Figure 13.32** Construction of a geotextile-reinforced retaining wall (Courtesy of Jonathan T. H. Wu, University of Colorado at Denver, Denver, Colorado)

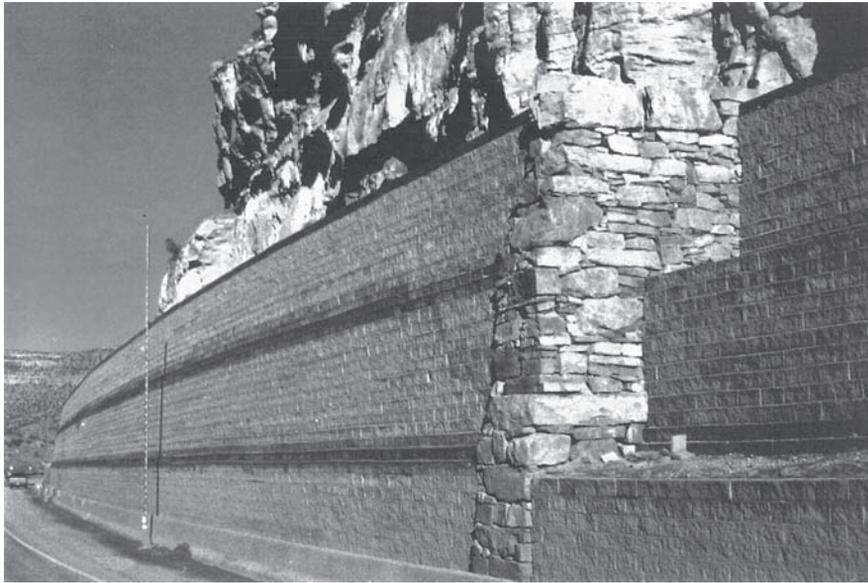

**Figure 13.33** A completed geotextile-reinforced retaining wall in DeBeque Canyon, Colorado (Courtesy of Jonathan T. H. Wu, University of Colorado at Denver, Denver, Colorado)

DeBeque Canyon, Colorado. Note the versatility of the facing type. In this case, single-tier concrete block facing is integrated with a three-tier facing via rock facing.

The design of this type of retaining wall is similar to that presented in Section 13.14. Following is a step-by-step procedure for design based on the recommendations of Bell et al. (1975) and Koerner (2005):

### Internal Stability

*Step 1.* Determine the active pressure distribution on the wall from the formula

$$\sigma'_a = K_a \sigma'_o = K_a \gamma_1 z \quad (13.51)$$

where

$K_a$  = Rankine active pressure coefficient =  $\tan^2(45 - \phi'_1/2)$

$\gamma_1$  = unit weight of the granular backfill

$\phi'_1$  = friction angle of the granular backfill

*Step 2.* Select a geotextile fabric with an allowable tensile strength,  $T_{\text{all}}$  (lb/ft or kN/m).

The allowable tensile strength for retaining wall construction may be expressed as (Koerner, 2005)

$$T_{\text{all}} = \frac{T_{\text{ult}}}{\text{RF}_{\text{id}} \times \text{RF}_{\text{cr}} \times \text{RF}_{\text{cbd}}} \quad (13.52)$$

where

- $T_{ult}$  = ultimate tensile strength  
 $RF_{id}$  = reduction factor for installation damage  
 $RF_{cr}$  = reduction factor for creep  
 $RF_{cbd}$  = reduction factor for chemical and biological degradation

The recommended values of the reduction factor are as follows (Koerner, 2005)

$RF_{id}$	1.1–2.0
$RF_{cr}$	2–4
$RF_{cbd}$	1–1.5

*Step 3.* Determine the vertical spacing of the layers at any depth  $z$  from the formula

$$S_V = \frac{T_{all}}{\sigma'_a FS_{(B)}} = \frac{T_{all}}{(\gamma_1 z K_a) [FS_{(B)}]} \quad (13.53)$$

Note that Eq. (13.53) is similar to Eq. (13.35). The magnitude of  $FS_{(B)}$  is generally 1.3 to 1.5.

*Step 4.* Determine the length of each layer of geotextile from the formula

$$L = l_r + l_e \quad (13.54)$$

where

$$l_r = \frac{H - z}{\tan\left(45 + \frac{\phi'_1}{2}\right)} \quad (13.55)$$

and

$$l_e = \frac{S_V \sigma'_a [FS_{(P)}]}{2\sigma'_o \tan \phi'_F} \quad (13.56)$$

in which

$$\sigma'_a = \gamma_1 z K_a$$

$$\sigma'_o = \gamma_1 z$$

$$FS_{(P)} = 1.3 \text{ to } 1.5$$

$\phi'_F$  = friction angle at geotextile–soil interface

$$\approx \frac{2}{3}\phi'_1$$

Note that Eqs. (13.54), (13.55), and (13.56) are similar to Eqs. (13.39), (13.41), and (13.40), respectively.

Based on the published results, the assumption of  $\phi'_F/\phi'_1 \approx \frac{2}{3}$  is reasonable and appears to be conservative. Martin et al. (1984) presented the following laboratory test results for  $\phi'_F/\phi'_1$  between various types of geotextiles and sand.

Type	$\phi'_f / \phi'_i$
Woven—monofilament/concrete sand	0.87
Woven—silt film/concrete sand	0.8
Woven—silt film/rounded sand	0.86
Woven—silt film/silty sand	0.92
Nonwoven—melt-bonded/concrete sand	0.87
Nonwoven—needle-punched/concrete sand	1.0
Nonwoven—needle-punched/rounded sand	0.93
Nonwoven—needle-punched/silty sand	0.91

Step 5. Determine the lap length,  $l_l$ , from

$$l_l = \frac{S_V \sigma'_a FS_{(P)}}{4\sigma'_o \tan \phi'_f} \quad (13.57)$$

The minimum lap length should be 1 m (3 ft).

### External Stability

Step 6. Check the factors of safety against overturning, sliding, and bearing capacity failure as described in Section 13.14 (Steps 9, 10, and 11).

### Example 13.5

A geotextile-reinforced retaining wall 5 m high is shown in Figure 13.34. For the granular backfill,  $\gamma_1 = 15.7 \text{ kN/m}^3$  and  $\phi'_1 = 36^\circ$ . For the geotextile,  $T_{ult} = 52.5 \text{ kN/m}$ . For the design of the wall, determine  $S_V$ ,  $L$ , and  $l_l$ . Use  $RF_{id} = 1.2$ ,  $RF_{cr} = 2.5$ , and  $RF_{cbd} = 1.25$ .

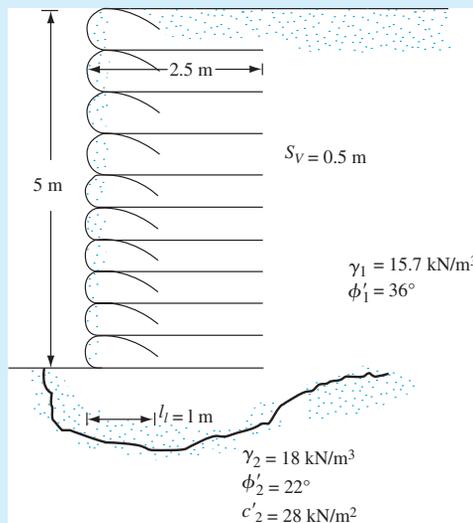


Figure 13.34 Geotextile-reinforced retaining wall

**Solution**

We have

$$K_a = \tan^2 \left( 45 - \frac{\phi'_1}{2} \right) = 0.26$$

Determination of  $S_V$

To find  $S_V$ , we make a few trials. From Eq. (13.53),

$$S_V = \frac{T_{\text{all}}}{(\gamma_1 z K_a) [\text{FS}_{(B)}]}$$

From Eq. (13.52),

$$T_{\text{all}} = \frac{T_{\text{uef}}}{\text{RF}_{\text{id}} \times \text{RF}_{\text{cr}} \times \text{RF}_{\text{cbd}}} = \frac{52.5}{1.2 \times 2.5 \times 1.25} = 14 \text{ kN/m}$$

With  $\text{FS}_{(B)} = 1.5$  at  $z = 2$  m,

$$S_V = \frac{14}{(15.7)(2)(0.26)(1.5)} = 1.14 \text{ m}$$

At  $z = 4$  m,

$$S_V = \frac{14}{(15.7)(4)(0.26)(1.5)} = 0.57 \text{ m}$$

At  $z = 5$  m,

$$S_V = \frac{14}{(15.7)(5)(0.26)(1.5)} = 0.46 \text{ m}$$

So, use  $S_V = 0.5$  m for  $z = 0$  to  $z = 5$  m (See Figure 13.34.)

Determination of  $L$

From Eqs. (13.54), (13.55), and (13.56),

$$L = \frac{(H - z)}{\tan \left( 45 + \frac{\phi'_1}{2} \right)} + \frac{S_V K_a [\text{FS}_{(P)}]}{2 \tan \phi'_F}$$

For  $\text{FS}_{(P)} = 1.5$ ,  $\tan \phi'_F = \tan \left[ \left( \frac{2}{3} \right) (36) \right] = 0.445$ , and it follows that

$$L = (0.51)(H - z) + 0.438 S_V$$

$H = 5$  m,  $S_V = 0.5$  m

At  $z = 0.5$  m:  $L = (0.51)(5 - 0.5) + (0.438)(0.5) = 2.514$  m

At  $z = 2.5$  m:  $L = (0.51)(5 - 2.5) + (0.438)(0.5) = 1.494$  m

So, use  $L = 2.5$  m throughout.

Determination of  $l_f$   
From Eq. (13.57),

$$l_f = \frac{S_V \sigma'_a [\text{FS}_{(P)}]}{4 \sigma'_o \tan \phi'_F}$$

$\sigma'_a = \gamma_1 z K_a$ ,  $\text{FS}_{(P)} = 1.5$ ; with  $\sigma'_o = \gamma_1 z$ ,  $\phi'_F = \frac{2}{3} \phi'_1$ . So

$$l_f = \frac{S_V K_a [\text{FS}_{(P)}]}{4 \tan \phi'_F} = \frac{S_V (0.26) (1.5)}{4 \tan \left[ \left( \frac{2}{3} \right) (36) \right]} = 0.219 S_V$$

$$l_f = 0.219 S_V = (0.219)(0.5) = 0.11 \text{ m} \leq 1 \text{ m}$$

So, use  $l_f = 1 \text{ m}$ . ■

### Example 13.6

Consider the results of the internal stability check given in Example 13.5. For the geotextile-reinforced retaining wall, calculate the factor of safety against overturning, sliding, and bearing capacity failure.

#### Solution

Refer to Figure 13.35.

Factor of Safety Against Overturning

$$\text{From Eq. (13.46), } \text{FS}_{(\text{overturning})} = \frac{W_1 x_1}{(P_a) \left( \frac{H}{3} \right)}$$

$$W_1 = (5)(2.5)(15.7) = 196.25 \text{ kN/m}$$

$$x_1 = \frac{2.5}{2} = 1.25 \text{ m}$$

$$P_a = \frac{1}{2} \gamma H^2 K_a = \left( \frac{1}{2} \right) (15.7)(5)^2 (0.26) = 51.03 \text{ kN/m}$$

Hence,

$$\text{FS}_{(\text{overturning})} = \frac{(196.25)(1.25)}{51.03(5/3)} = 2.88 < 3$$

(increase length of geotextile layers to 3 m)

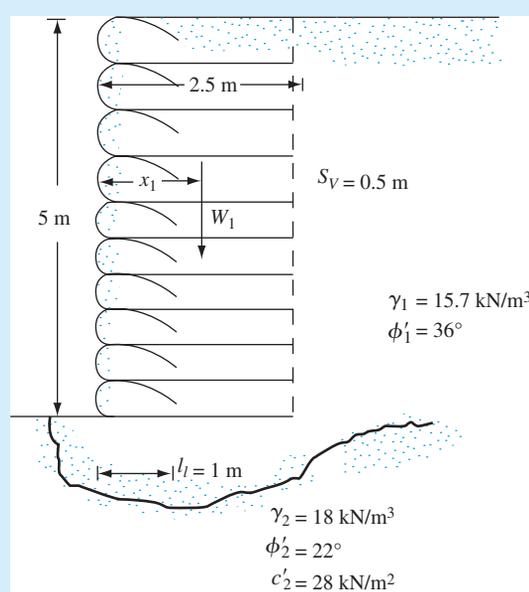


Figure 13.35 Stability check

Factor of Safety Against Sliding

From Eq. (13.47),

$$FS_{(\text{sliding})} = \frac{W_1 \tan\left(\frac{2}{3}\phi'_1\right)}{P_a} = \frac{(196.25) \left[ \tan\left(\frac{2}{3} \times 36\right) \right]}{51.03} = 1.71 > 1.5 - \text{O.K.}$$

Factor of Safety Against Bearing Capacity Failure

From Eq. (13.48),  $q_u = c'_2 N_c + \frac{1}{2} \gamma_2 L_2 N_\gamma$

Given:  $\gamma_2 = 18 \text{ kN/m}^3$ ,  $L_2 = 2.5 \text{ m}$ ,  $c'_2 = 28 \text{ kN/m}^2$ , and  $\phi'_2 = 22^\circ$ . From Table 4.2,  $N_c = 16.88$ , and  $N_\gamma = 7.13$ .

$$q_u = (28)(16.88) + \left(\frac{1}{2}\right)(18)(2.5)(7.13) \approx 633 \text{ kN/m}^2$$

From Eq. (13.50),

$$FS_{(\text{bearing capacity})} = \frac{q_u}{\sigma'_{o(H)}} = \frac{633}{\gamma_1 H} = \frac{633}{(15.7)(5)} = 8.06 > 3 - \text{O.K.}$$

## 13.16 Retaining Walls with Geogrid Reinforcement—General

Geogrids can also be used as reinforcement in granular backfill for the construction of retaining walls. Figure 13.36 shows typical schematic diagrams of retaining walls with geogrid reinforcement. Figure 13.37 shows some photographs of geogrid-reinforced retaining walls in the field.

Relatively few field measurements are available for lateral earth pressure on retaining walls constructed with geogrid reinforcement. Figure 13.38 shows a comparison of measured and design lateral pressures (Berg et al. 1986) for two retaining walls constructed with precast panel facing. The figure indicates that the measured earth pressures were substantially smaller than those calculated for the Rankine active case.

## 13.17 Design Procedure for Geogrid-Reinforced Retaining Wall

Figure 13.39 shows a schematic diagram of a concrete panel-faced wall with a granular backfill reinforced with layers of geogrid. The design process of the wall is essentially similar to that with geotextile reinforcement of the backfill given in Section 13.15. The following is a brief step-by-step procedure.

### Internal Stability

*Step 1.* Determine the active pressure at any depth  $z$  as [similar to Eq. (13.51)]:

$$\sigma'_a = K_a \gamma_1 z \quad (13.58)$$

where

$$K_a = \text{Rankine active pressure coefficient} = \tan^2 \left( 45 - \frac{\phi_1}{2} \right)$$

*Step 2.* Select a geogrid with allowable tensile strength,  $T_{\text{all}}$  [similar to Eq. (13.52)] (Koerner, 2005):

$$T_{\text{all}} = \frac{T_{\text{ult}}}{\text{RF}_{\text{id}} \times \text{RF}_{\text{cr}} \times \text{RF}_{\text{cbd}}} \quad (13.59)$$

where

$\text{RF}_{\text{id}}$  = reduction factor for installation damage (1.1 to 1.4)


$\text{RF}_{\text{cr}}$  = reduction factor for creep (2.0 to 3.0)

$\text{RF}_{\text{cbd}}$  = reduction factor for chemical and biological degradation (1.1 to 1.5).


*Step 3.* Obtain the vertical spacing of the geogrid layers,  $S_V$ , as

$$S_V = \frac{T_{\text{all}} C_r}{\sigma'_a \text{FS}_{(B)}} \quad (13.60)$$


where  $C_r$  = coverage ratio for geogrid.

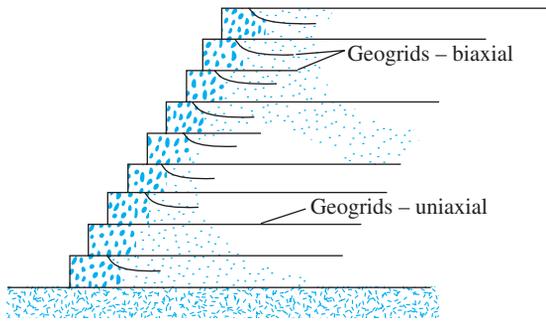

(a)

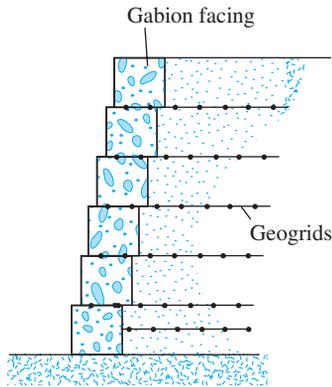

(b)

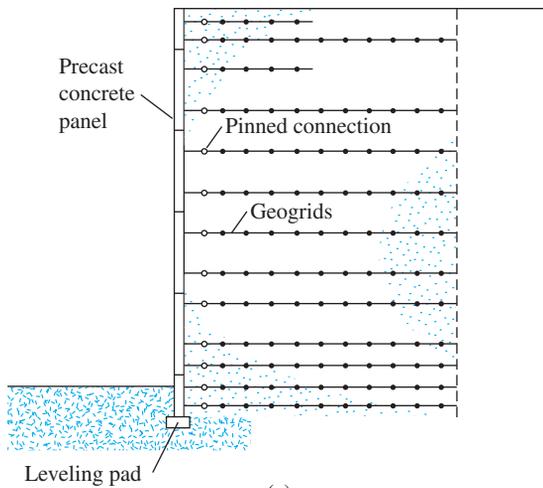


(c)

**Figure 13.36** Typical schematic diagrams of retaining walls with geogrid reinforcement: (a) geogrid wraparound wall; (b) wall with gabion facing; (c) concrete panel-faced wall (Based on Berg et al., 1986)



(a)

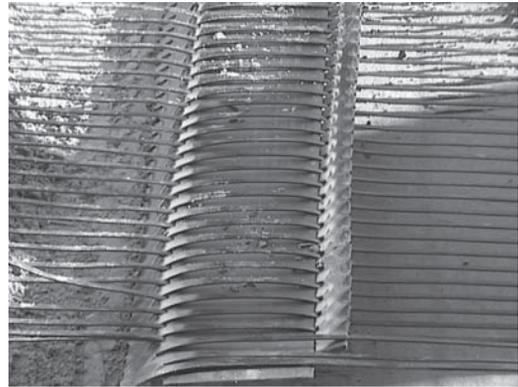


(b)




(c)

**Figure 13.37** (a) HDPE geogrid-reinforced wall with precast concrete panel facing under construction; (b) mechanical splice between two pieces of geogrid in the working direction; (c) segmented concrete-block faced wall reinforced with uniaxial geogrid (Courtesy of *Tensar International Corporation, Atlanta, Georgia*)

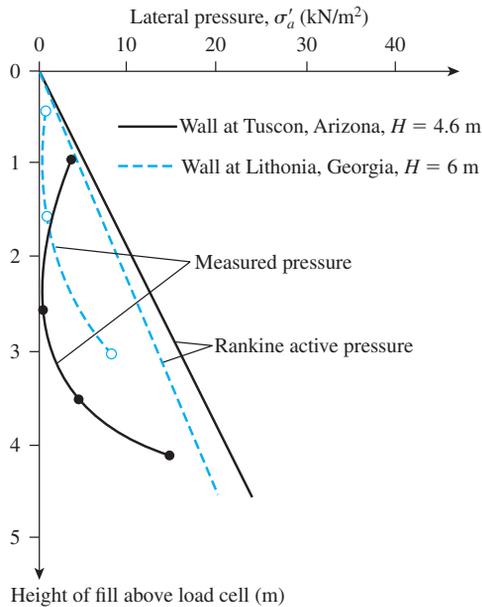

**Figure 13.38** Comparison of theoretical and measured lateral pressures in geogrid reinforced retaining walls (Based on Berg et al., 1986)

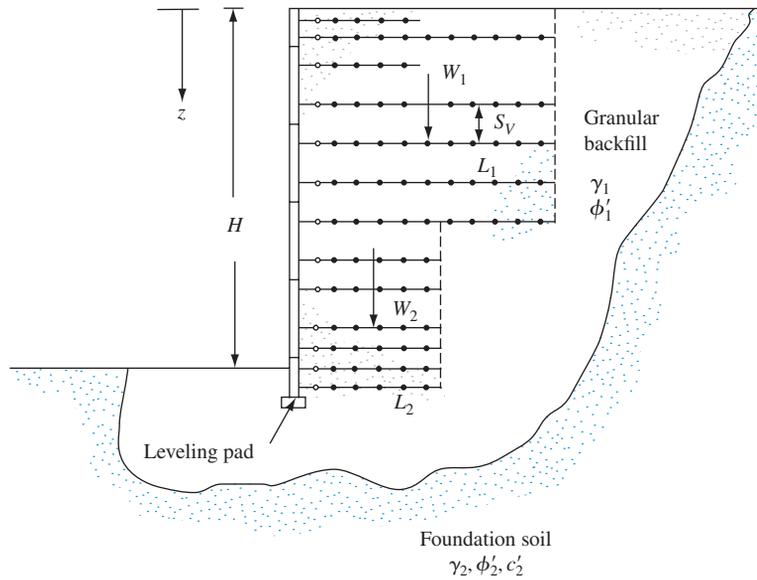

**Figure 13.39** Design of geogrid-reinforced retaining wall

The *coverage ratio* is the fractional plan area at any particular elevation that is actually occupied by geogrid. For example, if there is a 0.3-m-wide (1 ft) space between each 1.2-m-wide (4 ft) piece of geogrid, the coverage ratio is

$$C_r = \frac{1.2 \text{ m}}{1.2 \text{ m} + 0.3 \text{ m}} = 0.8$$

**Step 4.** Calculate the length of each layer of geogrid at a depth  $z$  as [Eq. (13.54)]

$$L = l_r + l_e$$

$$l_r = \frac{H - z}{\tan^2\left(45 - \frac{\phi'_1}{2}\right)} \quad (13.61)$$

For determination of  $l_e$  [similar to Eq. (13.56)],

$$\begin{aligned} \text{FS}_{(p)} &= \frac{\text{resistance to pullout at a given normal effective stress}}{\text{pullout force}} \quad (13.62) \\ &= \frac{(2)(l_e)(C_i \sigma'_0 \tan \phi'_1)(C_r)}{S_v \sigma'_a} \\ &= \frac{(2)(l_e)(C_i \tan \phi'_1)(C_r)}{S_v K_a} \end{aligned}$$

where  $C_i$  = interaction coefficient or

$$l_e = \frac{S_V K_a FS_{(P)}}{2C_r C_i \tan \phi'_1} \quad (13.63)$$

Thus, at a given depth  $z$ , the total length,  $L$ , of the geogrid layer is

$$L = l_r + l_e = \frac{H - z}{\tan\left(45 + \frac{\phi'_1}{2}\right)} + \frac{S_V K_a FS_{(P)}}{2C_r C_i \tan \phi'_1} \quad (13.64)$$

The interaction coefficient,  $C_i$ , can be determined experimentally in the laboratory. The following is an approximate range for  $C_i$  for various types of backfill.

Gravel, sandy gravel	0.75–0.8
Well graded sand, gravelly sand	0.7–0.75
Fine sand, silty sand	0.55–0.6

## External Stability

Check the factors of safety against overturning, sliding, and bearing capacity failure as described in Section 13.14 (Steps 9, 10, and 11).

### Example 13.7

Consider a geogrid-reinforced retaining wall. Referring to Figure 13.39, given:  $H = 6$  m,  $\gamma_1 = 16.5$  kN/m<sup>3</sup>,  $\phi'_1 = 35^\circ$ ,  $T_{\text{all}} = 45$  kN/m,  $FS_{(B)} = 1.5$ ,  $FS_{(P)} = 1.5$ ,  $C_r = 0.8$ , and  $C_i = 0.75$ . For the design of the wall, determine  $S_V$  and  $L$ .

#### Solution

$$K_a = \tan^2\left(45 - \frac{\phi'_1}{2}\right) = \tan^2\left(45 - \frac{35}{2}\right) = 0.27$$

Determination of  $S_V$

From Eq. (13.60),

$$S_v = \frac{T_{\text{all}} C_r}{\sigma'_a FS_{(B)}} = \frac{T_{\text{all}} C_r}{\gamma z K_a FS_{(B)}} = \frac{(45)(0.8)}{(16.5)(z)(0.27)(1.5)} = \frac{5.39}{z}$$

$$\text{At } z = 2 \text{ m: } S_v = \frac{5.39}{2} = 2.7 \text{ m}$$

$$\text{At } z = 4 \text{ m: } S_v = \frac{5.39}{4} = 1.35 \text{ m}$$

$$\text{At } z = 5 \text{ m: } S_v = \frac{5.39}{5} = 1.08 \text{ m}$$

Use  $S_V \approx 1$  m

Determination of  $L$

From Eq. (13.64),

$$L = \frac{H - z}{\tan\left(45 + \frac{\phi'_1}{2}\right)} + \frac{S_v K_a FS_{(P)}}{2C_r C_i \tan \phi'_1} = \frac{6 - z}{\tan\left(45 + \frac{35}{2}\right)} + \frac{(1 \text{ m})(0.27)(1.5)}{(2)(0.8)(0.75)(\tan 35^\circ)}$$

At  $z = 1 \text{ m}$ :  $L = 0.52(6 - 1) + 0.482 = 3.08 \text{ m} \approx 3.1 \text{ m}$

At  $z = 3 \text{ m}$ :  $L = 0.52(6 - 3) + 0.482 = 2.04 \text{ m} \approx 2.1 \text{ m}$

At  $z = 5 \text{ m}$ :  $L = 0.52(6 - 5) + 0.482 = 1.0 \text{ m}$

So, use  $L = 3 \text{ m}$  for  $z = 0$  to  $6 \text{ m}$ . ■

## Problems

In Problems 13.1 through 13.4, use  $\gamma_{\text{concrete}} = 23.58 \text{ kN/m}^3$ . Also, in Eq. (13.11), use  $k_1 = k_2 = 2/3$  and  $P_p = 0$ .

**13.1** For the cantilever retaining wall shown in Figure P13.1, let the following data be given:

Wall dimensions:  $H = 8 \text{ m}$ ,  $x_1 = 0.4 \text{ m}$ ,  $x_2 = 0.6 \text{ m}$ ,  $x_3 = 1.5 \text{ m}$ ,  $x_4 = 3.5 \text{ m}$ ,  $x_5 = 0.96 \text{ m}$ ,  $D = 1.75 \text{ m}$ ,  $\alpha = 10^\circ$

Soil properties:  $\gamma_1 = 16.8 \text{ kN/m}^3$ ,  $\phi'_1 = 32^\circ$ ,  $\gamma_2 = 17.6 \text{ kN/m}^3$ ,  $\phi'_2 = 28^\circ$ ,  $c'_2 = 30 \text{ kN/m}^2$

Calculate the factor of safety with respect to overturning, sliding, and bearing capacity.

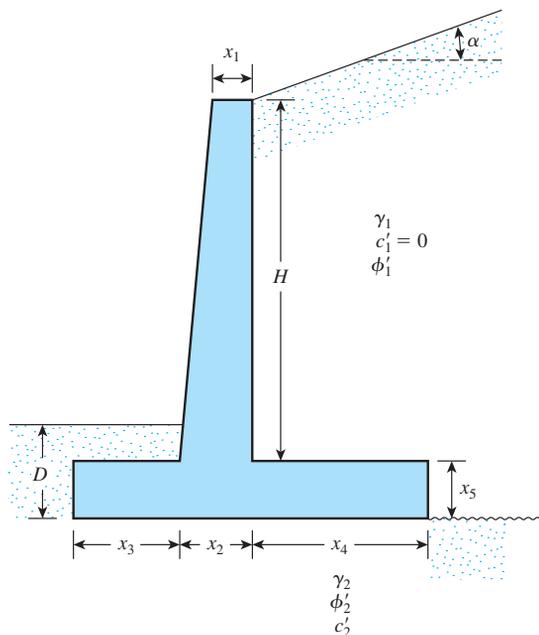


Figure P13.1

**13.2** Repeat Problem 13.1 with the following:

Wall dimensions:  $H = 6.5$  m,  $x_1 = 0.3$  m,  $x_2 = 0.6$  m,  $x_3 = 0.8$  m,  $x_4 = 2$  m,  
 $x_5 = 0.8$  m,  $D = 1.5$  m,  $\alpha = 0^\circ$

Soil properties:  $\gamma_1 = 18.08$  kN/m<sup>3</sup>,  $\phi_1' = 36^\circ$ ,  $\gamma_2 = 19.65$  kN/m<sup>3</sup>,  $\phi_2' = 15^\circ$ ,  
 $c_2' = 30$  kN/m<sup>2</sup>

**13.3** A gravity retaining wall is shown in Figure P13.3. Calculate the factor of safety with respect to overturning and sliding, given the following data:

Wall dimensions:  $H = 6$  m,  $x_1 = 0.6$  m,  $x_2 = 2$  m,  $x_3 = 2$  m,  $x_4 = 0.5$  m,  $x_5 = 0.75$  m,  
 $x_6 = 0.8$  m,  $D = 1.5$  m

Soil properties:  $\gamma_1 = 16.5$  kN/m<sup>3</sup>,  $\phi_1' = 32^\circ$ ,  $\gamma_2 = 18$  kN/m<sup>3</sup>,  $\phi_2' = 22^\circ$ ,  $c_2' = 40$  kN/m<sup>2</sup>

Use the Rankine active earth pressure in your calculation.

**13.4** Repeat Problem 13.3 using Coulomb's active earth pressure in your calculation and letting  $\delta' = 2/3 \phi_1'$ .

**13.5** In Figure 13.27a, use the following parameters:

Wall:  $H = 8$  m


Soil:  $\gamma_1 = 17$  kN/m<sup>3</sup>,  $\phi_1' = 35^\circ$

Reinforcement:  $S_V = 1$  m and  $S_H = 1.5$  m

Surcharge:  $q = 70$  kN/m<sup>2</sup>,  $a' = 1.5$  m, and  $b' = 2$  m

Calculate the vertical stress  $\sigma'_o$  [Eqs. (13.28), (13.29) and (13.30)] at  $z = 2$  m, 4 m, 6 m, and 8 m.

**13.6** For the data given in Problem 13.5, calculate the lateral pressure  $\sigma'_a$  at  $z = 2$  m, 4 m, 6 m and 8 m. Use Eqs. (13.31), (13.32), and (13.33).

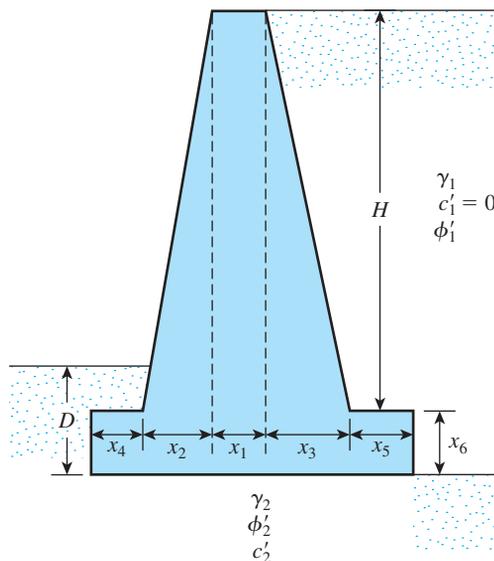

**Figure P13.3**

- 13.7** A reinforced earth retaining wall (Figure 13.27) is to be 10-m-high. Here,
- Backfill: unit weight,  $\gamma_1 = 16 \text{ kN/m}^3$  and soil friction angle,  $\phi'_1 = 34^\circ$
- Reinforcement: vertical spacing,  $S_V = 1 \text{ m}$ ; horizontal spacing,  $S_H = 1.25 \text{ m}$ ; width of reinforcement = 120 mm.,  $f_y = 260 \text{ MN/m}^2$ ;  $\phi_\mu = 25^\circ$ ; factor of safety against tie pullout = 3; and factor of safety against tie breaking = 3
- Determine:
- The required thickness of ties
  - The required maximum length of ties
- 13.8** In Problem 13.7 assume that the ties at all depths are the length determined in Part b. For the *in situ* soil,  $\phi'_2 = 25^\circ$ ,  $\gamma_2 = 15.5 \text{ kN/m}^3$ ,  $c'_2 = 30 \text{ kN/m}^2$ . Calculate the factor of safety against (a) overturning, (b) sliding, and (c) bearing capacity failure.
- 13.9** A retaining wall with geotextile reinforcement is 6-m high. For the granular backfill,  $\gamma_1 = 15.9 \text{ kN/m}^3$  and  $\phi'_1 = 30^\circ$ . For the geotextile,  $T_{\text{all}} = 16 \text{ kN/m}$ . For the design of the wall, determine  $S_V$ ,  $L$ , and  $l_t$ . Use  $\text{FS}_{(B)} = \text{FS}_{(P)} = 1.5$ .
- 13.10** With the  $S_V$ ,  $L$ , and  $l_t$  determined in Problem 13.9, check the overall stability (i.e., factor of safety against overturning, sliding, and bearing capacity failure) of the wall. For the *in situ* soil,  $\gamma_2 = 16.8 \text{ kN/m}^3$ ,  $\phi'_2 = 20^\circ$ , and  $c'_2 = 55 \text{ kN/m}^2$ .

## References

- BELL, J. R., STILLEY, A. N., and VANDRE, B. (1975). "Fabric Retaining Earth Walls," *Proceedings, Thirteenth Engineering Geology and Soils Engineering Symposium*, Moscow, ID.
- BENTLER, J. G. and LABUZ, J. F. (2006). "Performance of a Cantilever Retaining Wall," *Journal of Geotechnical and Geoenvironmental Engineering*, American Society of Civil Engineers, Vol. 132, No. 8, pp. 1062–1070.
- BERG, R. R., BONAPARTE, R., ANDERSON, R. P., and Chouery, V. E. (1986). "Design Construction and Performance of Two Tensar Geogrid Reinforced Walls," *Proceedings, Third International Conference on Geotextiles*, Vienna, pp. 401–406.
- BINQUET, J. and LEE, K. L. (1975). "Bearing Capacity Analysis of Reinforced Earth Slabs," *Journal of the Geotechnical Engineering Division*, American Society of Civil Engineers, Vol. 101, No. GT12, pp. 1257–1276.
- CARROLL, R., Jr. (1988). "Specifying Geogrids," *Geotechnical Fabric Report*, Industrial Fabric Association International, St. Paul, March/April.
- CASAGRANDE, L. (1973). "Comments on Conventional Design of Retaining Structure," *Journal of the Soil Mechanics and Foundations Division*, ASCE, Vol. 99, No. SM2, pp. 181–198.
- DARBIN, M. (1970). "Reinforced Earth for Construction of Freeways" (in French), *Revue Générale des Routes et Aerodromes*, No. 457, September.
- ELMAN, M. T. and TERRY, C. F. (1988). "Retaining Walls with Sloped Heel," *Journal of Geotechnical Engineering*, American Society of Civil Engineers, Vol. 114, No. GT10, pp. 1194–1199.
- KOERNER, R. B. (2005). *Design with Geosynthetics*, 5th. ed., Prentice Hall, Englewood Cliffs, NJ.
- LABA, J. T. and KENNEDY, J. B. (1986). "Reinforced Earth Retaining Wall Analysis and Design," *Canadian Geotechnical Journal*, Vol. 23, No. 3, pp. 317–326.
- LEE, K. L., ADAMS, B. D., and VAGNERON, J. J. (1973). "Reinforced Earth Retaining Walls," *Journal of the Soil Mechanics and Foundations Division*, American Society of Civil Engineers, Vol. 99, No. SM10, pp. 745–763.

- MARTIN, J. P., KOERNER, R. M., and WHITTY, J. E. (1984). "Experimental Friction Evaluation of Slippage Between Geomembranes, Geotextiles, and Soils," *Proceedings*, International Conference on Geomembranes, Denver, pp. 191–196.
- SARSBY, R. W. (1985). "The Influence of Aperture Size/Particle Size on the Efficiency of Grid Reinforcement," *Proceedings, 2nd Canadian Symposium on Geotextiles and Geomembranes*, Edmonton, pp. 7–12.
- SCHLOSSER, F. and LONG, N. (1974). "Recent Results in French Research on Reinforced Earth," *Journal of the Construction Division*, American Society of Civil Engineers, Vol. 100, No. CO3, pp. 113–237.
- SCHLOSSER, F. and VIDAL, H. (1969). "Reinforced Earth" (in French), *Bulletin de Liaison des Laboratoires Routier*, Ponts et Chaussées, Paris, France, November, pp. 101–144.
- TENSAR CORPORATION (1986). Tensar Technical Note. No. TTN:RW1, August.
- TERZAGHI, K. and PECK, R. B. (1967). *Soil Mechanics in Engineering Practice*, Wiley, New York.
- TRANSPORTATION RESEARCH BOARD (1995). Transportation Research Circular No. 444, National Research Council, Washington, D.C.
- VIDAL, H. (1966). "La terre Armée," *Annales de l'Institut Technique du Bâtiment et des Travaux Publiques*, France, July–August, pp. 888–938.

# 14 Sheet-Pile Walls

## 14.1 Introduction

Connected or semiconnected sheet piles are often used to build continuous walls for waterfront structures that range from small waterfront pleasure boat launching facilities to large dock facilities. (See Figure 14.1.) In contrast to the construction of other types of retaining wall, the building of sheet-pile walls does not usually require dewatering of the site. Sheet piles are also used for some temporary structures, such as braced cuts. (See Chapter 15.) The principles of sheet-pile wall design are discussed in the current chapter.

Several types of sheet pile are commonly used in construction: (a) wooden sheet piles, (b) precast concrete sheet piles, and (c) steel sheet piles. Aluminum sheet piles are also marketed.

*Wooden sheet piles* are used only for temporary, light structures that are above the water table. The most common types are ordinary wooden planks and *Wakefield piles*. The wooden planks are about 50 mm × 300 mm (2 in. × 12 in.) in cross section and are driven edge to edge (Figure 14.2a). Wakefield piles are made by nailing three planks together, with the middle plank offset by 50 to 75 mm (2 to 3 in.) (Figure 14.2b). Wooden planks can also be milled to form *tongue-and-groove piles*, as shown in Figure 14.2c. Figure 14.2d shows


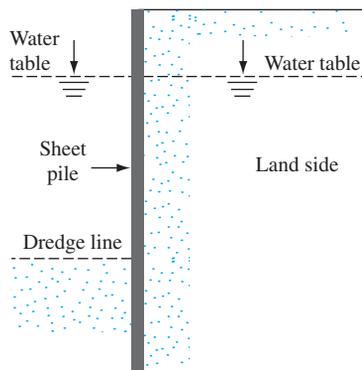


Figure 14.1 Example of waterfront sheet-pile wall

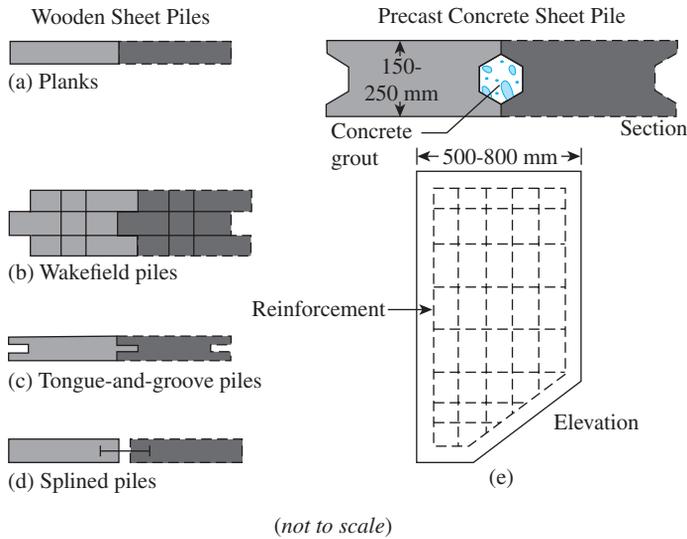


**Figure 14.2** Various types of wooden and concrete sheet pile

another type of wooden sheet pile that has precut grooves. Metal *splines* are driven into the grooves of the adjacent sheetings to hold them together after they are sunk into the ground.

*Precast concrete sheet piles* are heavy and are designed with reinforcements to withstand the permanent stresses to which the structure will be subjected after construction and also to handle the stresses produced during construction. In cross section, these piles are about 500 to 800 mm (20 to 32 in.) wide and 150 to 250 mm (6 to 10 in.) thick. Figure 14.2e is a schematic diagram of the elevation and the cross section of a reinforced concrete sheet pile.

*Steel sheet piles* in the United States are about 10 to 13 mm (0.4 to 0.5 in.) thick. European sections may be thinner and wider. Sheet-pile sections may be *Z*, *deep arch*, *low arch*, or *straight web* sections. The interlocks of the sheet-pile sections are shaped like a *thumb-and-finger* or *ball-and-socket* joint for watertight connections. Figure 14.3a is a schematic diagram of the thumb-and-finger type of interlocking for straight web sections. The ball-and-socket type of interlocking for *Z* section piles is shown in Figure 14.3b. Figure 14.4 shows some sheet piles at a construction site. Figure 14.5 shows a small enclosure with steel sheet piles for an excavation work. Table 14.1 lists the properties of

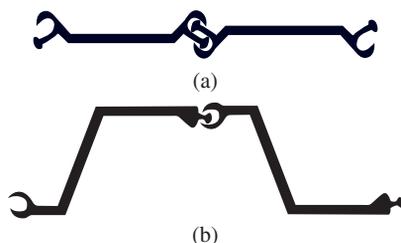

**Figure 14.3** (a) Thumb-and-finger type sheet-pile connection; (b) ball-and-socket type sheet-pile connection



**Figure 14.4** Some steel sheet piles at a construction site (Courtesy of N. Sivakugan, James Cook University, Australia)



**Figure 14.5** A small enclosure with steel sheet piles for an excavation work (Courtesy of N. Sivakugan, James Cook University, Australia)


**Table 14.1** Properties of Some Commercially Available Sheet-Pile Sections (Based on Hammer and Steel, Inc., Hazelwood, Missouri, USA)

Section designation	H mm (in.)	L mm (in.)	f mm (in.)	w mm (in.)	Section modulus m <sup>3</sup> /m of wall (in. <sup>3</sup> /ft of wall)	Moment of inertia m <sup>4</sup> /m of wall (in. <sup>4</sup> /ft of wall)
PZC-12	318.0 (12.52)	708.2 (27.88)	8.51 (0.335)	8.51 (0.335)	120.42 × 10 <sup>-5</sup> (22.4)	192.06 × 10 <sup>-6</sup> (140.6)
PZC-13	319.0 (12.56)	708.2 (27.88)	9.53 (0.375)	9.53 (0.375)	130.1 × 10 <sup>-5</sup> (24.2)	207.63 × 10 <sup>-6</sup> (152.0)
PZC-14	320.0 (12.6)	708.2 (27.88)	10.67 (0.420)	10.67 (0.420)	139.78 × 10 <sup>-5</sup> (26.0)	225.12 × 10 <sup>-6</sup> (164.8)
PZC-17	386.3 (15.21)	635.0 (25.00)	8.51 (0.335)	8.51 (0.335)	166.67 × 10 <sup>-5</sup> (31.0)	322.38 × 10 <sup>-6</sup> (236.6)
PZC-18	387.4 (15.25)	635.0 (25.00)	9.53 (0.375)	9.53 (0.375)	180.1 × 10 <sup>-5</sup> (33.5)	349.01 × 10 <sup>-6</sup> (255.5)
PZC-19	388.6 (15.30)	635.0 (25.00)	10.67 (0.420)	10.67 (0.420)	194.07 × 10 <sup>-5</sup> (36.1)	377.97 × 10 <sup>-6</sup> (276.7)
PZC-26	449.6 (17.70)	708.2 (27.88)	15.24 (0.60)	13.34 (0.525)	260.2 × 10 <sup>-5</sup> (48.4)	584.78 × 10 <sup>-6</sup> (428.1)
PZ-22	235.0 (9.25)	558.8 (22.00)	9.53 (0.375)	9.53 (0.375)	98.92 × 10 <sup>-5</sup> (18.4)	116.2 × 10 <sup>-6</sup> (85.1)
PZ-27	307.3 (12.1)	457.2 (18.00)	9.53 (0.375)	9.53 (0.375)	166.66 × 10 <sup>-5</sup> (31.00)	255.9 × 10 <sup>-6</sup> (187.3)
PZ-35	383.5 (15.1)	575.1 (22.64)	15.37 (0.605)	12.7 (0.5)	262.9 × 10 <sup>-5</sup> (48.9)	504.6 × 10 <sup>-6</sup> (369.4)
PZ-40	416.6 (16.4)	499.1 (19.69)	15.24 (0.6)	12.7 (0.5)	329.5 × 10 <sup>-5</sup> (61.3)	686.7 × 10 <sup>-6</sup> (502.7)

(Continued)

Table 14.1 (Continued)

Section designation	H mm (in.)	L mm (in.)	f mm (in.)	w mm (in.)	Section modulus m <sup>3</sup> /m of wall (in. <sup>3</sup> /ft of wall)	Moment of inertia m <sup>4</sup> /m of wall (in. <sup>4</sup> /ft of wall)
PS-27.5	—	500 (19.69)	—	10.16 (0.4)	$10.21 \times 10^{-5}$ (1.9)	$4.1 \times 10^{-6}$ (3.0)
PS-31	—	500 (19.69)	—	12.7 (0.5)	$10.21 \times 10^{-5}$ (1.9)	$4.1 \times 10^{-6}$ (3.0)

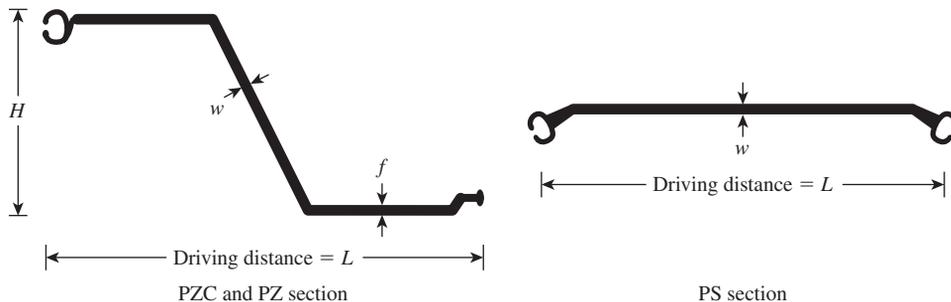

the steel sheet-pile sections produced by Hammer & Steel, Inc. of Hazelwood, Missouri. The allowable design flexural stress for the steel sheet piles is as follows:


Type of steel	Allowable stress	
ASTM A-328	170 MN/m <sup>2</sup>	(25,000 lb/in <sup>2</sup> )
ASTM A-572	210 MN/m <sup>2</sup>	(30,000 lb/in <sup>2</sup> )
ASTM A-690	210 MN/m <sup>2</sup>	(30,000 lb/in <sup>2</sup> )

Steel sheet piles are convenient to use because of their resistance to the high driving stress that is developed when they are being driven into hard soils. Steel sheet piles are also lightweight and reusable.

## 14.2 Construction Methods

Sheet-pile walls may be divided into two basic categories: (a) cantilever and (b) anchored.

In the construction of sheet-pile walls, the sheet pile may be driven into the ground and then the backfill placed on the land side, or the sheet pile may first be driven into the ground and the soil in front of the sheet pile dredged. In either case, the soil used for backfill behind the sheet-pile wall is usually granular. The soil below the dredge line may

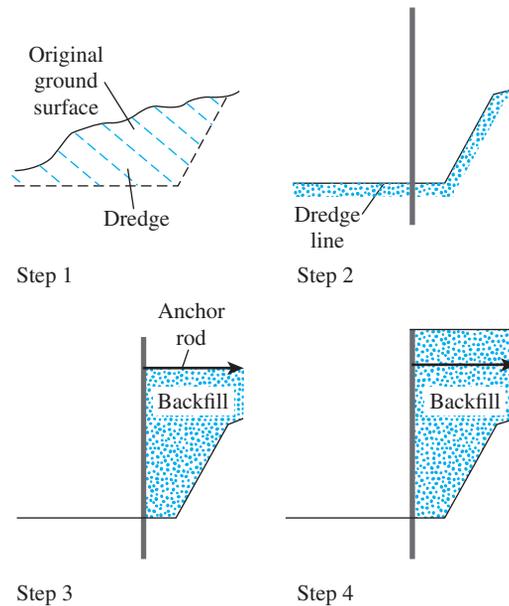

**Figure 14.6** Sequence of construction for a backfilled structure

be sandy or clayey. The surface of soil on the water side is referred to as the *mud line* or *dredge line*.

Thus, construction methods generally can be divided into two categories (Tsinker, 1983):

1. Backfilled structure
2. Dredged structure

The sequence of construction for a *backfilled structure* is as follows (see Figure 14.6):

- Step 1.* Dredge the *in situ* soil in front and back of the proposed structure.
- Step 2.* Drive the sheet piles.
- Step 3.* Backfill up to the level of the anchor, and place the anchor system.
- Step 4.* Backfill up to the top of the wall.

For a cantilever type of wall, only Steps 1, 2, and 4 apply. The sequence of construction for a *dredged structure* is as follows (see Figure 14.7):

- Step 1.* Drive the sheet piles.
- Step 2.* Backfill up to the anchor level, and place the anchor system.
- Step 3.* Backfill up to the top of the wall.
- Step 4.* Dredge the front side of the wall.

With cantilever sheet-pile walls, Step 2 is not required.

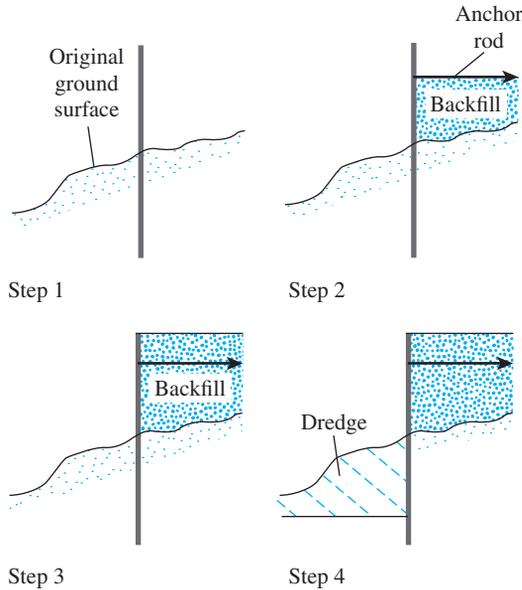


Figure 14.7 Sequence of construction for a dredged structure

### 14.3 Cantilever Sheet-Pile Walls

Cantilever sheet-pile walls are usually recommended for walls of moderate height—about 6 m ( $\approx 20$  ft) or less, measured above the dredge line. In such walls, the sheet piles act as a wide cantilever beam above the dredge line. The basic principles for estimating net lateral pressure distribution on a cantilever sheet-pile wall can be explained with the aid of Figure 14.8. The figure shows the nature of lateral yielding of a cantilever wall penetrating sand.

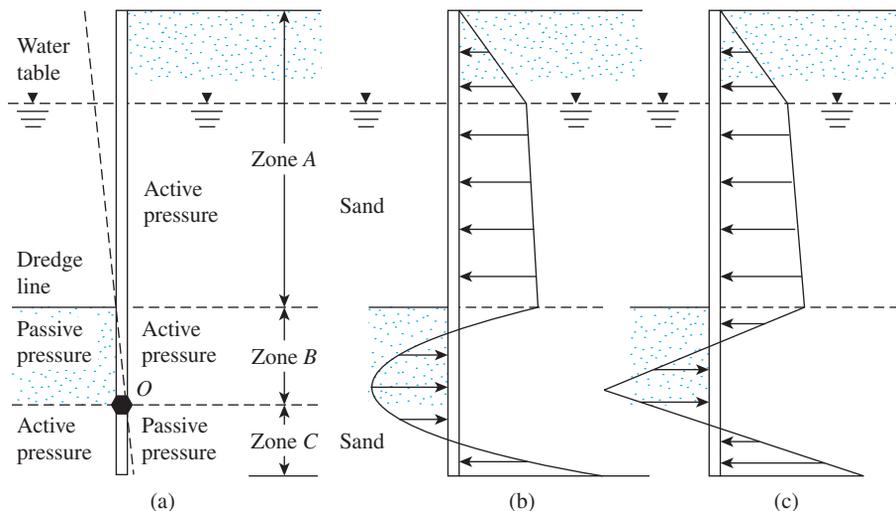


Figure 14.8 Cantilever sheet pile penetrating sand



where

$$K_a = \text{Rankine active pressure coefficient} = \tan^2(45 - \phi'/2)$$

$$\gamma = \text{unit weight of soil above the water table}$$

Similarly, the active pressure at a depth  $z = L_1 + L_2$  (i.e., at the level of the dredge line) is

$$\sigma'_2 = (\gamma L_1 + \gamma' L_2) K_a \quad (14.2)$$

where  $\gamma' = \text{effective unit weight of soil} = \gamma_{\text{sat}} - \gamma_w$ .

Note that, at the level of the dredge line, the hydrostatic pressures from both sides of the wall are the same magnitude and cancel each other.

To determine the net lateral pressure below the dredge line up to the point of rotation,  $O$ , as shown in Figure 14.8a, an engineer has to consider the passive pressure acting from the left side (the water side) toward the right side (the land side) of the wall and also the active pressure acting from the right side toward the left side of the wall. For such cases, ignoring the hydrostatic pressure from both sides of the wall, the active pressure at depth  $z$  is

$$\sigma'_a = [\gamma L_1 + \gamma' L_2 + \gamma'(z - L_1 - L_2)] K_a \quad (14.3)$$

Also, the passive pressure at depth  $z$  is

$$\sigma'_p = \gamma'(z - L_1 - L_2) K_p \quad (14.4)$$

where  $K_p = \text{Rankine passive pressure coefficient} = \tan^2(45 + \phi'/2)$ .

Combining Eqs. (14.3) and (14.4) yields the net lateral pressure, namely,

$$\begin{aligned} \sigma' &= \sigma'_a - \sigma'_p = (\gamma L_1 + \gamma' L_2) K_a - \gamma'(z - L_1 - L_2) (K_p - K_a) \\ &= \sigma'_2 - \gamma'(z - L) (K_p - K_a) \end{aligned} \quad (14.5)$$

where  $L = L_1 + L_2$ .

The net pressure,  $\sigma'$  equals zero at a depth  $L_3$  below the dredge line, so

$$\sigma'_2 - \gamma'(z - L) (K_p - K_a) = 0$$

or

$$(z - L) = L_3 = \frac{\sigma'_2}{\gamma'(K_p - K_a)} \quad (14.6)$$

Equation (14.6) indicates that the slope of the net pressure distribution line  $DEF$  is 1 vertical to  $(K_p - K_a)\gamma'$  horizontal, so, in the pressure diagram,

$$\overline{HB} = \sigma'_3 = L_4(K_p - K_a)\gamma' \quad (14.7)$$

At the bottom of the sheet pile, passive pressure,  $\sigma'_p$ , acts from the right toward the left side, and active pressure acts from the left toward the right side of the sheet pile, so, at  $z = L + D$ ,

$$\sigma'_p = (\gamma L_1 + \gamma' L_2 + \gamma' D) K_p \quad (14.8)$$

At the same depth,

$$\sigma'_a = \gamma' DK_a \quad (14.9)$$

Hence, the net lateral pressure at the bottom of the sheet pile is

$$\begin{aligned} \sigma'_p - \sigma'_a &= \sigma'_4 = (\gamma L_1 + \gamma' L_2) K_p + \gamma' D (K_p - K_a) \\ &= (\gamma L_1 + \gamma' L_2) K_p + \gamma' L_3 (K_p - K_a) + \gamma' L_4 (K_p - K_a) \\ &= \sigma'_5 + \gamma' L_4 (K_p - K_a) \end{aligned} \quad (14.10)$$

where

$$\sigma'_5 = (\gamma L_1 + \gamma' L_2) K_p + \gamma' L_3 (K_p - K_a) \quad (14.11)$$

$$D = L_3 + L_4 \quad (14.12)$$

For the stability of the wall, the principles of statics can now be applied:

$$\Sigma \text{ horizontal forces per unit length of wall} = 0$$

and

$$\Sigma \text{ moment of the forces per unit length of wall about point } B = 0$$

For the summation of the horizontal forces, we have

$$\text{Area of the pressure diagram } ACDE - \text{area of } EFHB + \text{area of } FHBG = 0$$

or

$$P - \frac{1}{2} \sigma'_3 L_4 + \frac{1}{2} L_5 (\sigma'_3 + \sigma'_4) = 0 \quad (14.13)$$

where  $P$  = area of the pressure diagram  $ACDE$ .

Summing the moment of all the forces about point  $B$  yields

$$P(L_4 + \bar{z}) - \left( \frac{1}{2} L_4 \sigma'_3 \right) \left( \frac{L_4}{3} \right) + \frac{1}{2} L_5 (\sigma'_3 + \sigma'_4) \left( \frac{L_5}{3} \right) = 0 \quad (14.14)$$

From Eq. (14.13),

$$L_5 = \frac{\sigma'_3 L_4 - 2P}{\sigma'_3 + \sigma'_4} \quad (14.15)$$

Combining Eqs. (14.7), (14.10), (14.14), and (14.15) and simplifying them further, we obtain the following fourth-degree equation in terms of  $L_4$ :

$$L_4^4 + A_1 L_4^3 - A_2 L_4^2 - A_3 L_4 - A_4 = 0 \quad (14.16)$$

In this equation,

$$A_1 = \frac{\sigma'_5}{\gamma'(K_p - K_a)} \quad (14.17)$$

$$A_2 = \frac{8P}{\gamma'(K_p - K_a)} \quad (14.18)$$

$$A_3 = \frac{6P[2\bar{z}\gamma'(K_p - K_a) + \sigma'_5]}{\gamma'^2(K_p - K_a)^2} \quad (14.19)$$

$$A_4 = \frac{P(6\bar{z}\sigma'_5 + 4P)}{\gamma'^2(K_p - K_a)^2} \quad (14.20)$$

### Step-by-Step Procedure for Obtaining the Pressure Diagram

Based on the preceding theory, a step-by-step procedure for obtaining the pressure diagram for a cantilever sheet-pile wall penetrating a granular soil is as follows:

- Step 1. Calculate  $K_a$  and  $K_p$ .
- Step 2. Calculate  $\sigma'_1$  [Eq. (14.1)] and  $\sigma'_2$  [Eq. (14.2)]. (*Note:*  $L_1$  and  $L_2$  will be given.)
- Step 3. Calculate  $L_3$  [Eq. (14.6)].
- Step 4. Calculate  $P$ .
- Step 5. Calculate  $\bar{z}$  (i.e., the center of pressure for the area  $ACDE$ ) by taking the moment about  $E$ .
- Step 6. Calculate  $\sigma'_5$  [Eq. (14.11)].
- Step 7. Calculate  $A_1, A_2, A_3,$  and  $A_4$  [Eqs. (14.17) through (14.20)].
- Step 8. Solve Eq. (14.16) by trial and error to determine  $L_4$ .
- Step 9. Calculate  $\sigma'_4$  [Eq. (14.10)].
- Step 10. Calculate  $\sigma'_3$  [Eq. (14.7)].
- Step 11. Obtain  $L_5$  from Eq. (14.15).
- Step 12. Draw a pressure distribution diagram like the one shown in Figure 14.9a.
- Step 13. Obtain the theoretical depth [see Eq. (14.12)] of penetration as  $L_3 + L_4$ . The actual depth of penetration is increased by about 20 to 30%.

Note that some designers prefer to use a factor of safety on the passive earth pressure coefficient at the beginning. In that case, in Step 1,

$$K_{p(\text{design})} = \frac{K_p}{\text{FS}}$$

where FS = factor of safety (usually between 1.5 and 2).

For this type of analysis, follow Steps 1 through 12 with the value of  $K_a = \tan^2(45 - \phi'/2)$  and  $K_{p(\text{design})}$  (instead of  $K_p$ ). The actual depth of penetration can now be determined by adding  $L_3$ , obtained from Step 3, and  $L_4$ , obtained from Step 8.

### Calculation of Maximum Bending Moment

The nature of the variation of the moment diagram for a cantilever sheet-pile wall is shown in Figure 14.9b. The maximum moment will occur between points  $E$  and  $F'$ . Obtaining the maximum moment ( $M_{\text{max}}$ ) per unit length of the wall requires determining the point of zero

shear. For a new axis  $z'$  (with origin at point  $E$ ) for zero shear,

$$P = \frac{1}{2}(z')^2(K_p - K_a)\gamma'$$

or

$$z' = \sqrt{\frac{2P}{(K_p - K_a)\gamma'}} \quad (14.21)$$

Once the point of zero shear force is determined (point  $F''$  in Figure 14.9a), the magnitude of the maximum moment can be obtained as

$$M_{\max} = P(\bar{z} + z') - \left[\frac{1}{2}\gamma'z'^2(K_p - K_a)\right]\left(\frac{1}{3}\right)z' \quad (14.22)$$

The necessary profile of the sheet piling is then sized according to the allowable flexural stress of the sheet pile material, or

$$S = \frac{M_{\max}}{\sigma_{\text{all}}} \quad (14.23)$$

where

$S$  = section modulus of the sheet pile required per unit length of the structure

$\sigma_{\text{all}}$  = allowable flexural stress of the sheet pile

### Example 14.1

Figure 14.10 shows a cantilever sheet-pile wall penetrating a granular soil. Here,  $L_1 = 2$  m,  $L_2 = 3$  m,  $\gamma = 15.9$  kN/m<sup>3</sup>,  $\gamma_{\text{sat}} = 19.33$  kN/m<sup>3</sup>, and  $\phi' = 32^\circ$ .

- What is the theoretical depth of embedment,  $D$ ?
- For a 30% increase in  $D$ , what should be the total length of the sheet piles?
- What should be the minimum section modulus of the sheet piles? Use  $\sigma_{\text{all}} = 172$  MN/m<sup>2</sup>.

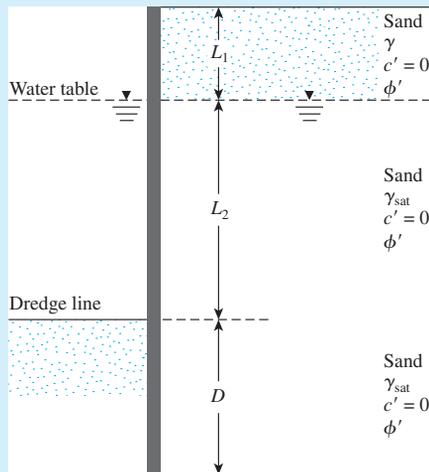


Figure 14.10 Cantilever sheet-pile wall

**Solution**

Part a

Using Figure 14.9a for the pressure distribution diagram, one can now prepare the following table for a step-by-step calculation.

Quantity required	Eq. no.	Equation and calculation
$K_a$	—	$\tan^2\left(45 - \frac{\phi'}{2}\right) = \tan^2\left(45 - \frac{32}{2}\right) = 0.307$
$K_p$	—	$\tan^2\left(45 + \frac{\phi'}{2}\right) = \tan^2\left(45 + \frac{32}{2}\right) = 3.25$
$\sigma'_1$	14.1	$\gamma L_1 K_a = (15.9)(2)(0.307) = 9.763 \text{ kN/m}^2$
$\sigma'_2$	14.2	$(\gamma L_1 + \gamma' L_2) K_a = [(15.9)(2) + (19.33 - 9.81)(3)](0.307) = 18.53 \text{ kN/m}^2$
$L_3$	14.6	$\frac{\sigma'_2}{\gamma'(K_p - K_a)} = \frac{18.53}{(19.33 - 9.81)(3.25 - 0.307)} = 0.66 \text{ m}$
$P$	—	$\frac{1}{2}\sigma'_1 L_1 + \sigma'_1 L_2 + \frac{1}{2}(\sigma'_2 - \sigma'_1) L_2 + \frac{1}{2}\sigma'_2 L_3$ $= \left(\frac{1}{2}\right)(9.763)(2) + (9.763)(3) + \left(\frac{1}{2}\right)(18.53 - 9.763)(3)$ $+ \left(\frac{1}{2}\right)(18.53)(0.66)$ $= 9.763 + 29.289 + 13.151 + 6.115 = 58.32 \text{ kN/m}$
$\bar{z}$	—	$\frac{\Sigma M_E}{P} = \frac{1}{58.32} \left[ 9.763(0.66 + 3 + \frac{2}{3}) + 29.289(0.66 + \frac{2}{3}) + 13.151(0.66 + \frac{2}{3}) + 6.115(0.66 \times \frac{2}{3}) \right] = 2.23 \text{ m}$
$\sigma'_5$	14.11	$(\gamma L_1 + \gamma' L_2) K_p + \gamma' L_3 (K_p - K_a) = [(15.9)(2) + (19.33 - 9.81)(3)](3.25) + (19.33 - 9.81)(0.66)(3.25) - 0.307 = 214.66 \text{ kN/m}^2$
$A_1$	14.17	$\frac{\sigma'_5}{\gamma'(K_p - K_a)} = \frac{214.66}{(19.33 - 9.81)(3.25 - 0.307)} = 7.66$
$A_2$	14.18	$\frac{8P}{\gamma'(K_p - K_a)} = \frac{(8)(58.32)}{(19.33 - 9.81)(3.25 - 0.307)} = 16.65$
$A_3$	14.19	$\frac{6P[2\bar{z}\gamma'(K_p - K_a) + \sigma'_5]}{\gamma'^2(K_p - K_a)^2}$ $= \frac{(6)(58.32)[(2)(2.23)(19.33 - 9.81)(3.25 - 0.307) + 214.66]}{(19.33 - 9.81)^2(3.25 - 0.307)^2}$ $= 151.93$
$A_4$	14.20	$\frac{P(6\bar{z}\sigma'_5 + 4P)}{\gamma'^2(K_p - K_a)^2} = \frac{58.32[(6)(2.23)(214.66) + (4)(58.32)]}{(19.33 - 9.81)^2(3.25 - 0.307)^2}$ $= 230.72$
$L_4$	14.16	$L_4^4 + A_1 L_4^3 - A_2 L_4^2 - A_3 L_4 - A_4 = 0$ $L_4^4 + 7.66 L_4^3 - 16.65 L_4^2 - 151.93 L_4 - 230.72 = 0; L_4 \approx 4.8 \text{ m}$

Thus,

$$D_{\text{theory}} = L_3 + L_4 = 0.66 + 4.8 = \mathbf{5.46 \text{ m}}$$

Part b

The total length of the sheet piles is

$$L_1 + L_2 + 1.3(L_3 + L_4) = 2 + 3 + 1.3(5.46) = \mathbf{12.1 \text{ m}}$$

Part c

Finally, we have the following table.

Quantity required	Eq. no.	Equation and calculation
$z'$	14.21	$\sqrt{\frac{2P}{(K_p - K_a)\gamma'}} = \sqrt{\frac{(2)(58.32)}{(3.25 - 0.307)(19.33 - 9.81)}} = 2.04 \text{ m}$
$M_{\text{max}}$	14.22	$P(\bar{z} + z') - \left[ \frac{1}{2}\gamma'z'^2(K_p - K_a) \right] \frac{z'}{3} = (58.32)(2.23 + 2.04) - \left[ \left( \frac{1}{2} \right) (19.33 - 9.81)(2.04)^2(3.25 - 0.307) \right] \frac{2.04}{3}$ $= 209.39 \text{ kN} \cdot \text{m/m}$
$S$	14.29	$\frac{M_{\text{max}}}{\sigma_{\text{all}}} = \frac{209.39 \text{ kN} \cdot \text{m}}{172 \times 10^3 \text{ kN/m}^2} = \mathbf{1.217 \times 10^{-3} \text{ m}^3/\text{m of wall}}$ <span style="float: right;">■</span>

## 14.5 Special Cases for Cantilever Walls Penetrating a Sandy Soil

### Sheet-Pile Wall with the Absence of Water Table

In the absence of the water table, the net pressure diagram on the cantilever sheet-pile wall will be as shown in Figure 14.11, which is a modified version of Figure 14.9. In this case,

$$\sigma'_2 = \gamma L K_a \quad (14.24)$$

$$\sigma'_3 = L_4(K_p - K_a)\gamma \quad (14.25)$$


$$\sigma'_4 = \sigma'_5 + \gamma L_4(K_p - K_a) \quad (14.26)$$

$$\sigma'_5 = \gamma L K_p + \gamma L_3(K_p - K_a) \quad (14.27)$$

$$L_3 = \frac{\sigma'_2}{\gamma(K_p - K_a)} = \frac{L K_a}{(K_p - K_a)} \quad (14.28)$$

$$P = \frac{1}{2}\sigma'_2 L + \frac{1}{2}\sigma'_5 L_3 \quad (14.29)$$

$$\bar{z} = L_3 + \frac{L}{3} = \frac{L K_a}{K_p - K_a} + \frac{L}{3} = \frac{L(2K_a + K_p)}{3(K_p - K_a)} \quad (14.30)$$

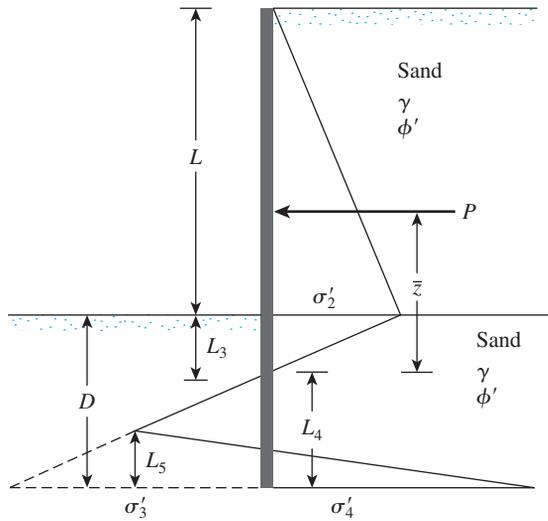

**Figure 14.11** Sheet piling penetrating a sandy soil in the absence of the water table

and Eq. (14.16) transforms to

$$L_4^4 + A_1' L_4^3 - A_2' L_4^2 - A_3' L_4 - A_4' = 0 \quad (14.31)$$

where

$$A_1' = \frac{\sigma_5'}{\gamma(K_p - K_a)} \quad (14.32)$$

$$A_2' = \frac{8P}{\gamma(K_p - K_a)} \quad (14.33)$$


$$A_3' = \frac{6P[2\bar{z}\gamma(K_p - K_a) + \sigma_5']}{\gamma^2(K_p - K_a)^2} \quad (14.34)$$

$$A_4' = \frac{P(6\bar{z}\sigma_5' + 4P)}{\gamma^2(K_p - K_a)^2} \quad (14.35)$$

### Free Cantilever Sheet Piling

Figure 14.12 shows a free cantilever sheet-pile wall penetrating a sandy soil and subjected to a line load of  $P$  per unit length of the wall. For this case,

$$D^4 - \left[ \frac{8P}{\gamma(K_p - K_a)} \right] D^2 - \left[ \frac{12PL}{\gamma(K_p - K_a)} \right] D - \left[ \frac{2P}{\gamma(K_p - K_a)} \right]^2 = 0 \quad (14.36)$$

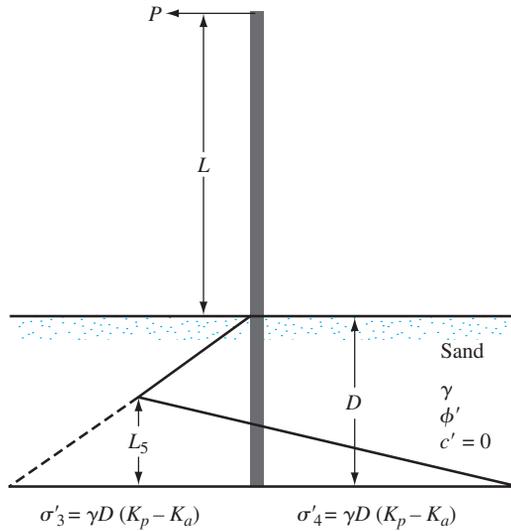

**Figure 14.12** Free cantilever sheet piling penetrating a layer of sand

$$L_5 = \frac{\gamma(K_p - K_a)D^2 - 2P}{2D(K_p - K_a)\gamma} \quad (14.37)$$

$$M_{\max} = P(L + z') - \frac{\gamma z'^3(K_p - K_a)}{6} \quad (14.38)$$

and

$$z' = \sqrt{\frac{2P}{\gamma'(K_p - K_a)}} \quad (14.39)$$

### Example 14.2

Redo parts a and b of Example 14.1, assuming the absence of the water table. Use  $\gamma = 15.9 \text{ kN/m}^3$  and  $\phi' = 32^\circ$ . *Note:*  $L = 5 \text{ m}$ .

#### Solution

Part a

Quantity required	Eq. no.	Equation and calculation
$K_a$	—	$\tan^2\left(45 - \frac{\phi'}{2}\right) = \tan^2\left(45 - \frac{32}{2}\right) = 0.307$
$K_p$	—	$\tan^2\left(45 + \frac{\phi'}{2}\right) = \tan^2\left(45 + \frac{32}{2}\right) = 3.25$

(Continued)

Quantity required	Eq. no.	Equation and calculation
$\sigma'_2$	14.24	$\gamma LK_a = (15.9)(5)(0.307) = 24.41 \text{ kN/m}^2$
$L_3$	14.28	$\frac{LK_a}{K_p - K_a} = \frac{(5)(0.307)}{3.25 - 0.307} = 0.521 \text{ m}$
$\sigma'_5$	14.27	$\gamma LK_p + \gamma L_3(K_p - K_a) = (15.9)(5)(3.25) + (15.9)(0.521)(3.25 - 0.307) = 282.76 \text{ kN/m}^2$
$P$	14.29	$\frac{1}{2}\sigma'_2L + \frac{1}{2}\sigma'_5L_3 = \frac{1}{2}\sigma'_2(L + L_3) = (\frac{1}{2})(24.41)(5 + 0.521) = 67.38 \text{ kN/m}$
$\bar{z}$	14.30	$\frac{L(2K_a - K_p)}{3(K_p - K_a)} = \frac{5[(2)(0.307) + 3.25]}{3(3.25 - 0.307)} = 2.188 \text{ m}$
$A'_1$	14.32	$\frac{\sigma'_5}{\gamma(K_p - K_a)} = \frac{282.76}{(15.9)(3.25 - 0.307)} = 6.04$
$A'_2$	14.33	$\frac{8P}{\gamma(K_p - K_a)} = \frac{(8)(67.38)}{(15.9)(3.25 - 0.307)} = 11.52$
$A'_3$	14.34	$\frac{6P[2\bar{z}\gamma(K_p - K_a) + \sigma'_5]}{\gamma^2(K_p - K_a)^2} = \frac{(6)(67.38)[(2)(2.188)(15.9)(3.25 - 0.307) + 282.76]}{(15.9)^2(3.25 - 0.307)^2} = 90.01$
$A'_4$	14.35	$\frac{P(6\bar{z}\sigma'_5 + 4P)}{\gamma^2(K_p - K_a)^2} = \frac{(67.38)[(6)(2.188)(282.76) + (4)(67.38)]}{(15.9)^2(3.25 - 0.307)^2} = 122.52$
$L_4$	14.31	$L_4^4 + A'_1L_4^3 - A'_2L_4^2 - A'_3L_4 - A'_4 = 0$ $L_4^4 + 6.04L_4^3 - 11.52L_4^2 - 90.01L_4 - 122.52 = 0; L_4 \approx 4.1 \text{ m}$

$$D_{\text{theory}} = L_3 + L_4 = 0.521 + 4.1 \approx 4.7 \text{ m}$$

Part b

Total length,  $L + 1.3(D_{\text{theory}}) = 5 + 1.3(4.7) = 11.11 \text{ m}$  ■

### Example 14.3

Refer to Figure 14.12. For  $L = 5 \text{ m}$ ,  $\gamma = 17.3 \text{ kN/m}^3$ ,  $\phi' = 30^\circ$ , and  $P = 30 \text{ kN/m}$ , determine:

- The theoretical depth of penetration,  $D$
- The maximum moment,  $M_{\text{max}}$  kN-m/m

#### Solution

$$K_p = \tan^2\left(45 + \frac{\phi'}{2}\right) = \tan^2\left(45 + \frac{30}{2}\right) = 3$$

$$K_a = \tan^2\left(45 - \frac{\phi'}{2}\right) = \tan^2\left(45 - \frac{30}{2}\right) = \frac{1}{3}$$

$$K_p - K_a = 3 - 0.333 = 2.667$$

Part a

From Eq. (14.36),

$$D^4 - \left[ \frac{8P}{\gamma(K_p - K_a)} \right] D^2 - \left[ \frac{12PL}{\gamma(K_p - K_a)} \right] D - \left[ \frac{2P}{\gamma(K_p - K_a)} \right]^2 = 0$$

and

$$\begin{aligned} \frac{8P}{\gamma(K_p - K_a)} &= \frac{(8)(30)}{(17.3)(2.667)} = 5.2 \\ \frac{12PL}{\gamma(K_p - K_a)} &= \frac{(12)(30)(5)}{(17.3)(2.667)} = 39.0 \\ \frac{2P}{\gamma(K_p - K_a)} &= \frac{(2)(30)}{(17.3)(2.667)} = 1.3 \end{aligned}$$

so

$$D^4 - 5.2D^2 - 39D - (1.3)^2 = 0$$

From the preceding equation,  $D \approx 4$  m

Part b

From Eq. (14.39),

$$z' = \sqrt{\frac{2P}{\gamma(K_p - K_a)}} = \sqrt{\frac{(2)(30)}{(17.3)(2.667)}} = 1.14 \text{ m}$$


From Eq. (14.38),

$$\begin{aligned} M_{\max} &= P(L + z') - \frac{\gamma z'^3 (K_p - K_a)}{6} \\ &= (30)(5 + 1.14) - \frac{(17.3)(1.14)^3 (2.667)}{6} \\ &= 184.2 - 11.39 \approx \mathbf{173 \text{ kN}\cdot\text{m/m}} \end{aligned}$$

## 14.6 Cantilever Sheet Piling Penetrating Clay

At times, cantilever sheet piles must be driven into a clay layer possessing an undrained cohesion  $c(\phi = 0)$ . The net pressure diagram will be somewhat different from that shown in Figure 14.9a. Figure 14.13 shows a cantilever sheet-pile wall driven into clay with a backfill of granular soil above the level of the dredge line. The water table is at a depth  $L_1$  below the top of the wall. As before, Eqs. (14.1) and (14.2) give the intensity of the net pressures  $\sigma'_1$  and  $\sigma'_2$ , and the diagram for pressure distribution above the level of the dredge line can be drawn. The diagram for net pressure distribution below the dredge line can now be determined as follows.

At any depth greater than  $L_1 + L_2$ , for  $\phi = 0$ , the Rankine active earth-pressure coefficient  $K_a = 1$ . Similarly, for  $\phi = 0$ , the Rankine passive earth-pressure coefficient

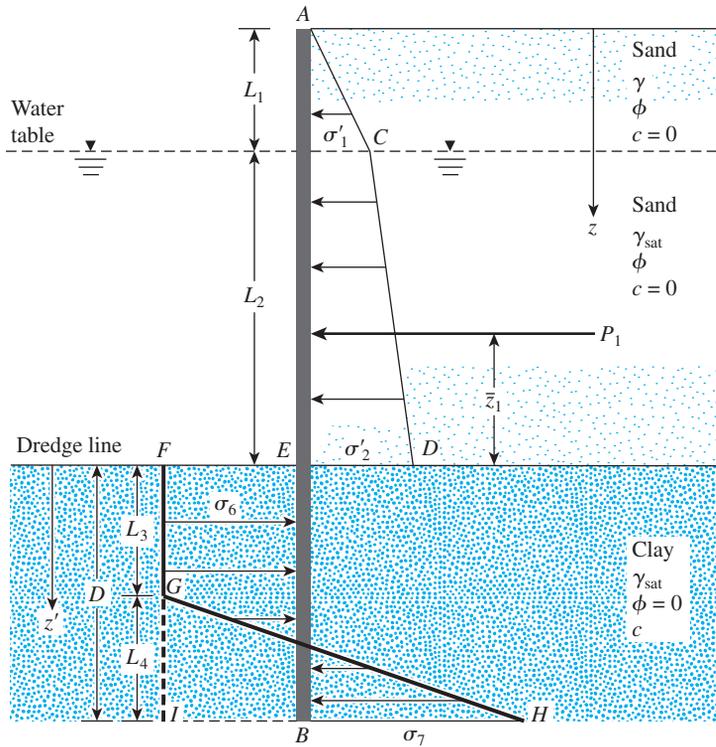

**Figure 14.13** Cantilever sheet pile penetrating clay

$K_p = 1$ . Thus, above the point of rotation (point  $O$  in Figure 14.8a), the active pressure, from right to left is

$$\sigma_a = [\gamma L_1 + \gamma' L_2 + \gamma_{\text{sat}}(z - L_1 - L_2)] - 2c \quad (14.40)$$

Similarly, the passive pressure from left to right may be expressed as

$$\sigma_p = \gamma_{\text{sat}}(z - L_1 - L_2) + 2c \quad (14.41)$$

Thus, the net pressure is

$$\begin{aligned} \sigma_6 = \sigma_p - \sigma_a &= [\gamma_{\text{sat}}(z - L_1 - L_2) + 2c] \\ &\quad - [\gamma L_1 + \gamma' L_2 + \gamma_{\text{sat}}(z - L_1 - L_2)] + 2c \\ &= 4c - (\gamma L_1 + \gamma' L_2) \end{aligned} \quad (14.42)$$

At the bottom of the sheet pile, the passive pressure from right to left is

$$\sigma_p = (\gamma L_1 + \gamma' L_2 + \gamma_{\text{sat}} D) + 2c \quad (14.43)$$

Similarly, the active pressure from left to right is

$$\sigma_a = \gamma_{\text{sat}} D - 2c \quad (14.44)$$

Hence, the net pressure is

$$\sigma_7 = \sigma_p - \sigma_a = 4c + (\gamma L_1 + \gamma' L_2) \quad (14.45)$$

For equilibrium analysis,  $\Sigma F_H = 0$ ; that is, the area of the pressure diagram  $ACDE$  minus the area of  $EFIB$  plus the area of  $GIH = 0$ , or

$$P_1 - [4c - (\gamma L_1 + \gamma' L_2)]D + \frac{1}{2}L_4[4c - (\gamma L_1 + \gamma' L_2) + 4c + (\gamma L_1 + \gamma' L_2)] = 0$$

where  $P_1$  = area of the pressure diagram  $ACDE$ .

Simplifying the preceding equation produces

$$L_4 = \frac{D[4c - (\gamma L_1 + \gamma' L_2)] - P_1}{4c} \quad (14.46)$$

Now, taking the moment about point  $B$  ( $\Sigma M_B = 0$ ) yields

$$P_1(D + \bar{z}_1) - [4c - (\gamma L_1 + \gamma' L_2)]\frac{D^2}{2} + \frac{1}{2}L_4(8c)\left(\frac{L_4}{3}\right) = 0 \quad (14.47)$$

where  $\bar{z}_1$  = distance of the center of pressure of the pressure diagram  $ACDE$ , measured from the level of the dredge line.

Combining Eqs. (14.46) and (14.47) yields

$$D^2[4c - (\gamma L_1 + \gamma' L_2)] - 2DP_1 - \frac{P_1(P_1 + 12c\bar{z}_1)}{(\gamma L_1 + \gamma' L_2) + 2c} = 0 \quad (14.48)$$

Equation (14.48) may be solved to obtain  $D$ , the theoretical depth of penetration of the clay layer by the sheet pile.

### Step-by-Step Procedure for Obtaining the Pressure Diagram

- Step 1. Calculate  $K_a = \tan^2(45 - \phi'/2)$  for the granular soil (backfill).
- Step 2. Obtain  $\sigma'_1$  and  $\sigma'_2$ . [See Eqs. (14.1) and (14.2).]
- Step 3. Calculate  $P_1$  and  $\bar{z}_1$ .
- Step 4. Use Eq. (14.48) to obtain the theoretical value of  $D$ .
- Step 5. Using Eq. (14.46), calculate  $L_4$ .
- Step 6. Calculate  $\sigma_6$  and  $\sigma_7$ . [See Eqs. (14.42) and (14.45).]
- Step 7. Draw the pressure distribution diagram as shown in Figure 14.13.
- Step 8. The actual depth of penetration is

$$D_{\text{actual}} = 1.4 \text{ to } 1.6(D_{\text{theoretical}})$$

### Maximum Bending Moment

According to Figure 14.13, the maximum moment (zero shear) will be between  $L_1 + L_2 < z < L_1 + L_2 + L_3$ . Using a new coordinate system  $z'$  (with  $z' = 0$  at the dredge line) for zero shear gives

$$P_1 - \sigma_6 z' = 0$$

or

$$z' = \frac{P_1}{\sigma_6} \quad (14.49)$$

The magnitude of the maximum moment may now be obtained:

$$M_{\max} = P_1(z' + \bar{z}_1) - \frac{\sigma_6 z'^2}{2} \quad (14.50)$$

Knowing the maximum bending moment, we determine the section modulus of the sheet-pile section from Eq. (14.23).

### Example 14.4

In Figure 14.14, for the sheet-pile wall, determine

- The theoretical and actual depth of penetration. Use  $D_{\text{actual}} = 1.5D_{\text{theory}}$ .
- The minimum size of sheet-pile section necessary. Use  $\sigma_{\text{all}} = 172.5 \text{ MN/m}^2$ .

#### Solution

We will follow the step-by-step procedure given in Section 14.6:

Step 1.

$$K_a = \tan^2\left(45 - \frac{\phi'}{2}\right) = \tan^2\left(45 - \frac{32}{2}\right) = 0.307$$

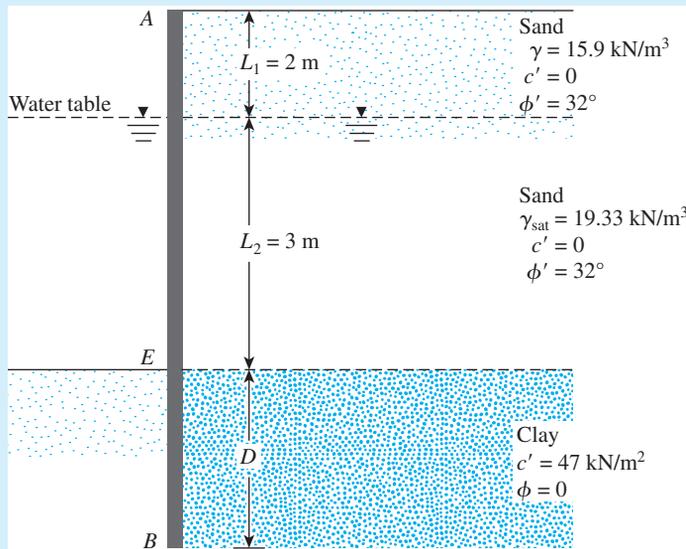


Figure 14.14 Cantilever sheet pile penetrating into saturated clay

Step 2.

$$\sigma'_1 = \gamma L_1 K_a = (15.9)(2)(0.307) = 9.763 \text{ kN/m}^2$$

$$\begin{aligned}\sigma'_2 &= (\gamma L_1 + \gamma' L_2) K_a = [(15.9)(2) + (19.33 - 9.81)3]0.307 \\ &= 18.53 \text{ kN/m}^2\end{aligned}$$

Step 3. From the net pressure distribution diagram given in Figure 14.13, we have

$$\begin{aligned}P_1 &= \frac{1}{2}\sigma'_1 L_1 + \sigma'_1 L_2 + \frac{1}{2}(\sigma'_2 - \sigma'_1) L_2 \\ &= 9.763 + 29.289 + 13.151 = 52.2 \text{ kN/m}\end{aligned}$$

and

$$\begin{aligned}\bar{z}_1 &= \frac{1}{52.2} \left[ 9.763 \left( 3 + \frac{2}{3} \right) + 29.289 \left( \frac{3}{2} \right) + 13.151 \left( \frac{3}{3} \right) \right] \\ &= 1.78 \text{ m}\end{aligned}$$

Step 4. From Eq. (14.48),

$$D^2[4c - (\gamma L_1 + \gamma' L_2)] - 2DP_1 - \frac{P_1(P_1 + 12c\bar{z}_1)}{(\gamma L_1 + \gamma' L_2) + 2c} = 0$$

Substituting proper values yields

$$\begin{aligned}D^2\{(4)(47) - [(2)(15.9) + (19.33 - 9.81)3]\} - 2D(52.2) \\ - \frac{52.2[52.2 + (12)(47)(1.78)]}{[(15.9)(2) + (19.33 - 9.81)3] + (2)(47)} = 0\end{aligned}$$

or

$$127.64D^2 - 104.4D - 357.15 = 0$$

Solving the preceding equation, we obtain  $D = 2.13 \text{ m}$ .

Step 5. From Eq. (14.46),

$$L_4 = \frac{D[4c - (\gamma L_1 + \gamma' L_2)] - P_1}{4c}$$

and

$$\begin{aligned}4c - (\gamma L_1 + \gamma' L_2) &= (4)(47) - [(15.9)(2) + (19.33 - 9.81)3] \\ &= 127.64 \text{ kN/m}^2\end{aligned}$$

So,

$$L_4 = \frac{2.13(127.64) - 52.2}{(4)(47)} = 1.17 \text{ m}$$

Step 6.

$$\sigma_6 = 4c - (\gamma L_1 + \gamma' L_2) = 127.64 \text{ kN/m}^2$$

$$\sigma_7 = 4c + (\gamma L_1 + \gamma' L_2) = 248.36 \text{ kN/m}^2$$

*Step 7.* The net pressure distribution diagram can now be drawn, as shown in Figure 14.13.

*Step 8.*  $D_{\text{actual}} \approx 1.5 D_{\text{theoretical}} = 1.5(2.13) \approx \mathbf{3.2 \text{ m}}$

Maximum-Moment Calculation

From Eq. (14.49),

$$z' = \frac{P_1}{\sigma_6} = \frac{52.2}{127.64} \approx 0.41 \text{ m}$$

Again, from Eq. (14.49),

$$M_{\text{max}} = P_1(z' + \bar{z}_1) - \frac{\sigma_6 z'^2}{2}$$

So

$$\begin{aligned} M_{\text{max}} &= 52.2(0.41 + 1.78) - \frac{127.64(0.41)^2}{2} \\ &= 114.32 - 10.73 = 103.59 \text{ kN-m/m} \end{aligned}$$

The minimum required section modulus (assuming that  $\sigma_{\text{all}} = 172.5 \text{ MN/m}^2$ ) is

$$S = \frac{103.59 \text{ kN-m/m}}{172.5 \times 10^3 \text{ kN/m}^2} = \mathbf{0.6 \times 10^{-3} \text{ m}^3/\text{m of the wall}}$$

## 14.7 Special Cases for Cantilever Walls Penetrating Clay

### Sheet-Pile Wall in the Absence of Water Table

As in Section 14.5, relationships for special cases for cantilever walls penetrating clay may also be derived. Referring to Figure 14.15, we can write

$$\sigma'_2 = \gamma L K_a \quad (14.51)$$

$$\sigma_6 = 4c - \gamma L \quad (14.52)$$

$$\sigma_7 = 4c + \gamma L \quad (14.53)$$

$$P_1 = \frac{1}{2} L \sigma'_2 = \frac{1}{2} \gamma L^2 K_a \quad (14.54)$$

and

$$L_4 = \frac{D(4c - \gamma L) - \frac{1}{2} \gamma L^2 K_a}{4c} \quad (14.55)$$

The theoretical depth of penetration,  $D$ , can be calculated [in a manner similar to the calculation of Eq. (14.48)] as

$$D^2(4c - \gamma L) - 2DP_1 - \frac{P_1(P_1 + 12c\bar{z}_1)}{\gamma L + 2c} = 0 \quad (14.56)$$

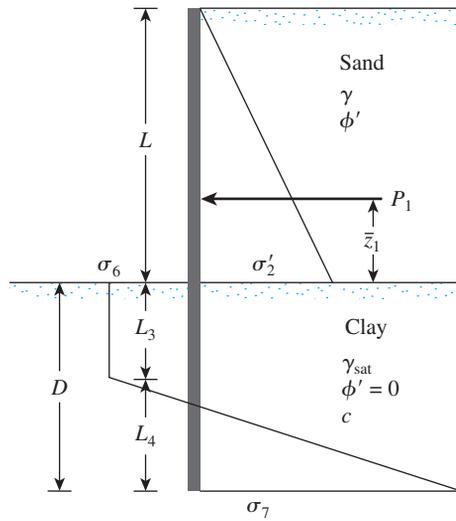


Figure 14.15 Sheet-pile wall penetrating clay

$$\text{where } \bar{z}_1 = \frac{L}{3}. \quad (14.57)$$

The magnitude of the maximum moment in the wall is

$$M_{\max} = P_1(z' + \bar{z}_1) - \frac{\sigma_6 z'^2}{2} \quad (14.58)$$

$$\text{where } z' = \frac{P_1}{\sigma_6} = \frac{\frac{1}{2}\gamma L^2 K_a}{4c - \gamma L}. \quad (14.59)$$

### Free Cantilever Sheet-Pile Wall Penetrating Clay

Figure 14.16 shows a free cantilever sheet-pile wall penetrating a clay layer. The wall is being subjected to a line load of  $P$  per unit length. For this case,


$$\sigma_6 = \sigma_7 = 4c \quad (14.60)$$

The depth of penetration,  $D$ , may be obtained from the relation

$$4D^2c - 2PD - \frac{P(P + 12cL)}{2c} = 0 \quad (14.61)$$

Also, note that, for a construction of the pressure diagram,

$$L_4 = \frac{4cD - P}{4c} \quad (14.62)$$

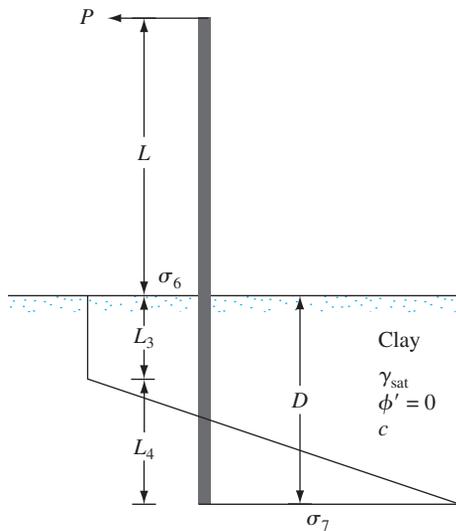

**Figure 14.16** Free cantilever sheet piling penetrating clay

The maximum moment in the wall is

$$M_{\max} = P(L + z') - \frac{4cz'^2}{2} \quad (14.63)$$

where

$$z' = \frac{P}{4c} \quad (14.64)$$

### Example 14.5

Refer to the free cantilever sheet-pile wall shown in Figure 14.16, for which  $P = 32 \text{ kN/m}$ ,  $L = 3.5 \text{ m}$ , and  $c = 12 \text{ kN/m}^2$ . Calculate the theoretical depth of penetration.

#### Solution

From Eq. (14.61),

$$4D^2c - 2PD - \frac{P(P + 12cL)}{2c} = 0$$

$$(4)(D^2)(12) - (2)(32)(D) - \frac{32[32 + (12)(12)(3.5)]}{(2)(12)} = 0$$

$$48D^2 - 64D - 714.7 = 0$$

Hence  $D \approx 4.6 \text{ m}$ . ■

**Example 14.6**

Refer to Figure 14.15 for the sheet-pile wall penetrating clay, Given:

$$\begin{aligned} \text{Sand:} \quad & L = 6 \text{ m} \\ & \gamma = 16 \text{ kN/m}^3 \\ & \phi' = 30^\circ \\ \text{Clay:} \quad & \gamma_{\text{sat}} = 18.9 \text{ kN/m}^3 \\ & \phi' = 0 \\ & c = 95 \text{ kN/m}^2 \end{aligned}$$

Determine:

- The theoretical depth of penetration  $D$
- The magnitude of the maximum moment in the wall

**Solution**

Part a

From Eq. (14.54),

$$P_1 = \frac{1}{2} \gamma L^2 K_a$$

$$K_a = \tan^2 \left( 45 - \frac{\phi'}{2} \right) = \tan^2 \left( 45 - \frac{30}{2} \right) = \frac{1}{3}$$

$$P_1 = \left( \frac{1}{2} \right) (16) (6)^2 \left( \frac{1}{3} \right) = 96 \text{ kN/m}$$

From Eq. (14.56),

$$D^2(4c - \gamma L) - 2DP_1 - \frac{P_1(P_1 + 12c\bar{z}_1)}{\gamma L + 2c} = 0$$

From Eq. (14.57),

$$\bar{z}_1 = \frac{L}{3} = \frac{6}{3} = 2 \text{ m}$$

Hence,

$$D^2[(4)(95) - (16)(6)] - (2)(D)(96) - \frac{96[96 + (12)(95)(2)]}{(16)(6) + (2)(95)} = 0$$

or

$$\begin{aligned} 284 D^2 - 192 D - 797.5 &= 0 \\ D &\approx \mathbf{2.1 \text{ m}} \end{aligned}$$

Part b

From Eq. (14.58),

$$M_{\text{max}} = P_1(z' + \bar{z}_1) - \frac{\sigma_6 z'^2}{2}$$

From Eq. (14.59),

$$z' = \frac{\frac{1}{2}\gamma L^2 K_a}{4c - \gamma L} = \frac{(0.5)(16)(6)^2 \left(\frac{1}{3}\right)}{(4 \times 95) - (16 \times 6)} = 0.338 \text{ m}$$

From Eq. (14.52),

$$\sigma_6 = 4c - \gamma L = (4 \times 95) - (16 \times 6) = 284 \text{ kN/m}^2$$


$$M_{\max} = (96)(0.338 + 2) - \frac{(284)(0.338)^2}{2} = 224.45 - 16.22 = \mathbf{208.23 \text{ kN}\cdot\text{m/m}}$$

## 14.8 Anchored Sheet-Pile Walls

When the height of the backfill material behind a cantilever sheet-pile wall exceeds about 6 m ( $\approx 20$  ft), tying the wall near the top to anchor plates, anchor walls, or anchor piles becomes more economical. This type of construction is referred to as *anchored sheet-pile wall* or an *anchored bulkhead*. Anchors minimize the depth of penetration required by the sheet piles and also reduce the cross-sectional area and weight of the sheet piles needed for construction. However, the tie rods and anchors must be carefully designed.

The two basic methods of designing anchored sheet-pile walls are (a) the *free earth support* method and (b) the *fixed earth support* method. Figure 14.17 shows the assumed nature of deflection of the sheet piles for the two methods.

The free earth support method involves a minimum penetration depth. Below the dredge line, no pivot point exists for the static system. The nature of the variation of the bending moment with depth for both methods is also shown in Figure 14.17. Note that

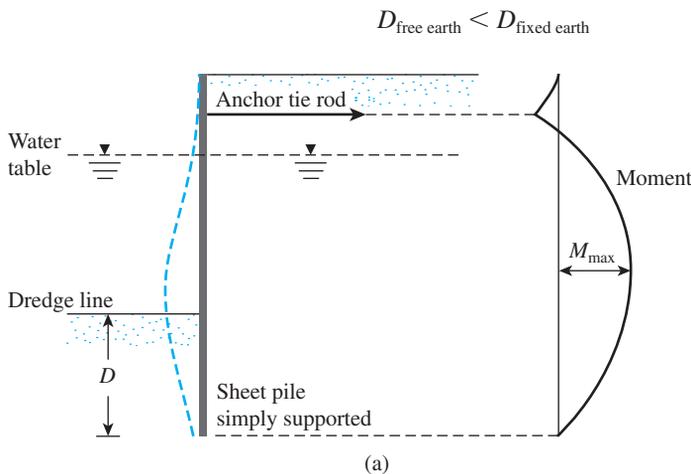

**Figure 14.17** Nature of variation of deflection and moment for anchored sheet piles:  
(a) free earth support method

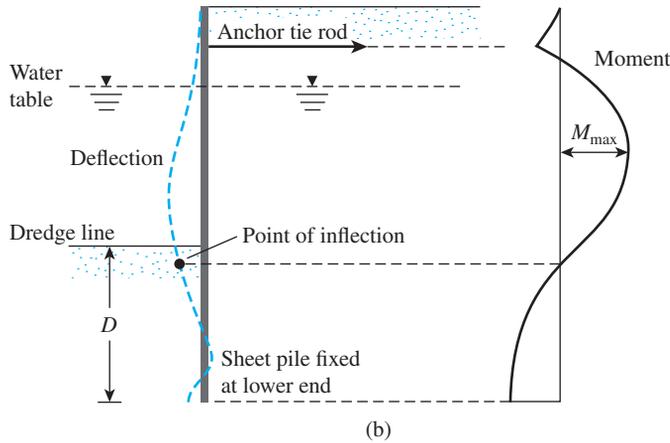


Figure 14.17 (Continued) (b) fixed earth support method

## 14.9 Free Earth Support Method for Penetration of Sandy Soil

Figure 14.18 shows an anchor sheet-pile wall with a granular soil backfill; the wall has been driven into a granular soil. The tie rod connecting the sheet pile and the anchor is located at a depth  $l_1$  below the top of the sheet-pile wall.

The diagram of the net pressure distribution above the dredge line is similar to that shown in Figure 14.9. At depth  $z = L_1$ ,  $\sigma'_1 = \gamma L_1 K_a$ , and at  $z = L_1 + L_2$ ,  $\sigma'_2 = (\gamma L_1 + \gamma' L_2) K_a$ . Below the dredge line, the net pressure will be zero at  $z = L_1 + L_2 + L_3$ . The relation for  $L_3$  is given by Eq. (14.6), or

$$L_3 = \frac{\sigma'_2}{\gamma'(K_p - K_a)}$$

At  $z = L_1 + L_2 + L_3 + L_4$ , the net pressure is given by

$$\sigma'_8 = \gamma'(K_p - K_a)L_4 \quad (14.65)$$

Note that the slope of the line  $DEF$  is 1 vertical to  $\gamma'(K_p - K_a)$  horizontal.

For equilibrium of the sheet pile,  $\Sigma$  horizontal forces = 0, and  $\Sigma$  moment about  $O' = 0$ . (Note: Point  $O'$  is located at the level of the tie rod.)

Summing the forces in the horizontal direction (per unit length of the wall) gives


$$\text{Area of the pressure diagram } ACDE - \text{area of } EBF - F = 0$$

where  $F$  = tension in the tie rod/unit length of the wall, or

$$P - \frac{1}{2}\sigma'_8 L_4 - F = 0$$

or

$$F = P - \frac{1}{2}[\gamma'(K_p - K_a)]L_4^2 \quad (14.66)$$

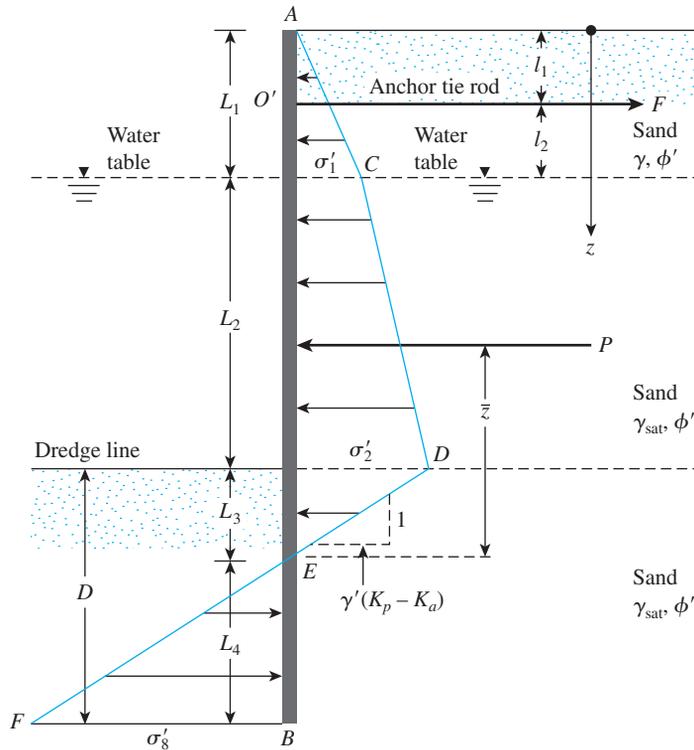

**Figure 14.18** Anchored sheet-pile wall penetrating sand

where  $P$  = area of the pressure diagram  $ACDE$ . Now, taking the moment about point  $O'$  gives

$$-P[(L_1 + L_2 + L_3) - (\bar{z} + l_1)] + \frac{1}{2}[\gamma'(K_p - K_a)]L_4^2(l_2 + L_2 + L_3 + \frac{2}{3}L_4) = 0$$

or

$$L_4^3 + 1.5L_4^2(l_2 + L_2 + L_3) - \frac{3P[(L_1 + L_2 + L_3) - (\bar{z} + l_1)]}{\gamma'(K_p - K_a)} = 0 \quad (14.67)$$

Equation (14.67) may be solved by trial and error to determine the theoretical depth,  $L_4$ :

$$D_{\text{theoretical}} = L_3 + L_4$$

The theoretical depth is increased by about 30 to 40% for actual construction, or

$$D_{\text{actual}} = 1.3 \text{ to } 1.4 D_{\text{theoretical}} \quad (14.68)$$

The step-by-step procedure in Section 14.4 indicated that a factor of safety can be applied to  $K_p$  at the beginning [i.e.,  $K_{p(\text{design})} = K_p/\text{FS}$ ]. If that is done, there is

no need to increase the theoretical depth by 30 to 40%. This approach is often more conservative.

The maximum theoretical moment to which the sheet pile will be subjected occurs at a depth between  $z = L_1$  and  $z = L_1 + L_2$ . The depth  $z$  for zero shear and hence maximum moment may be evaluated from

$$\frac{1}{2}\sigma'_1 L_1 - F + \sigma'_1(z - L_1) + \frac{1}{2}K_a \gamma'(z - L_1)^2 = 0 \quad (14.69)$$

Once the value of  $z$  is determined, the magnitude of the maximum moment is easily obtained.

### Example 14.7

Let  $L_1 = 3.05$  m,  $L_2 = 6.1$  m,  $l_1 = 1.53$  m,  $l_2 = 1.52$  m,  $c' = 0$ ,  $\phi' = 30^\circ$ ,  $\gamma = 16$  kN/m<sup>3</sup>,  $\gamma_{\text{sat}} = 19.5$  kN/m<sup>3</sup>, and  $E = 207 \times 10^3$  MN/m<sup>2</sup> in Figure 14.18.

- Determine the theoretical and actual depths of penetration. (Note:  $D_{\text{actual}} = 1.3D_{\text{theory}}$ .)
- Find the anchor force per unit length of the wall.
- Determine the maximum moment,  $M_{\text{max}}$ .

### Solution

Part a

We use the following table.

Quantity required	Eq. no.	Equation and calculation
$K_a$	—	$\tan^2\left(45 - \frac{\phi'}{2}\right) = \tan^2\left(45 - \frac{30}{2}\right) = \frac{1}{3}$
$K_p$	—	$\tan^2\left(45 + \frac{\phi'}{2}\right) = \tan^2\left(45 + \frac{30}{2}\right) = 3$
$K_p - K_a$	—	$3 - 0.333 = 2.667$
$\gamma'$	—	$\gamma_{\text{sat}} - \gamma_w = 19.5 - 9.81 = 9.69$ kN/m <sup>3</sup>
$\sigma'_1$	14.1	$\gamma L_1 K_a = (16)(3.05)\left(\frac{1}{3}\right) = 16.27$ kN/m <sup>2</sup>
$\sigma'_2$	14.2	$(\gamma L_1 + \gamma' L_2) K_a = [(16)(3.05) + (9.69)(6.1)]\left(\frac{1}{3}\right) = 35.97$ kN/m <sup>2</sup>
$L_3$	14.6	$\frac{\sigma'_2}{\gamma'(K_p - K_a)} = \frac{35.97}{(9.69)(2.667)} = 1.39$ m
$P$	—	$\frac{1}{2}\sigma'_1 L_1 + \sigma'_2 L_2 + \frac{1}{2}(\sigma'_2 - \sigma'_1) L_2 + \frac{1}{2}\sigma'_2 L_3 = \left(\frac{1}{2}\right)(16.27)(3.05) + (16.27)(6.1) + \left(\frac{1}{2}\right)(35.97 - 16.27)(6.1) + \left(\frac{1}{2}\right)(35.97)(1.39) = 24.81 + 99.25 + 60.01 + 25.0 = 209.07$ kN/m
$\bar{z}$	—	$\frac{\sum M_E}{P} = \left[ (24.81)\left(1.39 + 6.1 + \frac{3.05}{3}\right) + (99.25)\left(1.39 + \frac{6.1}{2}\right) + (60.01)\left(1.39 + \frac{6.1}{3}\right) + (25.0)\left(\frac{2 \times 1.39}{3}\right) \right] \frac{1}{209.07} = 4.21$ m

(Continued)

Quantity required	Eq. no.	Equation and calculation
$L_4$	14.67	$L_4^3 + 1.5L_4^2(l_2 + L_2 + L_3) - \frac{3P[(L_1 + L_2 + L_3) - (\bar{z} + l_1)]}{\gamma'(K_p - K_a)} = 0$ $L_4^3 + 1.5L_4^2(1.52 + 6.1 + 1.39)$ $- \frac{(3)(209.07)[(3.05 + 6.1 + 1.39) - (4.21 + 1.53)]}{(9.69)(2.667)} = 0$ $L_4 = 2.7 \text{ m}$
$D_{\text{theory}}$	—	$L_3 + L_4 = 1.39 + 2.7 = 4.09 \approx \mathbf{4.1 \text{ m}}$
$D_{\text{actual}}$	—	$1.3D_{\text{theory}} = (1.3)(4.1) = \mathbf{5.33 \text{ m}}$

Part b

The anchor force per unit length of the wall is

$$F = P - \frac{1}{2}\gamma'(K_p - K_a)L_4^2$$

$$= 209.07 - \left(\frac{1}{2}\right)(9.69)(2.667)(2.7)^2 = 114.87 \text{ kN/m} \approx \mathbf{115 \text{ kN/m}}$$

Part c

From Eq. (14.69), for zero shear,

$$\frac{1}{2}\sigma'_1 L_1 - F + \sigma'_1(z - L_1) + \frac{1}{2}K_a\gamma'(z - L_1)^2 = 0$$

Let  $z - L_1 = x$ , so that

$$\frac{1}{2}\sigma'_1 L_1 - F + \sigma'_1 x + \frac{1}{2}K_a\gamma'x^2 = 0$$

or

$$\left(\frac{1}{2}\right)(16.27)(3.05) - 115 + (16.27)(x) + \left(\frac{1}{2}\right)\left(\frac{1}{3}\right)(9.69)x^2 = 0$$

$$\text{giving } x^2 + 10.07x - 55.84 = 0$$

Now,  $x = 4 \text{ m}$  and  $z = x + L_1 = 4 + 3.05 = 7.05 \text{ m}$ . Taking the moment about the point of zero shear, we obtain

$$M_{\text{max}} = -\frac{1}{2}\sigma'_1 L_1 \left(x + \frac{3.05}{3}\right) + F(x + 1.52) - \sigma'_1 \frac{x^2}{2} - \frac{1}{2}K_a\gamma'x^2 \left(\frac{x}{3}\right)$$

or

$$M_{\text{max}} = -\left(\frac{1}{2}\right)(16.27)(3.05)\left(4 + \frac{3.05}{3}\right) + (115)(4 + 1.52) - (16.27)\left(\frac{4^2}{2}\right)$$

$$- \left(\frac{1}{2}\right)\left(\frac{1}{3}\right)(9.69)(4)^2\left(\frac{4}{3}\right) = \mathbf{344.9 \text{ kN}\cdot\text{m/m}}$$

## 14.10 Design Charts for Free Earth Support Method (Penetration into Sandy Soil)

Using the free earth support method, Hagerty and Nofal (1992) provided simplified design charts for quick estimation of the depth of penetration,  $D$ , anchor force,  $F$ , and maximum moment,  $M_{\max}$ , for anchored sheet-pile walls penetrating into sandy soil, as shown in Figure 14.18. They made the following assumptions for their analysis.

- The soil friction angle,  $\phi'$ , above and below the dredge line is the same.
- The angle of friction between the sheet-pile wall and the soil is  $\phi'/2$ .
- The passive earth pressure below the dredge line has a logarithmic spiral failure surface.
- For active earth-pressure calculation, Coulomb's theory is valid.

The magnitudes of  $D$ ,  $F$ , and  $M_{\max}$  may be calculated from the following relationships:

$$\frac{D}{L_1 + L_2} = (GD)(CDL_1) \quad (14.70)$$

$$\frac{F}{\gamma_a(L_1 + L_2)^2} = (GF)(CFL_1) \quad (14.71)$$

$$\frac{M_{\max}}{\gamma_a(L_1 + L_2)^3} = (GM)(CML_1) \quad (14.72)$$

where

$\gamma_a$  = average unit weight of soil

$$= \frac{\gamma L_1^2 + (\gamma_{\text{sat}} - \gamma_w)L_2^2 + 2\gamma L_1 L_2}{(L_1 + L_2)^2} \quad (14.73)$$

$GD$  = generalized nondimensional embedment

$$= \frac{D}{L_1 + L_2} \quad (\text{for } L_1 = 0 \text{ and } L_2 = L_1 + L_2)$$

$GF$  = generalized nondimensional anchor force


$$= \frac{F}{\gamma_a(L_1 + L_2)^2} \quad (\text{for } L_1 = 0 \text{ and } L_2 = L_1 + L_2)$$

$GM$  = generalized nondimensional moment


$$= \frac{M_{\max}}{\gamma_a(L_1 + L_2)^3} \quad (\text{for } L_1 = 0 \text{ and } L_2 = L_1 + L_2)$$

$CDL_1$ ,  $CFL_1$ ,  $CML_1$  = correction factors for  $L_1 \neq 0$


The variations of  $GD$ ,  $GF$ ,  $GM$ ,  $CDL_1$ ,  $CFL_1$ , and  $CML_1$  are shown in Figures 14.19, 14.20, 14.21, 14.22, 14.23, and 14.24, respectively.

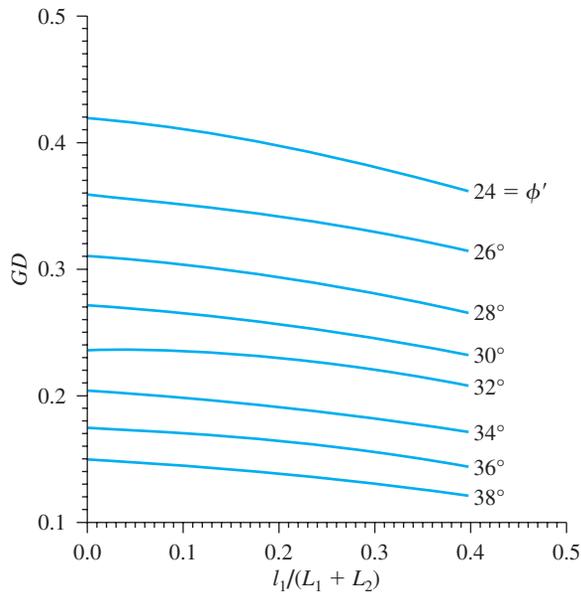


**Figure 14.19** Variation of  $GD$  with  $l_1/(L_1 + L_2)$  and  $\phi'$  [Based on Hagerty, D. J., and Nofal, M. M. (1992). "Design Aids: Anchored Bulkheads in Sand," *Canadian Geotechnical Journal*, Vol. 29, No. 5, pp. 789–795.]

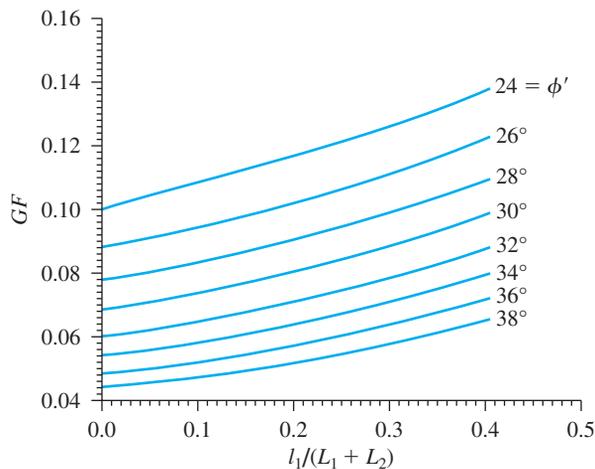


**Figure 14.20** Variation of  $GF$  with  $l_1/(L_1 + L_2)$  and  $\phi'$  [Based on Hagerty, D. J., and Nofal, M. M. (1992). "Design Aids: Anchored Bulkheads in Sand," *Canadian Geotechnical Journal*, Vol. 29, No. 5, pp. 789–795.]

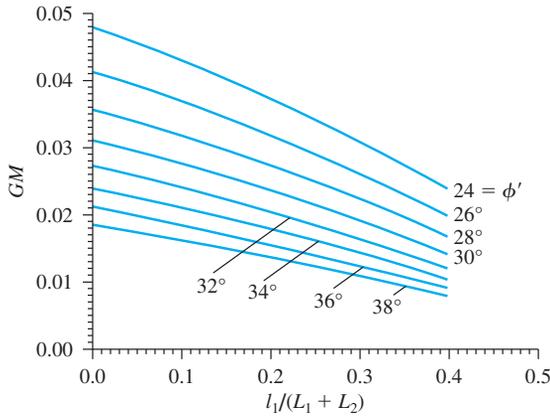


**Figure 14.21** Variation of  $GM$  with  $l_1/(L_1 + L_2)$  and  $\phi'$  [Based on Hagerty, D. J. and Nofal, M. M. (1992), “Design Aids: Anchored Bulkheads in Sand,” *Canadian Geotechnical Journal*, Vol. 29, No. 5, pp. 789–795.]

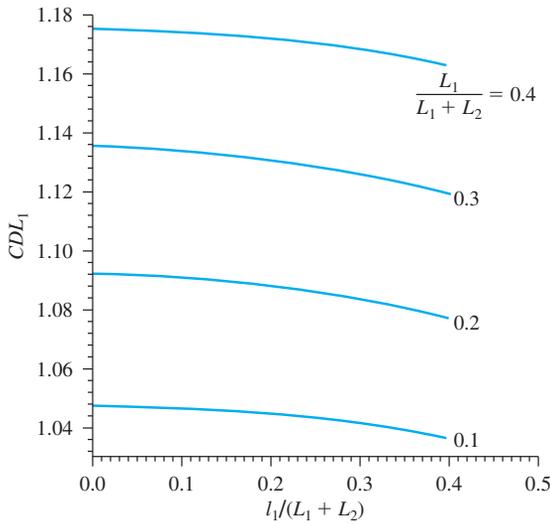

**Figure 14.22** Variation of  $CDL_1$  with  $L_1/(L_1 + L_2)$  and  $l_1/(L_1 + L_2)$  [Based on Hagerty, D. J., and Nofal, M. M. (1992). “Design Aids: Anchored Bulkheads in Sand,” *Canadian Geotechnical Journal*, Vol. 29, No. 5, pp. 789–795.]

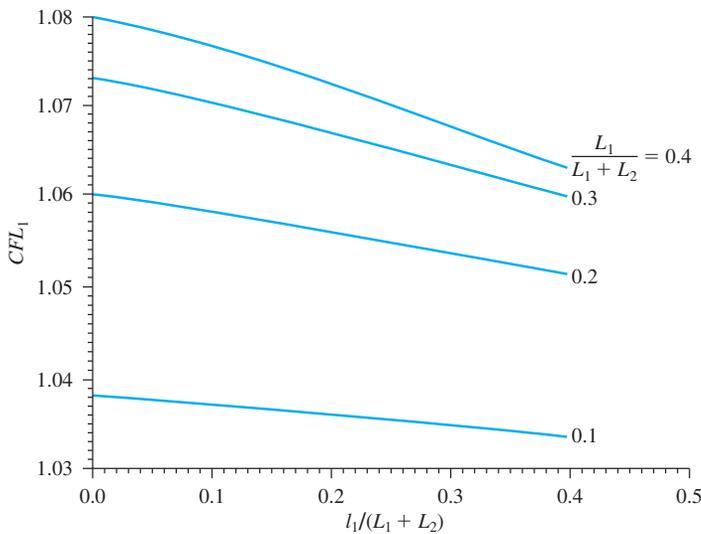

**Figure 14.23** Variation of  $CFL_1$  with  $L_1/(L_1 + L_2)$  and  $l_1/(L_1 + L_2)$  [Based on Hagerty, D. J., and Nofal, M. M. (1992). “Design Aids: Anchored Bulkheads in Sand,” *Canadian Geotechnical Journal*, Vol. 29, No. 5, pp. 789–795.]

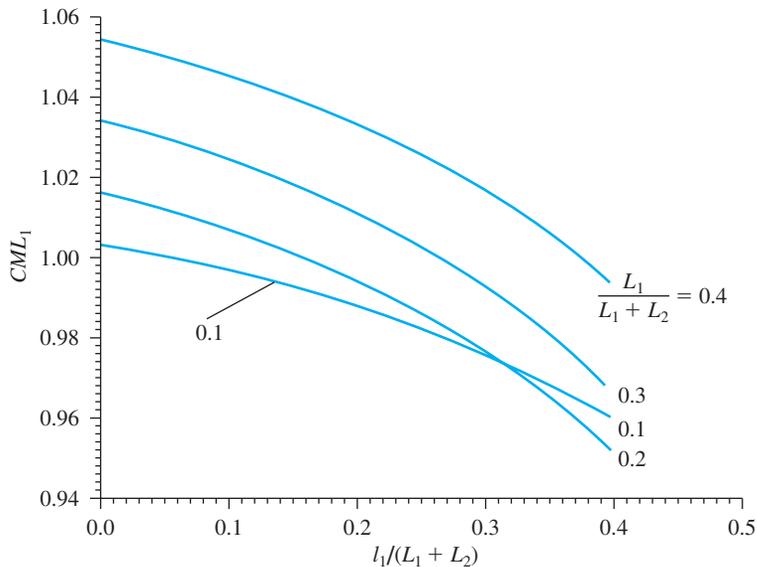

**Figure 14.24** Variation of  $CML_1$  with  $L_1/(L_1 + L_2)$  and  $l_1/(L_1 + L_2)$  [Based on Hagerly, D. J., and Nofal, M. M. (1992). “Design Aids: Anchored Bulkheads in Sand,” *Canadian Geotechnical Journal*, Vol. 29, No. 5, pp. 789–795.]

### Example 14.8

Refer to Figure 14.18. Given:  $L_1 = 2$  m,  $L_2 = 3$  m,  $l_1 = l_2 = 1$  m,  $c = 0$ ,  $\phi' = 32^\circ$ ,  $\gamma = 15.9$  kN/m<sup>3</sup>, and  $\gamma_{\text{sat}} = 19.33$  kN/m<sup>3</sup>. Determine:

- Theoretical and actual depth of penetration *Note:*  $D_{\text{actual}} = 1.4D_{\text{theory}}$ .
- Anchor force per unit length of wall
- Maximum moment,  $M_{\text{max}}$

Use the charts presented in Section 14.10.

#### Solution

Part a

From Eq. (14.70),

$$\frac{D}{L_1 + L_2} = (GD)(CDL_1)$$

$$\frac{l_1}{L_1 + L_2} = \frac{1}{2 + 3} = 0.2$$

From Figure 14.19 for  $l_1/(L_1 + L_2) = 0.2$  and  $\phi' = 32^\circ$ ,  $GD = 0.22$ . From Figure 14.22, for

$$\frac{L_1}{L_1 + L_2} = \frac{2}{2 + 3} = 0.4 \quad \text{and} \quad \frac{l_1}{L_1 + L_2} = 0.2$$

$CDL_1 \approx 1.172$ . So

$$D_{\text{theory}} = (L_1 + L_2)(GD)(CDL_1) = (5)(0.22)(1.172) \approx 1.3$$

$$D_{\text{actual}} \approx (1.4)(1.3) = 1.82 \approx \mathbf{2 \text{ m}}$$

Part b

From Figure 14.20 for  $l_1/(L_1 + L_2) = 0.2$  and  $\phi' = 32^\circ$ ,  $GF \approx 0.074$ . Also, from Figure 14.23, for

$$\frac{L_1}{L_1 + L_2} = \frac{2}{2 + 3} = 0.4, \quad \frac{l_1}{L_1 + L_2} = 0.2, \quad \text{and} \quad \phi' = 32^\circ$$

$CFL_1 = 1.073$ . From Eq. (14.73),

$$\begin{aligned} \gamma_a &= \frac{\gamma L_1^2 + \gamma' L_2^2 + 2\gamma L_1 L_2}{(L_1 + L_2)^2} \\ &= \frac{(15.9)(2)^2 + (19.33 - 9.81)(3)^2 + (2)(15.9)(2)(3)}{(2 + 3)^2} = 13.6 \text{ kN/m}^3 \end{aligned}$$

Using Eq. (14.71) yields

$$F = \gamma_a(L_1 + L_2)^2(GF)(CFL_1) = (13.6)(5)^2(0.074)(1.073) \approx \mathbf{27 \text{ kN/m}}$$

Part c

From Figure 14.21, for  $l_1/(L_1 + L_2) = 0.2$  and  $\phi' = 32^\circ$ ,  $GM = 0.021$ . Also, from Figure 14.24, for


$$\frac{L_1}{L_1 + L_2} = \frac{2}{2 + 3} = 0.4, \quad \frac{l_1}{L_1 + L_2} = 0.2, \quad \text{and} \quad \phi' = 32^\circ$$

$CML_1 = 1.036$ . Hence from Eq. (14.72),

$$M_{\text{max}} = \gamma_a(L_1 + L_2)^3(GM)(CML_1) = (13.6)(5)^3(0.021)(1.036) = \mathbf{36.99 \text{ kN} \cdot \text{m/m}} \quad \blacksquare$$

## 14.11 Moment Reduction for Anchored Sheet-Pile Walls Penetrating into Sand

Sheet piles are flexible, and hence sheet-pile walls yield (i.e., become displaced laterally), which redistributes the lateral earth pressure. This change tends to reduce the maximum bending moment,  $M_{\text{max}}$ , as calculated by the procedure outlined in Section 14.9. For that reason, Rowe (1952, 1957) suggested a procedure for reducing the maximum design moment on the sheet-pile walls *obtained from the free earth support method*. This section discusses the procedure of moment reduction for sheet piles *penetrating into sand*.

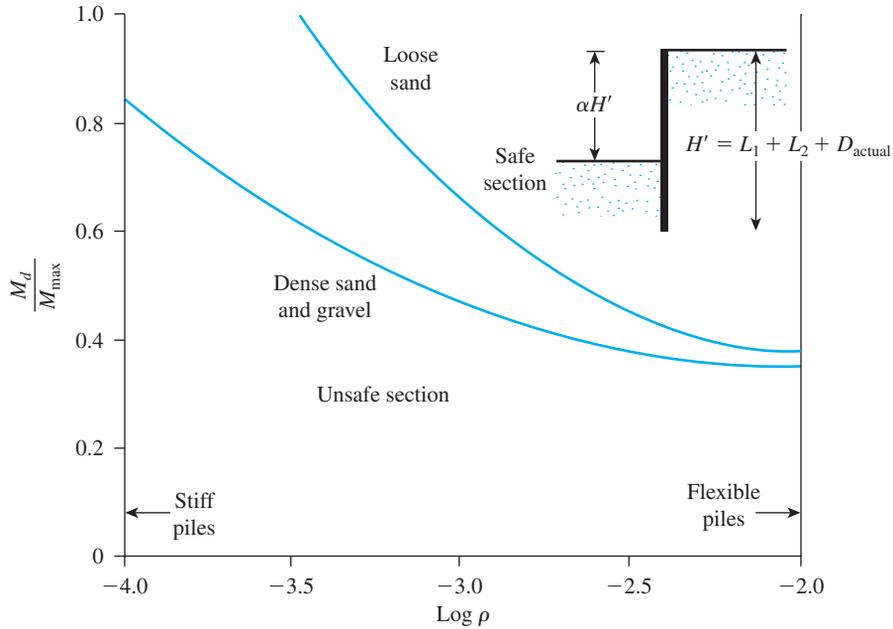

**Figure 14.25** Plot of  $\log \rho$  against  $M_d/M_{\max}$  for sheet-pile walls penetrating sand (Based on Rowe, P. W. (1952). “Anchored Sheet-Pile Walls,” *Proceedings, Institute of Civil Engineers*, Vol. 1, Part 1, pp. 27–70.)

In Figure 14.25, which is valid for the case of a sheet pile penetrating sand, the following notation is used:

1.  $H'$  = total height of pile driven (i.e.,  $L_1 + L_2 + D_{\text{actual}}$ )

2. Relative flexibility of pile =  $\rho = 10.91 \times 10^{-7} \left( \frac{H'^4}{EI} \right)$  (14.74a)

where

$H'$  is in meters

$E$  = modulus of elasticity of the pile material ( $\text{MN}/\text{m}^2$ )

$I$  = moment of inertia of the pile section per meter of the wall ( $\text{m}^4/\text{m}$  of wall)

3.  $M_d$  = design moment
4.  $M_{\max}$  = maximum theoretical moment

In English units, Eq. (14.74a) takes the form

$$\rho = \frac{H'^4}{EI} \quad (14.74b)$$

where  $H'$  is in ft,  $E$  is in  $\text{lb}/\text{in}^2$ , and  $I$  is in  $\text{in}^4/\text{ft}$  of the wall.

The procedure for the use of the moment reduction diagram (see Figure 14.25) is as follows:

- Step 1.* Choose a sheet-pile section (e.g., from among those given in Table 14.1).
- Step 2.* Find the modulus  $S$  of the selected section (Step 1) per unit length of the wall.
- Step 3.* Determine the moment of inertia of the section (Step 1) per unit length of the wall.
- Step 4.* Obtain  $H'$  and calculate  $\rho$  [see Eq. (14.74a) or Eq. (14.74b)].
- Step 5.* Find  $\log \rho$ .
- Step 6.* Find the moment capacity of the pile section chosen in Step 1 as  $M_d = \sigma_{\text{all}}S$ .
- Step 7.* Determine  $M_d/M_{\text{max}}$ . Note that  $M_{\text{max}}$  is the maximum theoretical moment determined before.
- Step 8.* Plot  $\log \rho$  (Step 5) and  $M_d/M_{\text{max}}$  in Figure 14.25.
- Step 9.* Repeat Steps 1 through 8 for several sections. The points that fall above the curve (in loose sand or dense sand, as the case may be) are *safe sections*.

The points that fall below the curve are *unsafe sections*. The cheapest section may now be chosen from those points which fall above the proper curve. Note that the section chosen will have an  $M_d < M_{\text{max}}$ .

### Example 14.9

Refer to Example 14.7. Use Rowe's moment reduction diagram (Figure 14.25) to find an appropriate sheet-pile section. For the sheet pile, use  $E = 207 \times 10^3 \text{ MN/m}^2$  and  $\sigma_{\text{all}} = 172,500 \text{ kN/m}^2$ .

#### Solution

$$H' = L_1 + L_2 + D_{\text{actual}} = 3.05 + 6.1 + 5.33 = 14.48 \text{ m}$$

$M_{\text{max}} = 344.9 \text{ kN} \cdot \text{m/m}$ . Now the following table can be prepared.

Section	$I(\text{m}^4/\text{m})$	$H'(\text{m})$	$\rho = 10.91 \times$		$S(\text{m}^3/\text{m})$	$M_d = S\sigma_{\text{all}}$ ( $\text{kN} \cdot \text{m/m}$ )	$\frac{M_d}{M_{\text{max}}}$
			$10^{-7} \left( \frac{H'^4}{EI} \right)$	$\log \rho$			
PZ-22	$116.2 \times 10^{-6}$	14.48	$19.94 \times 10^{-4}$	-2.7	$98.92 \times 10^{-5}$	170.64	0.495
PZ-27	$255.9 \times 10^{-6}$	14.48	$9.05 \times 10^{-4}$	-3.04	$166.66 \times 10^{-5}$	287.49	0.834

Figure 14.26 gives a plot of  $M_d/M_{\text{max}}$  versus  $\rho$ . It can be seen that **PZ-27** will be sufficient.

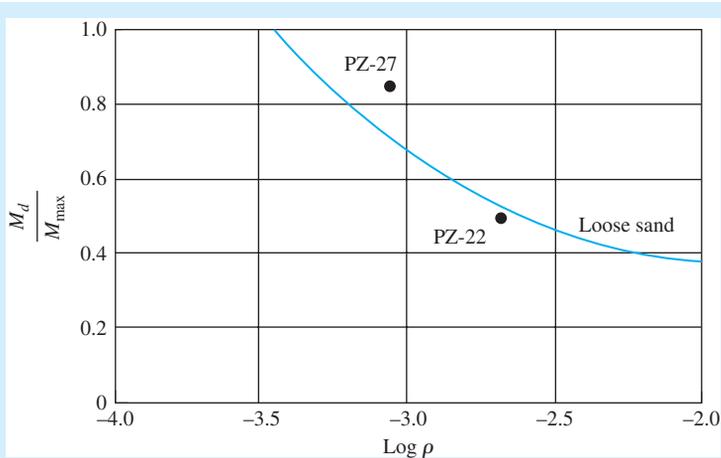


Figure 14.26 Plot of  $M_d/M_{max}$  versus  $\log \rho$

## 14.12 Computational Pressure Diagram Method for Penetration into Sandy Soil

The computational pressure diagram (CPD) method for sheet pile penetrating a sandy soil is a simplified method of design and an alternative to the free earth method described in Sections 14.9 and 14.11 (Nataraj and Hoadley, 1984). In this method, the net pressure diagram shown in Figure 14.18 is replaced by rectangular pressure diagrams, as in Figure 14.27. Note that  $\bar{\sigma}'_a$  is the width of the net active pressure diagram  $\bar{\sigma}'_a$  above the dredge line and  $\bar{\sigma}'_p$  is

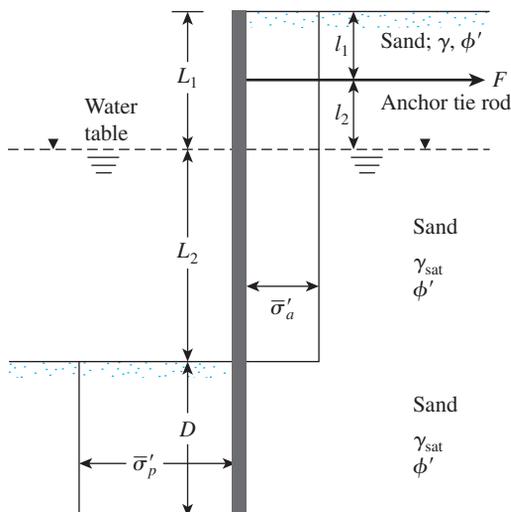


Figure 14.27 Computational pressure diagram method (Note:  $L_1 + L_2 = L$ )

**Table 14.2** Range of Values for  $C$  and  $R$  [from Eqs. (14.75) and (14.76)]

Soil type	$C^a$	$R$
Loose sand	0.8–0.85	0.3–0.5
Medium sand	0.7–0.75	0.55–0.65
Dense sand	0.55–0.65	0.60–0.75

<sup>a</sup>Valid for the case in which there is no surcharge above the granular backfill (i.e., on the right side of the wall, as shown in Figure 14.27)

the width of the net passive pressure diagram below the dredge line. The magnitudes of  $\bar{\sigma}'_a$  and  $\bar{\sigma}'_p$  may respectively be expressed as

$$\bar{\sigma}'_a = CK_a\gamma'_{av}L \quad (14.75)$$

and

$$\bar{\sigma}'_p = RCK_a\gamma'_{av}L = R\bar{\sigma}'_a \quad (14.76)$$

where

$\gamma'_{av}$  = average effective unit weight of sand

$$\approx \frac{\gamma L_1 + \gamma' L_2}{L_1 + L_2} \quad (14.77)$$

$C$  = coefficient

$$R = \text{coefficient} = \frac{L(L - 2l_1)}{D(2L + D - 2l_1)} \quad (14.78)$$

The range of values for  $C$  and  $R$  is given in Table 14.2.

The depth of penetration,  $D$ , anchor force per unit length of the wall,  $F$ , and maximum moment in the wall,  $M_{\max}$ , are obtained from the following relationships.

## Depth of Penetration

For the depth of penetration, we have

$$D^2 + 2DL \left[ 1 - \left( \frac{l_1}{L} \right) \right] - \left( \frac{L^2}{R} \right) \left[ 1 - 2 \left( \frac{l_1}{L} \right) \right] = 0 \quad (14.79)$$

## Anchor Force

The anchor force is

$$F = \bar{\sigma}'_a(L - RD) \quad (14.80)$$

## Maximum Moment

The maximum moment is calculated from

$$M_{\max} = 0.5 \bar{\sigma}'_a L^2 \left[ \left( 1 - \frac{RD}{L} \right)^2 - \left( \frac{2l_1}{L} \right) \left( 1 - \frac{RD}{L} \right) \right] \quad (14.81)$$

Note the following qualifications:

1. The magnitude of  $D$  obtained from Eq. (14.79) is about 1.25 to 1.5 times the value of  $D_{\text{theory}}$  obtained by the conventional free earth support method (see Section 14.9), so

$$\begin{array}{ccc} D & \approx & D_{\text{actual}} \\ \uparrow & & \uparrow \\ \text{Eq. (14.79)} & & \text{Eq. (14.68)} \end{array}$$

2. The magnitude of  $F$  obtained by using Eq. (14.80) is about 1.2 to 1.6 times the value obtained by using Eq. (14.66). Thus, an additional factor of safety for the actual design of anchors need not be used.
3. The magnitude of  $M_{\max}$  obtained from Eq. (14.81) is about 0.6 to 0.75 times the value of  $M_{\max}$  obtained by the conventional free earth support method. Hence, the former value of  $M_{\max}$  can be used as the actual design value, and Rowe's moment reduction need not be applied.

### Example 14.10

For the anchored sheet-pile wall shown in Figure 14.28, determine (a)  $D$ , (b)  $F$ , and (c)  $M_{\max}$ . Use the CPD method; assume that  $C = 0.68$  and  $R = 0.6$ .

#### Solution

Part a

$$\gamma' = \gamma_{\text{sat}} - \gamma_w = 19.24 - 9.81 = 9.43 \text{ kN/m}^3$$

From Eq. (14.77)

$$\gamma'_{\text{av}} = \frac{\gamma L_1 + \gamma' L_2}{L_1 + L_2} = \frac{(17.3)(3) + (9.43)(6)}{3 + 6} = 12.05 \text{ kN/m}^3$$

$$K_a = \tan^2 \left( 45 - \frac{\phi'}{2} \right) = \tan^2 \left( 45 - \frac{35}{2} \right) = 0.271$$

$$\bar{\sigma}'_a = CK_a \gamma'_{\text{av}} L = (0.68)(0.271)(12.05)(9) = 19.99 \text{ kN/m}^2$$

$$\bar{\sigma}'_p = R \bar{\sigma}'_a = (0.6)(19.99) = 11.99 \text{ kN/m}^2$$

From Eq. (14.80)

$$D^2 + 2DL \left[ 1 - \left( \frac{l_1}{L} \right) \right] - \frac{L^2}{R} \left[ 1 - 2 \left( \frac{l_1}{L} \right) \right] = 0$$

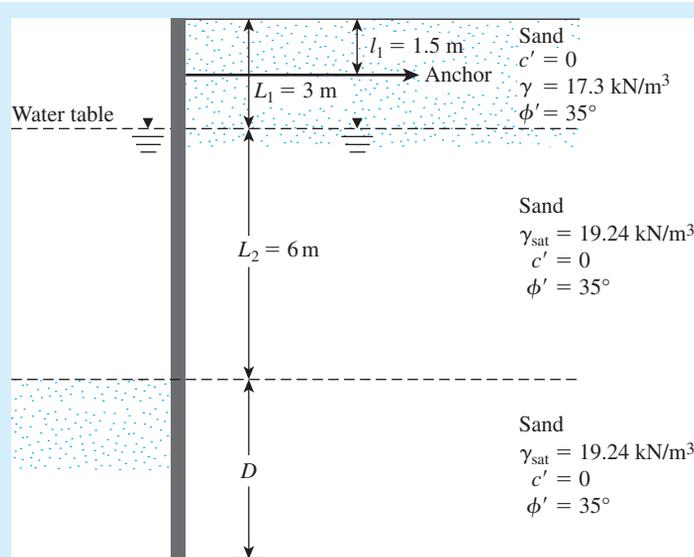


Figure 14.28

or

$$D^2 + 2(D)(9) \left[ 1 - \left( \frac{1.5}{9} \right) \right] - \frac{(9)^2}{0.6} \left[ 1 - 2 \left( \frac{1.5}{9} \right) \right] = D^2 + 50D - 1000 = 0$$

Hence  $D \approx 4.6$  m.

Check for the assumption of  $R$ :

$$R = \frac{L(L - 2l_1)}{D(2L + D - 2l_1)} = \frac{9[9 - (2)(1.5)]}{4.6[(2)(9) + 4.6 - (2)(1.5)]} \approx 0.6 \text{—OK}$$

Part b

From Eq. (14.80)

$$F = \bar{\sigma}'_a(L - RD) = 19.99[9 - (0.6)(4.6)] = 124.74 \text{ kN/m}$$

Part c

From Eq. (14.81)

$$M_{\max} = 0.5\bar{\sigma}'_a L^2 \left[ \left( 1 - \frac{RD}{L} \right)^2 - \left( \frac{2l_1}{L} \right) \left( 1 - \frac{RD}{L} \right) \right]$$

$$1 - \frac{RD}{L} = 1 - \frac{(0.6)(4.6)}{9} = 0.693$$

So,


$$M_{\max} = (0.5)(19.99)(9)^2 \left[ (0.693)^2 - \frac{(2)(1.5)(0.693)}{9} \right] = 201.6 \text{ kN-m/m}$$

## 14.13 Field Observations for Anchor Sheet-Pile Walls


In the preceding sections, large factors of safety were used for the depth of penetration,  $D$ . In most cases, designers use smaller magnitudes of soil friction angle,  $\phi'$ , thereby ensuring a built-in factor of safety for the active earth pressure. This procedure is followed primarily because of the uncertainties involved in predicting the actual earth pressure to which a sheet-pile wall in the field will be subjected. In addition, Casagrande (1973) observed that, if the soil behind the sheet-pile wall has grain sizes that are predominantly smaller than those of coarse sand, the active earth pressure after construction sometimes increases to an at-rest earth-pressure condition. Such an increase causes a large increase in the anchor force,  $F$ . The following two case histories are given by Casagrande (1973).

### Bulkhead of Pier C—Long Beach Harbor, California (1949)

A typical cross section of the Pier C bulkhead of the Long Beach harbor is shown in Figure 14.29. Except for a rockfill dike constructed with 76 mm (3 in.) maximum-size quarry wastes, the backfill of the sheet-pile wall consisted of fine sand. Figure 14.30 shows the variation of the lateral earth pressure between May 24, 1949 (the day construction was completed) and August 6, 1949. On May 24, the lateral earth pressure reached an active state, as shown in Figure 14.30a, due to the wall yielding. Between May 24 and June 3, the anchor resisted further yielding and the lateral earth pressure increased to the at-rest state (Figure 14.30b). However, the flexibility of the sheet piles ultimately resulted in a gradual decrease in the lateral earth-pressure distribution on the sheet piles (see Figure 14.30c).

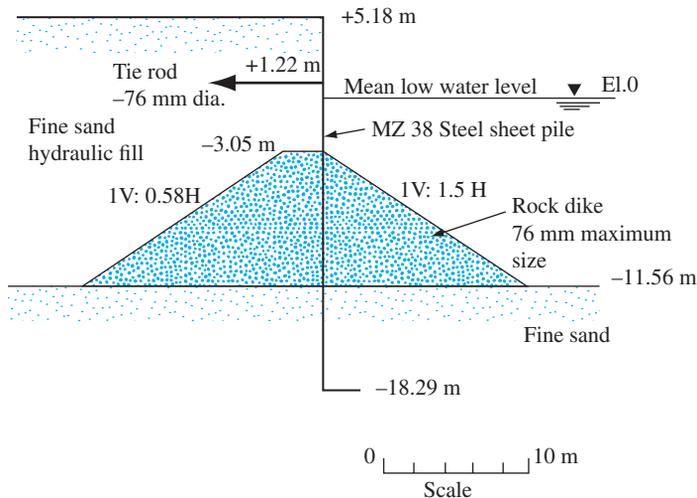

**Figure 14.29** Pier C bulkhead—Long Beach harbor (Based on Casagrande, 1973)

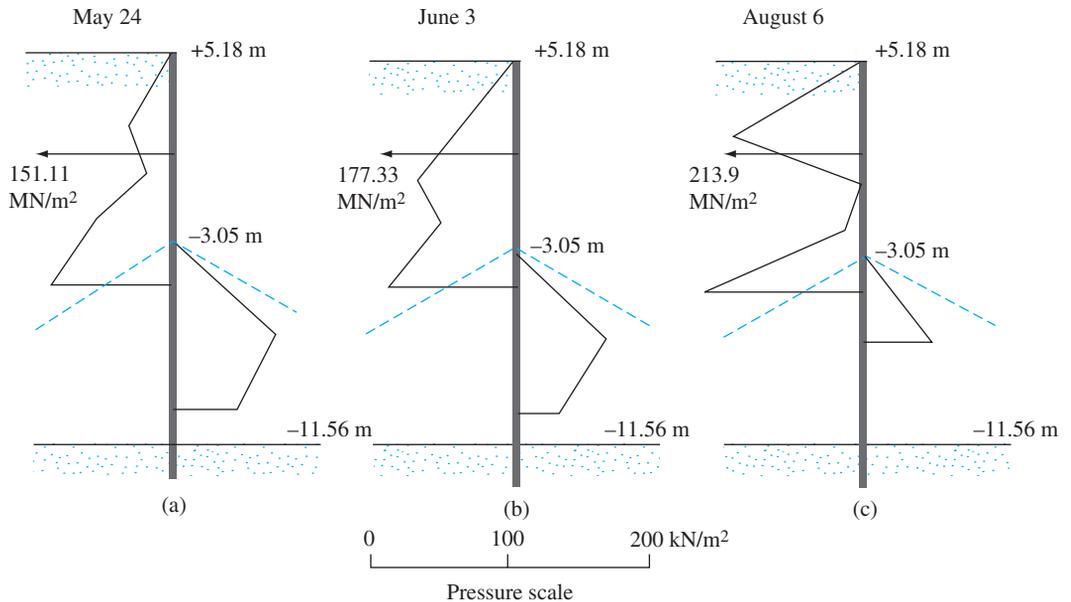

**Figure 14.30** Measured stresses at Station 27 + 30—Pier C bulkhead, Long Beach (Based on Casagrande, 1973)


With time, the stress on the tie rods for the anchor increased as shown in the following table.

Date	Stress on anchor tie rod (MN/m <sup>2</sup> )
May 24, 1949	151.11
June 3, 1949	177.33
June 11, 1949	193.2
July 12, 1949	203.55
August 6, 1949	213.9

These observations show that the magnitude of the active earth pressure may vary with time and depend greatly on the flexibility of the sheet piles. Also, the actual variations in the lateral earth-pressure diagram may not be identical to those used for design.

### Bulkhead—Toledo, Ohio (1961)

A typical cross section of a Toledo bulkhead completed in 1961 is shown in Figure 14.31. The foundation soil was primarily fine to medium sand, but the dredge line did cut into highly overconsolidated clay. Figure 14.31 also shows the actual measured values of bending moment along the sheet-pile wall. Casagrande (1973) used the Rankine active earth-pressure distribution to calculate the maximum bending moment according to the free earth support method with and without Rowe's moment reduction.

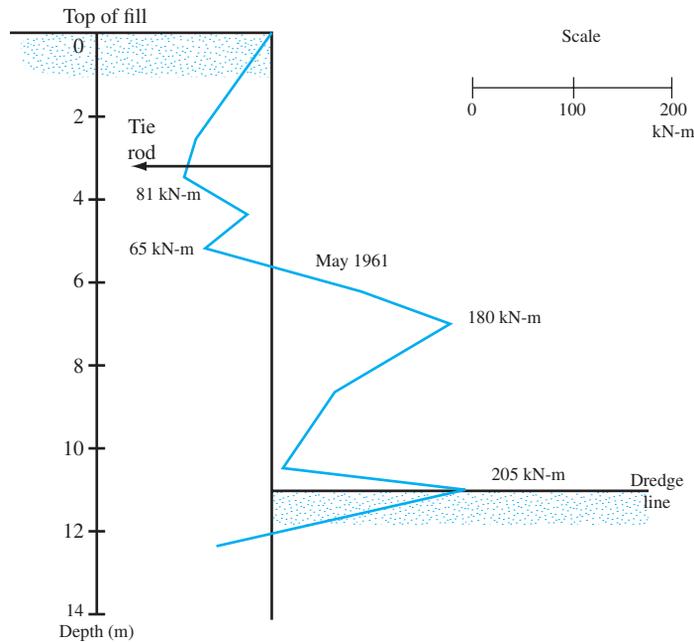

**Figure 14.31** Bending moment from strain-gage measurements at test location 3, Toledo bulkhead (Based on Casagrande, 1973)

Design method	Maximum predicted bending moment, $M_{\max}$
Free earth support method	146.5 kN-m
Free earth support method with Rowe's moment reduction	78.6 kN-m

Comparisons of these magnitudes of  $M_{\max}$  with those actually observed show that the field values are substantially larger. The reason probably is that the backfill was primarily fine sand and the measured active earth-pressure distribution was larger than that predicted theoretically.


## 14.14 Free Earth Support Method for Penetration of Clay

Figure 14.32 shows an anchored sheet-pile wall penetrating a clay soil and with a granular soil backfill. The diagram of pressure distribution above the dredge line is similar to that shown in Figure 14.13. From Eq. (14.42), the net pressure distribution below the dredge line (from  $z = L_1 + L_2$  to  $z = L_1 + L_2 + D$ ) is

$$\sigma_6 = 4c - (\gamma L_1 + \gamma' L_2)$$

For static equilibrium, the sum of the forces in the horizontal direction is

$$P_1 - \sigma_6 D = F \quad (14.82)$$

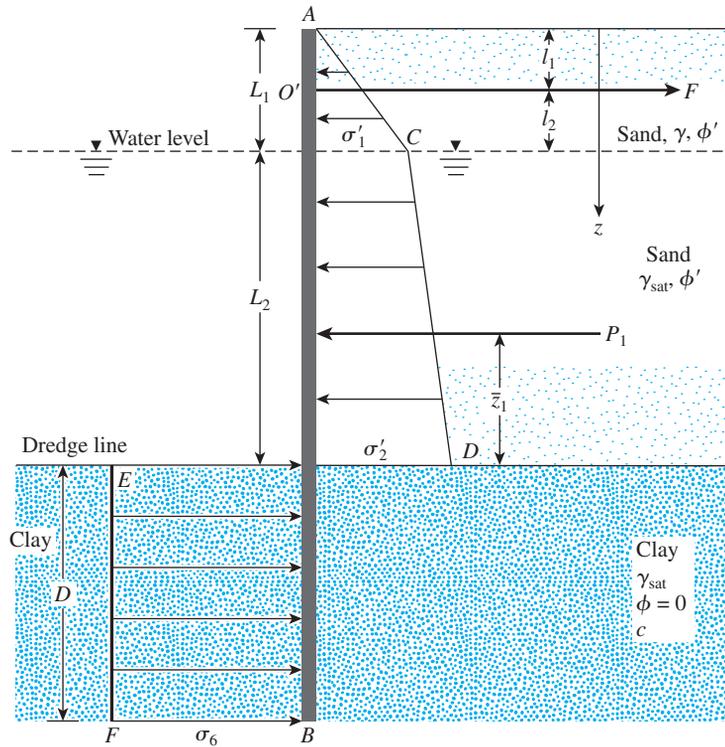

**Figure 14.32** Anchored sheet-pile wall penetrating clay

where

$P_1$  = area of the pressure diagram  $ACD$

$F$  = anchor force per unit length of the sheet-pile wall

Again, taking the moment about  $O'$  produces

$$P_1(L_1 + L_2 - l_1 - \bar{z}_1) - \sigma_6 D \left( l_2 + L_2 + \frac{D}{2} \right) = 0$$

Simplification yields

$$\sigma_6 D^2 + 2\sigma_6 D(L_1 + L_2 - l_1) - 2P_1(L_1 + L_2 - l_1 - \bar{z}_1) = 0 \quad (14.83)$$

Equation (14.83) gives the theoretical depth of penetration,  $D$ .

As in Section 14.9, the maximum moment in this case occurs at a depth  $L_1 < z < L_1 + L_2$ . The depth of zero shear (and thus the maximum moment) may be determined from Eq. (14.69).

A moment reduction technique similar to that in Section 14.11 for anchored sheet piles penetrating into clay has also been developed by Rowe (1952, 1957). This technique is presented in Figure 14.33, in which the following notation is used:

1. The stability number is


$$S_n = 1.25 \frac{c}{(\gamma L_1 + \gamma' L_2)} \quad (14.84)$$

where  $c$  = undrained cohesion ( $\phi = 0$ ).

For the definition of  $\gamma$ ,  $\gamma'$ ,  $L_1$ , and  $L_2$ , see Figure 14.32.

2. The nondimensional wall height is

$$\alpha = \frac{L_1 + L_2}{L_1 + L_2 + D_{\text{actual}}} \quad (14.85)$$

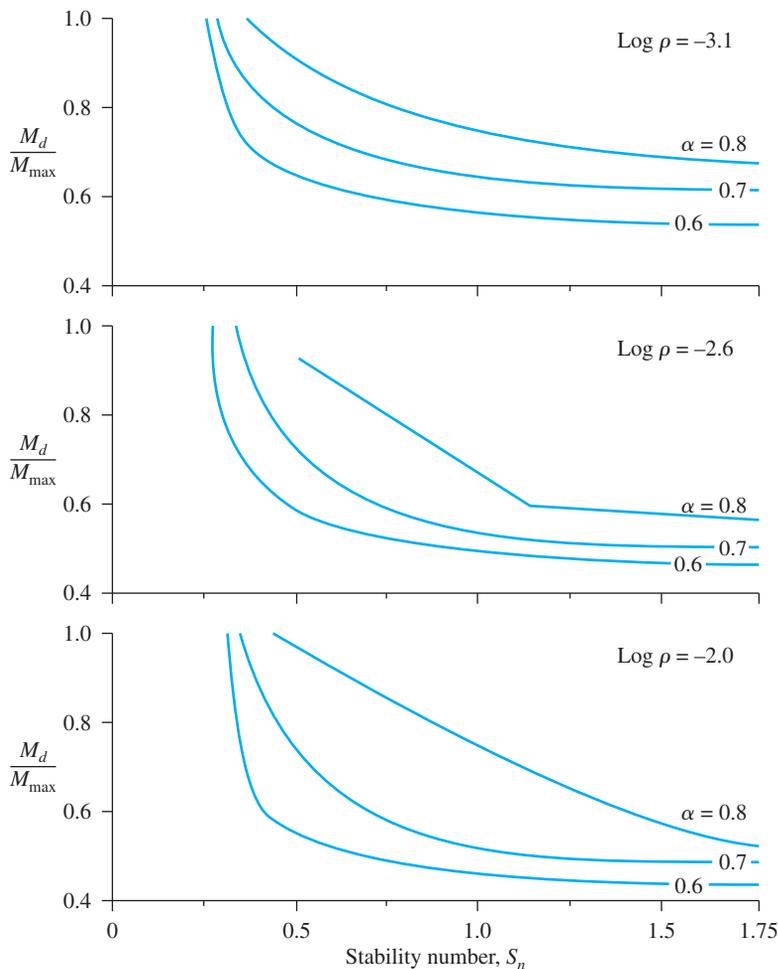

**Figure 14.33** Plot of  $M_d/M_{\max}$  against stability number for sheet-pile wall penetrating clay [Based on Rowe, P. W. (1957). "Sheet-Pile Walls in Clay," *Proceedings, Institute of Civil Engineers*, Vol. 7, pp. 654–692.]

3. The flexibility number is  $\rho$  [see Eq. (14.74a) or Eq. (14.74b)]
4.  $M_d$  = design moment  
 $M_{\max}$  = maximum theoretical moment

The procedure for moment reduction, using Figure 14.33, is as follows:

- Step 1. Obtain  $H' = L_1 + L_2 + D_{\text{actual}}$ .
- Step 2. Determine  $\alpha = (L_1 + L_2)/H'$ .
- Step 3. Determine  $S_n$  [from Eq. (14.84)].
- Step 4. For the magnitudes of  $\alpha$  and  $S_n$  obtained in Steps 2 and 3, determine  $M_d/M_{\max}$  for various values of  $\log \rho$  from Figure 14.33, and plot  $M_d/M_{\max}$  against  $\log \rho$ .
- Step 5. Follow Steps 1 through 9 as outlined for the case of moment reduction of sheet-pile walls penetrating granular soil. (See Section 14.11.)

### Example 14.11

In Figure 14.32, let  $L_1 = 3$  m,  $L_2 = 6$  m, and  $l_1 = 1.5$  m. Also, let  $\gamma = 17$  kN/m<sup>3</sup>,  $\gamma_{\text{sat}} = 20$  kN/m<sup>3</sup>,  $\phi' = 35^\circ$ , and  $c = 41$  kN/m<sup>2</sup>.

- a. Determine the theoretical depth of embedment of the sheet-pile wall.
- b. Calculate the anchor force per unit length of the wall.

#### Solution

Part a

We have

$$K_a = \tan^2\left(45 - \frac{\phi'}{2}\right) = \tan^2\left(45 - \frac{35}{2}\right) = 0.271$$

and

$$K_p = \tan^2\left(45 + \frac{\phi'}{2}\right) = \tan^2\left(45 + \frac{35}{2}\right) = 3.69$$

From the pressure diagram in Figure 14.34,


$$\sigma'_1 = \gamma L_1 K_a = (17)(3)(0.271) = 13.82 \text{ kN/m}^2$$

$$\sigma'_2 = (\gamma L_1 + \gamma' L_2) K_a = [(17)(3) + (20 - 9.81)(6)](0.271) = 30.39 \text{ kN/m}^2$$

$$\begin{aligned} P_1 &= \text{areas 1} + 2 + 3 = 1/2(3)(13.82) + (13.82)(6) + 1/2(30.39 - 13.82)(6) \\ &= 20.73 + 82.92 + 49.71 = 153.36 \text{ kN/m} \end{aligned}$$

and

$$\bar{z}_1 = \frac{(20.73)\left(6 + \frac{3}{3}\right) + (82.92)\left(\frac{6}{2}\right) + (49.71)\left(\frac{6}{3}\right)}{153.36} = 3.2 \text{ m}$$

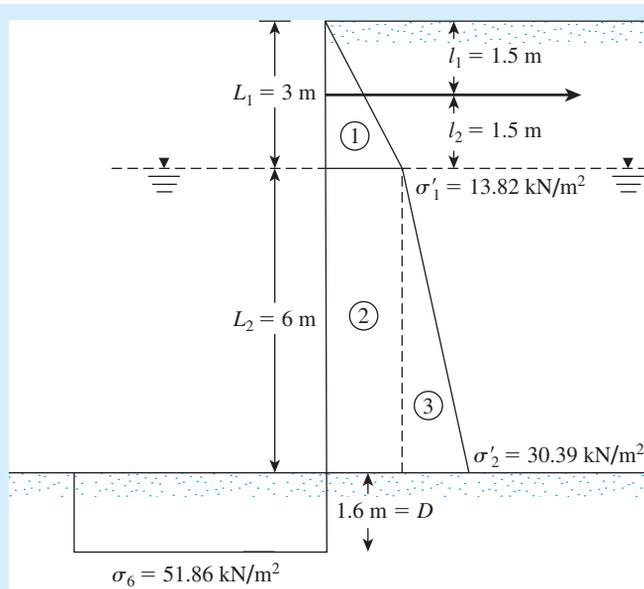

**Figure 14.34** Free earth support method, with sheet pile penetrating into clay

From Eq. (14.83),

$$\begin{aligned}\sigma_6 D^2 + 2\sigma_6 D(L_1 + L_2 - l_1) - 2P_1(L_1 + L_2 - l_1 - \bar{z}_1) &= 0 \\ \sigma_6 &= 4c - (\gamma L_1 + \gamma' L_2) = (4)(41) - [(17)(3) \\ &\quad + (20 - 9.81)(6)] = 51.86 \text{ kN/m}^2\end{aligned}$$

So,

$$\begin{aligned}(51.86)D^2 + (2)(51.86)(D)(3 + 6 - 1.5) \\ - (2)(153.36)(3 + 6 - 1.5 - 3.2) = 0\end{aligned}$$

or

$$D^2 + 15D - 25.43 = 0$$

Hence,

$$D \approx 1.6 \text{ m}$$

Part b

From Eq. (14.82),

$$F = P_1 - \sigma_6 D = 153.36 - (51.86)(1.6) = 70.38 \text{ kN/m}$$

### Example 14.12

Refer to Example 14.11.

- Increase the actual depth of penetration as  $D_{\text{actual}} = 1.75D_{\text{theory}}$ .
- Determine  $M_{\text{max}}$ .

- c. Use Rowe's moment reduction diagram (Figure 14.33) to find an appropriate sheet-pile section. For the sheet pile (Table 14.1), use  $E = 207 \times 10^3 \text{ MN/m}^2$  and  $\sigma_{\text{all}} = 172,500 \text{ kN/m}^2$ .

### Solution

Part a

$$D_{\text{actual}} = 1.75D_{\text{theory}} = (1.75)(1.6) = \mathbf{2.8 \text{ m}}$$

Part b

From Eq. (14.82),

$$F = P_1 - \sigma_6 D_{\text{theory}} = 153.36 - (51.86)(1.6) = 70.38 \text{ kN/m}$$

From Eq. (14.69), for zero shear, use

$$\frac{1}{2}\sigma'_1 L_1 - F + \sigma'_1(z - L_1) + \frac{1}{2}K_a \gamma'(z - L_1)^2 = 0$$

Let  $z - L_1 = x$ , So,

$$\frac{1}{2}\sigma'_1 L_1 - F + \sigma'_1 x + \frac{1}{2}K_a \gamma' x^2 = 0$$

or

$$\left(\frac{1}{2}\right)(13.82)(3) - 70.38 + (13.82)(x) + \left(\frac{1}{2}\right)(0.271)(20 - 9.81)x^2 = 0$$

$$1.38x^2 + 13.82x - 49.65 = 0$$

From the above equation,  $x \approx 3 \text{ m}$ . Taking the moment about the zero shear point,

$$M_{\text{max}} = -\frac{1}{2}\sigma'_1 L_1 \left(x + \frac{L_1}{3}\right) + F(x + l_2) - \frac{\sigma'_1 x^2}{2} - \frac{1}{2}K_a \gamma' x^2 \left(\frac{x}{3}\right)$$

or

$$\begin{aligned} M_{\text{max}} &= -\left(\frac{1}{2}\right)(13.82)\left(3 + \frac{3}{3}\right) + 70.38(3 + 1.5) - \frac{(13.82)(3)^2}{2} - \left(\frac{1}{2}\right)(0.271)(3)^2\left(\frac{3}{3}\right) \\ &= \mathbf{225.66 \text{ kN} \cdot \text{m/m}} \end{aligned}$$

Part c

From Eq. (14.84),

$$s_n = 1.25 \frac{c}{\gamma L_1 + \gamma' L_2} = 1.25 \left[ \frac{41}{(17 \times 3) + (20 - 9.81)(6)} \right] = 0.457$$

From Eq. (14.85),

$$\alpha = \frac{L_1 + L_2}{L_1 + L_2 + D_{\text{actual}}} = \frac{3 + 6}{3 + 6 + 2.8} = 0.763$$

Now, referring to Figure 14.33 for  $S_n = 0.457$  and  $\alpha = 0.763$ , we have

$\log \rho$	$M_d/M_{\max}$
-3.1	$\approx 0.9$
-2.6	$\approx 0.9$
-2.0	$\approx 0.9$


Hence, for all  $\log \rho$  values,  $M_d/M_{\max} \approx 0.9$ . The following table now can be prepared.

Section	$I$ (m <sup>4</sup> /m)	$H'$ (m)	$\rho = \frac{(10.91 \times 10^{-7}) \times (H'^4/EI)}$	$\log \rho$	$S$ (m <sup>3</sup> /m)	$M_d = S\sigma_{\text{all}}$	$M_d/M_{\max}$
PZC-12	192.06 $\times 10^{-6}$	11.8	$5.93 \times 10^{-4}$	-3.2	120.42 $\times 10^{-5}$	207.72	0.92

Note:  $H' = L_1 + L_2 + D_{\text{actual}} = 3 + 6 + 2.8 = 11.8$  m  
 $M_{\max} = 225.66$  kN · m/m

Figure 14.35 shows the plot of  $M_d/M_{\max}$  versus  $\log \rho$ . Section PZC-12 falls above the line of  $M_d/M_{\max} = 0.9$ . So,

**PZC-12 will be sufficient.**

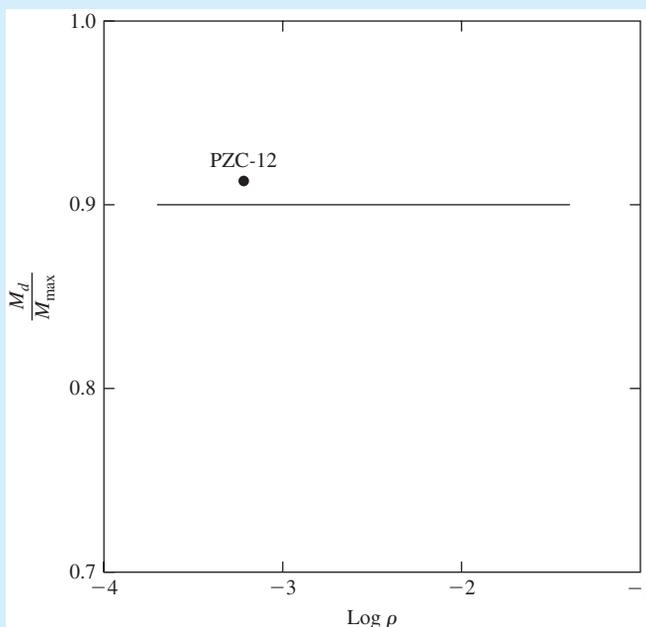

**Figure 14.35** Plot of  $M_d/M_{\max}$  versus  $\log \rho$  (Example 14.12)

## 14.15 Anchors

Sections 14.9 through 14.14 gave an analysis of anchored sheet-pile walls and discussed how to obtain the force  $F$  per unit length of the sheet-pile wall that has to be sustained by the anchors. The current section covers in more detail the various types of anchor generally used and the procedures for evaluating their ultimate holding capacities.

The general types of anchor used in sheet-pile walls are as follows:

1. Anchor plates and beams (deadman)
2. Tie backs
3. Vertical anchor piles
4. Anchor beams supported by batter (compression and tension) piles

*Anchor plates and beams* are generally made of cast concrete blocks. (See Figure 14.36a.) The anchors are attached to the sheet pile by *tie rods*. A *wale* is placed at the front or back face of a sheet pile for the purpose of conveniently attaching the tie rod to the wall. To protect the tie rod from corrosion, it is generally coated with paint or asphaltic materials.

In the construction of *tiebacks*, bars or cables are placed in predrilled holes (see Figure 14.36b) with concrete grout (cables are commonly high-strength, prestressed steel tendons). Figures 14.36c and 14.36d show a vertical anchor pile and an anchor beam with batter piles.

### Placement of Anchors

The resistance offered by anchor plates and beams is derived primarily from the passive force of the soil located in front of them. Figure 14.36a, in which  $AB$  is the sheet-pile wall, shows the best location for maximum efficiency of an anchor plate. If the anchor is placed inside wedge  $ABC$ , which is the Rankine active zone, it would not provide any resistance to failure. Alternatively, the anchor could be placed in zone  $CFEH$ . Note that line  $DFG$  is the slip line for the Rankine passive pressure. If part of the passive wedge is located inside the active wedge  $ABC$ , full passive resistance of the anchor cannot be realized upon failure of the sheet-pile wall. However, if the anchor is placed in zone  $ICH$ , the Rankine passive zone in front of the anchor slab or plate is located completely outside the Rankine active zone  $ABC$ . In this case, full passive resistance from the anchor can be realized.


Figures 14.36b, 14.36c, and 14.36d also show the proper locations for the placement of tiebacks, vertical anchor piles, and anchor beams supported by batter piles.

## 14.16 Holding Capacity of Anchor Plates in Sand


### Semi-Empirical Method

Ovesen and Stromann (1972) proposed a semi-empirical method for determining the ultimate resistance of anchors in sand. Their calculations, made in three steps, are carried out as follows:

- Step 1. Basic Case.* Determine the depth of embedment,  $H$ . Assume that the anchor slab has height  $H$  and is continuous (i.e.,  $B =$  length of anchor

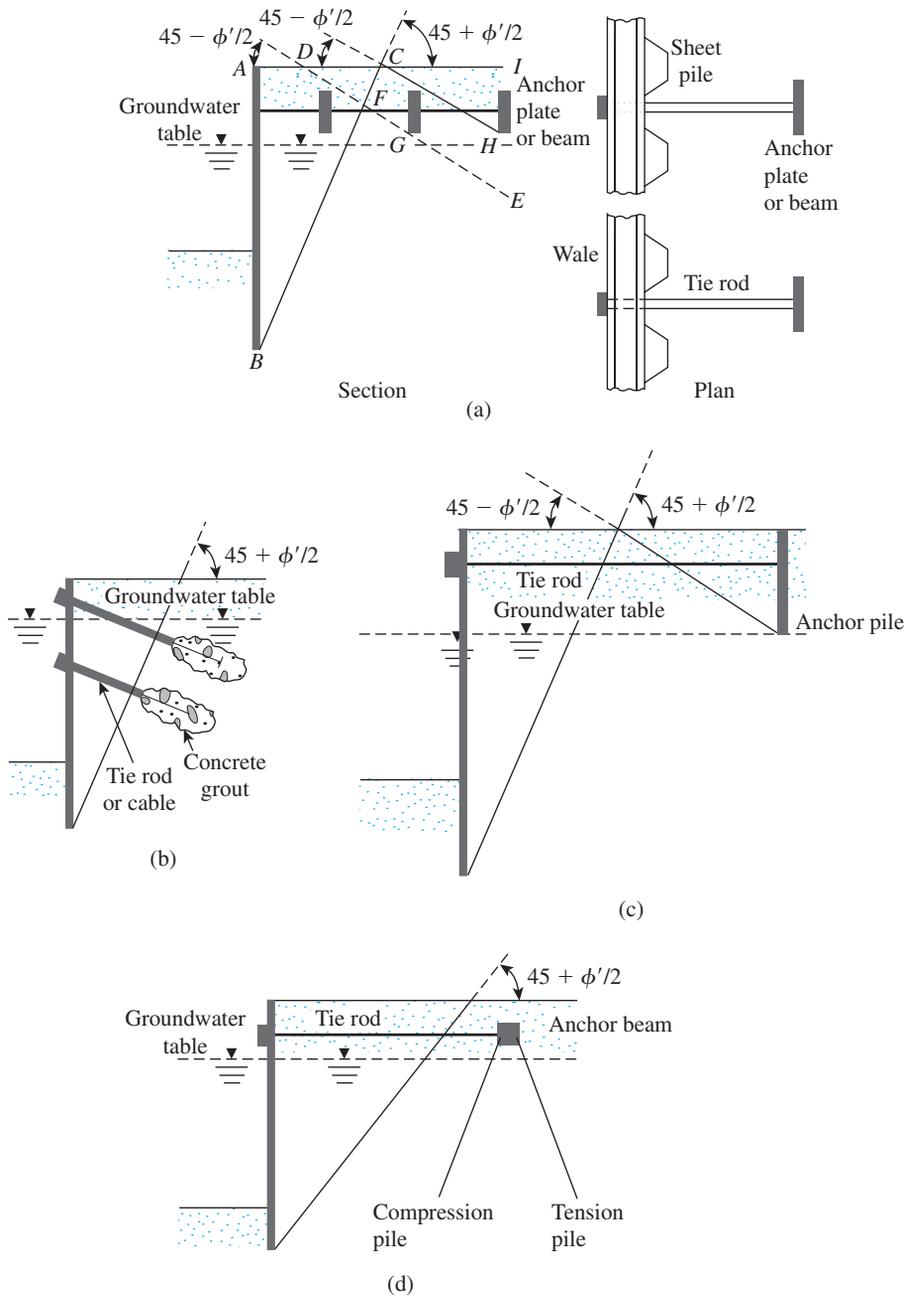

**Figure 14.36** Various types of anchoring for sheet-pile walls: (a) anchor plate or beam; (b) tieback; (c) vertical anchor pile; (d) anchor beam with batter piles

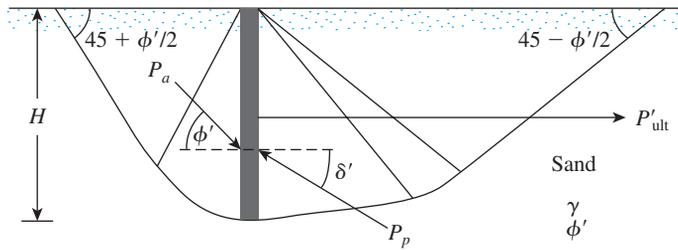

**Figure 14.37** Basic case: continuous vertical anchor in granular soil

slab perpendicular to the cross section =  $\infty$ ), as shown in Figure 14.37, in which the following notation is used:

- $P_p$  = passive force per unit length of anchor
- $P_a$  = active force per unit length of anchor
- $\phi'$  = effective soil friction angle
- $\delta'$  = friction angle between anchor slab and soil
- $P'_{ult}$  = ultimate resistance per unit length of anchor
- $W$  = effective weight per unit length of anchor slab

Also,

$$\begin{aligned} P'_{ult} &= \frac{1}{2}\gamma H^2 K_p \cos \delta' - P_a \cos \phi' = \frac{1}{2}\gamma H^2 K_p \cos \delta' - \frac{1}{2}\gamma H^2 K_a \cos \phi' \\ &= \frac{1}{2}\gamma H^2 (K_p \cos \delta' - K_a \cos \phi') \end{aligned} \quad (14.86)$$

where

$K_a$  = active pressure coefficient with  $\delta' = \phi'$   
(see Figure 14.38a)



$K_p$  = passive pressure coefficient

To obtain  $K_p \cos \delta'$ , first calculate

$$K_p \sin \delta' = \frac{W + P_a \sin \phi'}{\frac{1}{2}\gamma H^2} = \frac{W + \frac{1}{2}\gamma H^2 K_a \sin \phi'}{\frac{1}{2}\gamma H^2} \quad (14.87)$$

Then use the magnitude of  $K_p \sin \delta'$  obtained from Eq. (14.87) to estimate the magnitude of  $K_p \cos \delta'$  from the plots given in Figure 14.38b.

**Step 2. Strip Case.** Determine the actual height  $h$  of the anchor to be constructed. If a continuous anchor (i.e., an anchor for which  $B = \infty$ ) of height  $h$

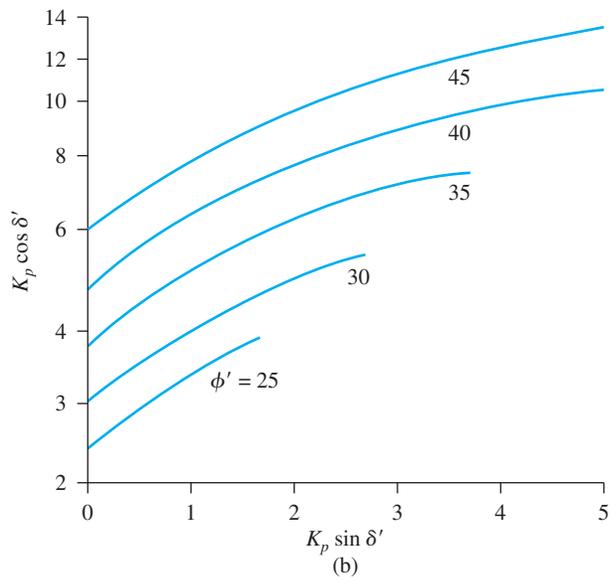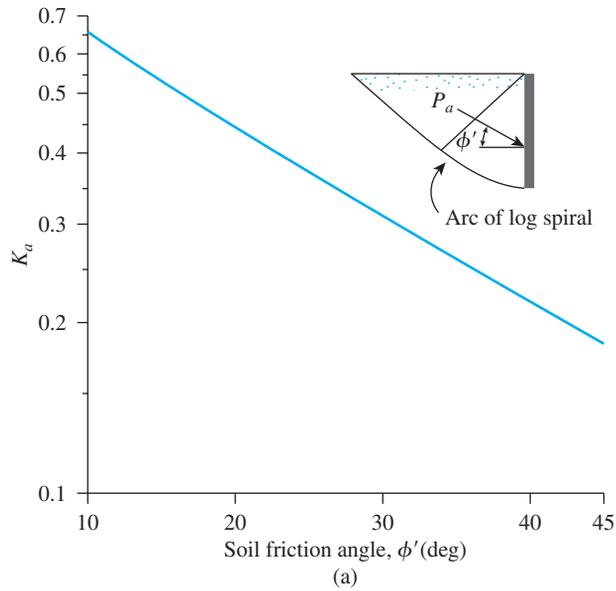

**Figure 14.38** (a) Variation of  $K_a$  for  $\delta' = \phi'$ , (b) variation of  $K_p \cos \delta'$  with  $K_p \sin \delta'$  (Based on Ovesen and Stromann, 1972)

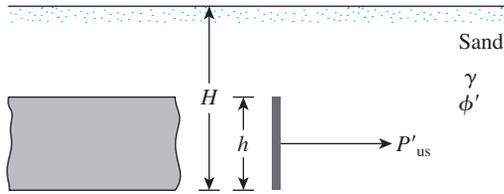


Figure 14.39 Strip case: vertical anchor

is placed in the soil so that its depth of embedment is  $H$ , as shown in Figure 14.39, the ultimate resistance per unit length is

$$P'_{us} = \left[ \frac{C_{ov} + 1}{C_{ov} + \left(\frac{H}{h}\right)} \right] P'_{ult} \quad (14.88)$$

↑  
Eq. (14.86)

where

$P'_{us}$  = ultimate resistance for the *strip case*

$C_{ov} = 19$  for dense sand and 14 for loose sand

**Step 3. Actual Case.** In practice, the anchor plates are placed in a row with center-to-center spacing  $S'$ , as shown in Figure 14.40a. The ultimate resistance of each anchor is

$$P_{ult} = P'_{us} B_e \quad (14.89)$$

where  $B_e$  = equivalent length.

The equivalent length is a function of  $S'$ ,  $B$ ,  $H$ , and  $h$ . Figure 14.40b shows a plot of  $(B_e - B)/(H + h)$  against  $(S' - B)/(H + h)$  for the cases of loose and dense sand. With known values of  $S'$ ,  $B$ ,  $H$ , and  $h$ , the value of  $B_e$  can be calculated and used in Eq. (14.89) to obtain  $P_{ult}$ .

## Stress Characteristic Solution


Neely, Stuart, and Graham (1973) proposed a stress characteristic solution for anchor pull-out resistance using the *equivalent free surface* concept. Figure 14.41 shows the assumed failure surface for a strip anchor. In this figure,  $OX$  is the equivalent free surface. The shear stress ( $s_o$ ) mobilized along  $OX$  can be given as

$$m = \frac{s_o}{\sigma'_o \tan \phi'} \quad (14.90)$$

where

$m$  = shear stress mobilization factor

$\sigma'_o$  = effective normal stress along  $OX$

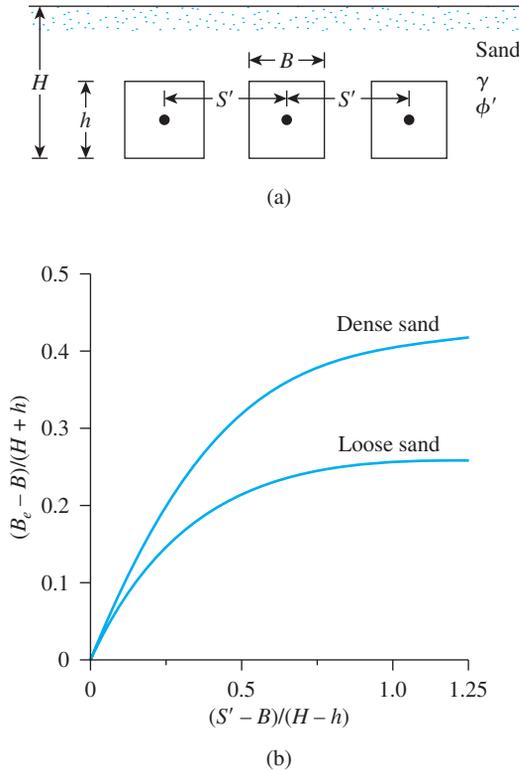

**Figure 14.40** (a) Actual case for row of anchors; (b) variation of  $(B_e - B)/(H + h)$  with  $(S' - B)/(H - h)$  (Based on Ovesen and Stromann, 1972)

Using this analysis, the ultimate resistance ( $P_{ult}$ ) of an anchor (length =  $B$  and height =  $h$ ) can be given as


$$P_{ult} = M_{\gamma q} (\gamma h^2) B F_s \quad (14.91)$$

where


$M_{\gamma q}$  = force coefficient

$F_s$  = shape factor

$\gamma$  = effective unit weight of soil

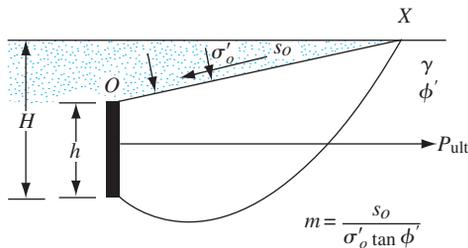

**Figure 14.41** Assumed failure surface in soil for stress characteristic solution

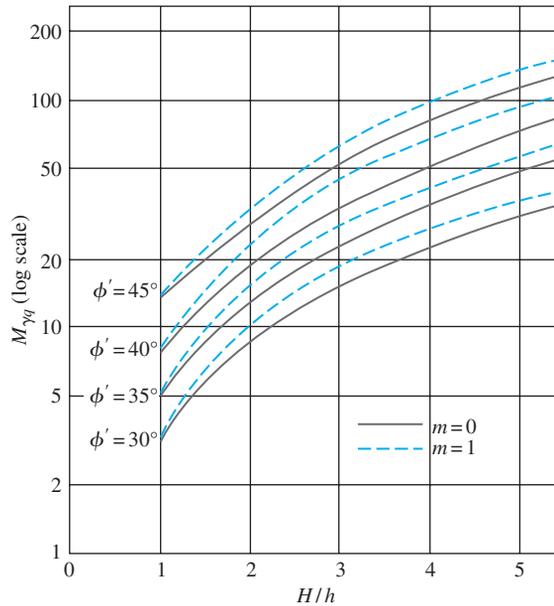

**Figure 14.42** Variation of  $M_{\gamma q}$  with  $H/h$  and  $\phi'$  (Based on Neeley et al., 1973.)

The variations of  $M_{\gamma q}$  for  $m = 0$  and 1 are shown in Figure 14.42. For conservative design,  $M_{\gamma q}$  with  $m = 0$  may be used. The shape factor ( $F_s$ ) determined experimentally is shown in Figure 14.43 as a function of  $B/h$  and  $H/h$ .

### Empirical Correlation Based on Model Tests

Ghaly (1997) used the results of 104 laboratory tests, 15 centrifugal model tests, and 9 field tests to propose an empirical correlation for the ultimate resistance of single anchors. The correlation can be written as

$$P_{\text{ult}} = \frac{5.4}{\tan \phi'} \left( \frac{H^2}{A} \right)^{0.28} \gamma AH \quad (14.92)$$


where  $A =$  area of the anchor  $= Bh$ .

Ghaly also used the model test results of Das and Seeley (1975) to develop a load–displacement relationship for single anchors. The relationship can be given as

$$\frac{P}{P_{\text{ult}}} = 2.2 \left( \frac{u}{H} \right)^{0.3} \quad (14.93)$$

where  $u =$  horizontal displacement of the anchor at a load level  $P$ .

Equations (14.92) and (14.93) apply to single anchors (i.e., anchors for which  $S'/B = \infty$ ). For all practical purposes, when  $S'/B \approx 2$  the anchors behave as single anchors.

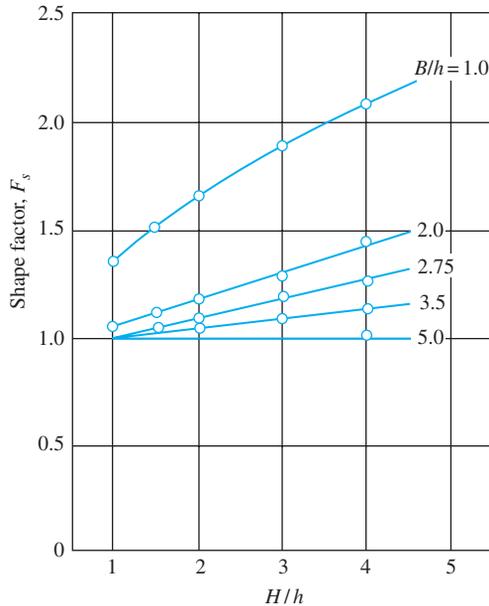

**Figure 14.43** Variation of shape factor with  $H/h$  and  $B/h$  (Based on Neeley et al., 1973.)

### Factor of Safety for Anchor Plates

The allowable resistance per anchor plate may be given as

$$P_{\text{all}} = \frac{P_{\text{ult}}}{\text{FS}}$$

where FS = factor of safety.

Generally, a factor of safety of 2 is suggested when the method of Ovesen and Stromann is used. A factor of safety of 3 is suggested for  $P_{\text{ult}}$  calculated by Eq. (14.92).

### Spacing of Anchor Plates

The center-to-center spacing of anchors,  $S'$ , may be obtained from

$$S' = \frac{P_{\text{all}}}{F}$$

where  $F$  = force per unit length of the sheet pile.

#### Example 14.13

Refer to Figure 14.40a. Given:  $B = h = 0.4$  m,  $S' = 1.2$  m,  $H = 1$  m,  $\gamma = 16.51$  kN/m<sup>3</sup>, and  $\phi' = 35^\circ$ . Determine the ultimate resistance for each anchor plate. The anchor plates are made of concrete and have thicknesses of 0.15 m.

**Solution**

From Figure 14.38a for  $\phi' = 35^\circ$ , the magnitude of  $K_a$  is about 0.26.

$$\begin{aligned} W &= Ht\gamma_{\text{concrete}} = (1 \text{ m})(0.15 \text{ m})(23.5 \text{ kN/m}^3) \\ &= 3.525 \text{ kN/m} \end{aligned}$$

From Eq. (14.87),

$$\begin{aligned} K_p \sin \delta' &= \frac{W + \frac{1}{2}\gamma H^2 K_a \sin \phi'}{\frac{1}{2}\gamma H^2} \\ &= \frac{3.525 + (0.5)(16.51)(1)^2(0.26)(\sin 35)}{(0.5)(16.51)(1)^2} = 0.576 \end{aligned}$$

From Figure 14.38b with  $\phi' = 35^\circ$  and  $K_p \sin \delta' = 0.576$ , the value of  $K_p \cos \delta'$  is about 4.5. Now, using Eq. (14.86),

$$\begin{aligned} P'_{\text{ult}} &= \frac{1}{2}\gamma H^2 (K_p \cos \delta' - K_a \cos \phi') \\ &= \left(\frac{1}{2}\right)(16.51)(1)^2 [4.5 - (0.26)(\cos 35)] = 35.39 \text{ kN/m} \end{aligned}$$

In order to calculate  $P'_{\text{us}}$ , let us assume the sand to be loose. So,  $C_{\text{ov}}$  in Eq. (14.88) is equal to 14. Hence,

$$\begin{aligned} P'_{\text{us}} &= \left[ \frac{C_{\text{ov}} + 1}{C_{\text{ov}} + \left(\frac{H}{h}\right)} \right] P'_{\text{ult}} = \left[ \frac{14 + 1}{14 + \left(\frac{1}{0.4}\right)} \right] (35.39) = 32.17 \text{ kN/m} \\ \frac{S' - B}{H + h} &= \frac{1.2 - 0.4}{1 + 0.4} = \frac{0.8}{1.4} = 0.571 \end{aligned}$$

For  $(S' - B)/(H + h) = 0.571$  and loose sand, Figure 14.40b yields

$$\frac{B_e - B}{H - h} = 0.229$$

So

$$\begin{aligned} B_e &= (0.229)(H + h) + B = (0.229)(1 + 0.4) + 0.4 \\ &= 0.72 \end{aligned}$$

Hence, from Eq. (14.89)

$$P_{\text{ult}} = P'_{\text{us}} B_e = (32.17)(0.72) = \mathbf{23.16 \text{ kN}}$$

**Example 14.14**

Refer to a *single anchor* given in Example 14.13 using the stress characteristic solution. Estimate the ultimate anchor resistance. Use  $m = 0$  in Figure 14.42.

**Solution**

Given:  $B = h = 0.4$  m and  $H = 1$  m.

Thus,

$$\frac{H}{h} = \frac{1 \text{ m}}{0.4 \text{ m}} = 2.5$$

$$\frac{B}{h} = \frac{0.4 \text{ m}}{0.4 \text{ m}} = 1$$

From Eq. (14.91),

$$P_{\text{ult}} = M_{\gamma q} \gamma h^2 B F_s$$

From Figure 14.42, with  $\phi' = 35^\circ$  and  $H/h = 2.5$ ,  $M_{\gamma q} \approx 18.2$ . Also, from Figure 14.43, with  $H/h = 2.5$  and  $B/h = 1$ ,  $F_s \approx 1.8$ . Hence,

$$P_{\text{ult}} = (18.2)(16.51)(0.4)^2(0.4)(1.8) \approx \mathbf{34.62 \text{ kN}}$$

**Example 14.15**

Solve Example Problem 14.14 using Eq. (14.92).

**Solution**

From Eq. (14.92),

$$P_{\text{ult}} = \frac{5.4}{\tan \phi'} \left( \frac{H^2}{A} \right)^{0.28} \gamma A H$$


$$H = 1 \text{ m}$$

$$A = Bh = (0.4 \times 0.4) = 0.16 \text{ m}^2$$

$$P_{\text{ult}} = \frac{5.4}{\tan 35} \left[ \frac{(1)^2}{0.16} \right]^{0.28} (16.51)(0.16)(1) \approx \mathbf{34.03 \text{ kN}}$$

## 14.17 Holding Capacity of Anchor Plates in Clay ( $\phi = 0$ Condition)

Relatively few studies have been conducted on the ultimate resistance of anchor plates in clayey soils ( $\phi = 0$ ). Mackenzie (1955) and Tschebotarioff (1973) identified the nature of variation of the ultimate resistance of strip anchors and beams as a function of  $H$ ,  $h$ , and  $c$  (undrained cohesion based on  $\phi = 0$ ) in a nondimensional form based on laboratory model test results. This is shown in the form of a nondimensional plot in Figure 14.44 ( $P_{\text{ult}}/hBc$  versus  $H/h$ ) and can be used to estimate the ultimate resistance of anchor plates in saturated clay ( $\phi = 0$ ).

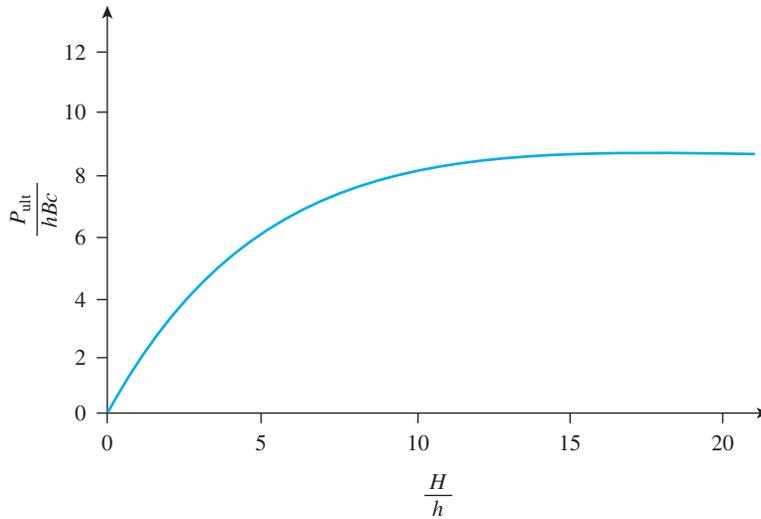

**Figure 14.44** Experimental variation of  $\frac{P_{ult}}{hBc}$  with  $H/h$  for plate anchors in clay (Based on Mackenzie (1955) and Tschebotarioff (1973))

## 14.18 Ultimate Resistance of Tiebacks

According to Figure 14.45, the ultimate resistance offered by a tieback in sand is


$$P_{ult} = \pi dl \bar{\sigma}'_o K \tan \phi' \quad (14.94)$$

where

$\phi'$  = effective angle of friction of soil

$\bar{\sigma}'_o$  = average effective vertical stress ( $= \gamma z$  in dry sand)

$K$  = earth pressure coefficient

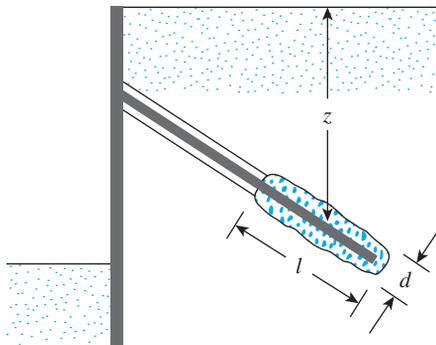

**Figure 14.45** Parameters for defining the ultimate resistance of tiebacks

The magnitude of  $K$  can be taken to be equal to the earth pressure coefficient at rest ( $K_o$ ) if the concrete grout is placed under pressure (Littlejohn, 1970). The lower limit of  $K$  can be taken to be equal to the Rankine active earth pressure coefficient.

In clays, the ultimate resistance of tiebacks may be approximated as

$$P_{\text{ult}} = \pi d l c_a \quad (14.95)$$

where  $c_a$  = adhesion.

The value of  $c_a$  may be approximated as  $\frac{2}{3}c_u$  (where  $c_u$  = undrained cohesion). A factor of safety of 1.5 to 2 may be used over the ultimate resistance to obtain the allowable resistance offered by each tieback.

## Problems

- 14.1** Figure P14.1 shows a cantilever sheet-pile wall penetrating a granular soil. Here,  $L_1 = 4$  m,  $L_2 = 8$  m,  $\gamma = 16.1$  kN/m<sup>3</sup>,  $\gamma_{\text{sat}} = 18.2$  kN/m<sup>3</sup>, and  $\phi' = 32^\circ$ .
- What is the theoretical depth of embedment,  $D$ ?
  - For a 30% increase in  $D$ , what should be the total length of the sheet piles?
  - Determine the theoretical maximum moment of the sheet pile.
- 14.2** Redo Problem 14.1 with the following:  $L_1 = 3$  m,  $L_2 = 6$  m,  $\gamma = 17.3$  kN/m<sup>3</sup>,  $\gamma_{\text{sat}} = 19.4$  kN/m<sup>3</sup>, and  $\phi' = 30^\circ$ .
- 14.3** Refer to Figure 14.11. Given:  $L = 3$  m,  $\gamma = 16.7$  kN/m<sup>3</sup>, and  $\phi' = 30^\circ$ . Calculate the theoretical depth of penetration,  $D$ , and the maximum moment.
- 14.4** Refer to Figure P14.4, for which  $L_1 = 2.4$  m,  $L_2 = 4.6$  m,  $\gamma = 15.7$  kN/m<sup>3</sup>,  $\gamma_{\text{sat}} = 17.3$  kN/m<sup>3</sup>, and  $\phi' = 30^\circ$ , and  $c = 29$  kN/m<sup>2</sup>.
- What is the theoretical depth of embedment,  $D$ ?
  - Increase  $D$  by 40%. What length of sheet piles is needed?
  - Determine the theoretical maximum moment in the sheet pile.

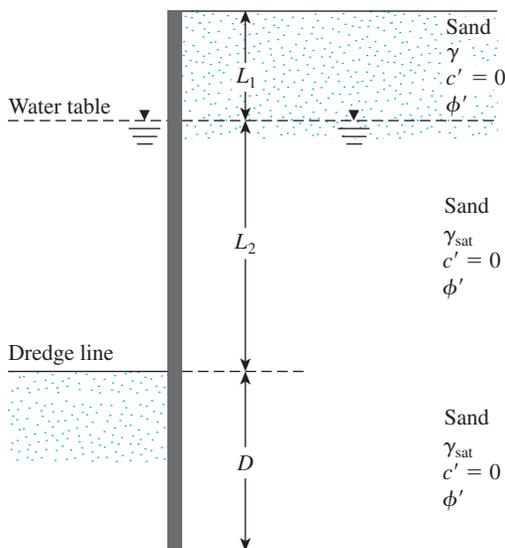


Figure P14.1

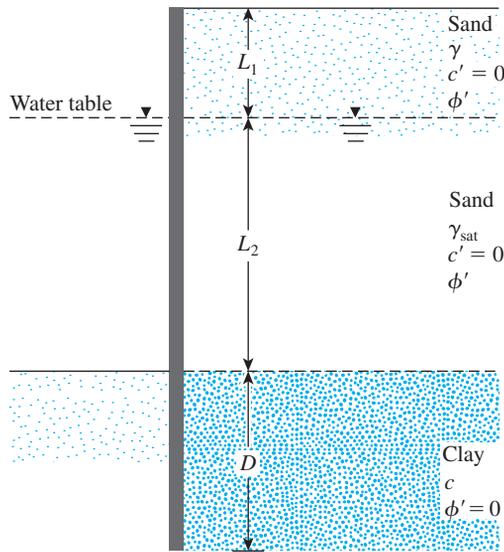


Figure P14.4

- 14.5** Refer to Figure 14.15. Given:  $L = 4$  m; for sand,  $\gamma = 16$  kN/m<sup>3</sup>;  $\phi' = 35^\circ$ ; and, for clay,  $\gamma_{\text{sat}} = 19.2$  kN/m<sup>3</sup> and  $c = 45$  kN/m<sup>2</sup>. Determine the theoretical value of  $D$  and the maximum moment.
- 14.6** An anchored sheet-pile bulkhead is shown in Figure P14.6. Let  $L_1 = 4$  m,  $L_2 = 9$  m,  $l_1 = 2$  m,  $\gamma = 17$  kN/m<sup>3</sup>,  $\gamma_{\text{sat}} = 19$  kN/m<sup>3</sup>, and  $\phi' = 34^\circ$ .
- Calculate the theoretical value of the depth of embedment,  $D$ .
  - Draw the pressure distribution diagram.
  - Determine the anchor force per unit length of the wall.
- Use the free earth-support method.

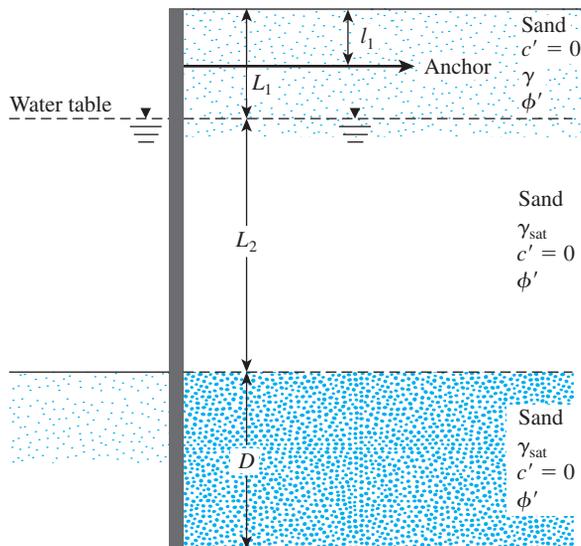


Figure P14.6

- 14.7** In Problem 14.6, assume that  $D_{\text{actual}} = 1.3 D_{\text{theory}}$ .
- Determine the theoretical maximum moment.
  - Using Rowe's moment reduction technique, choose a sheet-pile section. Take  $E = 210 \times 10^3 \text{ MN/m}^2$  and  $\sigma_{\text{all}} = 210,000 \text{ kN/m}^2$ .
- 14.8** Refer to Figure P14.6. Given:  $L_1 = 4 \text{ m}$ ,  $L_2 = 8 \text{ m}$ ,  $l_1 = l_2 = 2 \text{ m}$ ,  $\gamma = 16 \text{ kN/m}^3$ ,  $\gamma_{\text{sat}} = 18.5 \text{ kN/m}^3$ , and  $\phi' = 35^\circ$ . Use the charts presented in Section 14.10 and determine:
- Theoretical depth of penetration
  - Anchor force per unit length
  - Maximum moment in the sheet pile
- 14.9** Refer to Figure P14.6, for which  $L_1 = 4 \text{ m}$ ,  $L_2 = 7 \text{ m}$ ,  $l_1 = 1.5 \text{ m}$ ,  $\gamma = 17.5 \text{ kN/m}^3$ ,  $\gamma_{\text{sat}} = 19.5 \text{ kN/m}^3$ , and  $\phi' = 30^\circ$ . Use the computational diagram method (Section 14.12) to determine  $D$ ,  $F$ , and  $M_{\text{max}}$ . Assume that  $C = 0.68$  and  $R = 0.6$ .
- 14.10** An anchored sheet-pile bulkhead is shown in Figure P14.10. Let  $L_1 = 2 \text{ m}$ ,  $L_2 = 6 \text{ m}$ ,  $l_1 = 1 \text{ m}$ ,  $\gamma = 16 \text{ kN/m}^3$ ,  $\gamma_{\text{sat}} = 18.86 \text{ kN/m}^3$ ,  $\phi' = 32^\circ$ , and  $c = 27 \text{ kN/m}^2$ .
- Determine the theoretical depth of embedment,  $D$ .
  - Calculate the anchor force per unit length of the sheet-pile wall.
- Use the free earth support method.
- 14.11** In Figure 14.40a, for the anchor slab in sand,  $H = 1.52 \text{ m}$ ,  $h = 0.91 \text{ m}$ ,  $B = 1.22 \text{ m}$ ,  $S' = 2.13 \text{ m}$ ,  $\phi' = 30^\circ$ , and  $\gamma = 17.3 \text{ kN/m}^3$ . The anchor plates are made of concrete and have a thickness of 76 mm. Using Ovesen and Stromann's method, calculate the ultimate holding capacity of each anchor. Take  $\gamma_{\text{concrete}} = 23.58 \text{ kN/m}^3$ .
- 14.12** A single anchor slab is shown in Figure P14.12. Here,  $H = 0.9 \text{ m}$ ,  $h = 0.3 \text{ m}$ ,  $\gamma = 17 \text{ kN/m}^3$ , and  $\phi' = 32^\circ$ . Calculate the ultimate holding capacity of the anchor slab if the width  $B$  is (a) 0.3 m, (b) 0.6 m, and (c) = 0.9 m. (Note: center-to-center spacing,  $S' = \infty$ .) Use the empirical correlation given in Section 14.16 [Eq. (14.92)].
- 14.13** Repeat Problem 14.12 using Eq. (14.91). Use  $m = 0$  in Figure 14.42.

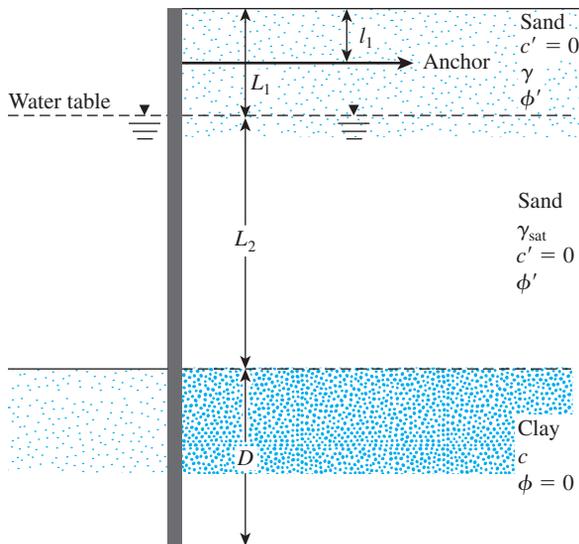


Figure P14.10

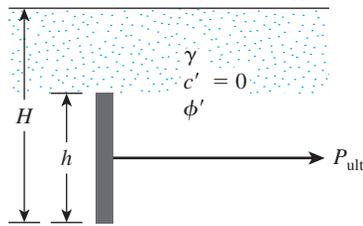


Figure P14.12

## References

- CASAGRANDE, L. (1973). "Comments on Conventional Design of Retaining Structures," *Journal of the Soil Mechanics and Foundations Division*, ASCE, Vol. 99, No. SM2, pp. 181–198.
- DAS, B. M. and SEELEY, G. R. (1975). "Load–Displacement Relationships for Vertical Anchor Plates," *Journal of the Geotechnical Engineering Division*, American Society of Civil Engineers, Vol. 101, No. GT7, pp. 711–715.
- GHALY, A. M. (1997). "Load–Displacement Prediction for Horizontally Loaded Vertical Plates," *Journal of Geotechnical and Geoenvironmental Engineering*, ASCE, Vol. 123, No. 1, pp. 74–76.
- HAGERTY, D. J. and NOFAL, M. M. (1992). "Design Aids: Anchored Bulkheads in Sand," *Canadian Geotechnical Journal*, Vol. 29, No. 5, pp. 789–795.
- LITTLEJOHN, G. S. (1970). "Soil Anchors," *Proceedings, Conference on Ground Engineering*, Institute of Civil Engineers, London, pp. 33–44.
- MACKENZIE, T. R. (1955). *Strength of Deadman Anchors in Clay*, M.S. Thesis, Princeton University, Princeton, N. J.
- NATARAJ, M. S. and HOADLEY, P. G. (1984). "Design of Anchored Bulkheads in Sand," *Journal of Geotechnical Engineering*, American Society of Civil Engineers, Vol. 110, No. GT4, pp. 505–515.
- NEELEY, W. J., STUART, J. G., and GRAHAM, J. (1973). "Failure Loads of Vertical Anchor Plates in Sand," *Journal of the Soil Mechanics and Foundations Division*, American Society of Civil Engineers, Vol. 99, No. SM9, pp. 669–685.
- OVESEN, N. K. and STROMANN, H. (1972). "Design Methods for Vertical Anchor Slabs in Sand," *Proceedings, Specialty Conference on Performance of Earth and Earth-Supported Structures*. American Society of Civil Engineers, Vol. 2.1, pp. 1481–1500.
- ROWE, P. W. (1952). "Anchored Sheet-Pile Walls," *Proceedings, Institute of Civil Engineers*, Vol. 1, Part 1, pp. 27–70.
- ROWE, P. W. (1957). "Sheet-Pile Walls in Clay," *Proceedings, Institute of Civil Engineers*, Vol. 7, pp. 654–692.
- TSCHBOTARIOFF, G. P. (1973). *Foundations, Retaining and Earth Structures*, 2nd ed., McGraw-Hill, New York.
- TSINKER, G. P. (1983). "Anchored Street Pile Bulkheads: Design Practice," *Journal of Geotechnical Engineering*, American Society of Civil Engineers, Vol. 109, No. GT8, pp. 1021–1038.

# 15 Braced Cuts




## 15.1 Introduction

Sometimes construction work requires ground excavations with vertical or near-vertical faces—for example, basements of buildings in developed areas or underground transportation facilities at shallow depths below the ground surface (a cut-and-cover type of construction). The vertical faces of the cuts need to be protected by temporary bracing systems to avoid failure that may be accompanied by considerable settlement or by bearing capacity failure of nearby foundations.

Figure 15.1 shows two types of braced cut commonly used in construction work. One type uses the *soldier beam* (Figure 15.1a), which is driven into the ground before excavation and is a vertical steel or timber beam. *Laggings*, which are horizontal timber planks, are placed between soldier beams as the excavation proceeds. When the excavation reaches the desired depth, *wales* and *struts* (horizontal steel beams) are installed. The struts are compression members. Figure 15.1b shows another type of braced excavation. In this case, interlocking *sheet piles* are driven into the soil before excavation. Wales and struts are inserted immediately after excavation reaches the appropriate depth.

Figure 15.2 shows the braced-cut construction used for the Chicago subway in 1940. Timber lagging, timber struts, and steel wales were used. Figure 15.3 shows a braced cut made during the construction of the Washington, DC, metro in 1974. In this cut, timber lagging, steel H-soldier piles, steel wales, and pipe struts were used.


To design braced excavations (i.e., to select wales, struts, sheet piles, and soldier beams), an engineer must estimate the lateral earth pressure to which the braced cuts will be subjected. The theoretical aspects of the lateral earth pressure on a braced cut is discussed in Section 15.2. The total active force per unit length of the wall ( $P_a$ ) can be calculated by using the general wedge theory. However, that analysis will not provide the relationships required for estimating the variation of lateral pressure with depth, which is a function of several factors, such as the type of soil, the experience of the construction crew, the type of construction equipment used, and so forth. For that reason, empirical pressure envelopes developed from field observations are used for the design of braced cuts. This procedure is discussed in the following sections.

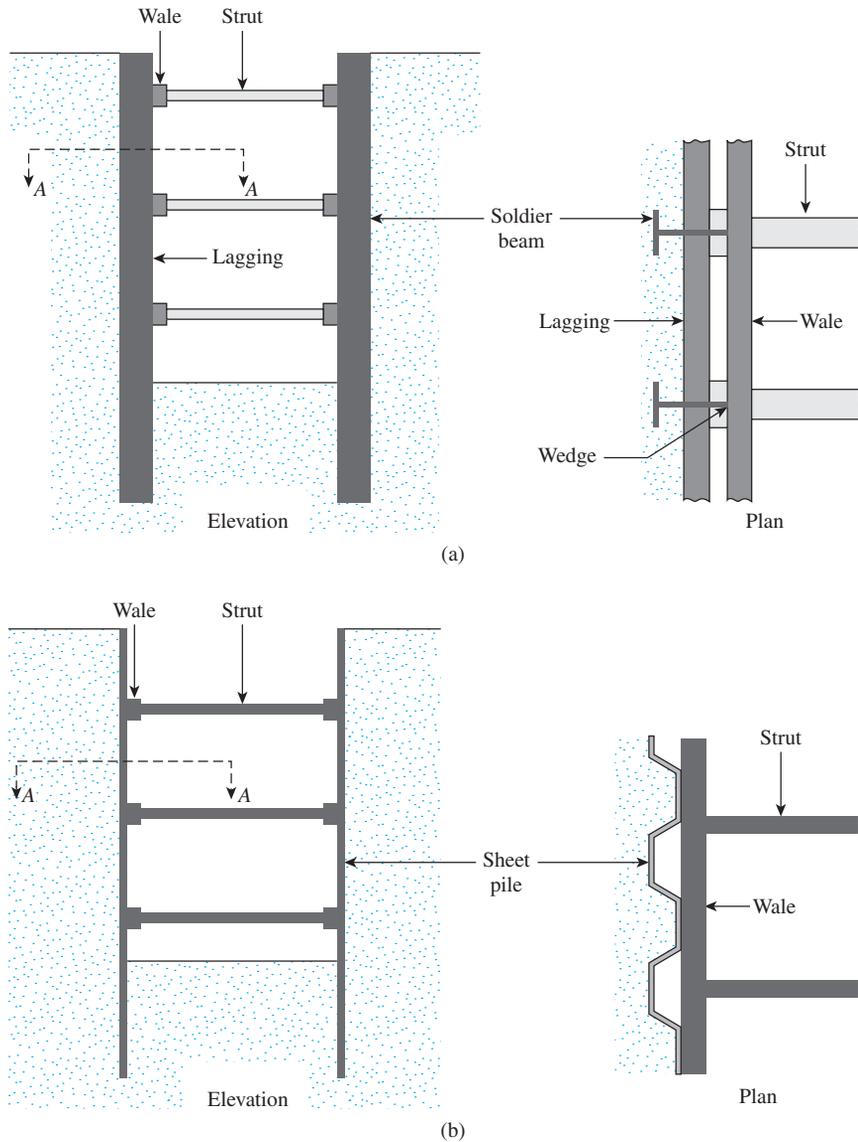

**Figure 15.1** Types of braced cut: (a) use of soldier beams; (b) use of sheet piles

## 15.2 Braced Cut Analysis Based on General Wedge Theory


Figure 15.4 shows a braced cut of height  $H$ . Let us assume that  $AB$  is a *frictionless* wall retaining a granular soil. During the excavation process followed by the placement of struts, the upper portion of the soil mass next to the cut does not undergo sufficient

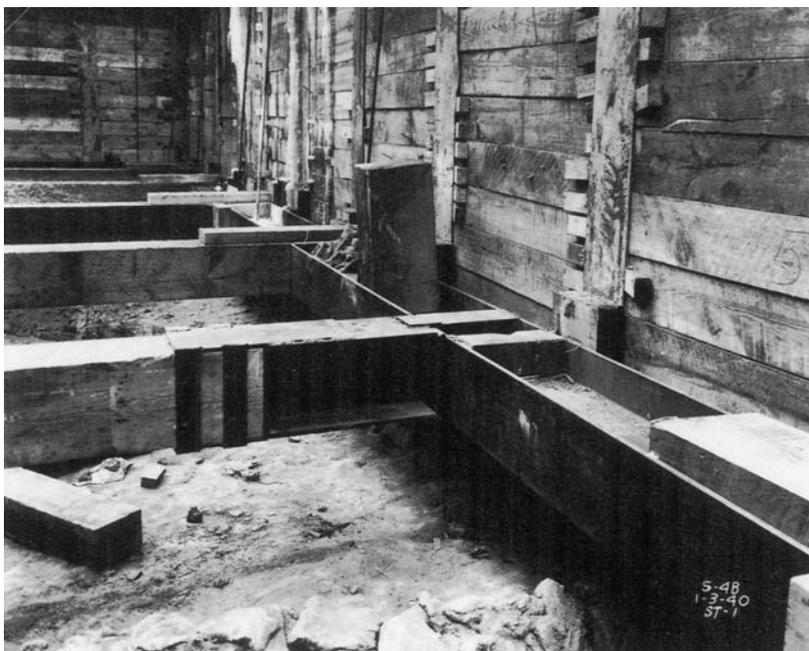

**Figure 15.2** Braced cut in Chicago Subway construction, January 1940 (Courtesy of Ralph B. Peck)



**Figure 15.3** Braced cut in the construction of Washington, D.C. Metro, May 1974 (Courtesy of Ralph B. Peck)

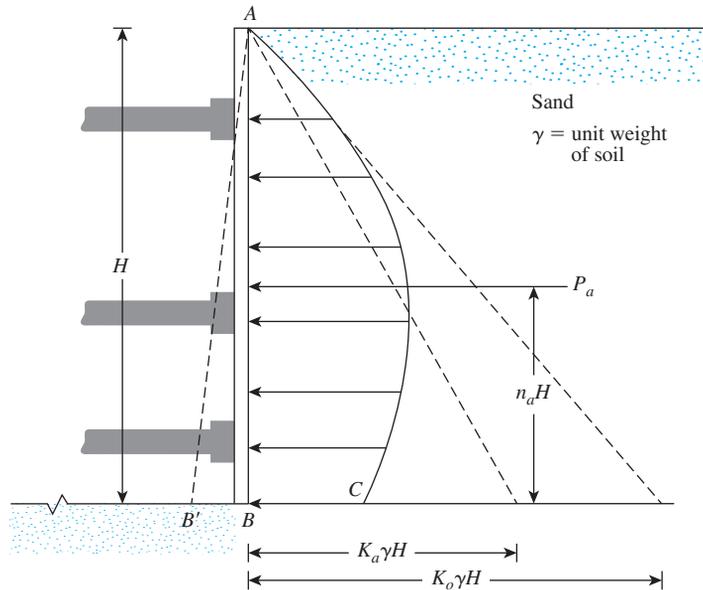

Note:  $K_o$  = earth pressure coefficient at-rest  
 $K_a$  = Rankine active earth pressure coefficient


**Figure 15.4** Earth pressure behind a frictionless wall retaining sand—wall rotation about the top

lateral deformation. However, as the depth of excavation increases, the time lag between the excavation and placement of struts increases, also resulting in a gradual increase in the lateral deformation of wall  $AB$ . Ideally, at the end of excavation, wall  $AB$  will be deformed to the shape  $AB'$ . The lateral earth-pressure distribution along wall  $AB$  will be of the nature shown in Figure 15.4. It is important to note the following:

- The wall  $AB$  rotates about  $A$  (i.e., rotation about the top).
- At  $A$ , the lateral earth pressure will be close to the at-rest earth pressure (practically no lateral deformation of the wall).
- At  $B$ , the lateral earth pressure may be less than the Rankine active earth pressure. (The deformation of the wall is large, and the soil may be in a state well past the plastic equilibrium.)
- Hence, the lateral earth-pressure diagram will approximate to the form  $ACB$ , as shown in Figure 15.4.

With this type of pressure distribution, the point of application of the resultant active thrust,  $P_a$ , will be at a height  $n_a H$  measured from the bottom of the wall. The magnitude of  $n_a$  will be greater than  $1/3$ .

The magnitude of the active thrust  $P_a$  can be determined by considering several trial failure surfaces in soil based on the general wedge theory (Terzaghi, 1943). Figure 15.5 shows a braced cut  $AB$  in  $c'-\phi'$  soil.  $Bb_1$  is assumed to be a failure surface in the soil

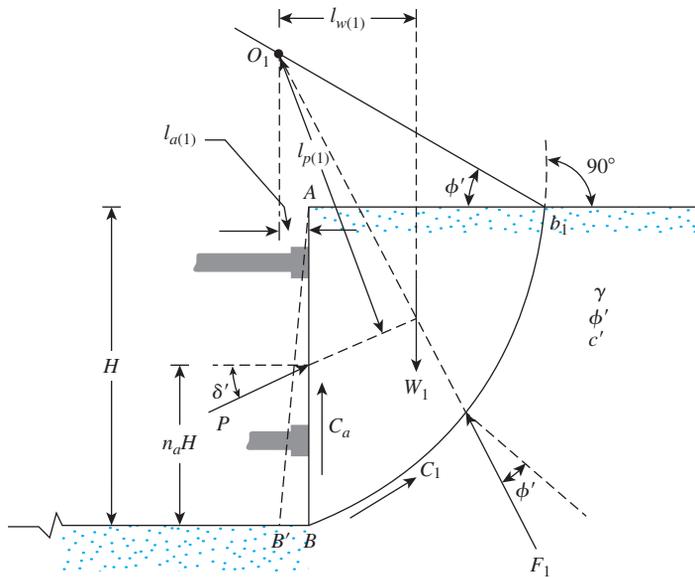

**Figure 15.5** Determination of active force on bracing system of open cut in a  $c'-\phi'$  soil—the general wedge theory

behind the wall that is an arc of a logarithmic spiral with its center located at  $O_1$ . The equation to the logarithmic spiral can be given as

$$r = r_o e^{\theta \tan \phi'} \quad (15.1)$$

where  $r$  = radius of the spiral

$r_o$  = starting radius at  $\theta = 0$

$\phi'$  = angle of friction of soil

$\theta$  = angle between  $r$  and  $r_o$

An important property of the logarithmic spiral defined by Eq. (15.1) is that any radial line makes an angle  $\phi'$  with the normal to the curve drawn at the point where the radial line and the spiral intersect.

The forces *per unit length of the cut* acting on the soil wedge are

- Weight of the wedge =  $W_1$
- Resultant of the normal and shear forces along  $Bb_1 = F_1$
- Cohesive force along  $Bb = C_1$
- Adhesive force along  $AB = C_a = c'_a H$  (where  $c'_a$  = unit adhesion)
- Active force  $P$  inclined at an angle  $\delta'$  to the normal drawn to the wall  $AB$

Now, taking the moment of all the forces about  $O_1$ ,

$$W_1 l_{w(1)} + F_1(0) - C_a l_{a(1)} - M_{C(1)} - P l_{p(1)} = 0 \quad (15.2)$$

where

$M_{C(1)}$  = moment of the cohesive force

$$C_1 = \frac{c'}{2 \tan \phi'} (r^2 - r_o^2) \quad (15.3)$$

$$r_o = \frac{O_1 b_1}{r}$$

$$r = O_1 B$$

$c'$  = unit cohesion

Thus, from Eq. (15.2),

$$P = \frac{W_1 l_{w(1)} - C_a l_{a(1)} - M_{C(1)}}{l_{p(1)}} \quad (15.4)$$

If this procedure for determining  $P$  is repeated for several trial wedges, the maximum value of  $P = P_a$  (active thrust) can be obtained.

Table 15.1 provides the variation of  $P_a/(0.5\gamma H^2)$  with  $\phi'$ ,  $\delta'/\phi'$ , and  $n_a$  for granular soil ( $c' = 0$ ) determined by using the general wedge theory described previously. The values of  $P_a/(0.5\gamma H^2)$  may be, in general, 15 to 20% more than those obtained from Coulomb's theory for similar wall and soil parameters. However, the analysis does not provide the distribution of the lateral earth pressure with depth. Also, the magnitude of  $n_a$  will depend on several factors that may be soil and site specific.

**Table 15.1** Active Pressure for Wall Rotation—General Wedge Theory (Granular Soil Backfill)

Soil friction angle, $\phi'$ (deg)	$\delta'/\phi'$	$P_a/0.5 \gamma H^2$			
		$n_a = 0.3$	$n_a = 0.4$	$n_a = 0.5$	$n_a = 0.6$
25	0	0.371	0.405	0.447	0.499
	1/2	0.345	0.376	0.413	0.460
	2/3	0.342	0.373	0.410	0.457
	1	0.344	0.375	0.413	0.461
30	0	0.304	0.330	0.361	0.400
	1/2	0.282	0.306	0.334	0.386
	2/3	0.281	0.305	0.332	0.367
	1	0.289	0.313	0.341	0.377
35	0	0.247	0.267	0.290	0.318
	1/2	0.231	0.249	0.269	0.295
	2/3	0.232	0.249	0.270	0.296
	1	0.243	0.262	0.289	0.312
40	0	0.198	0.213	0.230	0.252
	1/2	0.187	0.200	0.216	0.235
	2/3	0.190	0.204	0.220	0.239
	1	0.197	0.211	0.228	0.248
45	0	0.205	0.220	0.237	0.259
	1/2	0.149	0.159	0.171	0.185
	2/3	0.153	0.164	0.176	0.196
	1	0.173	0.184	0.198	0.215

## 15.3 Pressure Envelope for Braced-Cut Design


As mentioned in Section 15.1, the lateral earth pressure in a braced cut is dependent on the type of soil, construction method, and type of equipment used. The lateral earth pressure changes from place to place. Each strut should also be designed for the maximum load to which it may be subjected. Therefore, the braced cuts should be designed using apparent-pressure diagrams that are envelopes of all the pressure diagrams determined from measured strut loads in the field. Figure 15.6 shows the method for obtaining the apparent-pressure diagram at a section from strut loads. In this figure, let  $P_1, P_2, P_3, P_4, \dots$  be the measured strut loads. The apparent horizontal pressure can then be calculated as

$$\sigma_1 = \frac{P_1}{(s) \left( d_1 + \frac{d_2}{2} \right)}$$

$$\sigma_2 = \frac{P_2}{(s) \left( \frac{d_2}{2} + \frac{d_3}{2} \right)}$$

$$\sigma_3 = \frac{P_3}{(s) \left( \frac{d_3}{2} + \frac{d_4}{2} \right)}$$

$$\sigma_4 = \frac{P_4}{(s) \left( \frac{d_4}{2} + \frac{d_5}{2} \right)}$$

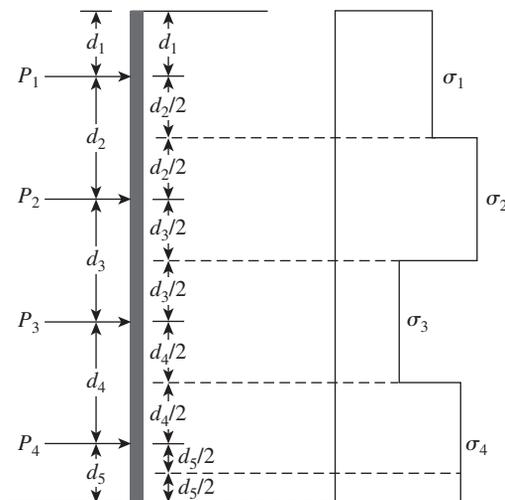

**Figure 15.6** Procedure for calculating apparent-pressure diagram from measured strut loads

where

$\sigma_1, \sigma_2, \sigma_3, \sigma_4$  = apparent pressures  
 $s$  = center-to-center spacing of the struts

Using the procedure just described for strut loads observed from the Berlin subway cut, Munich subway cut, and New York subway cut, Peck (1969) provided the envelope of apparent-lateral-pressure diagrams for design of cuts in *sand*. This envelope is illustrated in Figure 15.7, in which

$$\sigma_a = 0.65\gamma HK_a \quad (15.5)$$

where

$\gamma$  = unit weight  
 $H$  = height of the cut  
 $K_a$  = Rankine active pressure coefficient =  $\tan^2(45 - \phi'/2)$   
 $\phi'$  = effective friction angle of sand

### Cuts in Clay

In a similar manner, Peck (1969) also provided the envelopes of apparent-lateral-pressure diagrams for cuts in *soft to medium clay* and in *stiff clay*. The pressure envelope for soft to medium clay is shown in Figure 15.8 and is applicable to the condition

$$\frac{\gamma H}{c} > 4$$

where  $c$  = undrained cohesion ( $\phi = 0$ ).

The pressure,  $\sigma_a$ , is the larger of


$$\begin{aligned} \sigma_a &= \gamma H \left[ 1 - \left( \frac{4c}{\gamma H} \right) \right] \\ \text{and} \\ \sigma_a &= 0.3\gamma H \end{aligned} \quad (15.6)$$

where  $\gamma$  = unit weight of clay.


The pressure envelope for cuts in stiff clay is shown in Figure 15.9, in which

$$\sigma_a = 0.2\gamma H \text{ to } 0.4\gamma H \quad (\text{with an average of } 0.3\gamma H) \quad (15.7)$$


is applicable to the condition  $\gamma H/c \leq 4$ .

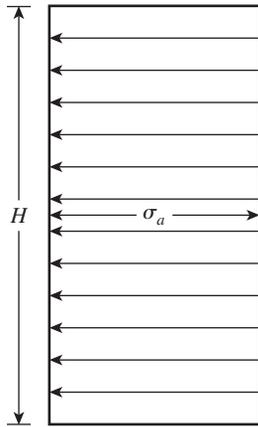

**Figure 15.7** Peck's (1969) apparent-pressure envelope for cuts in sand

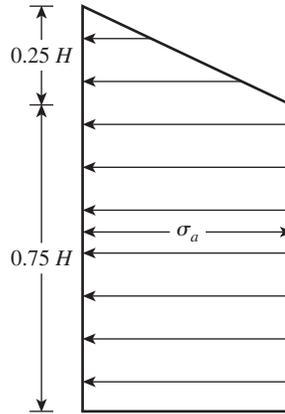

**Figure 15.8** Peck's (1969) apparent-pressure envelope for cuts in soft to medium clay

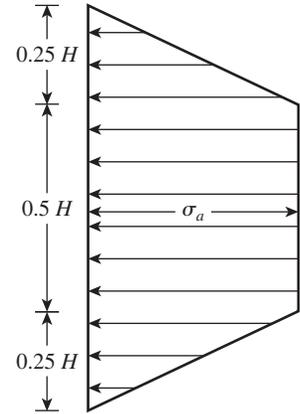

**Figure 15.9** Peck's (1969) apparent-pressure envelope for cuts in stiff clay

When using the pressure envelopes just described, keep the following points in mind:

1. They apply to excavations having depths greater than about 6 m ( $\approx 20$  ft).
2. They are based on the assumption that the water table is below the bottom of the cut.
3. Sand is assumed to be drained with zero pore water pressure.
4. Clay is assumed to be undrained and pore water pressure is not considered.

## 15.4 Pressure Envelope for Cuts in Layered Soil

Sometimes, layers of both sand and clay are encountered when a braced cut is being constructed. In this case, Peck (1943) proposed that an equivalent value of cohesion ( $\phi = 0$ ) should be determined according to the formula (see Figure 15.10a).

$$c_{av} = \frac{1}{2H} [\gamma_s K_s H_s^2 \tan \phi'_s + (H - H_s) n' q_u] \quad (15.8)$$

where

$H$  = total height of the cut

$\gamma_s$  = unit weight of sand

$H_s$  = height of the sand layer

$K_s$  = a lateral earth pressure coefficient for the sand layer ( $\approx 1$ )

$\phi'_s$  = effective angle of friction of sand

$q_u$  = unconfined compression strength of clay

$n'$  = a coefficient of progressive failure (ranging from 0.5 to 1.0; average value 0.75)

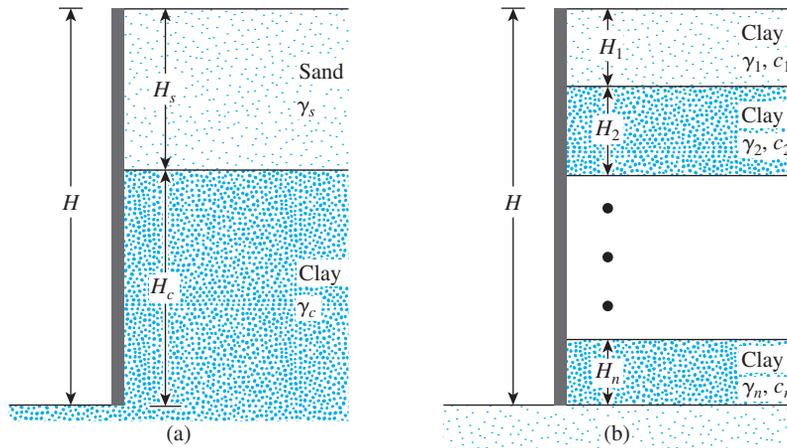


Figure 15.10 Layered soils in braced cuts

The average unit weight of the layers may be expressed as

$$\gamma_a = \frac{1}{H} [\gamma_s H_s + (H - H_s) \gamma_c] \quad (15.9)$$

where  $\gamma_c$  = saturated unit weight of clay layer.

Once the average values of cohesion and unit weight are determined, the pressure envelopes in clay can be used to design the cuts.

Similarly, when several clay layers are encountered in the cut (Figure 15.10b), the average undrained cohesion becomes

$$c_{av} = \frac{1}{H} (c_1 H_1 + c_2 H_2 + \cdots + c_n H_n) \quad (15.10)$$

where

$c_1, c_2, \dots, c_n$  = undrained cohesion in layers 1, 2, ...,  $n$   
 $H_1, H_2, \dots, H_n$  = thickness of layers 1, 2, ...,  $n$

The average unit weight is now

$$\gamma_a = \frac{1}{H} (\gamma_1 H_1 + \gamma_2 H_2 + \gamma_3 H_3 + \cdots + \gamma_n H_n) \quad (15.11)$$

## 15.5 Design of Various Components of a Braced Cut

### Struts

In construction work, struts should have a minimum vertical spacing of about 2.75 m (9 ft) or more. Struts are horizontal columns subject to bending. The load-carrying capacity of columns depends on their *slenderness ratio*, which can be reduced by

providing vertical and horizontal supports at intermediate points. For wide cuts, splicing the struts may be necessary. For braced cuts in clayey soils, the depth of the first strut below the ground surface should be less than the depth of tensile crack,  $z_c$ . From Eq. (12.8),

$$\sigma'_a = \gamma z K_a - 2c' \sqrt{K_a}$$

where  $K_a$  = coefficient of Rankine active pressure.

For determining the depth of tensile crack,

$$\sigma'_a = 0 = \gamma z_c K_a - 2c' \sqrt{K_a}$$

or

$$z_c = \frac{2c'}{\sqrt{K_a} \gamma}$$

With  $\phi = 0$ ,  $K_a = \tan^2(45 - \phi/2) = 1$ , so

$$z_c = \frac{2c}{\gamma}$$


A simplified conservative procedure may be used to determine the strut loads. Although this procedure will vary, depending on the engineers involved in the project, the following is a step-by-step outline of the general methodology (see Figure 15.11):

- Step 1.* Draw the pressure envelope for the braced cut. (See Figures 15.7, 15.8, and 15.9.) Also, show the proposed strut levels. Figure 15.11a shows a pressure envelope for a sandy soil; however, it could also be for a clay. The strut levels are marked *A*, *B*, *C*, and *D*. The sheet piles (or soldier beams) are assumed to be hinged at the strut levels, except for the top and bottom ones. In Figure 15.11a, the hinges are at the level of struts *B* and *C*. (Many designers also assume the sheet piles or soldier beams to be hinged at all strut levels except for the top.)
- Step 2.* Determine the reactions for the two simple cantilever beams (top and bottom) and all the simple beams between. In Figure 15.11b, these reactions are *A*,  $B_1$ ,  $B_2$ ,  $C_1$ ,  $C_2$ , and *D*.
- Step 3.* The strut loads in the figure may be calculated via the formulas

$$\begin{aligned} P_A &= (A)(s) \\ P_B &= (B_1 + B_2)(s) \\ P_C &= (C_1 + C_2)(s) \end{aligned} \tag{15.12}$$

and

$$P_D = (D)(s)$$

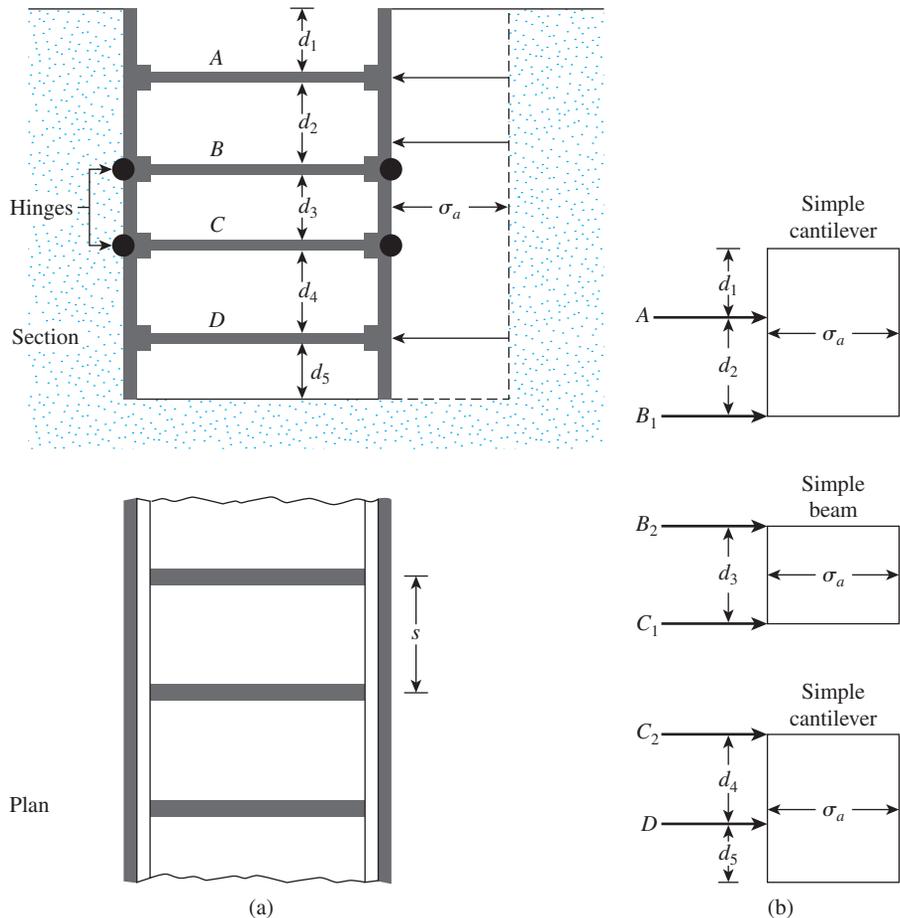

**Figure 15.11** Determination of strut loads: (a) section and plan of the cut; (b) method for determining strut loads

where

- $P_A, P_B, P_C, P_D$  = loads to be taken by the individual struts at levels A, B, C, and D, respectively
- $A, B_1, B_2, C_1, C_2, D$  = reactions calculated in Step 2 (note the unit: force/unit length of the braced cut)
- $s$  = horizontal spacing of the struts (see plan in Figure 15.11a)

**Step 4.** Knowing the strut loads at each level and the intermediate bracing conditions allows selection of the proper sections from the steel construction manual.

## Sheet Piles

The following steps are involved in designing the sheet piles:

- Step 1.* For each of the sections shown in Figure 15.11b, determine the maximum bending moment.
- Step 2.* Determine the maximum value of the maximum bending moments ( $M_{\max}$ ) obtained in Step 1. Note that the unit of this moment will be, for example, kN-m/m (lb-ft/ft) length of the wall.
- Step 3.* Obtain the required section modulus of the sheet piles, namely,

$$S = \frac{M_{\max}}{\sigma_{\text{all}}} \quad (15.13)$$

where  $\sigma_{\text{all}}$  = allowable flexural stress of the sheet-pile material.

- Step 4.* Choose a sheet pile having a section modulus greater than or equal to the required section modulus from a table such as Table 14.1.

## Wales

Wales may be treated as continuous horizontal members if they are spliced properly. Conservatively, they may also be treated as though they are pinned at the struts. For the section shown in Figure 15.11a, the maximum moments for the wales (assuming that they are pinned at the struts) are,

$$\text{At level } A, \quad M_{\max} = \frac{(A)(s^2)}{8}$$

$$\text{At level } B, \quad M_{\max} = \frac{(B_1 + B_2)s^2}{8}$$

$$\text{At level } C, \quad M_{\max} = \frac{(C_1 + C_2)s^2}{8}$$

and

$$\text{At level } D, \quad M_{\max} = \frac{(D)(s^2)}{8}$$

where  $A$ ,  $B_1$ ,  $B_2$ ,  $C_1$ ,  $C_2$ , and  $D$  are the reactions under the struts per unit length of the wall (see Step 2 of strut design).

Now determine the section modulus of the wales:

$$S = \frac{M_{\max}}{\sigma_{\text{all}}}$$

The wales are sometimes fastened to the sheet piles at points that satisfy the lateral support requirements.

### Example 15.1

The cross section of a long braced cut is shown in Figure 15.12a.

- Draw the earth-pressure envelope.
- Determine the strut loads at levels *A*, *B*, and *C*.
- Determine the section modulus of the sheet-pile section required.
- Determine a design section modulus for the wales at level *B*.

(Note: The struts are placed at 3 m, center to center, in the plan.) Use

$$\sigma_{\text{all}} = 170 \times 10^3 \text{ kN/m}^2$$

#### Solution

Part a

We are given that  $\gamma = 18 \text{ kN/m}^2$ ,  $c = 35 \text{ kN/m}^2$ , and  $H = 7 \text{ m}$ . So,

$$\frac{\gamma H}{c} = \frac{(18)(7)}{35} = 3.6 < 4$$

Thus, the pressure envelope will be like the one in Figure 15.9. The envelope is plotted in Figure 15.12a with maximum pressure intensity,  $\sigma_a$ , equal to  $0.3\gamma H = 0.3(18)(7) = 37.8 \text{ kN/m}^2$ .

Part b

To calculate the strut loads, examine Figure 15.12b. Taking the moment about  $B_1$ , we have  $\Sigma M_{B_1} = 0$ , and

$$A(2.5) - \left(\frac{1}{2}\right)(37.8)(1.75)\left(1.75 + \frac{1.75}{3}\right) - (1.75)(37.8)\left(\frac{1.75}{2}\right) = 0$$

or

$$A = 54.02 \text{ kN/m}$$

Also,  $\Sigma$  vertical forces = 0. Thus,

$$\frac{1}{2}(1.75)(37.8) + (37.8)(1.75) = A + B_1$$

or

$$33.08 + 66.15 - A = B_1$$

So,


$$B_1 = 45.2 \text{ kN/m}$$

Due to symmetry,


$$B_2 = 45.2 \text{ kN/m}$$

and


$$C = 54.02 \text{ kN/m}$$

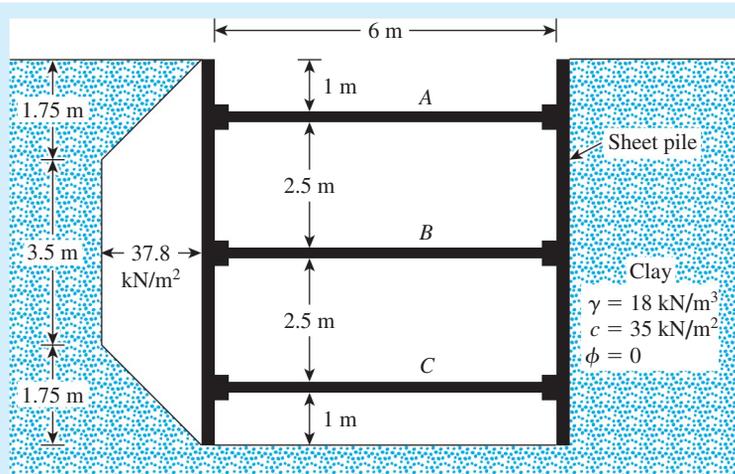

(a) Cross section

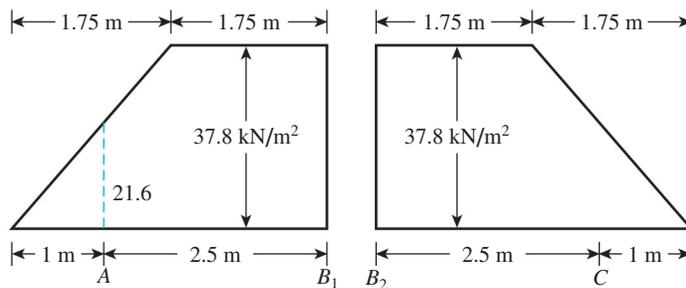

(b) Determination of reaction

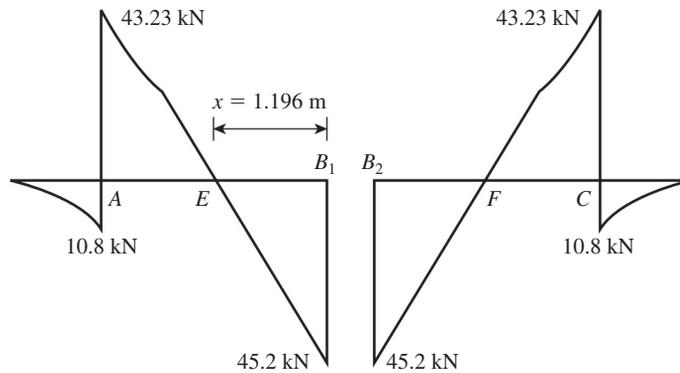

(c) Shear force diagram

**Figure 15.12** Analysis of a braced cut

Hence, the strut loads at the levels indicated by the subscripts are

$$P_A = 54.02 \times \text{horizontal spacing, } s = 54.02 \times 3 = \mathbf{162.06 \text{ kN}}$$

$$P_B = (B_1 + B_2)3 = (45.2 + 45.2)3 = \mathbf{271.2 \text{ kN}}$$

and

$$P_C = 54.02 \times 3 = \mathbf{162.06 \text{ kN}}$$

Part c

At the left side of Figure 15.12b, for the maximum moment, the shear force should be zero. The nature of the variation of the shear force is shown in Figure 15.12c. The location of point *E* can be given as

$$x = \frac{\text{reaction at } B_1}{37.8} = \frac{45.2}{37.8} = 1.196 \text{ m}$$

Also,

$$\begin{aligned} \text{Magnitude of moment at } A &= \frac{1}{2}(1) \left( \frac{37.8}{1.75} \times 1 \right) \left( \frac{1}{3} \right) \\ &= 3.6 \text{ kN-m/meter of wall} \end{aligned}$$

and

$$\begin{aligned} \text{Magnitude of moment at } E &= (45.2 \times 1.196) - (37.8 \times 1.196) \left( \frac{1.196}{2} \right) \\ &= 54.06 - 27.03 = 27.03 \text{ kN-m/meter of wall} \end{aligned}$$

Because the loading on the left and right sections of Figure 15.12b are the same, the magnitudes of the moments at *F* and *C* (see Figure 15.12c) will be the same as those at *E* and *A*, respectively. Hence, the maximum moment is 27.03 kN-m/meter of wall.

The section modulus of the sheet piles is thus

$$S = \frac{M_{\max}}{\sigma_{\text{all}}} = \frac{27.03 \text{ kN-m}}{170 \times 10^3 \text{ kN/m}^2} = \mathbf{15.9 \times 10^{-5} \text{ m}^3/\text{m of the wall}}$$

Part d

The reaction at level *B* has been calculated in part b. Hence,

$$M_{\max} = \frac{(B_1 + B_2)s^2}{8} = \frac{(45.2 + 45.2)3^2}{8} = 101.7 \text{ kN-m}$$

and

$$\begin{aligned} \text{Section modulus, } S &= \frac{101.7}{\sigma_{\text{all}}} = \frac{101.7}{(170 \times 1000)} \\ &= \mathbf{0.598 \times 10^{-3} \text{ m}^3} \end{aligned}$$

### Example 15.2

Refer to the braced cut shown in Figure 15.13, for which  $\gamma = 112 \text{ lb/ft}^3$ ,  $\phi' = 32^\circ$ , and  $c' = 0$ . The struts are located 12 ft on center in the plan. Draw the earth-pressure envelope and determine the strut loads at levels A, B, and C.

#### Solution

For this case, the earth-pressure envelope shown in Figure 15.7 is applicable. Hence,

$$K_a = \tan^2\left(45 - \frac{\phi'}{2}\right) = \tan^2\left(45 - \frac{32}{2}\right) = 0.307$$

From Equation (15.5)

$$\sigma_a = 0.65 \gamma H K_a = (0.65)(112)(27)(0.307) = 603.44 \text{ lb/ft}^2$$

Figure 15.14a shows the pressure envelope. Refer to Figure 15.14b and calculate  $B_1$ :

$$\sum M_{B_1} = 0$$

$$A = \frac{(603.44)(15)\left(\frac{15}{2}\right)}{9} = 7543 \text{ lb/ft}$$

$$B_1 = (603.44)(15) - 7543 = 1508.6 \text{ lb/ft} \approx 1509 \text{ lb/ft}$$

Now, refer to Figure 15.14c and calculate  $B_2$ :

$$\sum M_{B_2} = 0$$

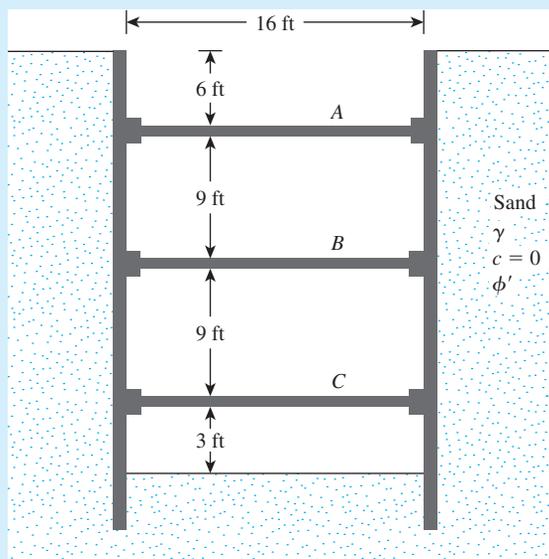


Figure 15.13

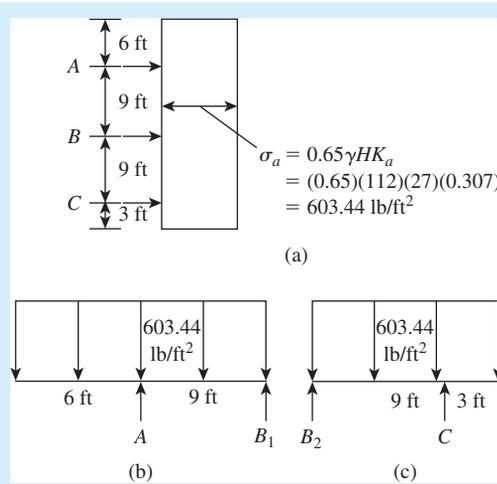


Figure 15.14 Load diagrams

$$C = \frac{(603.44)(12)\left(\frac{12}{2}\right)}{9} = 4827.5 \text{ lb/ft} \approx 4827 \text{ lb/ft}$$

$$B_2 = (603.44)(12) - 4827.5 = 2413.7 \text{ lb/ft} = 2414 \text{ lb/ft}$$

The strut loads are

$$\text{At A, } (7.543)(\text{spacing}) = (7.543)(12) = \mathbf{90.52 \text{ kip}}$$

$$\text{At B, } (B_1 + B_2)(\text{spacing}) = (1.509 + 2.414)(12) = \mathbf{47.07 \text{ kip}}$$

$$\text{At C, } (4.827)(\text{spacing}) = (4.827)(12) = \mathbf{57.93 \text{ kip}}$$

### Example 15.3

For the braced cut described in Example 15.2, determine:

- The sheet-pile section modulus.
- The required section modulus of the wales at level A; assume that  $\sigma_{\text{all}} = 24 \text{ kip/in}^2$

#### Solution

Part a

Refer to the load diagrams shown in Figure 15.14b and 15.14c, Figure 15.15 shows the shear force diagrams based on the load diagrams. First, determine  $x_1$  and  $x_2$ :

$$x_1 = \frac{3.923}{0.603} = 6.5 \text{ ft}$$

$$x_2 = \frac{3.017}{0.603} = 5 \text{ ft}$$

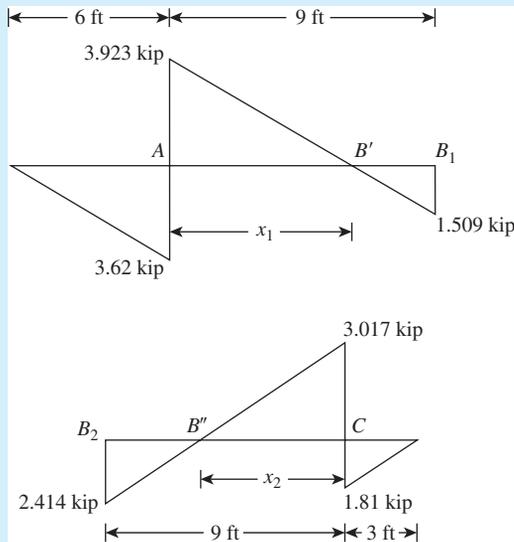


Figure 15.15 Shear force diagrams

Then the moments are

$$\text{At } A, \quad \frac{1}{2}(3.62)(6) = 10.86 \text{ kip-ft}$$

$$\text{At } C, \quad \frac{1}{2}(1.81)(3) = 2.715 \text{ kip-ft}$$

$$\text{At } B', \quad \frac{1}{2}(1.509)(2.5) = 1.89 \text{ kip-ft}$$

$$\text{At } B'', \quad \frac{1}{2}(2.414)(4) = 4.828 \text{ kip-ft}$$

$M_A$  is maximum, so

$$S = \frac{M_{\max}}{\sigma_{\text{all}}} = \frac{(10.86 \text{ kip-ft})(12)}{24 \text{ kip/in}^2} = 5.43 \text{ in}^3/\text{ft}$$

Part b

For the wale at level A,

$$M_{\max} = \frac{A(s^2)}{8}$$

$A = 7543 \text{ lb/ft}$  (from Example 15.2). So,

$$M_{\max} = \frac{(7.543)(12^2)}{8} = 135.77 \text{ kip-ft/ft}$$

$$S = \frac{M_{\max}}{\sigma_{\text{all}}} = \frac{(135.77)(12)}{24 \text{ kip/in}^2} = 67.9 \text{ in}^3/\text{ft of wall}$$


## 15.6 Case Studies of Braced Cuts

The procedure for determining strut loads and the design of sheet piles and wales presented in the preceding sections appears to be fairly straightforward. It is, however, only possible if a proper pressure envelope is chosen for the design, which is difficult. This section describes some case studies of braced cuts and highlights the difficulties and degree of judgment needed for successful completion of various projects.


### Subway Extension of the Massachusetts Bay Transportation Authority (MBTA)

Lambe (1970) provided data on the performance of three excavations for the subway extension of the MBTA in Boston (test sections A, B, and D), all of which were well instrumented. Figure 15.16 gives the details of test section B, where the cut was 58 ft, including subsoil conditions. The subsoil consisted of gravel, sand, silt, and clay (fill) to a depth of about 26 ft, followed by a light gray, slightly organic silt to a depth of 46 ft. A layer of coarse sand and gravel with some clay was present from 46 ft to 54 ft below the ground surface. Rock was encountered below 54 ft. The horizontal spacing of the struts was 12 ft center-to-center.

Because the apparent pressure envelopes available (Section 15.3) are for *sand* and *clay* only, questions may arise about how to treat the fill, silt, and till. Figure 15.17 shows the apparent pressure envelopes proposed by Peck (1969), considering the soil as *sand* and also as *clay*, to overcome that problem. For the average soil parameters of the profile, the following values of  $\sigma_a$  were used to develop the pressure envelopes shown in Figure 15.17.

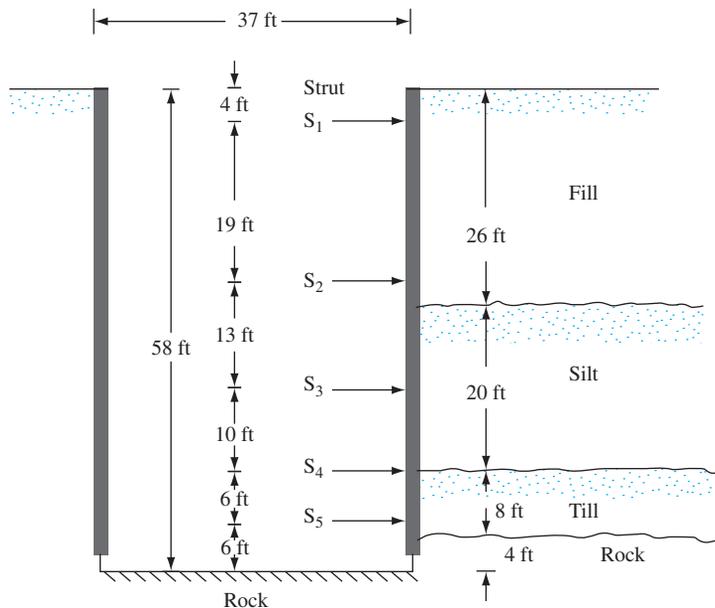

**Figure 15.16** Schematic diagram of test section B for subway extension, MTBA

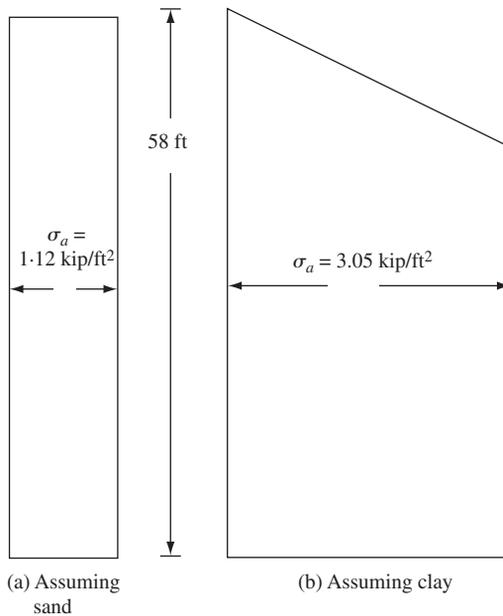

**Figure 15.17** Pressure envelopes: (a) assuming sand; (b) assuming clay

### Sand

$$\sigma_a = 0.65\gamma HK_a \quad (15.14)$$

For  $\gamma = 114 \text{ lb/ft}^3$ ,  $H = 58 \text{ ft}$ , and  $K_a = 0.26$ ,

$$\sigma_a = (0.65)(114)(58)(0.26) = 1117 \text{ lb/ft}^2 \approx 1.12 \text{ kip/ft}^2$$

### Clay

$$\sigma_a = \gamma H \left[ 1 - \left( \frac{4c}{\gamma H} \right) \right] \quad (15.15)$$

For  $c = 890 \text{ lb/ft}^2$ ,

$$\sigma_a = (114)(58) \left[ 1 - \frac{(4)(890)}{(114)(58)} \right] = 3052 \text{ lb/ft}^2 \approx 3.05 \text{ kip/ft}^2$$

Table 15.2 shows the variations of the strut load, based on the assumed pressure envelopes shown in Figure 15.17. Also shown in Table 15.2 are the measured strut loads in the field and the design strut loads. This comparison indicates that

1. In most cases the measured strut loads differed widely from those predicted. This result is due primarily to the uncertainties involved in the assumption of the soil parameters.
2. The actual design strut loads were substantially higher than those measured.


**Table 15.2** Computed and Measured Strut Loads at Test Section B

Strut number	Computed load (kip)		Measured strut load (kip)
	Envelope based on sand	Envelope based on clay	
S-1	182	230	70.4
S-2	215	580	215
S-3	154	420	304
S-4	108	292	230
S-5	75	219	274

## B. Construction of National Plaza (South Half) in Chicago


The construction of the south half of the National Plaza in Chicago required a braced cut 70 ft deep. Swatek et al. (1972) reported the case history for this construction. Figure 15.18 shows a schematic diagram for the braced cut and the subsoil profile. There were six levels of struts. Table 15.3 gives the actual maximum wale and strut loads.

Figure 15.19 presents a lateral earth-pressure envelope based on the maximum wale loads measured. To compare the theoretical prediction to the actual observation

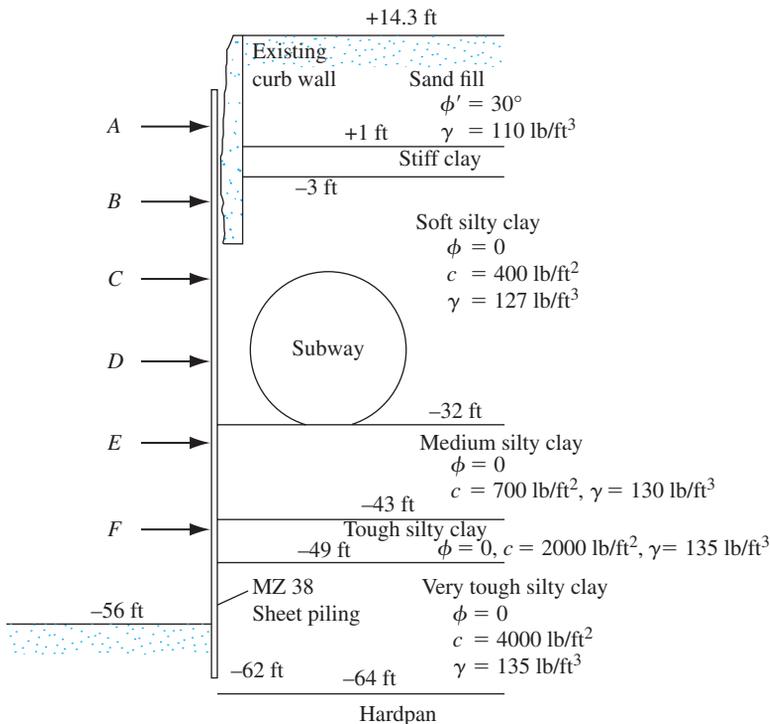**Figure 15.18** Schematic diagram of braced cut—National Plaza of Chicago

**Table 15.3** National Plaza Wale and Strut Loads

Strut level	Elevation (ft)	Load measured (kip/ft)
A	+3	16.0
B	-6	26.5
C	-15	29.0
D	-24.5	29.0
E	-34	29.0
F	-44.5	30.7
		$\Sigma 160.2$

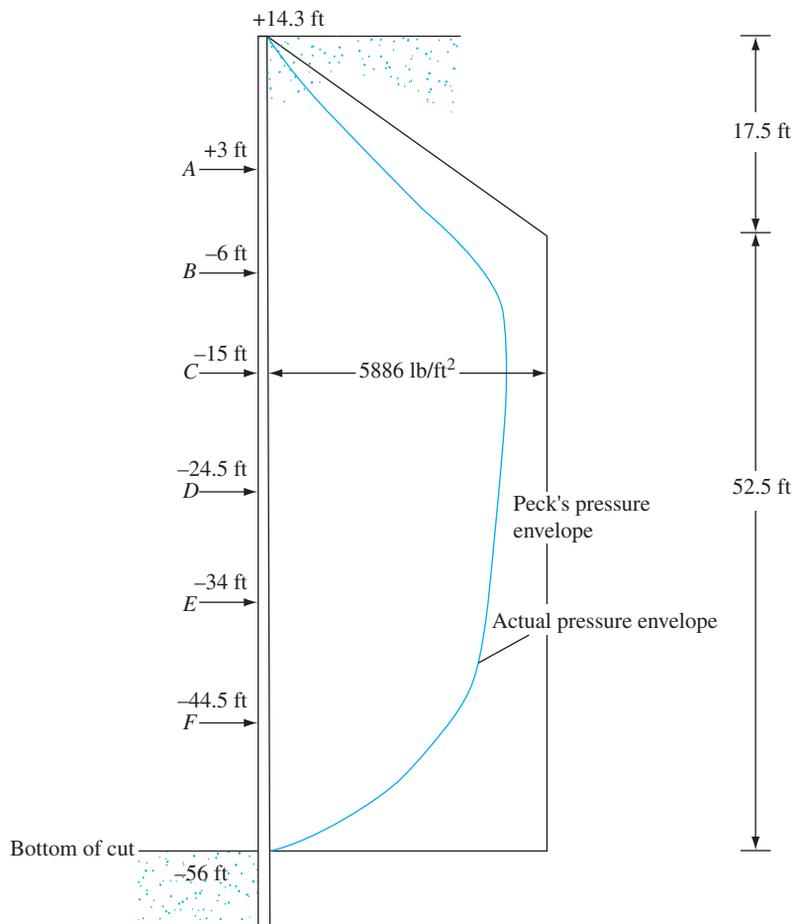**Figure 15.19** Comparison of actual and Peck's pressure envelopes

**Table 15.4** Conversion of Soil Layers using Eq. (15.10)

Elevation (ft)	Thickness, $H$ (ft)	$c$ (lb/ft <sup>2</sup> )	Equivalent $c$ (lb/ft <sup>2</sup> )
+1 to -32 ft	33	400	$c_{av} = \frac{1}{57} [(33)(400) + (11)(700) + (6)(2000) + (7)(4000)]$ $= 1068 \text{ lb/ft}^2$
-32 ft to -43 ft	11	700	
-43 ft to -49 ft	6	2000	
-49 ft to -56 ft	7	4000	
	$\Sigma 57$		

requires making an approximate calculation. To do so, we convert the clayey soil layers from Elevation +1 ft to -56 ft to a single equivalent layer in Table 15.4 by using Eq. (15.10).

Now, using Eq. (15.8), we can convert the sand layer located between elevations +14 ft and +1 ft and the equivalent clay layer of 57 ft to one equivalent clay layer with a thickness of 70 ft:

$$\begin{aligned}
 c_{av} &= \frac{1}{2H} [\gamma_s K_s H_s^2 \tan \phi'_s + (H - H_s) n' q_u] \\
 &= \left[ \frac{1}{(2)(70)} \right] [(110)(1)(13)^2 \tan 30 + (57)(0.75)(2 \times 1068)] \approx 730 \text{ lb/ft}^2
 \end{aligned}$$

Equation (15.11) gives

$$\begin{aligned}
 \gamma_{av} &= \frac{1}{H} [\gamma_1 H_1 + \gamma_2 H_2 + \cdots + \gamma_n H_n] \\
 &= \frac{1}{70} [(110)(13) + (127)(33) + (130)(11) + (135)(6) + (135)(7)] \\
 &= 125.8 \text{ lb/ft}^3
 \end{aligned}$$

For the equivalent clay layer of 70 ft,

$$\frac{\gamma_{av} H}{c_{av}} = \frac{(125.8)(70)}{730} = 12.06 > 4$$

Hence the apparent pressure envelope will be of the type shown in Figure 15.8. From Eq. (15.6)

$$\sigma_a = \gamma H \left[ 1 - \left( \frac{4c_{av}}{\gamma_{av} H} \right) \right] = (125.8)(70) \left[ 1 - \frac{(4)(730)}{(125.8)(70)} \right] = 5886 \text{ lb/ft}^2$$

The pressure envelope is shown in Figure 15.19. The area of this pressure diagram is 201 kip/ft. Thus Peck's pressure envelope gives a lateral earth pressure of about 1.8 times that actually observed. This result is not surprising because the pressure envelope provided by Figure 15.8 is an envelope developed considering several cuts made at different locations. Under actual field conditions, past experience with the behavior of similar soils can help reduce overdesigning substantially.

## 15.7 Bottom Heave of a Cut in Clay

Braced cuts in clay may become unstable as a result of heaving of the bottom of the excavation. Terzaghi (1943) analyzed the factor of safety of long braced excavations against bottom heave. The failure surface for such a case in a homogeneous soil is shown in Figure 15.20. In the figure, the following notations are used:  $B$  = width of the cut,  $H$  = depth of the cut,  $T$  = thickness of the clay below the base of excavation, and  $q$  = uniform surcharge adjacent to the excavation.


The ultimate bearing capacity at the base of a soil column with a width of  $B'$  can be given as

$$q_{\text{ult}} = cN_c \quad (15.16)$$

where  $N_c = 5.7$  (for a perfectly rough foundation).

The vertical load per unit area along  $fi$  is

$$q = \gamma H + q - \frac{cH}{B'} \quad (15.17)$$

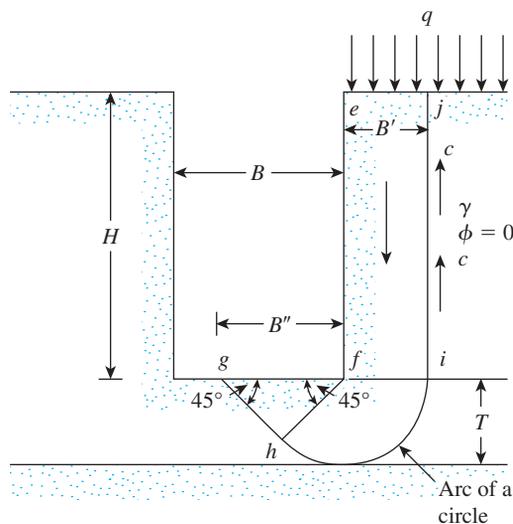

**Figure 15.20** Heaving in braced cuts in clay

Hence, the factor of safety against bottom heave is

$$FS = \frac{q_{ult}}{q} = \frac{cN_c}{\gamma H + q - \frac{cH}{B'}} = \frac{cN_c}{\left(\gamma + \frac{q}{H} - \frac{c}{B'}\right)H} \quad (15.18)$$

For excavations of limited length  $L$ , the factor of safety can be modified to

$$FS = \frac{cN_c \left(1 + 0.2 \frac{B'}{L}\right)}{\left(\gamma + \frac{q}{H} - \frac{c}{B'}\right)H} \quad (15.19)$$

where  $B' = T$  or  $B/\sqrt{2}$  (whichever is smaller).

In 2000, Chang suggested a revision of Eq. (15.19) with the following changes:

1. The shearing resistance along  $ij$  may be considered as an increase in resistance rather than a reduction in loading.
2. In Figure 15.20,  $fg$  with a width of  $B''$  at the base of the excavation may be treated as a negatively loaded footing.
3. The value of the bearing capacity factor  $N_c$  should be 5.14 (not 5.7) for a perfectly smooth footing, because of the restraint-free surface at the base of the excavation.

With the foregoing modifications, Eq. (15.19) takes the form

$$FS = \frac{5.14c \left(1 + \frac{0.2B''}{L}\right) + \frac{cH}{B'}}{\gamma H + q} \quad (15.20)$$

where

$$\begin{aligned} B' &= T \text{ if } T \leq B/\sqrt{2} \\ B' &= B/\sqrt{2} \text{ if } T > B/\sqrt{2} \\ B'' &= \sqrt{2}B' \end{aligned}$$


Bjerrum and Eide (1956) compiled a number of case records for the bottom heave of cuts in clay. Chang (2000) used those records to calculate FS by means of Eq. (15.20); his findings are summarized in Table 15.5. It can be seen from this table that the actual field observations agree well with the calculated factors of safety.

Equation (15.20) is recommended for use in this test. In most cases, a factor of safety of about 1.5 is recommended.

In homogeneous clay, if FS becomes less than 1.5, the sheet pile is driven deeper. (See Figure 15.21.) Usually, the depth  $d$  is kept less than or equal to  $B/2$ , in which case

**Table 15.5** Calculated Factors of Safety for Selected Case Records Compiled by Bjerrum and Eide (1956) and Calculated by Chang (2000)

Site	$B$ (m)	$B/L$	$H$ (m)	$H/B$	$\gamma$ (kN/m <sup>3</sup> )	$c$ (kN/m <sup>2</sup> )	$q$ (kN/m <sup>2</sup> )	FS [Eq. (15.20)]	Type of failure
Pumping station, Fornebu, Oslo	5.0	1.0	3.0	0.6	17.5	7.5	0	1.05	Total failure
Storehouse, Drammen	4.8	0	2.4	0.5	19.0	12	15	1.05	Total failure
Sewerage tank, Drammen	5.5	0.69	3.5	0.64	18.0	10	10	0.92	Total failure
Excavation, Grey Wedels Plass, Oslo	5.8	0.72	4.5	0.78	18.0	14	10	1.07	Total failure
Pumping station, Jernbanetorget, Oslo	8.5	0.70	6.3	0.74	19.0	22	0	1.26	Partial failure
Storehouse, Freia, Oslo	5.0	0	5.0	1.00	19.0	16	0	1.10	Partial failure
Subway, Chicago	16	0	11.3	0.70	19.0	35	0	1.00	Near failure

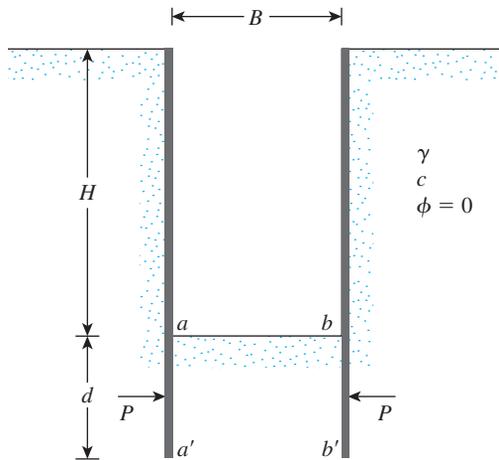**Figure 15.21** Force on the buried length of sheet pile

the force  $P$  per unit length of the buried sheet pile ( $aa'$  and  $bb'$ ) may be expressed as (U.S. Department of the Navy, 1971)

$$P = 0.7(\gamma HB - 1.4cH - \pi cB) \quad \text{for } d > 0.47B \quad (15.21)$$

and

$$P = 1.5d \left( \gamma H - \frac{1.4cH}{B} - \pi c \right) \quad \text{for } d < 0.47B \quad (15.22)$$

### Example 15.4

In Figure 15.22, for a braced cut in clay,  $B = 4$  m,  $L = 15$  m,  $H = 6$  m,  $T = 1.5$  m,  $\gamma = 17$  kN/m<sup>3</sup>,  $c = 40$  kN/m<sup>2</sup>, and  $q = 0$ . Calculate the factor of safety against heave. Use Eq. (15.20).

#### Solution

From Eq. (15.20),

$$FS = \frac{5.14c \left( 1 + \frac{0.2B''}{L} \right) + \frac{cH}{B'}}{\gamma H + q}$$

with  $T = 2$  m,

$$\frac{B}{\sqrt{2}} = \frac{4}{\sqrt{2}} = 2.83 \text{ m}$$

So


$$T \leq \frac{B}{\sqrt{2}}$$

Hence,  $B' = T = 2$  m, and it follows that

$$B'' = \sqrt{2}B' = (\sqrt{2})(2) = 2.83 \text{ m}$$

and

$$FS = \frac{(5.14)(40) \left[ 1 + \frac{(0.2)(2.83)}{15} \right] + \frac{(40)(6)}{2}}{(17)(6)} = 2.55$$

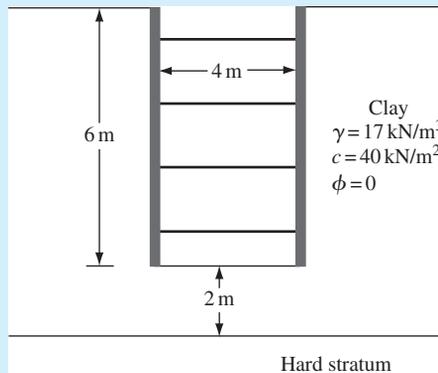

**Figure 15.22** Factor of safety against heaving for a braced cut

## 15.8 Stability of the Bottom of a Cut in Sand

The bottom of a cut in sand is generally stable. When the water table is encountered, the bottom of the cut is stable as long as the water level inside the excavation is higher than the groundwater level. In case dewatering is needed (see Figure 15.23), the factor of safety against piping should be checked. [*Piping* is another term for failure by heave, as defined in Section 2.12; see Eq. (2.50).] Piping may occur when a high hydraulic gradient is created by water flowing into the excavation. To check the factor of safety, draw flow nets and determine the maximum exit gradient [ $i_{\max(\text{exit})}$ ] that will occur at points *A* and *B*. Figure 15.24 shows such a flow net, for which the maximum exit gradient is

$$i_{\max(\text{exit})} = \frac{h}{N_d a} = \frac{h}{N_d a} \quad (15.23)$$

where

$a$  = length of the flow element at *A* (or *B*)

$N_d$  = number of drops (*Note*: in Figure 15.24,  $N_d = 8$ ; see also Section 2.11)

The factor of safety against piping may be expressed as

$$\text{FS} = \frac{i_{\text{cr}}}{i_{\max(\text{exit})}} \quad (15.24)$$

where  $i_{\text{cr}}$  = critical hydraulic gradient.


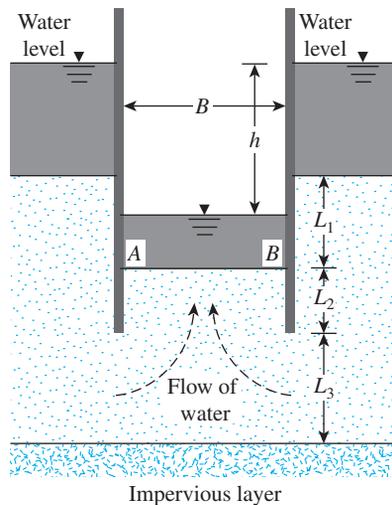


Figure 15.23 Stability of the bottom of a cut in sand

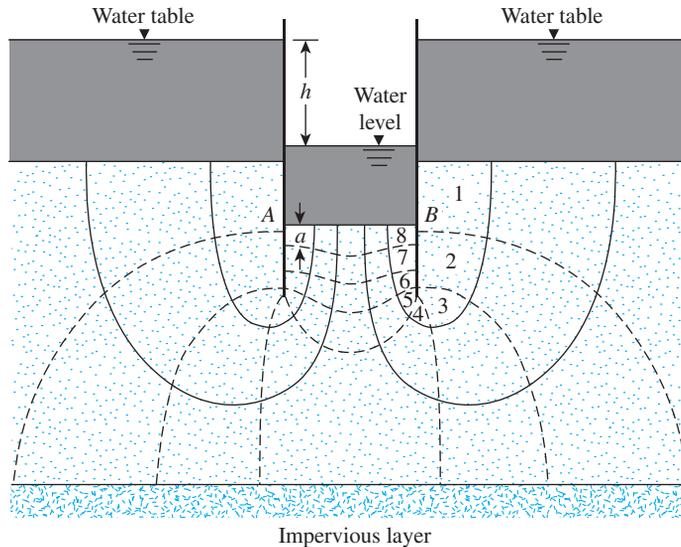

**Figure 15.24** Determining the factor of safety against piping by drawing a flow net

The relationship for  $i_{cr}$  was given in Chapter 1 as



$$i_{cr} = \frac{G_s - 1}{e + 1}$$

The magnitude of  $i_{cr}$  varies between 0.9 and 1.1 in most soils, with an average of about 1. A factor of safety of about 1.5 is desirable.



The maximum exit gradient for sheeted excavations in sands with  $L_3 = \infty$  can also be evaluated theoretically (Harr, 1962). (Only the results of these mathematical derivations will be presented here. For further details, see the original work.) To calculate the maximum exit gradient, examine Figures 15.25 and 15.26 and perform the following steps:

1. Determine the modulus,  $m$ , from Figure 15.25 by obtaining  $2L_2/B$  (or  $B/2L_2$ ) and  $2L_1/B$ .
2. With the known modulus and  $2L_1/B$ , examine Figure 15.26 and determine  $L_2 i_{\text{exit(max)}}/h$ . Because  $L_2$  and  $h$  will be known,  $i_{\text{exit(max)}}$  can be calculated.
3. The factor of safety against piping can be evaluated by using Eq. (15.24).




Marsland (1958) presented the results of model tests conducted to study the influence of seepage on the stability of sheeted excavations in sand. The results were summarized by the U.S. Department of the Navy (1971) in NAVFAC DM-7 and are given in Figure 15.27a, b, and c. Note that Figure 15.27b is for the case of determining the sheet pile penetration  $L_2$  needed for the required factor of safety against piping when the sand layer extends to a great depth below the excavation. By contrast, Figure 15.27c represents the case in which an impervious layer lies at a limited depth below the bottom of the excavation.

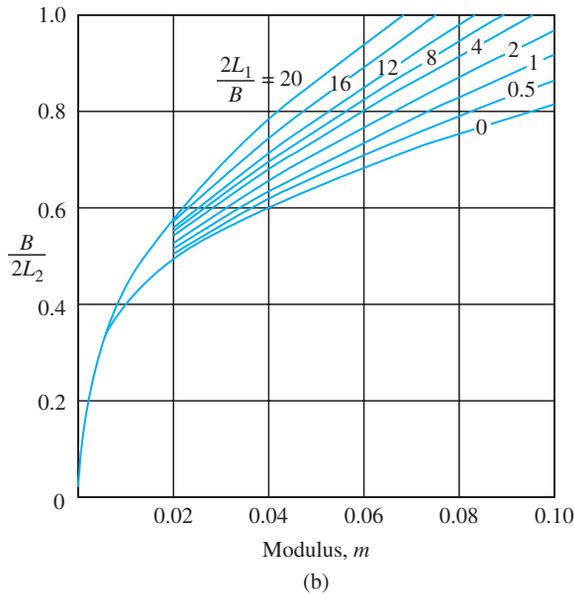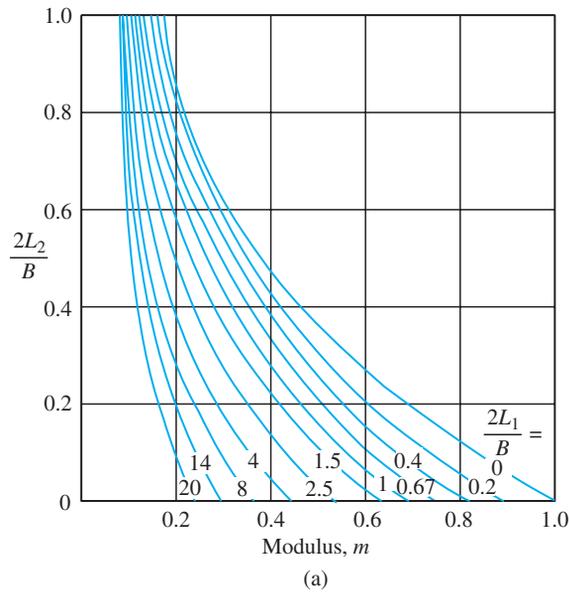

**Figure 15.25** Variation of modulus (Based on *Groundwater and Seepage*, by M. E. Harr. McGraw-Hill, 1962.)

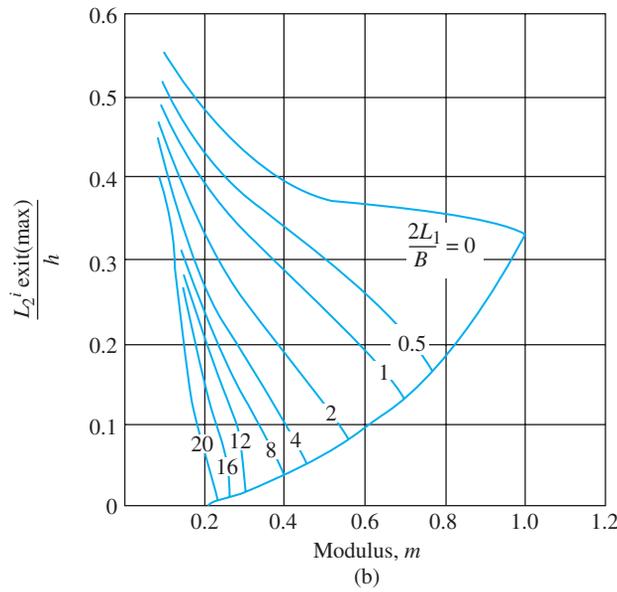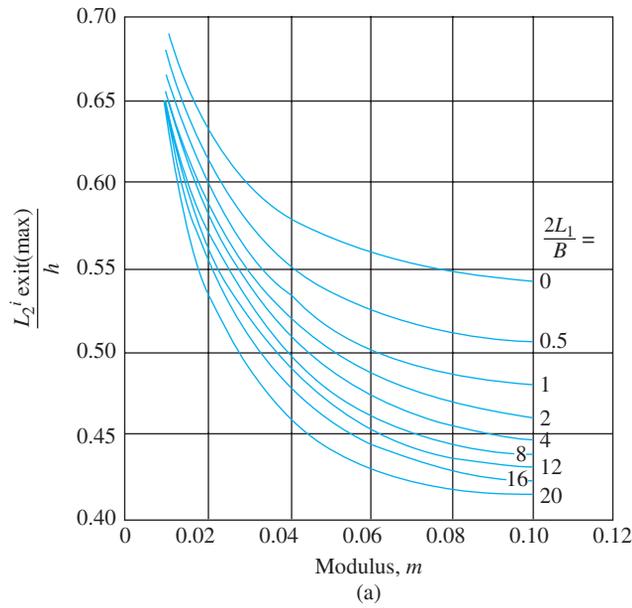

**Figure 15.26** Variation of maximum exit gradient with modulus (Based on *Groundwater and Seepage*, by M. E. Harr. McGraw-Hill, 1962.)

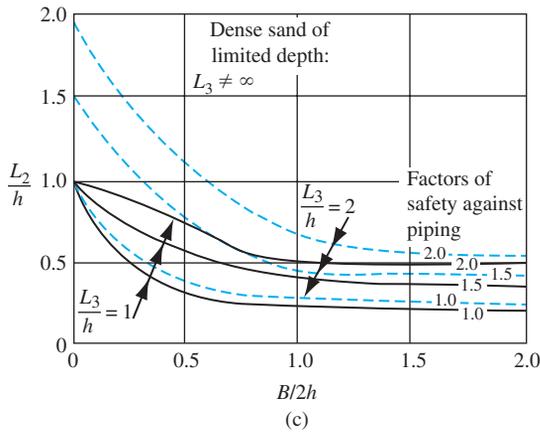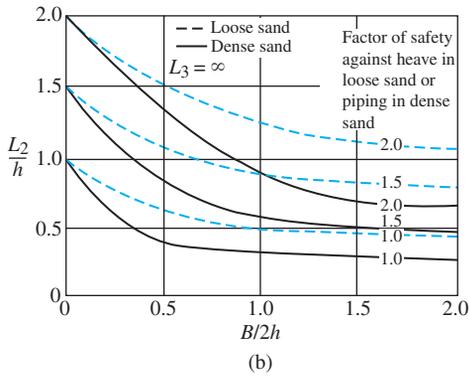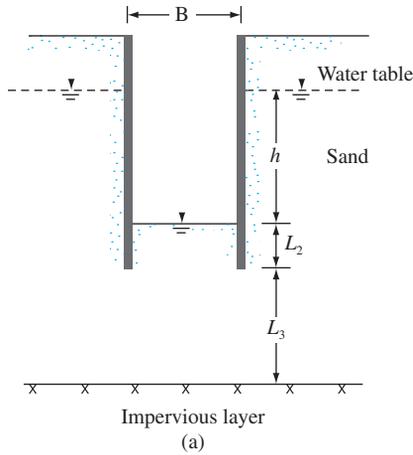

**Figure 15.27** Influence of seepage on the stability of sheeted excavation (U.S. Department of the Navy, 1971.)

**Example 15.5**

In Figure 15.23, let  $h = 4.5$  m,  $L_1 = 5$  m,  $L_2 = 4$  m,  $B = 5$  m, and  $L_3 = \infty$ . Determine the factor of safety against piping. Use Figures 15.25 and 15.26.

**Solution**

We have

$$\frac{2L_1}{B} = \frac{2(5)}{5} = 2$$

and

$$\frac{B}{2L_2} = \frac{5}{2(4)} = 0.625$$

According to Figure 15.25b, for  $2L_1/B = 2$  and  $B/2L_2 = 0.625$ ,  $m \approx 0.033$ . From Figure 15.26a, for  $m = 0.033$  and  $2L_1/B = 2$ ,  $L_2 i_{\text{exit(max)}}/h = 0.54$ . Hence,

$$i_{\text{exit(max)}} = \frac{0.54(h)}{L_2} = 0.54(4.5)/4 = 0.608$$


and

$$\text{FS} = \frac{i_{\text{cr}}}{i_{\text{max(exit)}}} = \frac{1}{0.608} = \mathbf{1.645}$$

## 15.9 Lateral Yielding of Sheet Piles and Ground Settlement

In braced cuts, some lateral movement of sheet-pile walls may be expected. (See Figure 15.28.) The amount of lateral yield ( $\delta_H$ ) depends on several factors, the most important of which is the elapsed time between excavation and the placement of wales and struts. As discussed before, in several instances the sheet piles (or the soldier piles, as the case may be) are driven to a certain depth below the bottom of the excavation. The reason is to reduce the lateral yielding of the walls during the last stages of excavation. Lateral yielding of the walls will cause the ground surface surrounding the cut to settle. The degree of lateral yielding, however, depends mostly on the type of soil below the bottom of the cut. If clay below the cut extends to a great depth and  $\gamma H/c$  is less than about 6, extension of the sheet piles or soldier piles below the bottom of the cut will help considerably in reducing the lateral yield of the walls.

However, under similar circumstances, if  $\gamma H/c$  is about 8, the extension of sheet piles into the clay below the cut does not help greatly. In such circumstances, we may expect a great degree of wall yielding that could result in the total collapse of

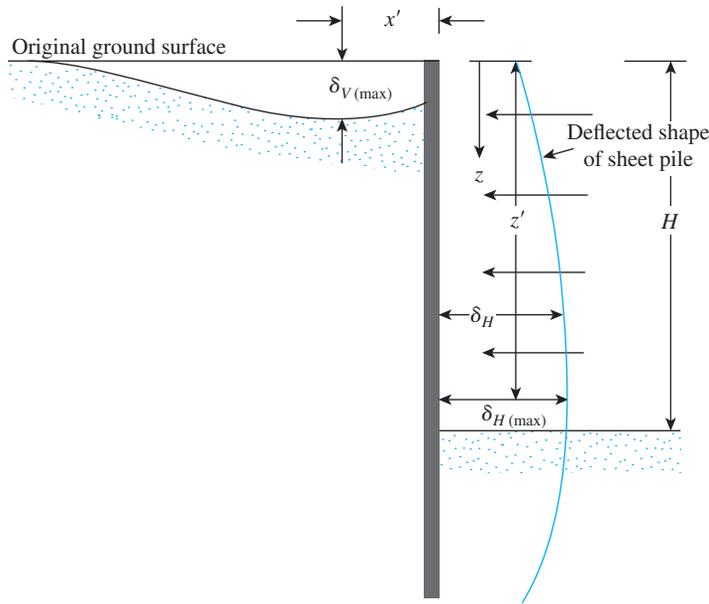


**Figure 15.28** Lateral yielding of sheet pile and ground settlement

the bracing systems. If a hard layer of soil lies below a clay layer at the bottom of the cut, the piles should be embedded in the stiffer layer. This action will greatly reduce lateral yield.

The lateral yielding of walls will generally induce ground settlement,  $\delta_V$ , around a braced cut. Such settlement is generally referred to as *ground loss*. On the basis of several field observations, Peck (1969) provided curves for predicting ground settlement in various types of soil. (See Figure 15.29.) The magnitude of ground loss varies extensively; however, the figure may be used as a general guide.

Moormann (2004) analyzed about 153 case histories dealing mainly with the excavation in soft clay (that is, undrained shear strength,  $c \leq 75 \text{ kN/m}^2$ ). Following is a summary of his analysis relating to  $\delta_{V(\max)}$ ,  $x'$ ,  $\delta_{H(\max)}$ , and  $z'$  (see Figure 15.28).

- Maximum Vertical Movement [ $\delta_{V(\max)}$ ]
  - $\delta_{V(\max)}/H \approx 0.1$  to  $10.1\%$  with an average of  $1.07\%$  (soft clay)
  - $\delta_{V(\max)}/H \approx 0$  to  $0.9\%$  with an average of  $0.18\%$  (stiff clay)
  - $\delta_{V(\max)}/H \approx 0$  to  $2.43\%$  with an average of  $0.33\%$  (non-cohesive soils)
- Location of  $\delta_{V(\max)}$ , that is  $x'$  (Figure 15.28)
  - For 70% of all case histories considered,  $x' \leq 0.5H$ .
  - However, in soft clays,  $x'$  may be as much as  $2H$ .
- Maximum Horizontal Deflection of Sheet Piles,  $\delta_{H(\max)}$ 
  - For 40% of excavation in soft clay,  $0.5\% \leq \delta_{H(\max)}/H \leq 1\%$ .
  - The average value of  $\delta_{H(\max)}/H$  is about  $0.87\%$ .

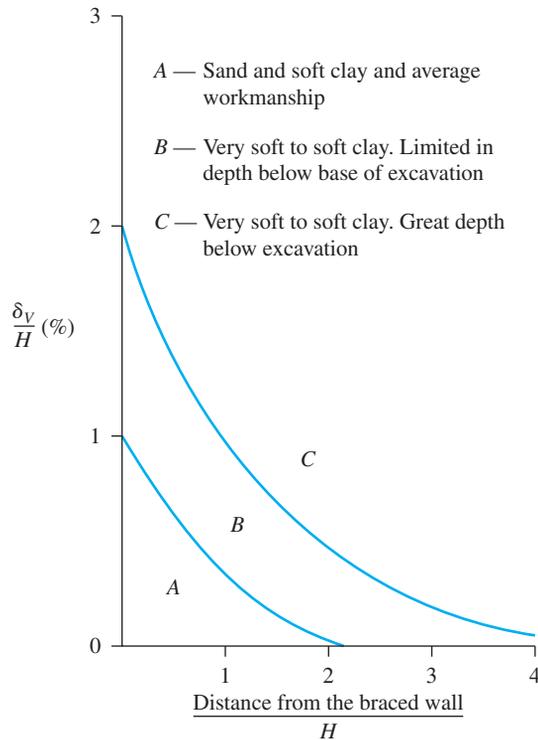

**Figure 15.29** Variation of ground settlement with distance (Based on Peck, R. B. (1969). “Deep Excavation and Tunneling in Soft Ground,” *Proceedings Seventh International Conference on Soil Mechanics and Foundation Engineering*, Mexico City, State-of-the-Art Volume, pp. 225–290.)

In stiff clays, the average value of  $\delta_{H(\max)}/H$  is about 0.25%.

In non-cohesive soils,  $\delta_{H(\max)}/H$  is about 0.27% of the average.

- Location of  $\delta_{H(\max)}$ , that is  $z'$  (Figure 15.28)

For deep excavation of soft and stiff cohesive soils,  $z'/H$  is about 0.5 to 1.0.

## Problems

- 15.1** Refer to the braced cut shown in Figure P15.1. Given:  $\gamma = 17 \text{ kN/m}^3$ ,  $\phi' = 35^\circ$ , and  $c' = 0$ . The struts are located at 3 m center-to-center in the plan. Draw the earth-pressure envelope and determine the strut loads at levels A, B, and C.
- 15.2** For the braced cut described in Problem 15.1, determine the following:
- The sheet-pile section modulus
  - The section modulus of the wales at level B
- Assume that  $\sigma_{\text{all}} = 170 \text{ MN/m}^2$ .

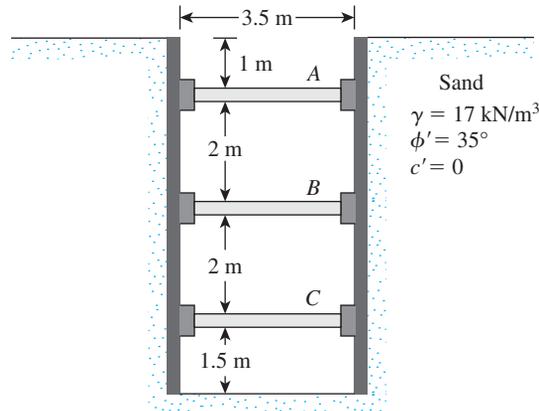


Figure P15.1

- 15.3** Redo Problem 15.1 with  $\gamma = 18 \text{ kN/m}^3$ ,  $\phi' = 40^\circ$ ,  $c' = 0$ , and the center-to-center strut spacing in the plan = 4 m.
- 15.4** Determine the sheet-pile section modulus for the braced cut described in Problem 15.3. Given:  $\sigma_{\text{all}} = 170 \text{ MN/m}^2$ .
- 15.5** Refer to Figure 15.10a. For the braced cut, given  $H = 8 \text{ m}$ ;  $H_s = 3 \text{ m}$ ;  $\gamma_s = 17.5 \text{ kN/m}^3$ ; angle of friction of sand,  $\phi'_s = 34^\circ$ ;  $H_c = 5 \text{ m}$ ;  $\gamma_c = 18.2 \text{ kN/m}^3$ ; and unconfined compression strength of clay layer,  $q_u = 55 \text{ kN/m}^2$ .
- Estimate the average cohesion ( $c_{\text{av}}$ ) and average unit weight ( $\gamma_{\text{av}}$ ) for the construction of the earth-pressure envelope.
  - Plot the earth-pressure envelope.
- 15.6** Refer to Figure 15.10b, which shows a braced cut in clay. Given:  $H = 25 \text{ ft}$ ,  $H_1 = 5 \text{ ft}$ ,  $c_1 = 2125 \text{ lb/ft}^2$ ,  $\gamma_1 = 111 \text{ lb/ft}^3$ ,  $H_2 = 10 \text{ ft}$ ,  $c_2 = 1565 \text{ lb/ft}^2$ ,  $\gamma_2 = 107 \text{ lb/ft}^3$ ,  $H_3 = 10 \text{ ft}$ ,  $c_3 = 1670 \text{ lb/ft}^2$ , and  $\gamma_3 = 109 \text{ lb/ft}^3$ .
- Determine the average cohesion ( $c_{\text{av}}$ ) and average unit weight ( $\gamma_{\text{av}}$ ) for the construction of the earth-pressure envelope.
  - Plot the earth-pressure envelope.
- 15.7** Refer to Figure P15.7. Given:  $\gamma = 17.5 \text{ kN/m}^3$ ,  $c = 30 \text{ kN/m}^2$ , and center-to-center spacing of struts in the plan = 5 m. Draw the earth-pressure envelope and determine the strut loads at levels A, B, and C.
- 15.8** Determine the sheet-pile section modulus for the braced cut described in Problem 15.7. Use  $\sigma_{\text{all}} = 170 \text{ MN/m}^2$ .
- 15.9** Redo Problem 15.7 assuming that  $c = 60 \text{ kN/m}^2$ .
- 15.10** Determine the factor of safety against bottom heave for the braced cut described in Problem 15.7. Use Eq. (15.20) and assume the length of the cut,  $L = 18 \text{ m}$ .
- 15.11** Determine the factor of safety against bottom heave for the braced cut described in Problem 15.9. Use Eq. (15.19). The length of the cut is 12.5.

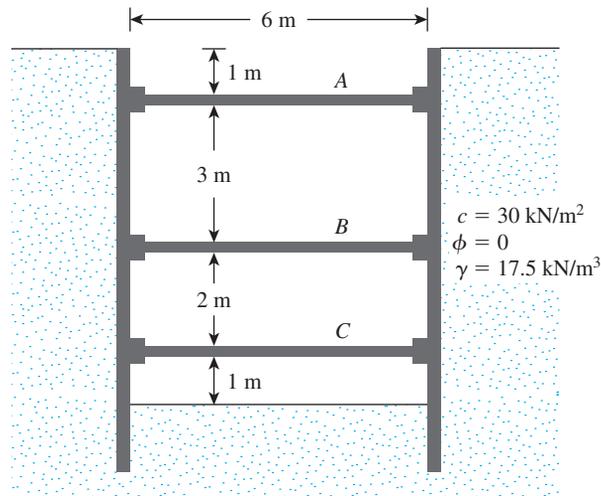


Figure P15.7

## References

- BJERRUM, L. and EIDE, O. (1956). "Stability of Struttred Excavation in Clay," *Geotechnique*, Vol. 6, No. 1, pp. 32–47.
- CHANG, M. F. (2000). "Basal Stability Analysis of Braced Cuts in Clay," *Journal of Geotechnical and Geoenvironmental Engineering*, ASCE, Vol. 126, No. 3, pp. 276–279.
- HARR, M. E. (1962). *Groundwater and Seepage*, McGraw-Hill, New York.
- LAMBE, T. W. (1970). "Braced Excavations." *Proceedings of the Specialty Conference on Lateral Stresses in the Ground and Design of Earth-Retaining Structures*, American Society of Civil Engineers, pp. 149–218.
- MOORMANN, C. (2004). "Analysis of Wall and Ground Movements Due to Deep Excavations in Soft Soil Based on New Worldwide Data Base," *Soils and Foundations*, Vol. 44, No. 1, pp. 87–98.
- PECK, R. B. (1943). "Earth Pressure Measurements in Open Cuts, Chicago (ILL.) Subway," *Transactions*, American Society of Civil Engineers, Vol. 108, pp. 1008–1058.
- PECK, R. B. (1969). "Deep Excavation and Tunneling in Soft Ground," *Proceedings Seventh International Conference on Soil Mechanics and Foundation Engineering*, Mexico City, State-of-the-Art Volume, pp. 225–290.
- SWATEK, E. P., JR., ASROW, S. P., and SEITZ, A. (1972). "Performance of Bracing for Deep Chicago Excavation," *Proceeding of the Specialty Conference on Performance of Earth and Earth Supported Structures*, American Society of Civil Engineers, Vol. 1, Part 2, pp. 1303–1322.
- TERZAGHI, K. (1943). *Theoretical Soil Mechanics*, Wiley, New York.
- U.S. DEPARTMENT OF THE NAVY (1971). "Design Manual—Soil Mechanics. Foundations, and Earth Structures." NAVFAC DM-7, Washington, D.C.





# **PART 4**

# **Soil Improvement**



## **Chapter 16: Soil Improvement and Ground Modification**





# 16 Soil Improvement and Ground Modification

## 16.1 Introduction

The soil at a construction site may not always be totally suitable for supporting structures such as buildings, bridges, highways, and dams. For example, in granular soil deposits, the *in situ* soil may be very loose and indicate a large elastic settlement. In such a case, the soil needs to be densified to increase its unit weight and thus its shear strength.

Sometimes the top layers of soil are undesirable and must be removed and replaced with better soil on which the structural foundation can be built. The soil used as fill should be well compacted to sustain the desired structural load. Compacted fills may also be required in low-lying areas to raise the ground elevation for construction of the foundation.

Soft saturated clay layers are often encountered at shallow depths below foundations. Depending on the structural load and the depth of the layers, unusually large consolidation settlement may occur. Special soil-improvement techniques are required to minimize settlement.

In Chapter 11, we mentioned that the properties of expansive soils could be altered substantially by adding stabilizing agents such as lime. Improving *in situ* soils by using additives is usually referred to as *stabilization*.

Various techniques are used to

1. Reduce the settlement of structures
2. Improve the shear strength of soil and thus increase the bearing capacity of shallow foundations
3. Increase the factor of safety against possible slope failure of embankments and earth dams
4. Reduce the shrinkage and swelling of soils

This chapter discusses some of the general principles of soil improvement, such as compaction, vibroflotation, precompression, sand drains, wick drains, stabilization by admixtures, jet grouting, and deep mixing, as well as the use of stone columns and sand compaction piles in weak clay to construct foundations.

## 16.2 General Principles of Compaction

If a small amount of water is added to a soil that is then compacted, the soil will have a certain unit weight. If the moisture content of the same soil is gradually increased and the energy of compaction is the same, the dry unit weight of the soil will gradually increase. The reason is that water acts as a lubricant between the soil particles, and under compaction it helps rearrange the solid particles into a denser state. The increase in dry unit weight with increase of moisture content for a soil will reach a limiting value beyond which the further addition of water to the soil will result in a *reduction* in dry unit weight. The moisture content at which the *maximum dry unit weight* is obtained is referred to as the *optimum moisture content*.

The standard laboratory tests used to evaluate maximum dry unit weights and optimum moisture contents for various soils are

- The Standard Proctor test (ASTM designation D-698)
- The Modified Proctor test (ASTM designation D-1557)

The soil is compacted in a mold in several layers by a hammer. The moisture content of the soil,  $w$ , is changed, and the dry unit weight,  $\gamma_d$ , of compaction for each test is determined. The maximum dry unit weight of compaction and the corresponding optimum moisture content are determined by plotting a graph of  $\gamma_d$  against  $w$  (%). The standard specifications for the two types of Proctor test are given in Tables 16.1 and 16.2.

**Table 16.1** Specifications for Standard Proctor Test (Based on ASTM Designation 698)

Item	Method A	Method B	Method C
Diameter of mold	101.6 mm (4 in.)	101.6 mm (4 in.)	152.4 mm (6 in.)
Volume of mold	944 cm <sup>3</sup> ( $\frac{1}{30}$ ft <sup>3</sup> )	944 cm <sup>3</sup> ( $\frac{1}{30}$ ft <sup>3</sup> )	2124 cm <sup>3</sup> (0.075 ft <sup>3</sup> )
Mass (weight) of hammer	2.5 kg (5.5 lb)	2.5 kg (5.5 lb)	2.5 kg (5.5 lb)
Height of hammer drop	304.8 mm (12 in.)	304.8 mm (12 in.)	304.8 mm (12 in.)
Number of hammer blows per layer of soil	25	25	56
Number of layers of compaction	3	3	3
Energy of compaction	600 kN · m/m <sup>3</sup> (12,400 ft · lb/ft <sup>3</sup> )	600 kN · m/m <sup>3</sup> (12,400 ft · lb/ft <sup>3</sup> )	600 kN · m/m <sup>3</sup> (12,400 ft · lb/ft <sup>3</sup> )
Soil to be used	Portion passing No. 4 (4.57-mm) sieve. May be used if 20% or less by weight of material is retained on No. 4 sieve.	Portion passing $\frac{3}{8}$ -in. (9.5-mm) sieve. May be used if soil retained on No. 4 sieve is more than 20% and 20% or less by weight is retained on 9.5-mm ( $\frac{3}{8}$ -in.) sieve.	Portion passing $\frac{3}{4}$ -in. (19.0-mm) sieve. May be used if more than 20% by weight of material is retained on 9.5 mm ( $\frac{3}{8}$ -in.) sieve and less than 30% by weight is retained on 19.00-mm ( $\frac{3}{4}$ -in.) sieve.

**Table 16.2** Specifications for Modified Proctor Test (Based on ASTM Designation 1557)

Item	Method A	Method B	Method C
Diameter of mold	101.6 mm (4 in.)	101.6 mm (4 in.)	152.4 mm (6 in.)
Volume of mold	944 cm <sup>3</sup> ( $\frac{1}{30}$ ft <sup>3</sup> )	944 cm <sup>3</sup> ( $\frac{1}{30}$ ft <sup>3</sup> )	2124 cm <sup>3</sup> (0.075 ft <sup>3</sup> )
Mass (weight) of hammer	4.54 kg (10 lb)	4.54 kg (10 lb)	4.54 kg (10 lb)
Height of hammer drop	457.2 mm (18 in.)	457.2 mm (18 in.)	457.2 mm (18 in.)
Number of hammer blows per layer of soil	25	25	56
Number of layers of compaction	5	5	5
Energy of compaction	2700 kN · m/m <sup>3</sup> (56,000 ft · lb/ft <sup>3</sup> )	2700 kN · m/m <sup>3</sup> (56,000 ft · lb/ft <sup>3</sup> )	2700 kN · m/m <sup>3</sup> (56,000 ft · lb/ft <sup>3</sup> )
Soil to be used	Portion passing No. 4 (4.57-mm) sieve. May be used if 20% or less by weight of material is retained on No. 4 sieve.	Portion passing 9.5-mm ( $\frac{3}{8}$ -in.) sieve. May be used if soil retained on No. 4 sieve is more than 20% and 20% or less by weight is retained on 9.5-mm ( $\frac{3}{8}$ -in.) sieve.	Portion passing 19.0-mm ( $\frac{3}{4}$ -in.) sieve. May be used if more than 20% by weight of material is retained on 9.5-mm ( $\frac{3}{8}$ -in.) sieve and less than 30% by weight is retained on 19-mm ( $\frac{3}{4}$ -in.) sieve.

Figure 16.1 shows a plot of  $\gamma_d$  against  $w$  (%) for a clayey silt obtained from standard and modified Proctor tests (method A). The following conclusions may be drawn:

1. The maximum dry unit weight and the optimum moisture content depend on the degree of compaction.
2. The higher the energy of compaction, the higher is the maximum dry unit weight.
3. The higher the energy of compaction, the lower is the optimum moisture content.
4. No portion of the compaction curve can lie to the right of the zero-air-void line. The zero-air-void dry unit weight,  $\gamma_{zav}$ , at a given moisture content is the theoretical maximum value of  $\gamma_d$ , which means that all the void spaces of the compacted soil are filled with water, or


$$\gamma_{zav} = \frac{\gamma_w}{\frac{1}{G_s} + w} \quad (16.1)$$

where

$\gamma_w$  = unit weight of water

$G_s$  = specific gravity of the soil solids

$w$  = moisture content of the soil

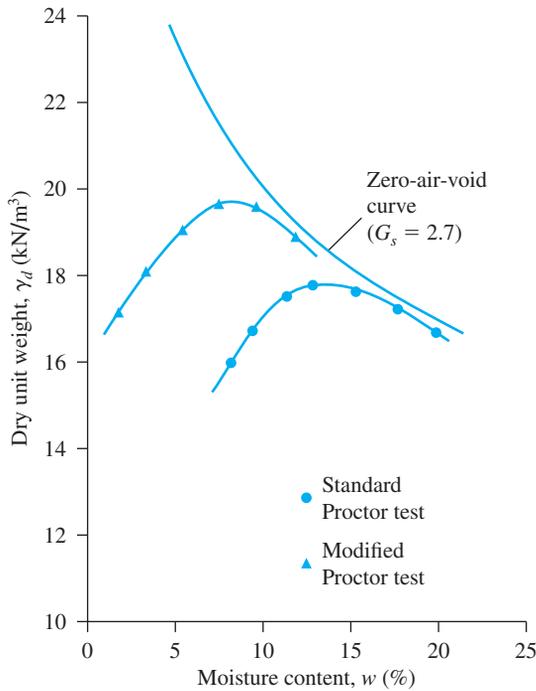

**Figure 16.1** Standard and modified Proctor compaction curves for a clayey silt (method A)

5. The maximum dry unit weight of compaction and the corresponding optimum moisture content will vary from soil to soil.

Using the results of laboratory compaction ( $\gamma_d$  versus  $w$ ), specifications may be written for the compaction of a given soil in the field. In most cases, the contractor is required to achieve a relative compaction of 90% or more on the basis of a specific laboratory test (either the standard or the modified Proctor compaction test). The relative compaction is defined as

$$RC = \frac{\gamma_{d(\text{field})}}{\gamma_{d(\text{max})}} \quad (16.2)$$

Chapter 2 introduced the concept of relative density (for the compaction of granular soils), defined as

$$D_r = \left[ \frac{\gamma_d - \gamma_{d(\text{min})}}{\gamma_{d(\text{max})} - \gamma_{d(\text{min})}} \right] \frac{\gamma_{d(\text{max})}}{\gamma_d}$$

where

$\gamma_d$  = dry unit weight of compaction in the field

$\gamma_{d(\max)}$  = maximum dry unit weight of compaction as determined in the laboratory

$\gamma_{d(\min)}$  = minimum dry unit weight of compaction as determined in the laboratory

For granular soils in the field, the degree of compaction obtained is often measured in terms of relative density. Comparing the expressions for relative density and relative compaction reveals that

$$RC = \frac{A}{1 - D_r(1 - A)} \quad (16.3)$$

$$\text{where } A = \frac{\gamma_{d(\min)}}{\gamma_{d(\max)}}$$

## 16.3 Empirical Relationships for Compaction

Omar et al. (2003) recently presented the results of modified Proctor compaction tests on 311 soil samples. Of these samples, 45 were gravelly soil (GP, GP-GM, GW, GW-GM, and GM), 264 were sandy soil (SP, SP-SM, SW-SM, SW, SC-SM, SC, and SM), and two were clay with low plasticity (CL). All compaction tests were conducted using ASTM 1557 method C to avoid over-size correction. Based on the tests, the following correlations were developed.

$$\rho_{d(\max)}(\text{kg/m}^3) = [4,804,574G_s - 195.55(LL)^2 + 156.971(R\# 4)^{0.5} - 9,527,830]^{0.5} \quad (16.4)$$

$$\ln(w_{\text{opt}}) = 1.195 \times 10^{-4}(LL)^2 - 1.964G_s - 6.617 \times 10^{-5}(R\# 4) + 7.651 \quad (16.5)$$

where

$\rho_{d(\max)}$  = maximum dry density

$w_{\text{opt}}$  = optimum moisture content

$G_s$  = specific gravity of soil solids

LL = liquid limit, in percent

R # 4 = percent retained on No. 4 sieve

It needs to be pointed out that Eqs. (16.4 and 16.5) contain the term for liquid limit. This is because the soils that were considered included silty and clayey sands.

For granular soils with less than 12% fines (i.e., finer than No. 200 sieve), relative density may be a better indicator for end product compaction specification in the field. Based on laboratory compaction tests on 55 clean sands (less than 5% finer than No. 200 sieve), Patra et al. (2010) provided the following relationships

$$D_r = AD_{50}^{-B} \quad (16.6)$$

$$A = 0.216 \ln E - 0.850 \quad (16.7)$$

$$B = -0.03 \ln E + 0.306 \quad (16.8)$$

where  $D_r$  = maximum relative density of compaction achieved with compaction energy  $E$   
(kN-m/m<sup>3</sup>)

$D_{50}$  = median grain size (mm)

Gurtug and Sridharan (2004) proposed correlations for optimum moisture content and maximum dry unit weight with the plastic limit (PL) of cohesive soils. These correlations can be expressed as

$$w_{\text{opt}}(\%) = [1.95 - 0.38(\log E)](\text{PL}) \quad (16.9)$$

$$\gamma_{d(\text{max})}(\text{kN/m}^3) = 22.68e^{-0.0183w_{\text{opt}}(\%)} \quad (16.10)$$

where PL = plastic limit (%)

$E$  = compaction energy (kN-m/m<sup>3</sup>)

For modified Proctor test,  $E = 2700 \text{ kN/m}^3$ . Hence,

$$w_{\text{opt}}(\%) \approx 0.65(\text{PL})$$

and

$$\gamma_{d(\text{max})}(\text{kN/m}^3) = 22.68e^{-0.012(\text{PL})}$$

Osman et al. (2008) analyzed a number of laboratory compaction-test results on fine-grained (cohesive) soil. Based on this study, the following correlations were developed:

$$w_{\text{opt}} = (1.99 - 0.165 \ln E)(\text{PI}) \quad (16.11)$$

and

$$\gamma_{d(\text{max})} = L - Mw_{\text{opt}} \quad (16.12)$$

where

$$L = 14.34 + 1.195 \ln E \quad (16.13)$$

$$M = -0.19 + 0.073 \ln E \quad (16.14)$$

$w_{\text{opt}}$  = optimum moisture content (%)

PI = plasticity index (%)

$\gamma_{d(\text{max})}$  = maximum dry unit weight (kN/m<sup>3</sup>)

$E$  = compaction energy (kN-m/m<sup>3</sup>)

Matteo et al. (2009) analyzed the results of 71 fine-grained soils and provided the following correlations for optimum moisture content ( $w_{\text{opt}}$ ) and maximum dry unit weight [ $\gamma_{d(\text{max})}$ ] for modified Proctor test ( $E = 2700 \text{ kN-m/m}^3$ ):

$$w_{\text{opt}}(\%) = -0.86(\text{LL}) + 3.04\left(\frac{\text{LL}}{G_s}\right) + 2.2 \quad (16.15)$$

and

$$\gamma_{d(\text{max})}(\text{kN/m}^3) = 40.316(w_{\text{opt}}^{-0.295})(\text{PI}^{0.032}) - 2.4 \quad (16.16)$$

where LL = liquid limit (%)

PI = plasticity index (%)

$G_s$  = specific gravity of soil solids

### Example 16.1

For a granular soil, the following are given:

- $G_s = 2.6$
- Liquid limit on the fraction passing No. 40 sieve = 20
- Percent retained on No. 4 sieve = 20

Using Eqs. (16.4) and (16.5), estimate the maximum dry density of compaction and the optimum moisture content based on the modified Proctor test.

#### Solution

From Eq. (16.4),

$$\begin{aligned}\rho_{d(\max)} (\text{kg/m}^3) &= [4,804,574G_s - 195.55(\text{LL})^2 + 156,971(R\#4)^{0.5} - 9,527,830]^{0.5} \\ &= [4,804,574(2.6) - 195.55(20)^2 + 156,971(20)^{0.5} - 9,527,830]^{0.5} \\ &= \mathbf{1894 \text{ kg/m}^3}\end{aligned}$$

From Eq. (16.5),

$$\begin{aligned}\ln(w_{\text{opt}}) &= 1.195 \times 10^{-4}(\text{LL})^2 - 1.964G_s - 6.617 \times 10^{-5}(R\#4) + 7,651 \\ &= 1.195 \times 10^{-4}(20)^2 - 1.964(2.6) - 6.617 \times 10^{-5}(20) + 7,651 \\ &= 2.591 \\ w_{\text{opt}} &= \mathbf{13.35\%}\end{aligned}$$

### Example 16.2

For a sand with 4% finer than No. 200 sieve, estimate the maximum relative density of compaction that may be obtained from a modified Proctor test. Given  $D_{50} = 1.4$  mm.

#### Solution

For modified Proctor test,  $E = 2696 \text{ kN-m/m}^3$

From Eq. (16.7)

$$A = 0.216 \ln E - 0.850 = (0.216)(\ln 2696) - 0.850 = 0.856$$

From Eq. (16.8)

$$B = -0.03 \ln E + 0.306 = -(0.03)(\ln 2696) + 0.306 = 0.069$$

From Eq. (16.6)

$$D_r = AD_{50}^{-B} = (0.856)(1.4)^{-0.069} = 0.836 = \mathbf{83.6\%}$$

**Example 16.3**

For a silty clay soil given  $LL = 43$  and  $PL = 18$ . Estimate the maximum dry unit weight of compaction that can be achieved by conducting a modified Proctor test. Use Eq. (16.12).

**Solution**

For modified Proctor test,  $E = 2696 \text{ kN}\cdot\text{m}/\text{m}^3$

From Eqs. (16.13) and (16.14),

$$L = 14.34 + 1.195 \ln E = 14.34 + 1.195 \ln (2696) = 23.78$$

$$M = -0.19 + 0.073 \ln E = -0.19 + 0.073 \ln (2696) = 0.387$$

From Eq. (16.11),

$$w_{\text{opt}}(\%) = (1.99 - 0.165 \ln E)(PI)$$

$$= [1.99 - 0.165 \ln (2696)](43 - 18)$$

$$= 17.16\%$$

From Eq. (16.12),

$$\gamma_{d(\text{max})} = L - Mw_{\text{opt}} = 23.78 - (0.387)(17.16) = \mathbf{17.14 \text{ kN}/\text{m}^3}$$

## 16.4 Field Compaction

Ordinary compaction in the field is done by rollers. Of the several types of roller used, the most common are

1. Smooth-wheel rollers (or smooth drum rollers)
2. Pneumatic rubber-tired rollers
3. Sheepfoot rollers
4. Vibratory rollers

Figure 16.2 shows a *smooth-wheel roller* that can also create vertical vibration during compaction. Smooth-wheel rollers are suitable for proof-rolling subgrades and for finishing the construction of fills with sandy or clayey soils. They provide 100% coverage under the wheels, and the contact pressure can be as high as 300 to 400  $\text{kN}/\text{m}^2$  ( $\approx 45$  to 60  $\text{lb}/\text{in}^2$ ). However, they do not produce a uniform unit weight of compaction when used on thick layers.

*Pneumatic rubber-tired rollers* (Figure 16.3) are better in many respects than smooth-wheel rollers. Pneumatic rollers, which may weigh as much as 2000 kN (450 kip), consist of a heavily loaded wagon with several rows of tires. The tires are closely spaced—four to six in a row. The contact pressure under the tires may range up to 600 to 700  $\text{kN}/\text{m}^2$  ( $\approx 85$  to 100  $\text{lb}/\text{in}^2$ ), and they give about 70 to 80% coverage. Pneumatic rollers, which can be used for sandy and clayey soil compaction, produce a combination of pressure and kneading action.



**Figure 16.2** Vibratory smooth-wheel rollers (*Dmitry Kalinovsky/Shutterstock.com*)



**Figure 16.3** Pneumatic rubber-tired roller (*Vadim Ratnikov/Shutterstock.com*)




**Figure 16.4** Vibratory sheepfoot roller (Artit Thongchuea/Shutterstock.com)

*Sheepsfoot rollers* (Figure 16.4) consist basically of drums with large numbers of projections. The area of each of the projections may be 25 to 90 cm<sup>2</sup> (4 to 14 in<sup>2</sup>). These rollers are *most effective in compacting cohesive soils*. The contact pressure under the projections may range from 1500 to 7500 kN/m<sup>2</sup> ( $\approx$ 215 to 1100 lb/in<sup>2</sup>). During compaction in the field, the initial passes compact the lower portion of a lift. Later, the middle and top of the lift are compacted.

*Vibratory rollers* are efficient in compacting granular soils. Vibrators can be attached to smooth-wheel, pneumatic rubber-tired or sheepfoot rollers to send vibrations into the soil being compacted. Figures 16.2 and 16.4 show vibratory smooth-wheel rollers and a vibratory sheepfoot roller, respectively.

In general, compaction in the field depends on several factors, such as the type of compactor, type of soil, moisture content, lift thickness, towing speed of the compactor, and number of passes the roller makes.

Figure 16.5 shows the variation of the unit weight of compaction with depth for a poorly graded dune sand compacted by a vibratory drum roller. Vibration was produced by mounting an eccentric weight on a single rotating shaft within the drum cylinder. The weight of the roller used for this compaction was 55.7 kN (12.5 kip), and the drum diameter was 1.19 m (3.9 ft). The lifts were kept at 2.44 m (8 ft). Note that, at any depth, the dry unit weight of compaction increases with the number of passes the roller makes. However, the rate of increase in unit weight gradually decreases after about 15 passes. Note also the variation of dry unit weight with depth by the number of roller passes. The dry unit weight and hence the relative density,  $D_r$ , reach maximum values at a depth of about 0.5 m ( $\approx$ 1.6 ft) and then gradually decrease as the depth increases. The reason is the lack of confining pressure toward the surface. Once the relation between depth and

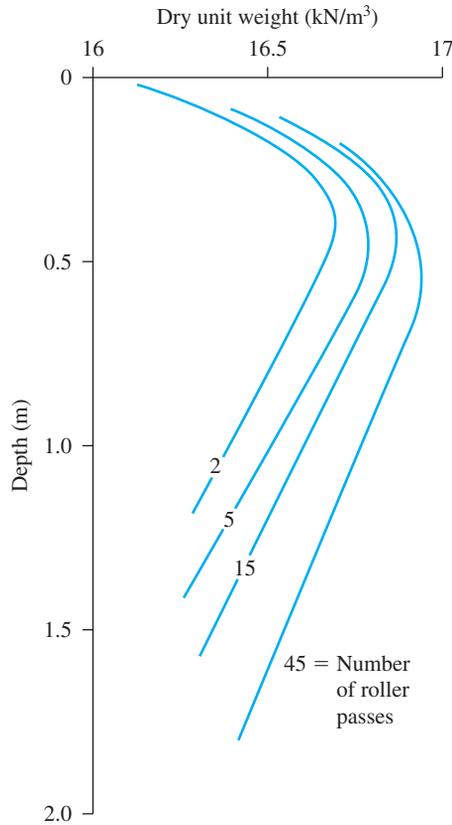

**Figure 16.5** Vibratory compaction of a sand: Variation of dry unit weight with depth and number of roller passes; lift thickness = 2.44 m (Based on D'Appolonia, D. J., Whitman, R. V. and D'Appolonia, E. (1969). "Sand Compaction with Vibratory Rollers," *Journal of the Soil Mechanics and Foundations Division*, American Society of Civil Engineers, Vol. 95, N. SM1, pp. 263–284.)

relative density (or dry unit weight) for a soil for a given number of passes is determined, for satisfactory compaction based on a given specification, the approximate thickness of each lift can be easily estimated.

Hand-held vibrating plates can be used for effective compaction of granular soils over a limited area. Vibrating plates are also gang-mounted on machines. These can be used in less restricted areas.


## 16.5 Compaction Control for Clay Hydraulic Barriers

Compacted clays are commonly used as hydraulic barriers in cores of earth dams, liners and covers of landfills, and liners of surface impoundments. Since the primary purpose of a barrier is to minimize flow, the hydraulic conductivity,  $k$ , is the controlling factor. In many cases, it is desired that the hydraulic conductivity be less than  $10^{-7}$  cm/s. This can be achieved by controlling the minimum degree of saturation during compaction, a relation that can be explained by referring to the compaction characteristics of three soils described in Table 16.3 (Othman and Luettich, 1994).


Figures 16.6, 16.7, and 16.8 show the standard and modified Proctor test results and the hydraulic conductivities of compacted specimens. Note that the solid symbols

**Table 16.3** Characteristics of Soils Reported in Figures 16.6, 16.7, and 16.8

Soil	Classification	Liquid limit	Plasticity index	Percent finer than No. 200 sieve (0.075 mm)
Wisconsin A	CL	34	16	85
Wisconsin B	CL	42	19	99
Wisconsin C	CH	84	60	71

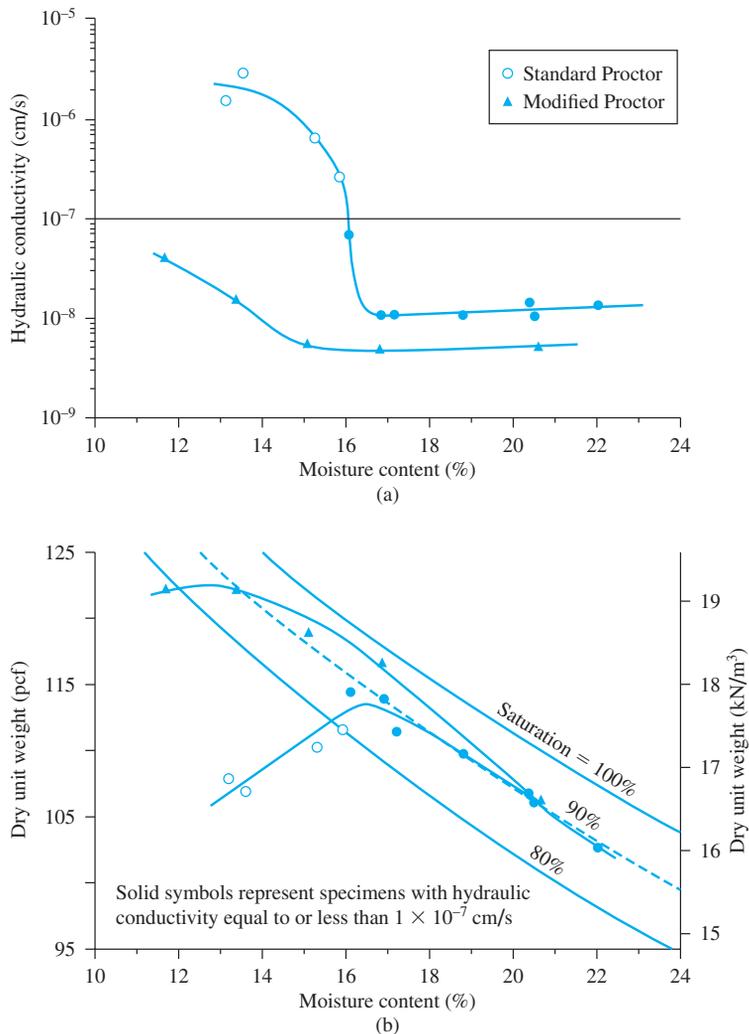



**Figure 16.6** Standard and Modified Proctor test results and hydraulic conductivity of Wisconsin A soil (Based on Othman, M. A., and S. M. Luettich, “Compaction Control Criteria for Clay Hydraulic Barriers,” *Transportation Research Record 1462*, Transportation Research Board, National Research Council, Washington, D.C., 1994.)

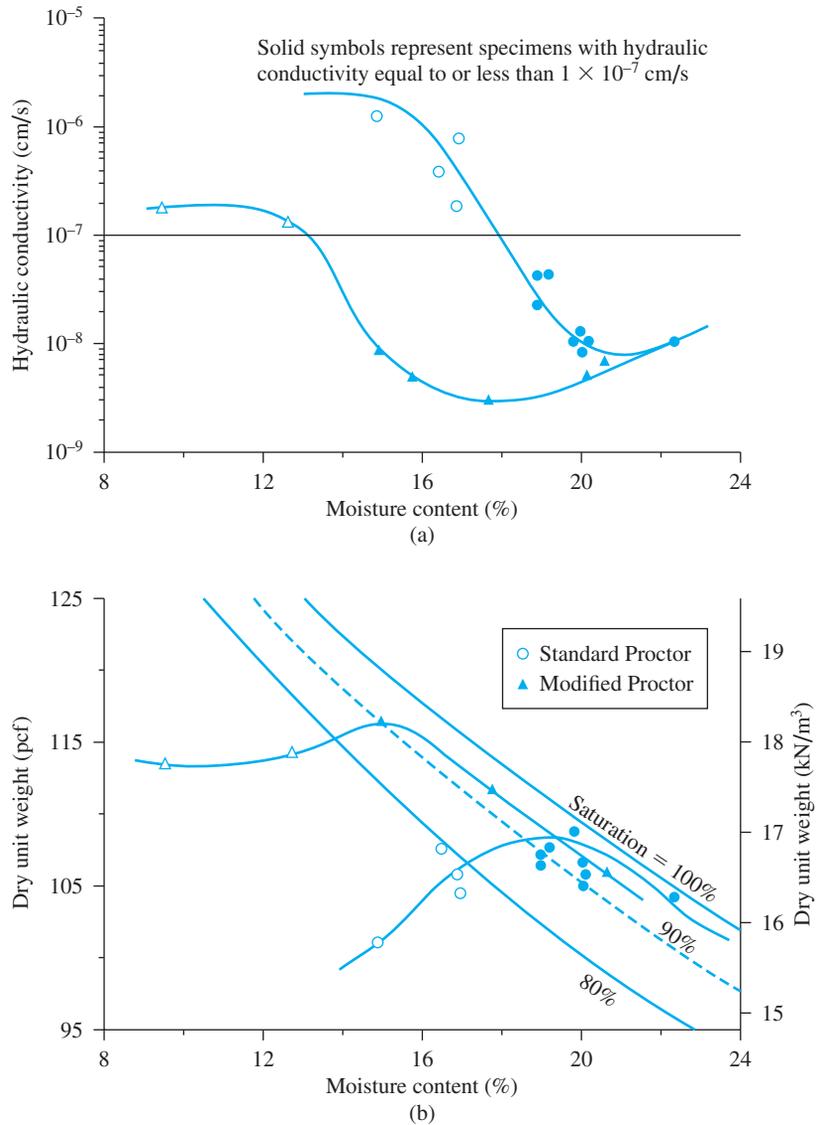

**Figure 16.7** Standard and Modified Proctor test results and hydraulic conductivity of Wisconsin B soil (Based on Othman, M. A., and S. M. Luetlich, "Compaction Control Criteria for Clay Hydraulic Barriers," *Transportation Research Record 1462*, Transportation Research Board, National Research Council, Washington, D.C., 1994.)

represent specimens with hydraulic conductivities of  $10^{-7}$  cm/s or less. As can be seen from these figures, the data points plot generally parallel to the line of full saturation. Figure 16.9 shows the effect of the degree of saturation during compaction on the hydraulic conductivity of the three soils. It is evident from the figure that, if it is desired that the maximum hydraulic conductivity be  $10^{-7}$  cm/s, then all soils should be compacted at a minimum degree of saturation of 88%.


In field compaction at a given site, soils of various composition may be encountered. Small changes in the content of fines will change the magnitude of hydraulic conductivity. Hence, considering the various soils likely to be encountered at a given site the procedure just described aids in developing a minimum-degree-of-saturation criterion for compaction to construct hydraulic barriers.

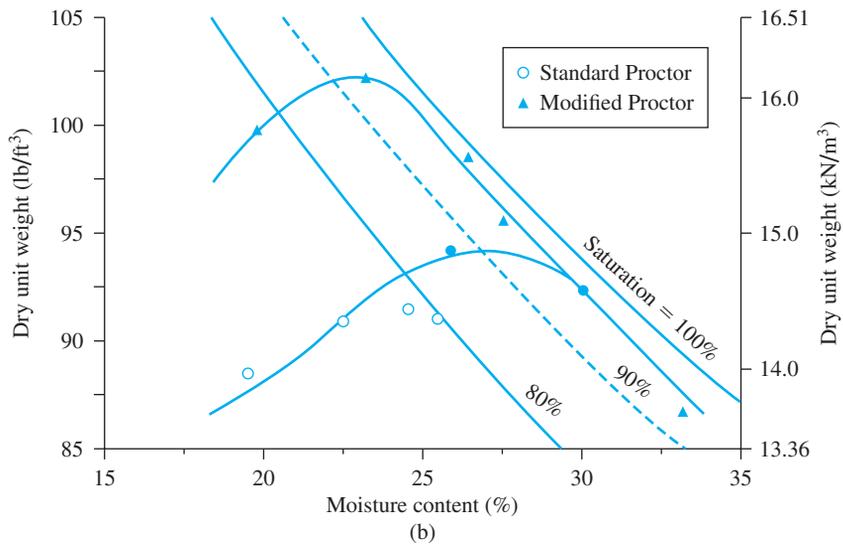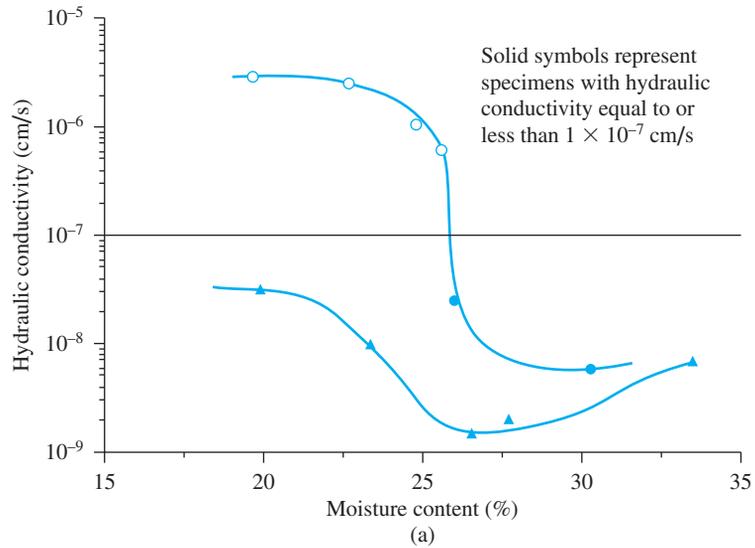

**Figure 16.8** Standard and Modified Proctor test results and hydraulic conductivity of Wisconsin C soil (Based on Othman, M. A., and S. M. Luettich, “Compaction Control Criteria for Clay Hydraulic Barriers,” *Transportation Research Record 1462*, Transportation Research Board, National Research Council, Washington, D.C., 1994.)

## 16.6 Vibroflotation

*Vibroflotation* is a technique developed in Germany in the 1930s for *in situ* densification of thick layers of loose granular soil deposits. Vibroflotation was first used in the United States about 10 years later. The process involves the use of a *vibroflot* (called the *vibrating unit*), as shown in Figure 16.10. The device is about 2 m (6 ft) in length. This vibrating unit has an eccentric weight inside it and can develop a centrifugal force. The weight enables the unit to vibrate horizontally. Openings at the bottom and top of the unit are for water jets. The

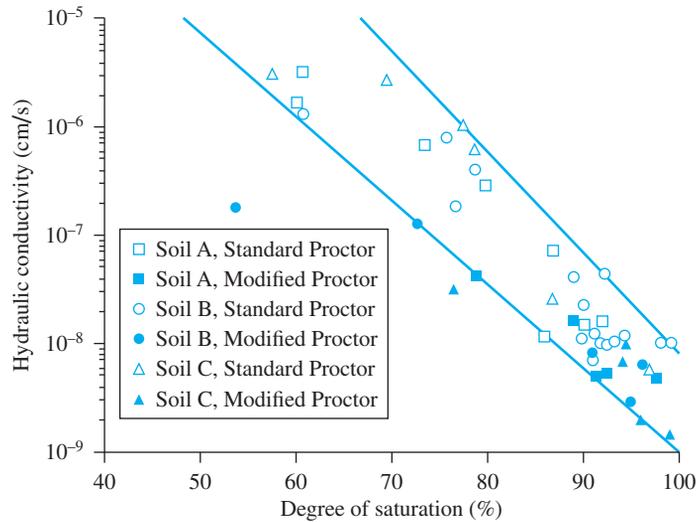


**Figure 16.9** Effect of degree of saturation on hydraulic conductivity of Wisconsin A, B, and C soils (After Othman and Luettich, 1994) (Based on Othman, M. A., and S. M. Luettich, “Compaction Control Criteria for Clay Hydraulic Barriers,” *Transportation Research Record 1462*, Transportation Research Board, National Research Council, Washington, D.C., 1994.)

vibrating unit is attached to a follow-up pipe. The figure shows the vibroflotation equipment necessary for compaction in the field.

The entire compaction process can be divided into four steps (see Figure 16.11):


- Step 1.* The jet at the bottom of the vibroflot is turned on, and the vibroflot is lowered into the ground.
- Step 2.* The water jet creates a quick condition in the soil, which allows the vibrating unit to sink.
- Step 3.* Granular material is poured into the top of the hole. The water from the lower jet is transferred to the jet at the top of the vibrating unit. This water carries the granular material down the hole.
- Step 4.* The vibrating unit is gradually raised in about 0.3-m (1-ft) lifts and is held vibrating for about 30 seconds at a time. This process compacts the soil to the desired unit weight.

Table 16.4 gives the details of various types of vibroflot unit used in the United States. The 30-HP electric units have been used since the latter part of the 1940s. The 100-HP units were introduced in the early 1970s. The zone of compaction around a single probe will vary according to the type of vibroflot used. The cylindrical zone of compaction will have a radius of about 2 m (6 ft) for a 30-HP unit and about 3 m (10 ft) for a 100-HP unit. Compaction by vibroflotation involves various probe spacings, depending on the zone of compaction. (See Figure 16.12.) Mitchell (1970) and Brown (1977) reported several successful cases of foundation design that used vibroflotation.

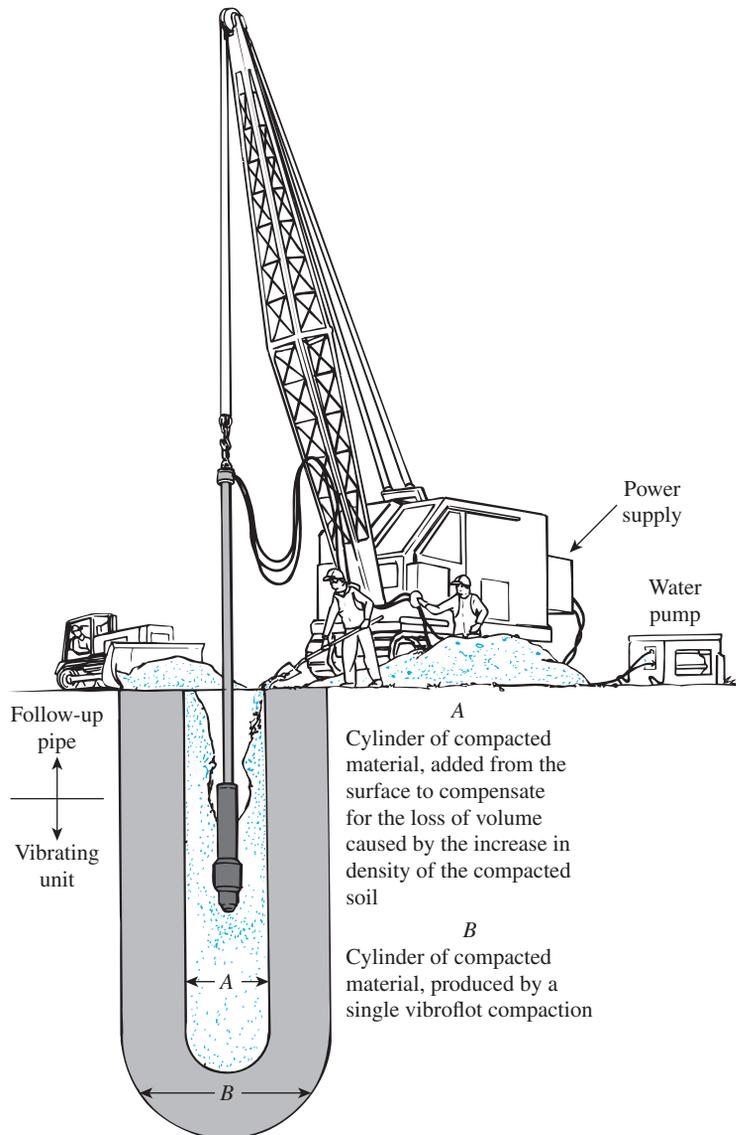

**Figure 16.10** Vibroflotation unit (Based on Brown, 1977.)

The success of densification of *in situ* soil depends on several factors, the most important of which are the grain-size distribution of the soil and the nature of the backfill used to fill the holes during the withdrawal period of the vibroflot. The range of the grain-size distribution of *in situ* soil marked Zone 1 in Figure 16.13 is most suitable for compaction by vibroflotation. Soils that contain excessive amounts of fine sand and silt-size particles are difficult to compact; for such soils, considerable effort is needed to reach the proper relative density of compaction. Zone 2 in Figure 16.13 is the approximate lower limit of grain-size

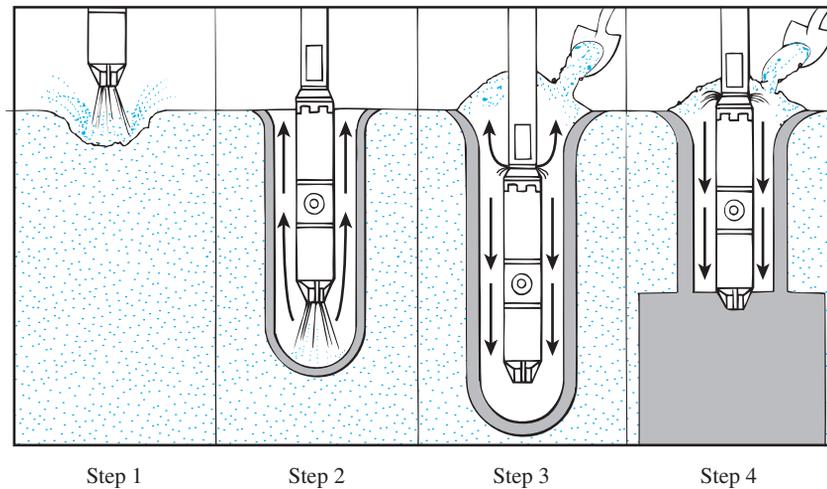

**Figure 16.11** Compaction by the vibroflotation process (Based on Brown, 1977.)

**Table 16.4** Types of Vibrating Units<sup>a</sup>


	100-HP electric and hydraulic motors	30-HP electric motors
(a) Vibrating tip		
Length	2.1 m (7 ft)	1.86 m (6.11 ft)
Diameter	406 mm (16 in.)	381 mm (15 in.)
Weight	18 kN (4000 lb)	18 kN (4000 lb)
Maximum movement when free	12.5 mm (0.49 in.)	7.6 mm (0.3 in.)
Centrifugal force	160 kN (18 ton)	90 kN (10 ton)
(b) Eccentric		
Weight	1.16 kN (260 lb)	0.76 kN (170 lb)
Offset	38 mm (1.5 in.)	32 mm (1.25 in.)
Length	610 mm (24 in.)	387 mm (15.3 in.)
Speed	1800 rpm	1800 rpm
(c) Pump		
Operating flow rate	0–1.6 m <sup>3</sup> /min (0–400 gal/min)	0–0.6 m <sup>3</sup> /min (0–150 gal/min)
Pressure	690–1035 kN/m <sup>2</sup> (100–150 lb/in <sup>2</sup> )	690–1035 kN/m <sup>2</sup> (100–150 lb/in <sup>2</sup> )

(continued)


**Table 16.4** (continued)

(d) Lower follow-up pipe and extensions		
Diameter	305 mm (12 in.)	305 mm (12 in.)
Weight	3.65 kN/m (250 lb/ft)	3.65 kN/m (250 lb/ft)

<sup>a</sup>Based on data from Brown, E. E. (1977), “Vibroflotation Compaction of Cohesionless Soils,” *Journal of the Geotechnical Engineering Divison*, Vol. 103, No. GT12

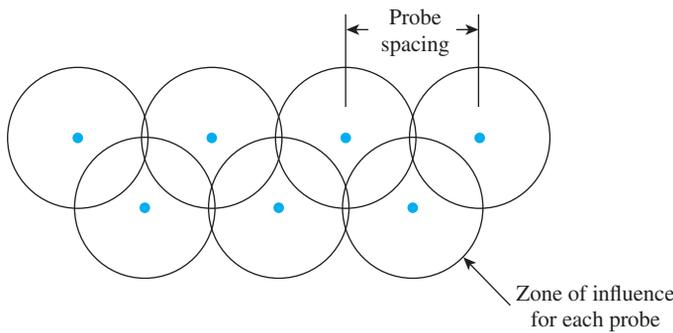

**Figure 16.12** Nature of probe spacing for vibroflotation

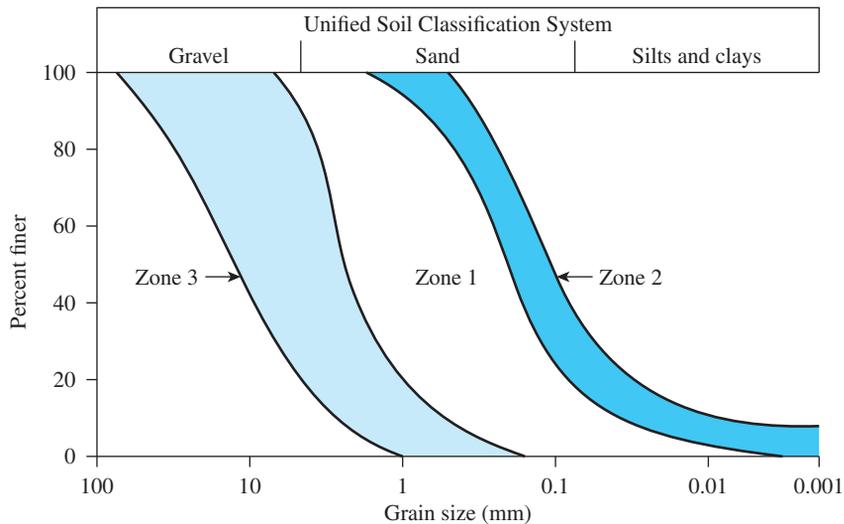

**Figure 16.13** Effective range of grain-size distribution of soil for vibroflotation

distribution for compaction by vibroflotation. Soil deposits whose grain-size distribution falls into Zone 3 contain appreciable amounts of gravel. For these soils, the rate of probe penetration may be rather slow, so compaction by vibroflotation might prove to be uneconomical in the long run.

The grain-size distribution of the backfill material is one of the factors that control the rate of densification. Brown (1977) defined a quantity called *suitability number* for rating a backfill material. The suitability number is given by the formula

$$S_N = 1.7 \sqrt{\frac{3}{(D_{50})^2} + \frac{1}{(D_{20})^2} + \frac{1}{(D_{10})^2}} \quad (16.17)$$

where  $D_{50}$ ,  $D_{20}$ , and  $D_{10}$  are the diameters (in mm) through which 50%, 20%, and 10%, respectively, of the material is passing. The smaller the value of  $S_N$ , the more desirable is the backfill material. Following is a backfill rating system proposed by Brown (1977):


Range of $S_N$	Rating as backfill
0–10	Excellent
10–20	Good
20–30	Fair
30–50	Poor
>50	Unsuitable

An excellent case study that evaluated the benefits of vibroflotation was presented by Basore and Boitano (1969). Densification of granular subsoil was necessary for the construction of a three-story office building at the Treasure Island Naval Station in San Francisco, California. The top 9 m ( $\approx 30$  ft) of soil at the site was loose to medium-dense sand fill that had to be compacted. Figure 16.14a shows the nature of the layout of the vibroflotation points. Sixteen compaction points were arranged in groups of four, with 1.22 m (4 ft), 1.52 m (5 ft), 1.83 m (6 ft), and 2.44 m (8 ft) spacing. Prior to compaction, standard penetration tests were conducted at the centers of groups of three compaction points. After the completion of compaction by vibroflotation, the variation of the standard penetration resistance with depth was determined at the same points.

Figure 16.14b shows the variation of standard penetration resistance,  $N_{60}$ , with depth before and after compaction for vibroflotation point spacings  $S' = 1.22$  m (4 ft) and 2.44 m (8 ft). From this figure, the following general conclusions can be drawn:

- For any given  $S'$ , the magnitude of  $N_{60}$  after compaction decreases with an increase in depth.
- An increase in  $N_{60}$  indicates an increase in the relative density of sand.
- The degree of compaction decreases with the increase in  $S'$ . At  $S' = 1.22$  m (4 ft), the degree of compaction at any depth is the largest. However, at  $S' = 2.44$  m (8 ft), the vibroflotation had practically no effect in compacting soil.

During the past 30 to 35 years, the vibroflotation technique has been used successfully on large projects to compact granular subsoils, thereby controlling structural settlement.

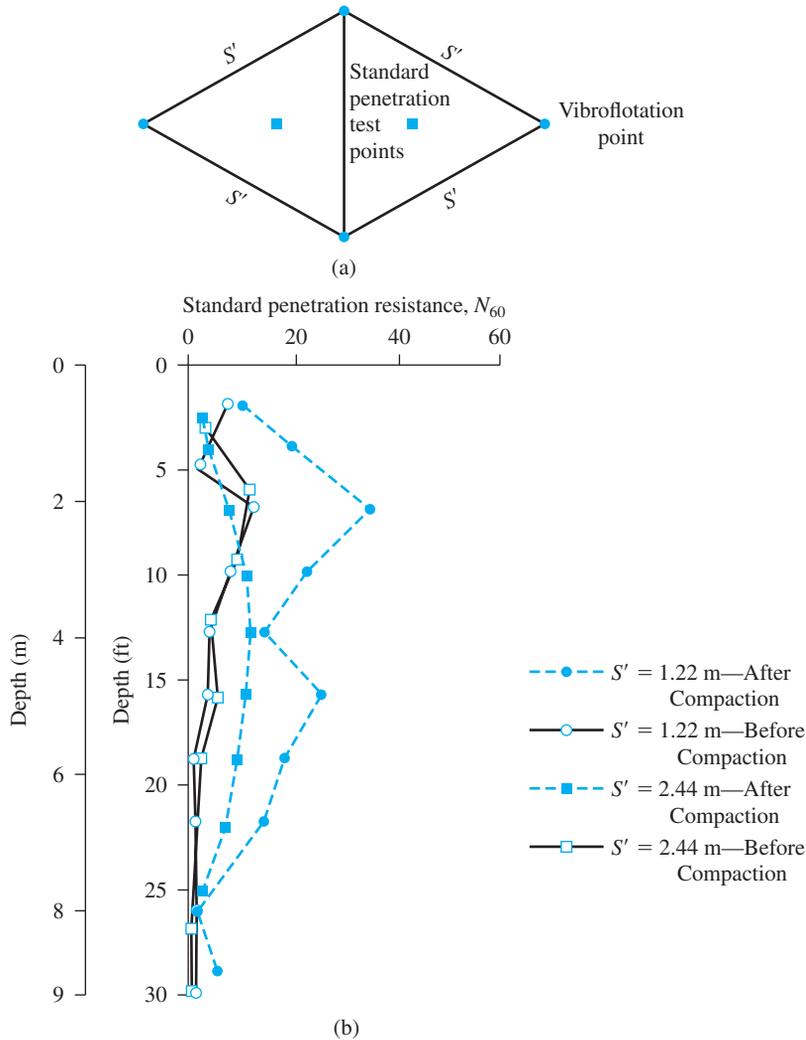

**Figure 16.14** (a) Layout of vibroflotation compaction points; (b) variation of standard penetration resistance ( $N_{60}$ ) before and after compaction (Based on Basore, C. E. and Boitano, J. D. (1969). “Sand Densification by Piles and Vibrofloatation,” *Journal of Soil Mechanics and Foundation Engineering Division*, American Society of Civil Engineers, Vol. 95, No. 6, pp. 1301–1323, Figure 16.)

## 16.7 Blasting

Blasting is a technique that has been used successfully in many projects (Mitchell, 1970) for the densification of granular soils. The general soil grain sizes suitable for compaction by blasting are the same as those for compaction by vibroflotation. The process involves the detonation of explosive charges such as 60% dynamite at a certain

depth below the ground surface in saturated soil. The lateral spacing of the charges varies from about 3 to 9 m (10 to 30 ft). Three to five successful detonations are usually necessary to achieve the desired compaction. Compaction (up to a relative density of about 80%) up to a depth of about 18 m (60 ft) over a large area can easily be achieved by using this process. Usually, the explosive charges are placed at a depth of about two-thirds of the thickness of the soil layer desired to be compacted. The sphere of influence of compaction by a 60% dynamite charge can be given as follows (Mitchell, 1970):

$$r = \sqrt{\frac{W_{EX}}{C}} \quad (16.18)$$


where  $r$  = sphere of influence

$W_{EX}$  = weight of explosive – 60% dynamite

$C = 0.0122$  when  $W_{EX}$  is in kg and  $r$  is in m

= 0.0025 when  $W_{EX}$  is in lb and  $r$  is in ft

Figure 16.15 shows the test results of soil densification by blasting in an area measuring 15 m by 9 m (50 ft by 30 ft) (Mitchell, 1970). For these tests, twenty 2.09-kg (4.6-lb) charges of Gelamite No. 1 (Hercules Powder Company, Wilmington, Delaware) were used.

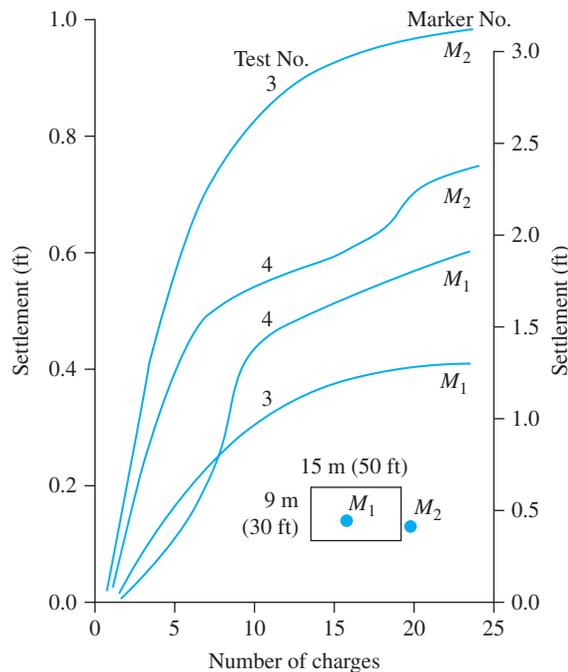

**Figure 16.15** Ground settlement as a function of number of explosive charges

## 16.8 Precompression

When highly compressible, normally consolidated clayey soil layers lie at a limited depth and large consolidation settlements are expected as the result of the construction of large buildings, highway embankments, or earth dams, precompression of soil may be used to minimize postconstruction settlement. The principles of precompression are best explained by reference to Figure 16.16. Here, the proposed structural load per unit area is  $\Delta\sigma'_{(p)}$ , and the thickness of the clay layer undergoing consolidation is  $H_c$ . The maximum primary consolidation settlement caused by the structural load is then

$$S_{c(p)} = \frac{C_c H_c}{1 + e_o} \log \frac{\sigma'_o + \Delta\sigma'_{(p)}}{\sigma'_o} \quad (16.19)$$

The settlement–time relationship under the structural load will be like that shown in Figure 16.16b. However, if a surcharge of  $\Delta\sigma'_{(p)} + \Delta\sigma'_{(f)}$  is placed on the ground, the primary consolidation settlement will be

$$S_{c(p+f)} = \frac{C_c H_c}{1 + e_o} \log \frac{\sigma'_o + [\Delta\sigma'_{(p)} + \Delta\sigma'_{(f)}]}{\sigma'_o} \quad (16.20)$$

The settlement–time relationship under a surcharge of  $\Delta\sigma'_{(p)} + \Delta\sigma'_{(f)}$  is also shown in Figure 16.16b. Note that a total settlement of  $S_{c(p)}$  would occur at time  $t_2$ , which is much shorter than  $t_1$ . So, if a temporary total surcharge of  $\Delta\sigma'_{(p)} + \Delta\sigma'_{(f)}$  is applied on the ground surface for time  $t_2$ , the settlement will equal  $S_{c(p)}$ . At that time, if the surcharge is removed and a structure with a permanent load per unit area of  $\Delta\sigma'_{(p)}$  is built, no appreciable settlement will occur. The procedure just described is called *precompression*. The total surcharge  $\Delta\sigma'_{(p)} + \Delta\sigma'_{(f)}$  can be applied by means of temporary fills.

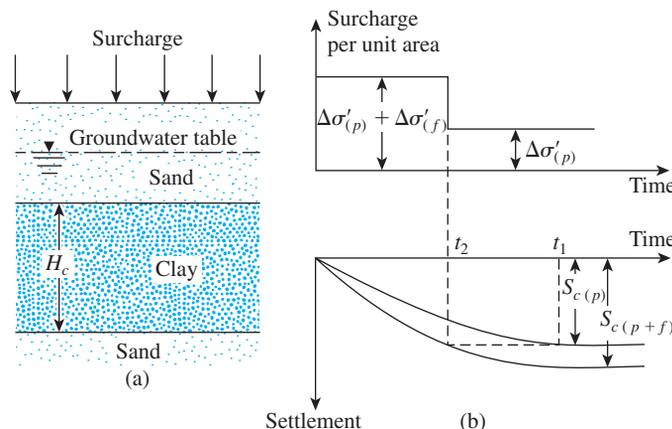


Figure 16.16 Principles of precompression

## Derivation of Equations for Obtaining $\Delta\sigma'_{(f)}$ and $t_2$


Figure 16.16b shows that, under a surcharge of  $\Delta\sigma'_{(p)} + \Delta\sigma'_{(f)}$ , the degree of consolidation at time  $t_2$  after the application of the load is

$$U = \frac{S_{c(p)}}{S_{c(p+f)}} \quad (16.21)$$

Substitution of Eqs. (16.19) and (16.20) into Eq. (16.21) yields

$$U = \frac{\log\left[\frac{\sigma'_o + \Delta\sigma'_{(p)}}{\sigma'_o}\right]}{\log\left[\frac{\sigma'_o + \Delta\sigma'_{(p)} + \Delta\sigma'_{(f)}}{\sigma'_o}\right]} = \frac{\log\left[1 + \frac{\Delta\sigma'_{(p)}}{\sigma'_o}\right]}{\log\left\{1 + \frac{\Delta\sigma'_{(p)}}{\sigma'_o}\left[1 + \frac{\Delta\sigma'_{(f)}}{\Delta\sigma'_{(p)}}\right]\right\}} \quad (16.22)$$

Figure 16.17 gives magnitudes of  $U$  for various combinations of  $\Delta\sigma'_{(p)}/\sigma'_o$ , and  $\Delta\sigma'_{(f)}/\Delta\sigma'_{(p)}$ . The degree of consolidation referred to in Eq. (16.22) is actually the average degree of consolidation at time  $t_2$ , as shown in Figure 16.17b. However, if the average degree of consolidation is used to determine  $t_2$ , some construction problems might occur. The reason is that, after the removal of the surcharge and placement of the structural load, the portion of clay close to the drainage surface will continue to swell, and the soil close to the midplane will continue to settle. (See Figure 16.18.) In some cases, net continuous

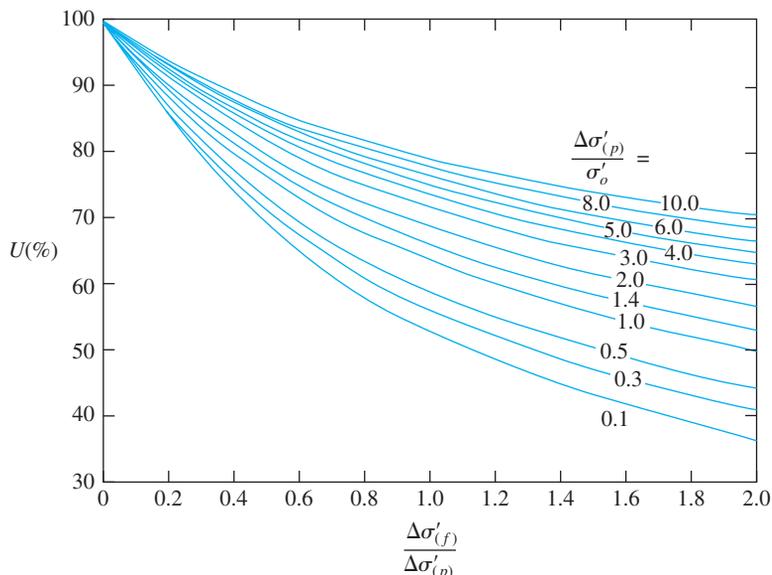

**Figure 16.17** Plot of  $U$  against  $\Delta\sigma'_{(f)}/\Delta\sigma'_{(p)}$  for various values of  $\Delta\sigma'_{(p)}/\sigma'_o$ —Eq. (16.22)

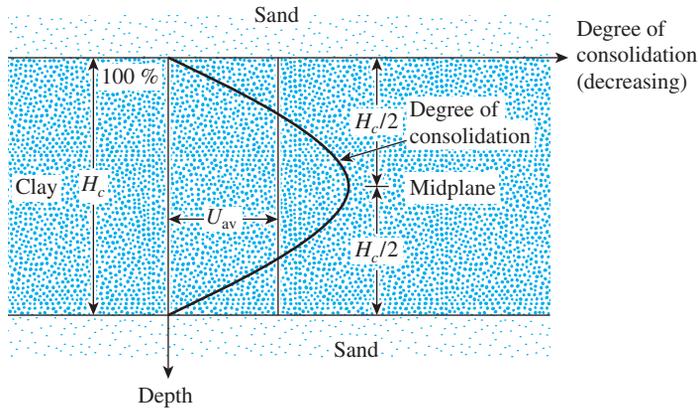


Figure 16.18

settlement might result. A conservative approach may solve the problem; that is, assume that  $U$  in Eq. (16.22) is the midplane degree of consolidation (Johnson, 1970a). Now, from Eq. (2.77),

$$U = f(T_v) \quad (2.77)$$

where

$T_v$  = time factor =  $C_v t_2 / H^2$

$C_v$  = coefficient of consolidation

$t_2$  = time

$H$  = maximum drainage path ( $=H_c/2$  for two-way drainage and  $H_c$  for one-way drainage)

The variation of  $U$  (the midplane degree of consolidation) with  $T_v$  is given in Figure 16.19.

## Procedure for Obtaining Precompression Parameters


Two problems may be encountered by engineers during precompression work in the field:

1. The value of  $\Delta\sigma'_{(f)}$  is known, but  $t_2$  must be obtained. In such a case, obtain  $\sigma'_o$ ,  $\Delta\sigma'_{(p)}$ , and solve for  $U$ , using Eq. (16.22) or Figure 16.17. For this value of  $U$ , obtain  $T_v$  from Figure 16.19. Then

$$t_2 = \frac{T_v H^2}{C_v} \quad (16.23)$$

2. For a specified value of  $t_2$ ,  $\Delta\sigma'_{(f)}$  must be obtained. In such a case, calculate  $T_v$ . Then use Figure 16.19 to obtain the midplane degree of consolidation,  $U$ . With the estimated value of  $U$ , go to Figure 16.17 to get the required value of  $\Delta\sigma'_{(f)}/\Delta\sigma'_{(p)}$ , and then calculate  $\Delta\sigma'_{(f)}$ .

Several case histories on the successful use of precompression techniques for improving foundation soil are available in the literature (for example, Johnson, 1970a).

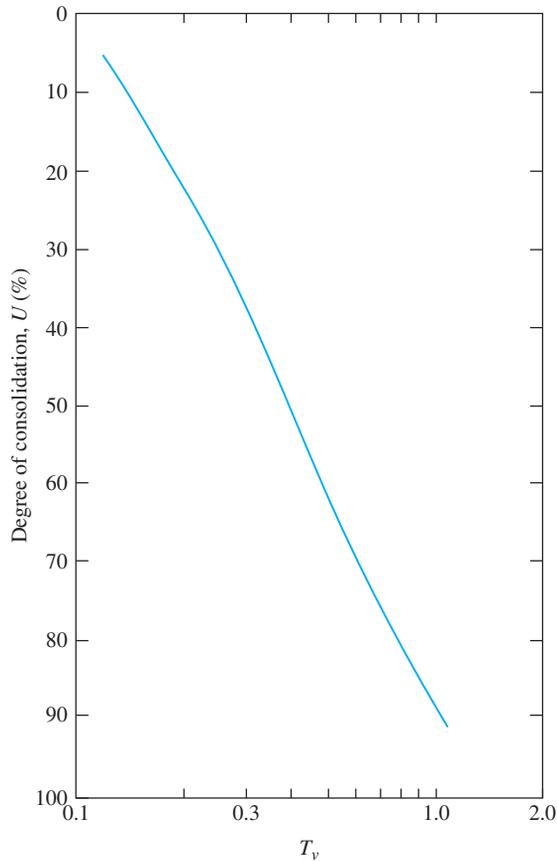

**Figure 16.19** Plot of midplane degree of consolidation against  $T_v$

### Example 16.4

Examine Figure 16.16. During the construction of a highway bridge, the average permanent load on the clay layer is expected to increase by about  $115 \text{ kN/m}^2$ . The average effective overburden pressure at the middle of the clay layer is  $210 \text{ kN/m}^2$ . Here,  $H_c = 6 \text{ m}$ ,  $C_c = 0.28$ ,  $e_o = 0.9$ , and  $C_v = 0.36 \text{ m}^2/\text{mo}$ . The clay is normally consolidated. Determine

- The total primary consolidation settlement of the bridge without precompression
- The surcharge,  $\Delta\sigma'_{(f)}$ , needed to eliminate the entire primary consolidation settlement in nine months by precompression.

### Solution

Part a

The total primary consolidation settlement may be calculated from Eq. (16.19):

$$\begin{aligned}
 S_{c(p)} &= \frac{C_c H_c}{1 + e_o} \log \left[ \frac{\sigma'_o + \Delta\sigma'_{(p)}}{\sigma'_o} \right] = \frac{(0.28)(6)}{1 + 0.9} \log \left[ \frac{210 + 115}{210} \right] \\
 &= 0.1677 \text{ m} = \mathbf{167.7 \text{ mm}}
 \end{aligned}$$

Part b

We have

$$T_v = \frac{C_v t_2}{H^2}$$

$$C_v = 0.36 \text{ m}^2/\text{mo.}$$

$$H = 3 \text{ m (two-way drainage)}$$

$$t_2 = 9 \text{ mo.}$$

Hence,

$$T_v = \frac{(0.36)(9)}{3^2} = 0.36$$

According to Figure 16.19, for  $T_v = 0.36$ , the value of  $U$  is 47%. Now,

$$\Delta\sigma'_{(p)} = 115 \text{ kN/m}^2$$

and

$$\sigma'_o = 210 \text{ kN/m}^2$$

so

$$\frac{\Delta\sigma'_{(p)}}{\sigma'_o} = \frac{115}{210} = 0.548$$

According to Figure 16.17, for  $U = 47\%$  and  $\Delta\sigma'_{(p)}/\sigma'_o = 0.548$ ,  $\Delta\sigma'_{(f)}/\Delta\sigma'_{(p)} \approx 1.8$ ; thus,

$$\Delta\sigma'_{(f)} = (1.8)(115) = \mathbf{207 \text{ kN/m}^2} \quad \blacksquare$$

## 16.9 Sand Drains

The use of sand drains is another way to accelerate the consolidation settlement of soft, normally consolidated clay layers and achieve precompression before the construction of a desired foundation. Sand drains are constructed by drilling holes through the clay layer(s) in the field at regular intervals. The holes are then backfilled with sand. This can be achieved by several means, such as (a) rotary drilling and then backfilling with sand; (b) drilling by continuous-flight auger with a hollow stem and backfilling with sand (through the hollow stem); and (c) driving hollow steel piles. The soil inside the pile is then jetted out, after which backfilling with sand is done. Figure 16.20 shows a schematic diagram of sand drains. After backfilling the drill holes with sand, a surcharge is applied at the ground surface. The surcharge will increase the pore water pressure in the clay. The excess pore water pressure in the clay will be dissipated by drainage—both vertically and radially to the sand drains—thereby accelerating settlement of the clay layer. In Figure 16.20a, note that the radius of the sand drains is  $r_w$ . Figure 16.20b shows the plan of the layout of the sand drains. The effective zone from which the radial drainage will be directed toward a given sand drain is approximately cylindrical, with a diameter of  $d_e$ .

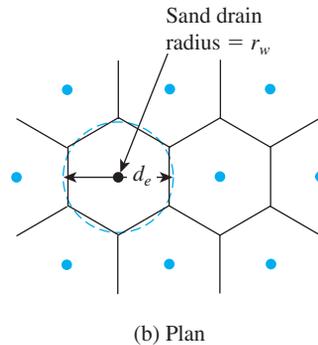
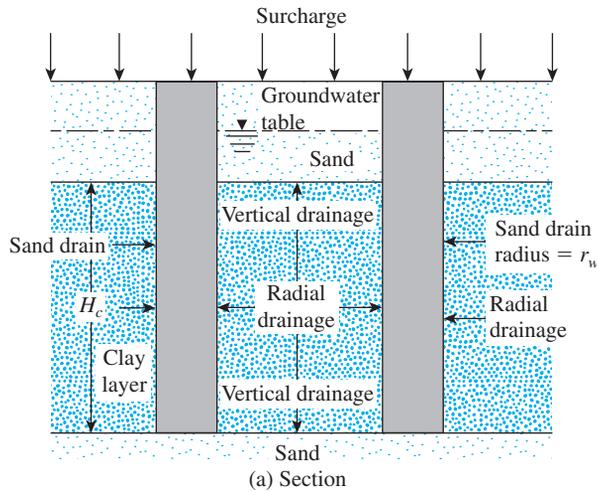


Figure 16.20 Sand drains

To determine the surcharge that needs to be applied at the ground surface and the length of time that it has to be maintained, see Figure 16.16 and use the corresponding equation, Eq. (16.22):

$$U_{v,r} = \frac{\log \left[ 1 + \frac{\Delta\sigma'_{(p)}}{\sigma'_o} \right]}{\log \left\{ 1 + \frac{\Delta\sigma'_{(p)}}{\sigma'_o} \left[ 1 + \frac{\Delta\sigma'_{(f)}}{\Delta\sigma'_{(p)}} \right] \right\}} \quad (16.24)$$

The notations  $\Delta\sigma'_{(p)}$ ,  $\sigma'_o$ , and  $\Delta\sigma'_{(f)}$  are the same as those in Eq. (16.22); however, the left-hand side of Eq. (16.24) is the *average degree* of consolidation instead of the degree of consolidation at midplane. Both *radial* and *vertical* drainage contribute to the average degree of consolidation. If  $U_{v,r}$  can be determined for any time  $t_2$  (see Figure 16.16b), the

total surcharge  $\Delta\sigma'_{(f)} + \Delta\sigma'_{(p)}$  may be obtained easily from Figure 16.17. The procedure for determining the average degree of consolidation ( $U_{v,r}$ ) follows:

For a given surcharge and duration,  $t_2$ , the average degree of consolidation due to drainage in the vertical and radial directions is

$$U_{v,r} = 1 - (1 - U_r)(1 - U_v) \quad (16.25)$$

where

$U_r$  = average degree of consolidation with radial drainage only

$U_v$  = average degree of consolidation with vertical drainage only

The successful use of sand drains has been described in detail by Johnson (1970b). As with precompression, constant field settlement observations may be necessary during the period the surcharge is applied.

### Average Degree of Consolidation Due to Radial Drainage Only

Figure 16.21 shows a schematic diagram of a sand drain. In the figure,  $r_w$  is the radius of the sand drain and  $r_e = d_e/2$  is the radius of the effective zone of drainage. It is also important to realize that, during the installation of sand drains, a certain zone of clay surrounding them is smeared, thereby changing the hydraulic conductivity of the clay. In the figure,  $r_s$  is the radial distance from the center of the sand drain to the farthest point of the smeared zone. Now, for the average-degree-of-consolidation relationship, we will use the *theory of equal strain*. Two cases may arise that relate to the nature of the application of surcharge, and they are shown in Figure 16.22. (See the notations shown in Figure 16.16). Either (a) the entire surcharge is applied instantaneously (see Figure 16.22a), or (b) the surcharge is applied in the form of a ramp load (see Figure 16.22b). When the entire surcharge is applied instantaneously (Barron, 1948),

$$U_r = 1 - \exp\left(\frac{-8T_r}{m}\right) \quad (16.26)$$


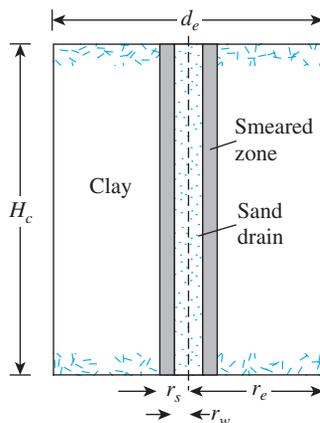


Figure 16.21 Schematic diagram of a sand drain

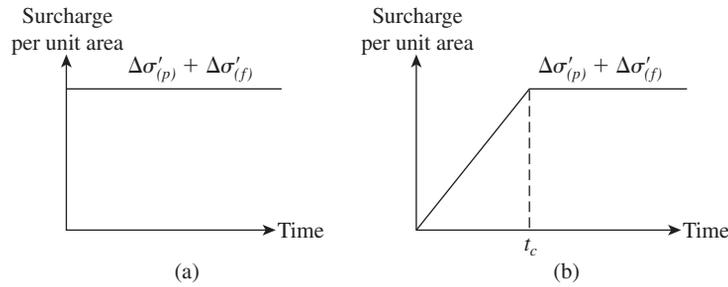

**Figure 16.22** Nature of application of surcharge

where

$$m = \frac{n^2}{n^2 - S^2} \ln \left( \frac{n}{S} \right) - \frac{3}{4} + \frac{S^2}{4n^2} + \frac{k_h}{k_s} \left( \frac{n^2 - S^2}{n^2} \right) \ln S \quad (16.27)$$

in which

$$n = \frac{d_e}{2r_w} = \frac{r_e}{r_w} \quad (16.28)$$

$$S = \frac{r_s}{r_w} \quad (16.29)$$

and

$$k_h = \text{hydraulic conductivity of clay in the horizontal direction in the unsmeared zone}$$

$$k_s = \text{horizontal hydraulic conductivity in the smeared zone}$$

$$T_r = \text{nondimensional time factor for radial drainage only} = \frac{C_{vr} t_2}{d_e^2} \quad (16.30)$$

$C_{vr}$  = coefficient of consolidation for radial drainage

$$= \frac{k_h}{\left[ \frac{\Delta e}{\Delta \sigma' (1 + e_{av})} \right] \gamma_w} \quad (16.31)$$

For a *no-smear case*,  $r_s = r_w$  and  $k_h = k_s$ , so  $S = 1$  and Eq. (16.27) becomes

$$m = \left( \frac{n^2}{n^2 - 1} \right) \ln(n) - \frac{3n^2 - 1}{4n^2} \quad (16.32)$$

Table 16.5 gives the values of  $U_r$  for various values of  $T_r$  and  $n$ .

**Table 16.5** Variation of  $U_r$  for Various Values of  $T_r$  and  $n$ , No-Smear Case [Eqs. (16.26) and (16.32)]

Degree of consolidation $U_r$ (%)	Time factor $T_r$ for value of $n$ ( $= r_e/r_w$ )				
	5	10	15	20	25
0	0	0	0	0	0
1	0.0012	0.0020	0.0025	0.0028	0.0031
2	0.0024	0.0040	0.0050	0.0057	0.0063
3	0.0036	0.0060	0.0075	0.0086	0.0094
4	0.0048	0.0081	0.0101	0.0115	0.0126
5	0.0060	0.0101	0.0126	0.0145	0.0159
6	0.0072	0.0122	0.0153	0.0174	0.0191
7	0.0085	0.0143	0.0179	0.0205	0.0225
8	0.0098	0.0165	0.0206	0.0235	0.0258
9	0.0110	0.0186	0.0232	0.0266	0.0292
10	0.0123	0.0208	0.0260	0.0297	0.0326
11	0.0136	0.0230	0.0287	0.0328	0.0360
12	0.0150	0.0252	0.0315	0.0360	0.0395
13	0.0163	0.0275	0.0343	0.0392	0.0431
14	0.0177	0.0298	0.0372	0.0425	0.0467
15	0.0190	0.0321	0.0401	0.0458	0.0503
16	0.0204	0.0344	0.0430	0.0491	0.0539
17	0.0218	0.0368	0.0459	0.0525	0.0576
18	0.0232	0.0392	0.0489	0.0559	0.0614
19	0.0247	0.0416	0.0519	0.0594	0.0652
20	0.0261	0.0440	0.0550	0.0629	0.0690
21	0.0276	0.0465	0.0581	0.0664	0.0729
22	0.0291	0.0490	0.0612	0.0700	0.0769
23	0.0306	0.0516	0.0644	0.0736	0.0808
24	0.0321	0.0541	0.0676	0.0773	0.0849
25	0.0337	0.0568	0.0709	0.0811	0.0890
26	0.0353	0.0594	0.0742	0.0848	0.0931
27	0.0368	0.0621	0.0776	0.0887	0.0973
28	0.0385	0.0648	0.0810	0.0926	0.1016
29	0.0401	0.0676	0.0844	0.0965	0.1059
30	0.0418	0.0704	0.0879	0.1005	0.1103
31	0.0434	0.0732	0.0914	0.1045	0.1148
32	0.0452	0.0761	0.0950	0.1087	0.1193
33	0.0469	0.0790	0.0987	0.1128	0.1239
34	0.0486	0.0820	0.1024	0.1171	0.1285
35	0.0504	0.0850	0.1062	0.1214	0.1332
36	0.0522	0.0881	0.1100	0.1257	0.1380
37	0.0541	0.0912	0.1139	0.1302	0.1429
38	0.0560	0.0943	0.1178	0.1347	0.1479
39	0.0579	0.0975	0.1218	0.1393	0.1529
40	0.0598	0.1008	0.1259	0.1439	0.1580
41	0.0618	0.1041	0.1300	0.1487	0.1632
42	0.0638	0.1075	0.1342	0.1535	0.1685
43	0.0658	0.1109	0.1385	0.1584	0.1739
44	0.0679	0.1144	0.1429	0.1634	0.1793

Table 16.5 (continued)

Degree of consolidation $U_r$ (%)	Time factor $T_r$ for value of $n (= r_e/r_w)$				
	5	10	15	20	25
45	0.0700	0.1180	0.1473	0.1684	0.1849
46	0.0721	0.1216	0.1518	0.1736	0.1906
47	0.0743	0.1253	0.1564	0.1789	0.1964
48	0.0766	0.1290	0.1611	0.1842	0.2023
49	0.0788	0.1329	0.1659	0.1897	0.2083
50	0.0811	0.1368	0.1708	0.1953	0.2144
51	0.0835	0.1407	0.1758	0.2020	0.2206
52	0.0859	0.1448	0.1809	0.2068	0.2270
53	0.0884	0.1490	0.1860	0.2127	0.2335
54	0.0909	0.1532	0.1913	0.2188	0.2402
55	0.0935	0.1575	0.1968	0.2250	0.2470
56	0.0961	0.1620	0.2023	0.2313	0.2539
57	0.0988	0.1665	0.2080	0.2378	0.2610
58	0.1016	0.1712	0.2138	0.2444	0.2683
59	0.1044	0.1759	0.2197	0.2512	0.2758
60	0.1073	0.1808	0.2258	0.2582	0.2834
61	0.1102	0.1858	0.2320	0.2653	0.2912
62	0.1133	0.1909	0.2384	0.2726	0.2993
63	0.1164	0.1962	0.2450	0.2801	0.3075
64	0.1196	0.2016	0.2517	0.2878	0.3160
65	0.1229	0.2071	0.2587	0.2958	0.3247
66	0.1263	0.2128	0.2658	0.3039	0.3337
67	0.1298	0.2187	0.2732	0.3124	0.3429
68	0.1334	0.2248	0.2808	0.3210	0.3524
69	0.1371	0.2311	0.2886	0.3300	0.3623
70	0.1409	0.2375	0.2967	0.3392	0.3724
71	0.1449	0.2442	0.3050	0.3488	0.3829
72	0.1490	0.2512	0.3134	0.3586	0.3937
73	0.1533	0.2583	0.3226	0.3689	0.4050
74	0.1577	0.2658	0.3319	0.3795	0.4167
75	0.1623	0.2735	0.3416	0.3906	0.4288
76	0.1671	0.2816	0.3517	0.4021	0.4414
77	0.1720	0.2900	0.3621	0.4141	0.4546
78	0.1773	0.2988	0.3731	0.4266	0.4683
79	0.1827	0.3079	0.3846	0.4397	0.4827
80	0.1884	0.3175	0.3966	0.4534	0.4978
81	0.1944	0.3277	0.4090	0.4679	0.5137
82	0.2007	0.3383	0.4225	0.4831	0.5304
83	0.2074	0.3496	0.4366	0.4992	0.5481
84	0.2146	0.3616	0.4516	0.5163	0.5668
85	0.2221	0.3743	0.4675	0.5345	0.5868
86	0.2302	0.3879	0.4845	0.5539	0.6081
87	0.2388	0.4025	0.5027	0.5748	0.6311
88	0.2482	0.4183	0.5225	0.5974	0.6558
89	0.2584	0.4355	0.5439	0.6219	0.6827

(continued)

Table 16.5 (continued)

Degree of consolidation $U_r$ (%)	Time factor $T_r$ for value of $n (= r_e/r_w)$				
	5	10	15	20	25
90	0.2696	0.4543	0.5674	0.6487	0.7122
91	0.2819	0.4751	0.5933	0.6784	0.7448
92	0.2957	0.4983	0.6224	0.7116	0.7812
93	0.3113	0.5247	0.6553	0.7492	0.8225
94	0.3293	0.5551	0.6932	0.7927	0.8702
95	0.3507	0.5910	0.7382	0.8440	0.9266
96	0.3768	0.6351	0.7932	0.9069	0.9956
97	0.4105	0.6918	0.8640	0.9879	1.0846
98	0.4580	0.7718	0.9640	1.1022	1.2100
99	0.5391	0.9086	1.1347	1.2974	1.4244

If the surcharge is applied in the form of a *ramp* and *there is no smear*, then (Olson, 1977)

$$U_r = \frac{T_r - \frac{1}{A} [1 - \exp(-AT_r)]}{T_{rc}} \quad (\text{for } T_r \leq T_{rc}) \quad (16.33)$$

and

$$U_r = 1 - \frac{1}{AT_{rc}} [\exp(AT_{rc}) - 1] \exp(-AT_{rc}) \quad (\text{for } T_r \geq T_{rc}) \quad (16.34)$$

where

$$T_{rc} = \frac{C_{vr} t_c}{d_e^2} \quad (\text{see Figure 16.22b for the definition of } t_c) \quad (16.35)$$

and

$$A = \frac{2}{m} \quad (16.36)$$

### Average Degree of Consolidation Due to Vertical Drainage Only

Using Figure 16.22a, for instantaneous application of a surcharge, we may obtain the average degree of consolidation due to vertical drainage only from Eqs. (2.78) and (2.79). We have

$$T_v = \frac{\pi}{4} \left[ \frac{U_v(\%)}{100} \right]^2 \quad (\text{for } U_v = 0 \text{ to } 60\%) \quad [\text{Eq. (2.78)}]$$

and

$$T_v = 1.781 - 0.933 \log [100 - U_v(\%)] \quad (\text{for } U_v > 60\%) \quad [\text{Eq. (2.79)}]$$

where  $U_v$  = average degree of consolidation due to vertical drainage only, and

$$T_v = \frac{C_v t_2}{H^2} \quad [\text{Eq. (2.73)}]$$

where  $C_v$  = coefficient of consolidation for vertical drainage.

For the case of ramp loading, as shown in Figure 16.22b, the variation of  $U_v$  with  $T_v$  can be expressed as (Olson, 1977):

**For  $T_v \leq T_c$ :**

$$U_v = \frac{T_v}{T_c} \left\{ 1 - \frac{2}{T_v} \sum \frac{1}{M^4} [1 - \exp(-M^2 T_v)] \right\} \quad (16.37)$$

**For  $T_v > T_c$ :**

$$U_v = 1 - \frac{2}{T_c} \sum \frac{1}{M^4} [\exp(-M^2 T_c) - 1] \exp(-M^2 T_v) \quad (16.38)$$


where

$$M = \frac{\pi}{2}(2m' + 1)$$

$$m' = 0, 1, 2, \dots$$

$$T_c = \frac{C_v t_c}{H^2} \quad (16.39)$$

where  $H$  = length of maximum vertical drainage path. Figure 16.23 shows the variation of  $U_v$  (%) with  $T_c$  and  $T_v$ .

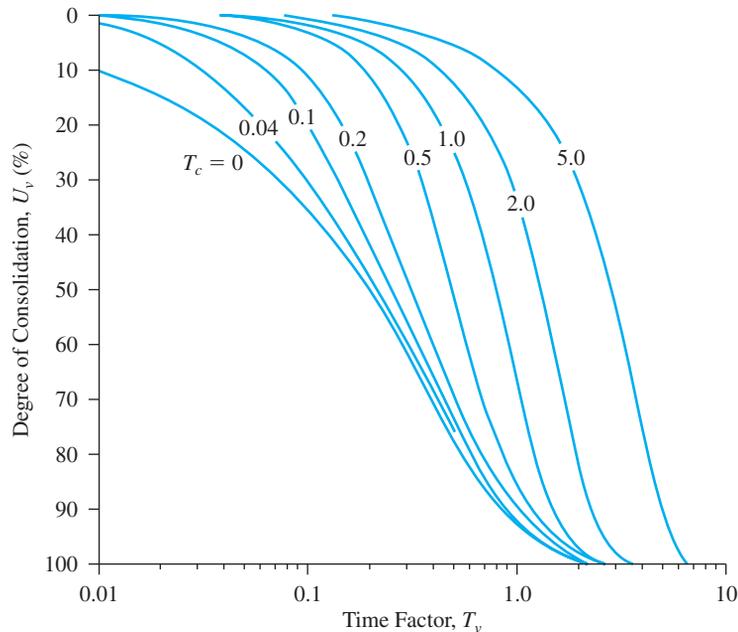

**Figure 16.23** Variation of  $U_v$  with  $T_v$  and  $T_c$  [Eqs. (16.37) and (16.38)]

**Example 16.5**

Redo Example 16.4, with the addition of some sand drains. Assume that  $r_w = 0.1$  m,  $d_e = 3$  m,  $C_v = C_{vr}$ , and the surcharge is applied instantaneously. (See Figure 16.22a.) Also assume that this is a no-smear case.

**Solution**

Part a

The total primary consolidation settlement will be 167.7 mm, as before.

Part b

From Example 16.4,  $T_v = 0.36$ . Using Eq. (2.78), we obtain

$$T_v = \frac{\pi}{4} \left[ \frac{U_v(\%)}{100} \right]^2$$

or

$$U_v = \sqrt{\frac{4T_v}{\pi}} \times 100 = \sqrt{\frac{(4)(0.36)}{\pi}} \times 100 = 67.7\%$$

Also,

$$n = \frac{d_e}{2r_w} = \frac{3}{2 \times 0.1} = 15$$

Again,

$$T_r = \frac{C_{vr}t_2}{d_e^2} = \frac{(0.36)(9)}{(3)^2} = 0.36$$

From Table 16.5 for  $n = 15$  and  $T_r = 0.36$ , the value of  $U_r$  is about 77%. Hence,

$$\begin{aligned} U_{v,r} &= 1 - (1 - U_v)(1 - U_r) = 1 - (1 - 0.67)(1 - 0.77) \\ &= 0.924 = 92.4\% \end{aligned}$$

Now, from Figure 16.17, for  $\Delta\sigma'_p/\sigma'_o = 0.548$  and  $U_{v,r} = 92.4\%$ , the value of  $\Delta\sigma'_f/\Delta\sigma'_p \approx 0.12$ . Hence,

$$\Delta\sigma'_{(f)} = (115)(0.12) = \mathbf{13.8 \text{ kN/m}^2}$$

### Example 16.6

Suppose that, for the sand drain project of Figure 16.21, the clay is normally consolidated. We are given the following data:

Clay:  $H_c = 15$  ft (two-way drainage)

$$C_c = 0.31$$

$$e_o = 1.1$$

Effective overburden pressure at the middle of the clay layer

$$= 1000 \text{ lb/ft}^2$$

$$C_v = 0.115 \text{ ft}^2/\text{day}$$

Sand drain:  $r_w = 0.3$  ft

$$d_e = 6$$
 ft

$$C_v = C_{vr}$$

A surcharge is applied as shown in Figure 16.24. Assume this to be a no-smear case. Calculate the degree of consolidation 30 days after the surcharge is first applied. Also, determine the consolidation settlement at that time due to the surcharge.


#### Solution

From Eq. (16.39),

$$T_c = \frac{C_v t_c}{H^2} = \frac{(0.115 \text{ ft}^2/\text{day})(60)}{\left(\frac{15}{2}\right)^2} = 0.123$$

and

$$T_v = \frac{C_v t_2}{H^2} = \frac{(0.115)(30)}{\left(\frac{15}{2}\right)^2} = 0.061$$

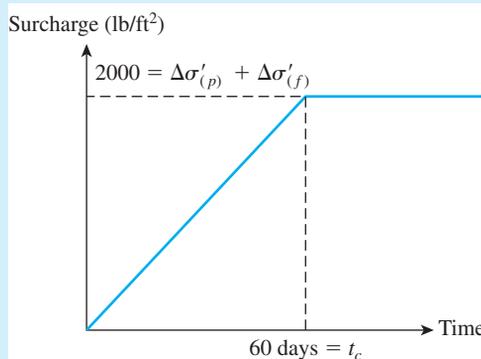

**Figure 16.24** Ramp load for a sand drain project

Using Figure 16.23 for  $T_c = 0.123$  and  $T_v = 0.061$ , we have  $U_v \approx 9\%$ . For the sand drain,

$$n = \frac{d_e}{2r_w} = \frac{6}{(2)(0.3)} = 10$$

From Eq. (16.35),

$$T_{rc} = \frac{C_{vr}t_c}{d_e^2} = \frac{(0.115)(60)}{(6)^2} = 0.192$$

and

$$T_r = \frac{C_{vr}t_2}{d_e^2} = \frac{(0.115)(30)}{(6)^2} = 0.096$$

Again, from Eq. (16.33),

$$U_r = \frac{T_r - \frac{1}{A}[1 - \exp(-AT_r)]}{T_{rc}}$$

Also, for the no-smear case,

$$m = \frac{n^2}{n^2 - 1} \ln(n) - \frac{3n^2 - 1}{4n^2} = \frac{10^2}{10^2 - 1} \ln(10) - \frac{3(10)^2 - 1}{4(10)^2} = 1.578$$

and

$$A = \frac{2}{m} = \frac{2}{1.578} = 1.267$$

so

$$U_r = \frac{0.096 - \frac{1}{1.267}[1 - \exp(-1.267 \times 0.096)]}{0.192} = 0.03 = 3\%$$

From Eq. (16.25),

$$U_{v,r} = 1 - (1 - U_r)(1 - U_v) = 1 - (1 - 0.03)(1 - 0.09) = 0.117 = \mathbf{11.7\%}$$

The total primary settlement is thus

$$\begin{aligned} S_{c(p)} &= \frac{C_c H_c}{1 + e_o} \log \left[ \frac{\sigma'_o + \Delta\sigma'_{(p)} + \Delta\sigma'_f}{\sigma'_o} \right] \\ &= \frac{(0.31)(15)}{1 + 1.1} \log \left( \frac{1000 + 2000}{1000} \right) = 1.056 \text{ ft} \end{aligned}$$

and the settlement after 30 days is

$$S_{c(p)}U_{v,r} = (1.056)(0.117)(12) = \mathbf{1.48 \text{ in.}}$$

## 16.10 Prefabricated Vertical Drains

Prefabricated vertical drains (PVDs), also referred to as *wick* or *strip drains*, were originally developed as a substitute for the commonly used sand drain. With the advent of materials science, these drains began to be manufactured from synthetic polymers such as polypropylene and high-density polyethylene. PVDs are normally manufactured with a corrugated or channeled synthetic core enclosed by a geotextile filter, as shown schematically in Figure 16.25. Installation rates reported in the literature are on the order of 0.1 to 0.3 m/s, excluding equipment mobilization and setup time. PVDs have been used extensively in the past for expedient consolidation of low-permeability soils under surface surcharge. The main advantage of PVDs over sand drains is that they do not require drilling; thus, installation is much faster. Figures 16.26a and b are photographs of the installation of PVDs in the field.

### Design of PVDs


The relationships for the average degree of consolidation due to radial drainage into sand drains are given in Eqs. (16.26) through (16.31) for equal-strain cases. Yeung (1997) used these relationships to develop design curves for PVDs. The theoretical developments used by Yeung are given next.

Figure 16.27 shows the layout of a square-grid pattern of prefabricated vertical drains. (See also Figure 16.25 for the definition of  $a$  and  $b$ .) The equivalent diameter of a PVD can be given as

$$d_w = \frac{2(a + b)}{\pi} \quad (16.40)$$

Now, Eq. (16.26) can be rewritten as

$$U_r = 1 - \exp\left(-\frac{8C_{vr}t}{d_w^2} \frac{d_w^2}{d_e^2 m}\right) = 1 - \exp\left(-\frac{8T'_r}{\alpha'}\right) \quad (16.41)$$

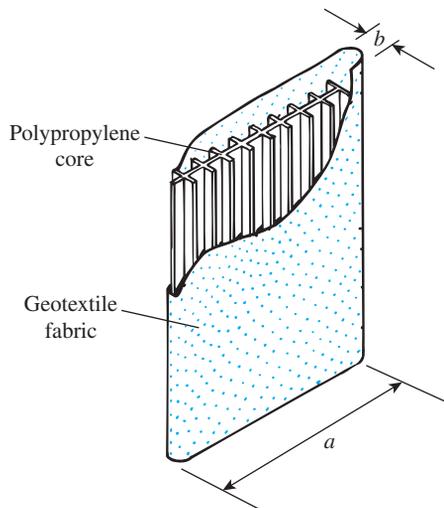

**Figure 16.25** Prefabricated vertical drain (PVD)




(a)



(b)

**Figure 16.26** Installation of PVDs in the field [Note: (b) is a closeup view of (a)]  
(Courtesy of E. C. Shin, University of Incheon, Korea)

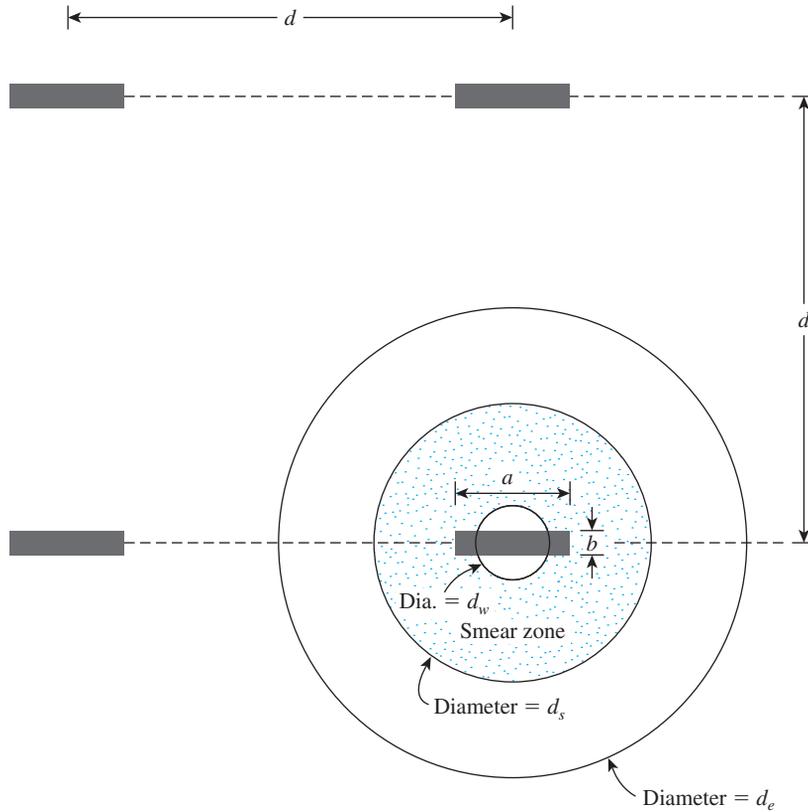

**Figure 16.27** Square-grid pattern layout of prefabricated vertical drains

where  $d_e$  = diameter of the effective zone of drainage =  $2r_e$ . Also,

$$T'_r = \frac{C_{vr}t}{d_w^2} \quad (16.42)$$

$$\alpha' = n^2m = \frac{n^4}{n^2 - S^2} \ln\left(\frac{n}{S}\right) - \left(\frac{3n^2 - S^2}{4}\right) + \frac{k_h}{k_s}(n^2 - S^2) \ln S \quad (16.43)$$

and

$$n = \frac{d_e}{d_w} \quad (16.44)$$

From Eq. (16.41),

$$T'_r = -\frac{\alpha'}{8} \ln(1 - U_r)$$

or

$$(T'_r)_1 = \frac{T'_r}{\alpha'} = -\frac{\ln(1 - U_r)}{8} \quad (16.45)$$

**Table 16.6** Variation of  $(T'_r)_1$  with  $U_r$  [Eq. (16.45)]

$U_r(\%)$	$(T'_r)_1$
0	0
5	0.006
10	0.013
15	0.020
20	0.028
25	0.036
30	0.045
35	0.054
40	0.064
45	0.075
50	0.087
55	0.100
60	0.115
65	0.131
70	0.150
75	0.173
80	0.201
85	0.237
90	0.288
95	0.374

Table 16.6 gives the variation of  $(T'_r)_1$  with  $U_r$ . Also, Figure 16.28 shows plots of  $\alpha'$  versus  $n$  for  $k_h/k_s = 5$  and 10 and  $S = 2$  and 3.

Following is a step-by-step procedure for the design of prefabricated vertical drains:

*Step 1.* Determine time  $t_2$  available for the consolidation process and the  $U_{v,r}$  required therefore [Eq. (16.24)]

*Step 2.* Determine  $U_r$  at time  $t_2$  due to vertical drainage. From Eq. (16.25)

$$U_r = 1 - \frac{1 - U_{v,r}}{1 - U_v} \quad (16.46)$$

*Step 3.* For the PVD that is to be used, calculate  $d_w$  from Eq. (16.40).

*Step 4.* Determine  $(T'_r)_1$  from Eqs. (16.45) and (16.46).

*Step 5.* Determine  $(T'_r)_1$  from Eq. (16.42).

*Step 6.* Determine


$$\alpha' = \frac{T'_r}{(T'_r)_1}$$

*Step 7.* Using Figure 16.28 and  $\alpha'$  determined from Step 6, determine  $n$ .

*Step 8.* From Eq. (16.44),

$$d_e = n \quad d_w$$

$\uparrow$              $\uparrow$   
 Step 7    Step 3

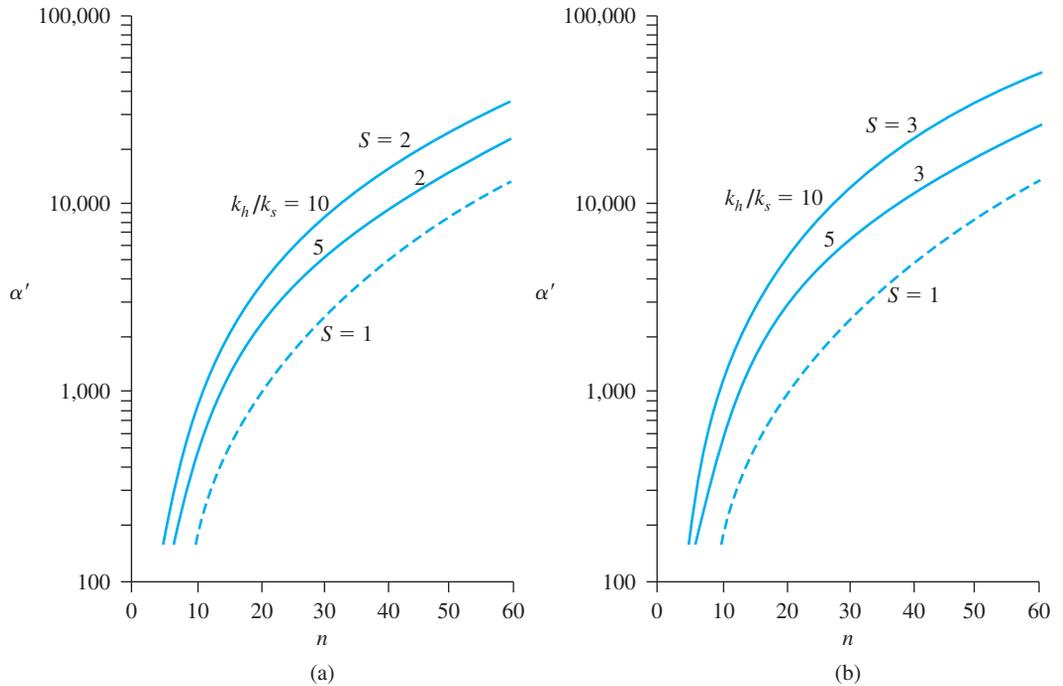

**Figure 16.28** Plot of  $\alpha'$  versus  $n$ : (a)  $S = 2$ ; (b)  $S = 3$  [Eq. (16.43)]


*Step 9.* Choose the drain spacing:

$$d = \frac{d_e}{1.05} \quad (\text{for triangular pattern})$$

$$d = \frac{d_e}{1.128} \quad (\text{for square pattern})$$

## A Case History

The installation of PVDs combined with preloading is an efficient way to gain strength in soft clays for construction of foundations. An example of a field study can be found in the works of Shibuya and Hanh (2001) which describes a full-scale test embankment  $40 \text{ m} \times 40 \text{ m}$  in plan constructed over a soft clay layer located at Nong Ngu Hao, Thailand. PVDs were installed in the soft clay layer in a triangular pattern (Figure 16.29a). Figure 16.29b shows the pattern of preloading at the site along with the settlement-time plot at the ground surface below the center of the test embankment. Maximum settlement was reached after about four months. The variation of the undrained shear strength ( $c_u$ ) with depth in the soft clay layer before and after the soil improvement is shown in Figure 16.29c. The variation of  $c_u$  with depth is based on field vane shear tests. The undrained shear strength increases by about 50 to 100% at various depths.

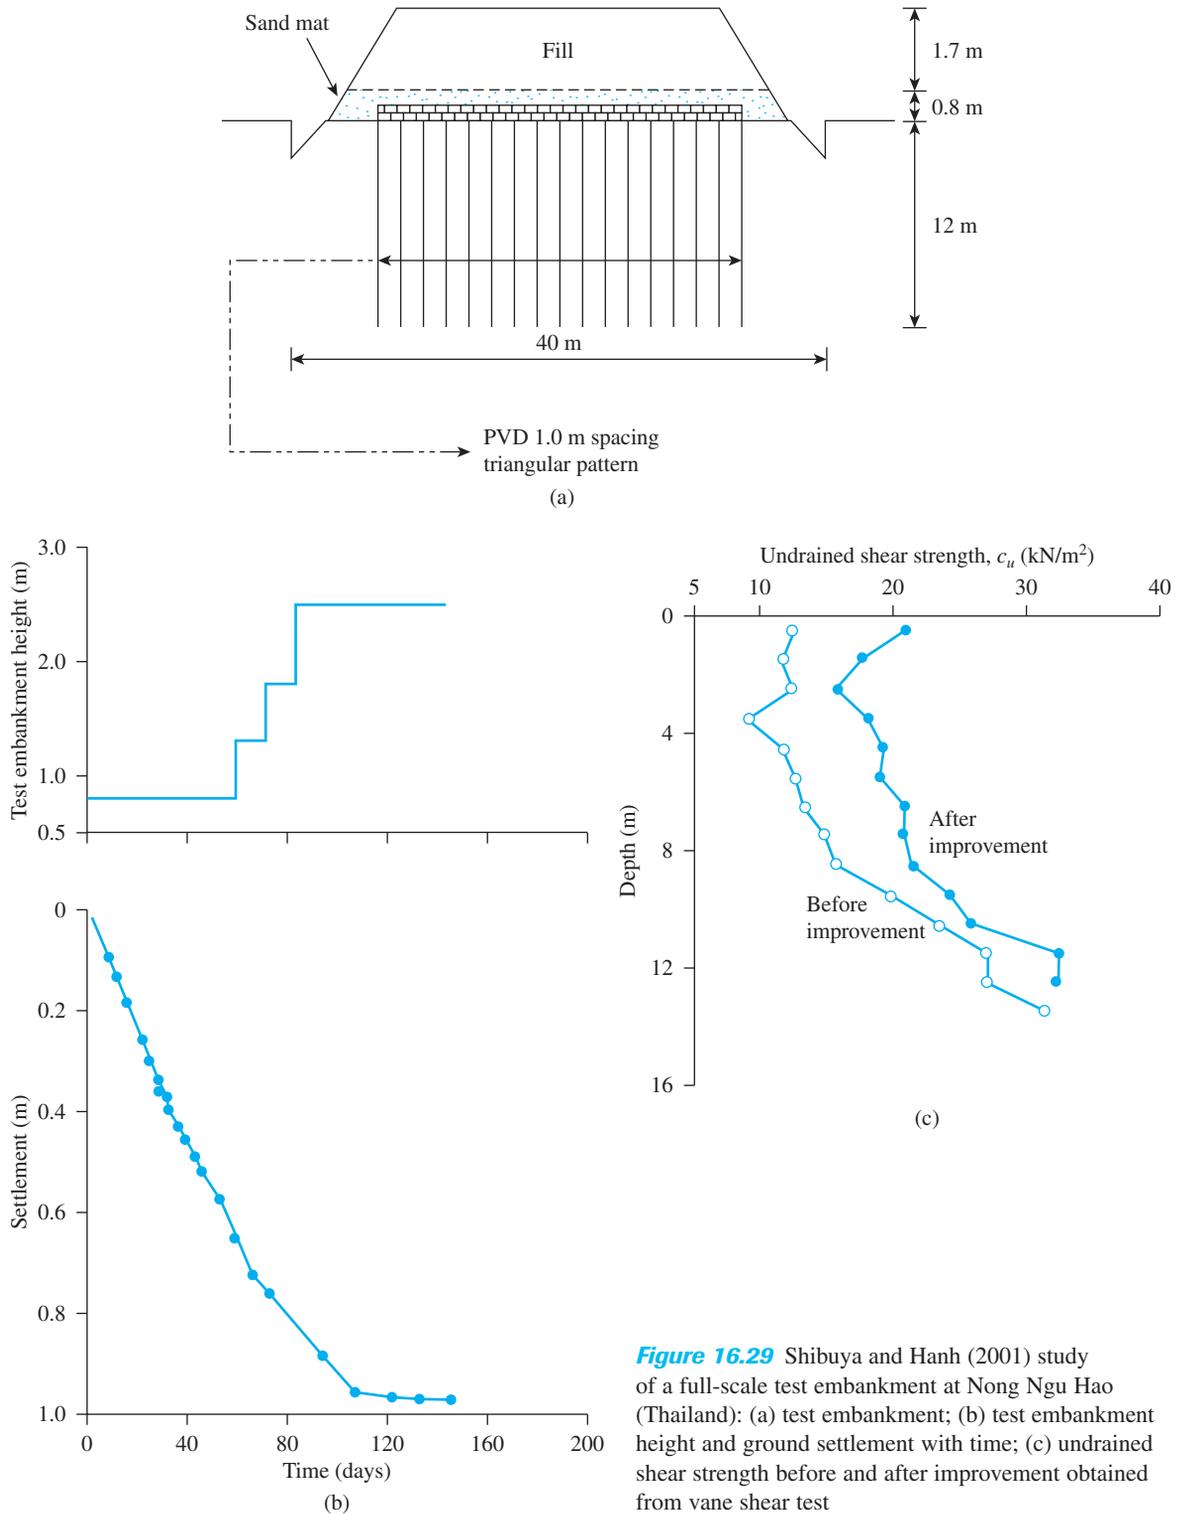

**Figure 16.29** Shibuya and Hanh (2001) study of a full-scale test embankment at Nong Ngu Hao (Thailand): (a) test embankment; (b) test embankment height and ground settlement with time; (c) undrained shear strength before and after improvement obtained from vane shear test

## 16.11 Lime Stabilization


As mentioned in Section 16.1, admixtures are occasionally used to stabilize soils in the field—particularly fine-grained soils. The most common admixtures are lime, cement, and lime–fly ash. The main purposes of stabilizing the soil are to (a) modify the soil, (b) expedite construction, and (c) improve the strength and durability of the soil.

The types of *lime* commonly used to stabilize fine-grained soils are hydrated high-calcium lime [ $\text{Ca}(\text{OH})_2$ ], calcitic quicklime ( $\text{CaO}$ ), monohydrated dolomitic lime [ $\text{Ca}(\text{OH})_2 \cdot \text{MgO}$ ], and dolomitic quicklime. The quantity of lime used to stabilize most soils usually is in the range from 5 to 10%. When lime is added to clayey soils, two *pozzolanic* chemical reactions occur: *cation exchange* and *flocculation–agglomeration*. In the cation exchange and flocculation–agglomeration reactions, the *monovalent* cations generally associated with clays are replaced by the *divalent* calcium ions. The cations can be arranged in a series based on their affinity for exchange:



Any cation can replace the ions to its right. For example, calcium ions can replace potassium and sodium ions from a clay. Flocculation–agglomeration produces a change in the texture of clay soils. The clay particles tend to clump together to form larger particles, thereby (a) decreasing the liquid limit, (b) increasing the plastic limit, (c) decreasing the plasticity index, (d) increasing the shrinkage limit, (e) increasing the workability, and (f) improving the strength and deformation properties of a soil. Some examples in which lime influences the plasticity of clayey soils are given in Table 16.7.

Pozzolanic reaction between soil and lime involves a reaction between lime and the silica and alumina of the soil to form cementing material. One such reaction is

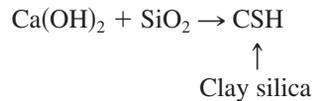

where

C = CaO

S =  $\text{SiO}_2$

H =  $\text{H}_2\text{O}$

The pozzolanic reaction may continue for a long time.

**Table 16.7** Influence of Lime on Plasticity of Clay (Based on data from Thompson, 1967)

Soil	AASHTO Classification	0% Lime		5% Lime	
		Liquid limit	Plasticity index	Liquid limit	Plasticity index
Bryce B	A-7-6(18)	53	29	NP	NP
Cowden B	A-7-6(19)	54	33	NP	NP
Drummer B	A-7-6(19)	54	31	NP	NP
Huey B	A-7-6(17)	46	29	NP	NP

Note: NP—Non-plastic

The first 2 to 3% lime (on the dry-weight basis) substantially influences the workability and the property (such as plasticity) of the soil. The addition of lime to clayey soils also affects their compaction characteristics.

### Properties of Cured Lime-Stabilized Soils

The unconfined compression strength ( $q_u$ ) of fine-grained soils compacted at optimum moisture content may range from 170 kN/m<sup>2</sup> to 2100 kN/m<sup>2</sup> (25 lb/in<sup>2</sup> to 300 lb/in<sup>2</sup>), depending upon the nature of the soil. With about 3 to 5% addition of lime and a curing period of 28 days, the unconfined compression strength may increase by 700 kN/m<sup>2</sup> (100 lb/in<sup>2</sup>) or more.

The tensile strength ( $\sigma_T$ ) of cured fine-grained soils also increases with lime stabilization. Tullock, Hudson, and Kennedy (1970) gave the following relationship between  $\sigma_T$  and  $q_u$ :

#### SI Units

$$\sigma_T \text{ (kN/m}^2\text{)} = 47.54 + 50.6q_u \text{ (MN/m}^2\text{)} \quad (16.47a)$$

#### English Units

$$\sigma_T \text{ (lb/in}^2\text{)} = 6.89 + 50.6q_u \text{ (kip/in}^2\text{)} \quad (16.47b)$$

where  $\sigma_T$  is the indirect tensile strength.

Thompson (1966) provided the following relationship to estimate the modulus of elasticity ( $E_s$ ) of lime-stabilized soils:

#### SI Units

$$E_s \text{ (MN/m}^2\text{)} = 68.86 + 0.124q_u \text{ (kN/m}^2\text{)} \quad (16.48a)$$

#### English Units

$$E_s \text{ (kip/in}^2\text{)} = 9.98 + 0.124q_u \text{ (lb/in}^2\text{)} \quad (16.48b)$$

Poisson's ratio ( $\mu_s$ ) of cured stabilized soils with about 5% lime varies between 0.08 to 0.12 (with an average of 0.11) at a stress level of 25% or less of the ultimate compressive strength. It increases to about 0.27 to 0.37 (with an average of 0.31) at a stress level greater than 50% to 75% of the ultimate compression strength (Transportation Research Board, 1987).

### Lime Stabilization in the Field

Lime stabilization in the field can be done in three ways. They are

1. The *in situ* material or the borrowed material can be mixed with the proper amount of lime at the site and then compacted after the addition of moisture.
2. The soil can be mixed with the proper amount of lime and water at a plant and then hauled back to the site for compaction.
3. Lime slurry can be pressure injected into the soil to a depth of 4 to 5 m (12 to 16 ft). Figure 16.30 shows a vehicle used for pressure injection of lime slurry.

The slurry-injection mechanical unit is mounted to the injection vehicle. A common injection unit is a hydraulic-lift mast with crossbeams that contain the injection rods. The rods are pushed into the ground by the action of the lift mast beams. The slurry is generally mixed in a batching tank about 3 m (10 ft) in diameter and 12 m (36 ft) long and is



**Figure 16.30** Equipment for pressure injection of lime slurry (Courtesy of Hayward Baker Inc., Odenton, Maryland)


pumped at high pressure to the injection rods. Figure 16.31 is a photograph of the lime slurry pressure-injection process. The ratio typically specified for the preparation of lime slurry is 1.13 kg (2.5 lb) of dry lime to a gallon of water.

Because the addition of hydrated lime to soft clayey soils immediately increases the plastic limit, thus changing the soil from plastic to solid and making it appear to “dry up,” limited amounts of the lime can be thrown on muddy and troublesome construction sites. This action improves trafficability and may save money and time. Quicklimes have also been successfully used in drill holes having diameters of 100 to 150 mm (4 to 6 in.) for stabilization of subgrades and slopes. For this type of work, holes are drilled in a grid pattern and then filled with quicklime.

## 16.12 Cement Stabilization

Cement is being increasingly used as a stabilizing material for soil, particularly in the construction of highways and earth dams. The first controlled soil–cement construction in the United States was carried out near Johnsonville, South Carolina, in 1935. Cement can be used to stabilize sandy and clayey soils. As in the case of lime, cement helps decrease the liquid limit and increase the plasticity index and workability of clayey soils. Cement stabilization is effective for clayey soils when the liquid limit is less than 45 to 50 and the plasticity index is less than about 25. The optimum requirements of cement by volume for effective stabilization of various types of soil are given in Table 16.8.

Like lime, cement helps increase the strength of soils, and strength increases with curing time. Table 16.9 presents some typical values of the unconfined compressive

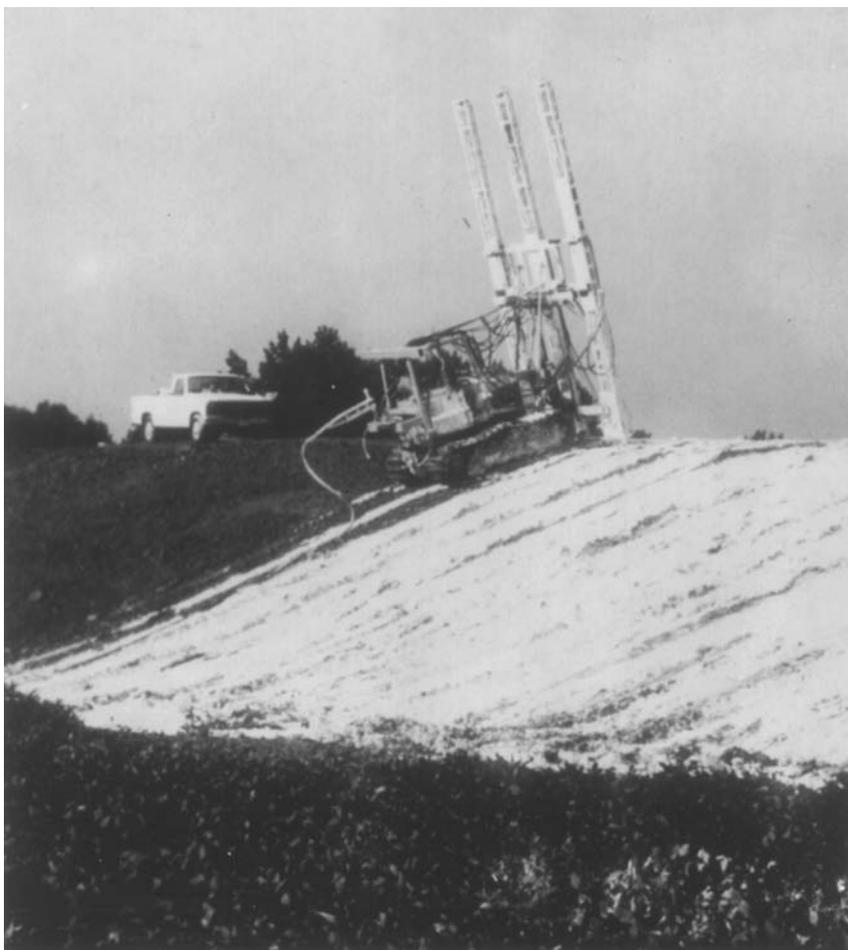

**Figure 16.31** Pressure injection of lime slurry (Courtesy of Hayward Baker Inc., Odenton, Maryland)

**Table 16.8** Cement Requirement by Volume for Effective Stabilization of Various Soils<sup>a</sup>

Soil type		Percent cement by volume
AASHTO classification	Unified classification	
A-2 and A-3	GP, SP, and SW	6–10
A-4 and A-5	CL, ML, and MH	8–12
A-6 and A-7	CL, CH	10–14

<sup>a</sup>Based on data from Mitchell, J. K. and Freitag, D. R. (1959). “A Review and Evaluation of Soil-Cement Pavements,” *Journal of the Soil Mechanics and Foundations Division*, American Society of Civil Engineers, Vol. 85, No. SM6, pp. 49–73.

**Table 16.9** Typical Compressive Strengths of Soils and Soil–Cement Mixtures<sup>a</sup>

Material	Unconfined compressive strength range	
	kN/m <sup>2</sup>	lb/in <sup>2</sup>
<i>Untreated soil:</i>		
Clay, peat	Less than 350	Less than 50
Well-compacted sandy clay	70–280	10–40
Well-compacted gravel, sand, and clay mixtures	280–700	40–100
<i>Soil–cement (10% cement by weight):</i>		
Clay, organic soils	Less than 350	Less than 50
Silts, silty clays, very poorly graded sands, slightly organic soils	350–1050	50–150
Silty clays, sandy clays, very poorly graded sands, and gravels	700–1730	100–250
Silty sands, sandy clays, sands, and gravels	1730–3460	250–500
Well-graded sand–clay or gravel–sand–clay mixtures and sands and gravels	3460–10,350	500–1500

<sup>a</sup>Based on data from Mitchell, J. K. and Freitag, D. R. (1959). “A Review and Evaluation of Soil–Cement Pavements,” *Journal of the Soil Mechanics and Foundations Division*, American Society of Civil Engineers, Vol. 85, No. SM6, pp. 49–73.

strength of various types of untreated soil and of soil–cement mixtures made with approximately 10% cement by weight.

Granular soils and clayey soils with low plasticity obviously are most suitable for cement stabilization. Calcium clays are more easily stabilized by the addition of cement, whereas sodium and hydrogen clays, which are expansive in nature, respond better to lime stabilization. For these reasons, proper care should be given in the selection of the stabilizing material.

For field compaction, the proper amount of cement can be mixed with soil either at the site or at a mixing plant. If the latter approach is adopted, the mixture can then be carried to the site. The soil is compacted to the required unit weight with a predetermined amount of water.

Similar to lime injection, cement slurry made of portland cement and water (in a water–cement ratio of 0.5:5) can be used for pressure grouting of poor soils under foundations of buildings and other structures. Grouting decreases the hydraulic conductivity of soils and increases their strength and load-bearing capacity. For the design of low-frequency machine foundations subjected to vibrating forces, stiffening the foundation soil by grouting and thereby increasing the resonant frequency is sometimes necessary.

## 16.13 Fly-Ash Stabilization

Fly ash is a by-product of the pulverized coal combustion process usually associated with electric power-generating plants. It is a fine-grained dust and is composed primarily of silica, alumina, and various oxides and alkalis. Fly ash is pozzolanic in nature and can react with

hydrated lime to produce cementitious products. For that reason, lime–fly-ash mixtures can be used to stabilize highway bases and subbases. Effective mixes can be prepared with 10 to 35% fly ash and 2 to 10% lime. Soil–lime–fly-ash mixes are compacted under controlled conditions, with proper amounts of moisture to obtain stabilized soil layers.

A certain type of fly ash, referred to as “Type C” fly ash, is obtained from the burning of coal primarily from the western United States. This type of fly ash contains a fairly large proportion (up to about 25%) of free lime that, with the addition of water, will react with other fly-ash compounds to form cementitious products. Its use may eliminate the need to add manufactured lime.

## 16.14 Stone Columns

A method now being used to increase the load-bearing capacity of shallow foundations on soft clay layers is the construction of stone columns. This generally consists of water-jetting a vibroflot (see Section 16.6) into the soft clay layer to make a circular hole that extends through the clay to firmer soil. The hole is then filled with an imported gravel. The gravel in the hole is gradually compacted as the vibrator is withdrawn. The gravel used for the stone column has a size range of 6 to 40 mm (0.25 to 1.6 in.). Stone columns usually have diameters of 0.5 to 0.75 m (1.6 to 2.5 ft) and are spaced at about 1.5 to 3 m (5 to 10 ft) center to center. Figure 16.32 shows the construction of a stone column.

After stone columns are constructed, a fill material should always be placed over the ground surface and compacted before the foundation is constructed. The stone columns



**Figure 16.32** Construction of a stone column [DGI-Menard (USA).]

tend to reduce the settlement of foundations at allowable loads. Several case histories of construction projects using stone columns are presented in Hughes and Withers (1974), Hughes et al. (1975), Mitchell and Huber (1985), and other works.

Stone columns work more effectively when they are used to stabilize a large area where the undrained shear strength of the subsoil is in the range of 10 to 50 kN/m<sup>2</sup> (200 to 1000 lb/ft<sup>2</sup>) than to improve the bearing capacity of structural foundations (Bachus and Barksdale, 1989). Subsoils weaker than that may not provide sufficient lateral support for the columns. For large-site improvement, stone columns are most effective to a depth of 6 to 10 m (20 to 30 ft). However, they have been constructed to a depth of 31 m (100 ft). Bachus and Barksdale provided the following general guidelines for the design of stone columns to stabilize large areas.

Figure 16.33a shows the plan view of several stone columns. The area replacement ratio for the stone columns may be expressed as

$$a_s = \frac{A_s}{A} \quad (16.49)$$


where

$A_s$  = area of the stone column

$A$  = total area within the unit cell

For an *equilateral triangular pattern* of stone columns,

$$a_s = 0.907 \left( \frac{D}{s} \right)^2 \quad (16.50)$$

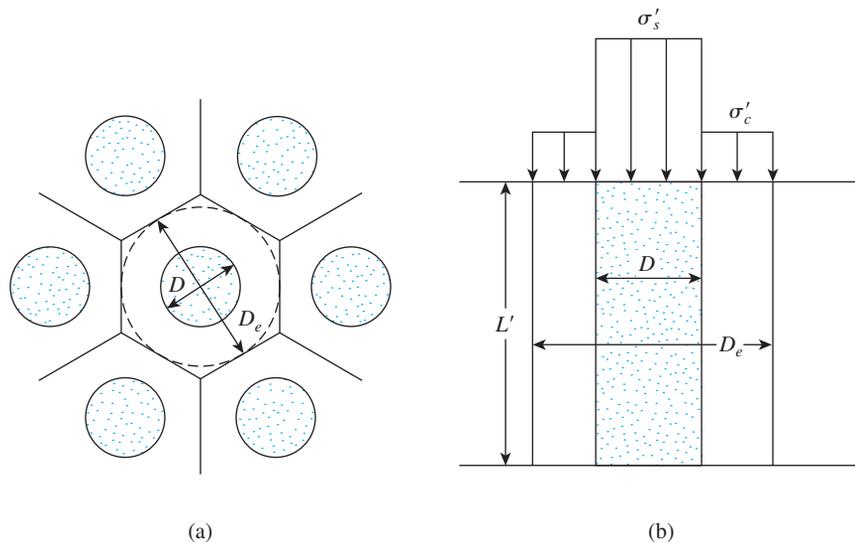

**Figure 16.33** (a) Stone columns in a triangular pattern; (b) stress concentration due to change in stiffness

where

$D$  = diameter of the stone column

$s$  = spacing between the columns

Combining Eqs. (16.49) and (16.50),

$$\frac{A_s}{A} = \frac{\frac{\pi}{4}D^2}{\frac{\pi}{4}D_e^2} = a_s = 0.907\left(\frac{D}{s}\right)^2$$

or

$$D_e = 1.05s \quad (16.51)$$

Similarly, it can be shown that, for square pattern of stone columns,

$$D_e = 1.13s \quad (16.52)$$

When a uniform stress by means of a fill operation is applied to an area with stone columns to induce consolidation, a stress concentration occurs due to the change in the stiffness between the stone columns and the surrounding soil. (See Figure 16.33b.) The stress concentration factor is defined as

$$n' = \frac{\sigma'_s}{\sigma'_c} \quad (16.53)$$

where

$\sigma'_s$  = effective stress in the stone column

$\sigma'_c$  = effective stress in the subgrade soil

The relationships for  $\sigma'_s$  and  $\sigma'_c$  are

$$\sigma'_s = \sigma' \left[ \frac{n'}{1 + (n' - 1)a_s} \right] = \mu_s \sigma' \quad (16.54)$$

and

$$\sigma'_c = \sigma' \left[ \frac{1}{1 + (n' - 1)a_s} \right] = \mu_c \sigma' \quad (16.55)$$

where

$\sigma'$  = average effective vertical stress

$\mu_s, \mu_c$  = stress concentration coefficients

The improvement in the soil owing to the stone columns may be expressed as

$$\frac{S_{e(t)}}{S_e} = \mu_c \quad (16.56)$$

where

$S_{e(t)}$  = settlement of the treated soil

$S_e$  = total settlement of the untreated soil

## Load-Bearing Capacity of Stone Columns

When the length  $L'$  of the stone column is less than about  $3D$  and a foundation is constructed over it, failure occurs by plunging similar to short piles in soft to medium-stiff clays. For longer columns sufficient to prevent plunging, the load carrying capacity is governed by the ultimate radial confining pressure and the shear strength of the surrounding matrix soil. In those cases, failure at ultimate load occurs by bulging, as shown in Figure 16.34. Mitchell (1981) proposed that the ultimate bearing capacity ( $q_u$ ) of a stone column can be given as

$$q_u = c_u N_p \quad (16.57)$$

where  $c_u$  = undrained shear strength of clay

$N_p$  = bearing capacity factor


Mitchell (1981) recommended that

$$N_p \approx 25 \quad (16.58)$$


Based on several field case studies, Stuedlein and Holtz (2013) recommended that

$$N_p = \exp(-0.0096c_u + 3.5) \quad (16.59)$$

where  $c_u$  is in  $\text{kN/m}^2$ .

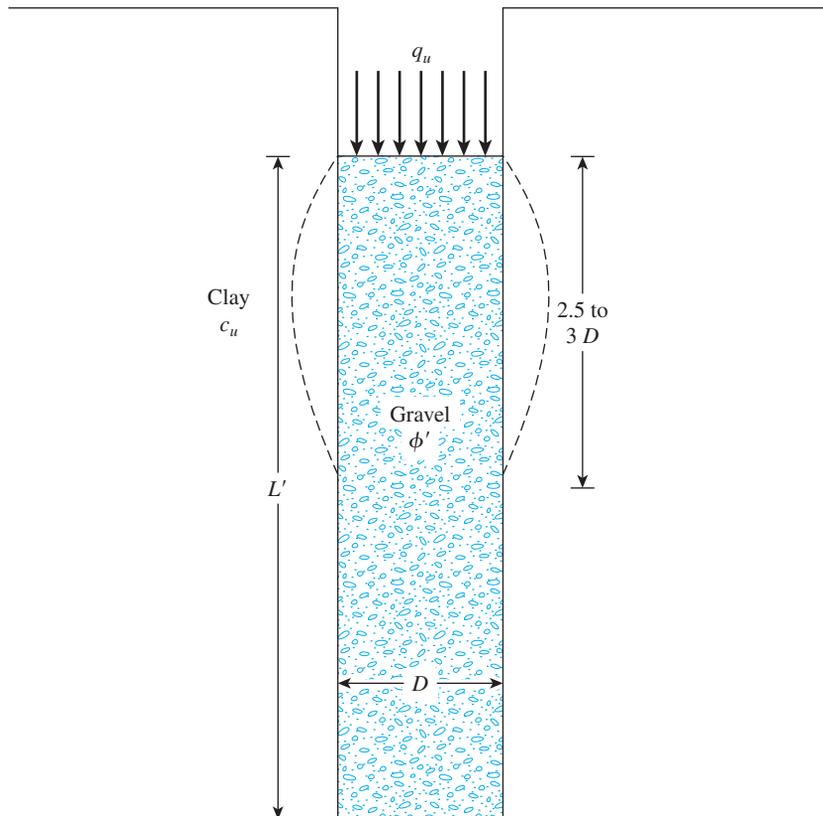

**Figure 16.34** Bearing capacity of stone column

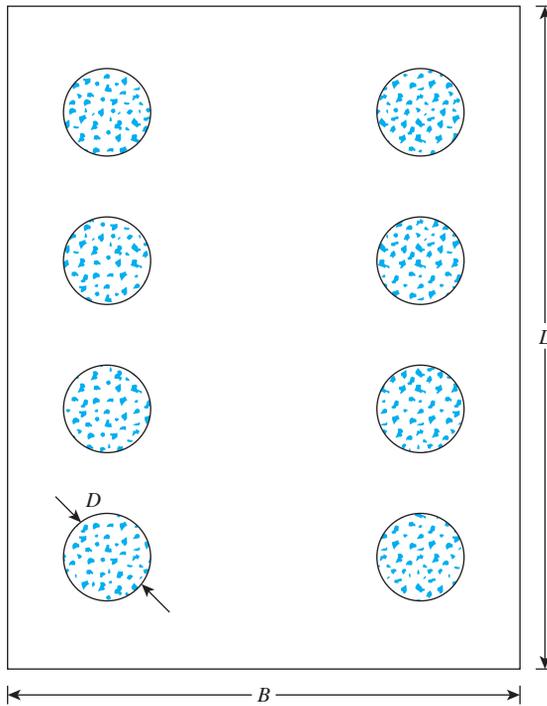

**Figure 16.35** Shallow foundation over a group of stone columns

If a foundation is constructed measuring  $B \times L$  in plan over a group of stone columns, as shown in Figure 16.35, the ultimate bearing capacity  $q_u$  can be expressed as (Stuedlein and Holtz, 2013)

$$q_u = N_p c_u a_s + N_c c_u (1 - a_s) F_{cs} F_{cd} \quad (16.60)$$

where  $N_p$  is expressed by Eq. (16.59)

$$N_c = 5.14$$

$F_{cs}$  and  $F_{cd}$  = shape and depth factors (see Table 4.6)

Then

$$F_{cs} = 1 + 0.2 \frac{B}{L} \quad (16.61)$$

and

$$F_{cd} = 1 + 0.2 \frac{D_f}{B} \quad (16.62)$$

where  $D_f$  = depth of the foundation.

**Example 16.7**

Consider a foundation  $4 \text{ m} \times 2 \text{ m}$  in plan constructed over a group of stone columns in a square pattern in soft clay. Given

Stone columns:  $D = 0.4 \text{ m}$

Area ratio,  $a_s = 0.3$

$L' = 4.8 \text{ m}$

Clay:  $c_u = 36 \text{ KN/m}^2$

Foundation:  $D_f = 0.75 \text{ m}$

Estimate the ultimate load  $Q_u$  for the foundation.

**Solution**

From Eq. (16.60),

$$Q_u = N_p c_u a_s + N_c c_u (1 - a_s) F_{cs} F_{cd}$$

From Eq. (16.59),

$$N_p = \exp(-0.0096c_u + 3.5) = \exp[(-0.0096)(36) + 3.5] = 23.44$$

$$F_{cs} = 1 + 0.2 \left( \frac{B}{L} \right) = 1 + 0.2 \left( \frac{2}{4} \right) = 1.1$$

$$F_{cd} = 1 + 0.2 \left( \frac{D_f}{B} \right) = 1 + 0.2 \left( \frac{0.75}{2} \right) = 1.075$$

and

$$q_u = (23.44)(36)(0.3) + (5.14)(36)(1 - 0.3)(1.1)(1.075) = 406.31 \text{ kN/m}^2$$

Thus, the ultimate load is

$$Q_u = q_u BL = (406.31)(2)(4) = \mathbf{3250.48 \text{ kN}}$$

## 16.15 Sand Compaction Piles

Sand compaction piles are similar to stone columns, and they can be used in marginal sites to improve stability, control liquefaction, and reduce the settlement of various structures. Built in soft clay, these piles can significantly accelerate the pore water pressure-dissipation process and hence the time for consolidation.

Sand piles were first constructed in Japan between 1930 and 1950 (Ichimoto, 1981). Large-diameter compacted sand columns were constructed in 1955, using the Compozer technique (Aboshi et al., 1979). The Vibro-Compozer method of sand pile construction was developed by Murayama in Japan in 1958 (Murayama, 1962).



Sand compaction piles are constructed by driving a hollow mandrel with its bottom closed during driving. On partial withdrawal of the mandrel, the bottom doors open. Sand is poured from the top of the mandrel and is compacted in steps by applying air pressure as the mandrel is withdrawn. The piles are usually 0.46 to 0.76 m (1.5 to 2.5 ft) in diameter and are placed at about 1.5 to 3 m (5 to 10 ft) center to center. The pattern of layout of sand



**Figure 16.36** Construction of sand compaction pile in Yokohama, Japan Harbor (Courtesy of E. C. Shin, University of Incheon, Korea)

compaction piles is the same as for stone columns. Figure 16.36 shows the construction of sand compaction piles in the harbor of Yokohama, Japan.

Basore and Boitano (1969) reported a case history on the densification of a granular subsoil having a thickness of about 9 m (30 ft) at the Treasure Island Naval Station in San Francisco, California, using sand compaction piles. The sand piles had diameters of 356 mm (14 in.). Figure 16.37a shows the layout of the sand piles. The spacing,  $S'$ , between the piles was varied. The standard penetration resistance,  $N_{60}$ , before and after the construction of piles are shown in Figure 16.37b (see location of SPT test in Figure 16.37a). From this figure, it can be seen that the effect of densification at any given depth decreases with the increase in  $S'$  (or  $S'/D$ ). These tests show that when  $S'/D$  exceeds about 4 to 5, the effect of densification is practically negligible.

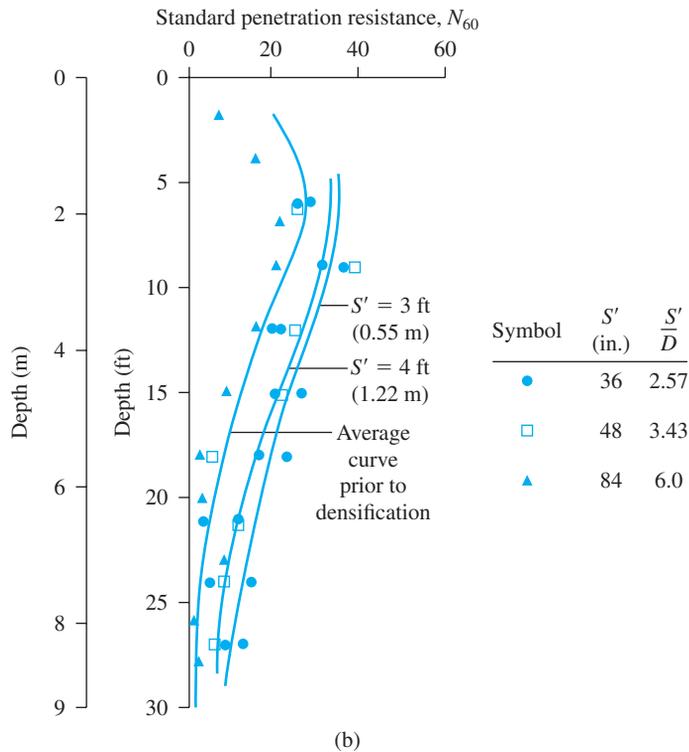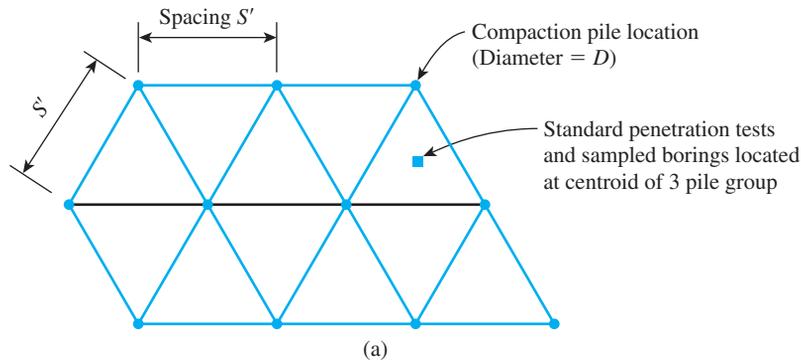

**Figure 16.37** Sand compaction pile test of Basore and Boitano (1969): (a) layout of the compaction piles; (b) standard penetration resistance variation with depth and  $S'$

## 16.16 Dynamic Compaction

Dynamic compaction is a technique that is beginning to gain popularity in the United States for densification of granular soil deposits. The process primarily involves dropping a heavy weight repeatedly on the ground at regular intervals. The weight of the hammer used varies from 8 to 35 metric tons, and the height of the hammer drop varies between 7.5 and 30.5 m

( $\approx 25$  and 100 ft). The stress waves generated by the hammer drops help in the densification. The degree of compaction achieved depends on

- The weight of the hammer
- The height of the drop
- The spacing of the locations at which the hammer is dropped

Leonards et al. (1980) suggested that the significant depth of influence for compaction is approximately

$$DI \approx \frac{1}{2}\sqrt{W_H h} \quad (16.63a)$$

where

DI = significant depth of densification (m)  
 $W_H$  = dropping weight (metric ton)  
 $h$  = height of drop (m)


In English units, Eq. (16.63a) becomes

$$DI = 0.61\sqrt{W_H h} \quad (16.63b)$$


where DI and  $h$  are in ft and  $W_H$  is in kip.

Partos et al. (1989) provided several case histories of site improvement that used dynamic compaction. In 1992, Poran and Rodriguez suggested a rational method for conducting dynamic compaction for granular soils in the field. According to their method, for a hammer of width  $D$  having a weight  $W_H$  and a drop  $h$ , the approximate shape of the densified area will be of the type shown in Figure 16.38 (i.e., a semiprolate spheroid). Note that in this figure  $b = DI$ . Figure 16.39 gives the design chart for  $a/D$  and  $b/D$  versus  $NW_H h/Ab$  ( $D$  = width of the hammer if not circular in cross section;  $A$  = area of cross section of the hammer;  $N$  = number of required hammer drops). The method uses the following steps:


- Step 1. Determine the required significant depth of densification,  $DI(=b)$ .
- Step 2. Determine the hammer weight ( $W_H$ ), height of drop ( $h$ ), dimensions of the cross section, and thus the area  $A$  and the width  $D$ .
- Step 3. Determine  $DI/D = b/D$ .
- Step 4. Use Figure 16.39 and determine the magnitude of  $NW_H h/Ab$  for the value of  $b/D$  obtained in Step 3.
- Step 5. Since the magnitudes of  $W_H$ ,  $h$ ,  $A$ , and  $b$  are known (or assumed) from Step 2, the number of hammer drops can be estimated from the value of  $NW_H h/Ab$  obtained from Step 4.

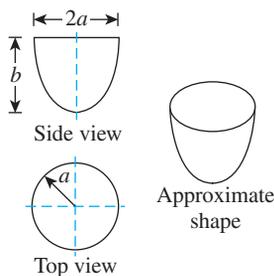

**Figure 16.38** Approximate shape of the densified area due to dynamic compaction [Poran, C. J. and Rodriguez, J. A. (1992). “Design of Dynamic Compaction,” *Canadian Geotechnical Journal*, Vol. 29, No. 5, pp. 796–802.]

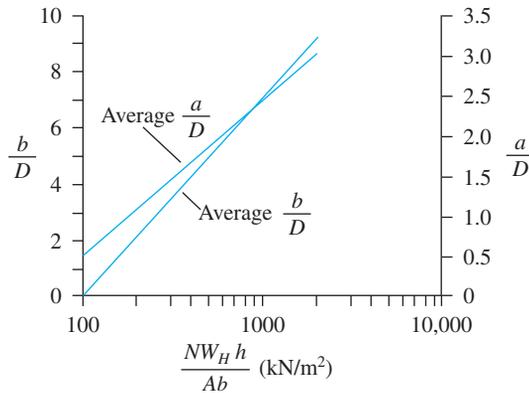

**Figure 16.39** Plot of  $a/D$  and  $b/D$  versus  $NW_H h/Ab$  (Based on Poran and Rodriguez, 1992) (Poran, C. J. and Rodriguez, J. A. (1992). “Design of Dynamic Compaction,” *Canadian Geotechnical Journal*, Vol. 29, No. 5, pp. 796–802.)

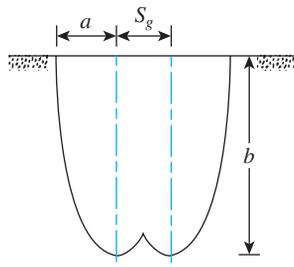

**Figure 16.40** Approximate grid spacing for dynamic compaction

- Step 6.* With known values of  $NW_H h/Ab$ , determine  $a/D$  and thus  $a$  from Figure 16.39.
- Step 7.* The grid spacing,  $S_g$ , for dynamic compaction may now be assumed to be equal to or somewhat less than  $a$ . (See Figure 16.40.)

## 16.17 Jet Grouting

Jet grouting is a soil stabilization process whereby cement slurry is injected into soil at a high velocity to form a soil–concrete matrix. Conceptually, the process of jet grouting was first developed in the 1960s. Most of the research work after that was conducted in Japan (Ohta and Shibasaki, 1982). The technique was introduced into Europe in the late 1970s, whereas the process was first used in the United States in the early 1980s (Welsh, Rubright, and Coomber, 1986).

Three basic systems of jet grouting have been developed—single, double, and triple rod systems. In all cases, hydraulic rotary drilling is used to reach the design depth at which the soil has to be stabilized. Figure 16.41a shows the *single rod system* in which a cement slurry is injected at a high velocity to form a soil–cement matrix. In the *double rod system* (Figure 16.41b), the cement slurry is injected at a high velocity sheathed in a cone of air at an equally high velocity to erode and mix the soil well. The *triple rod system* (Figure 16.41c) uses high-pressure water shielded in a cone of air to erode the soil. The void created in this process is then filled with a pre-engineering cement slurry.

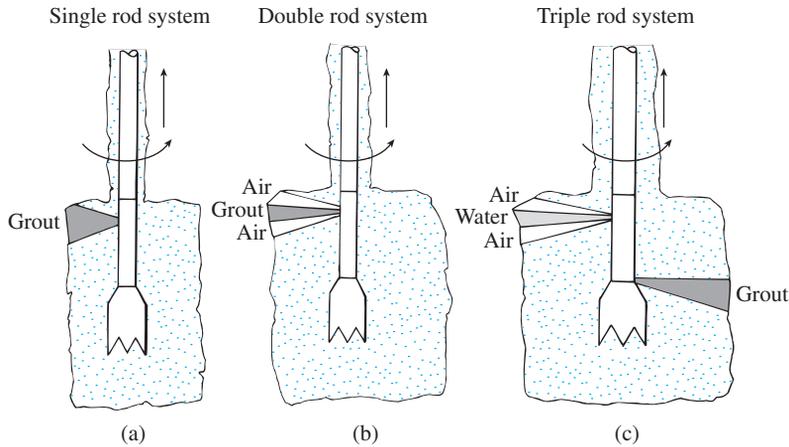


Figure 16.41 Jet grouting

The effectiveness of the jet grouting is very much influenced by the nature of erodibility of soil. Gravelly soil and clean sand are highly erodible, whereas highly plastic clays are difficult to erode. A summary of the range of parameters generally encountered for the three systems above follows (Welsh and Burke, 1991; Burke, 2004):

**Single Rod System:**

- A. Grout slurry
  - Pressure . . . . . 0.4–0.7 MN/m<sup>2</sup>
  - Volume . . . . . 100–300 l/min
  - Specific gravity . . . . . 1.25–1.6
  - Number of nozzles . . . . . 1–6
- B. Lift
  - Step height. . . . . 5–600 mm
  - Step time . . . . . 4–30 sec
- C. Rotation . . . . . 7–20 rpm
- D. Stabilized soil column diameter
  - Soft clay. . . . . 0.4–0.9 m
  - Silt . . . . . 0.6–1.1 m
  - Sand. . . . . 0.8–1.2 m

**Double Rod System:**

- A. Grout slurry
  - Pressure . . . . . 0.3–0.7 MN/m<sup>2</sup>
  - Volume . . . . . 100–600 l/min
  - Specific gravity . . . . . 1.25–1.8
  - Number of nozzles . . . . . 1–2

- B. Air
  - Pressure . . . . . 700–1500 kN/m<sup>2</sup>
  - Volume . . . . . 8–30 m<sup>3</sup>/min
- C. Lift
  - Step height. . . . . 25–400 mm
  - Step time . . . . . 4–30 sec
- D. Rotation . . . . . 7–15 rpm
- E. Stabilized soil column diameter
  - Soft clay. . . . . 0.9–1.8 m
  - Silt . . . . . 0.9–1.8 m
  - Sand. . . . . 1.2–2.1 m

#### Triple Rod System:

- A. Grout slurry
  - Pressure . . . . . 700 kN/m<sup>2</sup>–1 MN/m<sup>2</sup>
  - Volume . . . . . 120–200 l/min
  - Specific gravity . . . . . 1.5–2.0
  - Number of nozzles . . . . . 1–3
- B. Air
  - Pressure . . . . . 700–1500 kN/m<sup>2</sup>
  - Volume . . . . . 4–15 m<sup>3</sup>/min
- C. Water
  - Pressure . . . . . 0.3–0.4 MN/m<sup>2</sup>
  - Volume . . . . . 80–200 l/min
- D. Lift
  - Step height. . . . . 20–50 mm
  - Step time . . . . . 4–20 sec
- E. Rotation . . . . . 7–15 rpm
- F. Stabilized soil column diameter
  - Soft clay. . . . . 0.9–1.2 m
  - Silt . . . . . 0.9–1.4 m
  - Sand. . . . . 0.9–2.5 m

## 16.18 Deep Mixing

*Deep mixing method (DMM)* refers to a ground modification technology in which soft, compressible, or other unstable soils are treated *in-situ* for safely and economically improving the physical and mechanical properties of the natural soil to meet the design

requirements of various geotechnical applications. The treated soil generally has higher strength, lower compressibility, and lower permeability than the native soil. The technology involves mechanically blending *in-situ* soils with cementitious binder materials that are injected into the soil either in a dry form called *dry mixing* or in a slurry form called *wet mixing* through hollow rotating mixing shafts that are often mounted as multi-axis augers equipped with mixing paddles and cutting tools. Treated soils may be constructed as columns in various grid patterns or as overlapping columns to create soil mix walls. The columns are typically 0.6 to 1.5 m in diameter and may extend up to 40 m in depth (FHWA, 2000).

At the present time, *deep mixing* is used more as a generic name to describe the concept of deep soil mixing by using mechanical rotating shafts—as opposed to jet grouting, which uses hydraulically powered high pressure jets to achieve similar objectives. Depending on the characteristics of the mixing equipment, binder materials, treatment patterns, geographic locations, and the specialty contractors implementing the technique, a variety of acronyms and/or trade names are used globally to refer to the general concept of deep mixing.

### Brief History of DMM

Various deep mixing methods evolved throughout the second half of the 20th century, primarily in Japan, the Scandinavian countries, and the United States. A chronological history of these developments and their applications is summarized by FHWA (2000). A brief review of those developments is given here.

DMM was first introduced in 1954 by Intrusion Prepekt Co. (USA) in the form of a single-auger *mixed in place (MIP)* piling technique. The MIP technique was used in Japan by the Seiko Kogyo Company of Osaka for excavation support and groundwater control (1961–early part of 1970s). Japan played pioneering roles in the development of several well-known deep mixing techniques. In 1972, the Seiko Kogyo Company developed the *soil mixed wall (SMW)* method for retaining walls by using overlapping multiple auger technique for the first time. The Port and Harbor Research Institute of Japan developed the *deep lime mixing (DLM)* methods through extensive laboratory and field research (1967–1977); the *cement deep mixing (CDM)* method using fluid cement grout in offshore soft marine soils (1975–1977); and other similar methods, such as *deep chemical mixing (DCM)*, *deep cement continuous mixing (DCCM)*, and *deep mixing improvement by cement stabilization (DEMIC)* over the following five years. The Public Works Research Institute of Japan developed the *dry jet mixing (DJM)* method using dry powdered cement (1976–1980). In 1979, the Tenox Company developed the *soil cement column (SCC)* system in Japan. The *spreadable wing (SWING)* method of deep mixing was developed in Japan in 1984, followed by various jet-assisted methods (1986–1991). In 1992, Fudo Company and Chemical Grout Company of Japan developed the *jet and churning system management (JACSMAN)* that combined the procedures of mechanical mixing (core of the column) and cross jet mixing (outside zone of the column).

The first major DMM development in Scandinavia was the *Swedish lime column* method to treat soft clays under embankments (1967 by Kjeld Paus, Linden–Alimak AB, in cooperation with Swedish Geotechnical Institute, Euroc AB, and BPA Byggproduktion AB).

The first commercial applications were in excavation support, embankment stabilization, and shallow foundations near Stockholm in 1975. The *lime cement column* method was first used commercially in Finland and Norway in the mid-1980s. Outside Scandinavia, the first European developments appear to be in France with the introduction of a compacted soil-cement mix called “*Colmix*” by Bachy Company in 1987 (constructed by reverse rotation of multiple augers during withdrawal), and in the UK at around the same time with the single-auger deep-mixing system developed by Cementation Ltd. In 1991, the City of Helsinki, Finland, and contractor YIT introduced block stabilization of soft clays to a depth of 5 m. In 1995, Finnish researchers introduced new binders such as slag and pulverized fly ash in addition to cement.

Major developments related to DMM in the United States include: (a) introduction of deep soil mixing (DSM) in 1987; (b) shallow soil mixing (SSM) in 1988 (both by Geo-Con, Inc.); (c) inclusion of DMM in the US EPA Superfund Innovative Technology Evaluation Program for *in-situ* stabilization of contaminated soils (1989); and (d) first full-scale demonstration of VERTwall DMM concept in Texas by Geo-Con, Inc. (1998).

## DMM Treatment Patterns

Deep mixing techniques can be used to produce a wide range of patterns in the treated soil structure. The selected pattern depends on the construction location (land or marine), the purpose of the DMM applications, and the characteristics and capabilities of the method used. The treatment patterns can be single element (column), rows of overlapping elements (walls or panels), grids or lattices, or blocks.

## Dry and Wet Mixing Methods

Deep mixing is carried out using either the dry method or the wet method. Dry mixing is possible when the natural moisture content of the *in-situ* soil is quite high, so the cement hydration reaction can take place for strength development. Deep deposits of organic and peat soils (with high water content) can be effectively stabilized with the dry method. The column diameter is typically 0.6 to 0.8 m with the depth of treatment reaching up to 25 m. Release of dry binder and the soil mixing occur during the withdrawal of the mixing rod, where the rotational direction is reversed compared to the direction during penetration. The binder dosage is maintained as desired by controlling the air pressure and the amount of binder during construction.

Wet mixing is more appropriate when the natural water content is low. Soft clays, silts, and fine sands are suitable for this method. The binder is introduced in a slurry form through a nozzle placed generally at the end of the auger. The specialized mixing tool contains transverse beams and can move vertically along the column length to achieve homogeneous mixing. The composition and the amount of slurry can be controlled to achieve design specifications. The column diameters are typically 0.4 to 2.4 m, depending on the application. Steel reinforcements can be inserted into the soft columns to improve bending resistance.

Cement injected in the wet method is typically in the range of 100 to 500 kg/m<sup>3</sup> of untreated soil (Bruce and Bruce, 2003). In the dry method, this range is 100 to 300 kg/m<sup>3</sup>, provided the natural moisture content is in the range of 40 to 200%.

## Problems

- 16.1** A sandy soil has maximum and minimum dry unit weights of  $18.08 \text{ kN/m}^3$  and  $14.46 \text{ kN/m}^3$ , respectively, and a dry unit weight of compaction in the field of  $16.35 \text{ kN/m}^3$ . Estimate the following:
- The relative compaction in the field
  - The relative density in the field
- 16.2** A silty clay soil has a plasticity index (PI) of 14. Estimate the optimum moisture content and the maximum dry unit weight of the soil when compacted using the procedure of:
- Standard Proctor test
  - Modified Proctor test
- Use Eqs. (16.11) and (16.12).
- 16.3** Redo Problem 16.2 using Eqs. (16.9) and (16.10). Given plastic limit (PL) = 18
- 16.4** The following are given for a natural soil deposit:  
 Moist unit weight,  $\gamma = 17.8 \text{ kN/m}^3$   
 Moisture content,  $w = 14\%$   
 $G_s = 2.7$
- This soil is to be excavated and transported to a construction site for use in a compacted fill. If the specification calls for the soil to be compacted at least to a dry unit weight of  $18.4 \text{ kN/m}^3$  at the same moisture content of 14%, how many cubic meters of soil from the excavation site are needed to produce  $20,000 \text{ m}^3$  of compacted fill?
- 16.5** A proposed embankment fill required  $8000 \text{ m}^3$  of compacted soil. The void ratio of the compacted fill is specified to be 0.6. Four available borrow pits are shown below along with the void ratios of the soil and the cost per cubic meter for moving the soil to the proposed construction site.

Borrow pit	Void ratio	Cost ( $\$/\text{m}^3$ )
A	0.82	9
B	0.91	7
C	0.95	8
D	0.75	11

Make the necessary calculations to select the pit from which the soil should be brought to minimize the cost. Assume  $G_s$  to be the same for all borrow-pit soil.

- 16.6** For a vibroflotation work, the backfill to be used has the following characteristics:
- $$D_{50} = 2 \text{ mm}$$
- $$D_{20} = 0.7 \text{ mm}$$
- $$D_{10} = 0.65 \text{ mm}$$
- Determine the suitability number of the backfill. How would you rate the material?
- 16.7** Repeat Problem 16.6 with the following:
- $$D_{50} = 3.2 \text{ mm}$$
- $$D_{20} = 0.91 \text{ mm}$$
- $$D_{10} = 0.72 \text{ mm}$$

- 16.8** Refer to Figure 16.16. For a large fill operation, the average permanent load  $[\Delta\sigma'_{(p)}]$  on the clay layer will increase by about  $75 \text{ kN/m}^2$ . The average effective overburden pressure on the clay layer before the fill operation is  $110 \text{ kN/m}^2$ . For the clay layer, which is normally consolidated and drained at top and bottom, given:  $H_c = 8 \text{ m}$ ,  $C_c = 0.27$ ,  $e_o = 1.02$ ,  $C_v = 0.52 \text{ m}^2/\text{month}$ . Determine the following:
- The primary consolidation settlement of the clay layer caused by the addition of the permanent load  $\Delta\sigma'_{(p)}$
  - The time required for 80% of primary consolidation settlement under the additional permanent load only
  - The temporary surcharge,  $\Delta\sigma'_{(f)}$ , that will be required to eliminate the entire primary consolidation settlement in 12 months by the precompression technique
- 16.9** Repeat Problem 16.8 with the following:  $\Delta\sigma'_{(p)} = 58 \text{ kN/m}^2$ , average effective overburden pressure on the clay layer =  $72 \text{ kN/m}^2$ ,  $H_c = 5 \text{ m}$ ,  $C_c = 0.3$ ,  $e_o = 1.0$ , and  $C_v = 0.1 \text{ cm}^2/\text{min}$ .
- 16.10** The diagram of a sand drain is shown in Figures 16.21 and 16.22. Given:  $r_w = 0.25 \text{ m}$ ,  $r_s = 0.35 \text{ m}$ ,  $d_e = 4.5 \text{ m}$ ,  $C_v = C_{vr} = 0.3 \text{ m}^2/\text{month}$ ,  $k_h/k_s = 2$ , and  $H_c = 9 \text{ m}$ . Determine:
- The degree of consolidation for the clay layer caused only by the sand drains after six months of surcharge application
  - The degree of consolidation for the clay layer that is caused by the combination of vertical drainage (drained on top and bottom) and radial drainage after six months of the application of surcharge.
- Assume that the surcharge is applied instantaneously.
- 16.11** A 10-ft-thick clay layer is drained at the top and bottom. Its characteristics are  $C_{vr} = C_v$  (for vertical drainage) =  $0.042 \text{ ft}^2/\text{day}$ ,  $r_w = 8 \text{ in.}$ , and  $d_e = 6 \text{ ft}$ . Estimate the degree of consolidation of the clay layer caused by the combination of vertical and radial drainage at  $t = 0.2, 0.4, 0.8$ , and 1 year. Assume that the surcharge is applied instantaneously, and there is no smear.
- 16.12** For a sand drain project (Figure 16.20), the following are given:

Clay: Normally consolidated

$$H_c = 5.5 \text{ m (one-way drainage)}$$

$$C_c = 0.3$$

$$e_o = 0.76$$

$$C_v = 0.015 \text{ m}^2/\text{day}$$

Effective overburden pressure at the middle of clay layer =  $80 \text{ kN/m}^2$

Sand drain:  $r_w = 0.07 \text{ m}$

$$r_w = r_s$$

$$d_e = 2.5 \text{ m}$$

$$C_v = C_{vr}$$

A surcharge is applied as shown in Figure P16.12. Calculate the degree of consolidation and the consolidation settlement 50 days after the beginning of the surcharge application.

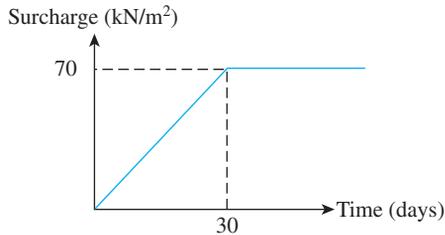


Figure P.16.12

## References

- ABOSHI, H., ICHIMOTO, E., and HARADA, K. (1979). "The Compozer—a Method to Improve Characteristics of Soft Clay by Inclusion of Large Diameter Sand Column," *Proceedings, International Conference on Soil Reinforcement, Reinforced Earth and Other Techniques*, Vol. 1, Paris, pp. 211–216.
- AMERICAN SOCIETY FOR TESTING and MATERIALS (2007). *Annual Book of Standards*, Vol. 04.08, West Conshohocken, PA.
- BACHUS, R. C. and BARKSDALE, R. D. (1989). "Design Methodology for Foundations on Stone Columns," *Proceedings, Foundation Engineering: Current Principles and Practices* American Society of Civil Engineers, Vol. 1, pp. 244–257.
- BARRON, R. A. (1948). "Consolidation of Fine-Grained Soils by Drain Wells," *Transactions, American Society of Civil Engineers*, Vol. 113, pp. 718–754.
- BASORE, C. E. and BOITANO, J. D. (1969). "Sand Densification by Piles and Vibroflotation," *Journal of the Soil Mechanics and Foundations Division, American Society of Civil Engineers*, Vol. 95, No. SM6, pp. 1303–1323.
- BROWN, R. E. (1977). "Vibroflotation Compaction of Cohesionless Soils," *Journal of the Geotechnical Engineering Division, American Society of Civil Engineers*, Vol. 103, No. GT12, pp. 1437–1451.
- BRUCE, D. A. and BRUCE, E. C. (2003). "The Practitioner's Guide to Deep Mixing," *Grouting and Ground Treatment, Proceedings of the Third International Conference*, New Orleans, LA, pp. 474–488.
- BURKE, G. K. (2004). "Jet Grouting Systems: Advantages and Disadvantages," *Proceedings, GeoSupport 2004: Drilled Shafts, Micropiling, Deep Mixing, Remedial Methods, and Special Foundation Systems*, American Society of Civil Engineers, pp. 875–886.
- D'APPOLONIA, D. J., WHITMAN, R. V., and D'APPOLONIA, E. (1969). "Sand Compaction with Vibratory Rollers," *Journal of the Soil Mechanics and Foundations Division, American Society of Civil Engineers*, Vol. 95, No. SM1, pp. 263–284.
- FHWA (2000). "An Introduction to the Deep Soil Mixing Methods as used in Geotechnical Applications," FHWA-RD-99-138, *Federal Highway Administration*, US Department of Transportation, p. 135.
- GURTUG, Y. and SRIDHARAN, A. (2004). "Compaction Behaviour and Prediction of Its Characteristics of Fine Grained Soils with Particular Reference to Compaction Energy," *Soils and Foundations*, Vol. 44, No. 5, pp. 27–36.
- ICHIMOTO, A. (1981). "Construction and Design of Sand Compaction Piles," *Soil Improvement, General Civil Engineering Laboratory* (in Japanese), Vol. 5, pp. 37–45.
- JOHNSON, S. J. (1970a). "Precompression for Improving Foundation Soils," *Journal of the Soil Mechanics and Foundations Division, American Society of Civil Engineers*. Vol. 96, No. SM1, pp. 114–144.

- JOHNSON, S. J. (1970b). "Foundation Precompression with Vertical Sand Drains," *Journal of the Soil Mechanics and Foundations Division*, American Society of Civil Engineers, Vol. 96, No. SM1, pp. 145–175.
- LEONARDS, G. A., CUTTER, W. A., and HOLTZ, R. D. (1980). "Dynamic Compaction of Granular Soils," *Journal of Geotechnical Engineering Division*, ASCE, Vol. 96, No. GT1, pp. 73–110.
- MATEO, L. D., BIGOTTI, F., and RICCO, R. (2009). "Best-Fit Model to Estimate Proctor Properties of Compacted Soil," *Journal of Geotechnical and Geoenvironmental Engineering*, American Society of Civil Engineers, Vol. 135, No. 7, pp. 992–996.
- MITCHELL, J. K. (1970). "In-Place Treatment of Foundation Soils," *Journal of the Soil Mechanics and Foundations Division*, American Society of Civil Engineers, Vol. 96, No. SM1, pp. 73–110.
- MITCHELL, J. K. (1981). "Soil Improvement—State-of-the-Art Report," *Proceedings, 10th International Conference on Soil Mechanics and Foundation Engineering*, Stockholm, Sweden, Vol. 4, pp. 506–565.
- MITCHELL, J. K. and FREITAG, D. R. (1959). "A Review and Evaluation of Soil–Cement Pavements," *Journal of the Soil Mechanics and Foundations Division*, American Society of Civil Engineers, Vol. 85, No. SM6, pp. 49–73.
- MITCHELL, J. K. and HUBER, T. R. (1985). "Performance of a Stone Column Foundation," *Journal of Geotechnical Engineering*, American Society of Civil Engineers, Vol. 111, No. GT2, pp. 205–223.
- MURAYAMA, S. (1962). "An Analysis of Vibro-Compozer Method on Cohesive Soils," *Construction in Mechanization* (in Japanese), No. 150, pp. 10–15.
- OHTA, S. and SHIBAZAKI, M. (1982). "A Unique Underpinning of Soil Specification Utilizing Super-High Pressure Liquid Jet," *Proceedings, Conference on Grouting in Geotechnical Engineering*, New Orleans, Louisiana.
- OLSON, R. E. (1977). "Consolidation under Time-Dependent Loading," *Journal of Geotechnical Engineering Division*, ASCE, Vol. 102, No. GT1, pp. 55–60.
- OMAR, M., ABDALLAH, S., BASMA, A., and BARAKAT, S. (2003). "Compaction Characteristics of Granular Soils in the United Arab Emirates," *Geotechnical and Geological Engineering*, Vol. 21, No. 3, pp. 283–295.
- OSMAN, S., TOGROL, E., and KAYADELEN, C. (2008). "Estimating Compaction Behavior of Fine-Grained Soils Based on Compaction Energy," *Canadian Geotechnical Journal*, Vol. 45, No. 6, pp. 877–887.
- OTHMAN, M. A. and LUETTICH, S. M. (1994). "Compaction Control Criteria for Clay Hydraulic Barriers," *Transportation Research Record*, No. 1462, National Research Council, Washington, D.C., pp. 28–35.
- PARTOS, A., WELSH, J. P., KAZANIWSKY, P. W., and SANDER, E. (1989). "Case Histories of Shallow Foundation on Improved Soil," *Proceedings, Foundation Engineering: Current Principles and Practices*, American Society of Civil Engineers, Vol. 1, pp. 313–327.
- PATRA, C. R., SIVAKUGAN, N., DAS, B. M., and ROUT, S. K. (2010). "Correlations of Relative Density of Clean Sand with Median Grain Size and Compaction Energy," *International Journal of Geotechnical Engineering*, Vol. 4, No. 2, pp. 195–203.
- PORAN, C. J. and RODRIGUEZ, J. A. (1992). "Design of Dynamic Compaction," *Canadian Geotechnical Journal*, Vol. 2, No. 5, pp. 796–802.
- SHIBUYA, S. and HANH, L. T. (2001). "Estimating Undrained Shear Strength of Soft Clay Ground Improved by Preloading with PVD—Case History in Bangkok," *Soils and Foundations*, Vol. 41, No. 4, pp. 95–101.
- STEUDLEIN, A. W. and HOLTZ, R. D. (2013). "Bearing Capacity of Spread Footings on Aggregate Pier Reinforced Clay," *Journal of Geotechnical and Geoenvironmental Engineering*, American Society of Civil Engineers, Vol. 139, No. 1, pp. 49–58.

- THOMPSON, M. R. (1967). *Bulletin 492, Factors Influencing the Plasticity and Strength of Lime-Soil Mixtures*, Engineering Experiment Station, University of Illinois.
- THOMPSON, M. R. (1966). "Shear Strength and Elastic Properties of Lime-Soil Mixtures," *Highway Research Record 139*, National Research Council, Washington, D.C., pp. 1–14.
- TRANSPORTATION RESEARCH BOARD (1987). *Lime Stabilization: Reactions, Properties, Design and Construction*, National Research Council, Washington, D.C.
- TULLOCK, W. S., II, HUDSON, W. R., and KENNEDY, T. W. (1970). *Evaluation and Prediction of the Tensile Properties of Lime-Treated Materials*, Research Report 98-5, Center for Highway Research, University of Texas, Austin, Texas.
- WELSH, J. P. and BURKE, G. K. (1991). "Jet Grouting—Uses for Soil Improvement," *Proceedings, Geotechnical Engineering Congress*, American Society of Civil Engineers, Vol. 1, pp. 334–345.
- WELSH, J. P., RUBRIGHT, R. M., and COOMBER, D. B. (1986). "Jet Grouting for support of Structures," presented at the Spring Convention of the American Society of Civil Engineers, Seattle, Washington.
- YEUNG, A. T. (1997). "Design Curves for Prefabricated Vertical Drains," *Journal of Geotechnical and Geoenvironmental Engineering*, Vol. 123, No. 8, pp. 755–759.



# APPENDIX A

## Reinforced Concrete Design of Shallow Foundations

### A.1 Fundamentals of Reinforced Concrete Design

**A**t the present time, most reinforced concrete designs are based on the recommendations of the building code prepared by the American Concrete Institute—that is, ACI 318-11. The basis for this code is the *ultimate strength design* or *strength design*. Some of the fundamental recommendations of the code are briefly summarized in the following sections.

#### Load Factors

According to ACI Code Section 9.2, depending on the type, the ultimate load-carrying capacity of a structural member should be one of the following:

$$U = 1.4D \quad (\text{A.1a})$$

$$U = 1.2D + 1.6L + 0.5(L_r \text{ or } S \text{ or } R) \quad (\text{A.1b})$$

$$U = 1.2D + 1.6(L_r \text{ or } S \text{ or } R) + (1.0L \text{ or } 0.5W) \quad (\text{A.1c})$$

$$U = 1.2D + 1.0W + 1.0L + 0.5(L_r \text{ or } S \text{ or } R) \quad (\text{A.1d})$$

$$U = 1.2D + 1.0E + 1.0L + 0.2S \quad (\text{A.1e})$$

$$U = 0.9D + 1.0W \quad (\text{A.1f})$$

or

$$U = 0.9D + 1.0E \quad (\text{A.1g})$$

where

$U$  = ultimate load-carrying capacity of a member

$D$  = dead loads

$E$  = effects of earthquake

$L$  = live loads

$L_r$  = roof live loads

$R$  = rain load

$S$  = snow load

$W$  = wind load

## Strength Reduction Factor

The design strength provided by a structural member is equal to the nominal strength times a strength reduction factor,  $\phi$ , or

$$\text{Design strength} = \phi (\text{nominal strength})$$

The reduction factor,  $\phi$ , takes into account the inaccuracies in the design assumptions, changes in property or strength of the construction materials, and so on. Following are some of the recommended values of  $\phi$  (ACI Code Section 9.3):

Condition	Value of $\phi$
a. Axial tension; flexure with or without axial tension	0.9
b. Shear or torsion	0.75
c. Axial compression with spiral reinforcement	0.75
d. Axial compression without spiral reinforcement	0.65
e. Bearing on concrete	0.65
f. Flexure in plain concrete	0.65

## Design Concepts for a Rectangular Section in Bending

Figure A.1a shows a section of a concrete beam having a width  $b$  and a depth  $h$ . The assumed stress distribution across the section at ultimate load is shown in Figure A.1b. The following notations have been used in this figure:

$f'_c$  = compressive strength of concrete at 28 days

$A_s$  = area of steel tension reinforcement

$f_y$  = yield stress of reinforcement in tension

$d$  = effective depth

$l$  = location of the neutral axis measured from the top of the compression face

$a = \beta l$

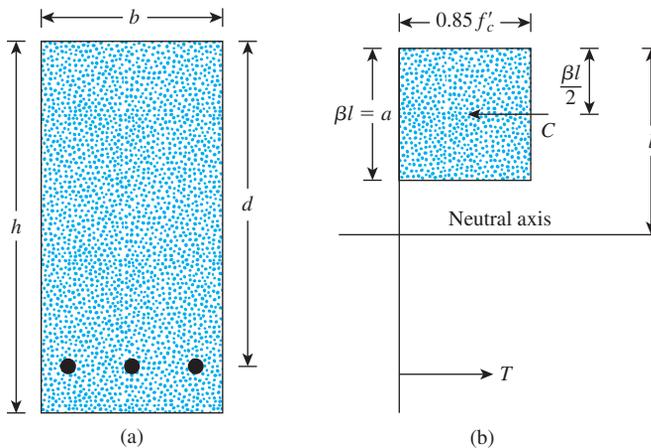


Figure A.1 Rectangular section in bending

$\beta = 0.85$  for  $f'_c$  of 28 MN/m<sup>2</sup> (4000 lb/in.<sup>2</sup>) or less and decreases at the rate of 0.05 for every 7 MN/m<sup>2</sup> (1000 lb/in.<sup>2</sup>) increase of  $f'_c$ . However, it cannot be less than 0.65 in any case (ACI Code Section 10.2.7).

From the principles of statics, for the section

$$\Sigma \text{ compressive force, } C = \Sigma \text{ tensile force, } T$$

Thus,

$$0.85f'_c ab = A_s f_y$$

or

$$a = \frac{A_s f_y}{0.85f'_c b} \quad (\text{A.2})$$

Also, for the beam section, the nominal ultimate moment can be given as

$$M_n = A_s f_y \left( d - \frac{a}{2} \right) \quad (\text{A.3})$$

where  $M_n$  = theoretical ultimate moment.

The design ultimate moment,  $M_u$ , can be given as

$$M_u = A_s f_y \left( d - \frac{a}{2} \right) \quad (\text{A.4})$$

Combining Eqs. (A.2) and (A.4)

$$M_u = \phi A_s f_y \left[ d - \left( \frac{1}{2} \right) \frac{A_s f_y}{0.85f'_c b} \right] = \phi A_s f_y \left( d - \frac{0.59 A_s f_y}{f'_c b} \right) \quad (\text{A.5})$$

The steel percentage is defined by the equation

$$s = \frac{A_s}{bd} \quad (\text{A.6})$$

In a balanced beam, failure would occur by sudden simultaneous yielding of tensile steel and crushing of concrete. The balanced percentage of steel (for Young's modulus of steel,  $E_s = 200 \text{ MN/m}^2$ ) can be given as

$$s_b = \frac{0.85f'_c}{f_y} (\beta) \left( \frac{600}{600 + f_y} \right) \quad (\text{A.7a})$$

where  $f'_c$  and  $f_y$  are in MN/m<sup>2</sup>.

In conventional English units (with  $E_s = 29 \times 10^6 \text{ lb/in.}^2$ )

$$s_b = \frac{0.85f'_c}{f_y} (\beta) \left( \frac{87,000}{87,000 + f_y} \right) \quad (\text{A.7b})$$

where  $f'_c$  and  $f_y$  are in lb/in.<sup>2</sup>

To avoid sudden failure without warning, ACI Code Section 10.3.5 recommends that the maximum steel percentage ( $s_{\max}$ ) should be limited to a net tensile strain ( $\epsilon_t$ ) of 0.004. For all practical purposes,

$$s_{\max} \approx 0.75 s_b \quad (\text{A.8})$$

The nominal or theoretical shear strength of a section,  $V_n$ , can be given as

$$V_n = V_c + V_s \quad (\text{A.9})$$

where  $V_c$  = nominal shear strength of concrete

$V_s$  = nominal shear strength of reinforcement

The permissible shear strength,  $V_u$ , can be given by

$$V_u = \phi V_n = \phi(V_c + V_s) \quad (\text{A.10})$$

The values of  $V_c$  can be given by the following equations (ACI Code Sections 11.2 and 11.11).

$$V_c = 0.17\lambda \sqrt{f'_c} bd \quad (\text{for member subjected to shear and flexure}) \quad (\text{A.11a})$$

and

$$V_c = 0.33\lambda \sqrt{f'_c} bd \quad (\text{for member subjected to diagonal tension}) \quad (\text{A.11b})$$

where  $f'_c$  is in  $\text{MN/m}^2$ ,  $V_c$  is in MN,  $b$  and  $d$  are in m, and  $\lambda = 1$  for normal weight concrete.

In conventional English units, Eqs. (A.11a) and (A.11b) take the following form:

$$V_c = 2\lambda \sqrt{f'_c} bd \quad (\text{A.12a})$$

$$V_c = 4\lambda \sqrt{f'_c} bd \quad (\text{A.12b})$$

where  $V_c$  is in lb,  $f'_c$  is in  $\text{lb/in.}^2$ , and  $b$  and  $d$  are in inches.

Note that

$$v_c = \frac{V_c}{bd} \quad (\text{A.13})$$

where  $v_c$  is the shear stress.

Now, combining Eqs. (A.11a), and (A.13), one obtains

$$\text{Permissible shear stress} = v_u = \frac{V_u}{bd} = 0.17\phi\lambda\sqrt{f'_c} \quad (\text{A.14a})$$

Similarly, from Eqs. (A.11b), and (A.13),

$$v_u = 0.33\lambda\phi\sqrt{f'_c} \quad (\text{A.14b})$$

## A.2 Reinforcing Bars

The nominal sizes of reinforcing bars commonly used in the United States are given in Table A.1.

**Table A.1** Nominal Sizes of Reinforcing Bars Used in the United States

Bar No.	Diameter		Area of cross section	
	(mm)	(in.)	(mm <sup>2</sup> )	(in. <sup>2</sup> )
3	9.52	0.375	71	0.11
4	12.70	0.500	129	0.20
5	15.88	0.625	200	0.31
6	19.05	0.750	284	0.44
7	22.22	0.875	387	0.60
8	25.40	1.000	510	0.79
9	28.65	1.128	645	1.00
10	32.26	1.270	819	1.27
11	35.81	1.410	1006	1.56
14	43.00	1.693	1452	2.25
18	57.33	2.257	2580	4.00

The details regarding standard metric bars used in Canada are as follows:

Bar number	Diameter, mm	Area, mm <sup>2</sup>
10	11.3	100
15	16.0	200
20	19.5	300
25	25.2	500
30	29.9	700
35	35.7	1000
45	43.7	1500
55	56.4	2500

Reinforcing-bar sizes in the metric system have been recommended by UNESCO (1971). (Bars in Europe will be specified to comply with the standard EN 100080).

Bar diameter, mm	Area, mm <sup>2</sup>
6	28
8	50
10	79
12	113
14	154
16	201
18	254
20	314
22	380
25	491
30	707
32	804
40	1256
50	1963
60	2827

This appendix uses the standard bar diameters recommended by UNESCO.

## A.3 Development Length

The development length,  $L_d$ , is the length of embedment required to develop the yield stress in the tension reinforcement for a section in flexure. ACI Code Section 12.2 lists the basic development lengths for tension reinforcement.

## A.4 Design Example of a Continuous Wall Foundation

Let it be required to design a load-bearing wall with the following data:

$$\text{Dead load} = D = 43.8 \text{ kN/m}$$

$$\text{Live load} = L = 17.5 \text{ kN/m}$$

$$\text{Gross allowable bearing capacity of soil} = 94.9 \text{ kN/m}^2$$

$$\text{Depth of the top of foundation from the ground surface} = 1.2 \text{ m}$$

$$f_y = 413.7 \text{ MN/m}^2$$

$$f'_c = 20.68 \text{ MN/m}^2$$

$$\text{Unit weight of soil} = \gamma = 17.27 \text{ kN/m}^3$$

$$\text{Unit weight of concrete} = \gamma_c = 22.97 \text{ kN/m}^3$$

### General Considerations

For this design, assume the foundation thickness to be 0.3 m. Refer to ACI Code Section 7.7.1, which recommends a minimum cover of 76 mm over steel reinforcement, and assume that the steel bars to be used are 12 mm in diameter (Figure A.2a). Thus,

$$d = 300 - 76 - \frac{12}{2} = 218 \text{ mm}$$

Also,

$$\text{Weight of the foundation} = (0.3)\gamma_c = (0.3)(22.97) = 6.89 \text{ kN/m}^2$$

$$\begin{aligned} \text{Weight of soil above the foundation} &= (1.2)\gamma = (1.2)(17.27) \\ &= 20.72 \text{ kN/m}^2 \end{aligned}$$

So, the net allowable soil bearing capacity is

$$q_{\text{net(all)}} = 94.9 - 6.89 - 20.72 = 67.29 \text{ kN/m}^2$$

Hence, the required width of foundation is

$$B = \frac{D + L}{q_{\text{net(all)}}} = \frac{43.8 + 17.5}{67.29} = 0.91 \text{ m}$$

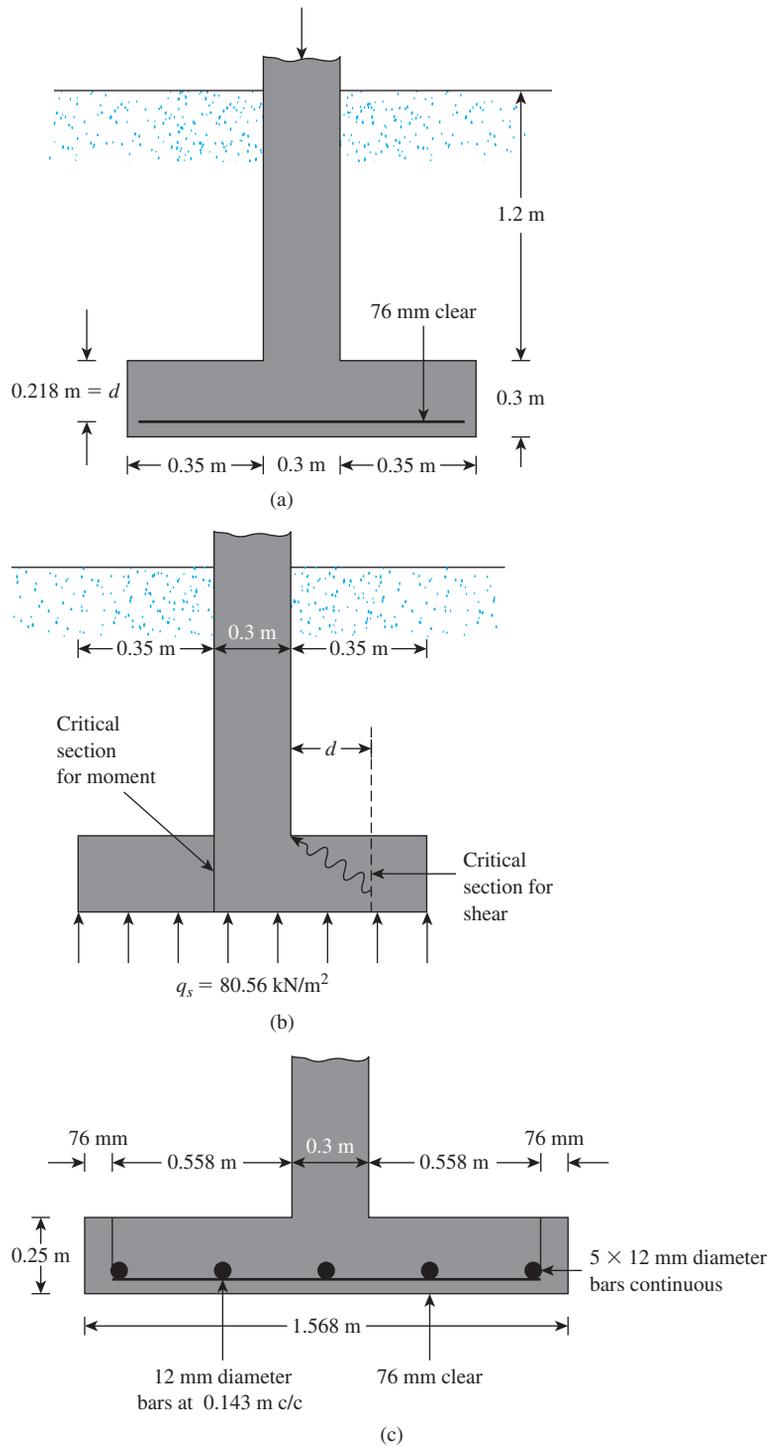


Figure A.2 Continuous wall foundation

So, assume  $B = 1$  m.

According to ACI Code Section 9.2,

$$U = 1.2D + 1.6L = (1.2)(43.8) + (1.6)(17.5) = 80.56 \text{ kN/m}$$

Converting the net allowable soil pressure to an ultimate (factored) value,

$$q_s = \frac{U}{(B)(1)} = \frac{80.56}{(1)(1)} = 80.56 \text{ kN/m}^2$$

### Investigation of Shear Strength of the Foundation

The critical section for shear occurs at a distance  $d$  from the face of the wall (ACI Code Section 11.11.3), as shown in Figure A.2b. So, shear at critical section

$$V_u = (0.35 - d)q_s = (0.35 - 0.218)(80.56) = 10.63 \text{ kN/m}$$

From Eq. (A.11a) with  $\lambda = 1$ ,

$$V_c = 0.17\sqrt{f'_c}bd = 0.17\sqrt{20.68}(1)(0.218) = 0.1685 \text{ MN/m} \approx 168 \text{ kN/m}$$

Also,

$$\phi V_c = (0.75)(168) = 126 \text{ kN/m} > V_u = 10.63 \text{ kN/m} \text{—O.K.}$$

(Note:  $\phi = 0.75$  for shear—ACI Code Section 9.3.2.3.)

Because  $V_u < \phi V_c$ , the total thickness of the foundations could be reduced to 250 mm. So, the modified

$$d = 250 - 76 - \frac{12}{2} = 168 \text{ mm} > 152 \text{ mm} = d_{\min} \text{ (ACI Code Section 15.7)}$$

Neglecting the small difference in footing weight, if  $d = 168$  mm,

$$\begin{aligned} \phi V_c &= (0.75)(0.17)\sqrt{20.68}(1)(0.168) = 0.0974 \text{ MN} \\ &= 97.4 \text{ kN} > V_u \text{—O.K.} \end{aligned}$$

### Flexural Reinforcement

For steel reinforcement, factored moment at the face of the wall has to be determined (ACI Code Section 15.4.2). The bending of the foundation will be in one direction only. So, according to Figure A.2b, the design ultimate moment

$$\begin{aligned} M_u &= \frac{q_s l^2}{2} \\ l &= 0.35 \text{ m} \end{aligned}$$

So,

$$M_u = \frac{(80.56)(0.35)^2}{2} = 4.93 \text{ kN-m/m}$$

From Eqs. (A.2) and (A.3),

$$M_n = A_s f_y \left( d - \frac{a}{2} \right)$$

$$a = \frac{A_s f_y}{0.85 f'_c b} = \frac{(A_s)(413.7)}{(0.85)(20.68)(1)} = 23.5351 A_s$$

Thus,

$$M_n = (A_s)(413.7) \left( 0.168 - \frac{23.5351}{2} A_s \right)$$

or

$$M_n (\text{MN-m/m}) = 69.5 A_s - 4868.24 A_s^2$$

Again, from Eq. (A.4)

$$M_u \leq \phi M_n$$

where  $\phi = 0.9$ .

Thus,

$$4.93 \times 10^{-3} (\text{MN-m/m}) = 0.9 (69.5 A_s - 4868.24 A_s^2)$$

Solving for  $A_s$ , one gets

$$A_{s(1)} = 0.0128 \text{ m}^2; A_{s(2)} = 0.0001 \text{ m}^2$$

Hence, steel percentage with  $A_{s(1)}$  is

$$s_1 = \frac{A_{s(1)}}{bd} = \frac{0.0128}{(1)(0.168)} = 0.0762$$

Similarly, steel percentage with  $A_{s(2)}$  is

$$s_2 = \frac{A_{s(2)}}{bd} = \frac{0.0001}{(1)(0.168)} = 0.0006 < s_{\min} = 0.0018 \text{ (ACI Code Section 7.12.2.1)}$$

The maximum steel percentage that can be provided is given in Eqs. (A.7a) and (A.8). Thus,

$$s_{\max} = (0.75)(0.85) \frac{f'_c}{f_y} \beta \left( \frac{600}{600 + f_y} \right)$$

Note that  $\beta = 0.85$ . Substituting the proper values of  $\beta$ ,  $f'_c$ , and  $f_y$  in the preceding equation, one obtains

$$s_{\max} = 0.016$$

Note that  $s_1 = 0.0762 > s_{\max} = 0.016$ . So use  $s = s_{\min} = 0.0018$ . So,

$$A_s = (s_{\min})(b)(d) = (0.0018)(1)(0.168) = 0.000302 \text{ m}^2 = 302 \text{ mm}^2$$

Use 12-mm diameter bars @ 350 mm c/c. Hence,

$$A_s (\text{provided}) = \frac{1000}{350} \left( \frac{\pi}{4} \right) (12)^2 = 323 \text{ mm}^2$$

## Development Length of Reinforcement Bars ( $L_d$ )

According to ACI Code Section 12.2, the minimum development length  $L_d$  for 12 mm diameter bars is about 558 mm (approximately equivalent to No. 4 U.S. bar). Assuming a 76-mm cover to be on both sides of the footing, the minimum footing width should be  $[2(558 + 76) + 300]$  mm = 1568 mm = 1.568 m. Hence, the revised calculations are

$$q_s = \frac{U}{(B)(1)} = \frac{80.56}{1.568} = 51.38 \text{ kN/m}^2$$

$$M_u = \frac{q_s l^2}{2} = \frac{1}{2}(51.38)(0.558 + 0.076)^2$$

$$= 10.326 \text{ kN} \cdot \text{m/m} = 10.326 \times 10^{-3} \text{ MN} \cdot \text{m/m}$$

$$a = \frac{A_s f_y}{0.85 f'_c b} = \frac{A_s(413.7)}{(0.85)(20.68)(1.568)} = 15.01 A_s$$

$$M_n = A_s f_y \left( d - \frac{a}{2} \right) = A_s(413.7) \left( 0.168 - \frac{15.01 A_s}{2} \right)$$

$$\phi M_n \geq M_u$$

$$10.326 \times 10^{-3} = 0.9 A_s(413.7) \left( 0.168 - \frac{15.01 A_s}{2} \right)$$

and

$$A_s = 0.00016 \text{ m}^2$$

$$\text{The steel percentage is } s = \frac{A_s}{bd} = \frac{0.00016}{(1.568)(0.25)} < 0.0018.$$

(Note: Use gross area when  $s_{\min} = 0.0018$  is used.)

Use  $A_s = (0.0018)(1.568)(0.25) = 0.000706 \text{ m}^2 = 706 \text{ mm}^2$ . Provide  $7 \times 12 \text{ mm}$  bars ( $A_s = 565 \text{ mm}^2$ ).

Minimum reinforcement should be furnished in the long direction to offset shrinkage and temperature effects (ACI Code Section 7.12.). So,

$$A_s = (0.0018)(b)(d) = (0.0018) [(0.558 + 0.076)(2) + 0.3](0.168)$$

$$= 0.000474 \text{ m}^2 = 474 \text{ mm}^2$$

Provide  $5 \times 12 \text{ mm}$  bars ( $A_s = 565 \text{ mm}^2$ ).

The final design sketch is shown in Figure A.2c.

## A.5 Design Example of a Square Foundation for a Column


Figure A.3a shows a square column foundation with the following conditions:

$$\text{Live load} = L = 675 \text{ kN}$$

$$\text{Dead load} = D = 1125 \text{ kN}$$

Allowable gross soil-bearing capacity =  $q_{all} = 145 \text{ kN/m}^2$   
 Column size =  $0.5 \text{ m} \times 0.5 \text{ m}$   
 $f'_c = 20.68 \text{ MN/m}^2$   
 $f_y = 413.7 \text{ MN/m}^2$

Let it be required to design the column foundation.

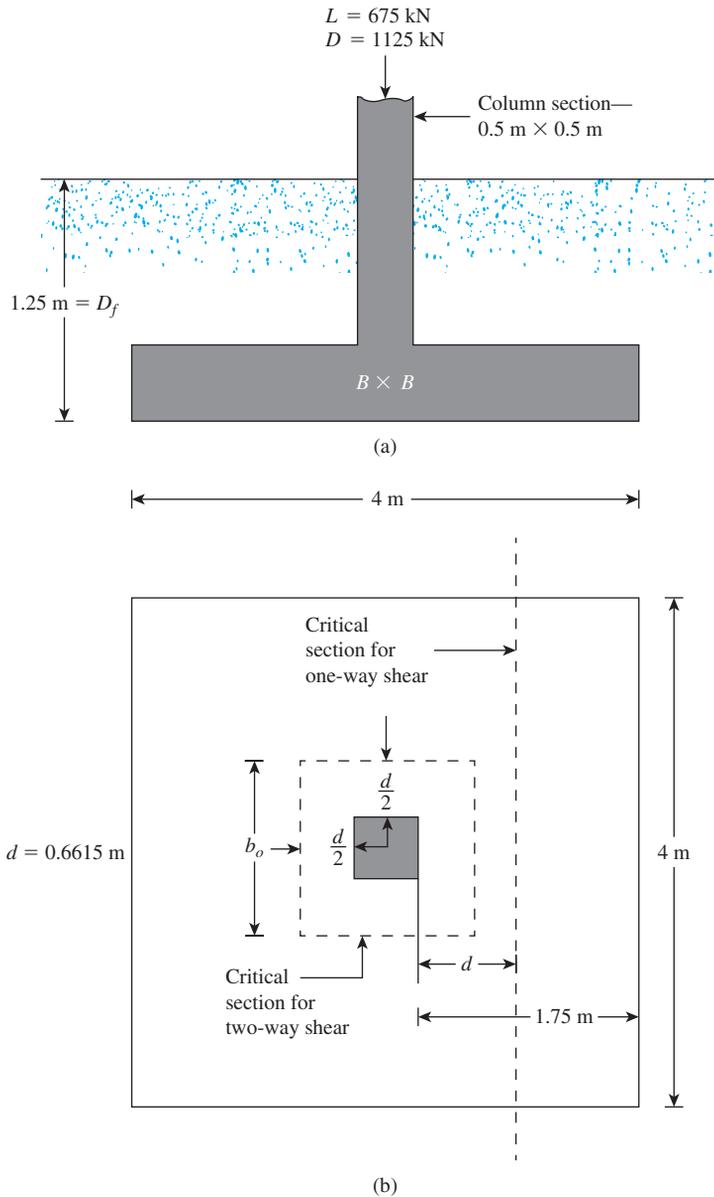

**Figure A.3** Square foundation for a column

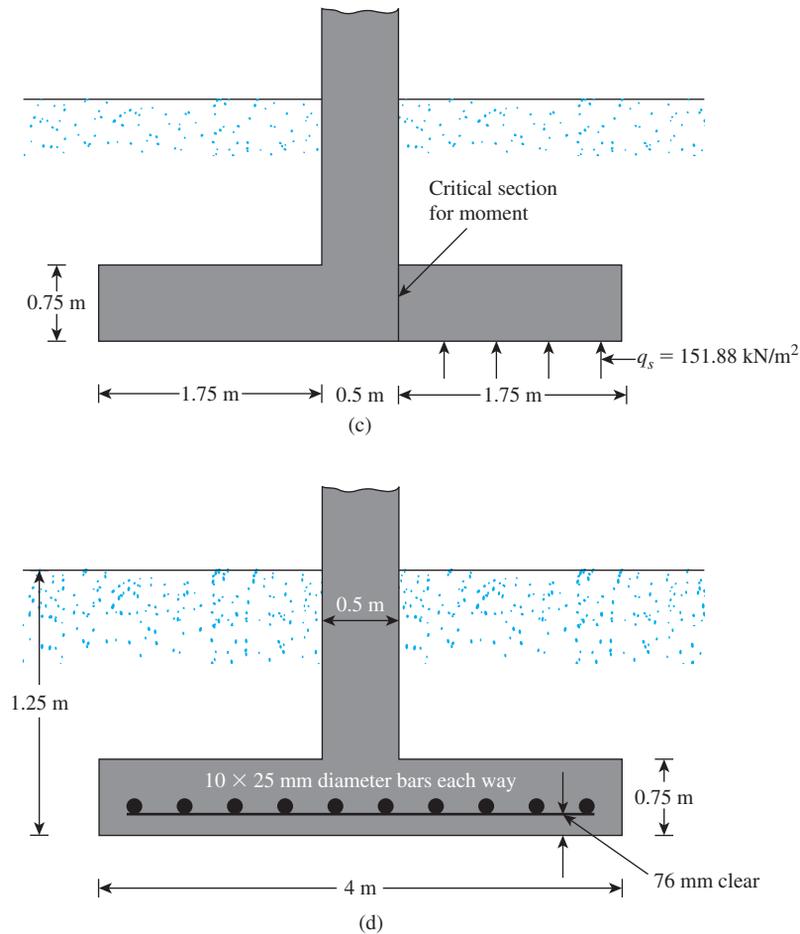


Figure A.3 (continued)

## General Considerations

Let the average unit weight of concrete and soil above the base of the foundation be  $21.97 \text{ kN/m}^3$ . So, the net allowable soil-bearing capacity

$$q_{\text{all(net)}} = 145 - (D_f)(21.97) = 145 - (1.25)(21.97) = 117.54 \text{ kN/m}^2$$

Hence, the required foundation area is

$$A = B^2 = \frac{D + L}{q_{\text{all(net)}}} = \frac{675 + 1125}{117.54} = 15.31 \text{ m}^2$$

Use a foundation with dimensions ( $B$ ) of  $4 \text{ m} \times 4 \text{ m}$ .

The factored load for the foundation is

$$U = 1.2D + 1.6L = (1.2)(1125) + (1.6)(675) = 2430 \text{ kN}$$

Hence, the factored soil pressure is

$$q_s = \frac{U}{B^2} = \frac{2430}{16} = 151.88 \text{ kN/m}^2$$

Assume the thickness of the foundation to be equal to 0.75 m. With a clear cover of 76 mm over the steel bars and an assumed bar diameter of 25 mm, we have

$$d = 0.75 - 0.076 - \frac{0.025}{2} = 0.6615 \text{ m}$$

### Check for Shear

As we have seen in Section A.4,  $V_u$  should be equal to or less than  $\phi V_c$ . For one-way shear [with  $\lambda = 1$  in Eq. (A.11a)],

$$V_u \leq \phi(0.17)\sqrt{f'_c}bd$$

The critical section for one-way shear is located at a distance  $d$  from the edge of the column (ACI Code Section 11.1.3) as shown in Figure A.3b. So

$$V_u = q_s \times \text{critical area} = (151.88)(4)(1.75 - 0.6615) = 661.3 \text{ kN}$$

Also (with  $\lambda = 1$ ),

$$\phi V_c = (0.75)(0.17)(\sqrt{20.68})(4)(0.6615)(1000) = 1534.2 \text{ kN}$$

So,

$$V_u = 661.3 \text{ kN} \leq \phi V_c = 1534.2 \text{ kN—O.K.}$$

For two-way shear, the critical section is located at a distance of  $d/2$  from the edge of the column (ACI Code Section 11.11.1.2). This is shown in Figure A.3b. For this case, [with  $\lambda = 1$  in Eq. (A.11b)]

$$\phi V_c = \phi(0.33)\sqrt{f'_c}b_o d$$

The term  $b_o$  is the perimeter of the critical section for two-way shear. Or for this design,

$$b_o = 4[0.5 + 2(d/2)] = 4[0.5 + 2(0.3308)] = 4.65 \text{ m}$$

Hence,

$$\phi V_c = (0.75)(0.33)(\sqrt{20.68})(4.65)(0.6615) = 3.462 \text{ MN} = 3462 \text{ kN}$$

Also,

$$\begin{aligned} V_u &= (q_s)(\text{critical area}) \\ \text{Critical area} &= (4 \times 4) - (0.5 + 0.6615)^2 = 14.65 \text{ m}^2 \end{aligned}$$

So,

$$\begin{aligned} V_u &= (151.88)(14.65) = 2225.18 \text{ kN} \\ V_u &= 2225.18 \text{ kN} < \phi V_c = 3462 \text{ kN—O.K.} \end{aligned}$$

The assumed depth of foundation is more than adequate.

## Flexural Reinforcement

According to Figure A.3c, the moment at critical section (ACI Code Section 15.4.2) is

$$M_u = (q_s B) \left( \frac{1.75}{2} \right)^2 = \frac{[(151.88)(4)](1.75)^2}{2} = 930.27 \text{ kN-m}$$

From Eq. (A.2),

$$a = \frac{A_s f_v}{0.85 f'_c b} \quad (\text{Note: } b = B)$$

or

$$A_s = \frac{0.85 f'_c B a}{f_y} = \frac{(0.85)(20.68)(4)a}{413.7} = 0.17a$$

From Eq. (A.4),

$$M_u \leq \phi A_s f_v \left( d - \frac{a}{2} \right)$$

With  $\phi = 0.9$  and  $A_s = 0.17a$ ,

$$M_u = 930.27 = (0.9)(0.17a)(413700) \left( 0.6615 - \frac{a}{2} \right)$$

Solution of the preceding equation given  $a = 0.0226$  m. Hence,

$$A_s = 0.17a = (0.17)(0.0226) = 0.0038 \text{ m}^2$$

The percentage of steel is

$$\begin{aligned} s &= \frac{A_s}{bd} = \frac{A_s}{Bd} = \frac{0.0038}{(4)(0.6615)} = 0.0015 < s_{\min} \\ &= 0.0018 \text{ (ACI Code Section 7.12)} \end{aligned}$$

So,

$$\begin{aligned} A_{s(\min)} &= (0.0018)(B)(d) = (0.0018)(4)(0.6615) \\ &= 0.004762 \text{ m}^2 = 47.62 \text{ cm}^2 \end{aligned}$$

Provide  $10 \times 25$ -mm diameter bars each way [ $A_s = (4.91)(10) = 49.1 \text{ cm}^2$ ].

## Check for Development Length ( $L_d$ )

From ACI Code Section 12.2.2, for 25 mm diameter bars,  $L_d \approx 1338$  mm. Actual  $L_d$  provided is  $(4 - 0.5/2) - 0.076$  (cover) = 1.674 m > 1338 mm—O.K.

## Check for Bearing Strength

ACI Code Section 10.14 indicates that the bearing strength should be at least  $0.85 \phi f'_c A_1 \sqrt{A_2/A_1}$  with a limit of  $\sqrt{A_2/A_1} \leq 2$ . For this problem,  $\sqrt{A_2/A_1} = \sqrt{(4 \times 4)/(0.5 \times 0.5)} = 8$ . So, use  $\sqrt{A_2/A_1} = 2$ . Also  $\phi = 0.7$ . Hence, the design

bearing strength =  $(0.85)(0.65)(20.68)(0.5 \times 0.5)(2) = 5.713 \text{ MN} = 5713 \text{ kN}$ . However, the factored column load  $U = 2430 \text{ kN} < 5713 \text{ kN}$ —O.K.

The final design section is shown in Figure A.3d.

## A.6 Design Example of a Rectangular Foundation for a Column

This section describes the design of a rectangular foundation to support a column having dimensions of  $0.4 \text{ m} \times 0.4 \text{ m}$  in cross section. Other details are as follows:

Dead load =  $D = 290 \text{ kN}$

Live load =  $L = 110 \text{ kN}$

Depth from the ground surface to the top of the foundation =  $1.2 \text{ m}$

Allowable gross soil-bearing capacity =  $120 \text{ kN/m}^2$

Maximum width of foundation =  $B = 1.5 \text{ m}$

$f_y = 413.7 \text{ MN/m}^2$

$f'_c = 20.68 \text{ MN/m}^2$

Unit weight of soil =  $\gamma = 17.27 \text{ kN/m}^3$

Unit weight of concrete =  $\gamma_c = 22.97 \text{ kN/m}^3$

### General Considerations

For this design, let us assume a foundation thickness of  $0.45 \text{ m}$  (Figure A.4a). The weight of foundation/ $\text{m}^2 = 0.45 \gamma_c = (0.45)(22.97) = 10.34 \text{ kN/m}^2$ , and the weight of soil above the foundation/ $\text{m}^2 = (1.2)\gamma = (1.2)(17.27) = 20.72 \text{ kN/m}^2$ . Hence, the net allowable soil-bearing capacity  $[q_{\text{net(allow)}}] = 120 - 10.34 - 20.72 = 88.94 \text{ kN/m}^2$ .

The required area of the foundation =  $(D + L)/q_{\text{net(allow)}} = (290 + 110)/88.94 = 4.5 \text{ m}^2$ . Hence, the length of the foundation is  $4.5 \text{ m}^2/B = 4.5/1.5 = 3 \text{ m}$ .

The factored column load =  $1.2D + 1.6L = 1.2(290) + 1.6(110) = 524 \text{ kN}$ .

The factored soil-bearing capacity,  $q_s = \text{factored load/foundation area} = 524/4.5 = 116.44 \text{ kN/m}^2$ .

### Shear Strength of Foundation

Assume that the steel bars to be used have a diameter of  $16 \text{ mm}$ . So, the effective depth  $d = 450 - 76 - 16/2 = 366 \text{ mm}$ . (Note that the assumed clear cover is  $76 \text{ mm}$ .)

Figure A.4a shows the critical section for one-way shear (ACI Code Section 11.11.1.1). According to this figure

$$V_u = (1.5 - \frac{0.4}{2} - 0.366)Bq_s = (0.934)(1.5)(116.44) = 163.13 \text{ kN}$$

The nominal shear capacity of concrete for one-way beam action [with  $\lambda = 1$  in Eq. (11.a)]

$$V_c = 0.17\sqrt{f'_c}Bd = 0.17(\sqrt{20.68})(1.5)(0.366) = 0.4244 \text{ MN} = 424.4 \text{ kN}$$

Now

$$V_u = 163.13 \leq \phi V_c = (0.75)(424.4) = 318.3 \text{ kN} \text{—O.K.}$$

The critical section for two-way shear is also shown in Figure A.4a. This is based on the recommendations given by ACI Code Section 11.11.1.2. For this section

$$V_u = q_s[(1.5)(3) - 0.766^2] = 455.66 \text{ kN}$$

The nominal shear capacity of the foundation can be given as (ACI Code Section 11.11.2)

$$V_c = v_c b_o d = 0.33 \lambda \sqrt{f'_c} b_o d$$

where  $b_o$  = perimeter of the critical section


or

$$V_c = (0.33)(1)(\sqrt{20.68})(4 \times 0.766)(0.366) = 1.683 \text{ MN}$$

So, for two-way shear condition

$$V_u = 455.66 \text{ kN} < \phi V_c = (0.75)(1683) = 1262.25 \text{ kN}$$

Therefore, the section is adequate.

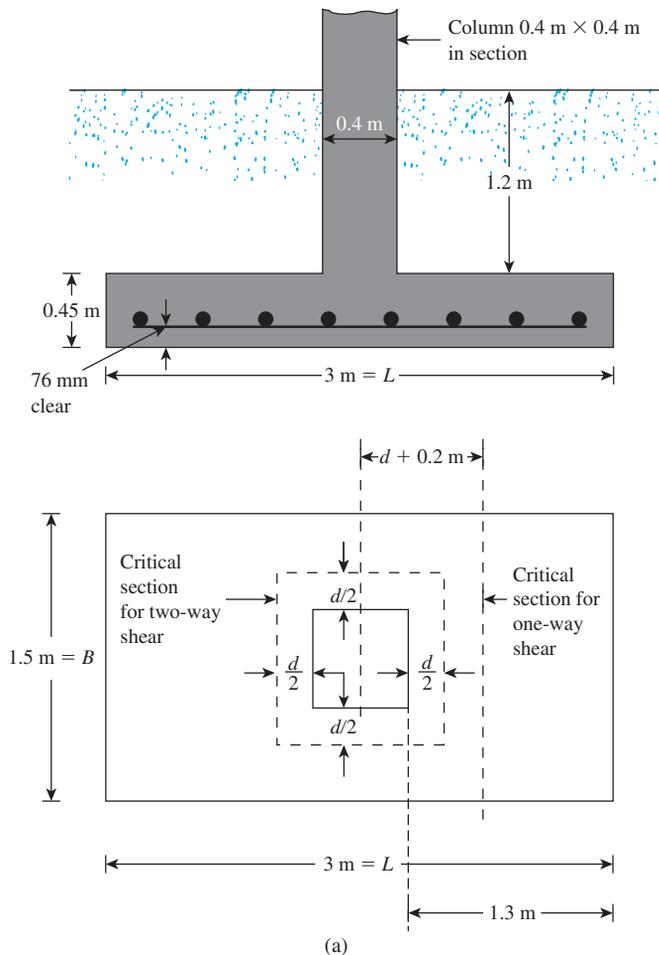

**Figure A.4** Rectangular foundation for a column

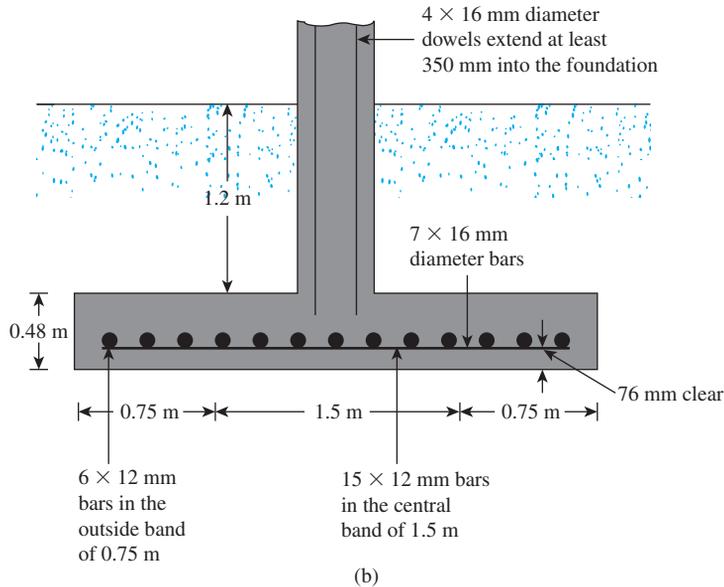


Figure A.4 (continued)

### Check for Bearing Capacity of Concrete Column at the interface with Foundation

According to ACI Code Section 10.14.1, the bearing strength is equal to  $0.85 \phi f'_c A_1$  ( $\phi = 0.65$ ). For this problem,  $U = 524 \text{ kN} < \text{bearing strength} = (0.85)(0.65)(20.68)(0.4)^2 = 1.828 \text{ MN}$ .

So, a minimum area of dowels should be provided across the interface of the column and the foundation (ACI Code Section 15.8.2). Based on ACI Code Section 15.8.2.1

$$\begin{aligned} \text{Minimum area of steel} &= (0.005) (\text{area of column}) \\ &= (0.005) (400^2) = 800 \text{ mm}^2 \end{aligned}$$

So use  $4 \times 16$ -mm diameter bars as dowels.

The minimum required length of development ( $L_d$ ) of dowels in the foundation is  $(0.24f_y d_b) / \lambda \sqrt{f'_c}$ , but not less than  $0.043 f_y d_b$  (ACI Code Section 12.3.2). So,

$$L_d = \frac{0.24f_y d_b}{\lambda \sqrt{f'_c}} = \frac{(0.24)(413.7)(16)}{(1)(\sqrt{20.68})} = 349.33 \text{ mm}$$

Also,

$$L_d = 0.043 f_y d_b = (0.043)(413.7)(16) = 284.6 \text{ mm}$$

Hence,  $L_d = 349.33$ -mm controls.

Available depth for the dowels (Figure A.4a) is  $450 - 76 - 16 - 16 = 342 \text{ mm}$ . Since hooks cannot be used, the foundation depth must be increased. Let the new depth be equal to 480 mm to accommodate the required  $L_d = 349.33 \text{ mm}$ . Hence, the new value of  $d$  is equal to  $480 - 76 - 16 - 16 = 372 \text{ mm}$ .

### Flexural Reinforcement in the Long Direction

According to Figure A.4a, the design moment about the column face is

$$M_u = \frac{(q_s B)1.3^2}{2} = \frac{(116.44)(1.5)(1.3)^2}{2} = 147.59 \text{ kN-m}$$

From Eq. (A.2),

$$a = \frac{A_s f_y}{0.85 f'_c b} = \frac{(A_s)(413.7)}{(0.85)(20.68)(1.5)} = 15.69 A_s$$

Again, from Eq. (A.4),

$$M_u = \phi M_n = \phi A_s f_y \left( d - \frac{a}{2} \right)$$

or

$$147.59 = (0.9)(A_s)(413.7 \times 10^3) \left[ 0.396 - \frac{15.69}{2}(A_s) \right]$$

$$147.59 = 147,444.7 A_s - 2,920,928 A_s^2$$

(Note:  $d = 0.396$  m, assuming that these bars are placed as the bottom layer.)

The solution of the preceding equation gives

$$A_s = 0.00102 \text{ m}^2 \left[ \text{that is, steel percentage} = \frac{A_s}{Bd} = \frac{0.00102}{(1.5)(0.396)} = 0.0017 \right]$$

Also, from ACI Code Section 7.12.2,  $s_{\min} = 0.0018$ . Hence, provide  $7 \times 16$ -mm diameter bars ( $A_s$  provided is  $0.001407 \text{ m}^2$ ).

### Flexural Reinforcement in the Short Direction

According to Figure A.4a, the moment at the face of the column is

$$M_u = \frac{(q_s L)(0.55)^2}{2} = \frac{(116.44)(3)(0.55)^2}{2} = 52.83 \text{ kN-m}$$

From Eq. (A.2),

$$a = \frac{A_s f_y}{0.85 f'_c b} = \frac{(A_s)(413.7)}{(0.85)(20.68)(3)} = 7.845 A_s$$

From Eq. (A.4),

$$M_u = \phi A_s f_y \left( d - \frac{a}{2} \right)$$

or

$$52.83 = (0.9)(A_s) (413.7 \times 10^3) \left[ 0.380 - \frac{7.845}{2}(A_s) \right]$$

(Note:  $d = 480 - 76 - 16 - \frac{16}{2} = 380$  mm for short bars in the upper layer.)

The solution of the preceding equation gives

$$A_s = 0.0004 \text{ m}^2 \quad (\text{thus } s < s_{\min})$$

So, use  $s = s_{\min}$ , or

$$A_s = s_{\min} bd = (0.0018)(3)(0.48) \approx 0.0026 \text{ m}^2$$

(Note : Use gross area when  $s_{\min} = 0.0018$  is used.)

Use  $13 \times 16$ -mm diameter bars.

According to ACI Code Section 12.2, the development length  $L_d$  for 16 mm diameter bars is about 693 mm. For such a case, the footing width needs to be  $[2(0.693 + 0.076) + 0.4] = 1.938$  m. Since the footing width is limited to 1.5 m, we should use 12-mm diameter bars.

So, use  $23 \times 12$  mm diameter bars.

### Final Design Sketch

According to ACI Code Section 15.4.4, a portion of the reinforcement in the short direction shall be distributed uniformly over a bandwidth equal to the smallest dimension of the foundation. The remainder of the reinforcement should be distributed uniformly outside the central band of the foundation. The reinforcement in the central band can be given to be equal to  $2/(\beta_c + 1)$  (where  $\beta_c = L/B$ ). For this problem,  $\beta_c = 2$ . Hence,  $2/3$  of the reinforcing bars (that is, 15 bars) should be placed in the center band of the foundation. The remaining bars should be placed outside the central band. However, one needs to check the steel percentage in the outside band, or

$$s = \frac{A_s}{bd} = \frac{(2)(113 \text{ mm}^2)}{\left(\frac{3000 - 1500}{2}\right)(380)} = 0.00079 < s_{\min} = 0.0018$$

So, use  $A_s = (s_{\min})(b)(d) = (0.0018)(750)(480) = 648 \text{ mm}^2$ . Hence,  $6 \times 12$ -mm diameter bars on each side of the central band will be sufficient.

The final design sketch is shown in Figure A.4b.

### References

- American Concrete Institute (2011). *ACI Standard—Building Code Requirements for Reinforced Concrete, ACI 318-11*, Farmington Hills, Michigan.
- UNESCO (1971). *Reinforced Concrete: An International Manual*, Butterworth, London.



# Answers to Problems

## Chapter 2

- 2.1 a. 0.76  
b. 0.43  
c.  $14.93 \text{ kN/m}^3$   
d.  $17.17 \text{ kN/m}^3$   
e. 53%
- 2.2 a.  $16.48 \text{ kN/m}^3$   
b. 2.67
- 2.3 a. 0.55  
b. 0.355  
c. 57.8%  
d.  $106.7 \text{ lb/ft}^3$
- 2.4 a. 0.97  
b. 0.49  
c. 2.69  
d.  $115.9 \text{ lb/ft}^3$
- 2.5  $e_{\max} = 0.94$ ;  $\gamma_{d(\min)} = 85.2 \text{ lb/ft}^3$

2.6

Soil	Classification
A	A-7-6(9)
B	A-6(5)
C	A-3(0)
D	A-4(5)
E	A-2-6(1)
F	A-7-6(19)

2.7

Soil	Group symbol	Group name
A	ML	Sandy silt
B	ML	Sandy silt
C	SP	Poorly graded sand
D	ML	Sandy silt
E	SM	Silty sand
F	CH	Fat clay with sand

2.8 0.08 cm/s

 2.9  $0.075 \times 10^{-6}$  cm/s

 2.10  $17.06 \times 10^{-6}$  m<sup>3</sup>/m/s

2.11 a. 0.041 cm/s

b. 0.171 cm/s

2.12

Point	kN/m <sup>2</sup>		
	$\sigma$	$u$	$\sigma'$
A	0	0	0
B	50.52	0	50.52
C	81.74	14.72	67.02
D	174.49	63.77	110.72

2.13 87.2 mm

2.14 56.69 mm

2.15 a. 194.54 mm

b. 609 days

2.16 a. 0.377

b. 0.736

2.17 6.25 days

2.18 39.06 days

2.19

Days	Settlement (mm)
30	6
100	27.6

2.20 41°

 2.21  $c' = 0$ ;  $\phi' = 38^\circ$ 

 2.22  $c' = 0$ ;  $\phi' = 30^\circ$ 

 2.23 387.8 kN/m<sup>2</sup>

 2.24  $c' = 12$  kN/m<sup>2</sup>;  $\phi' = 24^\circ$ 

 2.25  $c = 0$ ;  $\phi = 25^\circ$ 
 $c' = 0$ ;  $\phi' = 34^\circ$ 

 2.26 61.9 kN/m<sup>2</sup>

2.27 a. 30.7°

b. 33.67°

**Chapter 3****3.1** 8.96%**3.2**

Depth (m)	$c_u$ (kN/m <sup>2</sup> )	OCR
3.0	92.4	5.51
4.5	129.6	6.46
6.0	129.6	5.65
7.5	141.1	5.48
9.0	152.2	5.35

Average  $c_u = 121.5$  kN/m<sup>2</sup>

Average OCR = 5.69

**3.3**

Depth (m)	$\sigma'_c$ (kN/m <sup>2</sup> )	OCR
3.0	235	7.52
4.5	376	9.47
6.0	376	8.0
7.5	423	7.46
9.0	470	7.2

**3.4**

Depth (m)	$(N_1)_{60}$
1.5	12
3.0	11
4.5	10
6.0	8
7.5	12
9.0	12

**3.5**

Depth (m)	$(N_1)_{60}$
1.5	9
3.0	10
4.5	10
6.0	8
7.5	12
9.0	12

**3.6** 35°**3.7** 34°**3.8** 30°**3.9** 50%**3.10** 44%

3.11

Depth (m)	$D_r$ (%)
1.5	52.9
3.0	55.5
4.5	51.1
6.0	50.2
7.5	42.3
9.0	44.3

 3.12 Average:  $36^\circ$ 

 3.13  $2083 \text{ lb/in.}^2$ 

3.14 48%

 3.15  $48.48 \text{ kN/m}^2$ 

3.16 4.04

 3.17 a.  $1129 \text{ lb/ft}^2$ 

 b.  $1027.7 \text{ lb/ft}^2$ 

3.18 3.52

 3.19  $42^\circ$ 

3.20

Depth (m)	$D_r$ (%)
1.5	37.1
3.0	44.7
4.5	48.2
6.0	52.3
7.5	54.6
9.0	58.3

3.21

Depth (m)	$N_{60}$
1.5	6
3.0	12
4.5	17
6.0	23
7.5	28
9.0	35

 3.22 a.  $45.6 \text{ kN/m}^2$ 

b. 3.37

 3.23  $4121.6 \text{ kN/m}^2$ 

3.24 a. 0.65

b. 1.35

 c.  $2131 \text{ kN/m}^2$ 

 3.25  $38.2^\circ$ 

 3.26  $14,136 \text{ kN/m}^2$ 

 3.27  $v_1 = 492 \text{ m/s}; v_2 = 1390 \text{ m/s}$ 
 $Z_1 = 2.6 \text{ m}; Z_2 = 7.24 \text{ m}$

**Chapter 4**

- 4.1 a. 5195 lb/ft<sup>2</sup>  
b. 372.8 kN/m<sup>2</sup>  
c. 280 kN/m<sup>2</sup>
- 4.2 2 m
- 4.3 a. 5675 lb/ft<sup>2</sup>  
b. 373.7 kN/m<sup>2</sup>  
c. 368.8 kN/m<sup>2</sup>
- 4.4 117.6 kip
- 4.5 5760 kN
- 4.6 3 m
- 4.7 909 kN/m<sup>2</sup>
- 4.8 707.3 kN
- 4.9 547 kN
- 4.10 1504.4 kN/m
- 4.11 78.2 kip/ft
- 4.12 2.6 m
- 4.13 526 kN
- 4.14 a. 941.4 kN/m  
b. 1130.9 kN/m

**Chapter 5**

- 5.1 9209 kN
- 5.2 2075.6 kN
- 5.3 997 kN
- 5.4 651.5 kN/m<sup>2</sup>
- 5.5 1426 lb/ft<sup>2</sup>
- 5.6 495.5 kN
- 5.7 670.9 kN
- 5.8 1282.5 kN
- 5.9 102.84 kip
- 5.10 333.68 kN/m<sup>2</sup>
- 5.11 329.1 kN/m<sup>2</sup>
- 5.12 509.5 kN/m<sup>2</sup>
- 5.13 824.4 kN/m<sup>2</sup>

5.14 a.  $147.3 \text{ kN/m}^2$

$b \text{ (m)}$	$q_u \text{ (kN/m}^2\text{)}$
0	285.6
1	374
2	442
3	476
4	476
5	476
6	476

5.15  $29,700 \text{ lb/ft}^2$

5.16  $700.5 \text{ kN/m}^2$

5.17  $6.2 \text{ mm}$

5.18  $28.2 \text{ kip}$

5.19  $589 \text{ kN}$

**Chapter 6**

$r \text{ (m)}$	$\Delta\sigma \text{ (kN/m}^2\text{)}$
0	21.9
0.4	21.15
0.8	19.05
1.0	17.7

6.2  $1.105 \text{ kN/m}^2$

6.3  $24.6 \text{ kN/m}^2$

6.4  $162 \text{ lb/ft}^2$

6.5  $1365.66 \text{ lb/ft}^2$

6.6  $391.25 \text{ lb/ft}^2$

6.7  $1350 \text{ lb/ft}^2$

6.8  $854 \text{ lb/ft}^2$

6.9  $889 \text{ lb/ft}^2$

6.10  $706.3 \text{ lb/ft}^2$

6.11  $A \rightarrow 160.5 \text{ kN/m}^2$

$B \rightarrow 153 \text{ kN/m}^2$

$C \rightarrow 14.25 \text{ kN/m}^2$

6.12  $11.64 \text{ kN/m}^2$

6.13  $12.3 \text{ kN/m}^2$

**Chapter 7**

7.1  $246 \text{ mm}$

7.2  $60.7 \text{ mm}$

7.3  $24 \text{ mm}$

7.4  $0.428 \text{ in.}$

- 7.5 18.3 mm
- 7.6 14.3 mm
- 7.7 19.3 mm
- 7.8 0.365 in.
- 7.9 0.314 in.
- 7.10 76.6 mm
- 7.11 57.2 mm
- 7.12 5.18 kip/ft<sup>2</sup>
- 7.13 9.77 mm
- 7.14 900 kip
- 7.15 1.21 in.

### **Chapter 8**

- 8.1 16.3 kip/ft<sup>2</sup>
- 8.2 302.3 kN/m<sup>2</sup>
- 8.3 151.14 kN/m<sup>2</sup>
- 8.4 a. 9.09 m  
b. 0.588 m
- 8.5 2.03 m
- 8.6 0.425 m
- 8.7 0.193 m
- 8.8 16.53 lb/in.<sup>2</sup>
- 8.9 13.38 lb/in.<sup>2</sup>
- 8.10 18 MN/m<sup>2</sup>

### **Chapter 9**

- 9.1 a. 5001.3 kN  
b. 5232.3 kN  
c. 6454.6 kN
- 9.2 a. 1905 kN  
b. 609.5 kN
- 9.3 1705 kN
- 9.4 a. 1655 kN  
b. 1291 kN  
c. 1473 kN  
d. 769.04 kN  
e. 560.51 kN
- 9.5 440 kN
- 9.6 463.1 kN
- 9.7 81.4 kip
- 9.8 111.25 kip
- 9.9 772.31 kN
- 9.10 a. 237 kip  
b. 301 kip  
c. 212 kip

- 9.11 294.8 kip
- 9.12 230.8 kip
- 9.13 1568 kN
- 9.14 1059.3 kN
- 9.15 411.5 kN
- 9.16 67.89 mm
- 9.17 7.31 mm
- 9.18 54.7 kN
- 9.19 32.5 kN
- 9.20 340 kip
- 9.21 292 kip
- 9.22 227 kip
- 9.23 9.66 kN
- 9.24 5.51 kN
- 9.25 167.71 kN
- 9.26 163 kip
- 9.27 2925 kN
- 9.28 281 kip
- 9.29 4362 kN
- 9.30 217.7 mm

### **Chapter 10**

- 10.1 9911 kN
- 10.2 11,308 kN
- 10.3 316.7 kN
- 10.4 3495 kN
- 10.5 4684 kN
- 10.6
  - a. 251.3 kN
  - b. 262.6 kN
- 10.7
  - a. 1126.6 kN
  - b. 1555 kN
  - c. 894 kN
- 10.8
  - a. 152.68 kip
  - b. 195.14 kip
  - c. 116.2 kip
- 10.9
  - a. 893.5 kN
  - b. 2858.2 kN
  - c. 3752 kN
- 10.10
  - a. 3312 kN
  - b. 1721 kN
- 10.11
  - a. 2845 kN
  - b. 2356 kN
- 10.12 9.54 mm
- 10.13 0.24 in.
- 10.14 13.03 MN

- 10.15 a. 3.13 mm  
 b. 594.3 kN-m  
 c. 3104 kN/m<sup>2</sup>  
 d. 7.5 m
- 10.16 9856 kN

**Chapter 11**

- 11.1 Collapse will occur  
 11.2 Normally consolidated  
 11.3 0.792 in.  
 11.4 1.73 in.  
 11.5 1.4 ft below the bottom of the foundation  
 11.6 63.5 mm  
 11.7 1 m below the bottom of the foundation  
 11.8 5.16 m  
 11.9 5.2 m

**Chapter 12**

- 12.1  $P_o = 5497.6 \text{ lb/ft}$ ;  $\bar{z} = 4 \text{ ft}$   
 12.2  $P_o = 159.92 \text{ kN/m}$ ;  $\bar{z} = 1.77 \text{ m}$   
 12.3 a. At  $z = 0$ ,  $\sigma_a = -1000 \text{ lb/ft}^2$   
 At  $z = 18 \text{ ft}$ :  $\sigma_a = 1160 \text{ lb/ft}^2$   
 b. 8.33 ft  
 c. Before crack: 1440 lb/ft  
 After crack: 5608.6 lb/ft
- 12.4 39.56 kN/m  
 12.5  $P_a = 118.6 \text{ kN/m}$ ;  $\bar{z} = 1.67 \text{ m}$
- 12.6 a.
- | $z \text{ (m)}$ | $\sigma'_a \text{ (kN/m}^2\text{)}$ |
|-----------------|-------------------------------------|
| 2               | 9.17                                |
| 4               | 18.33                               |
| 6               | 27.5                                |
- b.  $P_a = 146.66 \text{ kN/m}$ ;  $\bar{z} = 2.67 \text{ m}$
- 12.7 90.17 kN/m  
 12.8 a. 50.9 kN/m  
 b. 62.15 kN/m  
 12.9 69.58 kN/m  
 12.10 11.64 kN/m  
 12.11  $P_{ae} = 143.77 \text{ kN/m}$ ;  $\bar{z} = 2.19 \text{ m}$   
 12.12 1902.5 lb/ft  
 12.13 b.  $P_p = 37,440 \text{ lb/ft}$ ;  $\bar{z} = 7.44 \text{ ft}$   
 12.14 1609.1 kN/m  
 12.15 1338 kN/m

**Chapter 13**

- 13.1  $FS_{(\text{overturning})} = 3.41$ ;  $FS_{(\text{sliding})} = 1.5$ ;  
 $FS_{(\text{bearing})} = 5.4$
- 13.2  $FS_{(\text{overturning})} = 2.47$ ;  $FS_{(\text{sliding})} = 1.06$ ;  
 $FS_{(\text{bearing})} = 1.73$
- 13.3  $FS_{(\text{overturning})} = 8.28$ ;  $FS_{(\text{sliding})} = 2.79$
- 13.4  $FS_{(\text{overturning})} = 6.2$ ;  $FS_{(\text{sliding})} = 2.35$

13.5

$z$ (m)	$\sigma'_o$ (kN/m <sup>2</sup> )
2	64.0
4	87.1
6	118.15
8	150.0

13.6

$z$ (m)	$\sigma'_a$ (kN/m <sup>2</sup> )
2	24.15
4	25.54
6	30.79
8	38.43

- 13.7 a. 5.44 mm  
 b. 14.79 m
- 13.8 a. 23.2  
 b. 4.37  
 c. 11.68
- 13.9  $S_V = 0.336$  m;  $L = 3.7$  m;  $l \approx 1$  m
- 13.10  $FS_{(\text{overturning})} = 3.43$ ;  $FS_{(\text{sliding})} = 1.35$ ;  
 $FS_{(\text{bearing})} = 10.31$

**Chapter 14**

- 14.1 a. 13.31 m  
 b. 29.3 m  
 c. 2762 kN-m/m
- 14.2 a. 10.43 m  
 b. 22.56 m  
 c. 1480.9 kN-m/m
- 14.3 a. 3.18 m  
 b. 59.8 m
- 14.4 a. 7 m  
 b. 16.8 m  
 c. 367.04 kN-m/m
- 14.5  $D \approx 1.6$  m;  $M_{\text{max}} = 51.32$  kN-m/m
- 14.6 a. 4.73 m  
 c. 184.68 kN/m

- 14.7 a. 759 kN-m/m  
 b. PZ-35
- 14.8 a. 2.47 m  
 b. 116 kN/m  
 c. 406.9 kN-m/m
- 14.9  $D = 5.9$  m;  $F = 232.8$  kN/m;  
 $M_{\max} = 51.32$  kN-m/m
- 14.10 a. 2.8 m  
 b. 58 kN/m
- 14.11 100.6 kN
- 14.12 a. 22 kN  
 b. 36.3 kN  
 c. 48.6 kN
- 14.13 a. 15.37 kN  
 b. 21.48 kN  
 c. 28.0 kN

**Chapter 15**

- 15.1  $A \rightarrow 131.4$  kN  
 $B \rightarrow 69.3$  kN  
 $C \rightarrow 178.8$  kN
- 15.2 a.  $0.129 \times 10^{-3}$  m<sup>3</sup>/m  
 b.  $0.459 \times 10^{-3}$  m<sup>3</sup>/m
- 15.3  $A \rightarrow 148.5$  kN  
 $B \rightarrow 78.4$  kN  
 $C \rightarrow 202.12$  kN
- 15.4  $0.109 \times 10^{-3}$  m<sup>3</sup>/m
- 15.5 a.  $\gamma_{\text{av}} = 17.94$  kN/m<sup>3</sup>;  $c_{\text{av}} = 19.53$  kN/m<sup>2</sup>  
 b. Pressure diagram as in Figure 15.8;  
 $\sigma_a = 65.4$  kN/m<sup>2</sup>
- 15.6 a.  $\gamma_{\text{av}} = 108.6$  lb/ft<sup>3</sup>;  $c_{\text{av}} = 1719$  lb/ft<sup>2</sup>  
 b. Pressure diagram as in Figure 15.9;  
 $\sigma_a = 814.5$  lb/ft<sup>2</sup>
- 15.7  $A \rightarrow 306.5$  kN  
 $B \rightarrow 405.55$  kN  
 $C \rightarrow 413.45$  kN
- 15.8  $22.94 \times 10^{-5}$  m<sup>3</sup>/m
- 15.9  $A \rightarrow 306.5$  kN  
 $B \rightarrow 439.35$  kN  
 $C \rightarrow 218.9$  kN
- 15.10 1.75
- 15.11 15.58

**Chapter 16**

- 16.1 a. 90.4%  
b. 57.5%
- 16.2 a.  $w_{\text{opt}} = 13.08\%$ ;  $\gamma_{d(\text{max})} = 18.36 \text{ kN/m}^3$   
b.  $w_{\text{opt}} = 9.61\%$ ;  $\gamma_{d(\text{max})} = 20.06 \text{ kN/m}^3$
- 16.3 a.  $w_{\text{opt}} = 16.09\%$ ;  $\gamma_{d(\text{max})} = 16.9 \text{ kN/m}^3$   
b.  $w_{\text{opt}} = 11.63\%$ ;  $\gamma_{d(\text{max})} = 18.33 \text{ kN/m}^3$
- 16.4  $23,573 \text{ m}^3$
- 16.5 Pit B
- 16.6  $S_N = 3.86$ ; Rating—Excellent
- 16.7  $S_N = 3.15$ ; Rating—Excellent
- 16.8 a. 0.241 m  
b. 17.45 months  
c.  $108.4 \text{ kN/m}^2$
- 16.9 a. 192 mm  
b. 8.2 months  
c.  $17.4 \text{ kN/m}^2$
- 16.10 a. 32.4%  
b. 55.2%

16.11

$t$ (yr)	$U_{v,r}$ (%)
0.2	73
0.4	91
0.8	99
1.0	99.7

- 16.12  $U_{v,r} = 17.8\%$ ;  $S_{(p)} = 45.6 \text{ mm}$



# Index

## A

A parameter, Skempton:

- definition of, 63
- typical values, 63

AASHTO classification system, 24–26

Active earth pressure:

- Coulomb, 614–620
- earthquake condition, 625–628
- Rankine, 600–602, 605–612

Active zone, expansive soil, 567

Activity, 23–24

Adobe, 85

Aeolian deposit, 77, 83–85

Allowable bearing capacity, shallow foundation:

- based on settlement, 324–327
- correlation with standard penetration resistance, 324–325
- general, 165

Alluvial deposit, 77, 80–82

Anchor:

- factor of safety, 766
- holding capacity, clay, 768–769
- holding capacity, sand, 759–766
- placement of, 759
- plate, 759
- spacing, 766

Anchored sheet pile wall:

- computational pressure diagram method, 746–748

design charts, free earth support method, 739–742

general, 734–735

moment reduction, sand, 743–745

penetrating clay, 752–755

penetrating sand, 735–737

relative flexibility, 744

Angle of friction, 57

Apparent cohesion, 57

Approximate flexible method, mat, 373–376

Area ratio, 95

At-rest earth pressure, 596–598

At-rest earth pressure coefficient, 597

Atterberg limits, 22–23

Average degree of consolidation, 50

Average vertical stress,

- circular load, 284–285
- rectangular load, 278–282

## B

*B* parameter, Skempton, 62

Backswamp deposit, 82

Bearing capacity:

- allowable, 165
- closely spaced, 239–240
- drilled shaft, settlement, 520–524, 531–533

drilled shaft, ultimate, 516–520, 529–530

eccentric inclined loading, 205–207

- eccentric loading, 189–195, 196–202
- effect of compressibility, 184–185
- effect of water table, 167–168
- factor, Terzaghi, 163–164
- factor of safety, 165
- failure, mode of, 155–157
- general equation, 168
- granular trench, 236–238
- layered soil, 221–224, 225–230, 233–235
- on a slope, 245–246
- on top of a slope, 240, 242–243
- seismic, 247–250
- theory, Terzaghi, 160–165
- ultimate, local shear failure, 156
- Boring depth, 87–88
- Boring log, 136
- Braced cuts:
  - bottom heave, 798–800
  - design of, 783–786
  - general wedge theory, 775, 777–779
  - ground settlement, 807–809
  - lateral yielding, 807–809
  - pressure envelope, clay, 781–782
  - pressure envelope, layered soil, 782–783
  - pressure envelope, sand, 781, 782
- Braided-stream deposit, 80
- C**
- Calcite, 77
- Caliche, 85
- Cantilever footing, 356
- Cantilever retaining wall, general, 650
- Cantilever sheet pile wall:
  - penetrating clay, 725–728
  - penetrating sand, 715–719
- Cement stabilization, 857–861
- Chemical bonding, geotextile, 678
- Chemical weathering, 77
- Circular load, stress, 264–266
- Clay mineral, 11
- Coefficient:
  - consolidation, 49
  - gradation, 8, 9
  - subgrade reaction, 375–377
  - uniformity, 8
  - volume compressibility, 49
- Cohesion, 57
- Collapse potential, 559
- Collapsible soil:
  - chemical stabilization of, 566
  - criteria for identification, 560
  - densification of, 565
  - foundation design in, 563–566
  - settlement, 562–563
- Combined footing, 353–356
- Compaction:
  - control for hydraulic barriers, 825–828
  - curves, 817–818
  - empirical relations for, 819–820
  - maximum dry unit weight, 816
  - optimum moisture content, 816
  - Proctor test, 816–817
  - relative, 818
  - relative density of, 818–819
  - specification for, 818
- Compensated foundation, mat, 366–367
- Compressibility, effect on bearing capacity, 184–185
- Compression index:
  - correlations for, 44–45
  - definition of, 44
- Concentrated load, stress, 264, 291–292
- Concrete mix, drilled shaft, 514
- Cone penetration test, 113–116
- Consolidation:
  - average degree of, 50
  - definition of, 41–42
  - maximum drainage path, 50
  - settlement, group pile, 491–493
  - settlement calculation, 336–340
  - time rate of, 48–53
- Construction joint, 671
- Contact stress, dilatometer, 127
- Continuous flight auger, 90
- Contraction joint, 671
- Conventional rigid method, mat, 369–373
- Core barrel, 132–133
- Coring, 132–136
- Correction, vane shear strength, 110
- Corrosion, reinforcement, 678

- Coulomb's earth pressure:
  - active, 614–620
  - passive, 639–641
- Counterfort retaining wall, 650
- Critical hydraulic gradient, 40
- Critical rigidity index, 184
- Cross-hole seismic survey, 142–143
- Curved failure surface, passive pressure, 641–644
  
- D**
- Darcy's law, 32
- Darcy's velocity, 32
- Deep mixing, 873–875
- Deflocculating agent, 9
- Degree of saturation, 13
- Depth factor, bearing capacity, 170–171
- Depth of tensile crack, 602
- Dilatometer modulus, 127
- Dilatometer test, 125–129
- Direct shear test, 58–59
- Displacement pile, 407
- Double-tube core barrel, 133
- Drained friction angle:
  - variation with plasticity index, 65, 66
  - variation with void ratio and pressure, 64–65
- Dredge line, 713
- Drilled shaft:
  - bearing capacity, settlement, 520–524, 531–533
  - bearing capacity, ultimate, 516–520, 529–530
  - concrete mix, 514
  - construction procedure, 507–513
  - lateral load, 538–543
  - load transfer, 514
  - rock, 547–550
  - settlement, working load, 536
  - types of, 506
- Drilling mud, 92
- Drop, flow net, 39
- Dry unit weight, 13
- Dune sand, 83–84
- Dynamic compaction:
  - collapsible soil, 565
  - design, 870–871
  - general principles, 869–870
  - significant depth of densification, 870
  
- E**
- Earth pressure coefficient:
  - at-rest, 597
  - Coulomb, active, 615
  - Coulomb, passive, 640
  - Rankine active, horizontal backfill, 600
  - Rankine active, inclined backfill, 607
  - Rankine passive, horizontal backfill, 634
  - Rankine passive, inclined backfill, 638
- Eccentric load, bearing capacity, 188–189
- Effective area, 190
- Effective length, 189
- Effective stress, 39–40
- Effective width, 189
- Elastic settlement:
  - based on Pressuremeter test, 328–332
  - flexible foundation, 302–304
  - general, 302
  - rigid, 304
  - strain influence factor method, 315–318, 321–322
- Elasticity modulus of clay, typical values for, 301
- Electric friction-cone penetrometer, 114
- Embankment loading, stress, 287–288
- Equipotential line, 38
- Expansion stress, dilatometer, 127
- Expansive soil:
  - classification of, 576–579
  - construction on, 582–585
  - criteria for identification, 578–579
  - free swell ratio, 579
  - general definition, 566–570
  - swell, laboratory measurement, 570–571
  - swell pressure test, 571–573
  
- F**
- Factor of safety, shallow foundation, 165
- Field load test, shallow foundation, 344–346
- Field vane, dimensions of, 109
- Filter, 672–673

- Filter design criteria, 673
- Flexible foundation, elastic settlement, 302–304
- Flow channel, 39
- Flow line, 38
- Flow net, 38
- Fly ash stabilization, 861–862
- Foundation design, collapsible soil, 565–566
- Free swell, expansive soil, 570–571
- Friction angle, cone penetration test, 119
- Friction pile, 404
- Friction ratio, 116
- Function, geotextile, 678
- G**
- General bearing capacity, shallow foundation:
  - bearing capacity factors, 169–170
  - depth factor, 170–171
  - equation, 168
  - inclination factor, 171
  - shape factor, 170
- General shear failure, bearing capacity, 155
- Geogrid:
  - biaxial, 679
  - function, 679–680
  - general, 679
  - properties, 679
  - uniaxial, 679
  - with triangular aperture, 680
- Geotextile, general, 678
- Glacial deposit, 82–83
- Glacial till, 83
- Glacio-fluvial deposit, 83
- Gradation coefficient, 8, 9
- Grain-size distribution, 8–9
- Granular trench, bearing capacity, 236–238
- Gravity retaining wall;
  - definition, 650
- Ground moraine, 83
- Group index, 24, 25
- Group name:
  - coarse-grained soil, 28
  - fine-grained soil, 29
  - organic soil, 30
- Group pile:
  - efficiency, 485–488
  - ultimate capacity, 488–490
- Guard cell, pressuremeter test, 122
- Gumbo, 85
- H**
- Hammer, pile driving, 404–407
- Heave, 40
- Helical auger, 89
- Horizontal stress index, 127
- Hydraulic conductivity:
  - constant head test, 33
  - definition of, 32
  - falling head test, 33
  - relationship with void ratio, 33–35
  - typical values for, 33
- Hydraulic gradient, 32
- Hydrometer analysis, 9–10
- I**
- Illite, 11
- Inclination factor, bearing capacity, 171
- Influence factor:
  - embankment loading, 288
  - rectangular loading, 272
- Iowa borehole shear test, 129–131
- J**
- Jet grouting, 871–873
- Joints, retaining wall, 671
- K**
- Kaolinite, 11
- Knitted geotextile, 678
- L**
- Laplace's equation, 38
- Lateral earth pressure, surcharge, 621–623
- Lateral load:
  - drilled shaft, 538–543
  - elastic solution for pile, 456–462
  - ultimate load analysis, pile, 462–467
- Layered soil, bearing capacity, 221–224, 225–230, 233–238
- Lime stabilization, 857–859
- Liquid limit, 22

Liquidity index, 23  
 Load transfer mechanism, pile, 407–411  
 Loam, 85  
 Local shear failure, bearing capacity, 156  
 Loess, 84

**M**

Mat foundation:  
   bearing capacity, 360–362  
   compensated, 366–367  
   differential settlement of, 362  
   gross ultimate bearing capacity,  
     360–361  
   net ultimate bearing capacity, 361  
   types, 358–359  
 Material index, 127  
 Meandering belt of stream, 81  
 Mechanical bonding, geotextile, 678  
 Mechanical friction cone penetrometer,  
   113  
 Mechanical weathering, 76–77  
 Mesquite, 87  
 Modes of failure, 155–157  
 Mohr-Coulomb failure criteria, 57–58  
 Moist unit weight, 13  
 Moisture content, 13  
 Montmorillonite, 11  
 Moraine, 83  
 Muck, 85  
 Mud line, 713  
 Muskeg, 85

**N**

Natural levee, 81  
 Needle-punched nonwoven geotextile, 678  
 Negative skin friction, pile, 481–483  
 Nondisplacement pile, 407  
 Nonwoven geotextile, 678  
 Normally consolidated soil, 44

**O**

Optimum moisture content, 816  
 Overturning, retaining wall, 657–659  
 Organic soil, 85  
 Outwash plains, 83  
 Oxbow lake, 81

**P**

P-wave, 137–138  
 Passive pressure:  
   Coulomb, 639–641  
   curved failure surface, 641–644  
   earthquake condition, 645–646  
   Rankine, horizontal  
     backfill, 634–636  
   Rankine, inclined backfill, 637–639  
 Percent finer, 8  
 Percussion drilling, 93  
 Pile capacity:  
   Coyle and Castello's method, 421–422,  
     428  
   flight auger pile, 438–440  
   frictional resistance, 426–428  
   Meyerhof's method, 414–417, 467–468  
   rock, 441–442, 496  
   Vesic's method, 417–421  
 Pile driving formula, 470–473  
 Pile installation, 404–407  
 Pile load test, 448–451  
 Pile type:  
   composite, 402  
   concrete, 396–399  
   continuous flight auger, 402  
   steel, 393–396  
   timber, 400–401  
 Piston sampler, 106  
 Plastic limit, 22  
 Plasticity chart, 26  
 Plasticity index, 23  
 Pneumatic rubber-tired roller, 822  
 Point bar deposit, 81  
 Point bearing pile, 403–404  
 Point load, stress, 264, 291  
 Pore water pressure parameter, 39  
 Porosity, 11  
 Post hole auger, 89  
 Pozzolan reaction, 857  
 Precompression:  
   general consideration, 836  
   midplane degree of consolidation, 838  
 Preconsolidated soil, 44  
 Preconsolidation pressure, 43–44  
 Prefabricated vertical drain, 851

Pressuremeter modulus, 123, 125  
 Pressuremeter test, 122–125  
 Proportioning, retaining wall, 652–653  
 Punching shear coefficient, 227  
 Punching shear failure, bearing capacity, 157

**Q**

Quick condition, 40

**R**

Radial shear zone, bearing capacity, 161  
 Rankine active earth pressure:  
   horizontal backfill, 600–602  
   inclined backfill, 606–607  
 Recompression curve, consolidation, 43  
 Recompression index, 46  
 Reconnaissance, 87  
 Recovery ratio, 134  
 Rectangular combined footing, 353–354  
 Rectangular load, stress, 272–276  
 Refraction survey, 137–140  
 Reinforced earth, 677  
 Relative compaction, 818  
 Relative density, 16–17  
 Residual friction angle, 67  
 Residual soil, 78–79  
 Residual strength envelope, 66–67  
 Resistivity, 143  
 Retaining wall:  
   application of earth pressure theories, 653–655  
   cantilever, 650  
   counterfort, 650  
   deep shear failure, 656  
   drainage, backfill, 671–673  
   geogrid reinforcement 700–704  
   geotextile reinforcement, 693–696  
   gravity, 650  
   joint, 671  
   proportioning, 652–653  
   stability check, 655–657  
   strip reinforcement, 681–690  
 Rigidity index, 184  
 Rock quality designation, 134

Roller:

  pneumatic rubber-tired, 822  
   sheepsfoot, 824  
   vibratory, 824

Rotary drilling, 92

**S**

S-wave, 137, 142–143  
 Sand compaction pile, 867–869  
 Sand drain:  
   average degree of consolidation, radial drainage, 842–846  
   general, 840–842  
   radius of effective zone of drainage, 840  
   smear zone, 842, 843  
   theory of equal strain, 842–843  
 Sanitary landfill:  
   general, 587  
   settlement of, 588–589  
 Saprolite, 85  
 Saturated unit weight, 14  
 Saturation, degree of, 13  
 Seismic refraction survey, 137–140  
 Sensitivity, 68–69  
 Settlement, pile:  
   elastic, 453–457  
   group, 491–493  
 Settlement calculation, shallow foundation:  
   consolidation, 336–340  
   effect of water table, elastic, 334–335  
   elastic, 299–301, 302–309  
   secondary consolidation, 342–343  
   tolerable, 347–349  
 Shape factor, bearing capacity, 170  
 Sheepsfoot roller, 824  
 Sheet pile:  
   precast concrete, 710  
   steel, 710–711  
   wall construction method, 712–714  
   wooden, 709–710  
 Shelby tube, 104  
 Shrinkage limit, 23  
 Sieve analysis, 8–9  
 Sieve size, 8

Single-tube core barrel, 133  
 Size limit, 11  
 Skempton-Bjerrum modification, consolidation  
   settlement, 337–340  
 Skin, 681  
 Sliding, retaining wall, 659–662  
 Smear zone, sand drain, 842, 843  
 Smooth wheel roller, 822  
 Soil classification systems, 24–30  
 Soil compressibility factor, bearing capacity, 184–185  
 Spacing, boring, 89  
 Specific gravity, 13  
 Split-spoon sampler, 93–94  
 Spring core catcher, 94, 95  
 Stability check, retaining wall:  
   bearing capacity, 663–665  
   overturning, 657–659  
   sliding, 659–662  
 Stability number, 242  
 Stabilization: cement, 859–861  
   fly ash, 861–862  
   lime, 857–861  
   pozzolanic reaction, 857  
 Standard penetration number:  
   correlation, consistency of clay, 96–97  
   correlation, friction angle, 101–102  
   correlation, overconsolidation ratio, 97  
   correlation, relative density, 100–101  
 Static penetration test, 113–117  
 Stepped-blade test, 131–132  
 Stone column:  
   allowable bearing capacity, 865–866  
   equivalent triangular pattern, 963  
   general, 862–864  
   stress concentration factor, 864  
 Strain influence factor, 315–317, 321–322  
 Stress:  
   circular load, 264–266, 293  
   concentrated load, 264, 291  
   embankment load, 287–288  
   isobar, 277–279  
   line load, 266–267  
   rectangular load, 272–277, 293–294  
   strip load, 267–270  
 Structural design, mat:  
   approximate flexible method, 373–377  
   conventional rigid method, 369–373

Subgrade reaction coefficient, 375–377  
 Suitability number, vibroflotation, 833  
 Swell pressure test, 571–573  
 Swell test, unrestrained, 570–571  
 Swelling index, 46

## T

Tensile crack, 602  
 Terminal moraine, 83  
 Terra Rossa, 85  
 Thermal bonding, geotextile, 678  
 Tie failure, retaining wall, 686–687  
 Tie force, retaining wall, 686  
 Time factor, 50  
 Time rate of consolidation, 48–53  
 Tolerable settlement, shallow foundation, 347–349  
 Trapezoidal footing, 354–356  
 Triaxial test:  
   consolidated drained, 61  
   consolidated undrained, 61–62  
   unconsolidated undrained, 62–63

## U

Ultimate bearing capacity, Terzaghi, 160–164  
 Unconfined compression strength, 63–64  
 Unconfined compression test, 63–64  
 Undrained cohesion, 52  
 Unified classification system, 26–30  
 Uniformity coefficient, 8  
 Unit weight:  
   dry, 13  
   moist, 13  
   saturated, 14  
 Unrestrained swell test, 570–571  
 Uplift capacity, shallow foundation, 253–258

## V

Vane shear test, 108–111  
 Velocity, P-wave, 138  
 Vertical stress, average, 278–282, 284–285  
 Vibratory roller, 824  
 Vibroflotation:  
   backfill suitability number, 833  
   construction method, 828–831  
   effective range, backfill, 832  
   vibratory unit, 831  
 Virgin compression curve, 44

Void ratio, 11  
    maximum-minimum relationship, 17  
Volume, coefficient of compressibility, 49

**W**

Waffle slab, 583, 584  
Wash boring, 91–92  
Water table, effect on bearing capacity, 167–168  
Water table observation, 106–108  
Wave equation analysis, pile, 477–480

Weight-volume relationship, 11–16  
Wenner method, resistivity survey, 143  
Westergaard solution, stress:  
    circular load, 293  
    point load, 291–292  
    rectangular load, 293–294  
Winker foundation, 373

**Z**

Zero-air-void unit weight, 817









